

RC 200

ART. NO. 3214555EN



Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with appropriate care, will bring you pleasure for a long time to come.

We wish you good and safe riding at all times!

Enter the serial numbers of your vehicle below.

Vehicle identification number (📖 p. 12)	Dealer's stamp
Engine number (📖 p. 12)	
Key number (📖 p. 12)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2022 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

KTM Sportmotorcycle GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

RC 200 EU (F5103V1, F5103V2)
RC 200 EU 2 (F5103V1L, F5103V2L)
RC 200 AR (F5142V2)
RC 200 ASEAN (F5188V1)
RC 200 CO (F5141V2)
RC 200 PH (F5182V1, F5182V2)



3214555en

03/2022

TABLE OF CONTENTS

1	MEANS OF REPRESENTATION	5	6.18	Passenger foot pegs	18
1.1	Symbols used	5	6.19	Shift lever	18
1.2	Formats used	5	6.20	Foot brake lever	19
2	SAFETY ADVICE	6	6.21	Side stand	19
2.1	Use definition – intended use	6	7	COMBINATION INSTRUMENT	20
2.2	Misuse	6	7.1	Combination instrument	20
2.3	Safety advice	6	7.2	Activation and test	20
2.4	Degrees of risk and symbols	6	7.3	Warnings	20
2.5	Tampering warning	7	7.4	Indicator lamps	22
2.6	Safe operation	7	7.5	Shift warning light	23
2.7	Protective clothing	7	7.6	Gear display	23
2.8	Work rules	8	7.7	Display	24
2.9	Environment	8	7.8	Fuel level display	24
2.10	Owner's Manual	8	7.9	Coolant temperature indicator	25
3	IMPORTANT NOTES	9	7.10	Function buttons	25
3.1	Manufacturer warranty, implied warranty	9	7.11	ODO display	26
3.2	Fuel, auxiliary substances	9	7.12	ABS display	26
3.3	Spare parts, technical accessories	9	7.13	Info display	26
3.4	Service	9	7.14	TRIP 1 display	26
3.5	Figures	9	7.14.1	Time Trip 1	27
3.6	Customer service	9	7.14.2	Average Speed Trip1	27
4	VIEW OF VEHICLE	10	7.14.3	Avg Fuel Cons 1	28
4.1	View of vehicle, front left (example) ...	10	7.14.4	Fuel Range	28
4.2	View of vehicle, rear right (example)	11	7.15	TRIP 2 display	28
5	SERIAL NUMBERS	12	7.15.1	Time Trip 2	29
5.1	Vehicle identification number	12	7.15.2	Average Speed Trip2	29
5.2	Type label	12	7.15.3	Avg Fuel Cons 2	29
5.3	Engine number	12	7.15.4	Fuel Range	30
5.4	Key number	12	7.16	Adjusting ABS mode	30
6	CONTROLS	13	7.17	Setting the units	31
6.1	Clutch lever	13	7.18	Setting the clock	31
6.2	Hand brake lever	13	7.19	Adjusting the shift warning light	32
6.3	Throttle grip	13	8	PREPARING FOR USE	34
6.4	Horn button	13	8.1	Advice on preparing for first use	34
6.5	Light switch	14	8.2	Running in the engine	35
6.6	High beam flasher button	14	8.3	Loading the vehicle	35
6.7	Turn signal switch	14	9	RIDING INSTRUCTIONS	36
6.8	Emergency OFF switch	14	9.1	Checks and maintenance measures when preparing for use	36
6.9	Start button	15	9.2	Starting	36
6.10	Ignition and steering lock	15	9.3	Starting off	37
6.11	Locking the steering	15	9.4	Shifting, riding	37
6.12	Unlocking the steering	16	9.5	Applying the brakes	39
6.13	Opening the fuel tank filler cap	16	9.6	Stopping, parking	40
6.14	Closing the fuel tank filler cap	17	9.7	Transport	41
6.15	Seat lock	17	9.8	Towing in the event of a breakdown ...	42
6.16	Tool set	17	9.9	Refueling	42
6.17	Supporting strap	18	10	SERVICE SCHEDULE	44
			10.1	Additional information	44
			10.2	Required work	44

10.3	Recommended work	45	14.4	Installing the rear wheel 	70
11	TUNING THE CHASSIS	46	14.5	Checking the rear hub damping rubber pieces 	71
11.1	Adjusting the spring preload of the shock absorber 	46	14.6	Checking the tire condition	72
11.2	Adjusting the shift lever	46	14.7	Checking tire pressure	73
12	SERVICE WORK ON THE CHASSIS	48	15	ELECTRICAL SYSTEM	75
12.1	Raising the motorcycle with rear lifting gear	48	15.1	Removing the 12-V battery 	75
12.2	Removing the rear of the motorcycle from the lifting gear	48	15.2	Installing the 12-V battery 	75
12.3	Lifting the motorcycle with the front lifting gear	48	15.3	Charging the 12-V battery 	76
12.4	Taking the motorcycle off the front lifting gear	49	15.4	Changing the main fuse	78
12.5	Cleaning the dust boots of the fork legs	49	15.5	Changing the ABS fuses	78
12.6	Removing the front rider's seat	50	15.6	Changing the fuses of individual electrical power consumers	80
12.7	Mounting the front rider's seat	51	15.7	Changing the headlight bulb	81
12.8	Checking for chain dirt accumulation	51	15.8	Checking the headlight setting	82
12.9	Cleaning the chain	51	15.9	Adjusting the headlight range	83
12.10	Checking the chain tension	52	15.10	Diagnostics connector	83
12.11	Adjusting the chain tension	53	15.11	ACC1 front	83
12.12	Checking the chain, rear sprocket, and engine sprocket	54	15.12	ACC1 and ACC2 rear	84
12.13	Removing the fuel tank cover 	55	16	COOLING SYSTEM	85
12.14	Mounting the fuel tank cover	56	16.1	Cooling system	85
12.15	Removing the left side cover 	56	16.2	Checking the coolant level in the compensating tank	85
12.16	Installing the left side cover 	57	16.3	Checking the antifreeze and coolant level	86
12.17	Removing the right side cover 	57	16.4	Draining the coolant 	87
12.18	Installing the right side cover 	58	16.5	Filling/bleeding the cooling system 	88
12.19	Removing the front fender	59	16.6	Changing the coolant 	89
12.20	Installing the front fender	59	17	TUNING THE ENGINE	92
13	BRAKE SYSTEM	60	17.1	Checking the play in the throttle cable	92
13.1	Anti-lock braking system (ABS)	60	17.2	Adjusting the play in the throttle cable 	92
13.2	Checking the brake discs	61	17.3	Checking the clutch lever play	92
13.3	Checking the front brake fluid level ...	61	17.4	Adjusting play in the clutch lever  ...	93
13.4	Adding front brake fluid 	62	18	SERVICE WORK ON THE ENGINE	94
13.5	Checking the front brake linings	63	18.1	Checking the engine oil level	94
13.6	Checking the rear brake fluid level	63	18.2	Changing the engine oil and oil filter, cleaning the oil screen 	94
13.7	Adding rear brake fluid 	64	18.3	Adding engine oil	96
13.8	Checking the brake linings of the rear brake	65	19	CLEANING, CARE	97
13.9	Checking the free travel of foot brake lever	66	19.1	Cleaning the motorcycle	97
13.10	Adjusting the free travel of the foot brake lever 	66	19.2	Checks and maintenance steps for winter operation	98
14	WHEELS, TIRES	68	20	STORAGE	99
14.1	Removing the front wheel 	68	20.1	Storage	99
14.2	Installing the front wheel 	68	20.2	Preparing for use after storage	100
14.3	Removing the rear wheel 	70	21	TROUBLESHOOTING	101

TABLE OF CONTENTS

22	TECHNICAL DATA.....	103
22.1	Engine	103
22.2	Engine tightening torques	104
22.3	Capacities	105
22.3.1	Engine oil	105
22.3.2	Coolant	105
22.3.3	Fuel	105
22.4	Chassis	106
22.5	Electrical system.....	107
22.6	Tires.....	107
22.7	Fork.....	107
22.8	Shock absorber	107
22.9	Chassis tightening torques	108
23	SUBSTANCES	110
24	AUXILIARY SUBSTANCES	112
25	STANDARDS	113
26	INDEX OF SPECIAL TERMS.....	114
27	LIST OF ABBREVIATIONS.....	115
28	LIST OF SYMBOLS.....	116
28.1	Red symbols.....	116
28.2	Yellow and orange symbols.....	116
28.3	Green and blue symbols.....	116
	INDEX	117

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates work that requires expert knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop! Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates a voltage measurement.



Indicates a current measurement.



Indicates the end of an activity, including potential rework.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Indicates a proprietary name.
Name®	Indicates a protected name.
Brand™	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Use definition – intended use

This vehicle has been designed and built to withstand the normal stresses and strains of road use. This vehicle is not suitable for use on race tracks or offroad.



Info

This vehicle is only authorized for operation on public roads in its homologated version.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with remote key) or the engine must be at a standstill (models without ignition lock or remote key).

Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ± 5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite®**) is required. Observe the manufacturer's instructions.

If thread locker (e.g., **Precote®**) has already been applied to a new part, do not apply any additional thread locker. After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.10 Owner's Manual

Read this owner's manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way to find out how best to customize the vehicle for your own use and how you can protect yourself from injury.

 **Tip**
Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.

The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate.

The Owner's Manual is also available for download from your authorized KTM dealer and on the KTM website. A printed copy can also be ordered from your authorized KTM dealer.

International KTM Website: [KTM.COM](https://www.ktm.com)

3.1 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must only be carried out in an authorized KTM workshop and confirmed in the **KTM Dealer.net**, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.2 Fuel, auxiliary substances



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

3.3 Spare parts, technical accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The latest news **KTM PowerParts** on your vehicle can be found on the KTM website.

International KTM Website: KTM.COM

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as dusty environments, heavy rain, high heat or with a heavy load, can lead to considerably more rapid wear of components such as the air filter, drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.


International KTM Website: KTM.COM

4 VIEW OF VEHICLE

4.1 View of vehicle, front left (example)



- ❶ Horn button (📖 p. 13)
- ❶ Light switch (📖 p. 14)
- ❶ High beam flasher button (📖 p. 14)
- ❶ Turn signal switch (📖 p. 14)
- ❷ Fuel tank filler cap
- ❸ Clutch lever (📖 p. 13)
- ❹ Seat lock (📖 p. 17)
- ❺ Side stand (📖 p. 19)
- ❻ Shift lever (📖 p. 18)

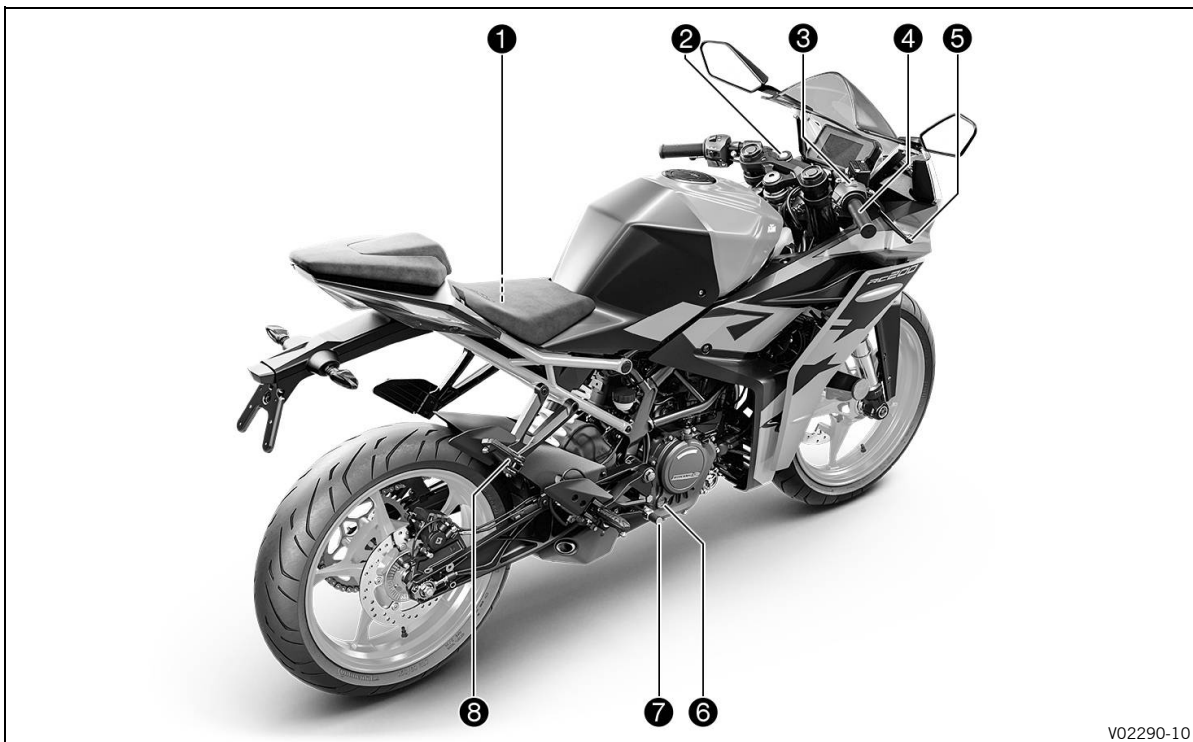
4.2 View of vehicle, rear right (example)

V02290-10

- ❶ Tool set (📖 p. 17)
- ❷ Ignition and steering lock (📖 p. 15)
- ❸ Emergency OFF switch (📖 p. 14)
- ❹ Start button (📖 p. 15)
- ❺ Throttle grip (📖 p. 13)
- ❻ Hand brake lever (📖 p. 13)
- ❼ Level viewer, engine oil
- ❼ Foot brake lever (📖 p. 19)
- ❽ Passenger foot pegs (📖 p. 18)


5 SERIAL NUMBERS

5.1 Vehicle identification number

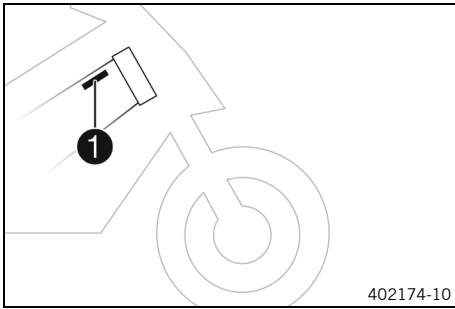


The vehicle identification number **1** is stamped on the right of the frame behind the steering head.

5.2 Type label

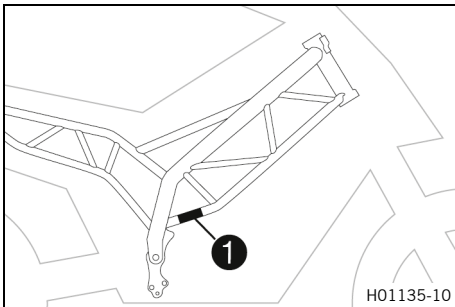


The type label **1** is located on the right side of the frame.

5.3 Engine number

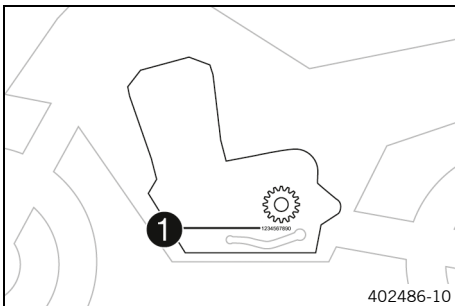

The engine number **1** is stamped on the left side of the engine under the engine sprocket.

5.4 Key number

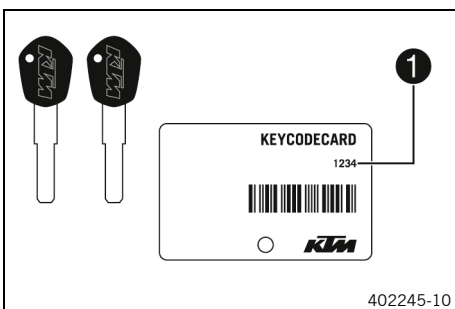

The key number **1** can be found on the **KEYCODECARD**.




Info

The key number is needed to order a replacement key. Keep the **KEYCODECARD** in a safe place.

If at least one ignition key is still available, a spare key can be produced. If an ignition key is no longer present, the entire lock system must be replaced.

6.1 Clutch lever

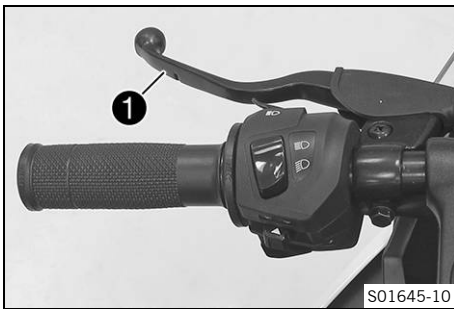

The clutch lever ❶ is fitted on the left side of the handlebar.


6.2 Hand brake lever



The hand brake lever ❶ is fitted on the right side of the handlebar.

The front brake is engaged using the hand brake lever.

6.3 Throttle grip

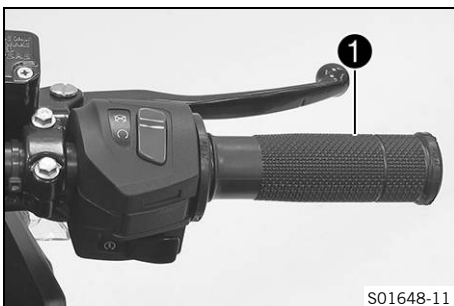

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Horn button




Horn button ❶ is fitted on the left side of the handlebar.

Possible states

- The horn button  is in the basic position
- The horn button  is pressed – The horn is operated in this position.

6.5 Light switch

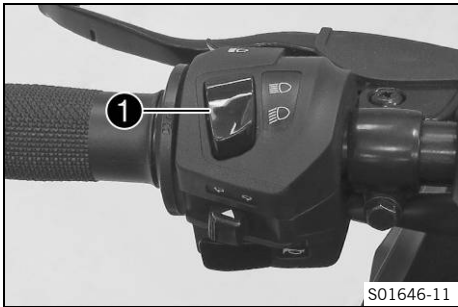


Light switch ❶ is fitted on the left side of the handlebar.

Possible states

	Low beam on – The light switch is turned downward. In this position, the low beam and tail light are switched on.
	High beam on – The light switch is turned upwards. In this position, the high beam and the tail light are switched on.

6.6 High beam flasher button

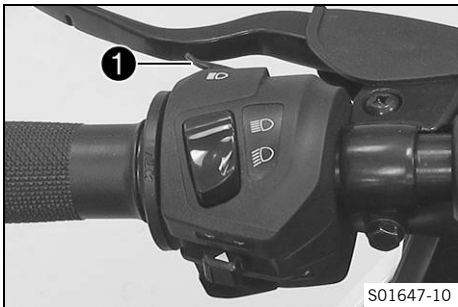

High beam flasher button ❶ is fitted on the left side of the handlebar.

Possible states

- High beam flasher button in the basic position
- High beam flasher button pressed – In this position, the headlight flasher (high beam) is actuated.

6.7 Turn signal switch




Turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

	Turn signal off – Turn signal switch pushed toward the switch housing.
	Left turn signal, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use.
	Right turn signal, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use.

6.8 Emergency OFF switch

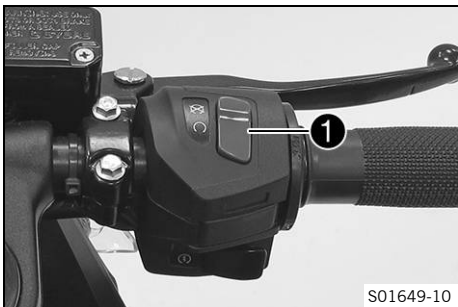


The emergency OFF switch ❶ is fitted on the right side of the handlebar.

Possible states

	Emergency OFF switch off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine cannot be started.
	Emergency OFF switch on – This position is required for operation; the ignition circuit is closed.

6.9 Start button

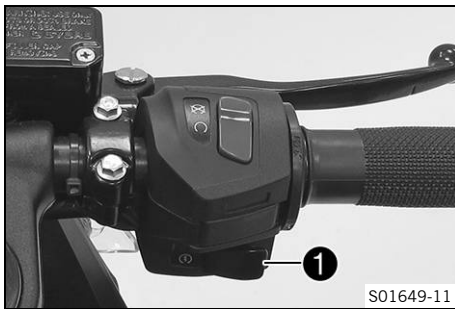

Start button **1** is fitted on the right side of the handlebar.

Possible states

- The start button **1** is in the basic position
- The start button **1** is pressed – In this position, the starter motor is actuated.

6.10 Ignition and steering lock



The ignition and steering lock is located on the upper triple clamp.

Possible states


	Ignition off OFF – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.
	Ignition on ON – In this position, the ignition circuit is closed and the engine can be started.
	Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.

6.11 Locking the steering

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

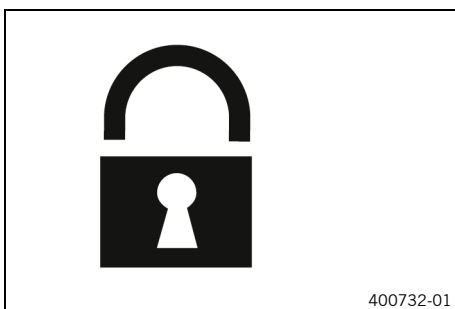

- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the ignition key into the ignition and steering lock, press in, and turn to the left. Remove the ignition key.
- ✓ Steering is no longer possible.

 6.12 Unlocking the steering



- Insert the ignition key into the ignition and steering lock, press in, and turn to the right. Remove the ignition key.
- ✓ The handlebar can now be moved again.

6.13 Opening the fuel tank filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

 
- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Lift cover **1** of the fuel tank filler cap and insert the ignition key into the lock.


Note

Danger of damage The ignition key may break if overloaded.

Damaged ignition keys must be replaced.

- Push down on the fuel tank filler cap to take pressure off the ignition key.
- Turn the ignition key 90° clockwise.
- Lift the fuel tank filler cap.

6.14 Closing the fuel tank filler cap

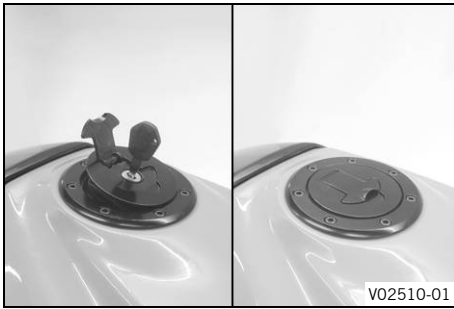

Warning

Fire hazard Fuel is highly flammable, toxic and a health hazard.

- Check that the fuel tank filler cap is locked correctly after closing.
- Change your clothing if fuel spills on them.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.

- Close the fuel tank filler cap.
- Turn the ignition key 90° clockwise.
- Push down the fuel tank filler cap and turn the ignition key counterclockwise until the fuel tank filler cap lock engages.
- Remove the ignition key and close the cover.




6.15 Seat lock



Seat lock **1** is behind of front rider's seat.
The seat lock can be unlocked using the ignition key.

6.16 Tool set

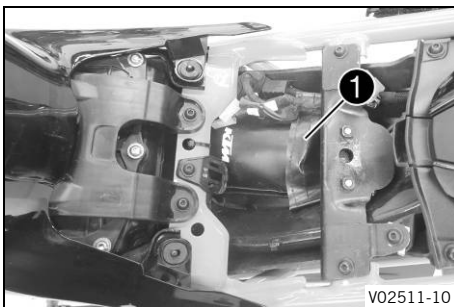


The tool set **1** is in the storage compartment under the seat.

6.17 Supporting strap



The passenger can hold onto the supporting strap **1** during the trip.

 6.18 Passenger foot pegs




The passenger foot pegs can be folded up and down.


Possible states

- Passenger foot pegs folded up – For operation without a passenger.
- Passenger foot pegs folded down – For operation with a passenger.

 6.19 Shift lever




Shift lever **1** is mounted on the left side of the engine.

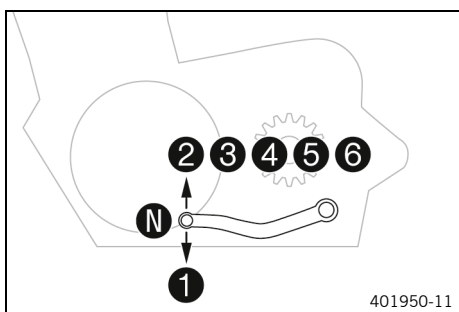


The gear positions can be seen in the photograph.
The neutral or idle position is between the first and second gears.

6.20 Foot brake lever

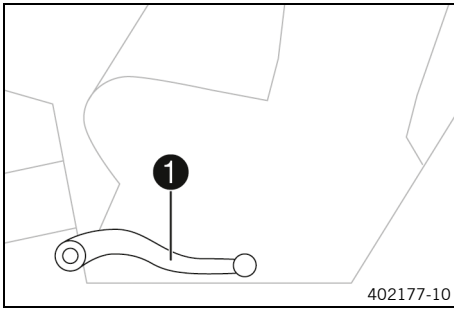

Foot brake lever ❶ is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

6.21 Side stand

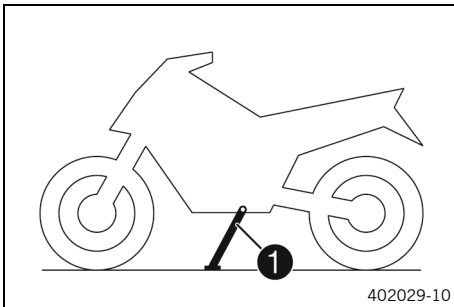

The side stand ❶ is located on the left of the vehicle. The side stand is used for parking the motorcycle.




Info

The side stand must be folded up during motorcycle use. The side stand is coupled with the safety starting system; follow the riding instructions.

Possible states

- Side stand folded out – The vehicle can be supported on the side stand. The safety starting system is active.
- Side stand folded in – This position is mandatory when riding the motorcycle. The safety starting system is inactive.

7.1 Combination instrument

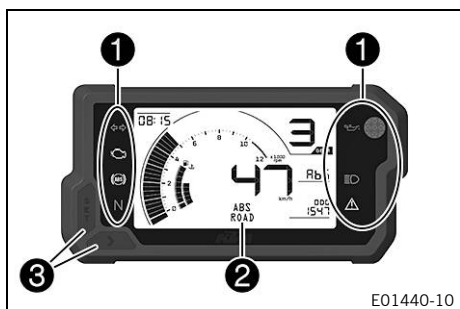

The combination instrument is attached in front of the handlebar.

- ① Indicator lamps (📖 p. 22)
- ② Display (📖 p. 24)
- ③ Function buttons (📖 p. 25)

7.2 Activation and test



Activation

The combination instrument is activated when the ignition is switched on.

i Info

The brightness of the displays is controlled by an ambient light sensor in the combination instrument.

Test

When the ignition is switched on, all indicator lamps light up briefly except for the turn signal indicator lamp.

The tachometer, temperature and fuel display segments light up and go out in sequence.

The gear display counts from 0 to 6 and back.

The speedometer counts from 0 to 299 and back.

The remaining display segments of the display light up briefly.

The **READY TO >> RACE** logo appears on the display.

i Info

The ABS warning lamp lights up until a speed of approx. 6 km/h (approx. 4 mph) or more has been reached.

If the distance to the next service has reached 0 km, warning **Service Reset** appears on the display.


7.3 Warnings

i Info

All existing warnings are displayed on the **Info** display until these are no longer active.


The relevant indicator lamps light up as soon as a malfunction occurs.

As soon as several warnings pertaining to operating safety have been detected, the general warning lamp ⚠ also flashes.

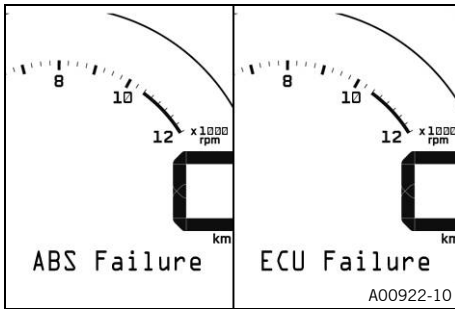


If a malfunction has occurred in the CAN bus, various warnings appear on the display:

ABS Failure and **ECU Failure** can appear.

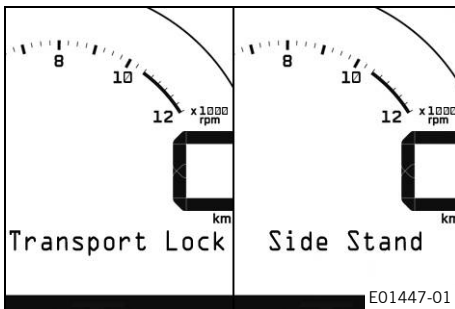


Transport Lock appears on the display if transport mode is activated.

Side Stand appears on the display if the side stand is folded down.

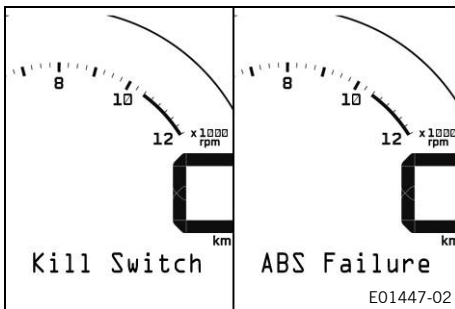

Kill Switch appears on the display if the emergency off switch is pressed.


ABS Failure appears on the display if the ABS is no longer active.

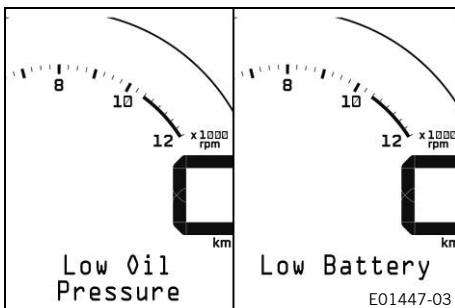

Low Oil Pressure appears on the display if the oil pressure is too low.

Low Battery appears on the display if the battery voltage falls below the specified value.


Battery voltage	$\leq 10.5 \text{ V}$
-----------------	-----------------------

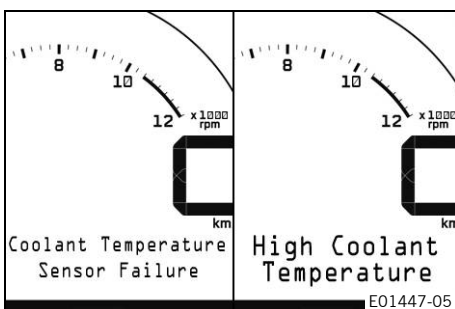

Coolant Temperature Sensor Failure appears on the display if the coolant temperature sensor is faulty.

High Coolant Temperature appears on the display if the coolant temperature rises above the specified value.

Coolant temperature	$> 110 \text{ }^{\circ}\text{C}$ ($> 230 \text{ }^{\circ}\text{F}$)
---------------------	---

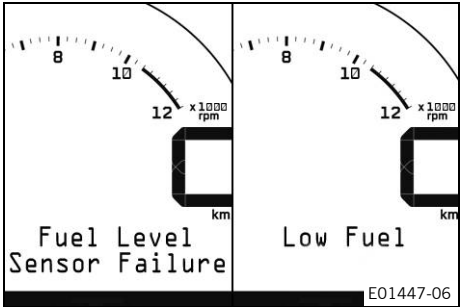

Fuel Level Sensor Failure appears on the display if the fuel level indicator is faulty.

Low Fuel appears on the display if the fuel level reaches the reserve mark.

7.4 Indicator lamps



The indicator lamps offer additional information about the operating state of the motorcycle. When the ignition is switched on, all indicator lamps light up briefly except for the turn signal indicator lamp. As soon as a warning for operating safety has been detected, the general warning lamp  also lights up.



Info

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.


The ABS warning lamp lights up until a speed of approx. 6 km/h (approx. 4 mph) or more has been reached.

Possible states

	The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on.
	Malfunction indicator lamp lights up yellow – The <u>OBD</u> has detected a malfunction in the vehicle electronics.

	The shift warning lights up/ flashes red – The shift warning light flashes red when the set shift speed Flashes is reached. The shift warning light lights up red when the set shift speed Lights Up is reached.
	The idle indicator lamp lights up green – The transmission is in the neutral position.
	The high beam indicator lamp lights up blue – The high beam is switched on.
	The general warning lamp flashes yellow – A note/warning note on operating safety has been detected. This is also shown in the display.
	ABS warning lamp lights up yellow – Status or error messages relating to <u>ABS</u> .
	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.

7.5 Shift warning light

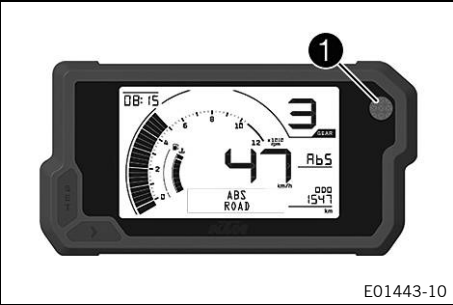

The shift warning light ❶ is at the top right of the combination instrument.


During the running-in phase (up to 1000 km / 621 miles), the values for **Flashes** and **Lights Up** cannot be adjusted. The shift warning light flashes red for **Flashes** and the shift warning light lights up red for **Lights Up**.

i Info
After the first service, the shift warning light is deactivated when the engine is warm in sixth-gear.

Coolant temperature	≤ 35 °C (≤ 95 °F)
ODO	< 1,000 km (< 620 mi)
The shift warning light always flashes at	7,000 rpm


Coolant temperature	> 35 °C (> 95 °F)
ODO	> 1,000 km (> 620 mi)
Flashes shift warning light	flashes
Lights Up shift warning light	lights up

7.6 Gear display

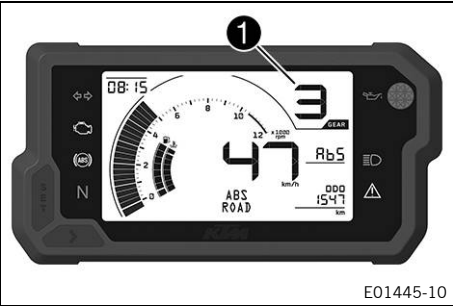

The current gear is shown in area ❶ of the display.

7.7 Display

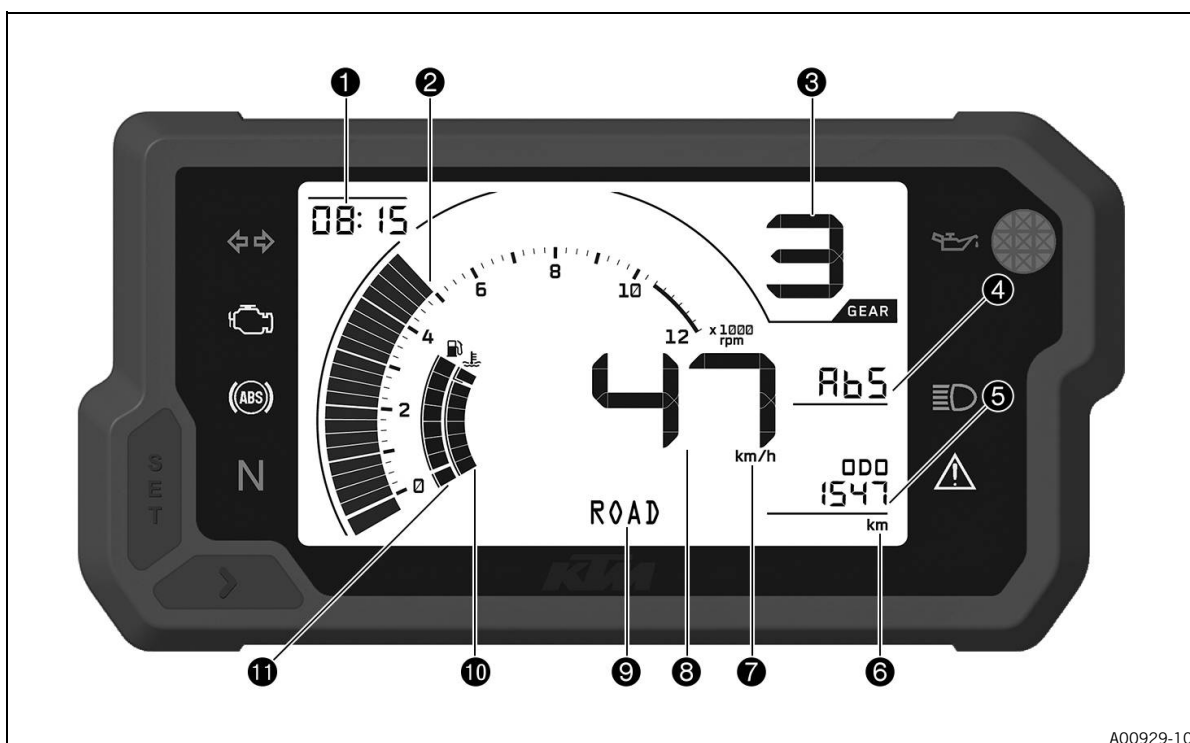

A00929-10

The time appears in area ①.

The tachometer ② shows the engine speed in revolutions per minute.

The gear display ③ shows the engaged gear.

Display ④ shows the current display mode.

The **ODO** display ⑤ shows the odometer total in kilometers or miles.

⑥: units for the **ODO** indicator.

⑦: units for the speedometer.

Speed ⑧ is shown in kilometers per hour **km/h** or in miles per hour **mph**.

Display ⑨ shows additional information about the selected display mode.


The coolant temperature appears in segment ⑩.

The fuel level is displayed in area ⑪.

i Info

The time must be reset if the 12-V battery was disconnected from the vehicle or the fuse was removed.
The brightness of the displays is controlled by an ambient light sensor in the combination instrument.

7.8 Fuel level display

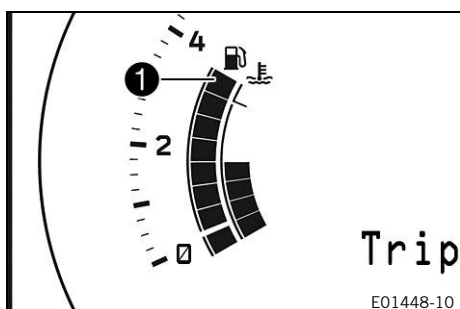

E01448-10

The fuel tank capacity is shown in area ① of the display.

The fuel level indicator consists of bars. The more bars are lit, the more fuel is in the fuel tank.

**Info**


If the fuel level is getting low, the last bar of the fuel level display flashes and the **Low Fuel Level** warning also appears in the display.

The fuel level is displayed with a slight delay to prevent the indicator from constantly moving while riding.

The fuel level display is not updated while the side stand is folded out or the emergency off switch is switched off.

The **Fuel Level Sensor Failure** warning appears if the combination instrument does not receive a signal from the fuel level sensor.

7.9 Coolant temperature indicator

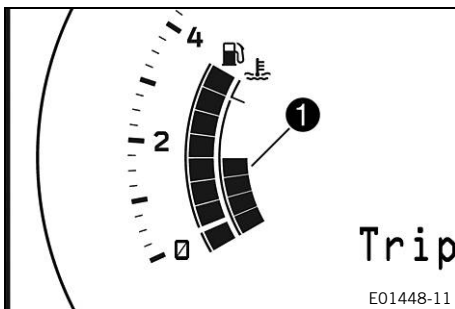

The coolant temperature is shown in area **1** of the display.

The coolant temperature indicator consists of bars. The more bars that light up, the hotter the coolant.

Note

Engine failure Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.

**Info**


When all the bars light up, the **High Coolant Temperature** warning appears on the display.

If the cooling system overheats, the maximum engine speed is limited.

Possible states

- The engine is cold – Up to three bars light up.
- Engine warm – Four to six bars light up.
- Engine hot – Seven to eight bars light up.
- Engine very hot – All eight bars flash.

7.10 Function buttons

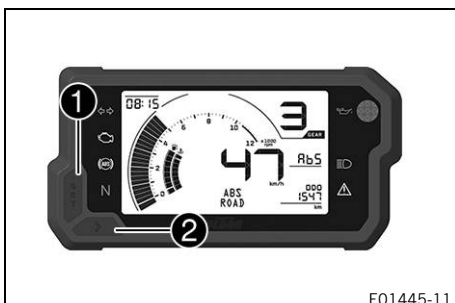

Press the **SET** button **1** to change display modes.

Possible display modes are **ABS Modus**, **Info**, distance 1 (**TRIP 1**) and distance 2 (**TRIP 2**).

Press the **SCROLL** button **2** to change menus within a display mode.

7 COMBINATION INSTRUMENT

7.11 ODO display




The total distance covered **ODO** is shown in area **1** of the display.

i Info

This value is retained, even if the 12-V battery is disconnected from the vehicle or the fuse blows.

7.12 ABS display

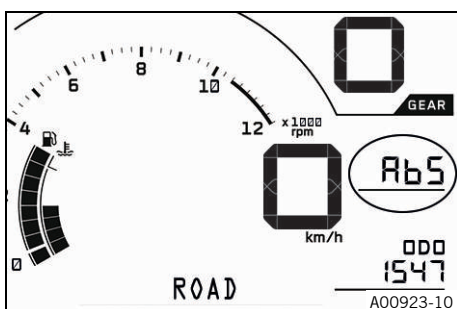

Condition


- The motorcycle is stationary.
- Press the **SET** button briefly and repeatedly until **ABS** appears on the display.

ABS indicates the selected ABS mode.

i Info

Press the **SET** button briefly to change to the next display mode in the display.

7.13 Info display

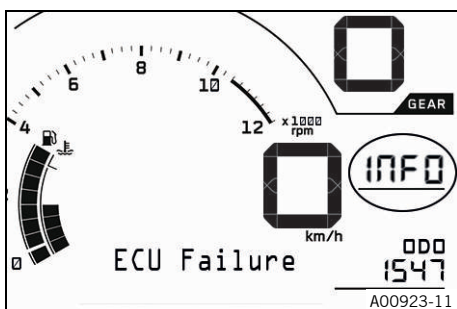


- Press the **SET** button briefly and repeatedly until **Info** appears on the display.

Info displays messages or warnings that have occurred.

i Info

The **Info** display is only shown if a message or warning is pending.
The warnings that have occurred are saved in the **Info** display until these are no longer active.
All warnings that have occurred are shown automatically in succession on the **Info** display.
Press the **SCROLL** button briefly to change to the next warning in the display.
Press the **SET** button briefly to change to the next display mode in the display.

7.14 TRIP 1 display

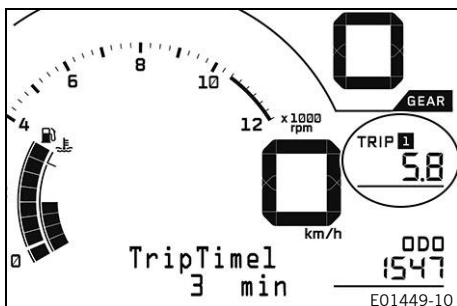

Press the **SET** button briefly and repeatedly until **TRIP 1** appears in the display.




Info

TRIP 1 shows the distance since the last reset, such as between two refueling stops. **TRIP 1** is always running and counts up to **999.9**.

Press the **SCROLL** button briefly to change to the next menu in the display.

Press the **SET** button briefly to change to the next display mode in the display.

7.14.1 Time Trip 1

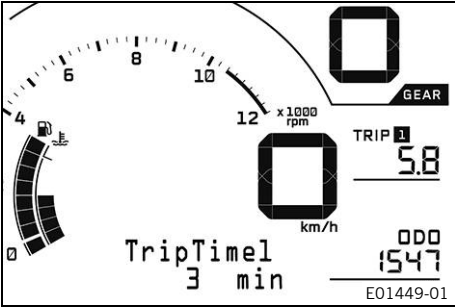


- Press the **SET** button briefly and repeatedly until **TRIP 1** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Riding time 1 based on **TRIP 1** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 1 is reset
Press the SET button briefly.	Next display mode in the display

7.14.2 Average Speed Trip1

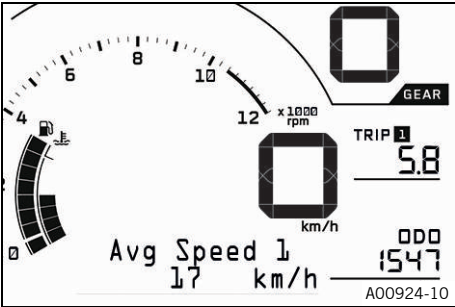


- Press the **SET** button briefly and repeatedly until **TRIP 1** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Average speed 1 based on **TRIP 1** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 1 is reset
Press the SET button briefly.	Next display mode in the display

7.14.3 Avg Fuel Cons 1

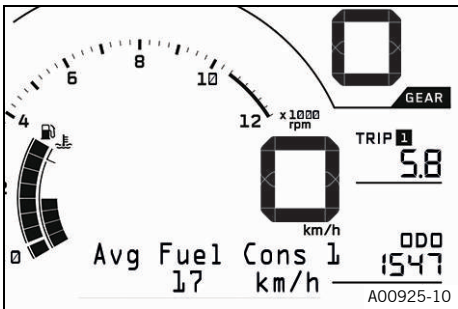


- Press the **SET** button briefly and repeatedly until **TRIP 1** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Average fuel consumption 1 based on **TRIP 1** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 1 is reset
Press the SET button briefly.	Next display mode in the display

7.14.4 Fuel Range

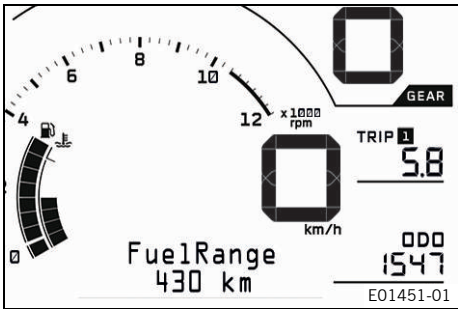

- Press the **SET** button briefly and repeatedly until **TRIP 1** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.


The **Fuel Range** display is identical to the **TRIP 1** display and the **TRIP 2** display.
The range is shown in this menu.

 **Info**

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.
The range is displayed after the ignition is switched on.
The minimum range displayed is 10 kilometers (10 miles).

Press the SCROLL button briefly.	Next menu on the display
Press the SET button briefly.	Next display mode in the display

7.15 TRIP 2 display

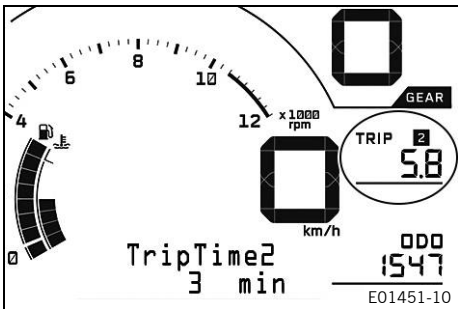


Press the **SET** button briefly and repeatedly until **TRIP 2** appears in the display.

 **Info**

TRIP 2 shows the distance since the last reset, such as between two refueling stops. **TRIP 2** is always running and counts up to **999.9**.
Press the **SCROLL** button briefly to change to the next menu.
Press the **SET** button briefly to change to the next display mode in the display.

7.15.1 Time Trip 2

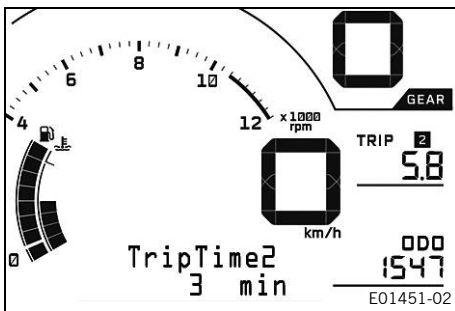


- Press the **SET** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Riding time 2 based on **TRIP 2** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 2 is reset
Press the SET button briefly.	Next display mode in the display

7.15.2 Average Speed Trip2

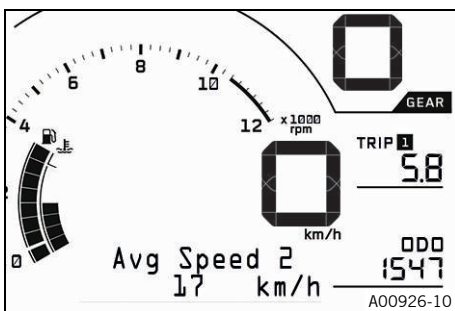


- Press the **SET** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Average speed 2 based on **TRIP 2** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 2 is reset
Press the SET button briefly.	Next display mode in the display

7.15.3 Avg Fuel Cons 2

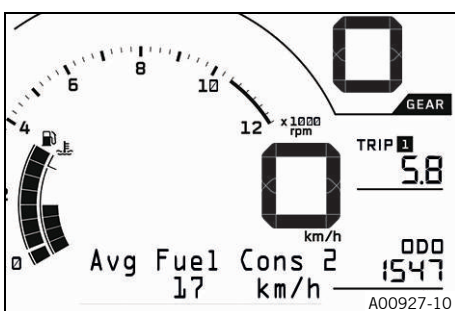


- Press the **SET** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

Average fuel consumption 2 based on **TRIP 2** is shown in this menu.

Press the SCROLL button briefly.	Next menu on the display
Press and hold the SET button for 5 seconds.	Display of TRIP 2 is reset
Press the SET button briefly.	Next display mode in the display

7.15.4 Fuel Range

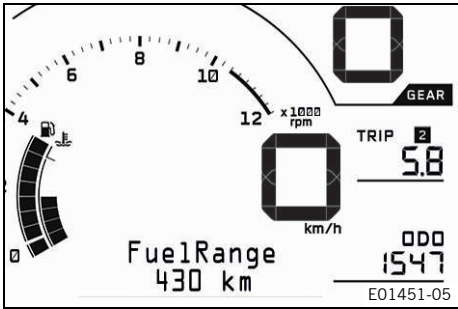

- Press the **SET** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SCROLL** button briefly and repeatedly until the desired menu appears.

The **Fuel Range** display is identical to the **TRIP 1** display and the **TRIP 2** display.
The range is shown in this menu.

i **Info**

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.
The range is displayed after several 100 meters of travel after the ignition is switched on.
The minimum range displayed is 10 kilometers (10 miles).

Press the SCROLL button briefly.	Next menu on the display
Press the SET button briefly.	Next display mode in the display

7.16 Adjusting ABS mode

Condition
The motorcycle is stationary.


- Press the **SET** button briefly and repeatedly until **ABS** appears on the display.

Changing the ABS mode

- Press and hold the **SCROLL** button.
 - ✓ The message **Keep Pressed** appears in the display.
- As soon as the message **Release Button** appears in the display, release the **SCROLL** button.
 - ✓ The now active ABS mode is shown in the display.

i **Info**

Do not open the throttle during the selection.
If switching ABS mode was unsuccessful, the previously set ABS mode will remain active.
A flashing ABS mode indicates that the ABS mode displayed does not match the actual ABS mode due to a malfunction.
If ABS mode **ROAD** is enabled, ABS controls both wheels.
If the ABS mode **SUPERMOTO** is enabled, ABS only controls the front wheel. The rear wheel is not controlled by ABS and may lock during braking maneuvers.

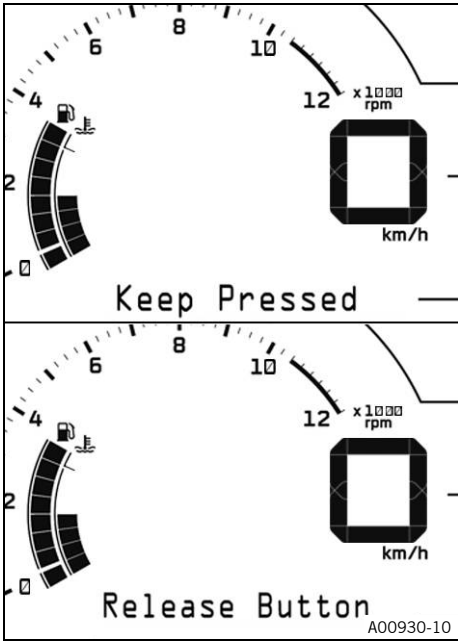

7.17 Setting the units



Info


Make the setting according to the country.

If the unit is changed, the value **ODO** is retained and converted accordingly.

Condition

The motorcycle is stationary.

- Press and hold the **SCROLL** button for 3 seconds.
- ✓ The menu display appears.
- Press the **SCROLL** button briefly and repeatedly until the menu **Set Units** appears in the display.
- Press the **SET** button briefly to get to the **Set Units** menu.
- ✓ The display **Set Distance** appears.

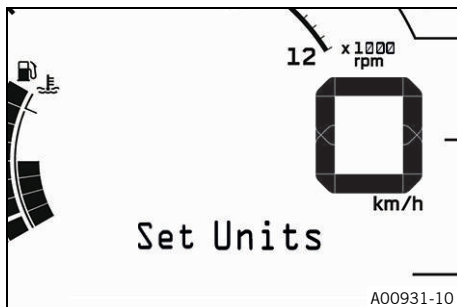

Setting the units

- Press the **SCROLL** button briefly to switch between **km** and **mile**.
- Press the **SET** button briefly to confirm the unit selected.
- ✓ The display **Set Fuel** appears.
- Press the **SCROLL** button to switch between **l/100km**, **km/l**, **l/100miles**, **miles/l**, **miles/USGa**, **miles/UKGa**, **USGa/100mi** and **UKGa/100mi**.
- Press the **SET** button briefly to confirm the selected display format.
- ✓ The **Set Units** menu appears.




Info

km or **mile** can be set as a length unit.

Fuel consumption can be set as **l/100km**, **km/l**, **l/100miles**, **miles/l**, **miles/USGa**, **miles/UKGa**, **USGa/100mi** or **UKGa/100mi**.


- Press the **SCROLL** button briefly and repeatedly until **ExitMenu** appears in the display.
- Press the **SET** button briefly to leave the menu.
- ✓ The display selected last appears.

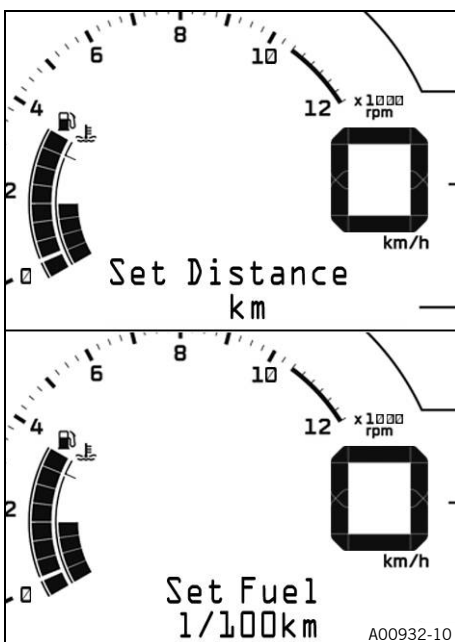


7.18 Setting the clock

Condition

The motorcycle is stationary.

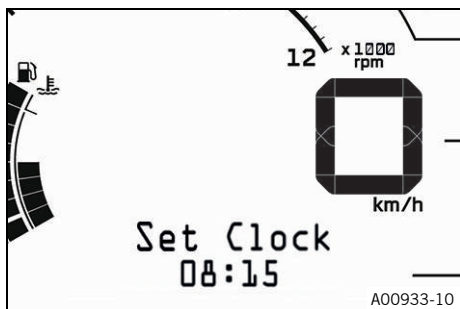

- Press and hold the **SCROLL** button for 3 seconds.
✓ The menu display appears.
- Press the **SCROLL** button briefly and repeatedly until the menu **Set Clock** appears in the display.
- Press the **SET** button briefly to get to the **Set Clock** menu.
✓ The display **Set Hour** appears.

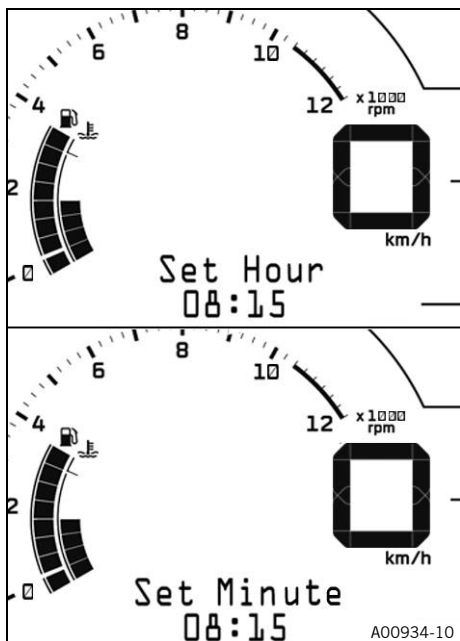


Setting the clock

- Press the **SCROLL** button briefly and repeatedly until the desired hours are displayed.
- Press the **SET** button briefly.
✓ The display **Set Minute** appears.
- Press the **SCROLL** button briefly and repeatedly until the desired minutes are displayed.
- Press the **SET** button briefly.
✓ The **Set Clock** menu appears.
- Press the **SCROLL** button briefly and repeatedly until **ExitMenu** appears in the display.
- Press the **SET** button briefly to leave the menu.
✓ The display selected last appears.


7.19 Adjusting the shift warning light

Condition

The motorcycle is stationary.

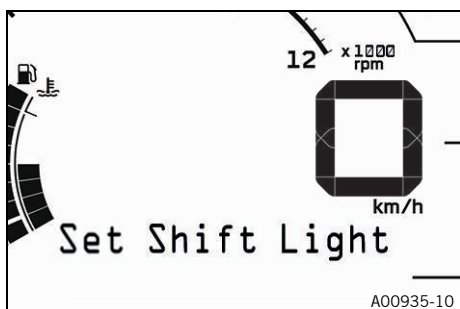

- Press and hold the **SCROLL** button for 3 seconds.
✓ The menu display appears.
- Press the **SCROLL** button briefly and repeatedly until the menu **Set Shift Light** appears in the display.
- Press the **SET** button briefly to get to the **Set Shift Light** menu.
✓ The display **Flashes** appears.

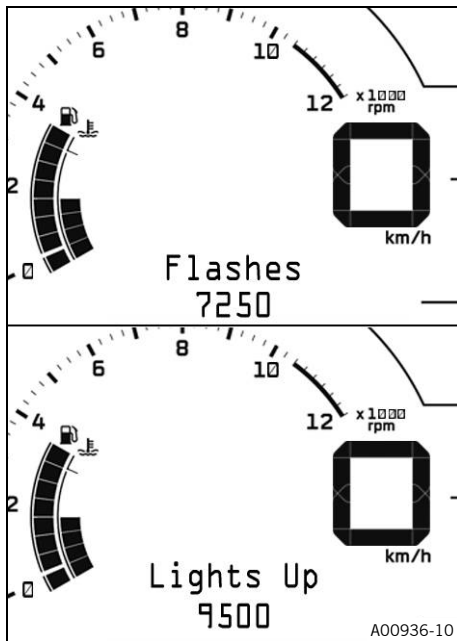

Setting Flashes and Lights Up

- Press the **SCROLL** button briefly and repeatedly until the desired speed for **Flashes** is displayed.



Info

The engine speed can be set at intervals of 250. **Flashes** is the speed above which the shift warning light starts flashing red.

- Press the **SET** button briefly.
✓ The display **Lights Up** appears.
- Press the **SCROLL** button briefly and repeatedly until the desired speed for **Lights Up** is displayed.



Info

The engine speed can be set at intervals of 250. **Lights Up** is the speed above which the shift warning light lights up red.

- Press the **SET** button briefly.
✓ The **Set Shift Light** menu appears.
- Press the **SCROLL** button briefly and repeatedly until **ExitMenu** appears in the display.
- Press the **SET** button briefly to leave the menu.
✓ The display selected last appears.



8.1 Advice on preparing for first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding at alternating angles.
Running-in phase 200 km (124 mi)



Info

When using the vehicle, remember that others may feel disturbed by excessive noise.

- Ensure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
 - ✓ The delivery certificate is transferred upon vehicle handover.
- Read the entire Owner's Manual before riding for the first time.
- Get to know the controls.
- Get used to the handling characteristic of the motorcycle on suitable terrain before undertaking a more challenging ride. Also, ride as slowly as possible to get a better feeling for the motorcycle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Run the engine in. (📖 p. 35)

8.2 Running in the engine

- During the running-in phase, do not exceed the specified engine speed.

Guideline

Maximum engine speed	
During the first: 1,000 km (620 mi)	7,500 rpm



Info

During the running-in phase, the shift warning light is set to a specified value and cannot be changed.

- Avoid fully opening the throttle!



8.3 Loading the vehicle



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational motorcycle with a full tank, rider and, if necessary, a passenger with protective clothing and helmet, and, if necessary, mounted luggage.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents The luggage system will be damaged if it is overloaded.

- Read the manufacturer information on maximum payload when mounting cases.



Warning

Danger of accidents Luggage which has slipped impairs visibility.

If the tail light is covered, you are less visible to traffic behind you, especially when it is dark.

- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A high payload alters the handling characteristic and increases the stopping distance.

- Adapt your speed to your payload.

- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
- Do not exceed the maximum permissible weight and maximum permissible axle loads.

Guideline


Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	125 kg (276 lb.)
Maximum permissible rear axle load	210 kg (463 lb.)



9.1 Checks and maintenance measures when preparing for use

Info

Before every trip, check the condition of the vehicle and ensure that it is roadworthy.
The vehicle must be in perfect technical condition when it is being operated.

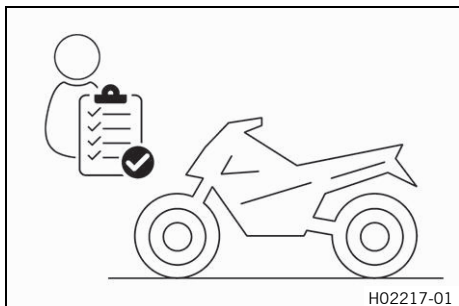

- Check the engine oil level. (📖 p. 94)
- Check the front brake fluid level. (📖 p. 61)
- Check the rear brake fluid level. (📖 p. 63)
- Check the front brake linings. (📖 p. 63)
- Check the brake linings of the rear brake. (📖 p. 65)
- Check that the brake system is functioning properly.
- Check the coolant level in the compensating tank. (📖 p. 85)
- Check for chain dirt accumulation. (📖 p. 51)
- Check the chain tension. (📖 p. 52)
- Check the tire condition. (📖 p. 72)
- Check tire pressure. (📖 p. 73)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical system is functioning properly.
- Check that luggage is properly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

9.2 Starting



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Caution

Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

- Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.


Dust and dirt will enter the engine without an air filter.

- Only operate the vehicle if it is equipped with an air filter.

Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.

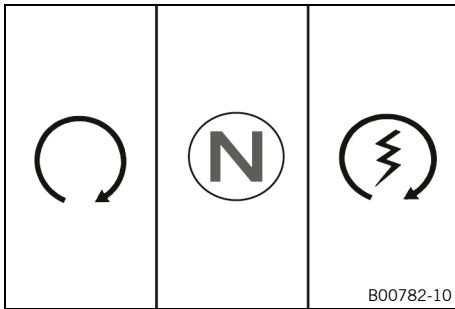

- Unlock the steering. (📖 p. 16)
- Sit on the vehicle, take the weight off of the side stand, and move it all the way up with your foot.
- Turn the emergency OFF switch to the position ○.
- Switch on the ignition by turning the ignition key to the position ○.

Guideline

To avoid malfunctions in the control unit communication, do not switch the ignition off and on in rapid succession.

- ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift the transmission into neutral.
- ✓ Green idle indicator lamp **N** lights up.
- ✓ The **ABS** warning light lights up and goes back out after starting off.
- Briefly press the start button (🔌).



Info

Do not press the start button until the combination instrument function check has finished.
Do not open the throttle to start.
Start continuously for a maximum of 5 seconds. Wait for at least five seconds before trying again.
This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch lever, the engine stops.



9.3 Starting off

- Pull the clutch lever, shift into first-gear, release the clutch lever slowly and at the same time open the throttle carefully.



Tip

If the engine stalls while starting off, only pull the clutch lever and press the start button. The transmission must not be shifted into neutral.



9.4 Shifting, riding



Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions.
- Adapt your speed to the road conditions.



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Warning

Danger of accidents An incorrect ignition key position causes malfunctions.

- Do not change the ignition key position while driving.



Warning

Danger of accidents Adjustments to the vehicle distract attention from traffic activity.

- Make all adjustments when the vehicle is at a standstill.



Warning

Risk of injury The passenger may fall from the motorcycle if they conduct themselves incorrectly.

- Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot pegs and holds on to the rider or the grab handles.
- Note the regulations governing the minimum age of passengers in your country.



Warning

Danger of accidents A risky riding style constitutes a major risk.

- Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.



Warning

Danger of accidents Cold tires have reduced road grip.

- Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding at alternating angles.
Running-in phase 200 km (124 mi)



Warning

Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A fall can damage the vehicle more seriously than it may first appear.

- Check the vehicle after a fall as you do when preparing for use.

Note


Engine failure Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
 - Allow the engine and cooling system to cool down.
 - Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.
-



Info

If unusual noises occur while riding, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine and contact an authorized KTM workshop.

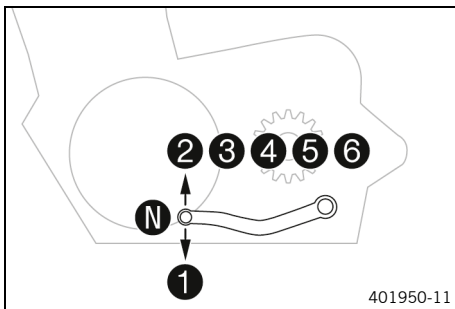

- Shift into a higher gear when conditions allow (incline, road situation, etc.).
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.



Info

The gear positions can be seen in the figure. The neutral or idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

The operating temperature is reached when 4 bars of the temperature indicator light up.

- Only open the throttle as much as the engine can handle – abrupt throttle grip opening increases fuel consumption. Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- Brake if necessary and close the throttle at the same time in order to shift down.
- Pull clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.
- If the malfunction indicator lamp lights up during a trip, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine, and contact an authorized KTM workshop.



9.5 Applying the brakes



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever if you do not want to brake.



Warning

Danger of accidents Higher total weight increases the stopping distance.

- Take the longer stopping distance into account when carrying a passenger or luggage with you.



Warning

Danger of accidents Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



Warning

Danger of accidents ABS may increase the stopping distance in certain situations.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

The ABS effectiveness is only ensured if it is switched on.

- Leave the ABS switched on in order to benefit from the protective effect.

- When braking, release the throttle and apply the front and rear brakes at the same time.



Info

When the ABS is enabled, you can achieve maximum braking power even on low grip surfaces such as sandy, wet, or slippery terrain without locking of the wheels.



Warning

Danger of accidents The rear wheel can lock due to the engine braking effect.

- Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.



Warning

Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.

- Always finish braking before you go into a bend. Shift down to a lower gear appropriate to your speed.
- Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not over-rev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

9.6 Stopping, parking



Warning

Risk of injury People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.
- Lock the steering and remove the ignition key if you leave the vehicle unattended.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

-
- Apply the brakes on the motorcycle.
 - Shift the transmission into neutral.
 - Switch off the ignition by turning the ignition key to the position .



Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on in the ignition lock, the power supply to most electrical power consumers remains uninterrupted and this discharges the 12-V battery. You should therefore always switch off the engine with the ignition lock – the emergency OFF switch is intended for emergencies only.

-
- Park the motorcycle on a firm surface.
 - Swing side stand forward with your foot as far as it will go and lean the vehicle on it.
 - Lock the steering. ( p. 15)



9.7 Transport

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

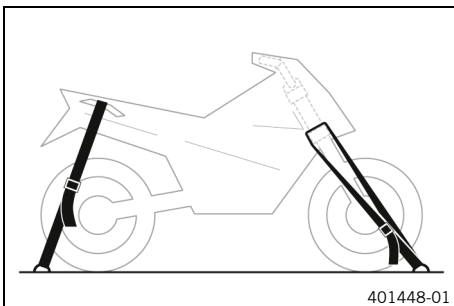

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.


9.8 Towing in the event of a breakdown

Note

Danger of damage Towing away using a towing vehicle is not an appropriate vehicle recovery method.

Damage to the drive train or transmission may occur during towing.

- Do not use towing equipment where the wheels of the broken down vehicle remain on the road and rotate as it is towed.
- Always transport a broken down vehicle on a trailer or on the loading area of a transport vehicle.

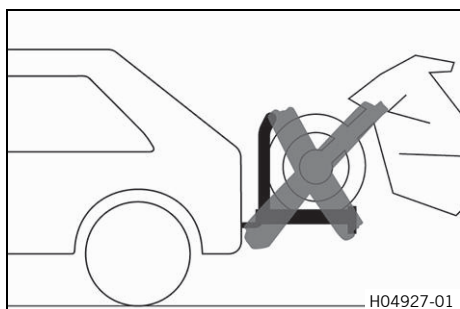

- Ensure that the broken down vehicle is properly secured on the trailer or transport vehicle.
- Observe local regulations for the recovery of broken down vehicles.

9.9 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.

- Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Switch off the engine.
- Open the fuel tank filler cap. (📖 p. 16)
- Fill the fuel tank with fuel up to the lower edge **1** of the fuel filler.

Total fuel tank capacity, approx.	13.7 l (3.62 US gal)	Super unleaded (ROZ 95) (📖 p. 111)
-----------------------------------	-------------------------	--

- Close the fuel tank filler cap. (📖 p. 17)



V02513-10

10.1 Additional information

Any further work that results from the compulsory work or from the recommended work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on KTM Dealer.net. Your authorized KTM dealer will be happy to advise you.

10.2 Required work

	every 24 months				
	every 12 months				
	every 15,000 km (9,300 mi)				
	every 7,500 km (4,650 mi)				
	after 1,000 km (620 mi)				
Read out the fault memory using the KTM diagnostics tool. 	○	●	●	●	●
Check that the electrical system is functioning properly.	○	●	●	●	●
Change the engine oil and oil filter, clean the oil screen.  (📖 p. 94)	○	●	●	●	●
Check the brake discs. (📖 p. 61)	○	●	●	●	●
Check the front brake linings. (📖 p. 63)	○	●	●	●	●
Check the brake linings of the rear brake. (📖 p. 65)	○	●	●	●	●
Check the tire condition. (📖 p. 72)	○	●	●	●	●
Check tire pressure. (📖 p. 73)	○	●	●	●	●
Check the brake lines for damage and leakage.	○	●	●	●	●
Check the front brake fluid level. (📖 p. 61)	○	●	●	●	●
Check the rear brake fluid level. (📖 p. 63)	○	●	●	●	●
Check the shock absorber and fork for leaks. 	○	●	●	●	●
Clean the dust boots of the fork legs. (📖 p. 49)		●	●		
Check the chain, rear sprocket, and engine sprocket. (📖 p. 54)		●	●	●	●
Check the chain tension. (📖 p. 52)	○	●	●	●	●
Check the coolant level in the compensating tank. (📖 p. 85)	○	●	●	●	●
Check that the radiator fan is functioning properly. 	○	●	●	●	●
Change the air filter, clean the air filter box. 		●	●		
Check that the throttle cables are undamaged, routed without sharp bends, and set correctly. 	○	●	●	●	●
Check the cables for damage and routing without sharp bends. 	○	●	●	●	●
Check the valve clearance. 			●		
Change the front brake fluid. 					●
Change the rear brake fluid. 					●
Checking the steering head bearing for play. 	○	●	●	●	●
Check the headlight setting. (📖 p. 82)	○	●	●		
Final check: Check the vehicle is roadworthy and take a test ride. 	○	●	●	●	●
Read out the error memory after the test ride using the KTM diagnostics tool. 	○	●	●	●	●
Reset the service interval display. 	○	●	●	●	●
Make a service entry in KTM Dealer.net . 	○	●	●	●	●

○ One-time interval

● Periodic interval

10.3 Recommended work

	every 48 months				
	every 12 months				
	every 30,000 km (18,600 mi)				
	every 7,500 km (4,650 mi)				
	after 1,000 km (620 mi)				
Check the frame. 🛠️			•		
Check the link fork. 🛠️			•		
Check the fork bearing for play. 🛠️		•	•		
Check the wheel bearing for play. 🛠️		•	•		
Grease all moving parts (e.g. side stand, hand lever, chain, ...) and check for smooth operation. 🛠️	○	•	•	•	•
Empty the drainage hoses. 🛠️	○	•	•	•	•
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and sleeves for cracking, leaks, and correct routing. 🛠️	○	•	•	•	•
Check the antifreeze. 🛠️	○	•	•	•	
Change the coolant. 🛠️ (📖 p. 89)					•
Check the tightness of the safety-relevant screws and nuts which are easily accessible. 🛠️	○	•	•	•	•

- One-time interval
- Periodic interval

11.1 Adjusting the spring preload of the shock absorber

**Warning**

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic.

- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.

**Info**

The spring preload defines the initial status of the spring operation on the shock absorber. The best spring preload setting is achieved when it is set for the weight of the rider and that of any luggage and a passenger, thus ensuring an ideal compromise between handling and stability.



- Adjust the spring preload by turning adjusting ring **1** using the hook wrench from the tool set.

Guideline

Spring preload	
Standard	5 clicks

Hook wrench, shock absorber (90529077000)	
Extension for hook wrench (90129099025)	


**Info**

The spring preload can be set to 10 different positions.

11.2 Adjusting the shift lever

**Info**

The adjustment range of the shift lever is limited.

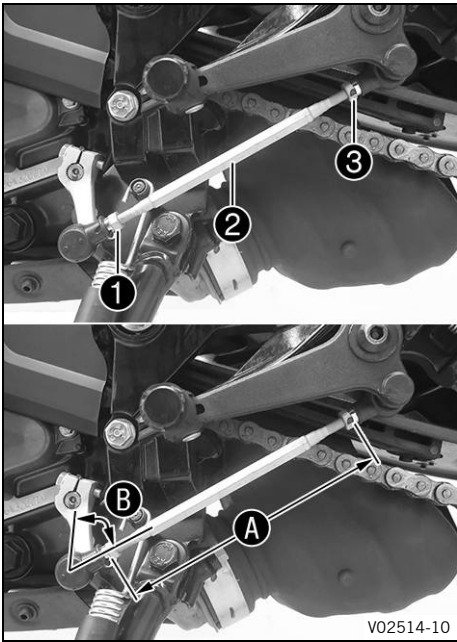

- Loosen nut **1** while holding stud **2**.

**Info**

Nut **1** has an LH thread.

- Loosen nut **3** while holding stud **2**.
- Adjust the shift lever by turning shift rod **2**.

Guideline

Shift rod adjustment range A	197 ... 204 mm (7.76 ... 8.03 in)
-------------------------------------	-----------------------------------

**Info**

Make equal adjustments on both sides. At least five screw threads must be screwed into the seating.

- Check adjusting angle **B**.

Guideline

Adjusting angle B shift rod - bell crank - shift lever	78°
---	-----

- Tighten nut ❸ while holding stud ❷.

Guideline

Nut, shift rod	M6	10 Nm (7.4 lbf ft)
----------------	----	--------------------

- Tighten nut ❶ while holding stud ❷.

Guideline

Nut, shift rod	M6LH	10 Nm (7.4 lbf ft)
----------------	------	--------------------

- Check the shift lever to ensure it is functioning properly and can move freely.




12.1 Raising the motorcycle with rear lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

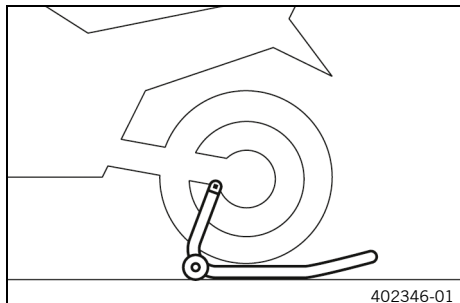

- Mount the supports of the lifting gear.
- Insert the adapter in the rear lifting gear.

Retaining adapter (61029955244)

Rear wheel work stand (69329955000)


- Stand the motorcycle upright, align the lifting gear to the link fork and the adapters, and raise the motorcycle.

12.2 Removing the rear of the motorcycle from the lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

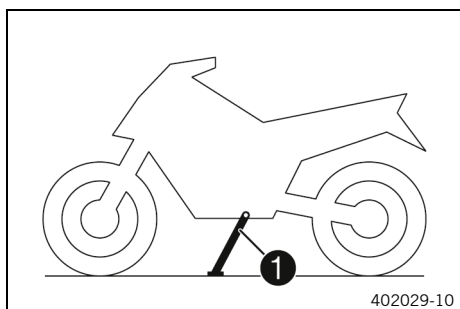

- Secure the motorcycle against falling over.
- Remove the rear lifting gear and lean the vehicle on side stand ①.
- Remove bushings kit.

12.3 Lifting the motorcycle with the front lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.


- Park the vehicle on a firm and level surface.


Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)

Condition

- Remove protection cap ①.

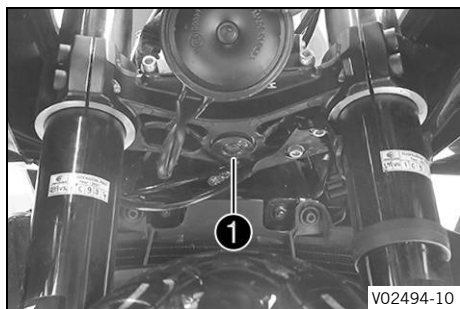

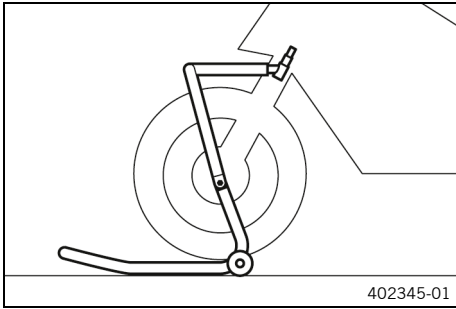

- Move the handlebar to the straight-ahead position. Position the lifting gear.

Mounting pin (69329965030)

Front wheel work stand, large (69329965100)



Info

Always raise the motorcycle at the rear first.

- Lift the motorcycle at the front.




12.4 Taking the motorcycle off the front lifting gear

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

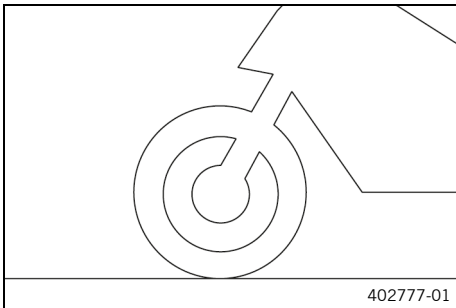

Main work

- Secure the motorcycle against falling over.
- Remove the front lifting gear.

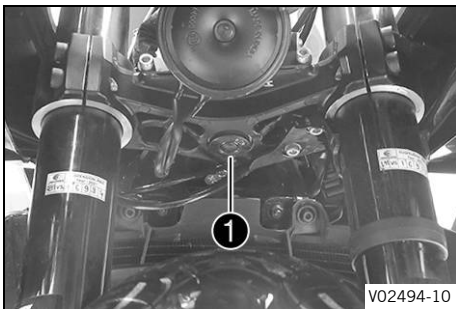

- Mount protection cap ①.

Finishing work

 
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)



12.5 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)
- Lift the motorcycle with the front lifting gear. (📖 p. 48)



Main work

- Push protection caps **1** of both fork legs downward.
- Push dust boots **2** of both fork legs downward.



Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tubes of both fork legs.

Universal oil spray (📖 p. 112)

- Press dust boots **2** of both fork legs back into the installation position.
- Remove the excess oil.
- Push protection caps **1** of both fork legs upward.

Finishing work


- Take the motorcycle off the front lifting gear. (📖 p. 49)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

12.6 Removing the front rider's seat



- Insert the ignition key in seat lock **1** and turn it clockwise.
- Raise the rear of the front rider's seat, pull it toward the rear, and remove it upward.
- Remove the ignition key from the seat lock.


12.7 Mounting the front rider's seat

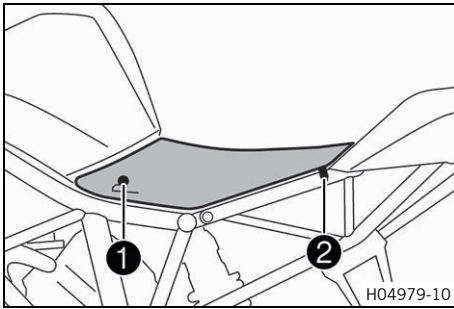

- Attach recess ① on the front rider's seat to the fuel tank, push the front rider's seat forward, and lower at the rear.
- ✓ The pin ② locks audibly in place.
- Check that the front rider's seat is mounted correctly.



12.8 Checking for chain dirt accumulation

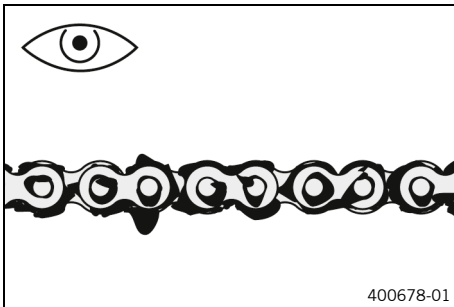

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 51)



12.9 Cleaning the chain



Warning

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)

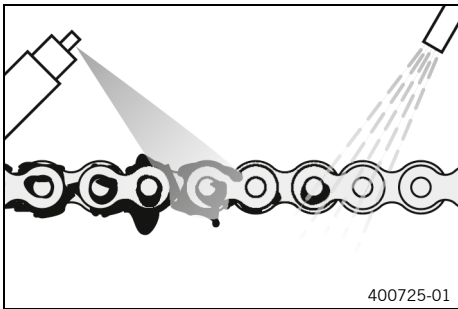

Main work

- Clean the chain regularly.
- Rinse off the loose dirt with a gentle jet of water.
- Remove grease residue with chain cleaner.

Chain cleaner (📖 p. 112)

- After drying, apply chain spray.

Street chain spray (📖 p. 112)

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

12.10 Checking the chain tension



Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)

Main work

- Shift the transmission into neutral.
- In the area after the chain sliding guard, press the chain upward toward the link fork and measure chain tension **A**.




Info

Top chain section **B** must be taut.
Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	5 ... 7 mm (0.2 ... 0.28 in)
---------------	------------------------------

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (📖 p. 53)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

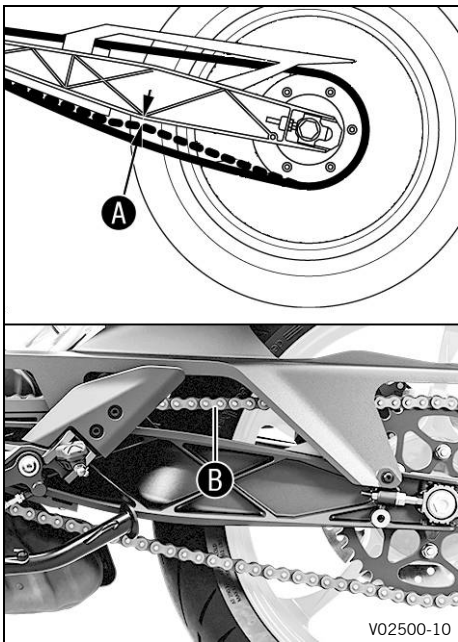

12.11 Adjusting the chain tension




Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

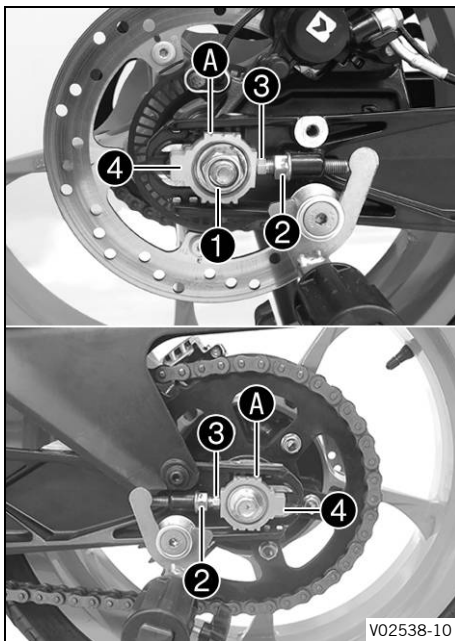

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)
- Check the chain tension. (📖 p. 52)

Main work

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

Guideline

Chain tension	5 ... 7 mm (0.2 ... 0.28 in)
Turn adjusting screws ③ on the left and right so that the markings on left and right chain adjusters ④ are in the same position relative to reference marks A. The rear wheel is then correctly aligned.	



Info

The top part of the chain must be taut.

Chain wear is not always even, so you should check the setting at different chain positions.

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.

Guideline

Nut, rear wheel spindle	M14x1.5	100 Nm (73.8 lbf ft)
-------------------------	---------	-------------------------

Finishing work


- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

12.12 Checking the chain, rear sprocket, and engine sprocket

- Preparatory work**
- Raise the motorcycle with the rear lifting gear. (📖 p. 48)

- Main work**
- Shift the transmission into neutral.
 - Check the rear sprocket and engine sprocket for wear.
 - » If the rear sprocket and engine sprocket are worn:
 - Change the drivetrain kit. 🛠️

i Info
The engine sprocket, rear sprocket, and chain should always be replaced together.

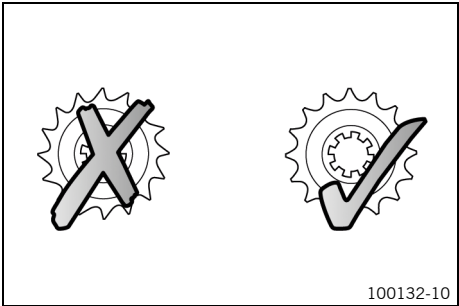

- Pull on the lower chain section with the specified weight **A**.

Guideline

Weight, chain wear measurement	15 kg (33 lb.)
--------------------------------	----------------



- Measure distance **B** of 20 chain rollers in the lower chain section.

i Info
Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B from 20 chain rollers at the longest chain section	301.6 mm (11.874 in)
--	----------------------

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 🛠️

 i Info
When a new chain is mounted, the rear sprocket and engine sprocket should also be changed. New chains wear out faster on old, worn sprockets.

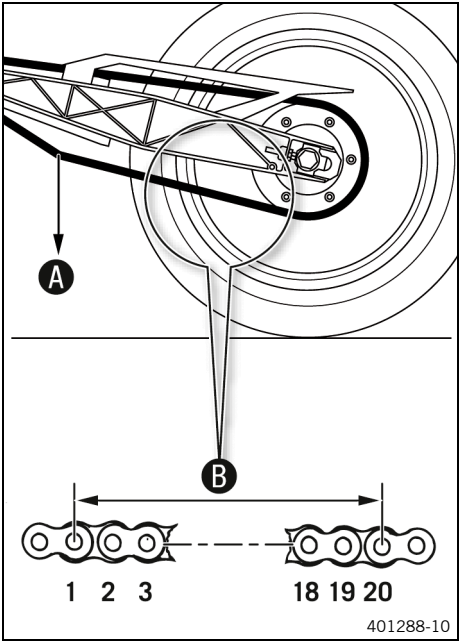

- Push the chain up in the area behind the chain guide.
- Check the chain sliding guard for wear.
 - » If the chain sliding guard has lost material due to wear to the extent that, in area **C**, the drilled hole of screw **1** is visible from above:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten screws on the chain sliding guard.

- Finishing work**
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)




12.13 Removing the fuel tank cover

Preparatory work

- Remove the front rider's seat. (p. 50)

Main work


- Remove screws ①.

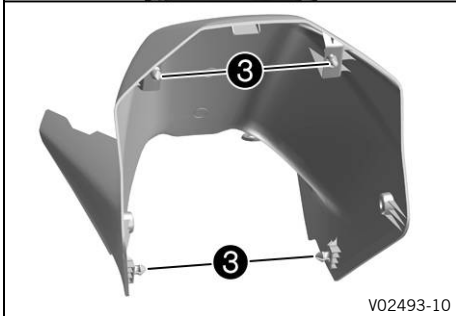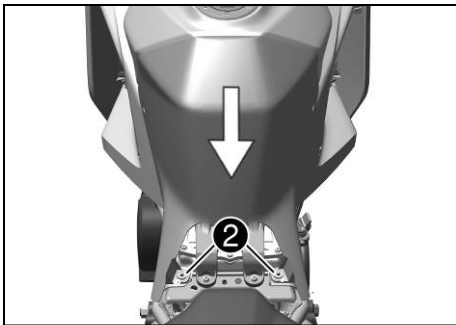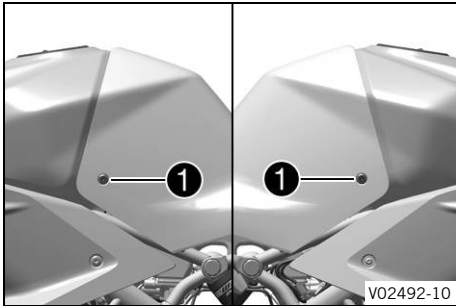


- Pull the fuel tank cover from holding lugs ②.
- Pull holding lugs ③ out of the brackets.
- Pull the fuel tank cover off towards the rear and take off upwards.



12.14 Mounting the fuel tank cover

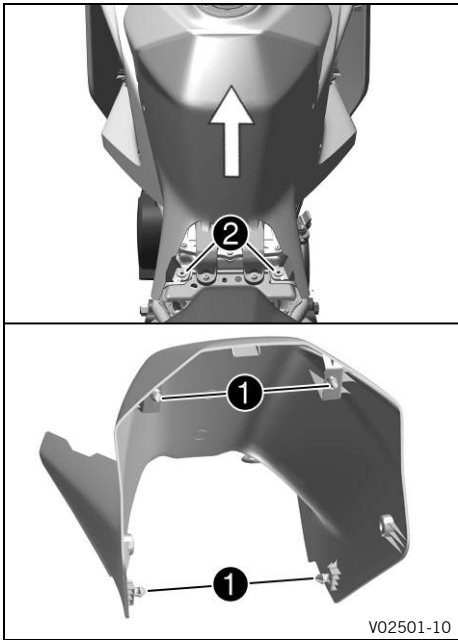

- Main work**
- Position the fuel tank cover and slide it forward.
✓ Holding lugs 1 engage in the brackets.
 - Position brackets with rubber bushings 2 on holding lugs and slide down.

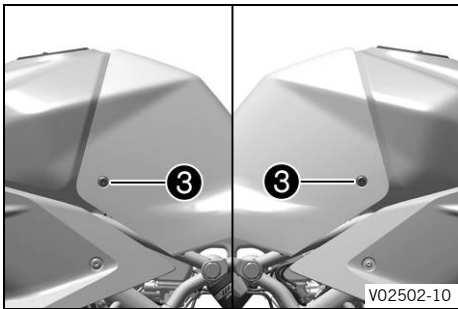


- Mount and tighten screws 3.
- Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------


- Check that the fuel tank cover is mounted correctly.

- Finishing work**
- Mount the front rider's seat. (📖 p. 51)

12.15 Removing the left side cover

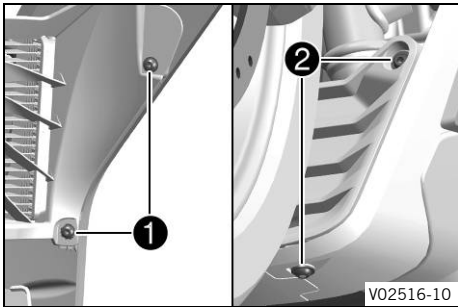


- Remove screws 1.
- Remove screws 2 with the bushings.

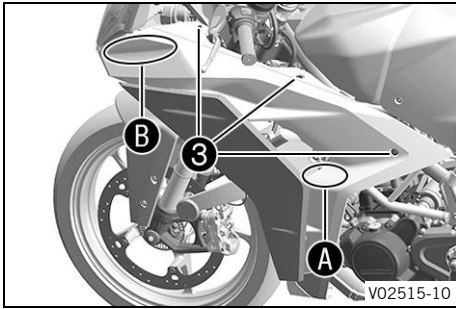

- Remove screws ③ with the bushings.
- Pull off holding lugs in area ① and in area ②.
- Take off the side cover.




12.16 Installing the left side cover

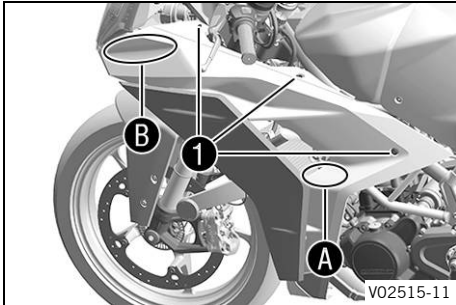

- Position the side cover.
- Push on the side cover in area ① and area ②.
- ✓ Make sure the holding lugs engage in the brackets.
- Mount screws ① with the bushings and tighten.

Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------

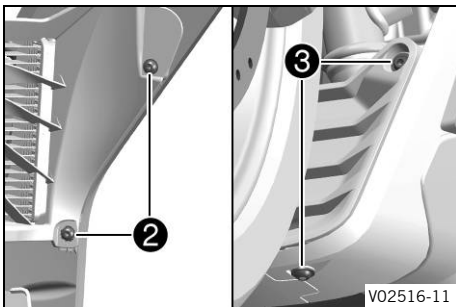

- Mount and tighten screws ②.

Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------


- Mount screws ③ with the bushings and tighten.

Guideline


Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------



12.17 Removing the right side cover

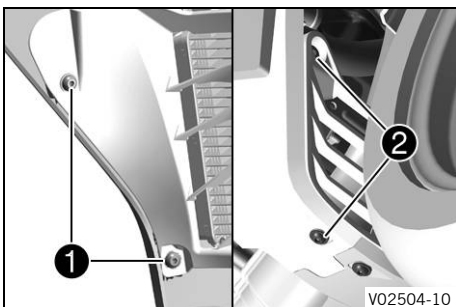


- Remove screws ①.
- Remove screws ② with the bushings.

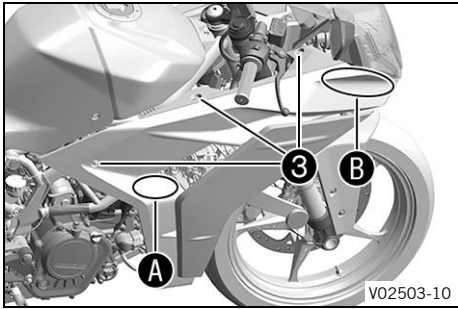

- Remove screws 3 with the bushings.
- Pull off holding lugs in area A and in area B.
- Take off the side cover.


12.18 Installing the right side cover

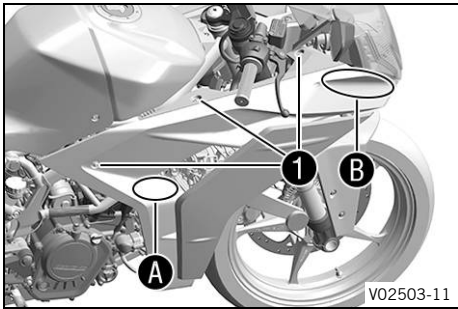

- Position the side cover.
- Push on the side cover in area A and area B.
- ✓ Make sure the holding lugs engage in the brackets.
- Mount screws 1 with the bushings and tighten.

Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------

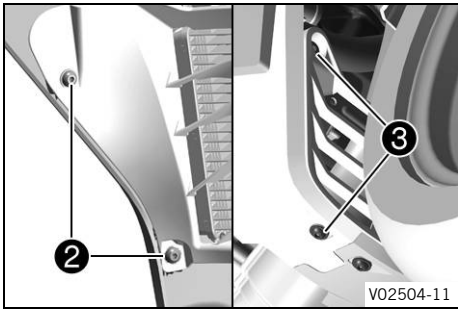

- Mount and tighten screws 2.

Guideline


Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------

- Mount screws 3 with the bushings and tighten.


Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
------------------------	----	-------------------

12.19 Removing the front fender

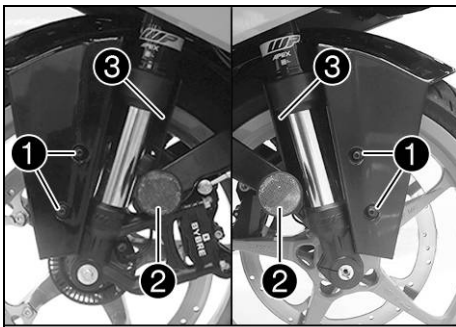


- Remove screws ❶.
- Remove screw ❷ and reflector.
- Take off the front fender and remove fork protector ❸.

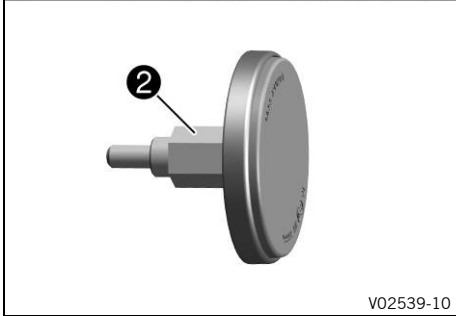

V02539-10


12.20 Installing the front fender

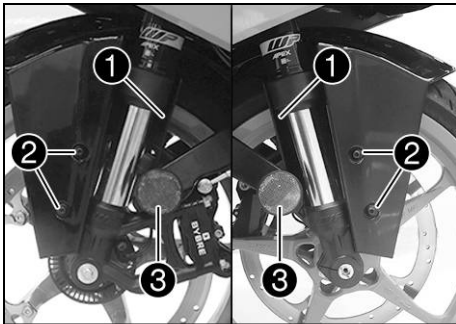

- Position fork protector ❶ and the front fender.
- Mount and tighten screws ❷.
- Mount and tighten screw ❸ and reflector.


Guideline

Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
---------------------------	----	-------------------

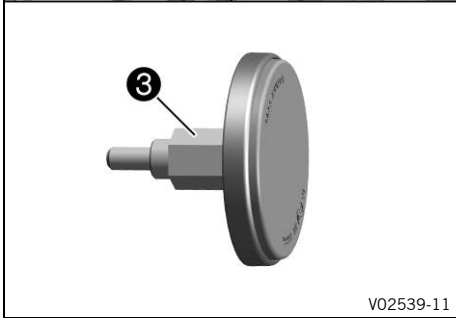

V02539-11

13.1 Anti-lock braking system (ABS)

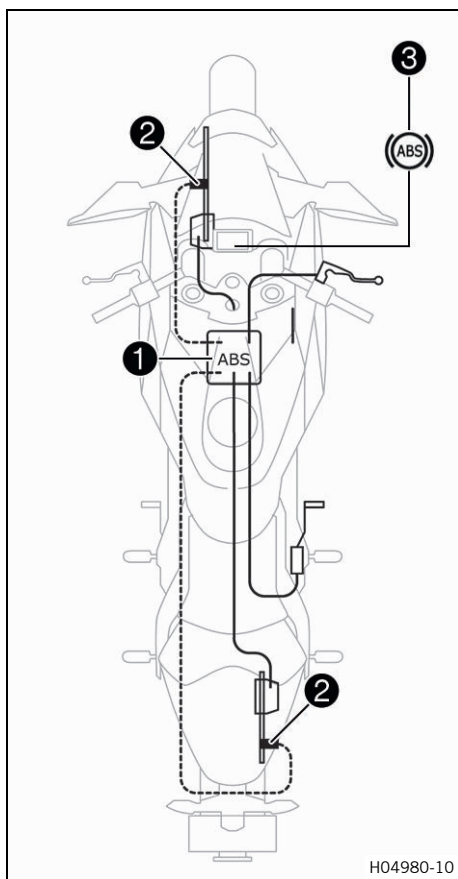

ABS module **1**, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the fuel tank. One wheel speed sensor **2** is located in each case on the front and the rear wheel.



Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by KTM.
- Only use tires/wheels approved by KTM with the corresponding speed index.
- Maintain the specified tire pressure.
- Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)

The ABS is a safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces.



Warning

Danger of accidents Driving aids can reduce the probability of a fall only within physical limits.

It is not always possible to compensate for extreme riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

- Adapt your riding style to the road conditions and your driving ability.

The ABS operates with two independent brake circuits (front and rear brakes). During normal operation, the brake system operates like a conventional brake system without ABS. When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating the brake pressure. The control function causes a slight pulsing of the hand and foot brake levers.

The ABS warning lamp **3** must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it lights up while riding, this indicates a malfunction in the ABS. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making "wheelies" or if the rear wheel spins. This causes the ABS to switch off.

To reactivate the ABS, stop the vehicle and switch off the ignition. The ABS is reactivated when the vehicle is switched on again. The ABS warning lamp goes out after starting off.


13.2
 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

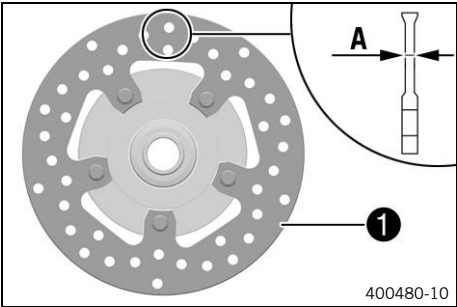

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.



Info

Wear will reduce the thickness of the brake disc at contact surface **1** of the brake linings.

Brake discs - wear limit	
front	4.5 mm (0.177 in)
rear	3.6 mm (0.142 in)

- » If the brake disc thickness is less than the specified value.
 - Change the front brake disc. 🔧
 - Change the rear brake disc. 🔧
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc. 🔧
 - Change the rear brake disc. 🔧



13.3
 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

 
- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



- Move the brake reservoir mounted on the handlebar into a horizontal position.
- Check the brake fluid level in the level viewer **1**.
 - » If the brake fluid level is below the **MIN** marking:
 - Add front brake fluid. (🔧 (p. 62)

13.4 Adding front brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

 
Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Only use clean brake fluid from a sealed container.

Preparatory work

- Check the front brake linings. (📖 p. 63)



Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.
- Add brake fluid up to the marking A.

Brake fluid DOT 4 / DOT 5.1 (📖 p. 110)
--

- Position the cover with the membrane. Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

13.5 Checking the front brake linings



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

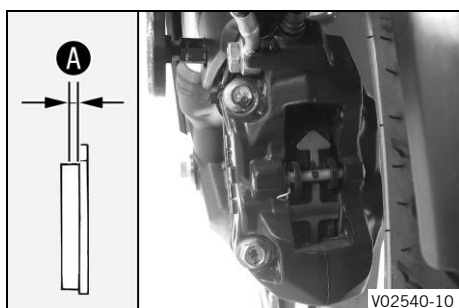

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the brake linings of the front brake. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is wear or tearing:
 - Change the brake linings of the front brake. 🛠️

13.6 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

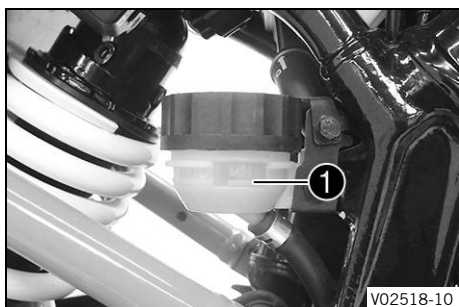

- Position the vehicle vertically.
- Check the brake fluid level in the brake fluid reservoir.
 - » If the fluid level reaches the **MIN** marking **1**:
 - Add rear brake fluid. 🛠️ (📖 p. 64)

13.7 Adding rear brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between the brake fluid and painted parts. Brake fluid corrodes paint.

Only use clean brake fluid from a sealed container.

 
 
Preparatory work

- Check the brake linings of the rear brake. (📖 p. 65)

Condition

The screw cap is locked.

- Remove screw ❶ and take off the screw cap lock.



- Position the vehicle vertically.
- Remove screw cap ❷ with membrane ❸.
- Add brake fluid up to the marking A.

Brake fluid DOT 4 / DOT 5.1 (📖 p. 110)

- Mount the screw cover with the membrane.




Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

- Position the screw cap lock and mount and tighten screw ❶.

Guideline

Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
---------------------------	----	-------------------

 

13.8 Checking the brake linings of the rear brake



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

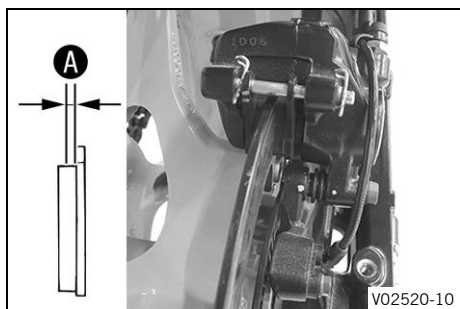

- Check the brake linings for minimum thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the rear brake linings. 🛠️

13.9 Checking the free travel of foot brake lever



Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.



- Disconnect spring **1**.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel **A**.

Guideline

Free travel at foot brake lever	3 ... 5 mm (0.12 ... 0.2 in)
---------------------------------	------------------------------

- » If the free travel does not meet specifications:
 - Adjust the free travel of the foot brake lever. 🛠️
(📖 p. 66)
- Reconnect spring **1**.

13.10 Adjusting the free travel of the foot brake lever 🛠️




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

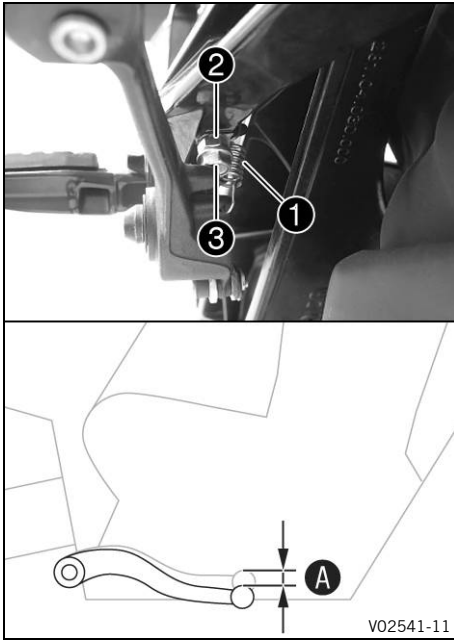

- Detach spring ①.
- Release nut ② and use screw ③ to adjust the specified free travel A.

Guideline

Free travel at foot brake lever	3 ... 5 mm (0.12 ... 0.2 in)
---------------------------------	------------------------------




Info

The range of adjustment is limited.

- Hold screw ③ and tighten nut ②.
- Attach spring ①.



14.1 Removing the front wheel

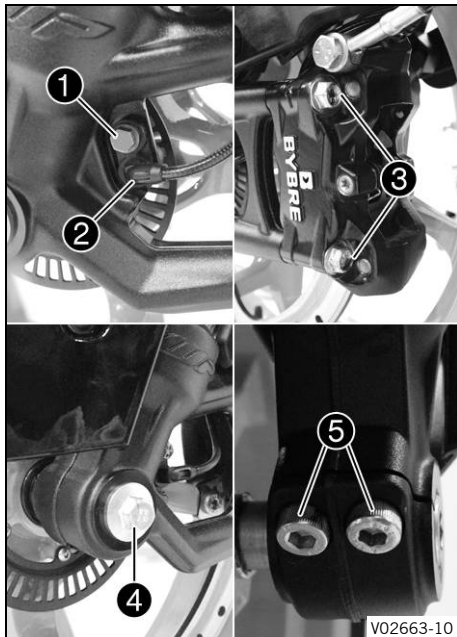

Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 48)
- Lift the motorcycle with the front lifting gear. (p. 48)

Main work

- Remove screw ① and pull wheel speed sensor ② out of the hole.
- Remove screws ③ and take off the brake caliper.
- Loosen screw ④ by several rotations.
- Loosen screws ⑤.
- Press on screw ④ to push the wheel spindle out of the axle clamp.
- Remove screw ④.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.



Info

Do not actuate the hand brake lever when the front wheel is removed.


14.2 Installing the front wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.


- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

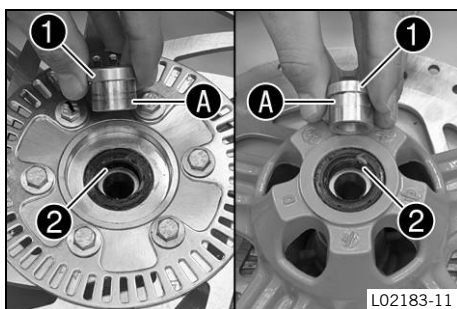

- Remove spacers ①.
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing.
- Clean and grease shaft seal rings ② and contact surfaces A of the spacers.

Long-life grease (p. 112)

- Insert the spacers.

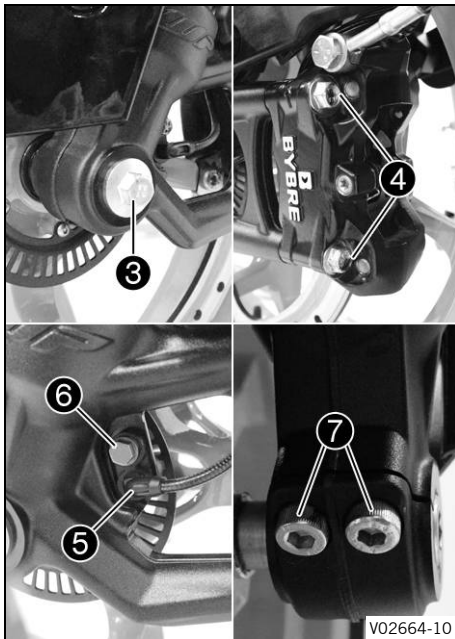

- Clean the thread of the wheel spindle and screw ③.
- Clean and grease wheel spindle.

Long-life grease (p. 112)

- Position the front wheel and insert the wheel spindle.
- Mount and tighten screw ③.

Guideline

Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)
----------------------------	---------	---------------------

- Position the brake caliper.
- ✓ The brake linings are correctly positioned.
- Mount screws ④, but do not tighten yet.

Guideline

Screw, front brake caliper	M8x1	32 Nm (23.6 lbf ft) Loctite®243™
----------------------------	------	--

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point. Secure the hand brake lever in the activated position.

✓ The brake caliper straightens.

- Tighten screws ④.

Guideline

Screw, front brake caliper	M8x1	32 Nm (23.6 lbf ft) Loctite®243™
----------------------------	------	--

- Position wheel speed sensor ⑤ in the hole.
- Mount and tighten screw ⑥.

Guideline

Screw, wheel speed sensor holder	M6	8 Nm (5.9 lbf ft)
----------------------------------	----	-------------------

- Remove the locking piece of the hand brake lever.
- Take the motorcycle off the front lifting gear. (p. 49)
- Remove the rear of the motorcycle from the lifting gear. (p. 48)
- Operate the front brake and compress the fork a few times firmly.


✓ The fork legs straighten.

- Tighten screws ⑦.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------

14.3 Removing the rear wheel

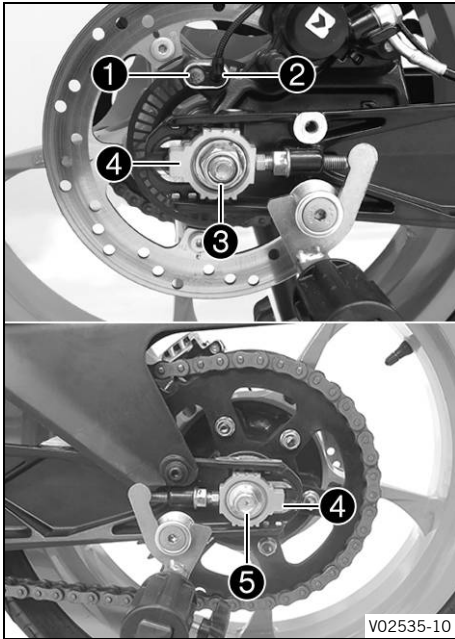

Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 48)

Main work

- Remove screw ① and pull wheel speed sensor ② out of the hole.
- Remove nut ③ with washer. Take off chain adjuster ④.
- Hold the rear wheel and pull out wheel spindle ⑤ with the washer and chain adjuster ④.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Pull the rear wheel back and take it out of the link fork.



Info

Do not operate the foot brake lever when the rear wheel is removed.

14.4 Installing the rear wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.


- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents There is no braking effect to start with at the rear brake after installing the rear wheel.

- Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

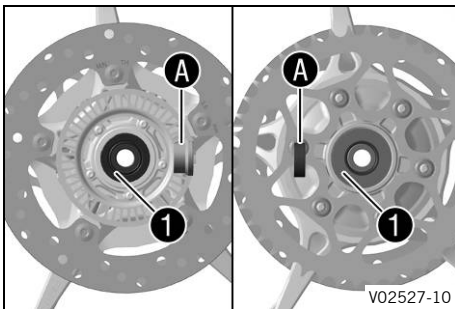

Main work

- Check the rear hub damping rubber pieces. (p. 71)
- Remove the spacers.
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing.
- Clean and grease shaft seal rings ① and contact surfaces A of the spacers.

Long-life grease (p. 112)

- Insert the spacers.
- Clean the thread of the wheel spindle and nut ②.

- Clean and grease wheel spindle.

Long-life grease (📖 p. 112)

- Clean the contact areas on the brake caliper bracket and link fork.
- Position the rear wheel.
 - ✓ The brake linings are correctly positioned.
- Push the rear wheel forward as far as possible and lay the chain on the rear sprocket.
- Pull the rear wheel back and mount wheel spindle ③ with the washers and chain adjusters ④.



Info

Mount left and right chain adjusters ④ in the same position.

- Mount nut ②, but do not tighten yet.
- Ensure that the chain adjusters lie flat on the screws and tighten nut ②.

Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings B.

Nut, rear wheel spindle	M14x1.5	100 Nm (73.8 lbf ft)
-------------------------	---------	-------------------------


- Position wheel speed sensor ⑤ in the hole. Mount and tighten screw ⑥.

Guideline

Remaining screws, chassis	M6	9 Nm (6.6 lbf ft)
---------------------------	----	-------------------

Finishing work

- Check the chain tension. (📖 p. 52)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

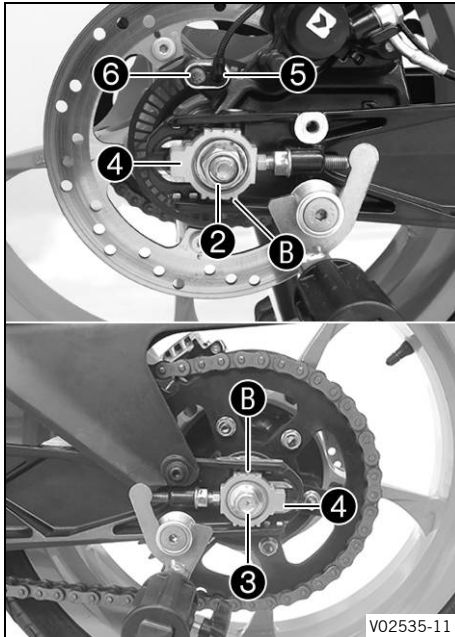

V02535-11

14.5 Checking the rear hub damping rubber pieces 🛠️





Info

The engine power is transmitted from the rear sprocket to the rear wheel via the 6 damping rubber pieces. They eventually wear out during operation. If the damping rubber pieces are not changed in time, the rear sprocket carrier and the rear hub will be damaged.

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 48)
- Remove the rear wheel. 🛠️ (📖 p. 70)

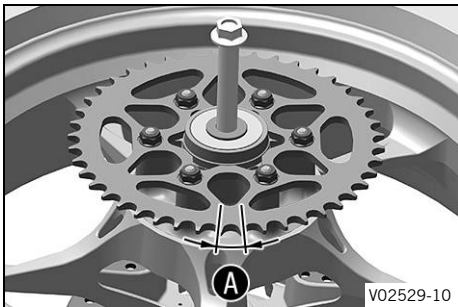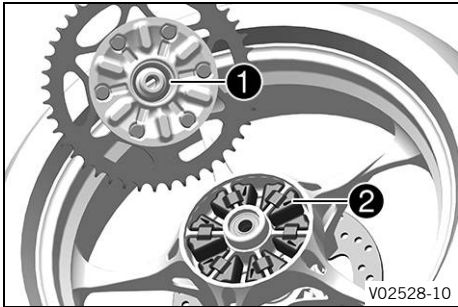

Main work

- Check bearing ①.
 - » If the bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Check damping rubber pieces ② of the rear hub for damage and wear.
 - » If the damping rubber pieces of the rear hub are damaged or worn:
 - Change all the damping rubber pieces of the rear hub.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Lay the rear wheel on a workbench with the rear sprocket facing upward and insert the wheel spindle in the hub.
- To check the play ①, hold the rear wheel tight and try to rotate the rear sprocket.



Info

Measure the play on the outside of the rear sprocket.

Play of damping rubber pieces on rear wheel

≤ 5 mm (≤ 0.2 in)

- » If clearance ① is larger than the specified value:
 - Change all the damping rubber pieces of the rear hub.

Finishing work

- Install the rear wheel. 🛠️ (📖 p. 70)
- Check the chain tension. (📖 p. 52)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)

14.6 Checking the tire condition



Warning

Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.


- Only use tires/wheels approved by KTM with the corresponding speed index.



Info

The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

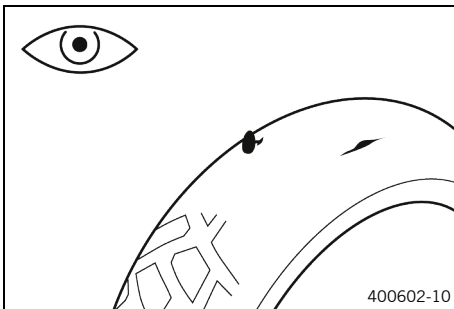

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 🛠️
- Check the tread depth.



Info

Observe the minimum tread depth required by national law.

Minimum tread depth	≥ 2 mm (≥ 0.08 in)
---------------------	--------------------

- » If the tread depth is less than the minimum tread depth:
 - Change the tires. 🛠️

- Check the tire age.



Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
 - Change the tires. 🛠️




14.7 Checking tire pressure



Info

Low tire pressure leads to abnormal wear and overheating of the tire.

Correct tire pressure ensures optimal riding comfort and maximum tire service life.

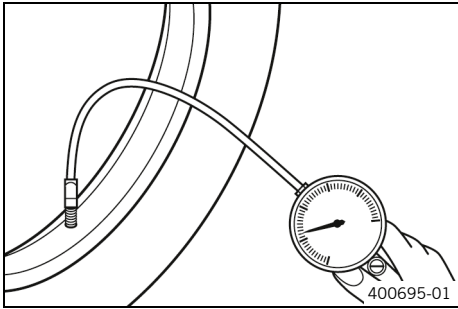

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Tire pressure when solo	
front	2.0 bar (29 psi)
rear	2.0 bar (29 psi)

Tire pressure with passenger / full payload	
front	2.0 bar (29 psi)
rear	2.2 bar (32 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire pressure.
- Mount the protection cap.



15.1 Removing the 12-V battery



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.



- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.

Preparatory work

- Remove the front rider's seat. (📖 p. 50)
- Remove the fuel tank cover. 🛠️ (📖 p. 55)

Main work

- Disconnect negative cable ❶ from the 12-V battery.

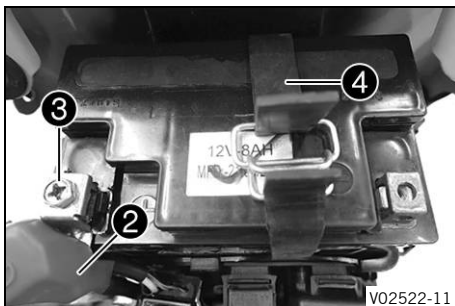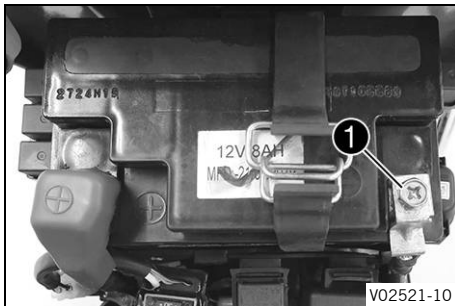

- Pull back positive terminal cover ❷.
- Disconnect positive cable ❸ from the 12-V battery.
- Detach rubber strap ❹.
- Pull the 12-V battery upwards and out of the battery compartment.




Info

Never operate the motorcycle with a discharged 12-V battery or without a 12-V battery. In both cases, electrical components and safety devices can be damaged. In this case the vehicle is no longer roadworthy.



15.2 Installing the 12-V battery

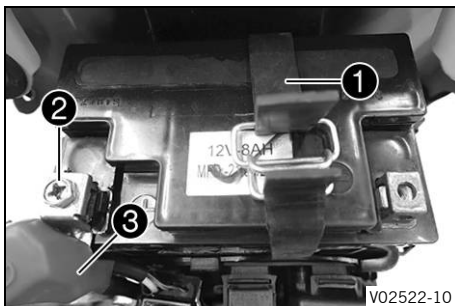

Main work


- Position the 12-V battery in the battery compartment.

Guideline

The terminals of the battery must face upwards.

12-V battery (ETZ-9-BS) (📖 p. 107)

- Attach rubber strap ❶.
- Position positive cable ❷ and mount and tighten the screw.
- Position positive terminal cover ❸.

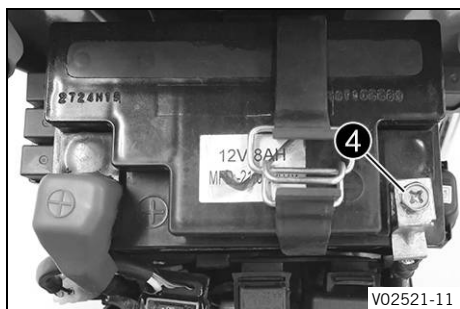

- Position negative cable ④ and mount and tighten the screw.

Finishing work

- Mount the fuel tank cover. (📖 p. 56)
- Mount the front rider's seat. (📖 p. 51)
- Set the clock. (📖 p. 31)

15.3 Charging the 12-V battery 🛠️



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.

 
 


Info

Even when there is no load on the 12-V battery, it discharges steadily each day. The charging level and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery. If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery. If the 12-V battery is depleted by repeated starting, the 12-V battery must be charged immediately. If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, thus destroying the battery. The 12-V battery is maintenance-free. The acid level does not have to be checked.

Preparatory work

- Remove the front rider's seat. (📖 p. 50)
- Remove the fuel tank cover. 🛠️ (📖 p. 55)



Main work

- Disconnect negative cable 1 from the 12 V battery to avoid damaging the onboard electronics.
- Remove positive terminal cover 2.

- Connect a battery charger to the 12-V battery. Connect the battery charger to the mains connection.

Battery charger (58429074200)

It is impossible to overcharge the 12-V battery using this battery charger.

This battery charger is not suitable for lithium-ion batteries.

i

Info

Charge the 12-V battery to a maximum of 10 % of the capacity specified on the battery housing.


- Disconnect the battery charger from the mains connection and the 12-V battery after charging.

Guideline

The charging current, charging voltage, and charging time must not be exceeded.

Recharge the 12-V battery regularly when the motorcycle is not being used	3 months
---	----------

- Mount positive terminal cover 2.
- Position negative cable 1 and mount and tighten the screw.

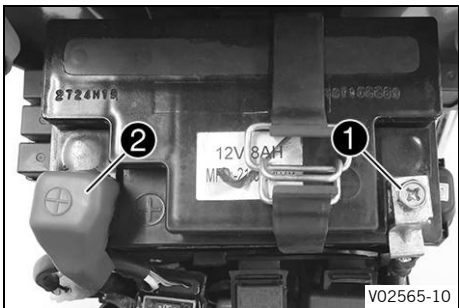

Finishing work

- Mount the fuel tank cover. (p. 56)
- Mount the front rider's seat. (p. 51)
- Set the clock. (p. 31)



15.4 Changing the main fuse



Warning


Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Info

The main fuse protects all electrical power consumers of the vehicle. The main fuse is next to the 12-V battery.

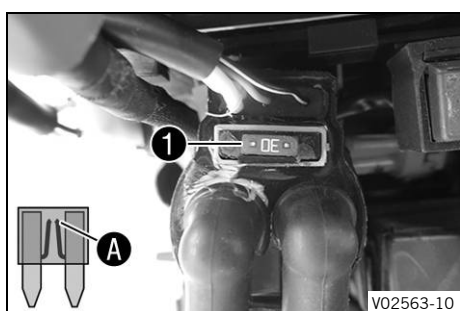

Preparatory work

- Remove the front rider's seat. (📖 p. 50)
- Remove the fuel tank cover. 🛠️ (📖 p. 55)

Main work

- Remove faulty main fuse ❶.



Info

A faulty fuse has a burned-out fuse wire ❷.



Info

A spare fuse is located in the fuse box.

- Insert a new main fuse.

Fuse (75011088030) (📖 p. 107)



Tip

Put a spare fuse in the fuse box so that it is available if needed.

Finishing work

- Mount the fuel tank cover. (📖 p. 56)
- Mount the front rider's seat. (📖 p. 51)
- Set time and date.

15.5 Changing the ABS fuses



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.




Info

Two fuses for the ABS are located under the protection cap next to the negative terminal of the 12-V battery. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work

- Remove the front rider's seat. (📖 p. 50)
- Remove the fuel tank cover. 🛠️ (📖 p. 55)

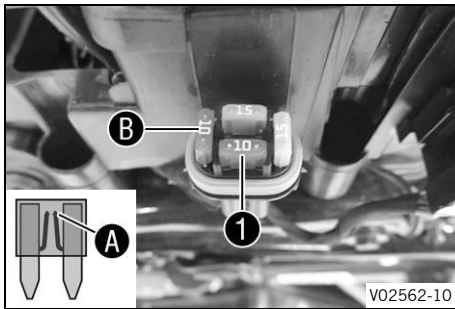

To change the fuse of the ABS hydraulic unit:

- Take off the protection cap and remove fuse 1.



Info

A faulty fuse has a burned-out fuse wire A.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088010) (p. 107)



Tip

Insert spare fuse B in the fuse box so that it is available if needed.

- Mount the protection cap.

To change the fuse of the ABS return pump:

- Take off the protection cap and remove fuse 2.



Info

A faulty fuse has a burned-out fuse wire A.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088015) (p. 107)




Tip

Insert spare fuse C in the fuse box so that it is available if needed.

- Mount the protection cap.


Finishing work

- Mount the fuel tank cover. (p. 56)
- Mount the front rider's seat. (p. 51)

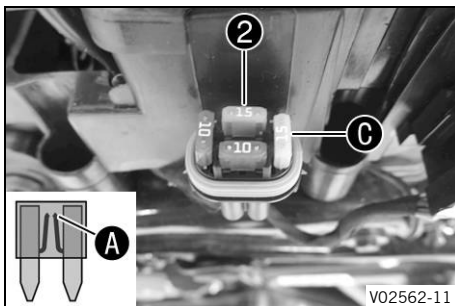

15.6 Changing the fuses of individual electrical power consumers

i Info
The fuse box with the main fuse and the fuses of the individual electrical power consumers is located under the fuel tank cover.

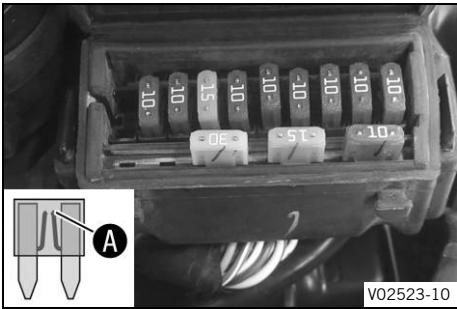

- Preparatory work**
- Remove the front rider's seat. (📖 p. 50)
 - Remove the fuel tank cover. 🛠️ (📖 p. 55)

- Main work**
- Open fuse box cover.
 - Remove the faulty fuse.

Guideline
Fuse 1 - not assigned
Fuse 2 - 10 A - combination instrument, fuel pump
Fuse 3 - 10 A - power relay
Fuse 4 - 15 A - ignition coil, horn, starter relay
Fuse 5 - 10 A - radiator fan
Fuse 6 - 10 A - brake light, turn signal, headlight bulb, position light, tail light, license plate lamp
Fuse 7 - 10 A - ABS control unit, combination instrument, diagnostics connector
Fuse 8 - emergency OFF switch
Fuse 9 - 10 A - permanent positive for auxiliary equipment (ACC1)
Fuse 10 - 10 A - ignition positive for auxiliary equipment (ACC2)
Fuse SPARE - 10 A/15 A/30 A - spare fuses

i Info
A faulty fuse has a burned-out fuse wire **A**.

Warning
Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088010) (📖 p. 107)
Fuse (75011088015) (📖 p. 107)
Fuse (75011088030) (📖 p. 107)

i Tip
Put a spare fuse in the fuse box so that it is available if needed.

- Check the function of the electrical power consumer.
- Close the fuse box cover.

Finishing work

- Mount the fuel tank cover. (📖 p. 56)
- Mount the front rider's seat. (📖 p. 51)




15.7 Changing the headlight bulb

Note

Damage to reflector Grease on the reflector reduces the light intensity.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

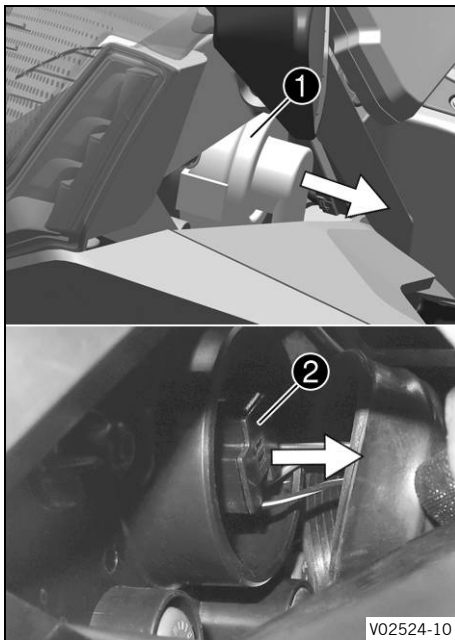
**Main work**

- Pull rubber cap ① off towards the rear.

**Info**

Pay attention to the headlight cable.

- Pull connector ② of the headlight bulb.

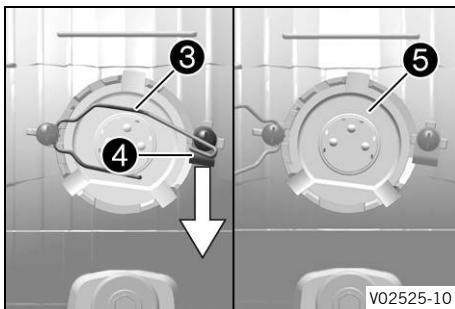


- Press holding bracket ③ down and pull it off holder ④.
- Fold holding bracket ③ to the left.
- Remove headlight bulb ⑤.
- Position the new headlight bulb in the headlight housing.

Guideline

Insert the headlight bulb so that the holding lugs latch into the recesses.

Headlight (H4/socket P43t) (📖 p. 107)

- Attach holding bracket ③.

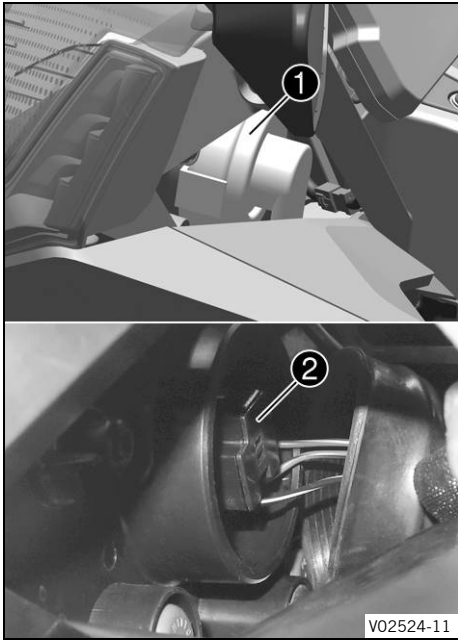


- Plug in connector ❷.
- Mount rubber cap ❶.

Finishing work

- Check the headlight setting. (📖 p. 82)

15.8 Checking the headlight setting

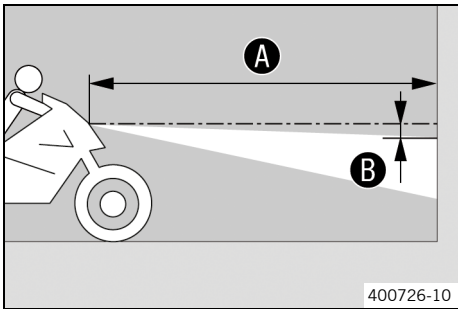

- Park the vehicle on a horizontal surface in front of a light-colored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance ❷ under the first marking.

Guideline

Distance ❷	5 cm (2 in)
------------	-------------

- Position the vehicle upright at distance ❶ from the wall and switch on the low beam.

Guideline


Distance ❶	5 m (16 ft)
------------	-------------

- The rider now mounts the motorcycle with luggage and passenger if applicable.
- Check the headlight setting.

The light-dark boundary must be exactly on the lower marking when the motorcycle is ready to be operated with the rider mounted along with any luggage and a passenger if applicable.

- » If the boundary between light and dark does not meet specifications:
 - Adjust the headlight range. (📖 p. 83)

15.9 Adjusting the headlight range

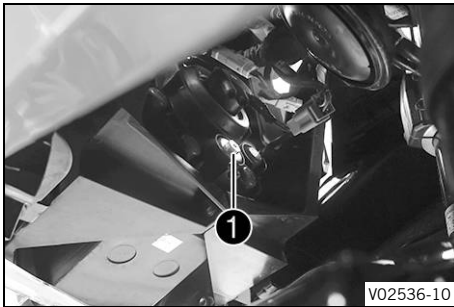

Main work

- Adjust the beam headlight range by turning screw ①.

Guideline

For a motorcycle with a rider, and any luggage and/or passenger, the light/dark boundary must be exactly on the lower marking (applied in: Checking the headlight setting).



Info


Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.

Finishing work

- Check the headlight setting. (📖 p. 82)




15.10 Diagnostics connector

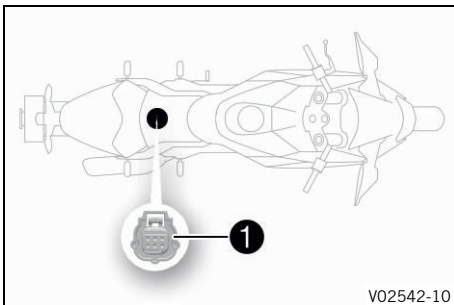

Diagnostics connector ① is located under the front rider's seat.

15.11 ACC1 front

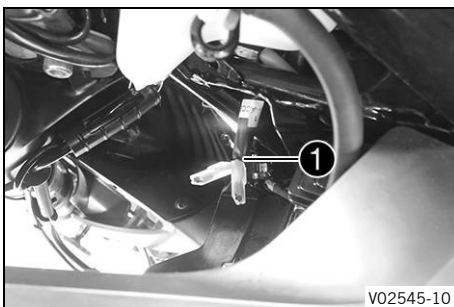

Installation location

- Power supplies ACC1 ① front are located under the coolant compensating tank.



Info


The power supplies are protected by a fuse; however, this fuse also protects other electrical power consumers. The maximum continuous load is therefore significantly lower than the value of the fuse.

Do not use a stronger fuse.

The power supply ACC1 is switched to permanent positive; connected power consumers are permanently supplied with current, regardless of ignition.

The power supply ACC2 is switched to ignition plus; connected power consumers are only supplied with power when the ignition is switched on.

15.12 ACC1 and ACC2 rear

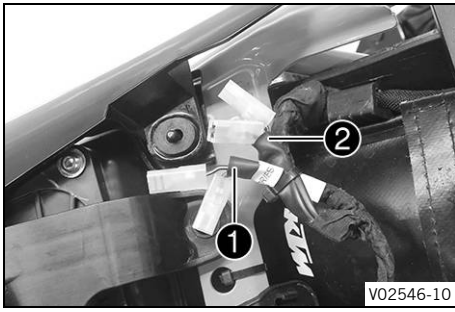

Installation location

- Power supplies ACC1 ① and ACC2 ② rear are located under the seat.



Info

The cable insulation label indicates the type of power supply.



Info

The power supplies are protected by a fuse; however, this fuse also protects other electrical power consumers.


The maximum continuous load is therefore significantly lower than the value of the fuse.

Do not use a stronger fuse.

The power supply ACC1 is switched to permanent positive; connected power consumers are permanently supplied with current, regardless of ignition.

The power supply ACC2 is switched to ignition plus; connected power consumers are only supplied with power when the ignition is switched on.


16.1 Cooling system

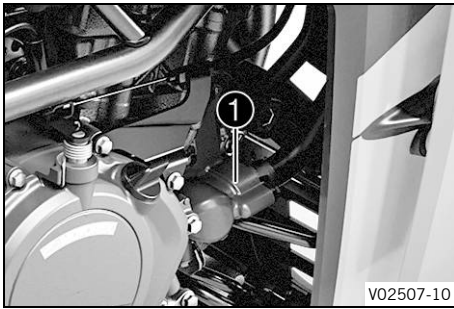

Water pump ① in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. Heat expansion causes excess coolant to flow into compensating tank ③. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

110 °C (230 °F)

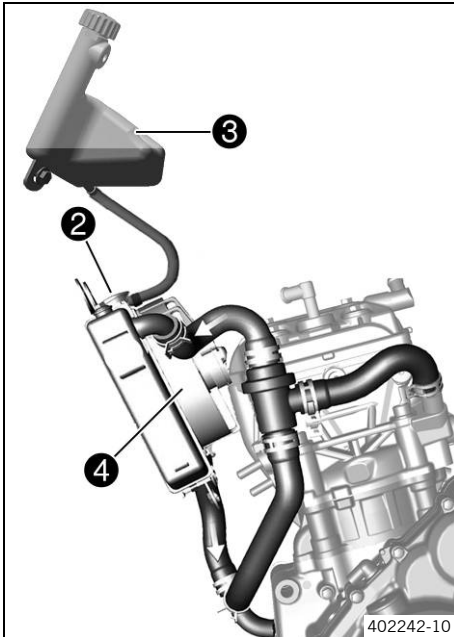

The coolant is cooled by the air stream and a radiator fan ④, which is activated at high temperature.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

Info

If the cooling system overheats, the maximum engine speed is limited.

16.2 Checking the coolant level in the compensating tank



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

 
- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.



Condition

The engine is cold.

The radiator is completely full.

- Stand the motorcycle upright on a horizontal surface.
- Check the coolant level in the compensating tank **1**.

The coolant level must be between **MIN** and **MAX**.

- » If there is no coolant in the compensating tank:
 - Check the cooling system for leaks. 🛠️



Info

Do not start up the motorcycle!

- Fill/bleed the cooling system. 🛠️ (📖 p. 88)
- » If the coolant in the compensating tank is not at the required level, but the tank is not empty:
 - Correct the coolant level in the compensating tank.

16.3 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work


- Remove the right side cover. 🛠️ (📖 p. 57)


Main work

- Stand the motorcycle upright on a horizontal surface.
- Take off cap **1** of the compensating tank.
- Check the antifreeze in the coolant.

–25 ... –45 °C (–13 ... –49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.
- Check the coolant level in the compensating tank.

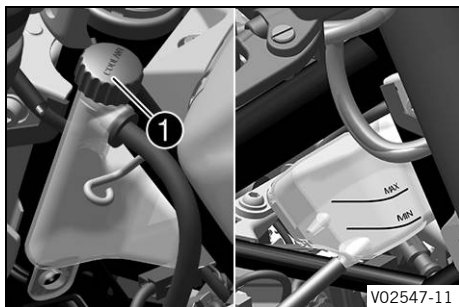

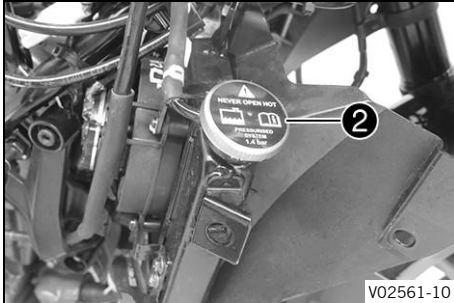

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 110)

- Mount the cap of the compensating tank.
- Take off radiator cap ②.
- Check the antifreeze in the coolant.

–25 ... –45 °C (–13 ... –49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.
- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (📖 p. 110)

- » If you had to add more coolant than the specified amount:
 - > 0.20 l (> 0.21 qt.)
 - Fill/bleed the cooling system. 🛠️ (📖 p. 88)
- Mount the radiator cap.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 58)



16.4 Draining the coolant 🛠️



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work

- Remove the left side cover. 🛠️ (📖 p. 56)
- Remove the right side cover. 🛠️ (📖 p. 57)

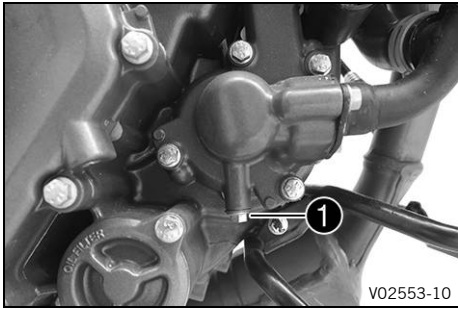

Main work

- Position the motorcycle upright.
- Place an appropriate container under the engine.
- Remove screw ❶.
- Take off the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

Screw plug, water pump drain hole	M6	10 Nm (7.4 lbf ft)
-----------------------------------	----	--------------------


16.5 Filling/bleeding the cooling system



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

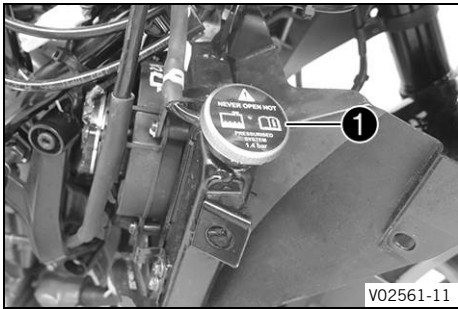


Main work

- Remove radiator cap ❶.

Guideline

3 turns

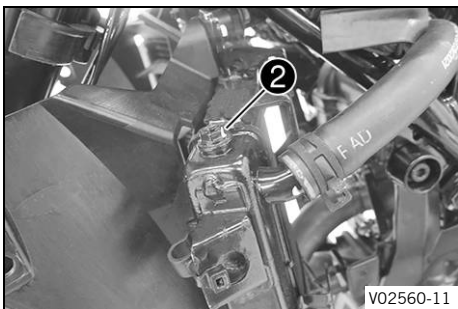

- Loosen bleeder screw ❷.

Coolant (📖 p. 110)


- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.
- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

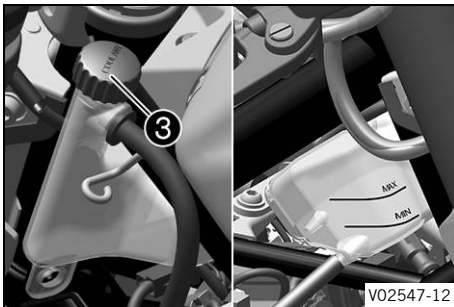

- Start the engine and allow it to warm up.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove cap **3** of the compensating tank and top up the coolant level up to the **MAX** marking.
- Mount the cap of the compensating tank.

Finishing work

- Install the left side cover. (p. 57)
- Install the right side cover. (p. 58)



16.6 Changing the coolant



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.


Preparatory work

- Remove the left side cover. (p. 56)
- Remove the right side cover. (p. 57)

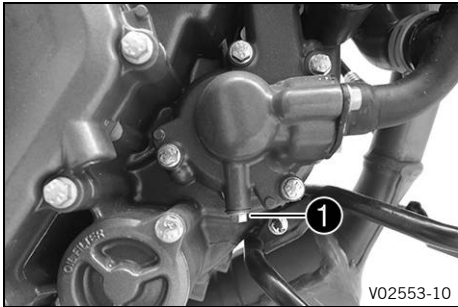

Main work


- Position the motorcycle upright.
- Place an appropriate container under the engine.
- Remove screw 1.

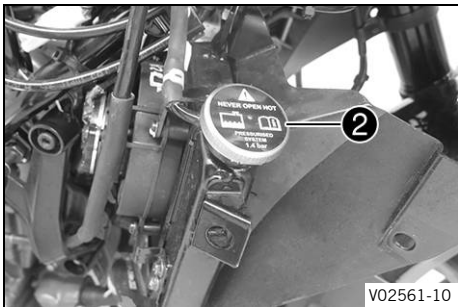

- Remove radiator cap 2.
- Completely drain the coolant.
- Mount and tighten screw 1 with a new seal ring.

Guideline

Screw plug, water pump drain hole	M6	10 Nm (7.4 lbf ft)
-----------------------------------	----	--------------------

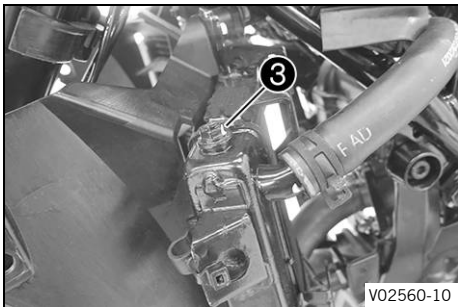

- Loosen bleeder screw 3.

Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant (p. 110)


- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

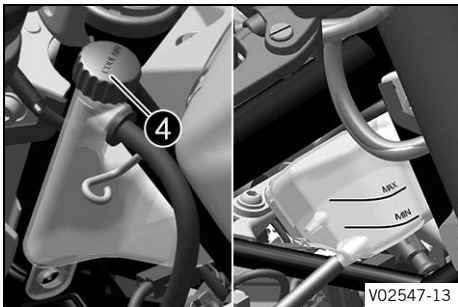


- Start the engine and allow it to warm up.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove cap 4 of the compensating tank and top up the coolant level up to the **MAX** marking.
- Mount the cap of the compensating tank.

Finishing work

- Install the left side cover. 🛠️ (📖 p. 57)
- Install the right side cover. 🛠️ (📖 p. 58)



 17.1 Checking the play in the throttle cable



- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play A	3 ... 5 mm (0.12 ... 0.2 in)
------------------------------	------------------------------

- » If the throttle cable play does not meet the specified value:
 - Adjust the play in the throttle cable. 🛠️ (p. 92)



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Check the throttle cable routing.

17.2 Adjusting the play in the throttle cable 🛠️

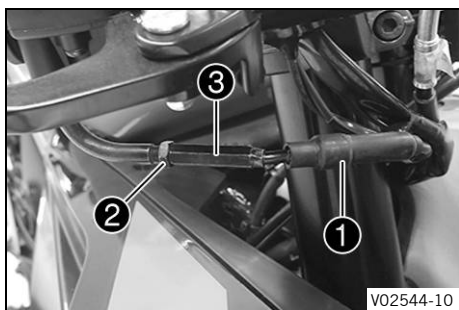

- Move the handlebar to the straight-ahead position.
- Push back sleeve **1**.
- Loosen lock nut **2**.
- Adjust the play in the throttle cable by turning barrel adjuster **3**.

Guideline

Play in throttle cable	3 ... 5 mm (0.12 ... 0.2 in)
------------------------	------------------------------


- Tighten lock nut **2**.
- Slide on sleeve **1**.

17.3 Checking the clutch lever play

Note

Clutch damage If there is no free travel by the clutch lever, the clutch will begin to slip.

- Check the free travel of the clutch lever each time before using the motorcycle.
- Adjust the free travel of the clutch lever when necessary in accordance with the specification.

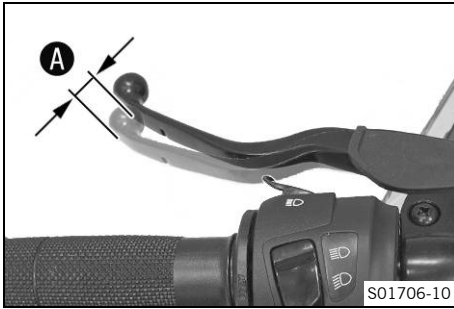

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position.
- Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever **A**.

Clutch lever play A	1 ... 3 mm (0.04 ... 0.12 in)
----------------------------	-------------------------------

- » If the clutch lever play does not meet the specified value:
 - Adjust play in the clutch lever. 🛠️ (p. 93)


- Move the handlebar to and fro over the entire steering range.

The clutch lever play must not change.
--

- » If the clutch lever play changes:
 - Check the routing of the clutch cable.



17.4 Adjusting play in the clutch lever 🛠️

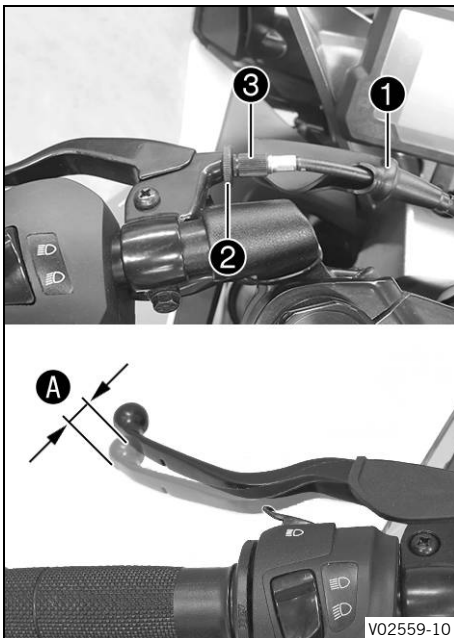

- Move the handlebar to the straight-ahead position.
- Push back sleeve **1**.
- Loosen lock nut **2**.
- Adjust the play in the clutch level **A** by turning adjusting screw **3**.

Guideline

Clutch lever play A	1 ... 3 mm (0.04 ... 0.12 in)
----------------------------	-------------------------------

- Tighten lock nut **2**.
- Position bellows **1**.



18.1 Checking the engine oil level

Condition


The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.

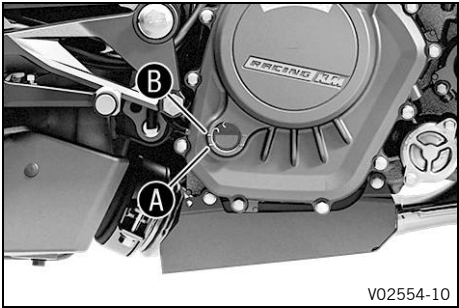

V02554-10



Info

After switching off the engine, wait one minute before checking the level.

The engine oil must be between the **A** and **B** markings .

- » When the engine oil level is below the **A** marking:
 - Add engine oil. (📖 p. 96)
- » When the engine oil level is above the **B** marking:
 - Correct the engine oil level.

18.2 Changing the engine oil and oil filter, cleaning the oil screen 🛠



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Drain the engine oil while the engine is at operating temperature.

Preparatory work


- Stand the motorcycle on a level surface using the side stand.

Main work


- Position an appropriate container under the engine.
- Remove oil drain plug **1** with the O-ring.
- Remove oil screen **2** with the O-ring.
- Allow the engine oil to drain completely.
- Clean the oil drain plug and the oil screen thoroughly.
- Position oil screen **2** and mount and tighten oil drain plug **1** with the O-ring.

Guideline


Oil drain plug	M24x1.5	15 Nm (11.1 lbf ft)
----------------	---------	---------------------

 

V02555-10

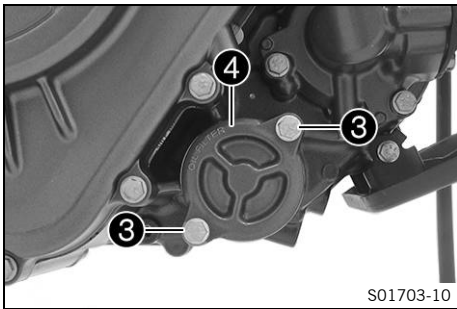

- Remove screws ③. Take off oil filter cover ④ with the O-ring.

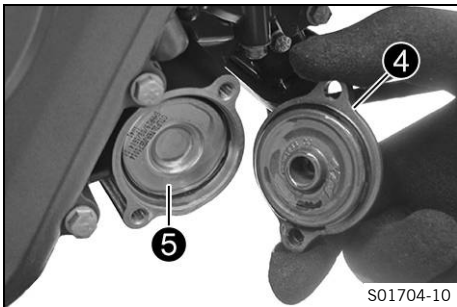


- Pull oil filter ⑤ out of the oil filter housing.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.
- Insert new oil filter ⑤.
- Oil the O-ring of the oil filter cover. Mount oil filter cover ④.
- Mount and tighten screws ③.

Guideline

Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

i Info
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

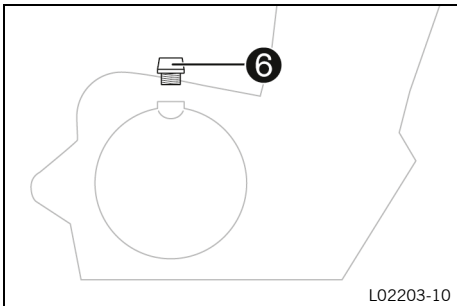

- Remove filler plug ⑥ with the O-ring, and fill up with engine oil.

Engine oil Ambient temperature: 0 ... 50 °C (32 ... 122 °F)	1.5 l (1.6 qt.)	Engine oil (SAE 15W/50) (📖 p. 110)
Engine oil Ambient temperature: -10 ... 40 °C (14 ... 104 °F)		Engine oil (SAE 10W/40) (📖 p. 111)

- Mount and tighten the filler plug together with the O-ring.

! Danger
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Finishing work


- Check the engine oil level. (📖 p. 94)



18.3 Adding engine oil

Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

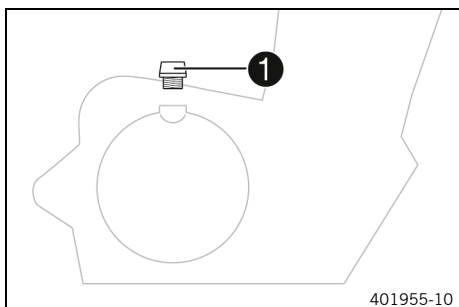

Main work

- Remove filler plug **1** with the O-ring, and fill up with engine oil.

Engine oil (SAE 15W/50) ( p. 110)

Engine oil (SAE 10W/40) ( p. 111)

Info

For optimal performance of the engine oil, do not mix different types of engine oil.

KTM recommends changing the engine oil where necessary.

- Mount and tighten the filler plug together with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check for leaks.

Finishing work

- Check the engine oil level. ( p. 94)

19.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.
Minimum clearance 60 cm (23.6 in)



Note


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Clean the motorcycle regularly to maintain its value and appearance over a long period.
Avoid direct sunshine when cleaning the motorcycle.

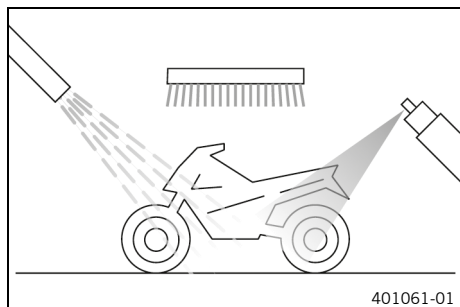

- Close off exhaust system to keep water from entering.
- Remove loose dirt first with a soft jet of water.
- Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.

Motorcycle cleaner (📖 p. 112)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry motorcycle; always rinse the vehicle with water first.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Clean the chain. (📖 p. 51)
- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber (📖 p. 112)

- Treat all painted parts with a mild paint care product.

Perfect finish and high gloss polish for paints (📖 p. 112)



Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 112)

- Lubricate the ignition and steering lock.

Universal oil spray (📖 p. 112)




19.2 Checks and maintenance steps for winter operation



Info

If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

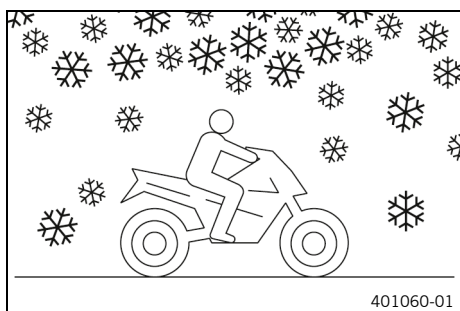

- Clean the motorcycle. (📖 p. 97)
- Clean the brakes.



Info

After **EVERY** trip on salted roads, thoroughly clean the motorcycle and, in particular, the brake calipers and brake linings, after they have cooled down and without removing them, with cold water and dry carefully.

- Treat the engine, the link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.



Info

Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (📖 p. 51)




20.1 Storage



Info

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

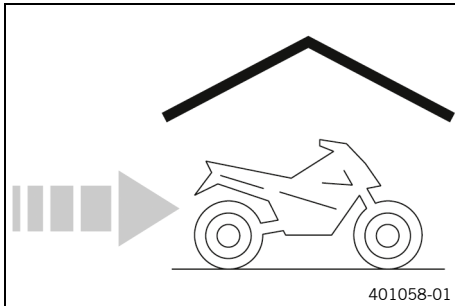

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (📖 p. 112)

- Refuel. (📖 p. 42)
- Clean the motorcycle. (📖 p. 97)
- Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 94)
- Check the antifreeze and coolant level. (📖 p. 86)
- Check tire pressure. (📖 p. 73)
- Remove the 12-V battery. 🛠️ (📖 p. 75)
- Charge the 12-V battery. 🛠️ (📖 p. 76)

Guideline

Storage temperature of the 12-V battery without direct sunlight	0 ... 35 °C (32 ... 95 °F)
---	----------------------------

- Store vehicle in a dry location that is not subject to large fluctuations in temperature.



Info

KTM recommends jacking up the motorcycle.


- Raise the motorcycle with the rear lifting gear. (📖 p. 48)
- Lift the motorcycle with the front lifting gear. (📖 p. 48)
- Cover the motorcycle with a tarp or cover that is permeable to air.



Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion. Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

20.2 Preparing for use after storage

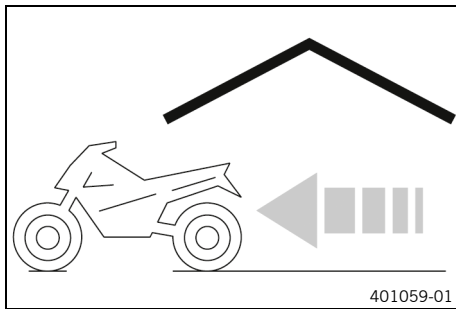

- Take the motorcycle off the front lifting gear. (📖 p. 49)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 48)
- Install the 12-V battery. 🛠️ (📖 p. 75)
- Set the clock. (📖 p. 31)
- Perform checks and maintenance measures when preparing for use. (📖 p. 36)
- Take a test ride.

Faults	Possible cause	Action
The engine does not turn when the start button is pressed	Operating error	– Carry out start procedure. (📖 p. 36)
	12-V battery discharged	– Charge the 12-V battery. 🛠️ (📖 p. 76)
	Fuse 3 , 4 or 8 blown	– Change the fuses of individual electrical power consumers. (📖 p. 80)
	No ground connection present	– Check the ground connection.
Engine turns only if the clutch lever is drawn	The vehicle is in gear	– Shift the transmission into neutral.
	The vehicle is in gear and the side stand is folded out	– Shift the transmission into neutral.
Engine turns but does not start	Operating error	– Carry out start procedure. (📖 p. 36)
	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🛠️
Engine has too little power	Air filter is very dirty	– Change the air filter.
	Fuel filter is very dirty	– Check the fuel pressure. 🛠️
	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🛠️
Engine overheats	Too little coolant in cooling system	– Check the cooling system for leakage. – Check the coolant level in the compensating tank. (📖 p. 85)
	Radiator fins very dirty	– Clean the radiator fins.
	Foam formation in cooling system	– Drain the coolant. 🛠️ (📖 p. 87) – Fill/bleed the cooling system. 🛠️ (📖 p. 88)
	Thermostat defective	– Check the thermostat. 🛠️
	Fuse 5 blown	– Change the fuses of individual electrical power consumers. (📖 p. 80)
	Defect in radiator fan system	– Check the radiator fan system. 🛠️
Malfunction indicator lamp lights up yellow	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🛠️
The engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 42)
	Fuse 2 , 4 or 8 blown	– Change the fuses of individual electrical power consumers. (📖 p. 80)
	Main fuse blown	– Change the main fuse. (📖 p. 78)
The ABS warning lamp lights up	ABS fuse blown	– Change the ABS fuses. (📖 p. 78)
	Large difference in wheel speeds of the front and rear wheels	– Stop the vehicle, switch off the ignition, and start it again.
	Malfunction in ABS	– Read out the fault memory using the KTM diagnostics tool. 🛠️
High oil consumption	Engine vent hose bent	– Route the vent hose without bends or change it if necessary.
	Engine oil level too high	– Check the engine oil level. (📖 p. 94)
	Engine oil too thin (low viscosity)	– Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 94)
Headlight, position light, turn signal, brake light, and horn are not working	Fuse 6 blown	– Change the fuses of individual electrical power consumers. (📖 p. 80)
12-V battery discharged	Ignition was not switched off when vehicle was parked	– Charge the 12-V battery. 🛠️ (📖 p. 76)

Faults	Possible cause	Action
12-V battery discharged	The 12-V battery is not being charged by the alternator	– Check the charging voltage. 
	An electrical power consumer is connected to the socket/ACC1.	– Disconnect the electrical power consumer from the socket/ACC1. – Charge the 12-V battery.  (📖 p. 76)
The combination instrument shows nothing on the display	Fuse 7 is blown	– Change the fuses of individual electrical power consumers. (📖 p. 80) – Set the clock. (📖 p. 31)
	Main fuse blown	– Change the main fuse. (📖 p. 78)

22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	200 cm ³ (12.2 cu in)
Stroke	49 mm (1.93 in)
Bore	72 mm (2.83 in)
Compression ratio	11,5:1
Control	DOHC, four valves controlled via cam lever, chain drive
Intake valve diameter	28.5 mm (1.122 in)
Exhaust valve diameter	24 mm (0.94 in)
Valve clearance, intake, cold	0.08 ... 0.12 mm (0.0031 ... 0.0047 in)
Valve clearance, exhaust, cold	0.13 ... 0.17 mm (0.0051 ... 0.0067 in)
Crankshaft bearing	Two ball bearings
Conrod bearing	Sleeve bearing
Pistons	Cast light alloy
Piston rings	One compression ring, one tapered compression piston ring, one oil scraper ring
Engine lubrication	Pressure circulation lubrication with one trochoidal pump
Primary transmission	22:72
Clutch	Clutch in oil bath/mechanically activated
Transmission	6-gear transmission, claw shifted
Transmission ratio	
1st gear	12:34
2nd gear	15:31
3rd gear	18:28
4th gear	21:26
5th gear	22:23
6th gear	24:22
Mixture preparation	Electronic fuel injection
Ignition	Contactless controlled fully electronic ignition with digital ignition adjustment
Alternator	12 V, 296 W
Spark plug	BoschVR6NEU
Spark plug electrode gap	1 mm (0.04 in)
Cooling	Water cooling, permanent circulation of coolant by water pump
Idle speed	1,450 ... 1,550 rpm
Starting aid	Starter motor

22.2 Engine tightening torques

Oil nozzle	M5	6 Nm (4.4 lbf ft)	Loctite®243™
Screw, engine vent plate	M5	7 Nm (5.2 lbf ft)	Loctite®243™
Screw, retaining bracket	M5	6 Nm (4.4 lbf ft)	Loctite®243™
Screw, retaining bracket, stator cable	M5	8 Nm (5.9 lbf ft)	Loctite®243™
Screw, stator	M5	8 Nm (5.9 lbf ft)	Loctite®243™
Cylinder head screw	M6	12 Nm (8.9 lbf ft)	
Nut, water pump impeller	M6	10 Nm (7.4 lbf ft)	Loctite®243™
Screw plug, water pump drain hole	M6	10 Nm (7.4 lbf ft)	
Screw, alternator cover	M6	12 Nm (8.9 lbf ft)	
Screw, bearing retainer	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, camshaft bearing bridge	M6	10 Nm (7.4 lbf ft)	
Screw, chain securing guide	M6	10 Nm (7.4 lbf ft)	Loctite®243™
Screw, clutch cover	M6	12 Nm (8.9 lbf ft)	
Screw, engine case	M6x40	12 Nm (8.9 lbf ft)	
Screw, engine case	M6x60	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, engine sprocket	M6	12 Nm (8.9 lbf ft)	
Screw, freewheel gear retaining bracket	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, locking lever	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, oil filter cover	M6	10 Nm (7.4 lbf ft)	
Screw, oil pump	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, retaining bracket	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, retaining bracket, radial shaft seal ring, clutch cover	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, shift drum locating	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, starter motor	M6	12 Nm (8.9 lbf ft)	
Screw, timing chain tensioner	M6	12 Nm (8.9 lbf ft)	
Screw, timing chain tensioning rail	M6	12 Nm (8.9 lbf ft)	Loctite®243™
Screw, valve cover	M6	12 Nm (8.9 lbf ft)	
Screw, water pump cover	M6	12 Nm (8.9 lbf ft)	
Screw, conrod bearing	M7	24 Nm (17.7 lbf ft)	
Nut, exhaust flange	M8	20 Nm (14.8 lbf ft)	

Screw, balancer shaft gear wheel	M8	40 Nm (29.5 lbf ft) Loctite®243™
Screw, camshaft gear wheel	M8	32 Nm (23.6 lbf ft) Loctite®243™
Screw, shift mechanism return spring	M8	20 Nm (14.8 lbf ft) Loctite®243™
Stud, exhaust flange	M8	22 Nm (16.2 lbf ft)
Coolant temperature sensor	M10	14 Nm (10.3 lbf ft)
Oil pressure sensor	M10	14 Nm (10.3 lbf ft)
Rotor screw	M10	70 Nm (51.6 lbf ft) Loctite®243™
Screw, cylinder head	M10	Step 1 25 Nm (18.4 lbf ft) Step 2 50 Nm (36.9 lbf ft) Thread is oiled, head flat is greased
Screw plug, cam lever axis	M10x1	10 Nm (7.4 lbf ft)
Spark plug	M12	15 Nm (11.1 lbf ft)
Nut, inner clutch hub	M14LH	60 Nm (44.3 lbf ft) Loctite®243™
Nut, primary gear wheel/timing chain sprocket	M14	55 Nm (40.6 lbf ft) Loctite®243™
Oil drain plug	M24x1.5	15 Nm (11.1 lbf ft)

22.3 Capacities


22.3.1 Engine oil

Engine oil Ambient temperature: 0 ... 50 °C (32 ... 122 °F)	1.5 l (1.6 qt.)	Engine oil (SAE 15W/50) (📖 p. 110)
Engine oil Ambient temperature: -10 ... 40 °C (14 ... 104 °F)		Engine oil (SAE 10W/40) (📖 p. 111)

22.3.2 Coolant

Coolant	1 l (1 qt.)	Coolant (📖 p. 110)
---------	-------------	--------------------

22.3.3 Fuel

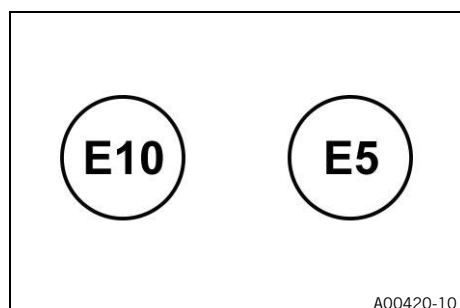

Please observe the labels on EU fuel pumps.

Total fuel tank capacity, approx.	13.7 l (3.62 US gal)	Super unleaded (ROZ 95) ( p. 111)
Fuel reserve, approx.	1.5 l (1.6 qt.)	

22.4 Chassis

Frame	Lattice frame of steel tubes, powder-coated
Fork	WP APEX 3043
Shock absorber	WP Suspension
Brake system	
front	Disc brake with 4-piston brake caliper
rear	Disc brake with single-pot brake caliper, floating
Suspension travel	
front	120 mm (4.72 in)
rear	150 mm (5.91 in)
Brake discs - diameter	
front	320 mm (12.6 in)
rear	230 mm (9.06 in)
Brake discs - wear limit	
front	4.5 mm (0.177 in)
rear	3.6 mm (0.142 in)
Tire pressure when solo	
front	2.0 bar (29 psi)
rear	2.0 bar (29 psi)
Tire pressure with passenger / full payload	
front	2.0 bar (29 psi)
rear	2.2 bar (32 psi)
Secondary ratio	14:42
Chain	5/8 x 1/4" (520) O-ring
Steering head angle	66.5°
Wheelbase	1,343 ± 15 mm (52.87 ± 0.59 in)
Seat height, unloaded	824 mm (32.44 in)
Ground clearance, unloaded	158 mm (6.22 in)
Dry weight	147 kg (324 lb.)
Maximum permissible front axle load	125 kg (276 lb.)
Maximum permissible rear axle load	210 kg (463 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

22.5 Electrical system

12-V battery	ETZ-9-BS	Battery voltage: 12 V Nominal capacity: 8 Ah Maintenance-free
Fuse	75011088005	5 A
Fuse	75011088010	10 A
Fuse	75011088015	15 A
Fuse	90111088025	25 A
Fuse	75011088030	30 A
Headlight	H4/socket P43t	12 V 60/55 W
Position light	LED	
Combination instrument lighting and indicator lamps	LED	
Turn signal	LED	
Brake/tail light	LED	
License plate lamp	LED	

22.6 Tires

Front tire	Rear tire
110/70 R 17 M/C 54S TL MRF revz FC 1	150/60 R 17 M/C 66S TL MRF revz C 1
The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: KTM.COM	

22.7 Fork

Fork article number	94601000044
Fork	WP APEX 3043
Fork length	747.5 ... 753.4 mm (29.429 ... 29.661 in)
Fork oil	460 ± 5 ml (15.55 ± 0.17 fl. oz.) Fork oil (SAE 4) (48601166S1) (📖 p. 111)

22.8 Shock absorber

Shock absorber article number	94604010044
Shock absorber	WP Suspension
Spring preload	
Standard	5 clicks
Static sag	15 mm (0.59 in)
Riding sag	45 ... 50 mm (1.77 ... 1.97 in)
Fitted length	307 mm (12.09 in)

22.9 Chassis tightening torques

Remaining screws, chassis	M4	4 Nm (3 lbf ft)
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
Remaining screws, trim	M5	4 Nm (3 lbf ft)
Screw, anti-rotation lock, handlebar stub	M5	4 Nm (3 lbf ft)
Screw, side stand sensor	M5	5 Nm (3.7 lbf ft) Loctite®243™
Screw, wheel speed sensor wheel	M5	7 Nm (5.2 lbf ft) Loctite®243™
Nut, tail light	M6	7 Nm (5.2 lbf ft)
Remaining nuts, chassis	M6	15 Nm (11.1 lbf ft)
Remaining screws, chassis	M6	9 Nm (6.6 lbf ft)
Remaining screws, trim	M6	6 Nm (4.4 lbf ft)
Screw, chain guard	M6	3 Nm (2.2 lbf ft)
Screw, cross connector, seat support	M6	5 Nm (3.7 lbf ft)
Screw, foot brake cylinder	M6	8 Nm (5.9 lbf ft) Loctite®243™
Screw, front brake disc	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, fuel pump	M6	10 Nm (7.4 lbf ft)
Screw, fuel tank attachment, lateral, on frame	M6	11 Nm (8.1 lbf ft)
Screw, handlebar stub	M6	8 Nm (5.9 lbf ft) Loctite®243™
Screw, magnetic holder on side stand	M6	5 Nm (3.7 lbf ft) Loctite®243™
Nut, rear sprocket screw	M8	38 Nm (28 lbf ft)
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	30 Nm (22.1 lbf ft)
Screw, bottom triple clamp	M8	15 Nm (11.1 lbf ft)
Screw, connecting plate, frame, subframe	M8	19 Nm (14 lbf ft)
Screw, foot brake lever	M8	16 Nm (11.8 lbf ft) Loctite®243™
Screw, fork stub	M8	15 Nm (11.1 lbf ft)
Screw, fuel tank attachment, front, on frame	M8	20 Nm (14.8 lbf ft)
Screw, handlebar clamp	M8	15 Nm (11.1 lbf ft)
Screw, mirror holder	M8	19 Nm (14 lbf ft)
Screw, passenger footrest unit	M8	20 Nm (14.8 lbf ft) Loctite®243™
Screw, rear brake disc	M8	29 Nm (21.4 lbf ft) Loctite®243™
Screw, shift lever	M8	17 Nm (12.5 lbf ft) Loctite®243™

Screw, subframe bottom	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, top triple clamp	M8	15 Nm (11.1 lbf ft)
Screw, front brake caliper	M8x1	32 Nm (23.6 lbf ft) Loctite®243™
Banjo bolt, brake line	M10	24 Nm (17.7 lbf ft)
Nut, engine bearer, front	M10	48 Nm (35.4 lbf ft) Loctite®243™
Remaining nuts, chassis	M10	50 Nm (36.9 lbf ft)
Remaining screws, chassis	M10	46 Nm (33.9 lbf ft)
Screw, side stand	M10	35 Nm (25.8 lbf ft) Loctite®243™
Nut, side stand bracket	M10x1.25	36 Nm (26.6 lbf ft) Loctite®243™
Screw, bottom shock absorber	M10x1.25	50 Nm (36.9 lbf ft) Loctite®243™
Screw, front footrest bracket	M10x1.25	45 Nm (33.2 lbf ft) Loctite®243™
Screw, top shock absorber	M10x1.25	50 Nm (36.9 lbf ft) Loctite®243™
Swingarm pivot	M14x100	
Nut, rear wheel spindle	M14x1.5	100 Nm (73.8 lbf ft)
Screw, steering head, top	M16x1.5	47 Nm (34.7 lbf ft) Loctite®243™
Lambda sensor	M18x1.5	19 Nm (14 lbf ft)
Screw, subframe top	M22	120 Nm (88.5 lbf ft)
Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)
Nut, steering head	M30x1	5 Nm (3.7 lbf ft)
Nut, steering head	M30x1	Step 1 55 Nm (40.6 lbf ft) 2nd stage (loosen, counterclock- wise) 2 turns Step 3 5 Nm (3.7 lbf ft)

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

Coolant

Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	–25 °C (–13 °F)
-----------------------------------	-----------------

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier

MOTOREX®

- COOLANT M3.0

Engine oil (SAE 15W/50)

Standard/classification

- JASO T903 MA2 (📖 p. 113)
- SAE (📖 p. 113) (SAE 15W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Partially synthetic engine oil

Recommended supplier

MOTOREX®

- Formula 4T

Engine oil (SAE 10W/40)**Standard/classification**

- JASO T903 MA2 (📖 p. 113)
- SAE (📖 p. 113) (SAE 10W/40)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Partially synthetic engine oil

Recommended supplier**MOTOREX®**

- Formula 4T

Fork oil (SAE 4) (48601166S1)**Standard/classification**

- SAE (📖 p. 113) (SAE 4)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95)**Standard/classification**

- DIN EN 228 (ROZ 95)

Guideline

- Only use super unleaded fuel that matches or is equivalent to the specified standard.
- Fuel with an ethanol content of up to 10% (E10 fuel) is safe to use.

**Info**

Do **not** use fuel containing methanol (e.g., M15, M85, M100) or more than 10% ethanol (e.g., E15, E25, E85, E100).

Chain cleaner

Recommended supplier

MOTOREX®

- Chain Clean

Fuel additive

Recommended supplier

MOTOREX®

- Fuel Stabilizer

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

MOTOREX®

- Moto Clean

Perfect finish and high gloss polish for paints

Recommended supplier

MOTOREX®

- Moto Shine

Preserving materials for paints, metal and rubber

Recommended supplier

MOTOREX®

- Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

MOTOREX®

- Quick Cleaner

Street chain spray

Guideline

Recommended supplier

MOTOREX®

- Chainlube Road Strong

Universal oil spray

Recommended supplier

MOTOREX®

- Joker 440 Synthetic

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The **JASO T903 MA2** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

ABS	Anti-lock braking system	Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces
OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

28.1 Red symbols

Red symbols indicate an error condition that requires immediate intervention.

	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.
---	--

28.2 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Malfunction indicator lamp lights up yellow – The OBD has detected a malfunction in the vehicle electronics.
	The general warning lamp flashes yellow – A note/warning note on operating safety has been detected. This is also shown in the display.
	ABS warning lamp lights up yellow – Status or error messages relating to ABS.

28.3 Green and blue symbols

Green and blue symbols reflect information.

	The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on.
	The idle indicator lamp lights up green – The transmission is in the neutral position.
	The high beam indicator lamp lights up blue – The high beam is switched on.

1	
12-V battery	
charging	76
installing	75
removing	75
A	
ABS	60
ABS fuses	
changing	78
ABS mode	
adjusting	30
ACC1	
front	83
rear	84
ACC2	
rear	84
Antifreeze	
checking	86
Anti-lock braking system	60
Applying the brakes	39
Auxiliary substances	9
B	
Brake discs	
checking	61
Brake fluid	
front brake, adding	62
of rear brake, adding	64
Brake fluid level	
front brake, checking	61
of rear brake, checking	63
Brake linings	
front brake, checking	63
of rear brake, checking	65
Brakes	39
Breakdown	
towing	42
C	
Capacity	
coolant	105
engine oil	95, 105
fuel	43, 106
Chain	
chain dirt accumulation, checking	51
checking	54
cleaning	51
Chain tension	
adjusting	53
checking	52
Clutch lever	13
Clutch lever play	
checking	92
Combination instrument	
ABS display	26
activation and test	20
Average Speed Trip1	27
Average Speed Trip2	29
Avg Fuel Cons 1	28
Avg Fuel Cons 2	29
coolant temperature indicator	25
display	24
fuel level display	24
Fuel Range	28, 30
function buttons	25
gear display	23
indicator lamps	22
Info display	26
ODO display	26
overview	20
shift warning light	23
Time Trip 1	27
Time Trip 2	29
TRIP 1 display	26
TRIP 2 display	28
warnings	20
Coolant	
changing	89
draining	87
Coolant level	
checking	86
compensating tank, checking	85
Cooling system	85
filling/bleeding	88
Customer service	9
D	
Diagnostics connector	83
E	
Emergency OFF switch	14
Engine	
running in	35
Engine number	12
Engine oil	
adding	96
changing	94
Engine oil level	
checking	94
Engine sprocket	
checking	54

Environment	8	Load the vehicle	35
F		Luggage	35
Figures	9	M	
Filling up		Main fuse	
fuel	42	changing	78
Foot brake lever	19	Manufacturer warranty	9
free travel, adjusting	66	Misuse	6
free travel, checking	66	Motorcycle	
Fork legs		cleaning	97
dust boots, cleaning	49	lifting with front lifting gear	48
Front fender		rear lifting gear, raising with	48
installing	59	removing the rear from the lifting gear	48
removing	59	taking off front lifting gear	49
Front rider's seat		O	
mounting	51	Oil filter	
removing	50	changing	94
Front wheel		Oil screen	
installing	68	cleaning	94
removing	68	Owner's Manual	8
Fuel tank cover		P	
mounting	56	Parking	40
removing	55	Passenger foot pegs	18
Fuel tank filler cap		Play in the clutch lever	
closing	17	adjusting	93
opening	16	Play in throttle cable	
Fuel, oils, etc.	9	adjusting	92
Fuse		checking	92
of individual electrical power consumers,		Preparing for use	
changing	80	advice on preparing for first use	34
H		after storage	100
Hand brake lever	13	checks and maintenance measures when	
Headlight bulb		preparing for use	36
changing	81	Protective clothing	7
Headlight range		R	
adjusting	83	Rear hub damping rubber pieces	
Headlight setting		checking	71
checking	82	Rear sprocket	
High beam flasher button	14	checking	54
Horn button	13	Rear wheel	
I		installing	70
Ignition lock	15	removing	70
Implied warranty	9	Riding	37
Indicator lamps	22	starting off	37
Intended use	6	S	
K		Safe operation	7
Key number	12	Seat lock	17
L		Service	9
Light switch	14	Service schedule	44-45

Shift lever	18
adjusting	46
Shift warning light	
adjusting	32
Shifting	37
Shock absorber	
spring preload, adjusting	46
Side cover, left	
installing	57
removing	56
Side cover, right	
installing	58
removing	57
Side stand	19
Spare parts	9
Start button	15
Starting	36
Steering	
locking	15
unlocking	16
Steering lock	15
Stopping	40
Storage	99
Supporting strap	18
T	
Technical accessories	9
Technical data	
capacities	105
chassis	106
chassis tightening torques	108
electrical system	107
engine	103
engine tightening torques	104
fork	107
shock absorber	107
tires	107
Throttle grip	13
Time	
adjusting	31
Tire condition	
checking	72
Tire pressure	
checking	73
Tool set	17
Towing	42
Transport	41
Troubleshooting	101-102
Turn signal switch	14
Type label	12

U

Units

adjusting	31
---------------------	----

Use definition	6
---------------------------------	---

V

Vehicle identification number	12
--	----

View of vehicle

front left	10
rear right	11

W

Winter operation

checks and maintenance steps	98
--	----

Work rules	8
-----------------------------	---



3214555en

03/2022

