

OWNER'S MANUAL 2024



TC 250

TX 300

Art. no. 3402712en



DEAR HUSQVARNA MOTORCYCLES CUSTOMER

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with appropriate care, will bring you pleasure for a long time to come.

We wish you good and safe riding at all times!

Enter the serial numbers of your vehicle below.

Vehicle identification number (📖 p. 13)	Dealer's stamp
Engine number (📖 p. 13)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Motorcycles accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2023 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reprinting, including excerpts, and duplication of any kind only with the written consent of the publisher.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

Husqvarna Motorcycles GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

TC 250 (F2301X1)

TX 300 (F2401X5)



3402712en

12.04.2023

TABLE OF CONTENTS

1	MEANS OF REPRESENTATION.....	5	6.12	Cold start button.....	19
1.1	Symbols used	5	6.13	Idle speed adjusting screw	19
1.2	Formats used.....	5	6.14	Shift lever	19
2	SAFETY ADVICE	6	6.15	Foot brake lever	20
2.1	Use definition – intended use	6	6.16	Plug-in stand (TC 250)	20
2.2	Misuse.....	6	6.17	Side stand (TX 300).....	21
2.3	Safety advice	6	7	PREPARING FOR USE.....	22
2.4	Degrees of risk and symbols	7	7.1	Advice on preparing for first use.....	22
2.5	Tampering warning	7	7.2	Running in the engine	23
2.6	Safe operation.....	7	7.3	Starting power of lithium-ion batteries at low temperatures	23
2.7	Protective clothing	8	7.4	Preparing the vehicle for difficult operating conditions	24
2.8	Work rules.....	8	7.5	Preparing the vehicle for rides on dry sand	24
2.9	Environment.....	9	7.6	Preparing the vehicle for rides on wet sand	25
2.10	Owner's Manual.....	9	7.7	Preparing the vehicle for rides on wet and muddy circuits	25
3	IMPORTANT NOTES	10	7.8	Preparing vehicle for high temperatures or slow riding	26
3.1	Manufacturer warranty, implied warranty	10	7.9	Preparing the vehicle for low temperatures or snow	26
3.2	Fuel, auxiliary substances.....	10	8	RIDING INSTRUCTIONS	27
3.3	Spare parts, Husqvarna Motorcycles technical accessories	10	8.1	Checks and maintenance measures when preparing for use.....	27
3.4	Service	10	8.2	Starting the vehicle	27
3.5	Figures	10	8.3	Starting off	28
3.6	Customer service.....	10	8.4	Shifting, riding	29
4	VIEW OF VEHICLE	11	8.5	Braking.....	29
4.1	View of vehicle, front left (example)	11	8.6	Stopping, parking	30
4.2	View of vehicle, rear right (example).....	12	8.7	Transporting.....	30
5	SERIAL NUMBERS.....	13	8.8	Refueling	31
5.1	Vehicle identification number.....	13	9	SERVICE SCHEDULE.....	33
5.2	Steering head label	13	9.1	Additional information	33
5.3	Engine number.....	13	9.2	Service schedule.....	33
5.4	Fork part number	13	10	TUNING THE CHASSIS.....	35
5.5	Shock absorber article number	14	10.1	Checking the basic chassis setting with the rider's weight.....	35
6	CONTROLS	15	10.2	Compression damping of the shock absorber.....	35
6.1	Clutch lever	15	10.3	Adjusting the low-speed compression damping of the shock absorber.....	35
6.2	Hand brake lever.....	15	10.4	Adjusting the high-speed compression damping of the shock absorber.....	36
6.3	Throttle grip.....	15	10.5	Adjusting the rebound damping of the shock absorber	37
6.4	Stop button	15	10.6	Measuring the dimension of the rear wheel unloaded.....	38
6.5	Start button	16			
6.6	Combination switch	16			
6.7	Overview of indicator lights (TC 250).....	16			
6.8	Overview of indicator lights (TX 300)	16			
6.9	Combination instrument	17			
6.10	Opening fuel tank filler cap	17			
6.11	Closing the fuel tank filler cap.....	18			

10.7	Checking the static sag of the shock absorber.....	38	11.28	Removing the air filter box cover.....	64
10.8	Checking the riding sag of the shock absorber.....	39	11.29	Installing the air filter box cover.....	65
10.9	Adjusting the spring preload of the shock absorber.....	39	11.30	Removing the air filter.....	66
10.10	Adjusting the riding sag.....	40	11.31	Installing the air filter.....	67
10.11	Air suspension XACT (TC 250).....	42	11.32	Cleaning the air filter and air filter box.....	67
10.12	Checking the basic setting of the fork.....	42	11.33	Preparing the air filter box cover for securing.....	68
10.13	Adjusting the fork air pressure (TC 250).....	43	11.34	Removing the main silencer.....	68
10.14	Adjusting the compression damping of the fork.....	44	11.35	Installing the main silencer.....	69
10.15	Adjusting the rebound damping of the fork.....	45	11.36	Changing the glass fiber yarn filling of the main silencer.....	69
10.16	Handlebar position.....	46	11.37	Removing the fuel tank.....	70
10.17	Adjusting the handlebar position.....	46	11.38	Installing the fuel tank.....	71
11	SERVICE WORK ON THE CHASSIS.....	48	11.39	Checking the chain for dirt.....	73
11.1	Raising the motorcycle with a lift stand.....	48	11.40	Cleaning the chain.....	73
11.2	Removing the motorcycle from the lift stand.....	48	11.41	Checking the chain tension.....	74
11.3	Bleeding the fork legs.....	49	11.42	Adjusting the chain tension.....	75
11.4	Cleaning the dust boots of the fork legs.....	49	11.43	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	76
11.5	Removing the fork protector.....	50	11.44	Checking the frame.....	78
11.6	Installing the fork protector.....	50	11.45	Checking the link fork.....	78
11.7	Removing the engine guard (TX 300).....	50	11.46	Checking the throttle cable routing.....	78
11.8	Installing the engine guard (TX 300).....	51	11.47	Checking the rubber grip.....	79
11.9	Removing the right side panel.....	51	11.48	Adjusting the basic position of the clutch lever.....	80
11.10	Installing the right side panel.....	52	11.49	Checking/correcting the fluid level of hydraulic clutch.....	80
11.11	Removing the frame protector.....	52	11.50	Changing the hydraulic clutch fluid.....	81
11.12	Installing the frame protector.....	52	12	BRAKE SYSTEM.....	83
11.13	Removing the fork legs.....	53	12.1	Checking the free travel of the hand brake lever.....	83
11.14	Installing the fork legs.....	53	12.2	Adjusting the basic position of the hand brake lever.....	83
11.15	Removing the lower triple clamp.....	54	12.3	Checking the brake discs.....	83
11.16	Installing the lower triple clamp.....	55	12.4	Checking the front brake fluid level.....	84
11.17	Checking steering head bearing play.....	57	12.5	Adding front brake fluid.....	85
11.18	Adjusting steering head bearing play.....	58	12.6	Checking that the brake linings of the front brake are secured.....	86
11.19	Lubricating the steering head bearing.....	59	12.7	Changing the brake linings of the front brake.....	87
11.20	Removing the start number plate.....	59	12.8	Checking the free travel of foot brake lever.....	89
11.21	Installing the start number plate.....	59	12.9	Adjusting the basic position of the foot brake lever.....	90
11.22	Removing the front fender.....	59	12.10	Checking the rear brake fluid level.....	91
11.23	Installing front fender.....	60	12.11	Adding rear brake fluid.....	91
11.24	Removing the shock absorber.....	61	12.12	Checking that the brake linings of the rear brake are secured.....	92
11.25	Installing the shock absorber.....	62	12.13	Changing the rear brake linings.....	93
11.26	Removing the seat.....	63			
11.27	Mounting the seat.....	64			

TABLE OF CONTENTS

13	WHEELS, TIRES.....	96	20	STORAGE.....	126
13.1	Removing the front wheel 	96	20.1	Storage	126
13.2	Installing the front wheel 	97	20.2	Preparing for use after storage.....	127
13.3	Removing the rear wheel 	97	21	TROUBLESHOOTING	128
13.4	Installing the rear wheel 	98	22	BLINK CODE	130
13.5	Checking the tire condition.....	100	23	TECHNICAL SPECIFICATIONS.....	132
13.6	Checking tire pressure.....	100	23.1	Engine	132
13.7	Checking spoke tension	101	23.2	Engine tightening torques.....	133
14	ELECTRICAL SYSTEM.....	102	23.3	Capacities	134
14.1	Removing the 12-V battery 	102	23.3.1	Gear oil	134
14.2	Installing the 12-V battery 	103	23.3.2	Coolant	134
14.3	Charging the 12-V battery 	104	23.3.3	Fuel.....	134
14.4	Changing the main fuse	105	23.4	Chassis	134
14.5	Changing the fuse of the fuel pump.....	106	23.5	Electrical system.....	135
14.6	Diagnostics connector	107	23.6	Tires	135
15	COOLING SYSTEM.....	108	23.7	Fork.....	136
15.1	Cooling system	108	23.7.1	TC 250.....	136
15.2	Checking the antifreeze and coolant level.....	108	23.7.2	TX 300	136
15.3	Checking the coolant level.....	109	23.8	Shock absorber	137
15.4	Draining the coolant 	110	23.8.1	TC 250.....	137
15.5	Refilling with coolant 	110	23.8.2	TX 300	137
15.6	Changing the coolant 	112	23.9	Chassis tightening torques	138
16	EXHAUST CONTROL	114	24	SUBSTANCES.....	141
16.1	Programming the end positions of the exhaust control 	114	25	AUXILIARY SUBSTANCES.....	143
17	TUNING THE ENGINE.....	116	26	STANDARDS	145
17.1	Changing the mapping	116	27	INDEX OF SPECIAL TERMS	146
17.2	Checking the play in the throttle cable	116	28	LIST OF ABBREVIATIONS	147
17.3	Adjusting the play in the throttle cable 	117	29	LIST OF SYMBOLS	148
17.4	Adjusting the idle speed 	118	29.1	Yellow and orange symbols.....	148
17.5	Checking the basic position of the shift lever.....	118	29.2	Green and white symbols	148
17.6	Adjusting the basic position of the shift lever 	119	INDEX.....		149
18	SERVICE WORK ON THE ENGINE	120			
18.1	Changing the fuel screen 	120			
18.2	Checking the gear oil level.....	121			
18.3	Changing the gear oil 	121			
18.4	Adding the gear oil 	122			
19	CLEANING, CARE.....	124			
19.1	Cleaning the motorcycle.....	124			

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g., of a work step or a function).



Indicates an unexpected reaction (e.g., of a work step or a function).



Indicates work that requires expert knowledge and technical understanding. In the interest of your own safety, have this work performed by an authorized Husqvarna Motorcycles workshop. Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates the end of an activity, including potential reworking.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Indicates a proprietary name.
Name[®]	Indicates a protected name.
Brand[™]	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Use definition – intended use

(TC 250)

This vehicle has been designed and built to withstand the normal stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Info

Only operate this vehicle in closed-off areas remote from public road traffic.

(TX 300)

This vehicle has been designed and built to withstand the normal stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Info

Only operate this vehicle in closed-off areas remote from public road traffic.

This motorcycle is designed for use in offroad endurance competition and not primarily for use in motocross.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

The vehicle should only be used by trained persons.

Have malfunctions that impair safety immediately eliminated by an authorized Husqvarna Motorcycles workshop.

Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, Husqvarna Motorcycles recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with transponder key) or the motor must be at a standstill (models without ignition lock or transponder key). Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ± 5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite**®) is required. Observe the manufacturer's instructions.

If thread locker (e.g., **Precote**®) has already been applied to a new part, do not apply any additional thread locker.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way to find out how best to customize the vehicle for your own use and how you can protect yourself from injury.



Tip

Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized Husqvarna Motorcycles dealer.

The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.

The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate.

The Owner's Manual is also available for download from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website. A printed copy can also be ordered from your authorized Husqvarna Motorcycles dealer.

International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3 IMPORTANT NOTES

3.1 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must only be carried out in an authorized Husqvarna Motorcycles workshop and confirmed in the **Husqvarna Motorcycles Dealer.net**, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.2 Fuel, auxiliary substances



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

3.3 Spare parts, Husqvarna Motorcycles technical accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Motorcycles and have them installed by an authorized Husqvarna Motorcycles workshop. Husqvarna Motorcycles accepts no liability for other products and any resulting damage or loss.

The article numbers of some spare parts and accessory products are specified in parentheses in the descriptions. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

The current Husqvarna Motorcycles technical accessories for your vehicle are available from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, air filter or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized Husqvarna Motorcycles dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Motorcycles.

A list of authorized Husqvarna Motorcycles dealers can be found on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

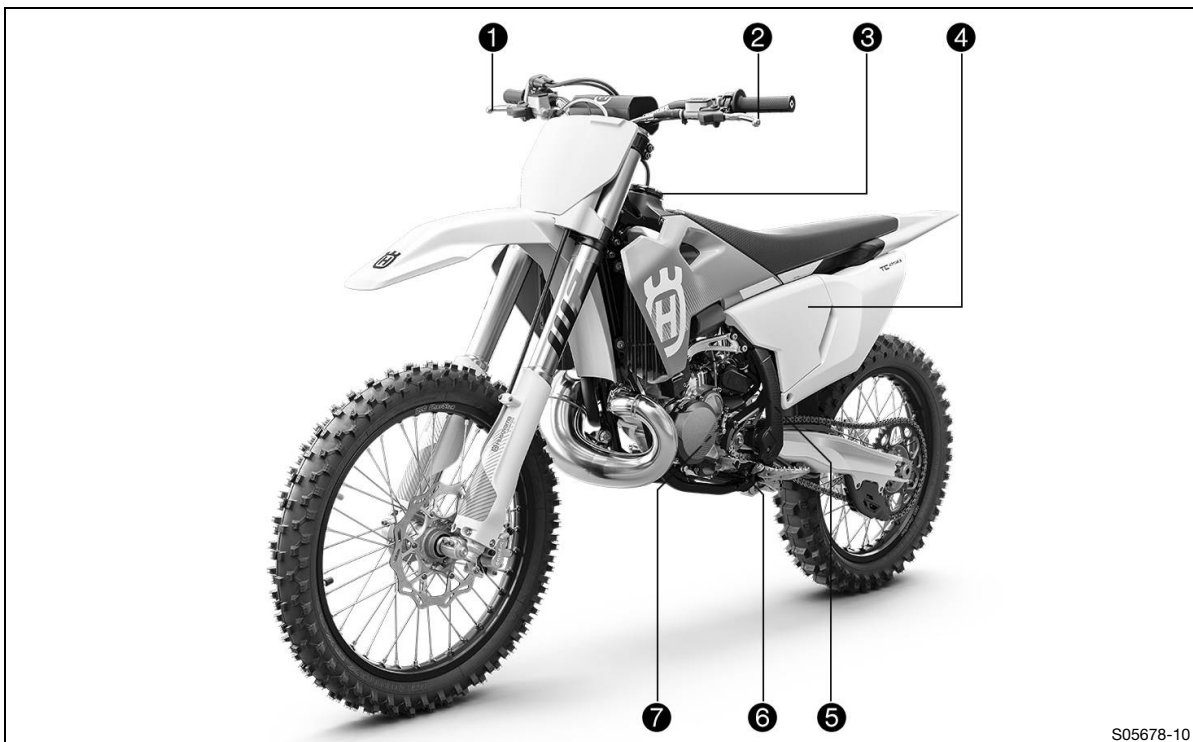4.1 View of vehicle, front left (example)

S05678-10

- ❶ Hand brake lever (📖 p. 15)
- ❷ Clutch lever (📖 p. 15)
- ❸ Fuel tank filler cap
- ❹ Air filter box cover
- ❺ Cold start button (📖 p. 19)
- ❻ Shift lever (📖 p. 19)
- ❼ Engine number (📖 p. 13)

4 VIEW OF VEHICLE


4.2 View of vehicle, rear right (example)



S05679-10


- ❶ Combination switch (📖 p. 16)
- ❷ Fork air pressure adjuster
- ❸ Fork compression adjuster
- ❹ Stop button (📖 p. 15)
- ❺ Start button (📖 p. 16)
- ❻ Throttle grip (📖 p. 15)
- ❼ Vehicle identification number
- ❽ Idle speed adjusting screw (📖 p. 19)
- ❾ Foot brake lever (📖 p. 20)
- ❿ Shock absorber compression adjuster
- ⓫ Shock absorber rebound adjuster
- ⓬ Level viewer for brake fluid, rear

5.1 Vehicle identification number

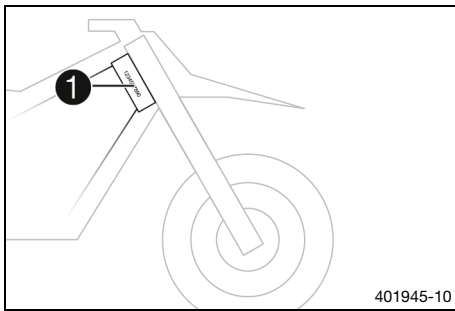


The vehicle identification number ❶ is stamped on the right side of the steering head.

5.2 Steering head label

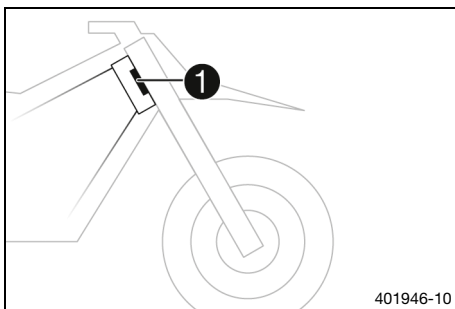


The steering head label ❶ is attached to the front of the steering head.

5.3 Engine number

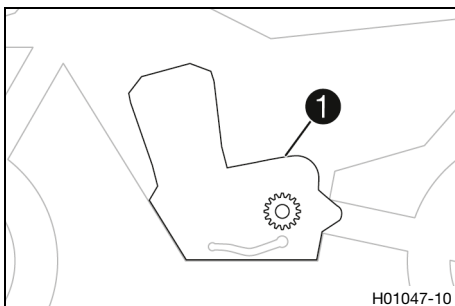

The engine number ❶ is embossed on the left side of the engine above the engine sprocket.


5.4 Fork part number

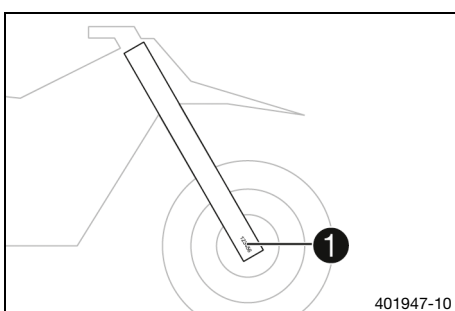

The fork part number ❶ is stamped on the inner side of the fork stub.


5 SERIAL NUMBERS

 5.5 Shock absorber article number




The shock absorber article number **1** is stamped on the top of the shock absorber above the adjusting ring towards the engine side.

6.1 Clutch lever

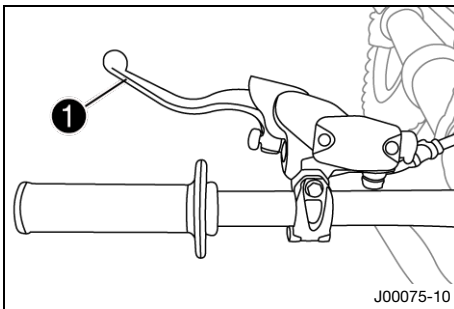


Clutch lever ❶ is fitted on the handlebar on the left. The clutch is activated hydraulically and adjusts itself automatically.

6.2 Hand brake lever

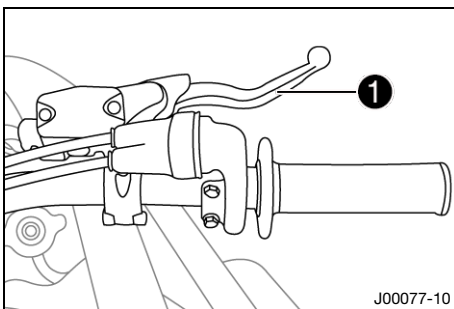


Hand brake lever ❶ is located on the right side of the handlebar. The front brake is engaged using the hand brake lever.

6.3 Throttle grip

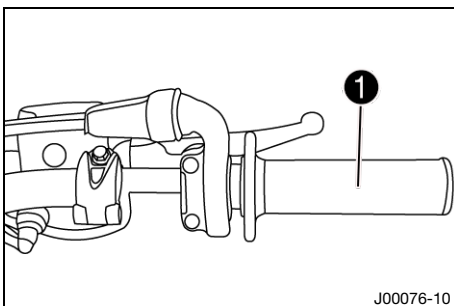

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Stop button

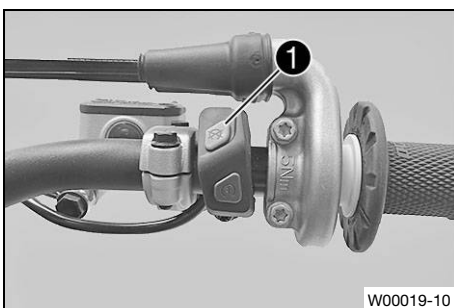


The stop button ❶ is located on the right side of the handlebar.

Possible states

- The stop button ☒ is in the basic position – In this position, the ignition circuit is closed and the engine can be started.
- Stop button ☒ pressed – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.

6.5 Start button

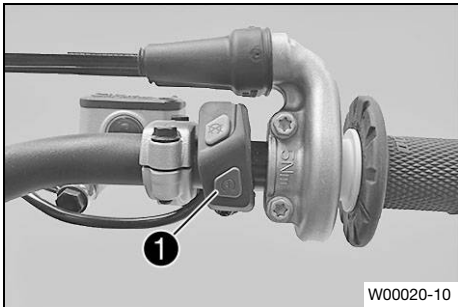


Start button ❶ is fitted on the right side of the handlebar.

Possible states

- The start button ❸ is in the basic position
- The start button ❸ is pressed – In this position, the starter motor is actuated.

6.6 Combination switch

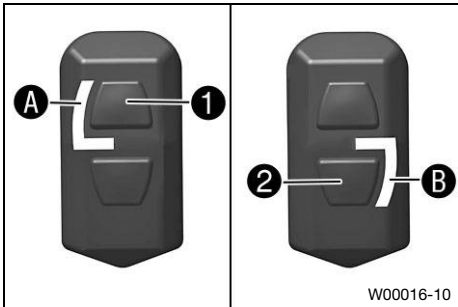


The combination switch is fitted on the left side of the handlebar.

Possible states

1	STANDARD – STANDARD mapping is activated when the indicator lamp A lights up.
2	ADVANCED – ADVANCED mapping is activated when the indicator lamp B lights up.

The engine characteristic can be changed using button ❶ and button ❷ on the combination switch.


6.7 Overview of indicator lights (TC 250)

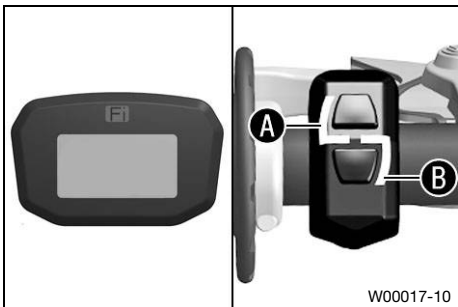

Possible states

Fi	Malfunction indicator lamp lights up/flashes orange – The <u>OBD</u> has detected a malfunction in the vehicle electronics.
L	Indicator lamp A lights up white – STANDARD mapping is activated.
7	Indicator lamp B lights up green – ADVANCED mapping is activated.


6.8 Overview of indicator lights (TX 300)

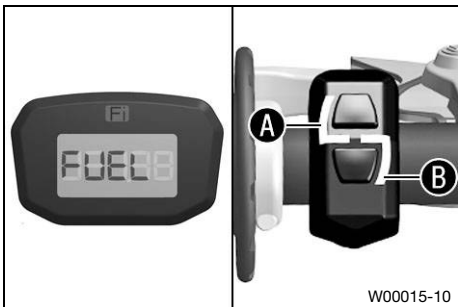

Possible states

Fi	Malfunction indicator lamp lights up/flashes orange – The <u>OBD</u> has detected a malfunction in the vehicle electronics.
L	Indicator lamp A lights up white – STANDARD mapping is activated.
7	Indicator lamp B lights up green – ADVANCED mapping is activated.
FUEL	FUEL is displayed – The fuel level has reached the reserve mark.

6.9 Combination instrument

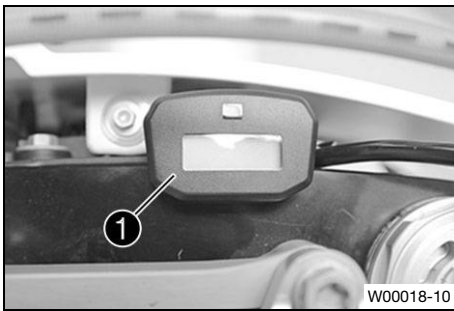

The combination instrument **1** is attached in front of the handlebar.

The combination instrument shows the total number of operating hours of the engine.

The operating hour counter begins counting when the engine is started and stops when the engine is switched off.

i Info

Nothing can be cleared or adjusted on the combination instrument.

As soon as the diagnostics tool is connected, the service hour counter starts running.

Before longer diagnostic sessions, unplug the service hour counter behind the start number plate.

6.10 Opening fuel tank filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Note


Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

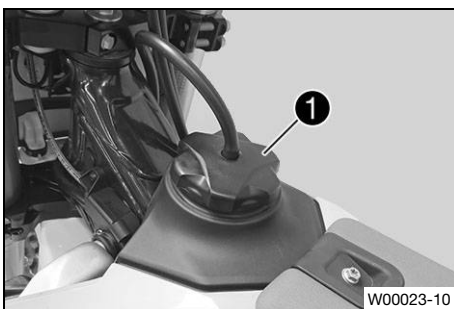

(TC 250)

 
- Turn fuel tank filler cap **1** counterclockwise and lift it off.



(TX 300)

- Press release button **1**, turn the fuel tank filler cap counterclockwise, and lift it off.

6.11 Closing the fuel tank filler cap

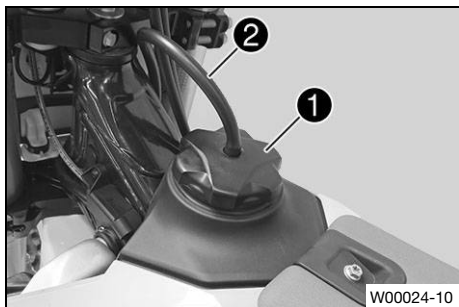


(TC 250)

- Mount fuel tank filler cap **1** and turn it clockwise until the fuel tank is tightly closed.



Info

 Route fuel tank breather hose **2** without kinks.



(TX 300)



- Mount fuel tank filler cap **1** and turn it clockwise until the fuel tank is tightly closed.



Info

Route fuel tank breather hose **2** without kinks.

6.12 Cold start button

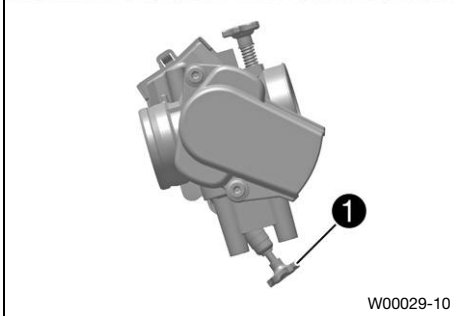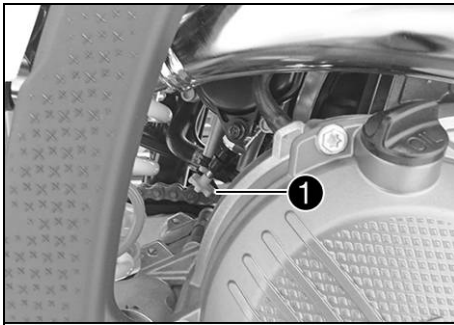

The cold start button **1** is fitted to the bottom of the throttle valve body.

The electronic fuel injection system extends the injection time if the engine is cold and the ambient temperature is low. To help the engine burn the increased fuel quantity, it must be supplied with additional oxygen by pushing the cold start button.

After briefly opening up the throttle and then releasing the throttle grip again, or turning the throttle grip towards the front, the cold start button returns to its original position.




Info

Check whether the cold start button has returned to its basic position.

Possible states

- The cold start button is activated – The cold start button is pushed in all the way.
- The cold start button is deactivated – The cold start button is in its basic position.

6.13 Idle speed adjusting screw

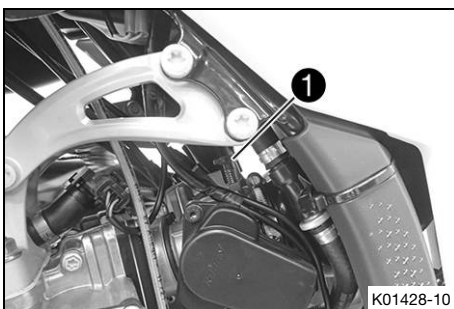

The idle setting of the throttle valve body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using the idle speed adjusting screw **1**.

Increase the idle speed by turning the idle speed adjusting screw clockwise.


Decrease the idle speed by turning the idle speed adjusting screw counterclockwise.

6.14 Shift lever

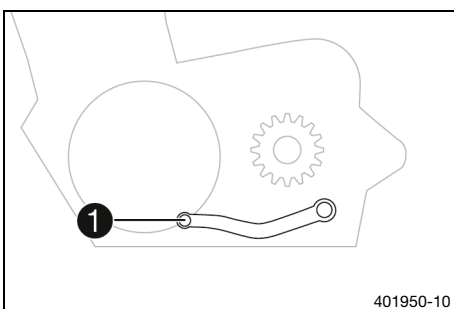

Shift lever **1** is mounted on the left of the engine.


6 CONTROLS

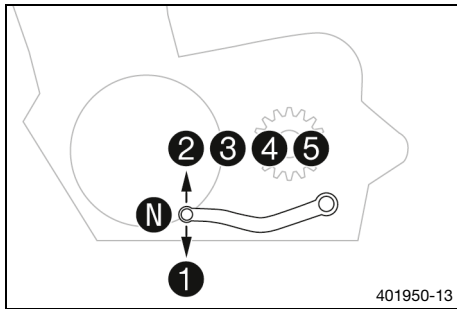

(TC 250)

The gear positions can be seen in the figure.

The neutral or idle position is between the first and second gears.

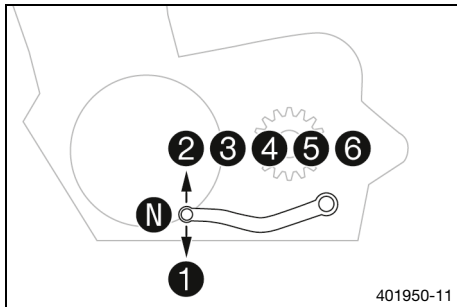


(TX 300)

The gear positions can be seen in the figure.


The neutral or idle position is between the first and second gears.

6.15 Foot brake lever

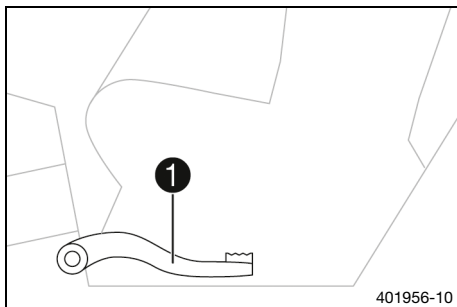

Foot brake lever ❶ is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

6.16 Plug-in stand (TC 250)

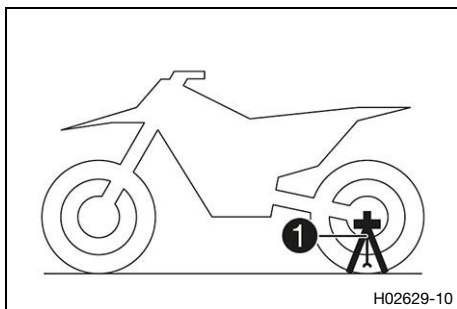

The support for plug-in stand ❶ is the left side of the wheel spindle.

The plug-in stand is used to park the motorcycle.


The plug-in stand is used as a fork locker when transporting the motorcycle.




Info

Remove the plug-in stand before riding.

The tool can be attached to the plug-in stand holders.

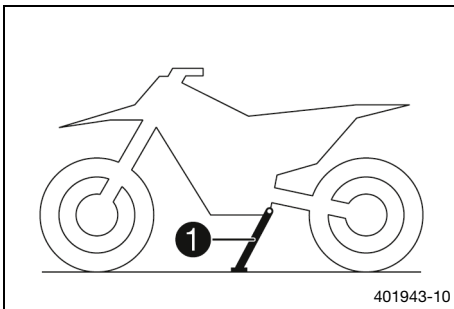6.17 Side stand (TX 300)

The side stand ❶ is located on the left of the vehicle.

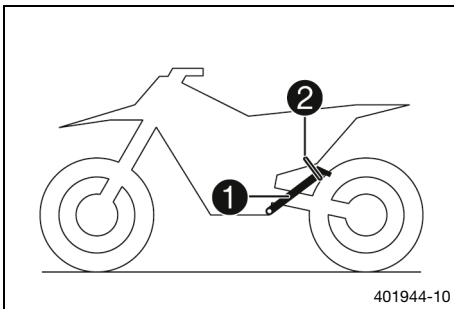

The side stand is used for parking the motorcycle.

**Info**

When you are riding, side stand ❶ must be folded up and secured with rubber strap ❷.

7.1 Advice on preparing for first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents An unadapted riding style impairs the handling characteristic.

- Adapt your riding speed to the road conditions and your riding ability.



Warning

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever if you do not want to brake.



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Risk of injury People who act without authorization may not be familiar with the vehicle.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



Info

When using the motorcycle, remember that others may be disturbed by excessive noise.

- Ensure that the pre-sale inspection work has been carried out by an authorized Husqvarna Motorcycles workshop.
 - ✓ You will receive a delivery certificate when the vehicle is handed over.
- Before riding for the first time, read the entire Owner's Manual carefully.
- Get to know the controls.
- Adjust basic position of the clutch lever. (📖 p. 80)

- Adjust basic position of the hand brake lever. (📖 p. 83)
- Adjust the basic position of the foot brake lever. 🦶 (📖 p. 90)
- Adjust the basic position of the shift lever. 🦶 (📖 p. 119)
- Get used to the handling characteristic of the motorcycle on suitable terrain before undertaking a more challenging ride.



Info

This vehicle is not approved for use on public roads.
When offroad, it is recommended that you are accompanied by another person on another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Do not carry the luggage.
- Do not exceed the maximum permissible weight and the maximum permissible axle loads.

Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)

- Check the spoke tension. (📖 p. 101)



Info

The spoke tension must be checked after half an hour of operation.

- Run the engine in. (📖 p. 23)



7.2 Running in the engine

- During the running-in time, do not exceed the specified engine load.


Guideline

Maximum engine performance	
During the first 3 operating hours	< 70 %
During the first 5 operating hours	< 100 %

- Avoid fully opening the throttle.



7.3 Starting power of lithium-ion batteries at low temperatures

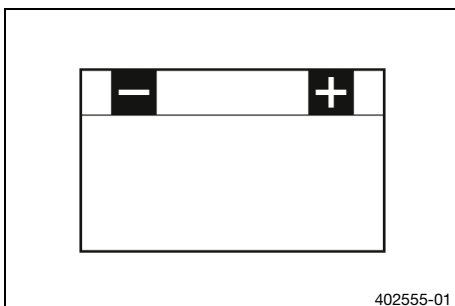

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 15 °C (60 °F). At low temperatures, however, the starting power of lithium-ion batteries drops to below that of lead batteries.

Multiple starting attempts may be needed. Press the start button for 5 seconds, and wait 30 seconds between attempts. The pauses are necessary so that the heat created can distribute through the lithium-ion battery and the lithium-ion battery is not damaged.

If the charged lithium-ion battery is unable to actuate the starter motor or does so only weakly when temperatures are below

15 °C (60 °F), the battery is not faulty but needs to be warmed up internally to increase its starting power (current output).
The starting power increases as the battery warms up.

7.4 Preparing the vehicle for difficult operating conditions



Info

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

- Clean the air filter and air filter box. 🛠️ (📖 p. 67)



Info

Check the air filter approx. every 30 minutes.

- Check the electrical connector for humidity and corrosion and to ensure it is firmly seated.
 - » If humidity, corrosion, or damage is found:
 - Clean and dry the connector, or change it if necessary.

Difficult operating conditions are:

- Rides on dry sand. (📖 p. 24)
- Rides on wet sand. (📖 p. 25)
- Rides on wet and muddy circuits. (📖 p. 25)
- Rides at high temperatures or slow riding. (📖 p. 26)
- Riding at low temperatures and in snow. (📖 p. 26)

7.5 Preparing the vehicle for rides on dry sand



- Mount the air filter dust cover.

Air filter dust cover (A46006920000)



Info

Observe the fitting instructions for Husqvarna Motorcycles technical accessories.



- Mount the air filter sand cover.

Air filter sand cover (A46006922000)



Info

Observe the fitting instructions for Husqvarna Motorcycles technical accessories.



- Clean the chain.

Chain cleaner (📖 p. 143)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (📖 p. 144)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Condition

Regular use in sand

- Change the piston every 10 operating hours.



7.6 Preparing the vehicle for rides on wet sand



- Mount the air filter rain cover.

Air filter rain cover (A46006921000)



Info

Observe the fitting instructions for Husqvarna Motorcycles technical accessories.



- Clean the chain.

Chain cleaner (📖 p. 143)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (📖 p. 144)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Condition

Regular use in sand

- Change the piston every 10 operating hours.



7.7 Preparing the vehicle for rides on wet and muddy circuits



- Mount the air filter rain cover.

Air filter rain cover (A46006921000)



Info

Observe the fitting instructions for Husqvarna Motorcycles technical accessories.

7 PREPARING FOR USE



- Mount the steel sprocket.
- Clean the motorcycle. (📖 p. 124)
- Straighten the bent radiator fins carefully.

7.8 Preparing vehicle for high temperatures or slow riding



- Adjust the secondary drive to the road conditions.

i Info

 
The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

- Clean the chain.

Chain cleaner (📖 p. 143)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.
- Check the coolant level. (📖 p. 109)

7.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter rain cover.

Air filter rain cover (A46006921000)

i Info


Observe the fitting instructions for Husqvarna Motorcycles technical accessories.

8.1 Checks and maintenance measures when preparing for use



Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

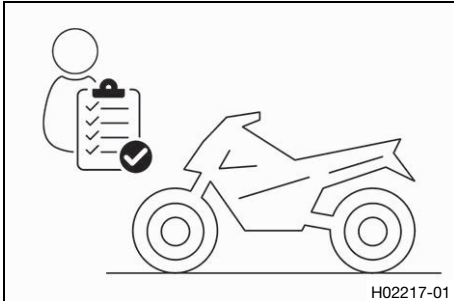

- Check the gear oil level. (📖 p. 121)
- Check the front brake fluid level. (📖 p. 84)
- Check the rear brake fluid level. (📖 p. 91)
- Check that the brake linings of the front brake are secured. (📖 p. 86)
- Check that the brake linings of the rear brake are secured. (📖 p. 92)
- Check that the brake system is functioning properly.
- Check the coolant level. (📖 p. 109)
- Check the chain for dirt. (📖 p. 73)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 76)
- Check the chain tension. (📖 p. 74)
- Check the tire condition. (📖 p. 100)
- Check tire pressure. (📖 p. 100)
- Check the spoke tension. (📖 p. 101)



Info

The spoke tension must be checked regularly as incorrect spoke tension will strongly impair riding safety.

- Clean the dust boots of the fork legs. (📖 p. 49)
- Bleed the fork legs. (📖 p. 49)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.



8.2 Starting the vehicle



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

 
- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.


- Always run the engine warm at a low speed.

8 RIDING INSTRUCTIONS




(TC 250)

- Remove plug-in stand ①.

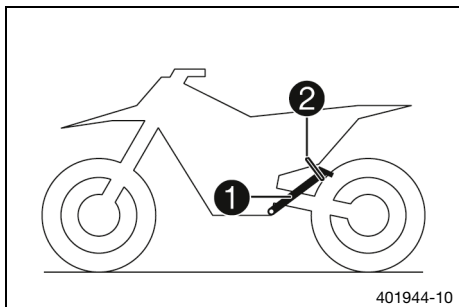

(TX 300)

- Take the motorcycle off side stand ① and secure the side stand with rubber strap ②.
- Shift the transmission into neutral.

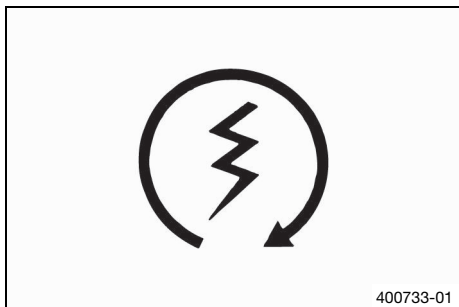

Condition

Ambient temperature: $< 20\text{ }^{\circ}\text{C}$ ($< 68\text{ }^{\circ}\text{F}$)

- Push the cold start button in all the way.
- Press the start button.



Info

Press the start button for a maximum of 5 seconds. Wait for 15 seconds before a further attempt at starting.

At low temperatures, wait for 30 seconds.

At temperatures below $6\text{ }^{\circ}\text{C}$ ($43\text{ }^{\circ}\text{F}$), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

During the starting process, the malfunction indicator lamp lights up.

8.3 Starting off



Info

The plug-in stand must be removed before riding.

When you are riding, the side stand must be folded up and secured with rubber strap.

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time open the throttle carefully.

8.4 Shifting, riding



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Info

If unusual noises occur while riding, stop immediately, switch off the engine, and contact an authorized Husqvarna Motorcycles workshop.

First-gear is used for starting off and for steep inclines.

- Shift into a higher gear when conditions allow (incline, road situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- If the cold start button was pushed while starting, open the throttle briefly and release the throttle grip or turn the throttle grip forward.
 - ✓ The cold start button goes to the basic position.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is $\frac{3}{4}$ open. This will barely reduce the speed, but fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle – abrupt throttle grip opening increases fuel consumption.
- To shift down, apply the brakes and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

Guideline

$\geq 1 \text{ min}$

- Avoid frequent or lengthy slipping of the clutch. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed with a slipping clutch.



8.5 Braking



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- On sandy, wet, or slippery surfaces, use mostly the rear brake.
- Always finish braking before the going into a bend. Shift down to a lower gear appropriate to your speed.

- Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

8.6 Stopping, parking



Warning

Risk of injury People who act without authorization may not be familiar with the vehicle.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

- Apply the brakes on the motorcycle.
- Shift the transmission to neutral position.
- Press and hold the stop button  while the engine is idling until the engine stops.

(TC 250)

- Rest the vehicle on the plug-in stand.

(TX 300)

- Rest the vehicle on the side stand.

8.7 Transporting

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

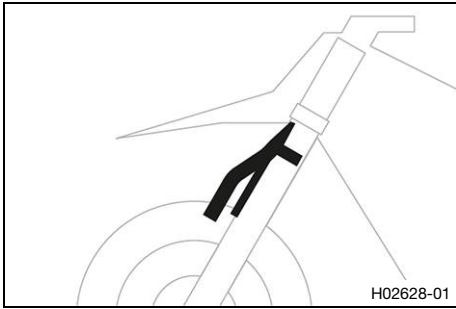

(TC 250)


- Switch off the engine.
- Mount plug-in stand on the fork legs.

Plug-in stand (A46029094000)



Info

The plug-in stand is included.
Make sure the brake line runs in front of the plug-in stand and does not become wedged.

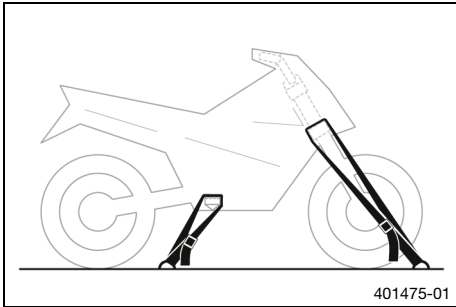

- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.



Info

Only tighten the tension belts to the point that the plug-in stand is in contact with the fender and tires.
Pay attention to the alignment of the plug-in stand to the fender.

(TX 300)

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

8.8 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.




Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

- Switch off the engine.
- Open fuel tank filler cap. (📖 p. 17)

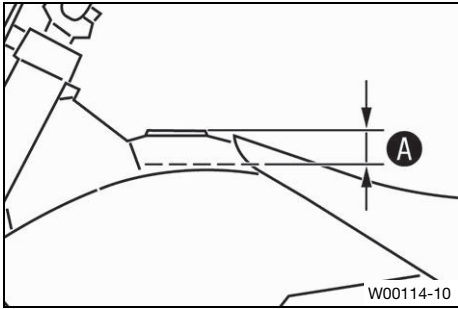

- Fill the fuel tank with fuel up to level **A**.

Guideline

Dimension A		35 mm (1.38 in)
Total fuel tank capacity, approx. (TC 250)	7.2 l (1.9 US gal)	Super unleaded (95 octane) mixed with 2-stroke engine oil (1:60) (📖 p. 142)
Total fuel tank capacity, approx. (TX 300)	8.5 l (2.25 US gal)	Super unleaded (95 octane) mixed with 2-stroke engine oil (1:60) (📖 p. 142)
Engine oil, 2-stroke (📖 p. 141)		

- Close the fuel tank filler cap. (📖 p. 18)



9.1 Additional information

Any further work that results from the service work must be ordered separately and invoiced separately. Different service intervals may apply in your country, depending on the local operating conditions. If the vehicle is used in particularly harsh conditions such as heavy rain, mud, sand, snow, extreme temperatures, frequent full load etc., shorter service intervals than those in the table may be necessary. Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on Husqvarna Motorcycles Dealer.net. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

9.2 Service schedule

	every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	After 15 operating hours / Every 15 operating hours				
	After 1 operating hour				
Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 	○	●	●	●	●
Check that the electrical system is functioning properly. 	○	●	●	●	
Check and charge the 12-V battery. 	○	●	●	●	●
Check that the brake linings of the front brake are secured. ( p. 86)	○	●	●	●	●
Check that the brake linings of the rear brake are secured. ( p. 92)	○	●	●	●	●
Check the brake discs. ( p. 83)	○	●	●	●	●
Check the brake lines for damage and tightness.	○	●	●	●	●
Check the front brake fluid level. ( p. 84)	○	●	●		
Change the front brake fluid. 				●	●
Check the rear brake fluid level. ( p. 91)	○	●	●		
Change the rear brake fluid. 				●	●
Check/correct the fluid level of hydraulic clutch. ( p. 80)			●		
Change the hydraulic clutch fluid.  ( p. 81)				●	●
Check the free travel of the hand brake lever. ( p. 83)	○	●	●	●	●
Check the free travel of the foot brake lever. ( p. 89)	○	●	●	●	●
Check the idle speed. 	○	●	●	●	●
Change the gear oil.  ( p. 121)	○	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage hoses, etc.) and sleeves for cracking, tightness, and correct routing. 	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 		●	●	●	●
Check that the throttle cables are undamaged, routed without kinks, and set correctly.		●	●	●	●
Check the frame.  ( p. 78)		●	●	●	
Check the link fork.  ( p. 78)		●	●	●	
Check the fork bearing for play. 			●	●	
Check the heim joint for play.			●	●	
Check the shock absorber linkage. 		●	●	●	
Check the tire condition. ( p. 100)		●	●	●	●
Check tire pressure. ( p. 100)	○	●	●	●	●
Check the wheel bearing for play. 		●	●	●	
Check the wheel hubs. 		●	●	●	
Check the rim run-out. 	○	●	●	●	

9 SERVICE SCHEDULE

	every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	After 15 operating hours / Every 15 operating hours				
	After 1 operating hour				
Check the spoke tension. (📖 p. 101)	○	●	●	●	
Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 76)	○	●	●	●	
Check the chain tension. (📖 p. 74)	○	●	●	●	●
Grease all moving parts (e.g., hand lever, chain,...) and check for smooth operation. 🛠️	○	●	●	●	●
Check the basic throttle valve position sensor setting. 🛠️		○	●	●	●
Change the spark plug and spark plug connector. 🛠️			●	●	●
Change the fuel filter. 🛠️				●	●
Check the clutch. 🛠️			●	●	●
Clean the air filter and air filter box. 🛠️ (📖 p. 67)			●	●	●
Change the glass fiber yarn filling of the main silencer. 🛠️ (📖 p. 69)				●	●
Service the fork. 🛠️				●	●
Perform the shock absorber service. 🛠️				●	●
Check all screws, nuts, and hose clips for a tight fit. 🛠️	○	●	●	●	●
Change the fuel screen. 🛠️ (📖 p. 120)	○	●	●	●	●
Check the fuel pressure. 🛠️	○		●	●	●
Check the antifreeze and coolant level. (📖 p. 108)			●	●	
Check the coolant level. (📖 p. 109)	○	●			
Change the coolant. 🛠️ (📖 p. 112)					●
Check steering head bearing play. (📖 p. 57)	○	●			
Lubricate the steering head bearing. 🛠️ (📖 p. 59)				●	●
Check the electric starter drive. 🛠️				●	●
Check the reed valve housing, reed valve and intake flange. 🛠️			●	●	●
Perform minor engine service. (Change the piston. Check the cylinder head. Change the O-rings of the manifold and the cylinder head. Check the cylinder and Z dimension. Clean the exhaust control. Check the exhaust control for function and smooth operation. Program the exhaust control end positions. Check and clean the pressure sensor flange.) 🛠️			●	●	●
Perform major engine service including removing and installing the engine. (Change the connecting rod, conrod bearing, and crank pin. Check the transmission and the shift mechanism. Change all the engine bearings, the radial shaft seal rings and the seals.) 🛠️				●	●
Final check: check vehicle for operating safety. 🛠️	○	●	●	●	●
Take a test ride. 🛠️	○	●	●	●	●
Read out the fault memory after the test ride using the Husqvarna Motorcycles diagnostics tool. 🛠️	○	●	●	●	●
Make a service entry in Husqvarna Motorcycles Dealer.net . 🛠️	○	●	●	●	●


- One-time interval
- Periodic interval

10.1 Checking the basic chassis setting with the rider's weight



Info

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

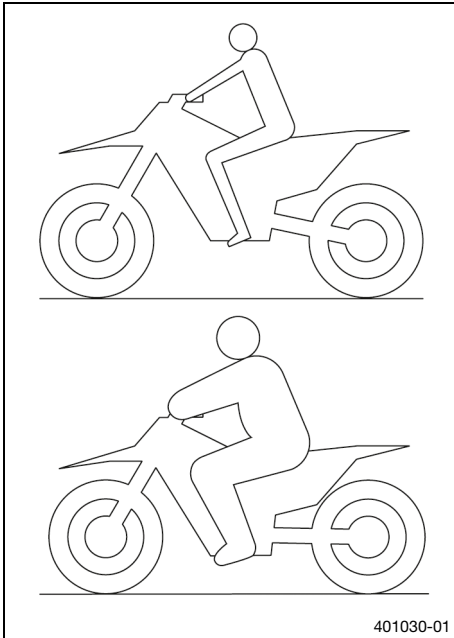

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- In the delivered condition, Husqvarna motorcycles are adjusted for an average rider's weight (with full protective clothing).

Guideline

Standard rider weight	75 ... 85 kg (165 ... 187 lb.)
-----------------------	--------------------------------

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring pretension of the shock absorber, but in the case of large weight differences, the springs must be replaced.



10.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression adjuster has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression adjuster has an effect, for example, when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, modifications in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.3 Adjusting the low-speed compression damping of the shock absorber



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.


The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Info

The effect of the low-speed compression adjuster can be seen in slow to normal compression of the shock absorber.

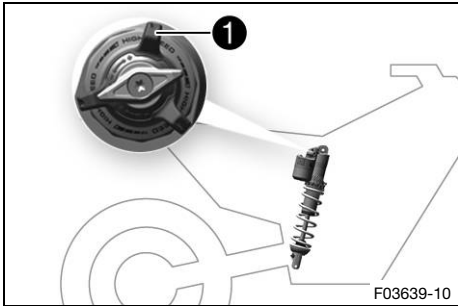

Preparatory work

- Remove the right side panel. (📖 p. 51)

Main work

- Turn adjuster ① clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Lowspeed compression damping (TC 250)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Lowspeed compression damping (TX 300)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

Finishing work

- Install the right side panel. (📖 p. 52)

10.4 Adjusting the high-speed compression damping of the shock absorber

Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

Info


The effect of the high speed compression adjuster can be seen in the fast compression of the shock absorber.

Preparatory work

- Remove the right side panel. (📖 p. 51)

Main work

- Turn adjuster ① clockwise all the way to the stop.
- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

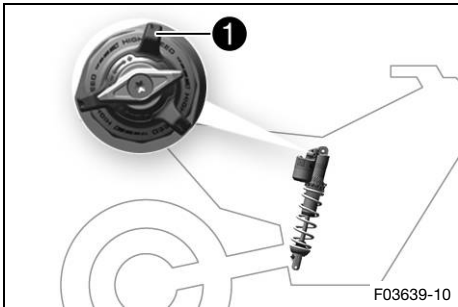

Guideline

Highspeed compression damping (TC 250)	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Highspeed compression damping (TX 300)	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.


Finishing work

- Install the right side panel. (📖 p. 52)



10.5 Adjusting the rebound damping of the shock absorber

! Caution
Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.
The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

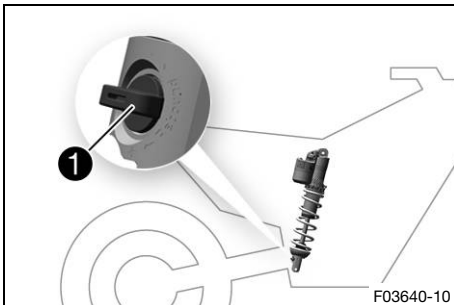

- Turn adjuster **1** clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.


Guideline

Rebound damping (TC 250)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Rebound damping (TX 300)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

i Info
Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



10.6 Measuring the dimension of the rear wheel unloaded

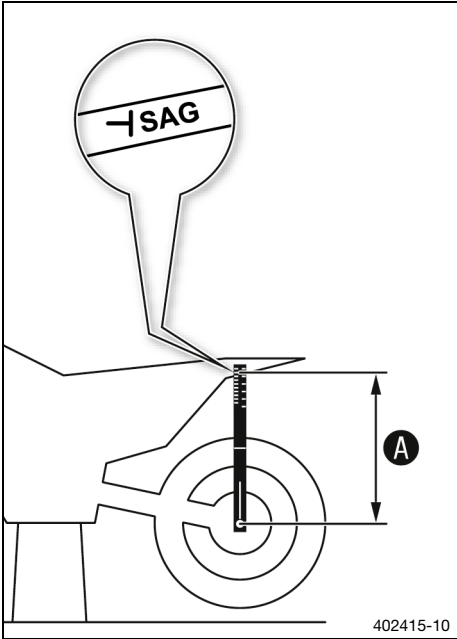

- Preparatory work**
- Raise the motorcycle with a lift stand. (📖 p. 48)


- Main work**
- Position the sag gage in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag gage (00029090200)

- Note the value as dimension **A**.

- Finishing work**
- Remove the motorcycle from the lift stand. (📖 p. 48)

10.7 Checking the static sag of the shock absorber

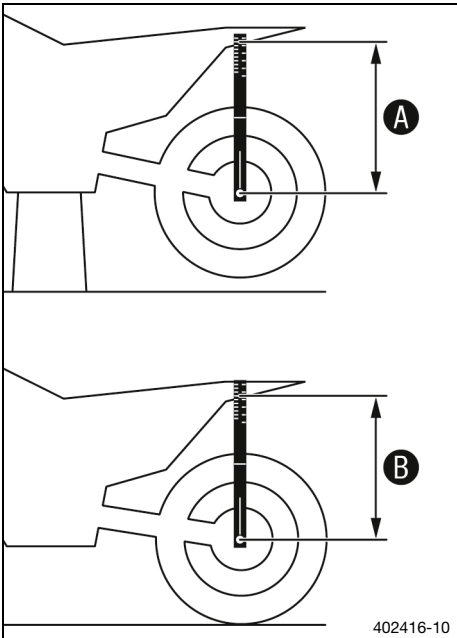

- Measure dimension **A** of rear wheel unloaded. (📖 p. 38)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **B**.

Info
The static sag is the difference between measurements **A** and **B**.


- Check the static sag.

Static sag (TC 250)	35 mm (1.38 in)
---------------------	-----------------

Static sag (TC 250)	35 mm (1.38 in)
---------------------	-----------------

- » If the static sag is less or more than the specified value:
- Adjust the spring preload of the shock absorber. (📖 p. 39)

10.8 Checking the riding sag of the shock absorber

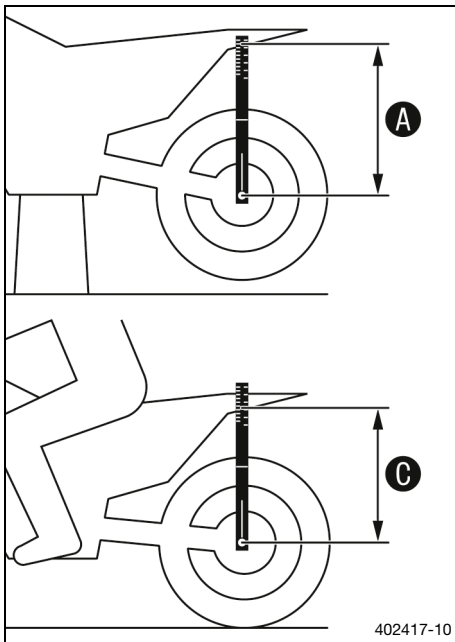

- Measure dimension **A** of rear wheel unloaded. (📖 p. 38)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
 - ✓ The rear wheel suspension levels out.
- Another person again measures the distance between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **C**.



Info

The riding sag is the difference between measurements **A** and **C**.

- Check riding sag.

Guideline

Riding sag (TC 250)	105 mm (4.13 in)
Riding sag	100 mm (3.94 in)

- » If the riding sag differs from the specified measurement:
 - Adjust the riding sag. 🛠️ (📖 p. 40)



10.9 Adjusting the spring preload of the shock absorber 🛠️



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)




Info

Before changing the spring preload, make a note of the present setting, e.g., by measuring the spring length.

Preparatory work

- Remove the right side panel. (📖 p. 51)
- Remove the frame protector. (📖 p. 52)
- Remove the main silencer. (📖 p. 68)
- Raise the motorcycle with a lift stand. (📖 p. 48)
- Remove the shock absorber. 🛠️ (📖 p. 61)
- After removing the shock absorber, clean it thoroughly.

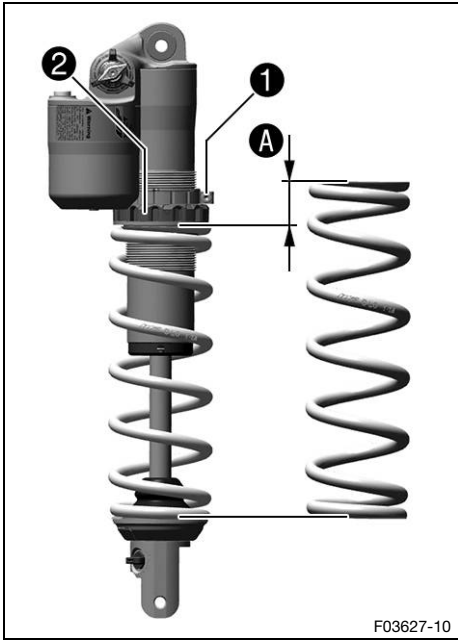

Main work

- Loosen screw 1.
- Turn adjusting ring 2 until the spring is no longer under tension.

Hook wrench (90129051000)

Info
If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

- Measure the total spring length while the spring is not under tension.
- Tension the spring by turning adjusting ring 2 to specified dimension A.

Guideline

Spring preload (TC 250)	8 mm (0.31 in)
Spring preload (TX 300)	8 mm (0.31 in)

Info
Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

- Tighten bolt 1.

Guideline

Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
--------------------------------------	----	-------------------


Finishing work

- Install the shock absorber. (p. 62)
- Install the frame protector. (p. 52)
- Install the right side panel. (p. 52)
- Check the free travel of the foot brake lever. (p. 89)
- Remove the motorcycle from the lift stand. (p. 48)

10.10 Adjusting the riding sag

Preparatory work

- Remove the right side panel. (p. 51)
- Remove the frame protector. (p. 52)
- Remove the main silencer. (p. 68)
- Raise the motorcycle with a lift stand. (p. 48)
- Remove the shock absorber. (p. 61)
- After removing the shock absorber, clean it thoroughly.

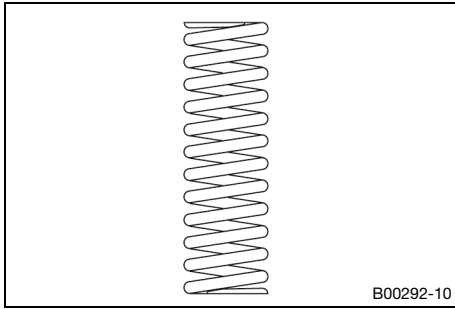

Main work

- Select and mount a suitable spring.

Guideline

Spring rate (TC 250)	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	48 N/mm (274 lb/in)
Spring rate (TX 300)	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	48 N/mm (274 lb/in)



Info


The spring rate is shown on the outside of the spring.

Finishing work

- Install the shock absorber. (🔧 p. 62)
- Install the frame protector. (🔧 p. 52)
- Install the right side panel. (🔧 p. 52)
- Check the free travel of the foot brake lever. (🔧 p. 89)
- Remove the motorcycle from the lift stand. (🔧 p. 48)
- Check the static sag of the shock absorber. (🔧 p. 38)
- Check the riding sag of the shock absorber. (🔧 p. 39)
- Adjust the rebound damping of the shock absorber. (🔧 p. 37)



10.11 Air suspension XACT (TC 250)

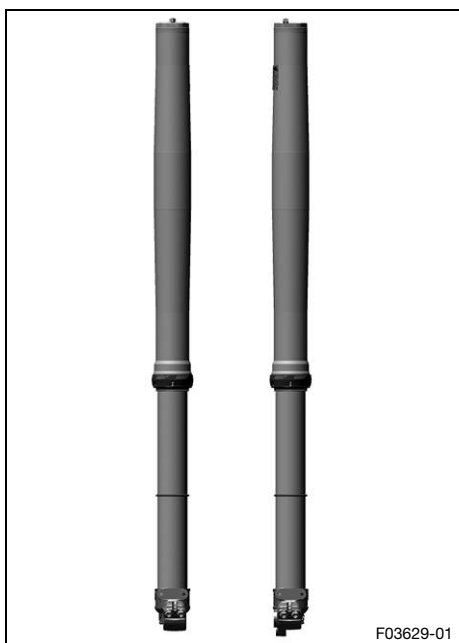

Air suspension **WP XACT** is used in the fork.

In this system, the suspension is located in the left fork leg and damping in the right fork leg.

As fork springs are no longer required, a significant weight advantage is achieved when compared to conventional forks. The response on slightly uneven surfaces is significantly improved.

In normal driving mode, suspension is provided exclusively by an air cushion. A steel spring is located in the left fork leg as an end stop.

i Info

If the fork is frequently overloaded, then the air pressure in the fork must be increased to avoid damage to the fork and frame.

The air pressure in the fork can be quickly adjusted to the rider's weight, surface conditions and the rider's preference using a fork airpump. The fork does not have to be dismantled. The time consuming mounting of harder or softer fork springs is not required.

If the air chamber loses air due to a damaged seal, the fork will still not sag. In this case the air is retained in the fork. The suspension travel is maintained as far as possible. The damping becomes harder and the riding comfort reduces.

As with a conventional fork, the damping can be adjusted in rebound and compression stages.


The rebound adjuster is located at the lower end of the right fork leg.

The compression adjuster is located at the upper end of the right fork leg.

10.12 Checking the basic setting of the fork

i Info

For various reasons, no exact riding sag can be determined for the fork.

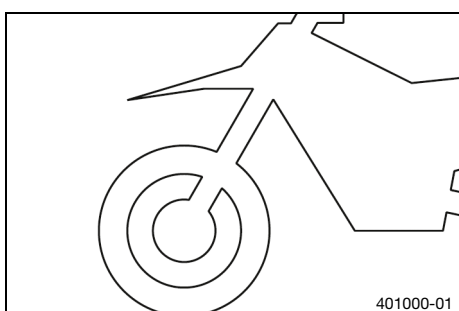

- Smaller differences in the rider's weight can be compensated for by the fork air pressure.
- However, if the fork frequently bottoms out (hard end stop on compression), the fork air pressure must be increased, within the specified values, to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

10.13 Adjusting the fork air pressure (TC 250)

**Warning**

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic.


Modifications which are not coordinated with others to the suspension setting may cause a serious deterioration in the handling characteristic and overload components.

- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.

**Info**

Check or adjust the air pressure under the same conditions at the earliest 5 minutes after switching off the engine.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

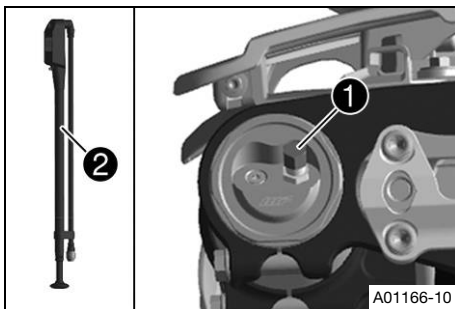**Preparatory work**

- Raise the motorcycle with a lift stand. (📖 p. 48)

Main work

- Remove protection cap ①.
- Push together fork airpump ② fully.

Fork airpump (79412966100)

**Info**

The fork airpump is included as part of the motorcycle's accessory pack.

- Connect the fork airpump to the left fork leg.
 - ✓ The fork airpump indicator switches on automatically.
 - ✓ A little air escapes from the fork leg when connecting.

**Info**

This is due to the volume of the hose and not due to a defect in the fork airpump or the fork.

Observe the accompanying instructions for Husqvarna Motorcycles technical accessories.

- Adjust the air pressure as specified.

Guideline

Air pressure	10.5 bar (152 psi)
Gradual changing of the air pressure in steps of	0.2 bar (3 psi)
Minimum air pressure	7 bar (102 psi)
Maximum air pressure	12 bar (174 psi)

**Info**

Never adjust the air pressure to a value outside the stated range.

- Disconnect the fork airpump from the left fork leg.

- ✓ When disconnecting, excess pressure will escape from the hose – the fork leg itself does not lose any air.
- ✓ The fork airpump indicator switches off automatically after 80 seconds.
- Mount the protection cap.

 **Info**


Only mount the protection cap by hand.

- Finishing work**
- Remove the motorcycle from the lift stand. (📖 p. 48)

10.14 Adjusting the compression damping of the fork

 **Info**

The hydraulic compression damping determines the fork suspension behavior.

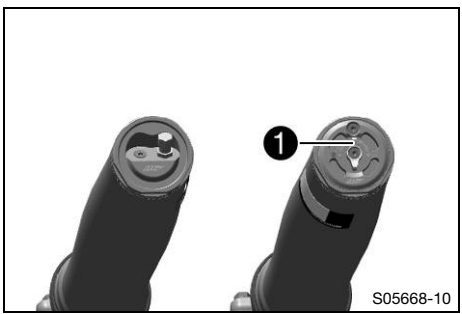

- (TC 250)**
- Turn adjuster **1** clockwise all the way to the stop.

 **Info**

Adjuster **1** is located at the upper end of the right fork leg.


- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

 **Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.

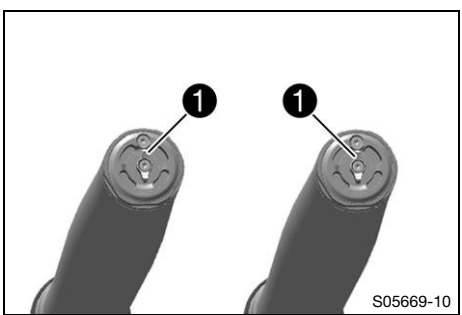

- (TX 300)**
- Turn adjusters **1** clockwise all the way to the stop.

 **Info**

Adjusters **1** are located at the top ends of the fork legs.
Make the same adjustment on both fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline


Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

i Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.



10.15 Adjusting the rebound damping of the fork

i Info
The hydraulic rebound damping determines the fork suspension behavior.

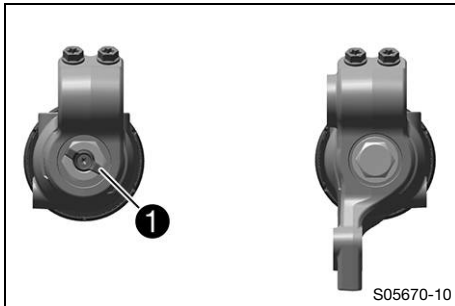

(TC 250)

- Turn adjuster **1** clockwise all the way to the stop.


i Info
Adjuster **1** is located at the lower end of the right fork leg.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping	
Comfort	17 clicks
Standard	18 clicks
Sport	7 clicks

i Info
Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.

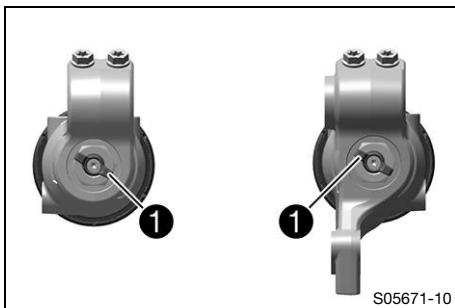

(TX 300)

- Turn adjusters **1** clockwise all the way to the stop.

i Info
Adjusters **1** are located at the bottom end of the fork legs.
Make the same adjustment on both fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.


Guideline

Rebound damping	
Comfort	23 clicks
Standard	18 clicks
Sport	13 clicks

i Info
Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



10.16 Handlebar position

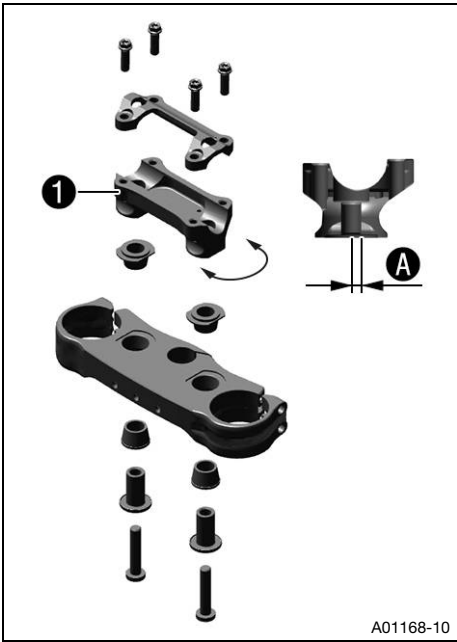

The holes on the handlebar support ① are placed at a distance of A from the center.

Hole distance A	3.5 mm (0.138 in)
-----------------	-------------------

The handlebar can be mounted in 2 different positions. This allows the handlebar to be mounted in the most comfortable position for the rider.

i

Info

In addition, the handlebar can be mounted rigidly or on a rubber bearing.


10.17 Adjusting the handlebar position

Warning

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

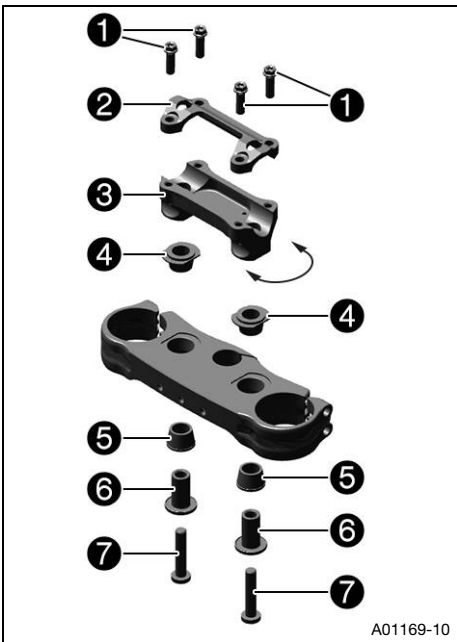

Preparatory work

- Take off the handlebar cushion.

Main work

- Remove screws ①. Take off handlebar clamp ②. Take off the handlebar and lay it to one side.

i

Info

Cover the components to protect them against damage.

Do not kink the cables and lines.

- Remove the screws ⑦ and bushing ⑥. Take off handlebar support ③.

Adjusting the handlebar position with the handlebar clamp in the rubber bearing

- Position the rubber bushings ④ and ⑤.
- Place the handlebar support in the required position.

i

Info

The handlebar support is longer and higher on one side.

- Mount and tighten the screws **7** with bushing **6**.

Guideline

Screw, handlebar support	M10	40 Nm (29.5 lbf ft) Loctite®243™
--------------------------	-----	--

- Position the handlebar.



Info

Make sure the cables and wiring are positioned correctly.

- Position handlebar clamp **2**.
- Mount screws **1**, but do not tighten yet.
- First bolt the handlebar clamp with screws **1** onto the longer, higher side of the handlebar supports so that both parts touch.
- Tighten screws **1** evenly.

Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	---------------------

Adjusting the handlebar position with the handlebar clamp

- Place the handlebar support in the required position.



Info

The handlebar support is longer and higher on one side.

- Mount and tighten the screws **7** with the bushings **8**.

Guideline

Screw, handlebar support	M10	40 Nm (29.5 lbf ft) Loctite®243™
--------------------------	-----	--

Rigid handlebar support bushing (A46001038010)

- ✓ The conical side of bushing faces downwards.

- Position the handlebar.



Info

Make sure the cables and wiring are positioned correctly.


- Position handlebar clamp **2**.
- Mount screws **1**, but do not tighten yet.
- First bolt the handlebar clamp with screws **1** onto the longer, higher side of the handlebar supports so that both parts touch.
- Tighten screws **1** evenly.

Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	---------------------

Finishing work

- Mount the handlebar cushion.

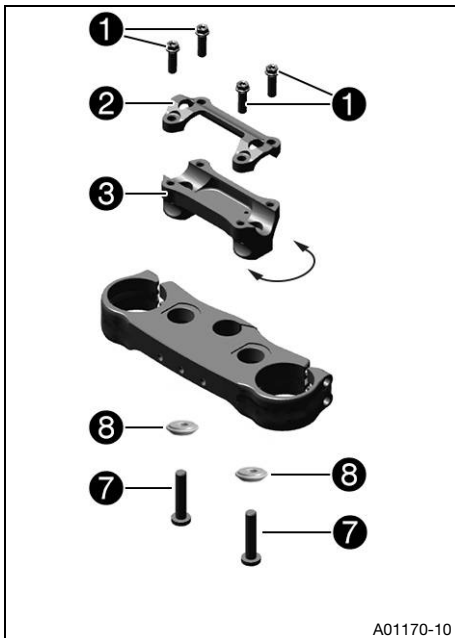

11.1 Raising the motorcycle with a lift stand


Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

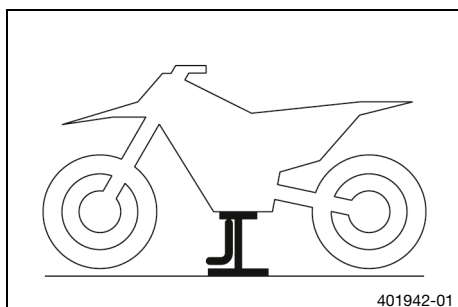

- Raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

11.2 Removing the motorcycle from the lift stand


Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

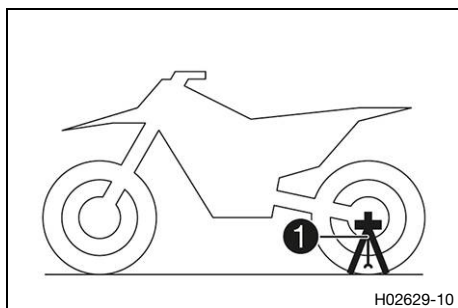

(TC 250)


- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, insert plug-in stand ① into the left side of the wheel spindle.

Plug-in stand (A46029094000)



Info

The plug-in stand is included.
Remove the plug-in stand before riding.

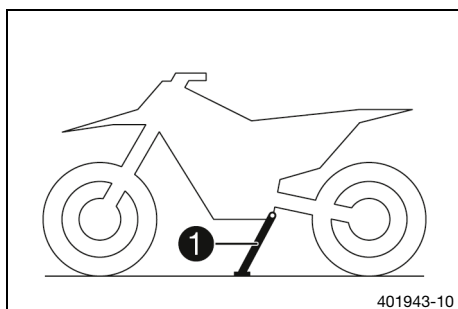

(TX 300)


- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.



Info

When you are riding, the side stand must be folded up and secured with the rubber strap.

11.3 Bleeding the fork legs

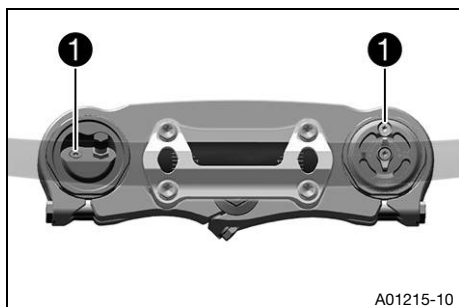

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)

Main work


- Release bleeder screws 1.
- ✓ Any excess pressure escapes from the interior of the fork.
- Tighten the bleeder screws.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)



11.4 Cleaning the dust boots of the fork legs

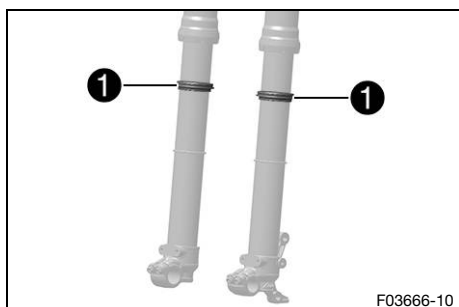

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)
- Remove the fork protector. (📖 p. 50)

Main work

- Push dust boots 1 of both fork legs downward.



Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inside fork tubes of both fork legs.

Universal oil spray (📖 p. 144)


- Press the dust boots back into the installation position.
- Remove the excess oil.

Finishing work

- Install the fork protector. (📖 p. 50)
- Remove the motorcycle from the lift stand. (📖 p. 48)




11.5 Removing the fork protector

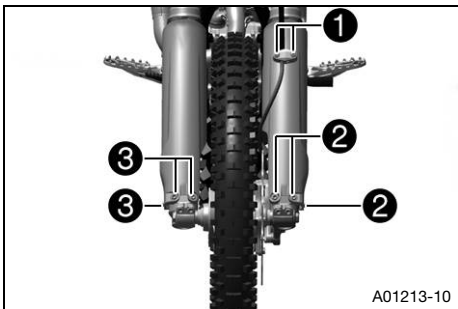

- Remove screws 1 on the left fork leg. Take off the clamp.
- Remove screws 2 on the left fork leg. Take off the left fork protector.
- Remove screws 3 on the right fork leg. Take off the right fork protector.

11.6 Installing the fork protector

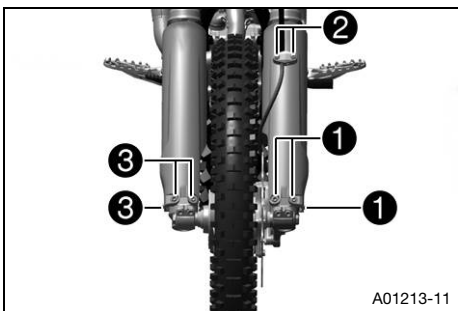

- Position the fork protector on the left fork leg. Mount and tighten screws 1.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Position the brake line and clamp. Mount and tighten screws 2.
- Position the fork protector on the right fork leg. Mount and tighten screws 3.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

11.7 Removing the engine guard (TX 300)

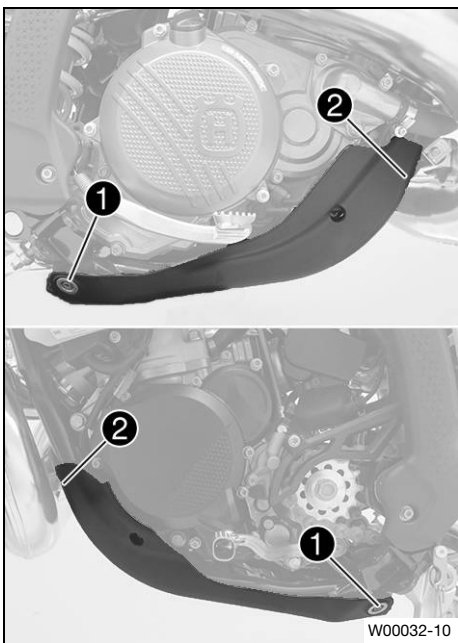

- Remove screws 1 with the bushings.
- Remove screw 2. Take off the engine guard.

11.8 Installing the engine guard (TX 300)

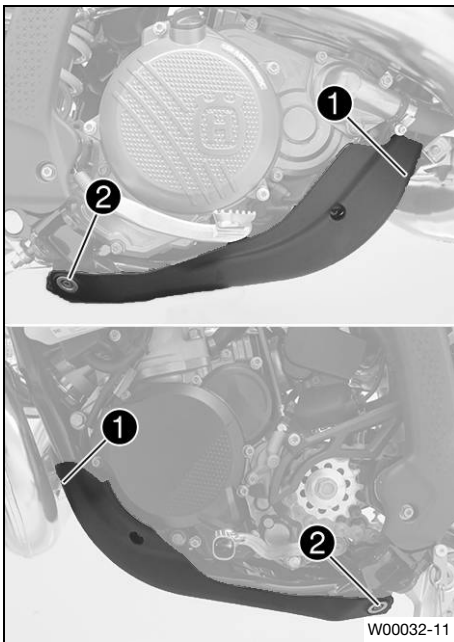

- Position the engine guard on the frame.
- Mount screws **1**, but do not tighten yet.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Mount screws **2** with bushings, but do not tighten yet.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

✓ The engine guard is directed evenly toward the front.


- Tighten all the screws of the engine guard.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------



11.9 Removing the right side panel

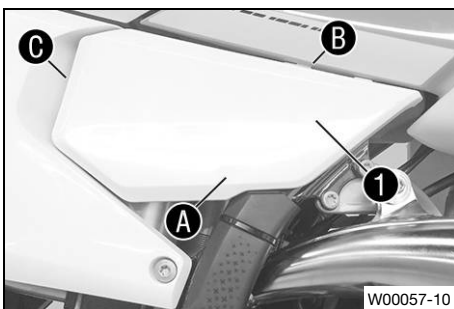

- Unhook right side panel **1** in area **A**, slide forward in area **B** and unhook and detach in area **C**.


i Info

If the side panel does not have to be completely removed, the side panel can remain hooked into area **C** and can just be folded open.

- Take the right side panel off.



11.10 Installing the right side panel

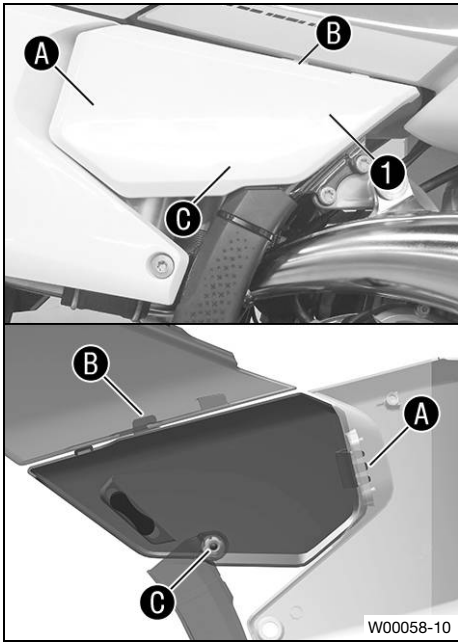

- Position right side panel 1.
- Apply some pressure to the side panel in area A and attach it. Attach it in area B and push it towards the rear.

Guideline

Hold the side cover in area A from the rear.



Info


If the side panel was only folded out, the side panel does not need to be hooked in again in area A.

- Press the side panel in area C into the rubber bushing.

Guideline

Ensure that the side panel is correctly hooked in to areas A, B, and C.

11.11 Removing the frame protector

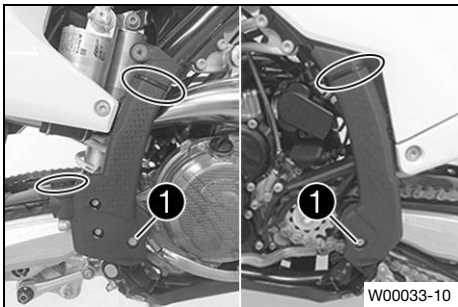


Preparatory work

- Remove the right side panel. (p. 51)

Main work

- Remove the cable ties.
- Remove screws 1 with the bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

11.12 Installing the frame protector

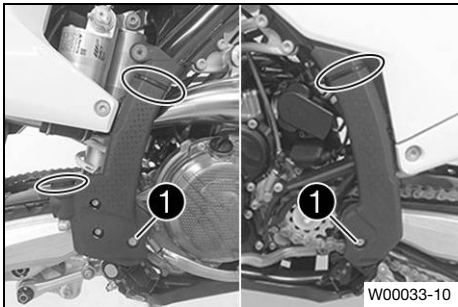

Main work

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screws 1 with the bushings and tighten.

Guideline

Screw, frame pro- tector	M5	3 Nm (2.2 lbf ft)
-----------------------------	----	-------------------

- Secure the frame protector with cable ties.

Finishing work

- Install the right side panel. (p. 52)

11.13 Removing the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. (p. 48)
- Remove the front wheel. (p. 96)



Main work

- Remove screws ① and take off the clamp.
- Remove screws ② and take off the brake caliper.
- Allow the brake caliper and brake line to hang loosely to the side.



Info

Do not actuate the hand brake lever when the front wheel is removed.

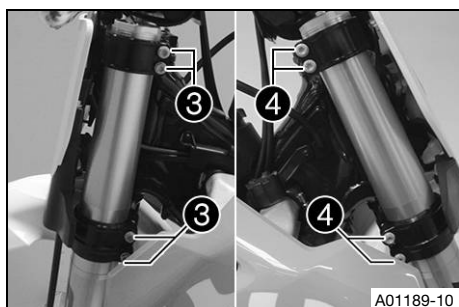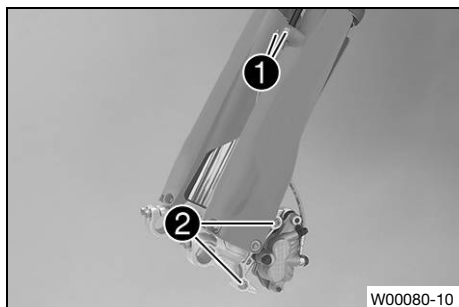

- Loosen screws ③. Remove the left fork leg.
- Loosen screws ④. Remove the right fork leg.



11.14 Installing the fork legs

Main work (TC 250)

 
- Position the fork legs.
 - ✓ Air bleeder screw ① of the right fork leg is positioned to the front.
 - ✓ Valve A of the left fork leg faces the front.



Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg.
The pressure and rebound damping is located in the right fork leg.




(TX 300)


- Position the fork legs.
 - ✓ Bleeder screws ① of both fork legs are positioned toward the front.



Info

 Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.



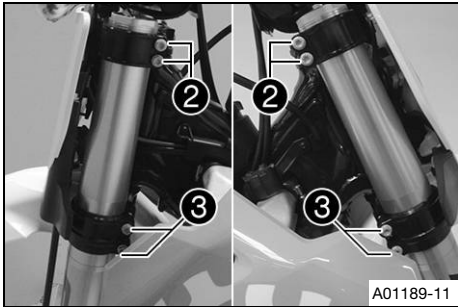

- Tighten screws 2.


Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Tighten screws 3.

Guideline

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	--------------------

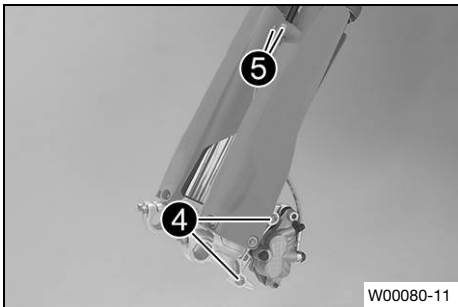

- Position the brake caliper. Mount and tighten screws 4.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Position the brake line and the clamp. Mount and tighten screws 5.


Finishing work

- Install the front wheel. 🛠️ (📖 p. 97)

11.15 Removing the lower triple clamp 🛠️

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)
- Remove the front wheel. 🛠️ (📖 p. 96)
- Remove the fork legs. 🛠️ (📖 p. 53)
- Remove the start number plate. (📖 p. 59)
- Remove the front fender. (📖 p. 59)
- Take off the handlebar cushion.

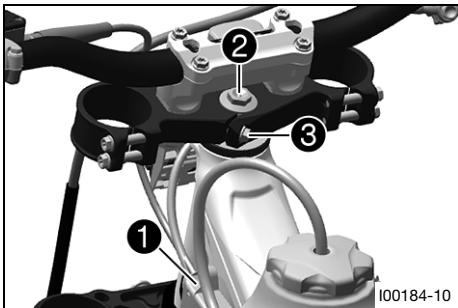


Main work

- Remove screw 1. Detach the wiring harness.
- Remove screw 2.
- Remove screw 3.
- Take off the upper triple clamp with the handlebar and place to one side.



Info


Cover the components to protect them against damage.
Do not kink the cables and lines.

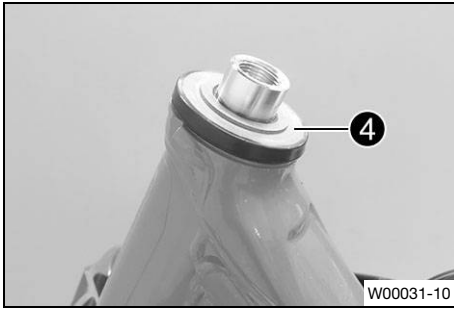

- Remove the steering head seal ④.
- Remove the lower triple clamp with steering stem.
- Remove the upper steering head bearing.



11.16 Installing the lower triple clamp

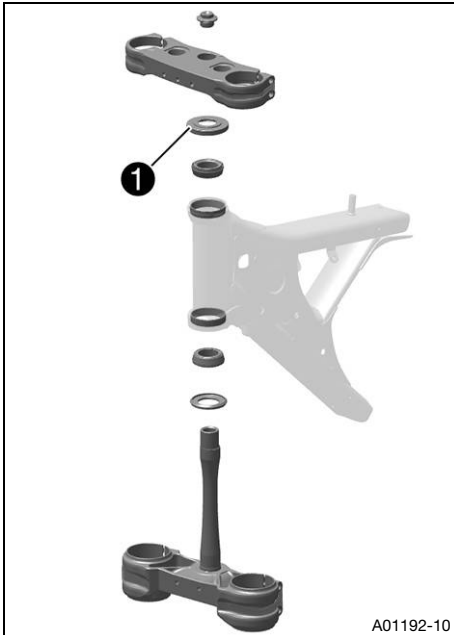


Main work

- Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease (p. 143)


- Insert the lower triple clamp with the steering stem. Mount upper steering head bearing.
- Push on steering head seal ①.

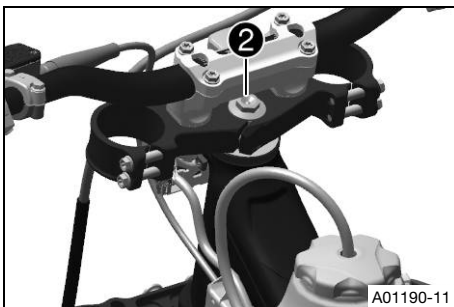

- Position the upper triple clamp and handlebar.
- Mount screw ②, but do not tighten it yet.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

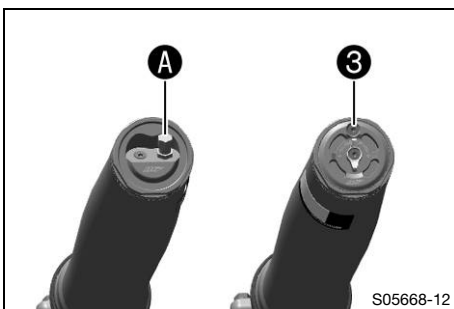

(TC 250)


- Position the fork legs.
 - ✓ Air bleeder screw ③ of the right fork leg is positioned to the front.
 - ✓ Valve A of the left fork leg faces the front.

i

Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg.
The pressure and rebound damping is located in the right fork leg.

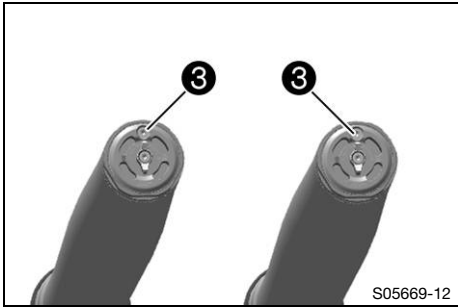


- (TX 300)
- Position the fork legs.
 - ✓ Bleeder screws 3 of the fork legs are positioned toward the front.

i


Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.


The air suspension is located in the left fork leg.
The pressure and rebound damping is located in the right fork leg.

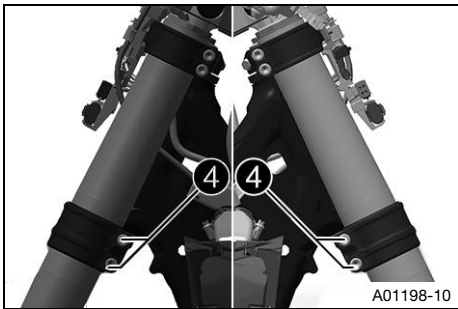


- Tighten screws 4.
- Guideline
- | | | |
|----------------------------|----|--------------------|
| Screw, bottom triple clamp | M8 | 12 Nm (8.9 lbf ft) |
|----------------------------|----|--------------------|

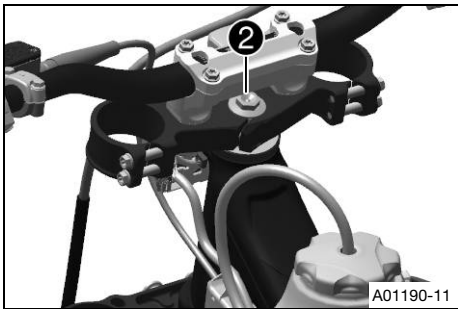

- Tighten screw 2.
- Guideline
- | | | |
|--------------------------|---------|--------------------|
| Screw, top steering head | M20x1.5 | 12 Nm (8.9 lbf ft) |
|--------------------------|---------|--------------------|

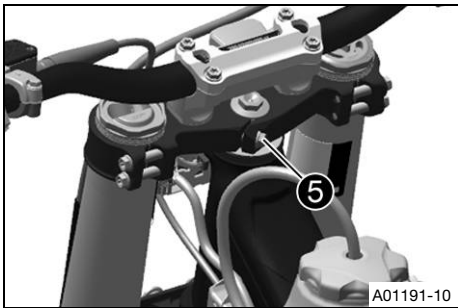

- Mount and tighten screw 5.
- Guideline
- | | | |
|--------------------------|----|--|
| Screw, top steering stem | M8 | 20 Nm (14.8 lbf ft)
Loctite®243™ |
|--------------------------|----|--|

 


- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws 6.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Secure the wiring harness with cable holder on the left. Mount and tighten screw 7.

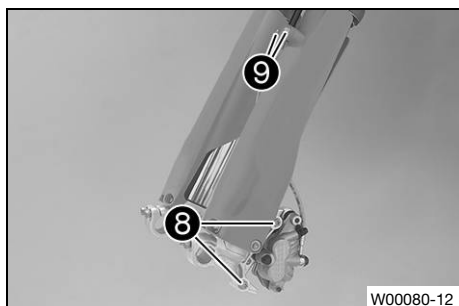

- Position the brake caliper. Mount and tighten screws 8.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Position the brake line and the clamp. Mount and tighten screws 9.

Finishing work

- Install front fender. (📖 p. 60)
- Mount the handlebar cushion.
- Install the start number plate. (📖 p. 59)
- Install the front wheel. 🛠️ (📖 p. 97)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check steering head bearing play. (📖 p. 57)
- Remove the motorcycle from the lift stand. (📖 p. 48)



11.17 Checking steering head bearing play



Warning

Danger of accidents Incorrect steering head bearing play impairs the handling characteristic and damages components.

- Correct incorrect steering head bearing play immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)




Info

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)

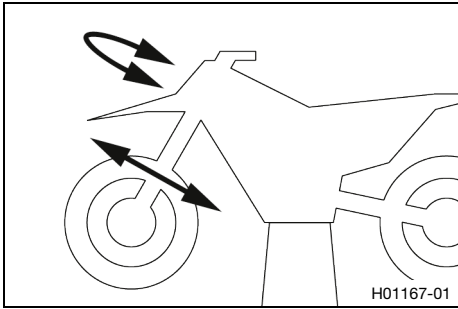

Main work

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
 - Adjust steering head bearing play. (🔧📖 p. 58)
- Move the handlebar to and fro over the entire steering range.


It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
 - Adjust steering head bearing play. (🔧📖 p. 58)
 - Check the steering head bearing and change if necessary.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)

11.18 Adjusting steering head bearing play 🔧

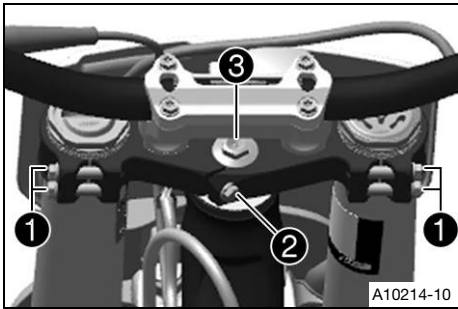

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)
- Remove the handlebar cushion.

Main work

- Loosen screws ①.
- Remove screw ②.
- Loosen and retighten screw ③.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.

- Tighten screws ①.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Mount and tighten screw ②.


Guideline

Screw, top steering stem	M8	20 Nm (14.8 lbf ft) Loctite® 243™
--------------------------	----	---

Finishing work

- Check steering head bearing play. (📖 p. 57)
- Remove the motorcycle from the lift stand. (📖 p. 48)
- Mount the handlebar cushion.

11.19 Lubricating the steering head bearing

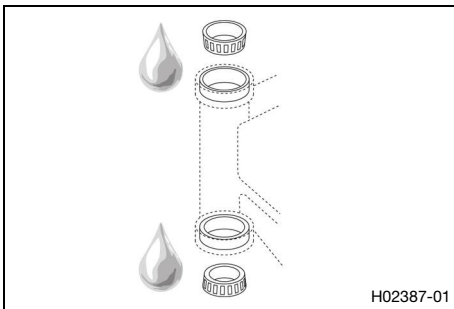


- Remove the lower triple clamp. (p. 54)
- Install the lower triple clamp. (p. 55)



Info


The steering head bearing is cleaned and lubricated in the course of removal and installation.

11.20 Removing the start number plate

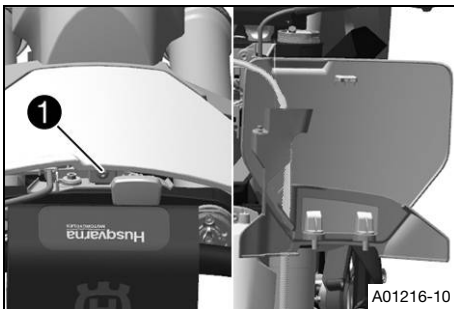

- Remove screw 1.
- Unhook the start number plate from the brake line and remove it.

11.21 Installing the start number plate

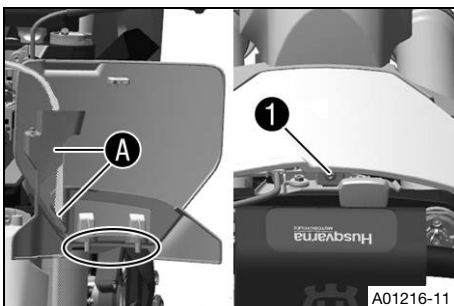


- Position the brake line in holders A on the start number plate.
- Position the start number plate. Mount and tighten screw 1.
- ✓ The holding lugs engage in the fender.

11.22 Removing the front fender


Preparatory work

- Remove the start number plate. (p. 59)

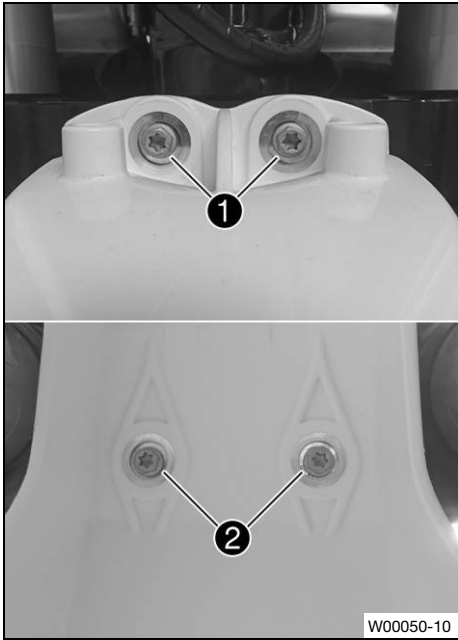

- Main work**
- Remove screws ❶ and ❷. Take off the front fender.

11.23 Installing front fender

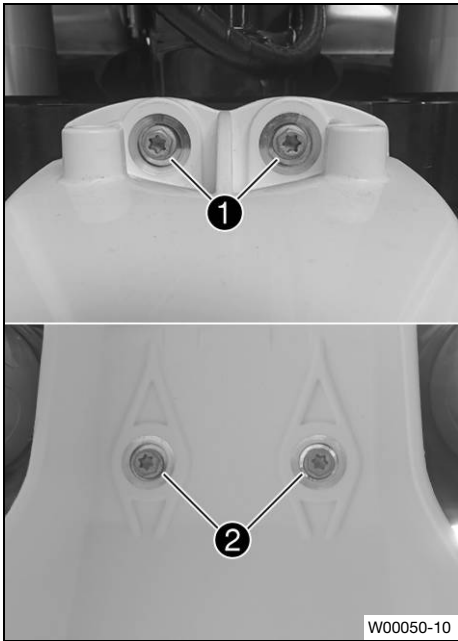

- Main work**
- Position front fender. Mount and tighten screws ❶ and ❷.
- Guideline
- | | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Finishing work**
- Install the start number plate. (📖 p. 59)


11.24 Removing the shock absorber

Preparatory work

- Remove the right side panel. (p. 51)
- Remove the frame protector. (p. 52)
- Remove the main silencer. (p. 68)
- Raise the motorcycle with a lift stand. (p. 48)


Main work

- Remove screw ①.
- Remove fitting ②.

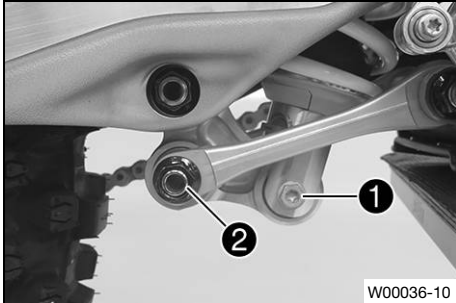


Info

Raise the swingarm slightly to be able to remove the screws more easily.

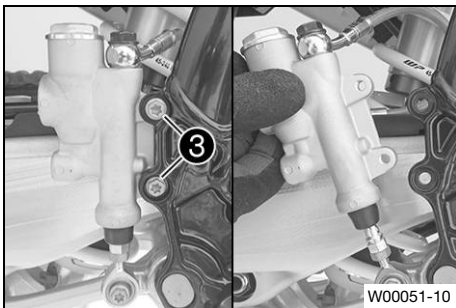

- Remove screws ③.
- Pull off foot brake cylinder from the push rod.

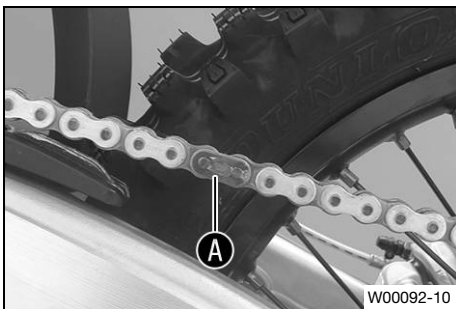


- Remove connecting link A of the chain.
- Take off the chain.




Info

Cover the components to protect them against damage.

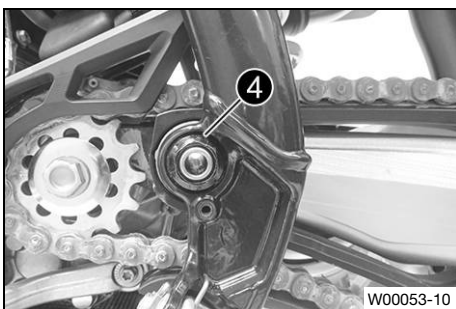


- Remove nut ④ and the swingarm pivot.
- Push the link fork back and secure it against falling over.

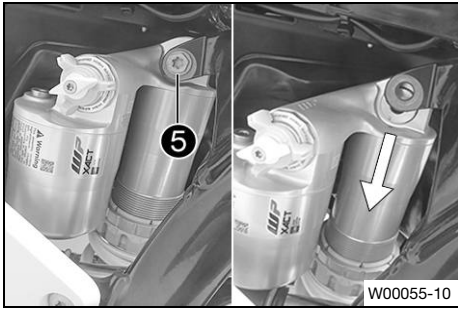


- Hold the shock absorber and remove screw 5.
- Remove the shock absorber carefully at the bottom.

11.25 Installing the shock absorber

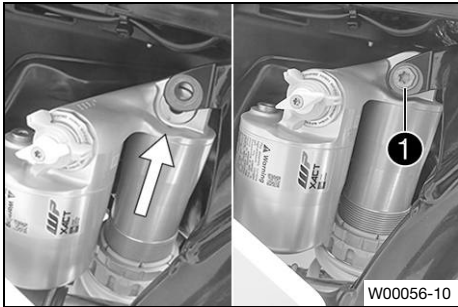

- Main work**
- Carefully position the shock absorber into the vehicle from the bottom.
 - Mount and tighten screw 1.

Guideline		
Screw, top shock absorber	M10	60 Nm (44.3 lbf ft) Loctite®2701™

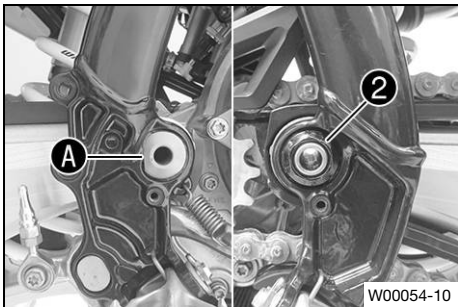


- Position the link fork and mount the swingarm pivot.

i Info Pay attention to flat area A.		
--	--	--


- Mount and tighten nut 2.

Guideline		
Nut, fork pivot	M16x1.5	100 Nm (73.8 lbf ft)

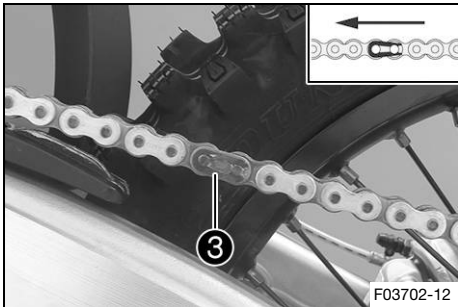

- Mount the chain.
- Connect the chain with connecting link 3.

Guideline		
The closed side of the chain joint lock must face in the direction of travel.		

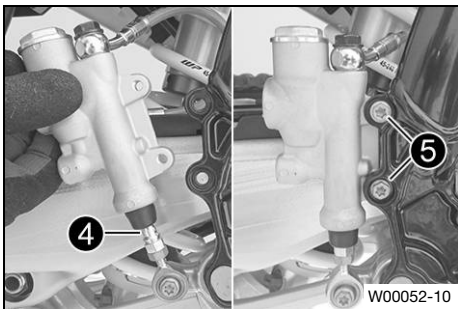


- Position the foot brake cylinder.
- ✓ Push rod 4 engages in the foot brake cylinder.

i Info Ensure that the dust boot is correctly seated.		
---	--	--

- Mount and tighten screws 5.

Guideline		
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)

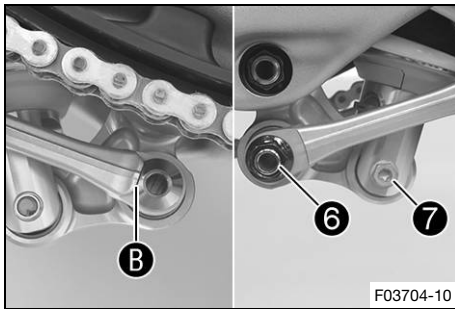

- Position the angle lever and linkage lever.
- Mount and tighten fitting **6**.

Guideline

Nut, pull rod on tri-angular lever	M16x1.5	80 Nm (59 lbf ft)
------------------------------------	---------	-------------------

i Info
Pay attention to flat area **B**.

- Mount and tighten screw **7**.

Guideline

Screw, bottom shock absorber	M10	60 Nm (44.3 lbf ft) Loctite®2701™
------------------------------	-----	---


i Info
Raise the link fork slightly to be able to mount the screw more easily.

Finishing work


- Install the frame protector. (📖 p. 52)
- Install the right side panel. (📖 p. 52)
- Check the free travel of the foot brake lever. (📖 p. 89)
- Remove the motorcycle from the lift stand. (📖 p. 48)



11.26 Removing the seat

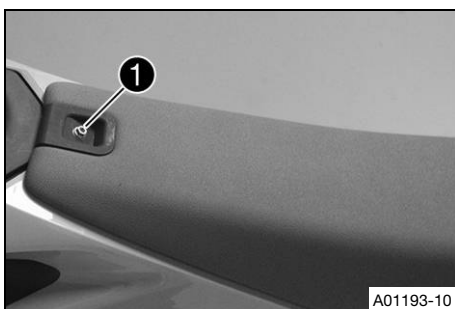


- Remove screw **1**.

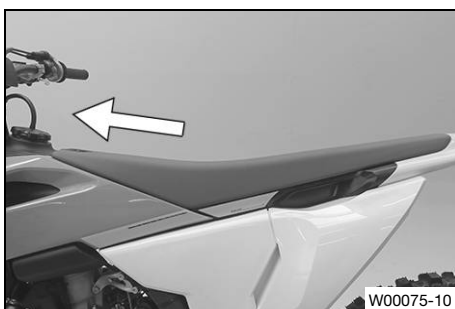


- Push the seat forward and take it off in an upward direction.



11.27 Mounting the seat

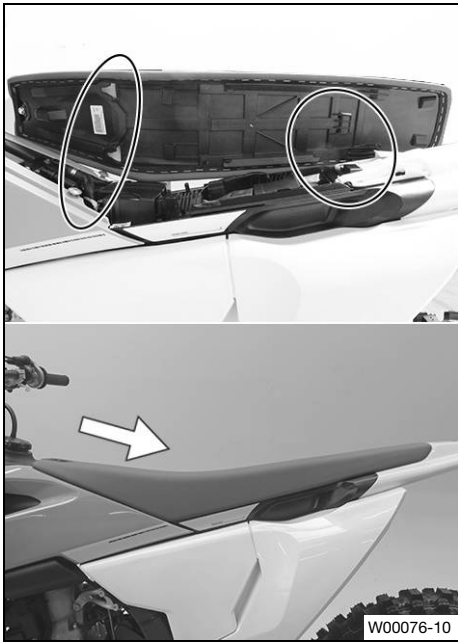

- Place the seat on the fuel tank and slide it backwards into the brackets.
- Make sure the seat is latched in place correctly.

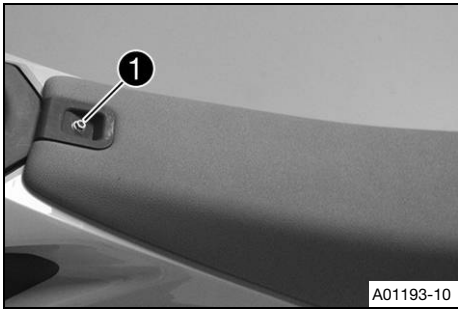

- Mount and tighten screw ❶.

Guideline

Screw, seat fixing	M6	8 Nm (5.9 lbf ft)
--------------------	----	-------------------


11.28 Removing the air filter box cover




Condition

The air filter box cover is secured.

- Remove screw ❶.

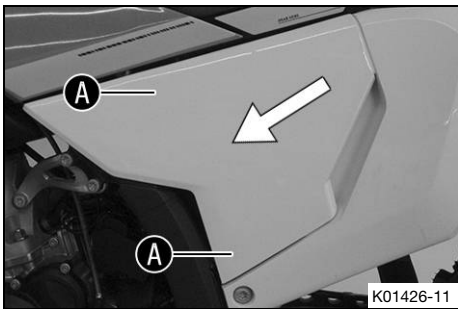

- Pull off the air filter box cover in area A and push it side-ways and forward. Take off the air filter box cover.

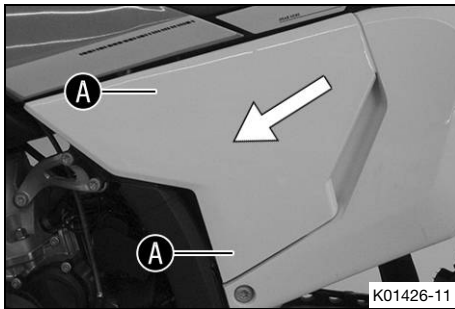


Condition

The air filter box cover is not secured.

- Pull off the air filter box cover in area **A** and push it side-ways and forward. Take off the air filter box cover.

11.29 Installing the air filter box cover

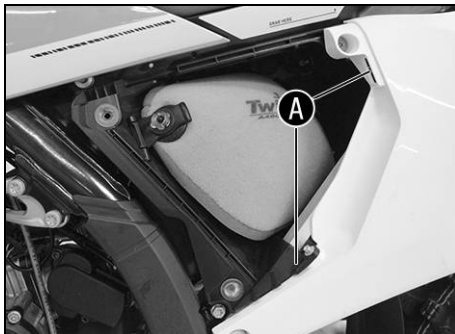

Condition



The air filter box cover is secured.

- Insert the air filter box cover in area **A** and clip it into area **B**.



Info


An air filter box cover with openings for greater airflow and a more direct response is included.

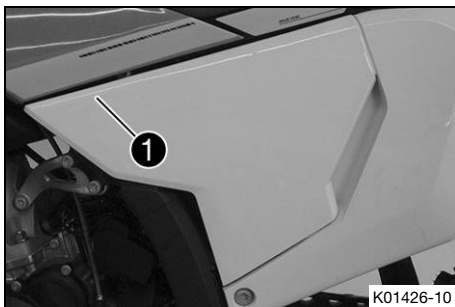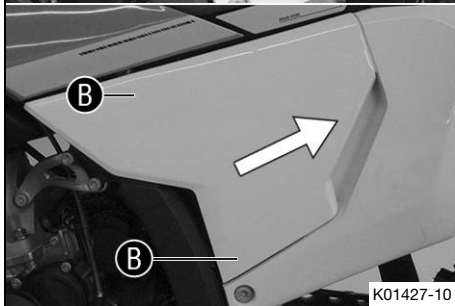

- Mount and tighten screw **1**.

Guideline

Screw, air filter box cover	EJOT PT® K60x20-Z	3 Nm (2.2 lbf ft)
-----------------------------	-----------------------------	-------------------

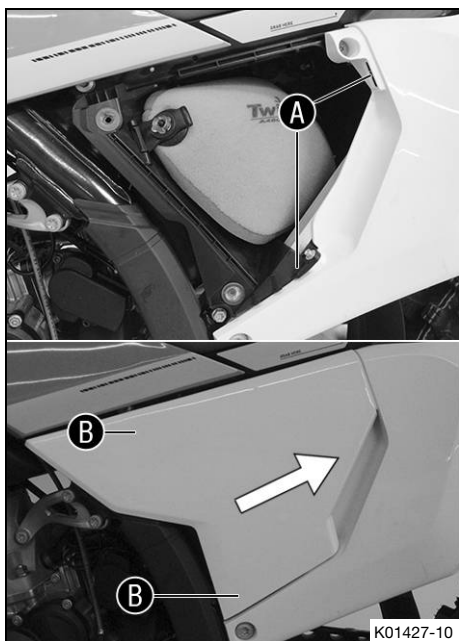

Condition

The air filter box cover is not secured.

- Insert the air filter box cover in area **A** and clip it into area **B**.



Info

An air filter box cover with openings for greater airflow and a more direct response is included.

11.30 Removing the air filter

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Only operate the vehicle if it is equipped with an air filter.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Preparatory work


- Remove the air filter box cover. (📖 p. 64)

Main work

- Detach retaining tab **1**.
- Remove air filter from air filter support.



11.31 Installing the air filter

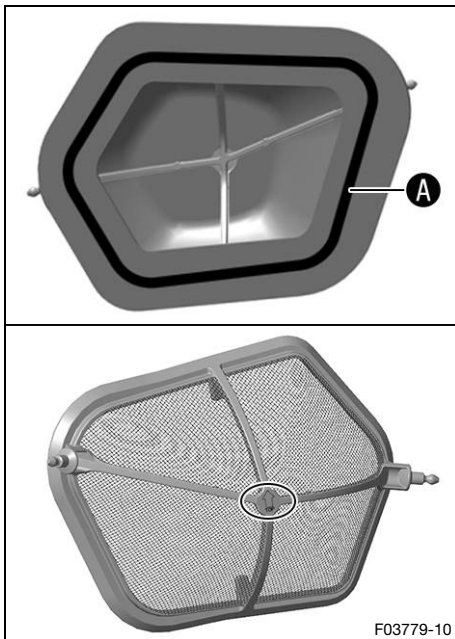

Main work

- Mount the clean air filter on the air filter support.




Info

The marking on the air filter support must face upwards.

- Grease the air filter in area **A**.

Long-life grease (p. 143)

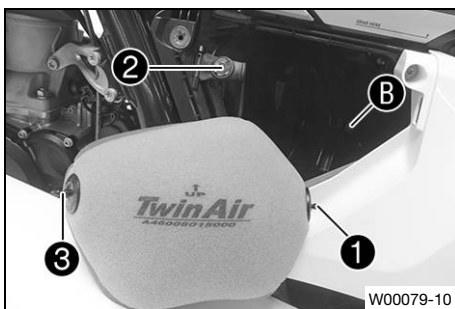

- Insert air filter and position retaining pin **1** in bushing **B**.
✓ The air filter is correctly positioned.



Info

The marking on the air filter must face upwards.

- Insert retaining tab **2**.
✓ Retaining pin **3** is secured by retaining tab **2**.



Info

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Finishing work

- Install the air filter box cover. (p. 65)



11.32 Cleaning the air filter and air filter box



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Do not clean the air filter with fuel or petroleum since these substances attack the foam.

Preparatory work

- Remove the air filter box cover. (p. 64)
- Remove the air filter. (p. 66)

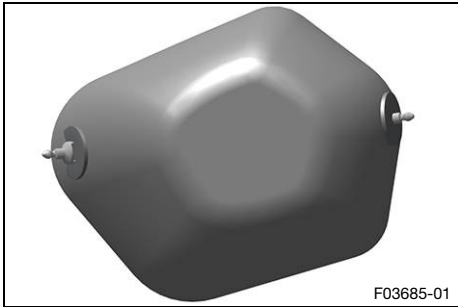

Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaner (📖 p. 143)



Info

Only press the air filter to dry it, never wring it out.

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter (📖 p. 143)

- Clean the air filter box.
- Clean the intake flange and check it for damage and tightness.

Finishing work

- Install the air filter. 🛠️ (📖 p. 67)
- Install the air filter box cover. (📖 p. 65)

11.33 Preparing the air filter box cover for securing 🛠️



Preparatory work

- Remove the air filter box cover. (📖 p. 64)

Main work

- Drill a hole at marking **A**.

Guideline

Diameter	6 mm (0.24 in)
----------	----------------

Finishing work

- Install the air filter box cover. (📖 p. 65)


11.34 Removing the main silencer



Warning


Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

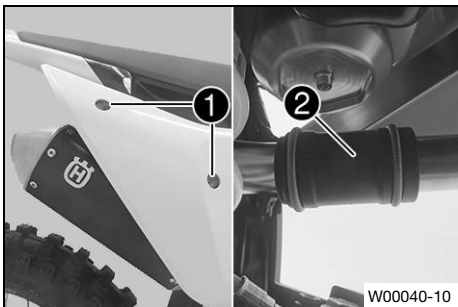

- Remove screws **1** with the washers.
- Pull off the main silencer from the manifold at sleeve **2**.

11.35 Installing the main silencer

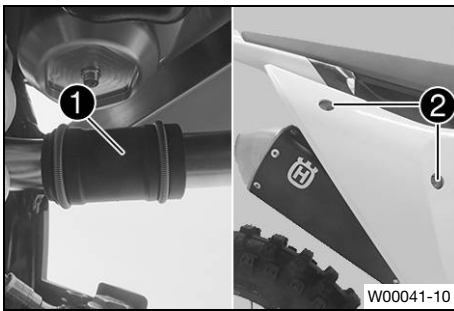

- Position the main silencer in sleeve ❶.
- Mount and tighten screws ❷ with the washers.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------



11.36 Changing the glass fiber yarn filling of the main silencer



Warning

Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.



Info

Over time, the fibers of the rock wool escape into the air, and the main silencer “burns out”. Not only is the noise level higher, but the performance characteristics change.

Preparatory work


- Remove the main silencer. (📖 p. 68)

Main work

- Remove screws ❶. Pull out inner tube ❷ with O-ring ❸.
- Pull glass fiber yarn filling ❹ from the inner tube.
- Clean the parts that need to be reinstalled and check for damage.
- Mount new glass fiber yarn filling ❹ on the inner tube.
- Push outer tube ❺ over the inner tube with the new glass fiber yarn filling and the O-ring.
- Mount and tighten all screws ❶.

Guideline

Screws on main silencer	M5	7 Nm (5.2 lbf ft)
-------------------------	----	-------------------

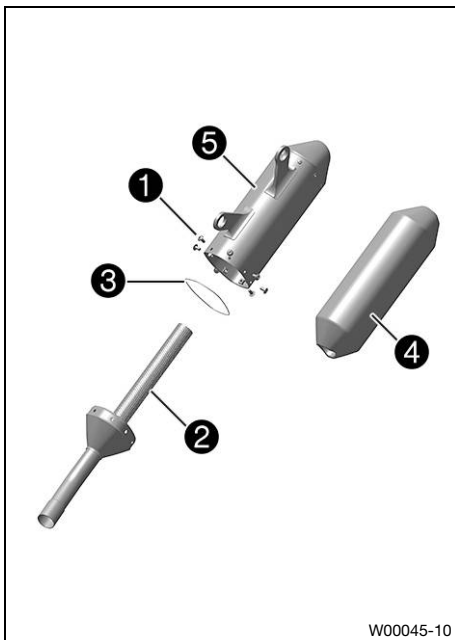

Finishing work

- Install the main silencer. (📖 p. 69)

11.37 Removing the fuel tank



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.

Preparatory work

- Remove the seat. (p. 63)
- Remove the right side panel. (p. 51)

Main work

- Unplug fuel pump connector ①.
- Clean quick release coupling ② thoroughly with compressed air.

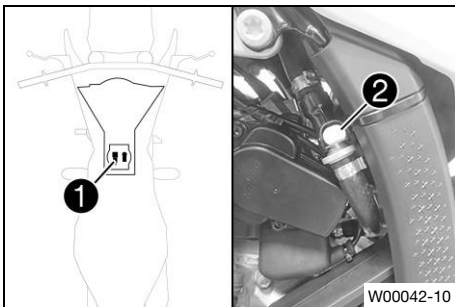

Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.




Info


Remaining fuel may flow out of the fuel hose.

- Mount wash cap set ③.

Wash cap set (81212016100)

- Pull the fuel tank breather hose off the fuel tank lid.

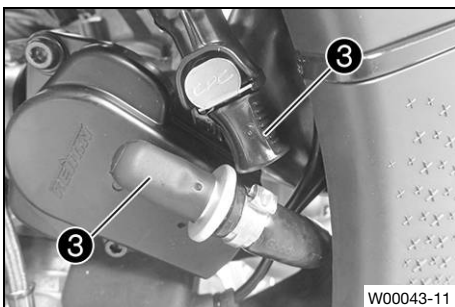

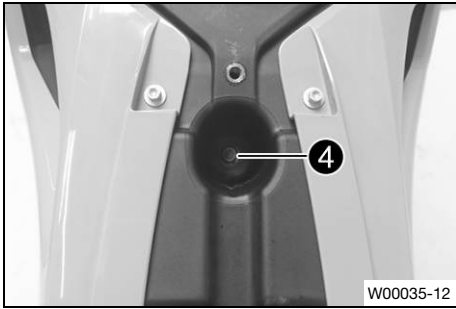


(TC 250)

- Remove screw 4 with the rubber bushing.




(TX 300)

- Remove screw 4 with the rubber bushing.

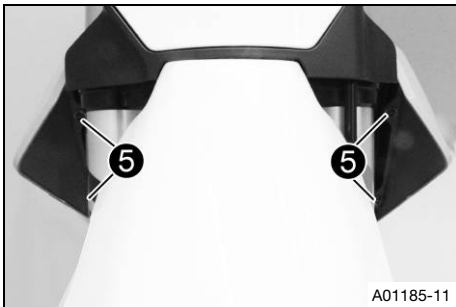

- Remove screws 5 with the collar bushings.

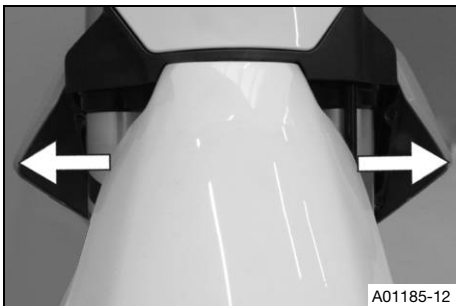

- Pull both spoilers laterally off the radiator and lift off the fuel tank.

11.38 Installing the fuel tank



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.





- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.

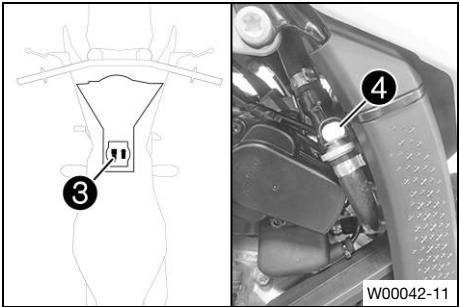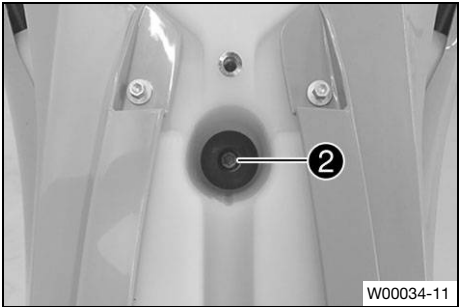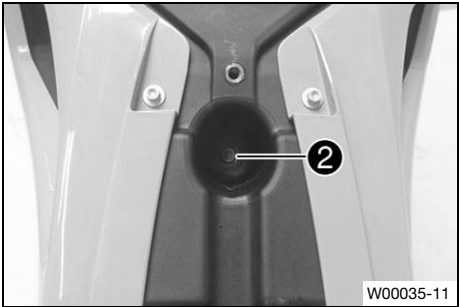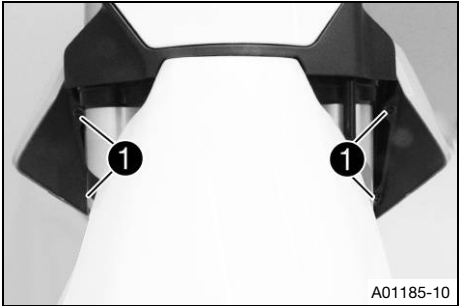

Main work

- Check the throttle cable routing. (📖 p. 78)
- Position the fuel tank and fit the two spoilers laterally to the radiator.
- Make sure that no cables or throttle cables are trapped or damaged.
- Attach the fuel tank breather hose to the fuel tank lid.
- Mount and tighten screws **1** with the collar bushings.

Guideline		
Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 lbf ft)

(TC 250)

- Mount and tighten screw **2** with the rubber bushing.
- Guideline
- | | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

(TX 300)

- Mount and tighten screw **2** with the rubber bushing.
- Guideline
- | | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Plug in fuel pump connector **3**.
- Remove the wash cap set and thoroughly clean the quick release coupling using compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-release coupling.

Silicone spray (📖 p. 143)

- Join the quick-release coupling **4** of the fuel line.



Info


Route the cable and fuel line at a safe distance from the exhaust system.

Finishing work

- Install the right side panel. (📖 p. 52)
- Mount the seat. (📖 p. 64)



11.39 Checking the chain for dirt

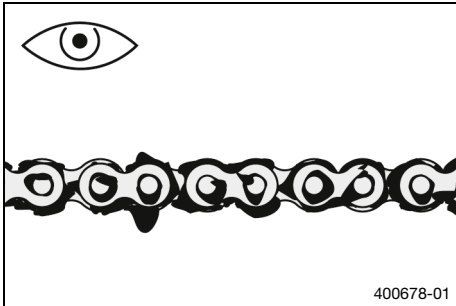

- Check the chain for heavy soiling.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 73)



11.40 Cleaning the chain



Warning

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)

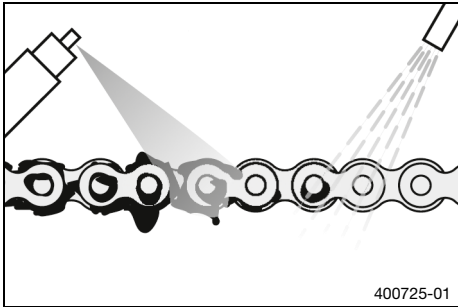

Main work

- Rinse off loose dirt with a soft jet of water.
- Remove old grease residue with chain cleaner.

Chain cleaner (📖 p. 143)

- After drying, apply chain spray.

Off-road chain spray (📖 p. 143)

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)

11.41 Checking the chain tension


Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

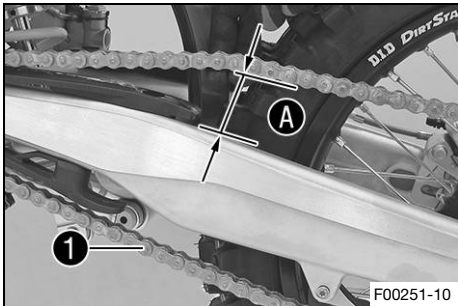

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)

Main work

- Pull the chain at the end of the chain sliding piece upward to measure chain tension **A**.

Info

Lower chain section **1** must be taut.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	55 ... 58 mm (2.17 ... 2.28 in)
---------------	---------------------------------

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (📖 p. 75)

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)

11.42 Adjusting the chain tension



Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 48)
- Check the chain tension. (📖 p. 74)

Main work

- Loosen nut ❶.
- Loosen nuts ❷.
- Adjust the chain tension by turning adjusting screws ❸ left and right.

Guideline

Chain tension	55 ... 58 mm (2.17 ... 2.28 in)
Turn adjusting screws ❸ on the left and right so that the markings on the left and right chain adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned.	

- Tighten nuts ❷.
- Make sure that chain adjusters ❹ are fitted correctly on adjusting screws ❸.
- Tighten nut ❶.

Guideline




Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters ❹ can be turned by 180°.



Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)

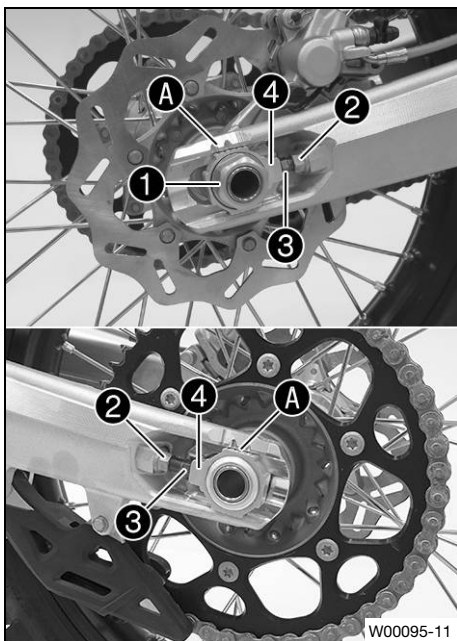

W00095-11

11.43 Checking the chain, rear sprocket, engine sprocket, and chain guide

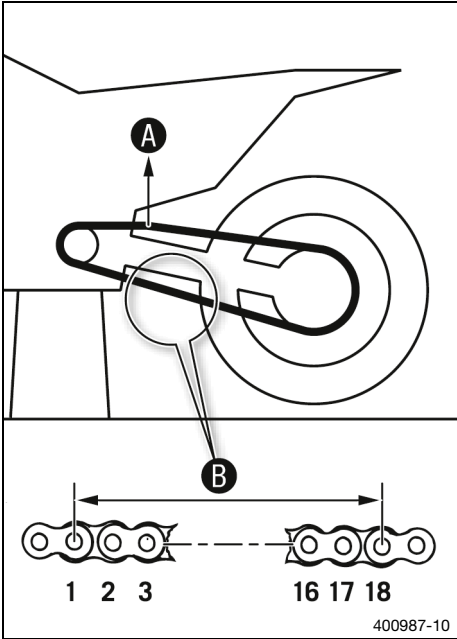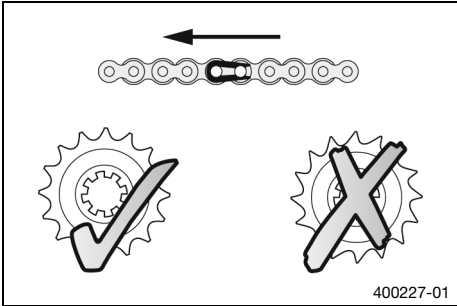

Preparatory work

- Raise the motorcycle with a lift stand. (p. 48)

Main work

- Shift the transmission into the neutral position.
- Check the chain, rear sprocket and engine sprocket for wear.
 - » If the chain, rear sprocket or engine sprocket is worn:
 - Change the drivetrain kit. 🛠️

**Info**

The engine sprocket, rear sprocket and chain should always be replaced together.

- Pull on the top section of the chain with the specified weight **A**.

Guideline	
Weight, chain wear measurement	10 ... 15 kg (22 ... 33 lb.)

- Measure distance **B** of 18 chain rollers in the lower chain section.

**Info**


Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B from 18 chain rollers at the longest chain section	272 mm (10.71 in)
--	-------------------

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 🛠️

**Info**


When a new chain is mounted, the rear sprocket and engine sprocket should also be changed.
New chains wear out faster on an old, worn rear sprocket or engine sprocket.

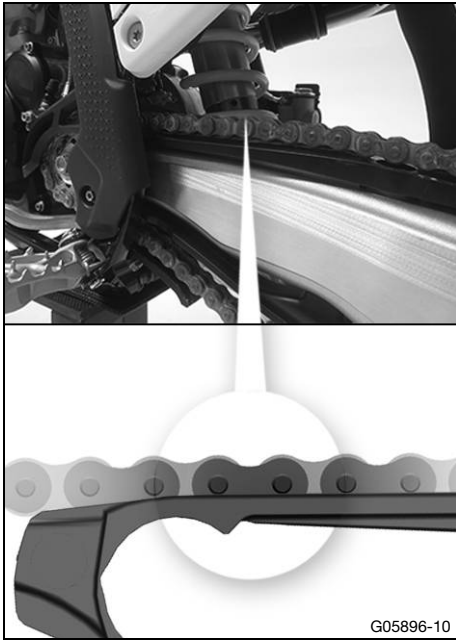

- Check the chain sliding guard for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain sliding guard:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

Guideline


Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft) Loctite®243™
----------------------------	----	--

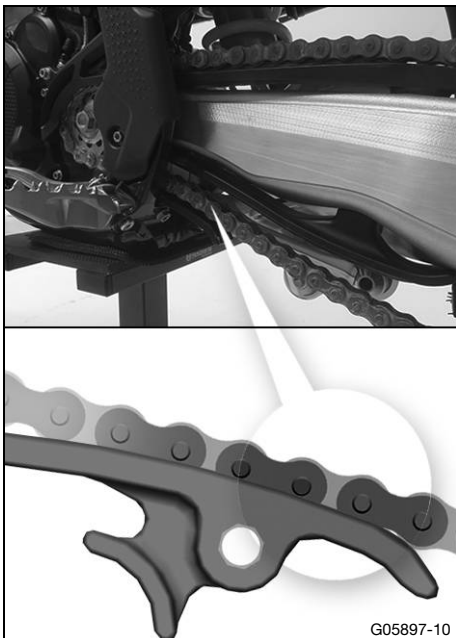

- Check the chain sliding piece for wear.
 - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
 - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
 - » If the chain sliding piece is loose:
 - Tighten the screw on the chain sliding piece.

Guideline

Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
----------------------------	----	---------------------

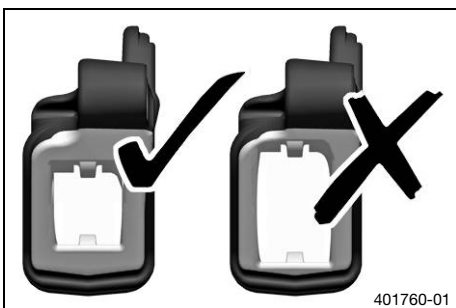

- Check the chain guide for wear.



Info

Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🛠️



- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the fitting on the chain guide.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 48)

11.44 Checking the frame 🛠️



- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
 - Change the frame. 🛠️

Guideline

Repairs on the frame are not permitted.

11.45 Checking the link fork 🛠️



- Check the link fork for damage, cracks, and deformation.
 - » If the link fork shows signs of damage, cracks, or deformation:
 - Change the link fork. 🛠️

Guideline

Repairs on the link fork are not permitted.

11.46 Checking the throttle cable routing



Warning


Danger of accidents The throttle cable can become kinked, trapped or blocked if it is not routed correctly.

If the throttle cable is kinked, trapped or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in throttle cable complies with the specification.

Preparatory work

- Remove the seat. (📖 p. 63)
- Remove the right side panel. (📖 p. 51)
- Remove the fuel tank. 🛠️ (📖 p. 70)

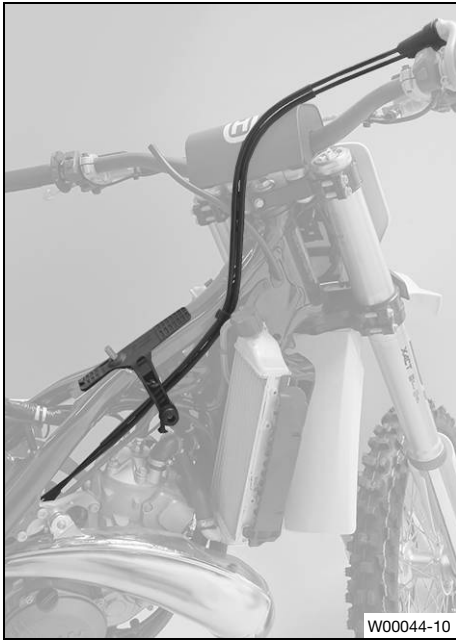

Main work

- Check the throttle cable routing.


Both throttle cables must be routed, side by side, on the back of the handlebars, above the fuel tank bracket on the right of the frame to the throttle valve body. The throttle cable must be secured on the fuel tank bracket with a rubber strap.

- » If the throttle cable is not routed as specified:
 - Correct the throttle cable routing.

Finishing work

- Install the fuel tank. (🔧 p. 71)
- Install the right side panel. (🔧 p. 52)
- Mount the seat. (🔧 p. 64)

11.47 Checking the rubber grip

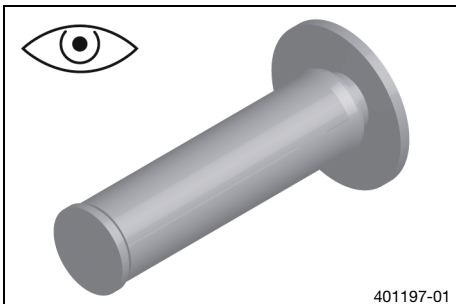

- Check the rubber grips on the handlebar for damage, wear, and looseness.



Info


The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged or worn
 - Change the rubber grip.
- Check that screw ① is firmly seated.


Guideline

Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
-------------------	----	--

Diamond ① must be located at the top.

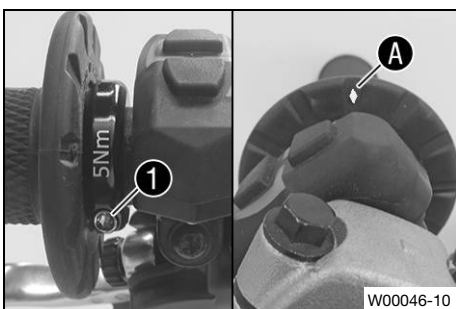

 11.48 Adjusting the basic position of the clutch lever



- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw 1.

Info

Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.

Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar. The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding.

11.49 Checking/correcting the fluid level of hydraulic clutch

Warning

 
Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

Info

The fluid level rises with increasing wear of the clutch facing discs.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.



- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Check the fluid level.

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- » If the fluid level does not meet specifications:
 - Correct the fluid level of the hydraulic clutch.
- Brake fluid DOT 4 / DOT 5.1 (p. 141)
- Position the cover with the membrane. Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.



11.50 Changing the hydraulic clutch fluid



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Note


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

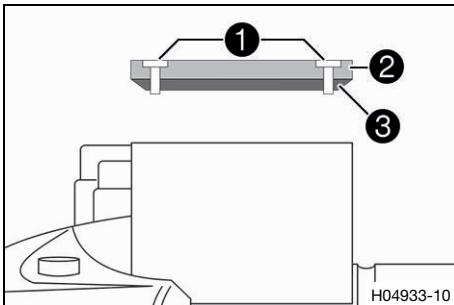

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.

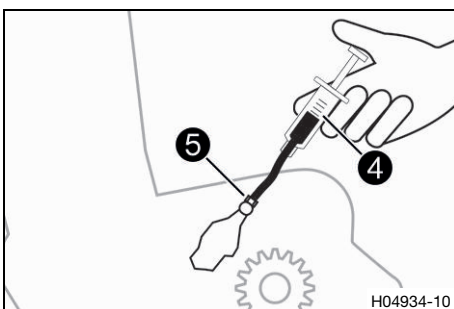


- Fill bleeding syringe ④ with the appropriate hydraulic fluid.

Syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1 (p. 141)

- Remove the protection cap.
- On the clutch slave cylinder, release bleeder screw ⑤ and mount bleeding syringe ④.

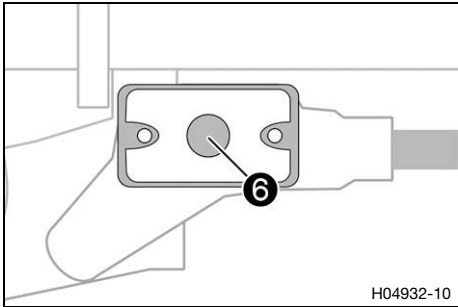

- Now press the fluid into the system until it emerges from hole 6 of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Remove the bleeding syringe. Tighten the bleeder screw.
- Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Guideline

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- Position the cover with the membrane. Mount and tighten the screws.

**Info**

Use water to immediately clean up any brake fluid that has overflowed or spilled.



12.1 Checking the free travel of the hand brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the hand brake lever, pressure builds up on the front brake circuit.

- Set the free travel on the hand brake lever in accordance with the specification.

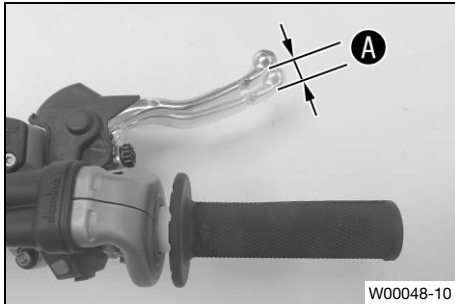


- Push the hand brake lever forward and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm } (\geq 0.12 \text{ in})$
---------------------------------	---

- » If the free travel does not match the specification:
 - Check brake system for damage.



12.2 Adjusting the basic position of the hand brake lever

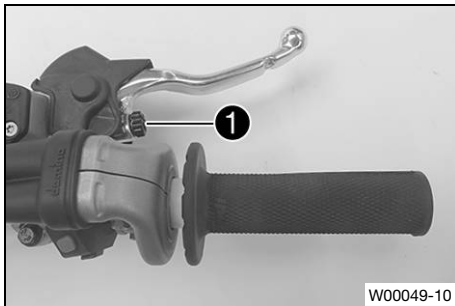

- Adjust basic position of the hand brake lever to your hand size by turning adjusting screw **1**.



Info

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.

The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.




12.3 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

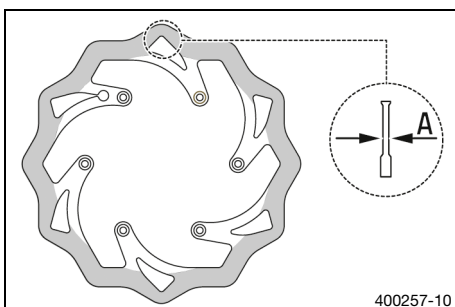

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.



Info

Wear reduces the thickness of the brake disc around the contact surface of the brake linings.

Brake discs - wear limit	
front	2.5 mm (0.098 in)

rear	3.5 mm (0.138 in)
------	-------------------

- » If the brake disc thickness is less than the specification:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️

12.4 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.


- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

Preparatory work

- Check that the brake linings of the front brake are secured. (📖 p. 86)

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in level viewer ①.
 - » If the brake fluid level has dropped below the marking Ⓐ:
 - Add front brake fluid. 🛠️ (📖 p. 85)

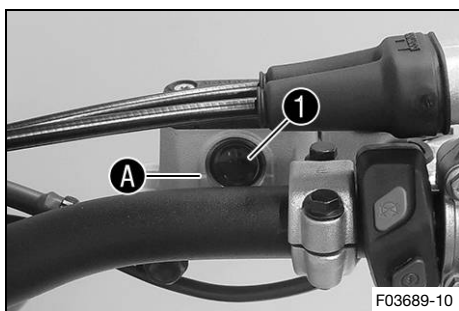

12.5 Adding front brake fluid



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake linings of the front brake are secured.
( p. 86)

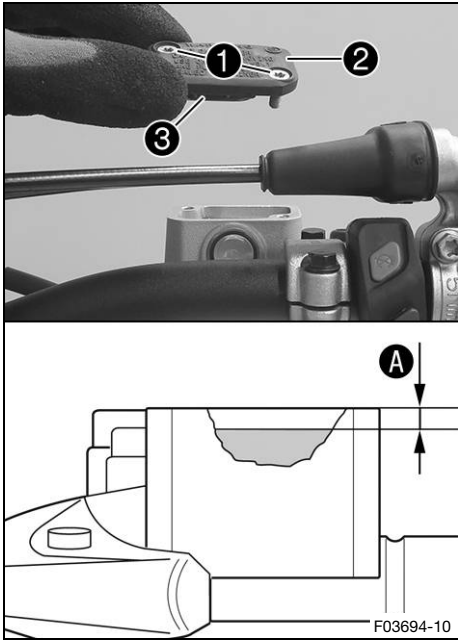

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Add brake fluid to level A.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (p. 141)

- Position cover 2 with membrane 3. Mount and tighten screws 1.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.


12.6 Checking that the brake linings of the front brake are secured



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

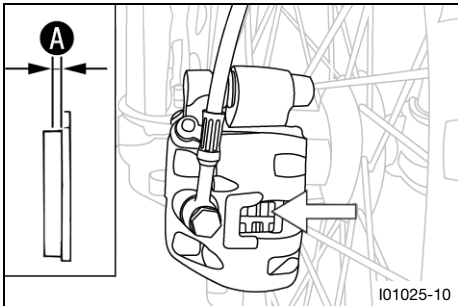

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the brake linings of the front brake. (p. 87)
- Check the brake linings for damage and cracking.
 - » If damage or wear is encountered:
 - Change the brake linings of the front brake. (p. 87)
- Check that the brake linings are secured.
 - » If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.

12.7 Changing the brake linings of the front brake ↴



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.



Note

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

12 BRAKE SYSTEM

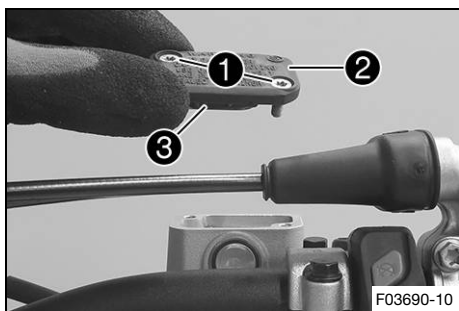

 - Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.




- Remove screws ④.
- Press back the brake linings by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper up and off the brake disc.
- Press the brake piston back into the basic position and ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.




Info

 
Do not operate the hand brake lever if the brake caliper has been removed.



 - Remove cotter pins ⑤, pull out pin ⑥, and remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.



- Check that spring plate ⑦ in the brake caliper and brake pad sliding plate ⑧ in the brake caliper bracket are seated correctly.

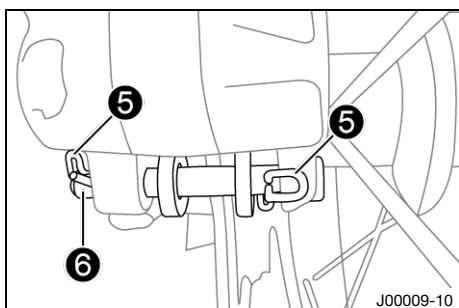

- Insert the new brake linings, insert pin ⑥, and mount cotter pins ⑤.

Guideline


Mount the outer cotter pins from the front to the rear.

Mount the inner cotter pins from the rear to the front.



Info

Always change the brake linings in pairs.
To make it easier to mount the pin, push the brake linings against the retainer spring.
Make sure the brake linings and retainer spring are seated correctly.

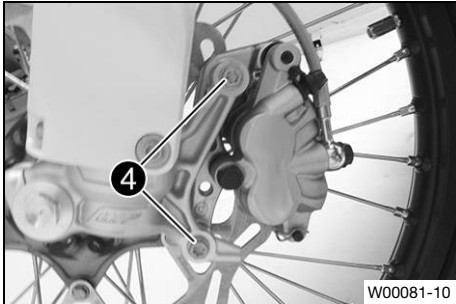


- Position the brake caliper.
- Mount and tighten screws 4.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
----------------------------	----	--

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

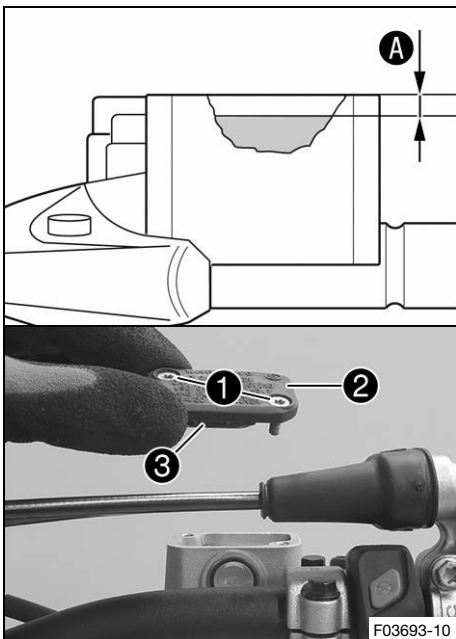

- Add brake fluid up to level A.

Guideline

Level A (brake fluid level below reservoir rim)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (p. 141)

- Position cover 2 with membrane 3.
- Mount and tighten screws 1.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

12.8 Checking the free travel of foot brake lever




Warning

Danger of accidents The brake system will fail if it overheats or is adjusted incorrectly.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.
- Ensure that the adjustment steps are performed properly. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

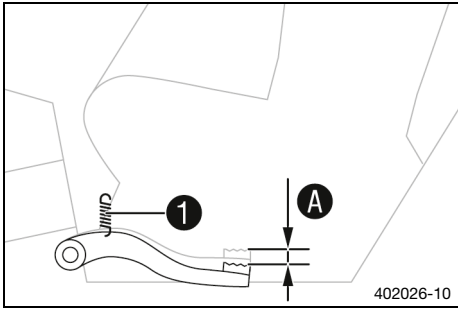

- Disconnect spring 1.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel A.

Guideline

Free travel at foot brake lever	3 ... 5 mm (0.12 ... 0.2 in)
---------------------------------	------------------------------

- » If the free travel does not meet specifications:
 - Adjust the basic position of the foot brake lever. (p. 90)
- Reconnect spring 1.


12.9 Adjusting the basic position of the foot brake lever

Warning

Danger of accidents The brake system will fail if it overheats or is adjusted incorrectly.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.
- Ensure that the adjustment steps are performed properly. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

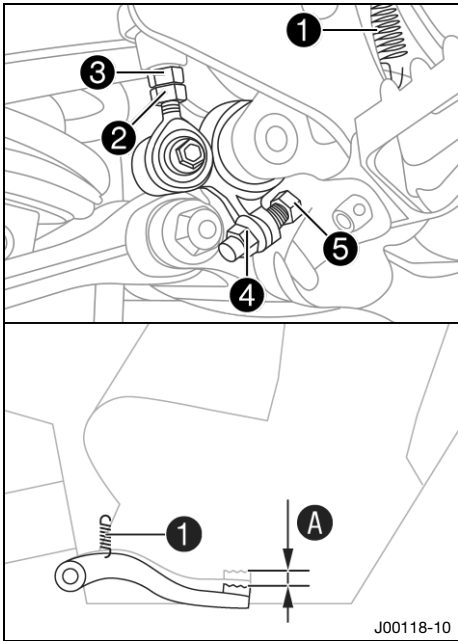

- Detach spring 1.
- Loosen nut 2 and, with push rod 3, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever to individual requirements, loosen nut 4 and turn screw 5 accordingly.

Info
The range of adjustment is limited.

- Turn push rod 3 accordingly until you have free travel A. If necessary, adjust the basic position of the foot brake lever.

Guideline

Free travel at foot brake lever	3 ... 5 mm (0.12 ... 0.2 in)
---------------------------------	------------------------------

- Hold push rod 3 and tighten nut 2.

Guideline

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

- Hold screw 5 and tighten nut 4.

Guideline

Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)
----------------------------	----	---------------------

- Attach spring 1.

12.10 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.


- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

Preparatory work

- Check that the brake linings of the rear brake are secured. (p. 92)

Main work

- Stand the vehicle upright.
- Check the brake fluid level in level viewer **1**.
 - » If the brake fluid level has dropped below the marking **A**:
 - Add rear brake fluid. (p. 91)

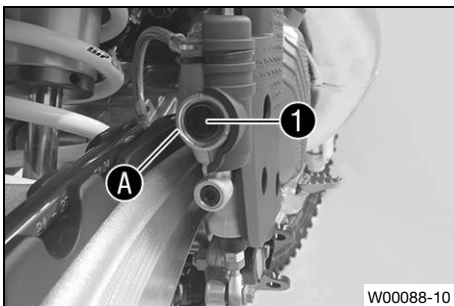

12.11 Adding rear brake fluid



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note

 
Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.



Preparatory work

- Check that the brake linings of the rear brake are secured. (p. 92)
- Remove the right side panel. (p. 51)
- Remove the frame protector. (p. 52)

Main work

- Stand the vehicle upright.
- Remove screw cap ① with membrane ② and the O-ring.
- Add brake fluid up to the marking A.

Brake fluid DOT 4 / DOT 5.1 (p. 141)

- Mount and tighten screw cap ① with membrane ② and the O-ring.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

Finishing work

- Install the frame protector. (p. 52)
- Install the right side panel. (p. 52)


12.12 Checking that the brake linings of the rear brake are secured



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

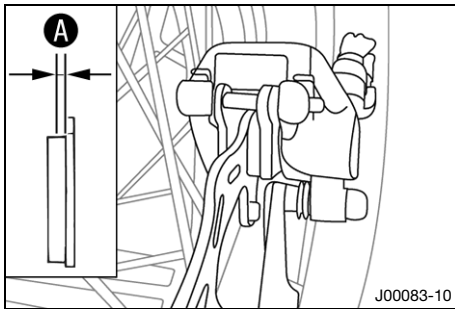

- Check the brake linings for minimum thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️ (p. 93)
- Check the brake linings for damage and cracking.
 - » If damage or wear is encountered:
 - Change the rear brake linings. 🛠️ (p. 93)
- Check that the brake linings are secured.
 - » If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.



12.13 Changing the rear brake linings 🛠️



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.



Note



Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

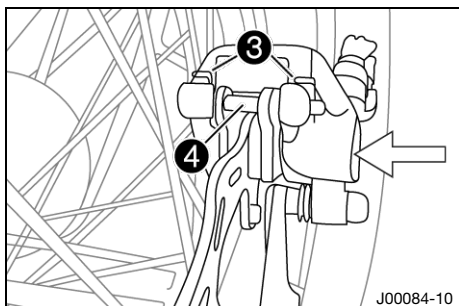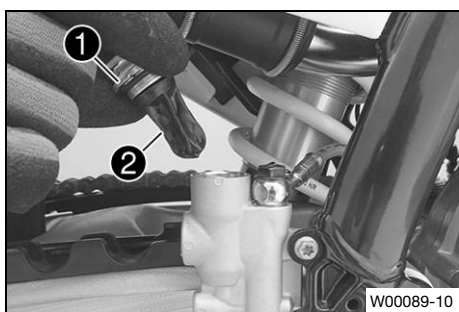

Preparatory work

- Remove the right side panel. (📖 p. 51)
- Remove the frame protector. (📖 p. 52)

Main work

- Stand the vehicle upright.
- Remove screw cap ❶ with membrane ❷ and the O-ring.


- Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.



Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove cotter pins ❸, pull out pin ❹, and remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.

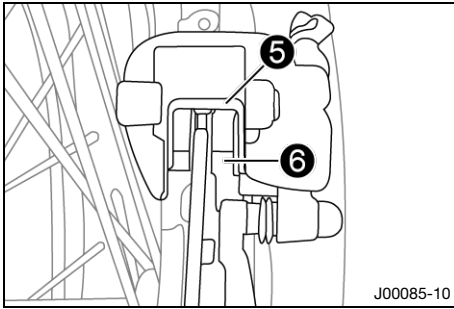


- Check that spring plate **5** in the brake caliper and brake pad sliding plate **6** in the brake caliper bracket are seated correctly.



Info

The arrow on the spring plate points in the direction of rotation of the brake disc.

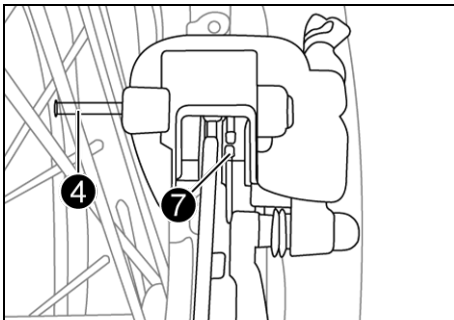


- Insert the new brake linings, insert pin **4**, and mount cotter pins **3**.




Info

Always change the brake linings in pairs.

Make sure that decoupling plate **7** is mounted on the piston side brake lining.

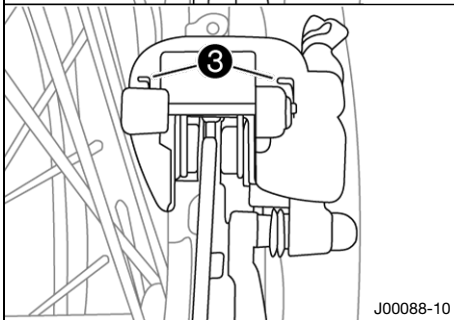

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

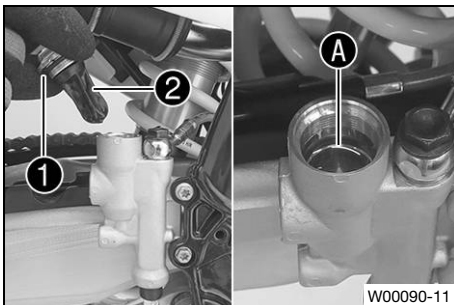

- Correct brake fluid level to marking **A**.

Brake fluid DOT 4 / DOT 5.1 (p. 141)

- Mount and tighten screw cap **1** with membrane **2** and the O-ring.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

Finishing work

- Install the frame protector. (p. 52)
- Install the right side panel. (p. 52)



13.1 Removing the front wheel

Preparatory work

- Raise the motorcycle with a lift stand. (p. 48)



Main work

- Manually press the brake caliper toward the brake disc to push back the brake pistons.




Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

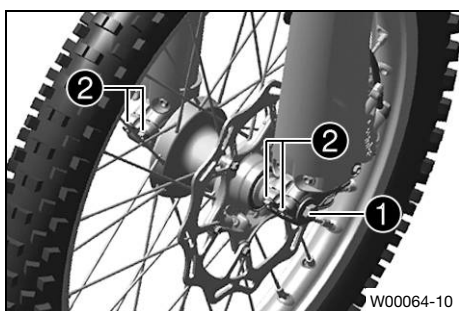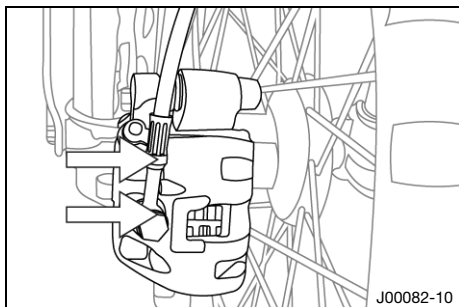

- Loosen screw ① by several rotations.
- Loosen screws ②.
- Press on screw ① to push the wheel spindle out of the axle clamp.
- Remove screw ①.

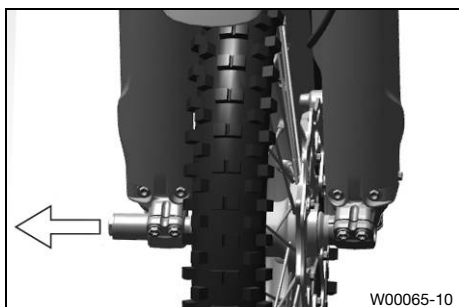

Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.



Info

Do not actuate the hand brake lever when the front wheel is removed.

- Remove spacers ③.

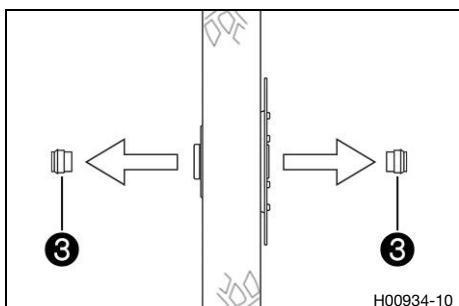


13.2 Installing the front wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

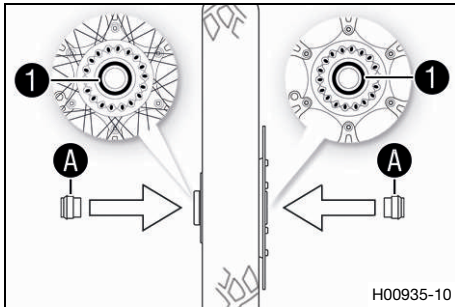

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

Long-life grease (p. 143)

- Insert the spacers.
- Clean and grease the wheel spindle.

Long-life grease (p. 143)

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake linings are correctly positioned.

- Mount and tighten screw 2.

Guideline

Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
----------------------------	---------	---------------------


- Operate the hand brake lever several times until the brake linings are seated correctly against the brake disc.
- Remove the motorcycle from the lift stand. (p. 48)
- Operate the front brake and compress the fork a few times firmly.

✓ The fork legs straighten.

- Tighten screws 3.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------

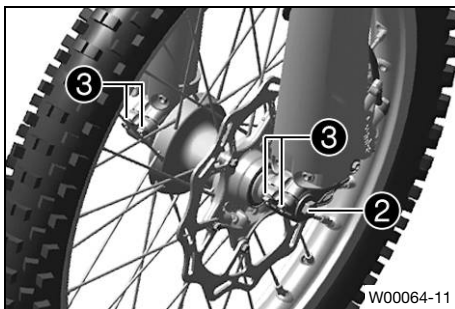


13.3 Removing the rear wheel

Preparatory work

- Raise the motorcycle with a lift stand. (p. 48)

13 WHEELS, TIRES

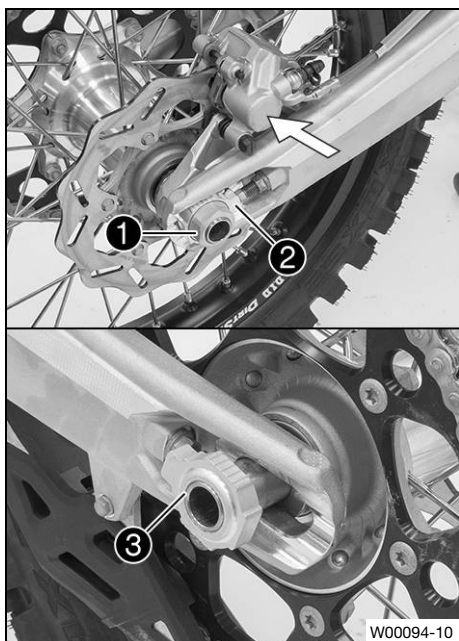

Main work

- Manually press the brake caliper toward the brake disc to push back the brake piston.



Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove nut ①.
- Take off chain adjuster ②. Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.



Info

Cover the components to protect them against damage.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

 
- Hold the rear wheel and remove the wheel spindle. Take the rear wheel out of the link fork.



Info

Do not operate the foot brake lever when the rear wheel is removed.

- Remove spacers ④.




13.4 Installing the rear wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

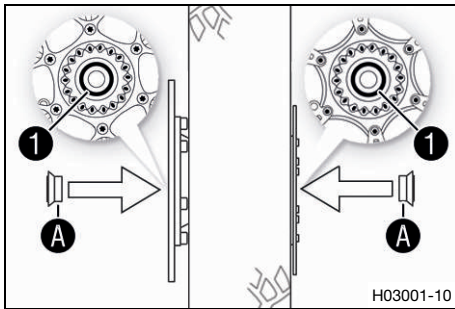

Main work


- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

Long-life grease (📖 p. 143)

- Insert the spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (📖 p. 143)

- Position rear wheel and insert wheel spindle 2.
 - ✓ The brake linings are correctly positioned.
- Mount the chain.

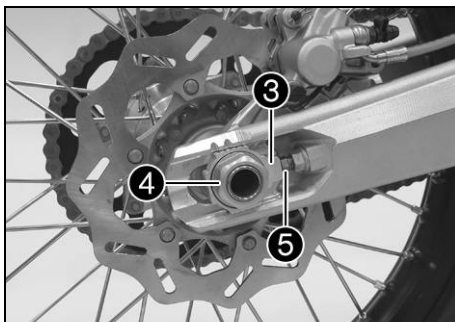

- Position chain adjuster 3. Mount nut 4, but do not tighten it yet.
- Make sure that chain adjusters 3 are fitted correctly on adjusting screws 5.
- Check the chain tension. (📖 p. 74)
- Tighten nut 4.

Guideline

Nut, wheel spindle, rear	M22x1.5	80 Nm (59 lbf ft)
--------------------------	---------	-------------------



Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters 3 can be turned by 180°.


- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

Finishing work


- Remove the motorcycle from the lift stand. (📖 p. 48)

13.5 Checking the tire condition

i Info
Only mount tires approved and/or recommended by Husqvarna Motorcycles.
Other tires could have a negative effect on handling characteristics.
The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.
The tires mounted on the front and rear wheels must have a similar profile.
Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

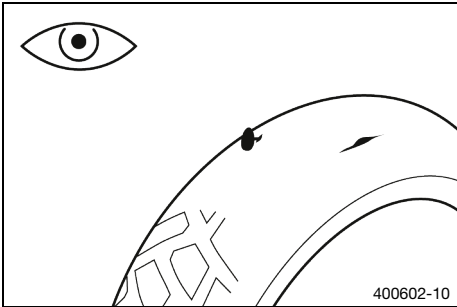

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 🛠️

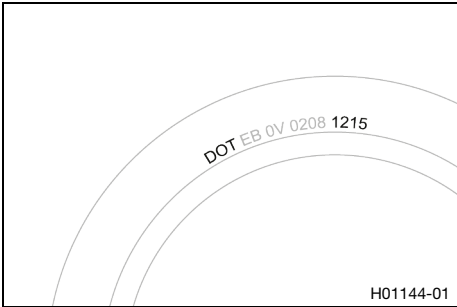


- Check the tire age.

i Info
The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
Husqvarna Motorcycles recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
 - Change the tires. 🛠️

13.6 Checking tire pressure

i Info
Low tire pressure leads to abnormal wear and overheating of the tire.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

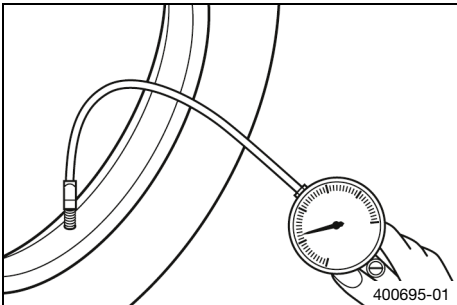

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Offroad tire pressure	
front	1.0 bar (15 psi)
rear	1.0 bar (15 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire pressure.
- Mount the protection cap.

13.7 Checking spoke tension




Warning

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.

The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.

- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

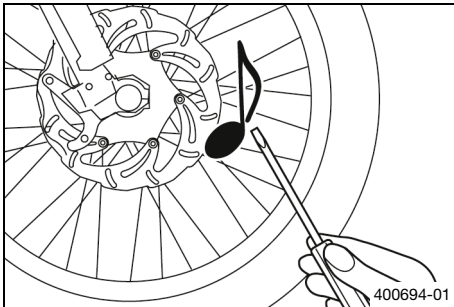

- Strike each spoke briefly using a screwdriver blade.



Info

The frequency of the sound depends on the spoke length and spoke diameter.

If you hear different tone frequencies from different spokes of equal length and diameter, this is an indication of different spoke tensions.

You should hear a high note.

» If the spoke tension differs:

- Correct the spoke tension. 🛠️

- Check the spoke torque.

Guideline

Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)
Spoke nipple, rear wheel	M4.5	6 Nm (4.4 lbf ft)

Torque wrench kit (58429094000)



14.1 Removing the 12-V battery



Caution

- Danger of burns** The voltage regulator gets very hot when the vehicle is operated.
- Allow the voltage regulator to cool down before performing any work.



Note



- Environmental hazard** 12 V batteries contain environmentally hazardous materials.
- Do not dispose of 12 V batteries as household waste.
 - Dispose of 12 V batteries at a collection point for used batteries.

Preparatory work


- Remove the seat. (p. 63)
- Remove the right side panel. (p. 51)
- Remove the fuel tank. (p. 70)

Main work

- Disconnect negative cable ① from the 12-V battery.
- Pull back positive terminal cover ② and disconnect positive cable ③ from the 12-V battery.

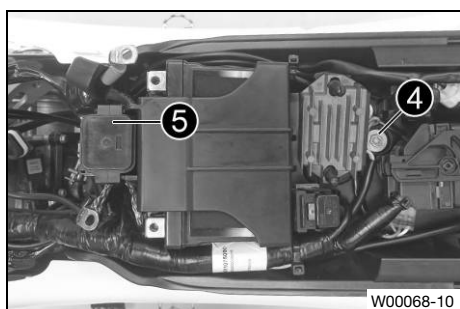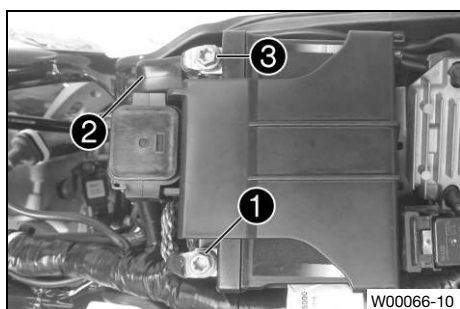

- Remove screw ④.
- Pull starter relay ⑤ off the holder and hang to the side.

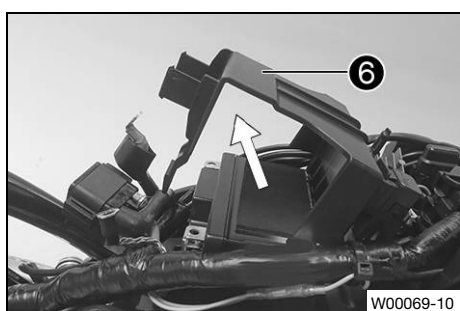


- Pull up battery holding bracket ⑥ and remove the 12-V battery to the rear.



Info

Pay attention to the wiring harness.

14.2 Installing the 12-V battery

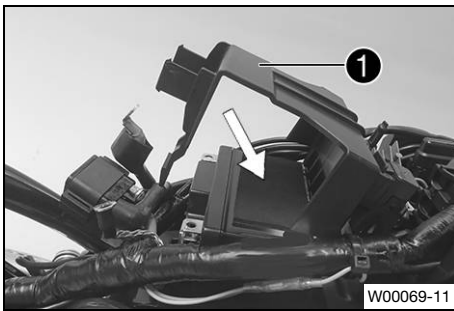


Main work

- Pull up battery holding bracket **1**, insert the 12-V battery into the battery compartment with the terminals facing upwards and secure with battery holding bracket **1**.



Info

Ensure that the cable is routed correctly.

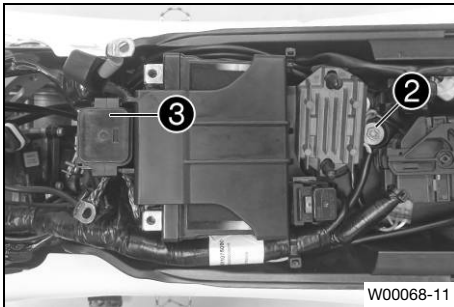


- Mount and tighten screw **2**.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Slide starter relay **3** onto holder.

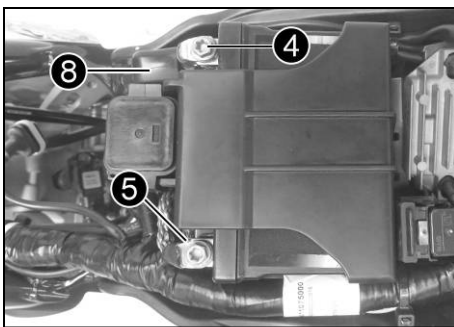

- Connect positive cable **4** to the 12-V battery.

Guideline

Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
-------------------------	----	----------------------


- Connect negative cable **5** to the 12 V battery.

Guideline

Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
-------------------------	----	----------------------

Contact disks **A** must be mounted under screws **6** and cable sockets **7** with the claws toward the battery terminal.

- Slide positive terminal cover **8** over the positive terminal.

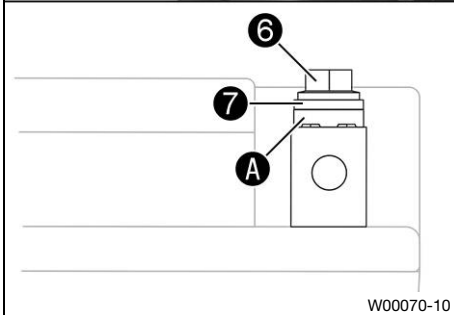

Finishing work

- Install the fuel tank. (p. 71)
- Install the right side panel. (p. 52)
- Mount the seat. (p. 64)

14.3 Charging the 12-V battery 🛠️



Warning

Risk of injury 12 V batteries contain harmful substances.

- Keep 12 V batteries out of the reach of children.
- Keep sparks and open flames away from 12 V batteries.
- Only charge 12 V batteries in well-ventilated rooms.
- Maintain a minimum clearance from inflammable materials when charging 12 V batteries.
Minimum clearance 1 m (3 ft)
- Do not charge deeply discharged 12 V batteries if the charge is already below the minimum voltage.
Minimum voltage before the start of the charge 9 V
- Dispose of 12 V batteries correctly if they have less than the minimum voltage.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info


Even when there is no load on the 12-V battery, it discharges steadily each day. The charging level and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery. If the charging current or charging voltage are exceeded, the 12-V battery will be destroyed. If the 12-V battery is discharged by repeated starting, charge the 12-V battery immediately. If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery. The 12-V battery is maintenance-free.

Preparatory work

- Remove the seat. (📖 p. 63)
- Remove the right side panel. (📖 p. 51)
- Remove the fuel tank. 🛠️ (📖 p. 70)
- Remove the 12-V battery. 🛠️ (📖 p. 102)

Main work

- Check the battery voltage.
 - » Battery voltage: < 9 V
 - Do not charge the 12-V battery.
 - Replace the 12-V battery and dispose of the old 12-V battery properly.
 - » If the specifications have been met:
 - Battery voltage: ≥ 9 V
 - Connect a battery charger to the 12-V battery. Switch on the battery charger.

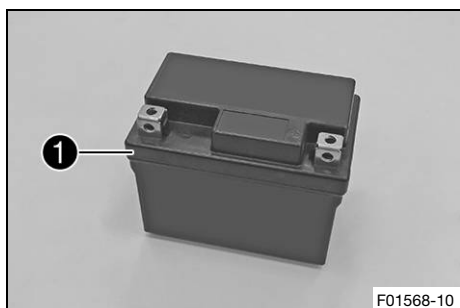

Guideline

The charging current, charging voltage, and charging time must not be exceeded.	
Maximum charging voltage	14.4 V
Maximum charging current	3.0 A
Maximum charging time	24 h
Recharge the 12-V battery regularly when the motorcycle is not being used	6 months

Battery charger and tester (A54029974000)

These battery chargers test whether the 12-V battery retains its voltage. It is also impossible to overcharge the 12-V battery with these battery chargers. The charging time may be longer at low temperatures.

These battery chargers are only suitable for lithium iron phosphate batteries. Read the accompanying instructions for **Husqvarna Motorcycles** accessories.

**Info**

Never remove cover ❶.

- Switch off the battery charger after charging and disconnect from the 12-V battery.

Finishing work

- Install the 12-V battery. 🛠️ (📖 p. 103)
- Install the fuel tank. 🛠️ (📖 p. 71)
- Install the right side panel. (📖 p. 52)
- Mount the seat. (📖 p. 64)



14.4 Changing the main fuse

**Warning**

Fire hazard Incorrect fuses overload the electrical system.

 
- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

**Info**

The main fuse protects all electrical power consumers of the vehicle. It is located in the starter relay housing under the seat.


Preparatory work

- Press and hold the stop button ☒ while the engine is idling until the engine stops.
- Remove the seat. (📖 p. 63)
- Remove the right side panel. (📖 p. 51)
- Remove the fuel tank. 🛠️ (📖 p. 70)



Main work

- Pull starter relay **1** from the holder.

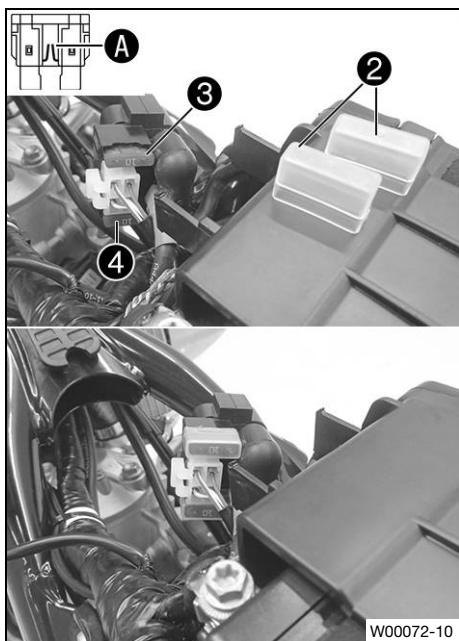

- Take off protection caps **2**.
- Remove faulty main fuse **3**.

Info

A faulty fuse has a burned-out fuse wire **A**.
A spare fuse **4** is located in the starter relay.

- Insert a new main fuse.

Fuse (58011109110) (p. 135)

- Check that the electrical system is functioning properly.

Tip

Insert a spare fuse so that it is available if needed.

- Attach the protection caps **2**.
- Mount starter relay **1** onto the holder and route the cable.

Finishing work

- Install the fuel tank. (p. 71)
- Install the right side panel. (p. 52)
- Mount the seat. (p. 64)

14.5 Changing the fuse of the fuel pump



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Caution

Danger of burns The voltage regulator gets very hot when the vehicle is operated.

- Allow the voltage regulator to cool down before performing any work.



Info

The fuel pump is protected by the fuel pump fuse. This is located under the seat.

Preparatory work

- Remove the seat. (📖 p. 63)

Main work

- Take off protection cap ❶.
- Remove the faulty fuse ❷.


**Info**

A faulty fuse has a burned-out fuse wire A.

- Insert the new fuse for the fuel pump.

Fuse (58011109105) (📖 p. 135)

- Check that the electrical system is functioning properly.
- Attach protection cap ❶.

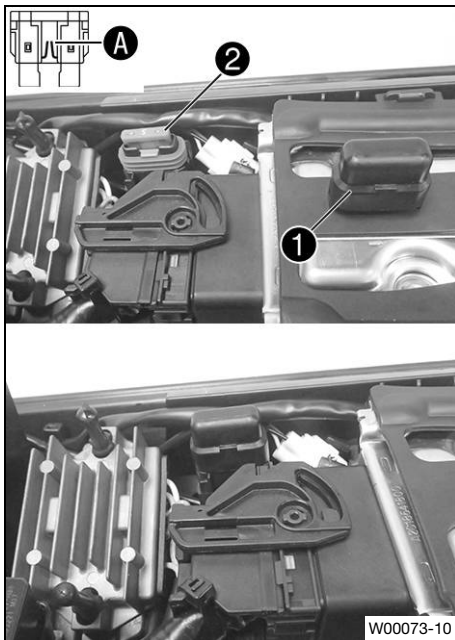

W00073-10

Finishing work

- Mount the seat. (📖 p. 64)


**14.6 Diagnostics connector**

Diagnostics connector ❶ is located under the seat below the engine control unit.

**Info**


As soon as the diagnostics tool is connected, the service hour counter starts running.

Before longer diagnostic sessions, unplug the service hour counter behind the start number plate.

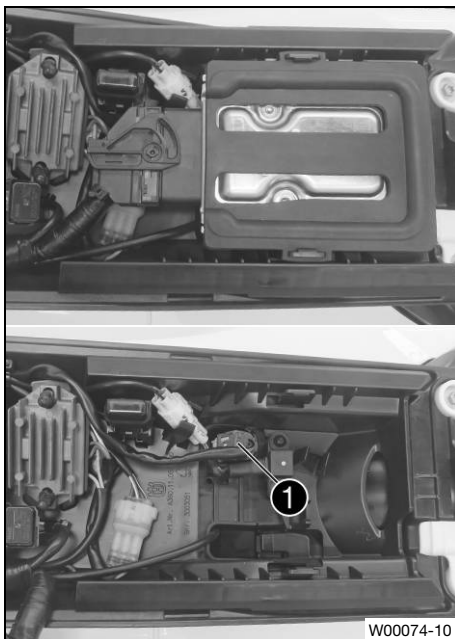

W00074-10

15.1 Cooling system

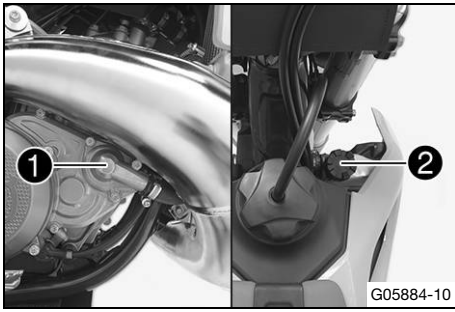

(TC 250)


Water pump **1** in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap **2**. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

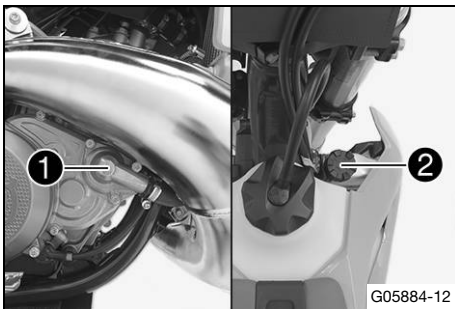

(TX 300)

Water pump **1** in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap **2**. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




Warning

Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

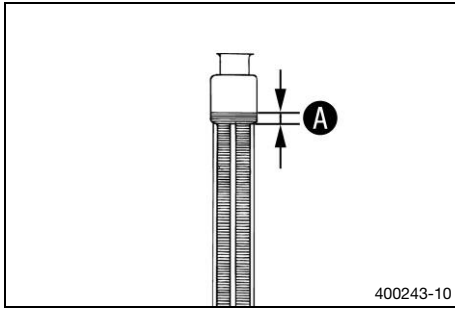

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the antifreeze in the coolant.

–25 ... –45 °C (–13 ... –49 °F)

» If the antifreeze in the coolant does not match the specified value:

- Correct the antifreeze in the coolant.

- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	-----------------

» If the coolant level does not match the specified value:

- Correct the coolant level.

Coolant (📖 p. 141)

- Mount the radiator cap.



15.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




Warning

Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

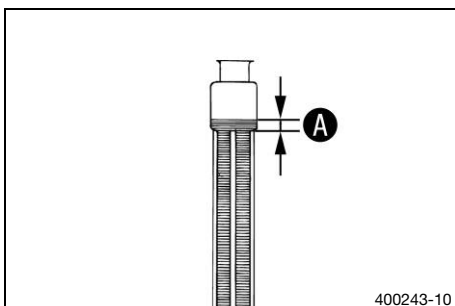

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	-----------------

» If the coolant level does not match the specified value:

- Correct the coolant level.

Coolant (📖 p. 141)

- Mount the radiator cap.



15.4 Draining the coolant

**Warning**

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

**Warning**

Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

- Condition**
The engine is cold.
- Position the motorcycle upright.
 - Place an appropriate container under the water pump cover.
 - Remove screw ❶. Take off radiator cap ❷.
 - Completely drain the coolant.
 - Mount and tighten screw ❶ with a new seal ring.

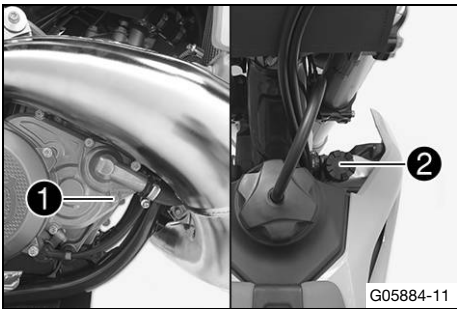

Guideline


Screw, water pump cover, short	M6x40	10 Nm (7.4 lbf ft)
--------------------------------	-------	--------------------

15.5 Refilling with coolant

**Warning**


Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

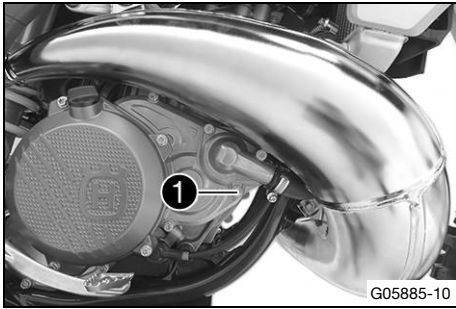

Main work

- Make sure that screw ① is tightened.
- Position the motorcycle upright.

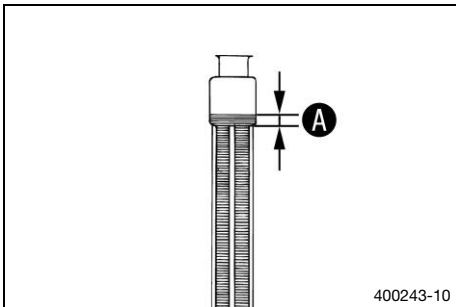


- Pour coolant in up to level A above the radiator fins.

Guideline

10 mm (0.39 in)

Coolant (📖 p. 141)

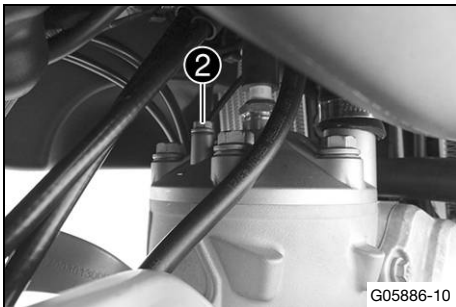


- Remove screw ② and wait until coolant emerges without bubbles.
- Mount and tighten screw ②.

Guideline

Bleeder screw, cylinder head

M6

10.5 Nm
(7.74 lbf ft)

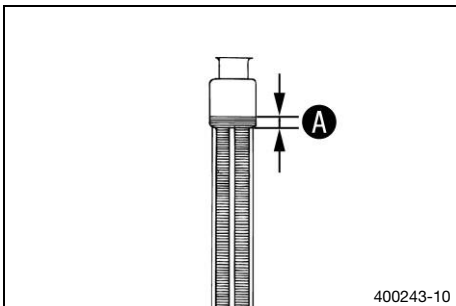


- Pour coolant in up to level A above the radiator fins.

Guideline

10 mm (0.39 in)

Coolant (📖 p. 141)

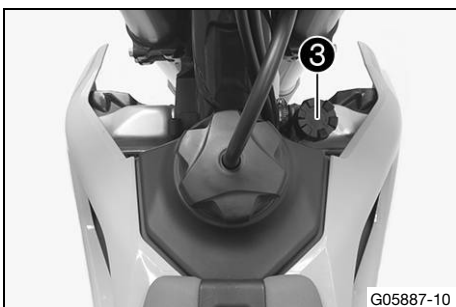

- Mount radiator cap ③.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Allow the engine to warm up and cool down again.
- Check the cooling system for leaks.

Finishing work

- Check the coolant level. (📖 p. 109)

15.6 Changing the coolant 🛠️



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.


Condition

The engine is cold.

- Position the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ❶. Take off radiator cap ❷.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline


Screw, water pump cover, short	M6x40	10 Nm (7.4 lbf ft)
--------------------------------	-------	--------------------

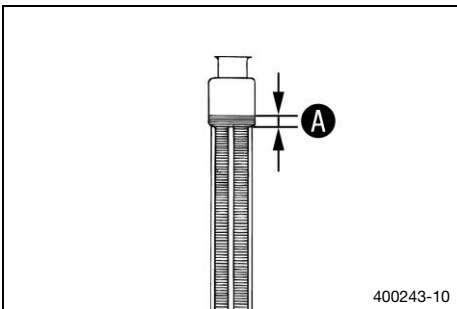

- Pour coolant in up to level A above the radiator fins.

Guideline

 
10 mm (0.39 in)
Coolant (📖 p. 141)



- Remove screw ③ and wait until coolant emerges without bubbles.
- Mount and tighten screw ③.

Guideline

Bleeder screw, cylinder head	M6	10.5 Nm (7.74 lbf ft)
------------------------------	----	--------------------------

 


- Pour coolant in up to level A above the radiator fins.

Guideline

10 mm (0.39 in)

 Coolant (📖 p. 141)



- Mount radiator cap ②.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Allow the engine to warm up and cool down again.
- Check the cooling system for leaks.

Finishing work

- Check the coolant level. (📖 p. 109)



16.1 Programming the end positions of the exhaust control

i Info

If work has been carried out on the exhaust control, the end positions must be reprogrammed.

Condition



The engine is off.

Preparatory work


- Remove the seat. (📖 p. 63)

Main work

- Pull engine control unit **1** upward and off the bracket and hang to the side.
- Pull diagnostics connector **2** off the holder.

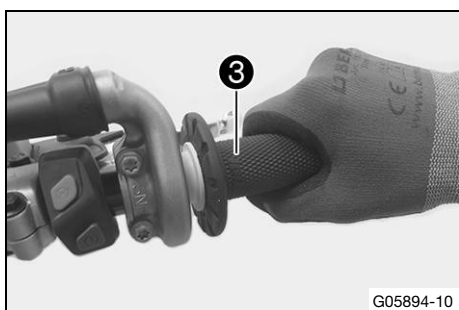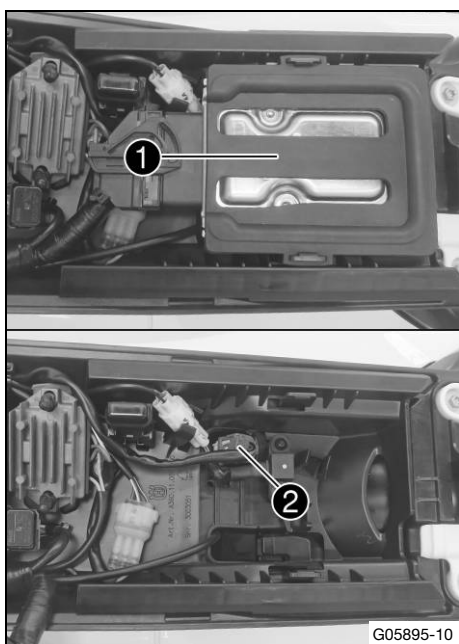

- Move throttle grip **3** to where it is half open and hold in position.

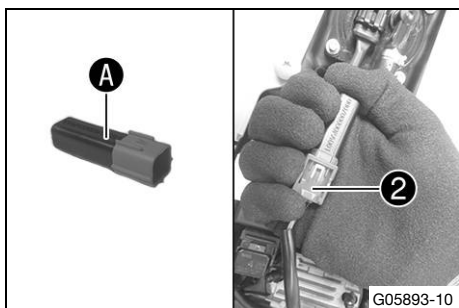


i Info

Wake-up connector **A** is in the motorcycle's separate enclosure.

- Plug wake-up connector **A** into diagnostics connector **2**.
- Wait for at least five seconds.
 - ✓ The end positions of the exhaust control are read. The procedure is clearly audible.
 - ✓ The combination instrument lighting is activated, the combination switch lights up green.
- Release the fixing from the throttle grip.

✓ The end positions of the exhaust control are programmed.

- Wait until you can no longer hear the exhaust control engine operating.
- Disconnect wake-up connector **A** from diagnostics connector **2**.
- Mount diagnostics connector **2** on the holder.
- Mount engine control unit **1** on the bracket.

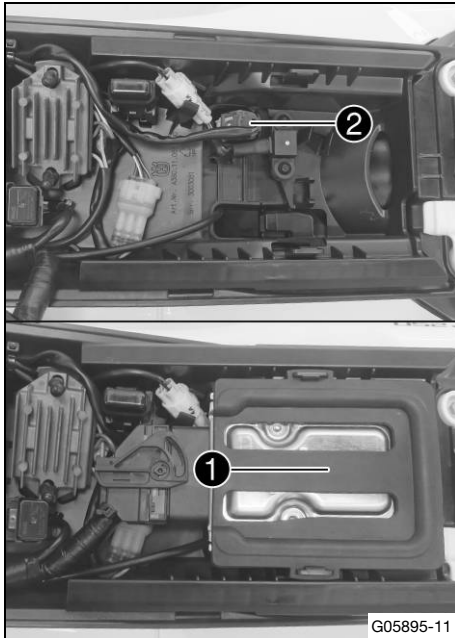

Finishing work


- Mount the seat. (🔧 p. 64)



17.1 Changing the mapping

i Info

The desired engine characteristic can be altered using the combination switch. Changing the mapping also affects the response of the exhaust control. The setting most recently selected is activated again when restarting. The mapping can also be changed during the ride.

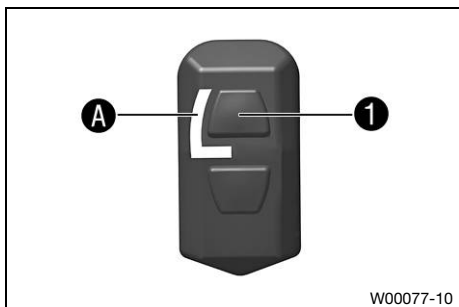


Activating STANDARD mapping:

- Press button **1**.

Guideline

Engine speed	< 4,000 rpm
--------------	-------------

- ✓ The indicator lamp **A** lights up.
- ✓ STANDARD – balanced response

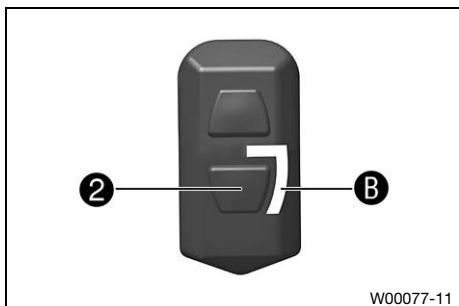

Activating ADVANCED mapping:


- Press button **2**.

Guideline

Engine speed	< 4,000 rpm
--------------	-------------

- ✓ The indicator lamp **B** lights up.
- ✓ ADVANCED – direct response

 17.2 Checking the play in the throttle cable



- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

Play in throttle cable	2 ... 3 mm (0.08 ... 0.12 in)
------------------------	-------------------------------

- » If the throttle cable play does not meet the specified value:
 - Adjust the play in the throttle cable. 🛠️ (p. 117)
- Push the cold start button in all the way.

When the throttle grip is turned forward, the cold start button returns to its original position.

- » If the cold start button does not return to its original position:
 - Adjust the play in the throttle cable. 🛠️ (p. 117)

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the play in the throttle cable. 🛠️ (📖 p. 117)

17.3 Adjusting the play in the throttle cable 🛠️

**Info**

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

Preparatory work

- Remove the seat. (📖 p. 63)
- Remove the right side panel. (📖 p. 51)
- Remove the fuel tank. 🛠️ (📖 p. 70)
- Check the throttle cable routing. (📖 p. 78)

Main work

- Move the handlebar to the straight-ahead position.
- Push back sleeve ❶.
- Loosen nut ❷.
- Turn adjusting screw ❸ in as far as possible.
- Loosen nut ❹.
- Push cold start button ❻ all the way to the stop.
- Turn adjusting screw ❺ so that the cold start button moves to the basic position when the throttle grip is turned to the front.
- Tighten nut ❹.
- Turn adjusting screw ❸ so that there is play in the throttle cable at the throttle grip.


Guideline

Play in throttle cable	2 ... 3 mm (0.08 ... 0.12 in)
------------------------	-------------------------------

- Tighten nut ❷.
- Slide on sleeve ❶.
- Check the throttle grip for smooth operation.

Finishing work

- Check the play in the throttle cable. (📖 p. 116)
- Install the fuel tank. 🛠️ (📖 p. 71)
- Install the right side panel. (📖 p. 52)

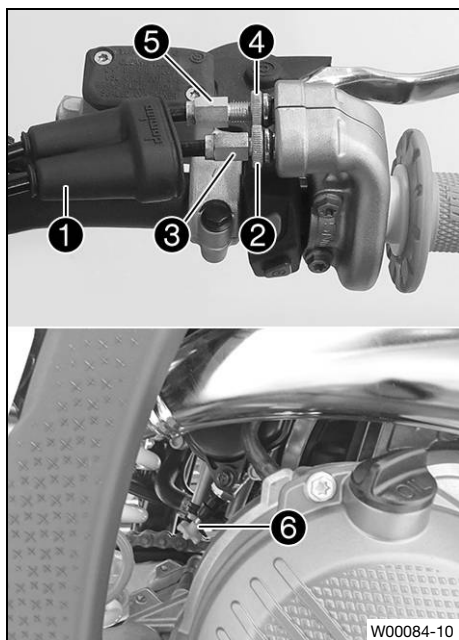

- Mount the seat. (📖 p. 64)


17.4 Adjusting the idle speed 🛠️



Warning

Danger of accidents The engine may go out spontaneously if the idle speed is set too low.

- Set the idle speed to the specified value. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

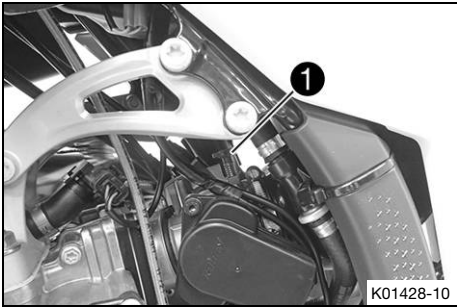

- Run the engine until warm.
- ✓ The cold start button is deactivated – The cold start button is in its basic position. (📖 p. 19)



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjusting screw ① using a suitable tachometer.

Guideline

Idle speed	1,500 ... 1,700 rpm
------------	---------------------



Info


Turning counterclockwise lowers the idle speed.
Turning clockwise raises the idle speed.

17.5 Checking the basic position of the shift lever



Info

When driving, the shift lever must not touch the rider's boot when in the basic position.
When the shift lever keeps touching the boot, the transmission will be subject to an excessive load.

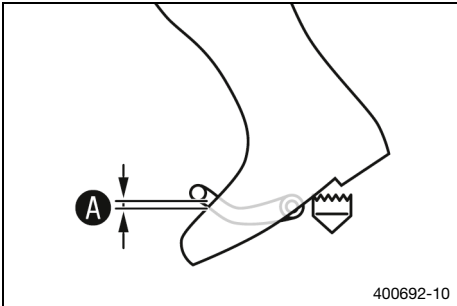


- Sit on the vehicle in the riding position and determine distance ① between the upper edge of your boot and the shift lever.


Distance between shift lever and upper edge of boot	10 ... 20 mm (0.39 ... 0.79 in)
---	---------------------------------

- » If the distance does not meet specifications:
- Adjust the basic position of the shift lever. 🛠️ (📖 p. 119)

17.6 Adjusting the basic position of the shift lever

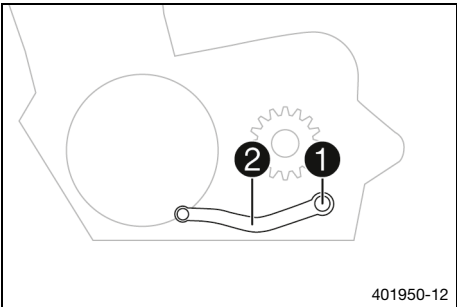

- Remove screw 1 with the washers and take off shift lever 2.

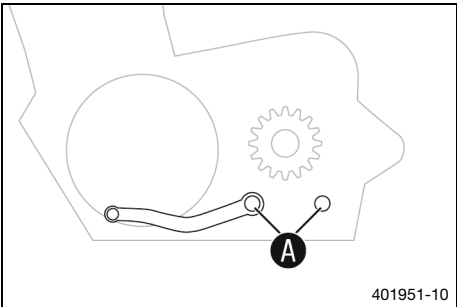

- Clean gear teeth A of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage gearing.

i **Info**

The range of adjustment is limited.
The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw 1 with washers.

Guideline

Screw, shift lever	M6	14 Nm (10.3 lbf ft) Loctite®243™
--------------------	----	--

18.1 Changing the fuel screen ↴



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

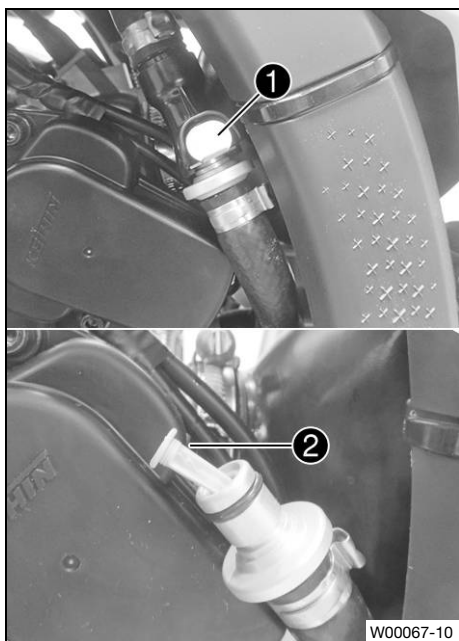

- Clean quick release coupling **1** thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.



Info

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **2** out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-release coupling.

Silicone spray (📖 p. 143)

- Join the quick release coupling.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check the response.

 


18.2 Checking the gear oil level



Info

The gear oil level must be checked when the engine is cold.



Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Remove gear oil level monitoring screw ❶.
- Check the gear oil level.

A small quantity of gear oil must run out of the drilled hole.

- » If no gear oil runs out:
 - Add the gear oil. 🛠️ (p. 122)
- Mount and tighten the gear oil level monitoring screw.

Guideline

Screw, gear oil level monitoring	M6	8 Nm (5.9 lbf ft)
----------------------------------	----	-------------------



18.3 Changing the gear oil 🛠️



Warning

Danger of scalding Engine and gear oil get hot when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




Info

Drain the gear oil while the engine is at operating temperature.

Preparatory work

- Park the motorcycle on a level surface.

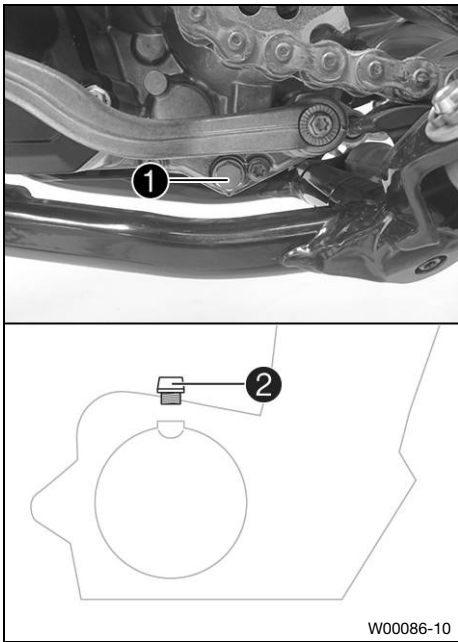

(TX 300)

- Remove the engine guard. (📖 p. 50)
- Position an appropriate container under the engine.

Main work

- Remove gear oil drain plug ❶ with magnet.
- Remove filler plug ❷ with the O-ring.
- Let the gear oil drain fully.
- Thoroughly clean the gear oil drain plug with magnet.
- Clean the sealing surface on the engine.
- Mount and tighten gear oil drain plug ❶ with the magnet and a new seal ring.

Guideline

Gear oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
---------------------------------	---------	---------------------

- Fill up with gear oil.

Gear oil	0.8 l (0.8 qt.)	Engine oil (15W/50) (📖 p. 141)
----------	-----------------	--------------------------------

- Mount and tighten filler plug ❷ with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Finishing work

(TX 300)

- Install the engine guard. (📖 p. 51)
- Check the gear oil level. (📖 p. 121)

18.4 Adding the gear oil 🛢️

 
 


Info

Too little gear oil or poor-quality gear oil results in premature wear to the transmission. Gear oil must only be topped up when the engine is cold.

Preparatory work

- Park the motorcycle on a level surface.



Main work

- Remove gear oil level monitoring screw ❶.

- Remove filler plug ❷ with the O-ring.
- Add gear oil until it emerges from the drill hole of the gear oil level monitoring screw.

Engine oil (15W/50) (📖 p. 141)

- Mount and tighten the gear oil level monitoring screw.

Guideline

Screw, gear oil level monitoring	M6	8 Nm (5.9 lbf ft)
----------------------------------	----	-------------------

- Mount and tighten filler plug ❷ with the O-ring.

Finishing work



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.



19.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.
Minimum clearance 60 cm (23.6 in)



Note


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

To maintain the value and appearance of the motorcycle over a long period, clean it regularly. Avoid direct sunshine when cleaning the motorcycle.

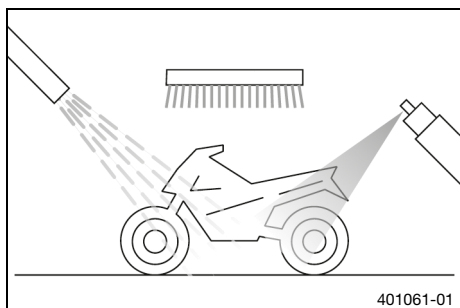

- Close off exhaust system to keep water from entering.
- Remove the coarse dirt particles with a gentle water jet.
- Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.

Motorcycle cleaner (📖 p. 143)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Clean the chain. (📖 p. 73)

- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber
(📖 p. 143)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 144)



20.1 Storage



Warning

Danger of poisoning Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Info

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

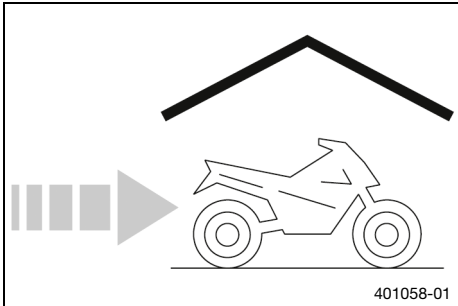

- Clean the motorcycle. (📖 p. 124)
- Change the gear oil. 🛠️ (📖 p. 121)
- Check the antifreeze and coolant level. (📖 p. 108)
- When refueling for the last time before taking the motorcycle out of service, add fuel additive.
- Refuel. (📖 p. 31)



Tip

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Check tire pressure. (📖 p. 100)
- Remove the 12-V battery. 🛠️ (📖 p. 102)
- Charge the 12-V battery. 🛠️ (📖 p. 104)

Guideline

Ideal charging and storage temperature of the lithium-ion battery	10 ... 20 °C (50 ... 68 °F)
---	-----------------------------

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.




Info

Husqvarna Motorcycles recommends jacking up the motorcycle.

- Raise the motorcycle with a lift stand. (📖 p. 48)
- Cover the vehicle with a tarp or a similar cover that is permeable to air.

**Info**

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion. Avoid running the engine for a short time only. Because the engine will not warm up sufficiently, the water vapor produced during combustion will condense, causing engine parts and the exhaust system to rust.

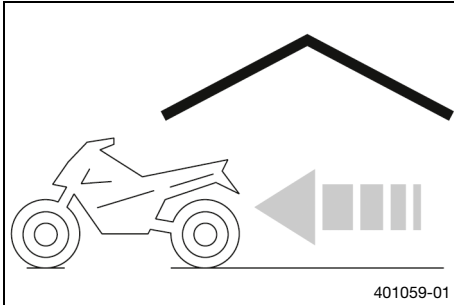**20.2 Preparing for use after storage**

- Remove the motorcycle from the lift stand. (📖 p. 48)
- Perform checks and maintenance measures when preparing for use. (📖 p. 27)
- Make a test ride.



Faults	Possible cause	Action
The engine does not turn over when the start button is actuated	Operating error	– Carry out start procedure. (📖 p. 27)
	12-V battery discharged	– Charge the 12-V battery. 🛠️ (📖 p. 104) – Check the charging voltage. 🛠️ – Check the open-circuit current. 🛠️ – Check the alternator. 🛠️
	Main fuse blown	– Change the main fuse. (📖 p. 105)
	Starter relay faulty	– Check the starter relay. 🛠️
	Starter motor faulty	– Check the starter motor. 🛠️
The engine turns but does not start	Operating error	– Carry out start procedure. (📖 p. 27)
	Quick release coupling not joined	– Join the quick release coupling.
	Idle speed is not set correctly	– Adjust the idle speed. 🛠️ (📖 p. 118)
	Fuel supply interrupted	– Check the fuel tank breather.
	Fuel screen in the quick release coupling is clogged	– Change the fuel screen. 🛠️ (📖 p. 120)
	Spark plug sooty or wet	– Clean and dry the spark plug and spark plug connector, or change if necessary.
	Plug gap of spark plug too wide	– Adjust plug gap. Guideline Spark plug electrode gap 0.60 mm (0.0236 in)
	Fault in ignition system	– Check the ignition system. 🛠️
	Short-circuit cable in wiring harness frayed, stop button faulty	– Check the stop button. 🛠️
	The connector or ignition coil is loose or oxidized	– Clean the connector and treat it with contact spray.
	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
Engine does not speed up	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
Engine has too little power	Air filter very dirty	– Clean the air filter and air filter box. 🛠️ (📖 p. 67)
	Fuel filter is very dirty	– Change the fuel filter. 🛠️
	Fuel screen is very dirty	– Change the fuel screen. 🛠️ (📖 p. 120)
	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
	Fuel supply interrupted	– Check the fuel tank breather.
	Exhaust system leaky, deformed or too little glass fiber yarn filling in main silencer	– Check exhaust system for damage. – Change the glass fiber yarn filling of the main silencer. 🛠️ (📖 p. 69)
	Diaphragm or reed valve housing damaged	– Check the diaphragm and reed valve housing.
The engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 31)

Faults	Possible cause	Action
The engine dies during the trip	The engine takes in false air	– Check that the intake flange is firmly seated.
	The connector or ignition coil is loose or oxidized	– Clean the connector and treat it with contact spray.
Engine overheats	Too little coolant in cooling system	– Check the cooling system for leakage. – Check the coolant level. (📖 p. 109)
	Too little air stream	– Switch off engine when stationary.
	Radiator fins very dirty	– Clean the radiator fins.
	Foam formation in cooling system	– Drain the coolant. 🛠️ (📖 p. 110) – Refill with coolant. 🛠️ (📖 p. 110)
	Damaged cylinder head or cylinder head gasket	– Check the cylinder head and cylinder head gasket.
	Bent radiator hose	– Change the radiator hose. 🛠️
	Thermostat defective	– Check the thermostat. 🛠️ Guideline Opening temperature: 70 °C (158 °F)
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	– Check the wiring for damage and the electrical plug-in connections for corrosion and damage. – Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️
White smoke emission (steam in exhaust gas)	Damaged cylinder head or cylinder head gasket	– Check the cylinder head and cylinder head gasket.
Gear oil exits at the vent hose	Too much gear oil added	– Check the gear oil level. (📖 p. 121)
Water in the gear oil	Damaged radial shaft seal ring or water pump	– Check the radial shaft seal ring and the water pump.
12-V battery discharged	12 V battery is not charging	– Check the charging voltage. 🛠️ – Check the alternator. 🛠️
	Unwanted electrical power consumer	– Check the open-circuit current. 🛠️

Blink code for malfunction indicator lamp	Fi 14 Malfunction indicator lamp flashes 1x long, 4x short
Error level condition	Crankcase pressure sensor – difference too high between sensor and engine control unit
Blink code for malfunction indicator lamp	Fi 09 Malfunction indicator lamp flashes 9x short
Error level condition	Crankcase pressure sensor - short circuit to ground
	Crankcase pressure sensor - open/short circuit to plus
	Ambient air pressure sensor – short circuit to ground
	Ambient air pressure sensor – open/short circuit to plus
Blink code for malfunction indicator lamp	Fi 13 Malfunction indicator lamp flashes 1x long, 3x short
Error level condition	Intake air temperature sensor – input signal too low
	Intake air temperature sensor – input signal too high
Blink code for malfunction indicator lamp	Fi 12 Malfunction indicator lamp flashes 1x long, 2x short
Error level condition	Coolant temperature sensor – input signal too low
	Coolant temperature sensor – input signal too high
Blink code for malfunction indicator lamp	Fi 06 Malfunction indicator lamp flashes 6x short
Error level condition	Throttle valve position sensor circuit A – input signal too low
	Throttle valve position sensor circuit A – input signal too high
Blink code for malfunction indicator lamp	Fi 41 Malfunction indicator lamp flashes 4x long, 1x short
Error level condition	Fuel pump - short circuit to ground/open circuit
	Fuel pump – short circuit to plus
Blink code for malfunction indicator lamp	Fi 33 Malfunction indicator lamp flashes 3x long, 3x short
Error level condition	Injection valve 1, cylinder 1 – input signal too low
	Injection valve 1, cylinder 1 - input signal too high
Blink code for malfunction indicator lamp	Fi 34 Malfunction indicator lamp flashes 3x long, 4x short
Error level condition	Injection valve 2, cylinder 1 – input signal too low
	Injection valve 2, cylinder 1 - input signal too high

Blink code for malfunction indicator lamp	Fi 37 Malfunction indicator lamp flashes 3x long, 7x short
Error level condition	Ignition coil – circuit fault
Blink code for malfunction indicator lamp	Fi 02 Malfunction indicator lamp flashes 2x short
Error level condition	Crankshaft speed sensor – synchronization faulty Crankshaft speed sensor – signal implausible
Blink code for malfunction indicator lamp	Fi 50 Malfunction indicator lamp flashes 5x long
Error level condition	Exhaust control actuator – no signal Exhaust control actuator – temperature too high Exhaust control actuator – incorrect setting Exhaust control actuator – setpoint value signal faulty Exhaust control actuator – input signal too low Exhaust control actuator – input signal too high Exhaust control actuator – mechanical error in the lower position Exhaust control actuator – mechanical error in the upper position Exhaust control actuator – mechanical error
Blink code for malfunction indicator lamp	Fi 21 Malfunction indicator lamp flashes 2x long, 1x short
Error level condition	Battery voltage - input voltage too low Battery voltage – input voltage too high
Blink code for malfunction indicator lamp	Fi 53 Malfunction indicator lamp flashes 5x long, 3x short
Error level condition	Sensor voltage 1 – open circuit/short circuit to ground Sensor voltage 1 – short circuit to plus
Blink code for malfunction indicator lamp	Fi 54 Malfunction indicator lamp flashes 5x long, 4x short
Error level condition	Sensor voltage 2 – open circuit/short circuit to ground Sensor voltage 2 – short circuit to plus
Blink code for malfunction indicator lamp	Fi Malfunction indicator lamp lights up
Error level condition	Tilt sensor – input signal too low Tilt sensor – input signal too high

23.1 Engine

Design	1-cylinder 2-stroke engine, water-cooled, with reed intake and exhaust control
Displacement (TC 250)	249 cm ³ (15.19 cu in)
Displacement (TX 300)	293.15 cm ³ (17.8892 cu in)
Stroke	72 mm (2.83 in)
Hole (TC 250)	66.4 mm (2.614 in)
Hole (TX 300)	72 mm (2.83 in)
Idle speed	1,500 ... 1,700 rpm
Crankshaft bearing	1 grooved ball bearing/1 roller bearing
Conrod bearing	Needle bearing
Piston pin bearing	Needle bearing
Piston	Cast aluminum
Piston rings (TC 250)	2 half keystone rings
Piston rings (TX 300)	2 rectangular rings
X-distance (upper edge of piston to special tool)	0 ... 0.10 mm (0 ... 0.0039 in)
Z distance (height of control flap) (TC 250)	48.0 mm (1.89 in)
Z distance (height of control flap) (TX 300)	48.0 mm (1.89 in)
Primary transmission	26:72
Clutch	Multidisc clutch in oil bath/hydraulically activated
Transmission (TC 250)	5-gear transmission, claw shifted
Transmission (TX 300)	6-gear transmission, claw shifted
Transmission ratio (TC 250)	
first-gear	14:28
second-gear	16:26
third-gear	18:24
fourth-gear	21:24
fifth-gear	22:21
Transmission ratio (TX 300)	
first-gear	13:33
second-gear	16:30
third-gear	18:26
fourth-gear	22:26
fifth-gear	23:23
sixth-gear	26:22
Ignition system	Electronic ignition
Spark plug	NGK BR 8 ES
Spark plug electrode gap	0.60 mm (0.0236 in)
Starting aid	Electric starter system

23.2 Engine tightening torques

Screw, inner reed paddles	EJOT DELTA PT® 3.5x25	1 Nm (0.7 lbf ft)
Screw, membrane support plate	EJOT DELTA PT® 3x12	1 Nm (0.7 lbf ft)
Screw, outer reed paddles	EJOT DELTA PT® 3x6	1 Nm (0.7 lbf ft)
Nut, axle for control flap	M5	5 Nm (3.7 lbf ft)
Screw, actuator, exhaust control	M5	5 Nm (3.7 lbf ft) Loctite®243™
Screw, bearing retainer	M5	6 Nm (4.4 lbf ft) Loctite®243™
Screw, clutch spring retainer	M5	6 Nm (4.4 lbf ft)
Screw, control flap, exhaust control	M5	8 Nm (5.9 lbf ft) Loctite®243™
Screw, cover, actuator, exhaust control	M5	5 Nm (3.7 lbf ft) Loctite®243™
Screw, crankshaft speed sensor	M5	6 Nm (4.4 lbf ft) Loctite®243™
Screw, exhaust control cover	M5	6 Nm (4.4 lbf ft)
Screw, idler shaft, exhaust control	M5	8 Nm (5.9 lbf ft) Loctite®243™
Screw, locking lever	M5	6 Nm (4.4 lbf ft) Loctite®243™
Screw, retaining bracket of exhaust control	M5	6 Nm (4.4 lbf ft) Loctite®2701™
Screw, stator	M5	6 Nm (4.4 lbf ft) Loctite®243™
Bleeder screw, cylinder head	M6	10.5 Nm (7.74 lbf ft)
Nut, water pump impeller	M6	5 Nm (3.7 lbf ft) Loctite®243™
Screw, alternator cover	M6	8 Nm (5.9 lbf ft)
Screw, clutch cover	M6	10 Nm (7.4 lbf ft)
Screw, clutch cover	M6x25	10 Nm (7.4 lbf ft)
Screw, clutch cover	M6x60	10 Nm (7.4 lbf ft)
Screw, cover, starter motor	M6	8 Nm (5.9 lbf ft)
Screw, engine case	M6x45	10 Nm (7.4 lbf ft)
Screw, engine case	M6x60	10 Nm (7.4 lbf ft)
Screw, gear oil level monitoring	M6	8 Nm (5.9 lbf ft)
Screw, intake flange/reed valve housing	M6	6 Nm (4.4 lbf ft)
Screw, intermediate flange	M6	8 Nm (5.9 lbf ft)
Screw, outer clutch cover	M6	8 Nm (5.9 lbf ft)
Screw, shift drum locating	M6	10 Nm (7.4 lbf ft) Loctite®243™
Screw, shift lever	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, starter motor	M6	10 Nm (7.4 lbf ft)
Screw, water pump cover, long	M6x60	10 Nm (7.4 lbf ft)
Screw, water pump cover, short	M6x40	10 Nm (7.4 lbf ft)

23 TECHNICAL SPECIFICATIONS

Screw, balancer shaft	M8	30 Nm (22.1 lbf ft) Loctite®243™
Screw, cylinder head	M8	27 Nm (19.9 lbf ft)
Nut, cylinder base	M10	38 Nm (28 lbf ft)
Screw, drive chain engine sprocket	M10	60 Nm (44.3 lbf ft) Loctite®2701™
Stud, cylinder base	M10	12 Nm (8.9 lbf ft)
Nut, rotor	M12x1	60 Nm (44.3 lbf ft)
Gear oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
Spark plug	M14x1.25	25 Nm (18.4 lbf ft)
Nut, inner clutch hub	M18x1.5	100 Nm (73.8 lbf ft)
Nut, primary gear wheel	M18LHx1.5	150 Nm (110.6 lbf ft) Loctite®243™

23.3 Capacities

23.3.1 Gear oil

Gear oil	0.8 l (0.8 qt.)	Engine oil (15W/50) (📖 p. 141)
----------	-----------------	--------------------------------

23.3.2 Coolant

Coolant	0.95 l (1 qt.)	Coolant (📖 p. 141)
---------	----------------	--------------------

23.3.3 Fuel

Total fuel tank capacity, approx. (TC 250)	7.2 l (1.9 US gal)	Super unleaded (95 octane) mixed with 2-stroke engine oil (1:60) (📖 p. 142)
Total fuel tank capacity, approx. (TX 300)	8.5 l (2.25 US gal)	Super unleaded (95 octane) mixed with 2-stroke engine oil (1:60) (📖 p. 142)
Fuel reserve approx. (TX 300)	3.0 l (3.2 qt.)	

23.4 Chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Fork (TC 250)	WP XACT AER
Fork (TX 300)	WP Closed Cartridge
Suspension travel (TC 250)	
front	305 mm (12.01 in)
rear	293 mm (11.54 in)
Suspension travel (TX 300)	
front	310 mm (12.2 in)
rear	300 mm (11.81 in)
Fork offset	22 mm (0.87 in)
Shock absorber	WP XACT LDS
Brake system	Disc brakes, floating brake calipers
Brake discs - diameter	

front	260 mm (10.24 in)
rear	220 mm (8.66 in)
Brake discs - wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)
Offroad tire pressure	
front	1.0 bar (15 psi)
rear	1.0 bar (15 psi)
Secondary ratio (TC 250)	14:49
Secondary ratio (TX 300)	14:49
Chain	5/8 x 1/4"
Rear sprockets available	48, 50, 52
Steering head angle	63.9°
Wheelbase (TC 250)	1,490 ± 10 mm (58.66 ± 0.39 in)
Wheelbase (TX 300)	1,493 ± 10 mm (58.78 ± 0.39 in)
Seat height unloaded (TC 250)	939 mm (36.97 in)
Seat height unloaded (TX 300)	948 mm (37.32 in)
Ground clearance unloaded (TC 250)	346 mm (13.62 in)
Ground clearance unloaded (TX 300)	354 mm (13.94 in)
Weight without fuel, approx. (TC 250)	99.6 kg (219.6 lb.)
Weight without fuel, approx. (TX 300)	100.3 kg (221.1 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

23.5 Electrical system

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
Fuse	58011109110	10 A
Fuse	58011109105	5 A
Combination instrument lighting and indicator lamps		LED

23.6 Tires

Validity	Front tire	Rear tire
(TC 250)	80/100 - 21 51M TT Dunlop GEOMAX MX33F	110/90 - 19 62M TT Dunlop GEOMAX MX33
(TX 300)	80/100 - 21 51M TT Dunlop GEOMAX MX33F	110/100 - 18 64M TT Dunlop GEOMAX AT81
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed. Additional information is available in the Service section under: www.husqvarna-motorcycles.com		

23.7 Fork

23.7.1 TC 250

Fork article number	A360C103X406000	
Fork	WP XACT AER	
Compression damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping		
Comfort	17 clicks	
Standard	18 clicks	
Sport	7 clicks	
Air pressure	10.5 bar (152 psi)	
Fork length	940 mm (37.01 in)	
Oil capacity external mechanism left	240 $\pm \frac{10}{50}$ ml (8.11 $\pm \frac{0.34}{1.69}$ fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 142)
Oil capacity external mechanism right	240 $\pm \frac{10}{50}$ ml (8.11 $\pm \frac{0.34}{1.69}$ fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 142)
Grease capacity, left cartridge	5 g (0.18 oz)	Special grease (00062010053) (📖 p. 144)
Oil capacity, right cartridge	370 ml (12.51 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 142)

23.7.2 TX 300

Fork article number	A590C173X402000	
Fork	WP Closed Cartridge	
Compression damping		
Comfort	17 clicks	
Standard	12 clicks	
Sport	7 clicks	
Rebound damping		
Comfort	23 clicks	
Standard	18 clicks	
Sport	13 clicks	
Fork length	940 mm (37.01 in)	
Oil capacity, external mechanism	385 ... 395 ml (13.02 ... 13.35 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 142)
Oil capacity, cartridge	175 ml (5.92 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 142)

23.8 Shock absorber

23.8.1 TC 250

Shock absorber article number	A360C403X408000
Shock absorber	WP XACT LDS
Lowspeed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Highspeed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Spring preload	8 mm (0.31 in)
Spring rate	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	48 N/mm (274 lb/in)
Spring length	240 mm (9.45 in)
Gas pressure	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Riding sag	105 mm (4.13 in)
Fitted length	456.3 mm (17.965 in)
Shock absorber fluid (📖 p. 142)	SAE 2.5

23.8.2 TX 300

Shock absorber article number	A460C473X408000
Shock absorber	WP XACT LDS
Lowspeed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Highspeed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Spring preload	8 mm (0.31 in)

Spring rate	
Weight of rider: 65 ... 75 kg (143 ... 165 lb.)	42 N/mm (240 lb/in)
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	45 N/mm (257 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	48 N/mm (274 lb/in)
Spring length	240 mm (9.45 in)
Gas pressure	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Riding sag	100 mm (3.94 in)
Fitted length	456.3 mm (17.965 in)
Shock absorber fluid (📖 p. 142)	SAE 2.5

23.9 Chassis tightening torques

Hose clamp, radiator		2.4 Nm (1.77 lbf ft)
Screw, air filter box, on subframe	EJOT PT® K60x20AL	5 Nm (3.7 lbf ft)
Screw, combination switch	EJOT PT® K50x18	2 Nm (1.5 lbf ft)
Screw, fuel pump on fuel tank	EJOT PT® K60x30-Z	2.5 Nm (1.84 lbf ft)
Screw, intake air temperature sensor	EJOT PT® K50x18 T20	0.7 Nm (0.52 lbf ft)
Screw, seat fixing	EJOT EJOFORM PT® K60x23/18	2.5 Nm (1.84 lbf ft)
Screw, start/stop button	EJOT PT® K50x18 T20	2 Nm (1.5 lbf ft)
Fitting, inlet sleeve to throttle valve body	M4	5 Nm (3.7 lbf ft)
Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
Screw, hose clip, throttle valve body	M4	2.8 Nm (2.07 lbf ft)
Spoke nipple, front wheel	M4.5	6 Nm (4.4 lbf ft)
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)
Screw, foot brake lever stub	M5	6 Nm (4.4 lbf ft) Loctite®243™
Screw, frame protector	M5	3 Nm (2.2 lbf ft)
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
Screw, throttle valve body cover	M5	2.6 Nm (1.92 lbf ft)
Nut, starter cable on starter motor	M6	4 Nm (3 lbf ft)
Nut, throttle cable on throttle valve body	M6	3 Nm (2.2 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Screw, ball joint of push rod on foot brake cylinder	M6	10 Nm (7.4 lbf ft) Loctite®243™
Screw, battery cable to starter relay	M6x16	6 Nm (4.4 lbf ft)
Screw, battery support bracket	M6	6 Nm (4.4 lbf ft)

Screw, brake disc, front	M6	14 Nm (10.3 lbf ft) Loctite®243™
Screw, brake lever	M6	5 Nm (3.7 lbf ft)
Screw, brake line guide on link fork	M6	4.5 Nm (3.32 lbf ft)
Screw, chain guide on link fork at the front	M6x45	10 Nm (7.4 lbf ft)
Screw, chain guide on link fork at the rear	M6x16	10 Nm (7.4 lbf ft)
Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft) Loctite®243™
Screw, clutch lever	M6	5 Nm (3.7 lbf ft)
Screw, connector board with combination instrument	M6	5 Nm (3.7 lbf ft)
Screw, fender	M6	12 Nm (8.9 lbf ft)
Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 lbf ft)
Screw, ground wire on frame	M6	10 Nm (7.4 lbf ft)
Screw, seat fixing	M6	8 Nm (5.9 lbf ft)
Screw, starter cable to starter relay	M6x8	6 Nm (4.4 lbf ft)
Screw, starter motor cable connection	M6	4 Nm (3 lbf ft)
Screw, throttle grip	M6	5 Nm (3.7 lbf ft)
Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft) Loctite®2701™
Nut, rim lock	M8	12 Nm (8.9 lbf ft)
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)
Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
Screw, engine sprocket cover on frame	M8	15 Nm (11.1 lbf ft)
Screw, foot brake lever	M8	20 Nm (14.8 lbf ft)
Screw, fork stub	M8	15 Nm (11.1 lbf ft)
Screw, front brake caliper	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
Screw, manifold on cylinder head brace	M8	15 Nm (11.1 lbf ft)
Screw, side stand (TX 300)	M8	33 Nm (24.3 lbf ft) Loctite®2701™
Screw, subframe	M8	35 Nm (25.8 lbf ft) Loctite®2701™
Screw, subframe bottom	M8	30 Nm (22.1 lbf ft) Loctite®2701™
Screw, top steering stem	M8	20 Nm (14.8 lbf ft) Loctite®243™

23 TECHNICAL SPECIFICATIONS

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
Engine bracket screw	M10	60 Nm (44.3 lbf ft)
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, bottom shock absorber	M10	60 Nm (44.3 lbf ft) Loctite® 2701™
Screw, handlebar support	M10	40 Nm (29.5 lbf ft) Loctite® 243™
Coolant temperature sensor	M10x1.25	10 Nm (7.4 lbf ft)
Nut, fork pivot	M16x1.5	100 Nm (73.8 lbf ft)
Nut, frame on pull rod	M16x1.5	80 Nm (59 lbf ft)
Nut, pull rod on triangular lever	M16x1.5	80 Nm (59 lbf ft)
Nut, triangular lever on link fork	M16x1.5	80 Nm (59 lbf ft)
Screw, front wheel spindle	M20x1.5	35 Nm (25.8 lbf ft)
Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
Nut, wheel spindle, rear	M22x1.5	80 Nm (59 lbf ft)
Screw-in fitting, cooling system	M24x1.5	7.5 Nm (5.53 lbf ft)

Brake fluid DOT 4 / DOT 5.1**Standard/classification**

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier**Castrol**

- REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

Coolant**Guideline**

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	-25 °C (-13 °F)
-----------------------------------	-----------------

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier**MOTOREX®**

- COOLANT M3.0

Engine oil (15W/50)**Standard/classification**

- JASO T903 MA2 (📖 p. 145)
- SAE (📖 p. 145) (15W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Recommended supplier**MOTOREX®**

- Top Speed 4T

Engine oil, 2-stroke**Standard/classification**

- JASO FD (📖 p. 145)

Guideline

- Only use high-grade 2-stroke engine oil from a reputable brand.

fully synthetic

Recommended supplier
MOTOREX®
– Cross Power 2T

Fork oil (SAE 4) (48601166S1)

Standard/classification
– SAE (📖 p. 145) (SAE 4)

Guideline
– Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Shock absorber fluid (SAE 2.5) (50180751S1)

Standard/classification
– SAE (📖 p. 145) (SAE 2.5)

Guideline
– Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95)

Standard/classification
– DIN EN 228 (ROZ 95)

Guideline
– Only use super unleaded fuel that matches or is equivalent to the specified standard.
– Fuel with an ethanol content of up to 10% (E10 fuel) is safe to use.



Info
Do **not** use fuel containing methanol (e.g., M15, M85, M100) or more than 10% ethanol (e.g., E15, E25, E85, E100).

Super unleaded (95 octane) mixed with 2-stroke engine oil (1:60)

Standard/classification
– DIN EN 228
– JASO FD (📖 p. 145) (1:60)

Mixture ratio

1:60	Engine oil, 2-stroke (📖 p. 141) Super unleaded (ROZ 95) (📖 p. 142)
------	---

Recommended supplier
MOTOREX®
– Cross Power 2T

Air filter cleaner

Recommended supplier

MOTOREX®

- Racing Bio Dirt Remover

Chain cleaner

Recommended supplier

MOTOREX®

- Chain Clean

High viscosity grease

Recommended supplier

SKF®

- LGHB 2

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

MOTOREX®

- Moto Clean

Off-road chain spray

Recommended supplier

MOTOREX®

- Chainlube Offroad

Oil for foam air filter

Recommended supplier

MOTOREX®

- Racing Bio Liquid Power

Preserving materials for paints, metal and rubber

Recommended supplier

MOTOREX®

- Moto Protect

Silicone spray

Recommended supplier

MOTOREX®

- Silicone Spray

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

MOTOREX®

- Quick Cleaner

Special grease (00062010053)

Recommended supplier

Klüber Lubrication®

- Klüberfood NH1 34-401

Universal oil spray

Recommended supplier

MOTOREX®

- Joker 440 Synthetic

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The **JASO T903 MA2** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

JASO FD

JASO FD is a classification for a 2-stroke engine oil that was specifically developed for the extreme demands of racing. Thanks to first-rate synthetic esters and specially designed additives, superb combustion is achieved even under extreme operating conditions.

OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-----	--------------------	--

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

29.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Malfunction indicator lamp lights up/flashes orange – The OBD has detected a malfunction in the vehicle electronics.
	Malfunction indicator lamp lights up/flashes orange – The OBD has detected a malfunction in the vehicle electronics.

29.2 Green and white symbols

Green and white symbols convey information.

	Indicator lamp  lights up white – STANDARD mapping is activated.
	Indicator lamp  lights up green – ADVANCED mapping is activated.

1	
12-V battery	
installing	103
removing	102
starting power	23
12-V battery	
charging	104
A	
Air filter	
cleaning	67
installing	67
removing	66
Air filter box	
cleaning	67
Air filter box cover	
installing	65
preparing for securing	68
removing	64
Air suspension XACT	42
Antifreeze	
checking	108
Auxiliary substances	10
B	
Basic chassis setting	
checking with rider's weight	35
Blink code	130-131
Brake discs	
checking	83
Brake fluid	
front brake, adding	85
rear brake, adding	91
Brake fluid level	
of front brake, checking	84
of rear brake, checking	91
Brake lining retainers	
of front brake, checking	86
of rear brake, checking	92
Brake linings	
of front brake, changing	87
of front brake, checking	86
of rear brake, checking	92
of the rear brake, changing	93
C	
Capacity	
coolant	134
gear oil	122, 134

Chain	
checking	76
cleaning	73
Chain guide	
checking	76
Chain tension	
adjusting	75
checking	74
Clutch	
fluid level, checking/correcting	80
fluid, changing	81
Clutch lever	15
basic position, adjusting	80
Cold start button	19
Combination instrument	17
Compression damping	
fork, adjusting	44
Coolant	
changing	112
draining	110
refilling	110
Coolant level	
checking	108-109
Cooling system	108
Customer service	10
D	
Diagnostics connector	107
Difficult operating conditions	24
dry sand	24
high temperature	26
low temperature	26
muddy surfaces	25
slow speed	26
snow	26
wet sand	25
wet surfaces	25
E	
Engine	
running in	23
Engine guard	
installing	51
removing	50
Engine number	13
Engine sprocket	
checking	76
Environment	9

Exhaust control		Gear oil level	
end positions, programming	114	checking	121
F		H	
Figures	10	Hand brake lever	15
Foot brake lever	20	basic position, adjusting	83
basic position, adjusting	90	free travel, checking	83
free travel, checking	89	Handlebar position	46
Fork		adjusting	46
air pressure, adjusting	43	High-speed compression damping	
basic setting, checking	42	shock absorber, adjusting	36
Fork legs		Husqvarna Motorcycles technical accessories	10
bleeding	49	I	
dust boots, cleaning	49	Idle speed	
installing	53	adjusting	118
removing	53	Idle speed adjusting screw	19
Fork part number	13	Implied warranty	10
Fork protector		Indicator lamps	
installing	50	overview	16
removing	50	Intended use	6
Frame		L	
checking	78	Link fork	
Frame protector		checking	78
installing	52	Lower triple clamp	
removing	52	installing	55
Front fender		removing	54
installing	60	Low-speed compression damping	
removing	59	shock absorber, adjusting	35
Front wheel		M	
installing	97	Main fuse	
removing	96	changing	105
Fuel screen		Main silencer	
changing	120	glass fiber yarn filling, changing	69
Fuel tank		installing	69
installing	71	removing	68
removing	70	Manufacturer warranty	10
Fuel tank filler cap		Mapping	
closing	18	changing	116
opening	17	Misuse	6
Fuel, oils, etc.	10	Motorcycle	
Fuse		cleaning	124
main fuse, changing	105	from lift stand, removing	48
of the fuel pump, changing	106	lift stand, raising with	48
G		O	
Gear oil		Overview of indicator lights	16
adding	122	Owner's Manual	9
changing	121		

P	
Play in throttle cable	
adjusting	117
checking	116
Plug-in stand	20
Preparing for use	
advice on preparing for first use	22
after storage	127
checks and maintenance measures when preparing for use	27
Protective clothing	8
R	
Rear sprocket	
checking	76
Rear wheel	
installing	98
removing	97
Rebound damping	
fork, adjusting	45
shock absorber, adjusting	37
Refueling	
fuel	31
Riding sag	
adjusting	40
Right side panel	
installing	52
removing	51
Rubber grip	
checking	79
S	
Safe operation	7
Seat	
mounting	64
removing	63
Service	10
Shift lever	19
basic position, adjusting	119
basic position, checking	118
Shock absorber	
compression damping, general	35
high-speed compression damping, adjusting	36
installing	62
low-speed compression damping, adjusting	35
rebound damping, adjusting	37
removing	61
riding sag, checking	39
spring preload, adjusting	39
static sag, checking	38
Shock absorber article number	14
Side stand	21
Spare parts	10
Spoke tension	
checking	101
Start button	16
Start number plate	
installing	59
removing	59
Starting	27
Starting power of lithium-ion batteries at low temperatures	23
Steering head bearing	
lubricating	59
Steering head bearing play	
adjusting	58
checking	57
Steering head label	13
Stop button	15
Storage	126
T	
Technical specifications	
capacities	134
chassis	134
chassis tightening torques	138
electrical system	135
engine	132
engine tightening torques	133
fork	136
shock absorber	137
tires	135
Throttle cable routing	
checking	78
Throttle grip	15
Tire condition	
checking	100
Tire pressure	
checking	100
Transporting	30
Troubleshooting	128-129
U	
Use definition	6
V	
Vehicle identification number	13
View of vehicle	
front left	11

rear right 12

W

Work rules 8



3402712en

12.04.2023



Husqvarna Motorcycles GmbH
Stallhofnerstraße 3 | 5230 Mattighofen | Austria
www.husqvarna-motorcycles.com



Photo: Mitterbauer/KISKA,
Husqvarna Motorcycles GmbH