

# OWNER'S MANUAL 2024



FE 350

FE 350w

FE 350 PRO

Art. no. 3402719en





# DEAR HUSQVARNA MOTORCYCLES CUSTOMER

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with appropriate care, will bring you pleasure for a long time to come.

We wish you good and safe riding at all times!

Please enter the serial number of your vehicle below.

|                                                               |                 |
|---------------------------------------------------------------|-----------------|
| Vehicle identification number (📖 p. 14)                       | Stamp of dealer |
| Engine number (📖 p. 14)                                       |                 |
| Key number (All FE models apart from FE 350w US)<br>(📖 p. 14) |                 |

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Motorcycles accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2023 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

Husqvarna Motorcycles GmbH  
Stallhofnerstraße 3  
5230 Mattighofen, Austria

This document is valid for the following models:

FE 350 EU (F2203X4)

FE 350w US (F2275X6)

FE 350 PRO EU (F2203X5)

FE 350 PRO ASEAN (F2288X5)



3402719en

30.11.2023

# TABLE OF CONTENTS

|      |                                                                |    |      |                                                                         |    |
|------|----------------------------------------------------------------|----|------|-------------------------------------------------------------------------|----|
| 1    | MEANS OF REPRESENTATION.....                                   | 6  | 6.10 | Combination switch (All FE models apart from FE 350w US) .....          | 19 |
| 1.1  | Symbols used .....                                             | 6  | 6.11 | Overview of indicator lights (All FE models apart from FE 350w US)..... | 19 |
| 1.2  | Formats used .....                                             | 6  | 6.12 | Overview of indicator lights (FE 350w US) .....                         | 20 |
| 2    | SAFETY ADVICE .....                                            | 7  | 6.13 | Opening fuel tank filler cap .....                                      | 20 |
| 2.1  | Use definition – intended use .....                            | 7  | 6.14 | Closing the fuel tank filler cap.....                                   | 21 |
| 2.2  | Misuse.....                                                    | 7  | 6.15 | Cold start button.....                                                  | 21 |
| 2.3  | Safety advice .....                                            | 7  | 6.16 | Idle speed adjusting screw .....                                        | 22 |
| 2.4  | Degrees of risk and symbols .....                              | 8  | 6.17 | Shift lever .....                                                       | 22 |
| 2.5  | Tampering warning .....                                        | 8  | 6.18 | Foot brake lever .....                                                  | 23 |
| 2.6  | Safe operation.....                                            | 8  | 6.19 | Side stand .....                                                        | 23 |
| 2.7  | Protective clothing .....                                      | 9  | 6.20 | Steering lock (All FE models apart from FE 350w US).....                | 23 |
| 2.8  | Work rules.....                                                | 9  | 6.21 | Locking the steering (All FE models apart from FE 350w US) .....        | 24 |
| 2.9  | Environment.....                                               | 10 | 6.22 | Unlocking the steering (All FE models apart from FE 350w US).....       | 24 |
| 2.10 | Owner's Manual.....                                            | 10 |      |                                                                         |    |
| 3    | IMPORTANT NOTES .....                                          | 11 | 7    | COMBINATION INSTRUMENT .....                                            | 25 |
| 3.1  | Manufacturer warranty, implied warranty .....                  | 11 | 7.1  | Combination instrument overview .....                                   | 25 |
| 3.2  | Fuel, auxiliary substances.....                                | 11 | 7.2  | Activation and test .....                                               | 25 |
| 3.3  | Spare parts, accessories .....                                 | 11 | 7.3  | Setting kilometers or miles .....                                       | 25 |
| 3.4  | Service .....                                                  | 11 | 7.4  | Setting the combination instrument....                                  | 26 |
| 3.5  | Figures .....                                                  | 11 | 7.5  | Setting the clock .....                                                 | 27 |
| 3.6  | Customer service.....                                          | 11 | 7.6  | Viewing the lap time.....                                               | 27 |
| 4    | VIEW OF VEHICLE .....                                          | 12 | 7.7  | Display mode SPEED (speed).....                                         | 28 |
| 4.1  | View of vehicle, front left (example) ....                     | 12 | 7.8  | Display mode SPEED/H (operating hours) .....                            | 28 |
| 4.2  | View of vehicle, rear right (example).....                     | 13 | 7.9  | Setup menu.....                                                         | 28 |
| 5    | SERIAL NUMBERS.....                                            | 14 | 7.10 | Adjusting the unit of measurement.....                                  | 29 |
| 5.1  | Vehicle identification number.....                             | 14 | 7.11 | Display mode SPEED/CLK (time) .....                                     | 30 |
| 5.2  | Type label (All FE models apart from FE 350w US) .....         | 14 | 7.12 | Setting the clock .....                                                 | 30 |
| 5.3  | Key number (All FE models apart from FE 350w US).....          | 14 | 7.13 | Display mode SPEED/LAP (lap time) .....                                 | 30 |
| 5.4  | Engine number.....                                             | 14 | 7.14 | Viewing the lap time.....                                               | 31 |
| 5.5  | Fork part number .....                                         | 15 | 7.15 | Display mode SPEED/ODO (odometer).....                                  | 31 |
| 5.6  | Shock absorber article number .....                            | 15 | 7.16 | Display mode SPEED/TR1 (trip master 1) .....                            | 32 |
| 6    | CONTROLS .....                                                 | 16 | 7.17 | Display mode SPEED/TR2 (trip master 2) .....                            | 32 |
| 6.1  | Clutch lever .....                                             | 16 | 7.18 | Adjusting TR2 (trip master 2) .....                                     | 32 |
| 6.2  | Hand brake lever.....                                          | 16 | 7.19 | Display mode SPEED/A1 (average speed 1) .....                           | 33 |
| 6.3  | Throttle grip.....                                             | 17 | 7.20 | Display mode SPEED/A2 (average speed 2) .....                           | 33 |
| 6.4  | Horn button (All FE models apart from FE 350w US).....         | 17 | 7.21 | Display mode SPEED/S1 (stop watch 1) .....                              | 34 |
| 6.5  | Light switch (All FE models apart from FE 350w US).....        | 17 | 7.22 | Display mode SPEED/S2 (stop watch 2) .....                              | 34 |
| 6.6  | Light switch (FE 350w US).....                                 | 17 | 7.23 | Table of functions .....                                                | 35 |
| 6.7  | Turn signal switch (All FE models apart from FE 350w US) ..... | 18 |      |                                                                         |    |
| 6.8  | Start button.....                                              | 18 |      |                                                                         |    |
| 6.9  | Stop button.....                                               | 18 |      |                                                                         |    |



|      |                                                                         |    |       |                                                           |    |
|------|-------------------------------------------------------------------------|----|-------|-----------------------------------------------------------|----|
| 7.24 | Table of conditions and menu activation.....                            | 36 | 11.6  | Measuring the dimension of the rear wheel unloaded.....   | 53 |
| 8    | PREPARING FOR USE.....                                                  | 37 | 11.7  | Checking the static sag of the shock absorber .....       | 54 |
| 8.1  | Advice on preparing for first use.....                                  | 37 | 11.8  | Checking the riding sag of the shock absorber .....       | 54 |
| 8.2  | Running in the engine .....                                             | 38 | 11.9  | Adjusting the spring preload of the shock absorber 🛠..... | 55 |
| 8.3  | Starting power of lithium-ion batteries at low temperatures .....       | 39 | 11.10 | Adjusting the riding sag 🛠.....                           | 56 |
| 8.4  | Preparing the vehicle for difficult operating conditions .....          | 39 | 11.11 | Checking the basic setting of the fork.....               | 56 |
| 8.5  | Preparing the vehicle for riding on dry sand .....                      | 39 | 11.12 | Adjusting the compression damping of the fork.....        | 57 |
| 8.6  | Preparing the vehicle for riding on wet sand .....                      | 40 | 11.13 | Adjusting the rebound damping of the fork.....            | 57 |
| 8.7  | Preparing the vehicle for riding on wet and muddy circuits .....        | 40 | 11.14 | Handlebar position.....                                   | 58 |
| 8.8  | Preparing vehicle for high temperatures or slow riding .....            | 41 | 11.15 | Adjusting the handlebar position 🛠....                    | 58 |
| 8.9  | Preparing the vehicle for low temperatures or snow .....                | 41 | 12    | SERVICE WORK ON THE CHASSIS.....                          | 60 |
| 9    | RIDING INSTRUCTIONS .....                                               | 42 | 12.1  | Raising the motorcycle with a lift stand.....             | 60 |
| 9.1  | Checks and maintenance measures when preparing for use.....             | 42 | 12.2  | Removing the motorcycle from the lift stand .....         | 60 |
| 9.2  | Starting the vehicle .....                                              | 42 | 12.3  | Bleeding the fork legs .....                              | 60 |
| 9.3  | Activating traction control (All FE models apart from FE 350w US).....  | 43 | 12.4  | Cleaning the dust boots of the fork legs .....            | 61 |
| 9.4  | Starting off .....                                                      | 44 | 12.5  | Removing the fork protector.....                          | 61 |
| 9.5  | Quickshifter (All FE models apart from FE 350w US).....                 | 44 | 12.6  | Installing the fork protector.....                        | 62 |
| 9.6  | Activate the quickshifter (All FE models apart from FE 350w US).....    | 44 | 12.7  | Removing the fork legs 🛠.....                             | 62 |
| 9.7  | Shifting, riding.....                                                   | 45 | 12.8  | Installing the fork legs 🛠.....                           | 63 |
| 9.8  | Braking.....                                                            | 45 | 12.9  | Removing the frame protector.....                         | 64 |
| 9.9  | Stopping, parking .....                                                 | 46 | 12.10 | Installing the frame protector.....                       | 64 |
| 9.10 | Transporting.....                                                       | 46 | 12.11 | Removing the lower triple clamp 🛠....                     | 64 |
| 9.11 | Refueling .....                                                         | 47 | 12.12 | Installing the lower triple clamp 🛠.....                  | 65 |
| 10   | SERVICE SCHEDULE.....                                                   | 49 | 12.13 | Checking the steering head bearing play .....             | 67 |
| 10.1 | Additional information.....                                             | 49 | 12.14 | Adjusting the steering head bearing play 🛠.....           | 68 |
| 10.2 | Service schedule.....                                                   | 49 | 12.15 | Lubricating the steering head bearing 🛠.....              | 68 |
| 11   | TUNING THE CHASSIS.....                                                 | 51 | 12.16 | Removing front fender .....                               | 69 |
| 11.1 | Checking the basic chassis setting with rider's weight.....             | 51 | 12.17 | Installing front fender .....                             | 69 |
| 11.2 | Compression damping of the shock absorber.....                          | 51 | 12.18 | Removing the shock absorber 🛠.....                        | 70 |
| 11.3 | Adjusting the low-speed compression damping of the shock absorber.....  | 51 | 12.19 | Installing the shock absorber 🛠.....                      | 71 |
| 11.4 | Adjusting the high-speed compression damping of the shock absorber..... | 52 | 12.20 | Removing the seat .....                                   | 73 |
| 11.5 | Adjusting the rebound damping of the shock absorber .....               | 53 | 12.21 | Mounting the seat .....                                   | 73 |
|      |                                                                         |    | 12.22 | Removing the air filter box cover.....                    | 74 |
|      |                                                                         |    | 12.23 | Installing the air filter box cover.....                  | 74 |
|      |                                                                         |    | 12.24 | Removing the air filter 🛠.....                            | 74 |
|      |                                                                         |    | 12.25 | Installing the air filter 🛠.....                          | 75 |
|      |                                                                         |    | 12.26 | Cleaning the air filter and air filter box 🛠.....         | 75 |
|      |                                                                         |    | 12.27 | Removing the right side cover .....                       | 76 |
|      |                                                                         |    | 12.28 | Installing the right side cover .....                     | 76 |

# TABLE OF CONTENTS

|       |                                                                                                                                                    |     |       |                                                                                                                                                       |     |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------|-----|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| 12.29 | Removing the main silencer.....                                                                                                                    | 76  | 14    | WHEELS, TIRES.....                                                                                                                                    | 108 |
| 12.30 | Installing the main silencer.....                                                                                                                  | 77  | 14.1  | Removing the front wheel  .....                                    | 108 |
| 12.31 | Cleaning the spark arrestor  (FE 350w US).....                    | 77  | 14.2  | Installing the front wheel  .....                                  | 109 |
| 12.32 | Changing the glass fiber yarn filling in the main silencer  ..... | 79  | 14.3  | Removing the rear wheel  .....                                     | 110 |
| 12.33 | Removing the fuel tank  .....                                     | 80  | 14.4  | Installing the rear wheel  .....                                   | 112 |
| 12.34 | Installing the fuel tank  .....                                   | 82  | 14.5  | Checking the tire condition.....                                                                                                                      | 114 |
| 12.35 | Checking for chain dirt accumulation.....                                                                                                          | 83  | 14.6  | Checking tire pressure.....                                                                                                                           | 114 |
| 12.36 | Cleaning the chain.....                                                                                                                            | 83  | 14.7  | Checking spoke tension.....                                                                                                                           | 115 |
| 12.37 | Checking the chain tension.....                                                                                                                    | 84  | 15    | ELECTRICAL SYSTEM.....                                                                                                                                | 116 |
| 12.38 | Adjusting the chain tension.....                                                                                                                   | 85  | 15.1  | Removing the 12-V battery  .....                                   | 116 |
| 12.39 | Checking the chain, rear sprocket, engine sprocket, and chain guide.....                                                                           | 87  | 15.2  | Installing the 12-V battery  .....                                 | 117 |
| 12.40 | Checking the frame  .....                                         | 89  | 15.3  | Charging the 12-V battery  .....                                   | 118 |
| 12.41 | Checking the link fork  .....                                     | 89  | 15.4  | Changing the main fuse.....                                                                                                                           | 120 |
| 12.42 | Checking the throttle cable routing.....                                                                                                           | 89  | 15.5  | Removing the headlight mask with the headlight.....                                                                                                   | 120 |
| 12.43 | Checking the rubber grip.....                                                                                                                      | 90  | 15.6  | Installing the headlight mask with the headlight.....                                                                                                 | 121 |
| 12.44 | Programming the quickshifter (All FE models apart from FE 350w US) ...                                                                             | 91  | 15.7  | Changing the headlight bulb.....                                                                                                                      | 122 |
| 12.45 | Adjusting the basic position of the clutch lever.....                                                                                              | 91  | 15.8  | Changing the turn signal bulb (All FE models apart from FE 350w US).....                                                                              | 122 |
| 12.46 | Checking/correcting the fluid level of hydraulic clutch.....                                                                                       | 92  | 15.9  | Checking the headlight setting.....                                                                                                                   | 123 |
| 12.47 | Changing the hydraulic clutch fluid  .....                      | 93  | 15.10 | Adjust the headlight range.....                                                                                                                       | 124 |
| 12.48 | Removing the engine guard.....                                                                                                                     | 94  | 15.11 | Changing the combination instrument battery.....                                                                                                      | 124 |
| 12.49 | Installing the engine guard.....                                                                                                                   | 94  | 15.12 | Diagnostics connector.....                                                                                                                            | 125 |
| 13    | BRAKE SYSTEM.....                                                                                                                                  | 95  | 15.13 | OCU.....                                                                                                                                              | 125 |
| 13.1  | Adjusting the basic position of the hand brake lever (All standard models).....                                                                    | 95  | 16    | COOLING SYSTEM.....                                                                                                                                   | 126 |
| 13.2  | Checking the free travel of the hand brake lever (All special models).....                                                                         | 95  | 16.1  | Cooling system.....                                                                                                                                   | 126 |
| 13.3  | Adjusting the free travel of the handbrake lever (All special models).....                                                                         | 95  | 16.2  | Checking the antifreeze and coolant level.....                                                                                                        | 126 |
| 13.4  | Checking brake discs.....                                                                                                                          | 96  | 16.3  | Checking the coolant level.....                                                                                                                       | 127 |
| 13.5  | Checking the front brake fluid level.....                                                                                                          | 96  | 16.4  | Draining the coolant  .....                                      | 127 |
| 13.6  | Adding front brake fluid  .....                                 | 97  | 16.5  | Refilling with coolant  .....                                    | 128 |
| 13.7  | Checking that the brake linings of the front brake are secured.....                                                                                | 98  | 16.6  | Changing the coolant  .....                                      | 129 |
| 13.8  | Changing the brake linings of the front brake  .....            | 99  | 17    | TUNING THE ENGINE.....                                                                                                                                | 130 |
| 13.9  | Checking the free travel of foot brake lever.....                                                                                                  | 101 | 17.1  | Checking the play in the throttle cable.....                                                                                                          | 130 |
| 13.10 | Adjusting the basic position of the foot brake lever  .....     | 102 | 17.2  | Adjusting the play in the throttle cable  .....                  | 130 |
| 13.11 | Checking the rear brake fluid level.....                                                                                                           | 103 | 17.3  | Adjusting the characteristic map of the throttle response  ..... | 131 |
| 13.12 | Adding rear brake fluid  .....                                  | 103 | 17.4  | Changing the mapping (All FE models apart from FE 350w US).....                                                                                       | 133 |
| 13.13 | Checking that the brake linings of the rear brake are secured.....                                                                                 | 105 | 17.5  | Adjusting the idle speed  .....                                  | 133 |
| 13.14 | Changing the rear brake linings  .....                          | 105 | 17.6  | Programming the throttle valve position.....                                                                                                          | 134 |
|       |                                                                                                                                                    |     | 17.7  | Checking the basic position of the shift lever.....                                                                                                   | 135 |
|       |                                                                                                                                                    |     | 17.8  | Adjusting the basic position of the shift lever  .....           | 135 |

|        |                                                                                                                                                         |     |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| 18     | SERVICE WORK ON THE ENGINE .....                                                                                                                        | 136 |
| 18.1   | Changing the fuel screen  .....                                        | 136 |
| 18.2   | Checking the engine oil level .....                                                                                                                     | 137 |
| 18.3   | Changing the engine oil and oil filter, cleaning the oil screen  ..... | 137 |
| 18.4   | Adding engine oil .....                                                                                                                                 | 140 |
| 19     | CLEANING, CARE .....                                                                                                                                    | 141 |
| 19.1   | Cleaning the motorcycle .....                                                                                                                           | 141 |
| 19.2   | Checks and maintenance steps for winter operation .....                                                                                                 | 142 |
| 20     | STORAGE.....                                                                                                                                            | 143 |
| 20.1   | Storage .....                                                                                                                                           | 143 |
| 20.2   | Preparing for use after storage .....                                                                                                                   | 144 |
| 21     | TROUBLESHOOTING .....                                                                                                                                   | 145 |
| 22     | BLINK CODE .....                                                                                                                                        | 148 |
| 23     | TECHNICAL SPECIFICATIONS.....                                                                                                                           | 150 |
| 23.1   | Engine .....                                                                                                                                            | 150 |
| 23.2   | Engine tightening torques .....                                                                                                                         | 151 |
| 23.3   | Capacities .....                                                                                                                                        | 153 |
| 23.3.1 | Engine oil .....                                                                                                                                        | 153 |
| 23.3.2 | Coolant .....                                                                                                                                           | 153 |
| 23.3.3 | Fuel.....                                                                                                                                               | 153 |
| 23.4   | Chassis .....                                                                                                                                           | 154 |
| 23.5   | Electrical system .....                                                                                                                                 | 155 |
| 23.6   | Tires .....                                                                                                                                             | 155 |
| 23.7   | Fork.....                                                                                                                                               | 155 |
| 23.8   | Shock absorber .....                                                                                                                                    | 156 |
| 23.9   | Chassis tightening torques .....                                                                                                                        | 156 |
| 24     | SUBSTANCES.....                                                                                                                                         | 159 |
| 25     | AUXILIARY SUBSTANCES.....                                                                                                                               | 161 |
| 26     | STANDARDS .....                                                                                                                                         | 163 |
| 27     | INDEX OF SPECIAL TERMS .....                                                                                                                            | 164 |
| 28     | LIST OF ABBREVIATIONS .....                                                                                                                             | 165 |
| 29     | LIST OF SYMBOLS .....                                                                                                                                   | 166 |
| 29.1   | Yellow and orange symbols.....                                                                                                                          | 166 |
| 29.2   | Green and blue symbols .....                                                                                                                            | 166 |
|        | INDEX .....                                                                                                                                             | 167 |

# 1 MEANS OF REPRESENTATION

## 1.1 Symbols used

The meaning of specific symbols is described below.

|                                                                                     |                                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Indicates an expected reaction (e.g. of a work step or a function).                                                                                                                                                                                                                                                        |
|    | Indicates an unexpected reaction (e.g. of a work step or a function).                                                                                                                                                                                                                                                      |
|    | Indicates work that requires expert knowledge and technical understanding.<br>In the interests of your own safety, have these jobs performed by an authorized Husqvarna Motorcycles workshop. Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required. |
|    | Indicates a page reference (more information is provided on the specified page).                                                                                                                                                                                                                                           |
|    | Indicates information with more details or tips.                                                                                                                                                                                                                                                                           |
|    | Indicates the result of a testing step.                                                                                                                                                                                                                                                                                    |
|  | Indicates a voltage measurement.                                                                                                                                                                                                                                                                                           |
|  | Indicates a current measurement.                                                                                                                                                                                                                                                                                           |
|  | Indicates the end of an activity, including potential rework.                                                                                                                                                                                                                                                              |

## 1.2 Formats used

The typographical formats used in this document are explained below.

|                                |                                                                                                             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Proprietary name</b>        | Indicates a proprietary name.                                                                               |
| <b>Name<sup>®</sup></b>        | Indicates a protected name.                                                                                 |
| <b>Brand<sup>™</sup></b>       | Indicates a brand available on the open market.                                                             |
| <u><b>Underlined terms</b></u> | Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary. |

## 2.1 Use definition – intended use

### (All FE models apart from FE 350w US)

This vehicle has been designed and built to withstand the normal stresses and strains of offroad leisure use.



#### Info

This vehicle is homologated and approved for use on public roads.  
No homologation-relevant components may be removed or modified.

### (FE 350w US)

This vehicle has been designed and built to withstand the normal stresses and strains of offroad leisure use. Additionally, it fulfills the **CARB (California Air Resources Board)** guidelines of the **Green Sticker** program.



#### Info

This vehicle is not approved for use on public roads.  
No homologation-relevant components may be removed or modified.  
This vehicle is not designed for use in racing on closed circuits or for Motocross use.

## 2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

## 2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



#### Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

### 2.4 Degrees of risk and symbols



#### **Danger**

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



#### **Warning**

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



#### **Caution**

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

#### **Note**

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



#### **Note**

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

### 2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencers, baffles, manifolds or any other components which conduct emissions.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

#### **(FE 350w US)**

An add-on or modified part must be compliant with applicable ARB evaporative emission control standards. A violation of this requirement is punishable by civil and/or criminal punishment.

### 2.6 Safe operation



#### **Danger**

**Danger of accidents** A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.

**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

**Warning**

**Danger of burns** Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

The vehicle should only be used by trained persons. An appropriate driver's license is needed to drive the vehicle on public roads.

Have malfunctions that impair safety immediately eliminated by an authorized Husqvarna Motorcycles workshop.

Adhere to the information and warning labels on the vehicle.

## 2.7 Protective clothing

**Warning**

**Risk of injury** Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, Husqvarna Motorcycles recommends that you only operate the vehicle while wearing protective clothing.

## 2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with transponder key) or the motor must be at a standstill (models without ignition lock or transponder key).

Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

|                       |                        |
|-----------------------|------------------------|
| Ambient temperature   | 20 °C (68 °F)          |
| Ambient air pressure  | 1,013 mbar (14.69 psi) |
| Relative air humidity | 60 ± 5 %               |

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite**®) is required. Observe the manufacturer's instructions.

If thread locker (e.g., **Precote**®) has already been applied to a new part, do not apply any additional thread locker.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.

### 2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

### 2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way to find out how best to customize the vehicle for your own use and how you can protect yourself from injury.



#### Tip

Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.

---

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized Husqvarna Motorcycles dealer.

The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.

The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate.

The Owner's Manual is also available for download from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website. A printed copy can also be ordered from your authorized Husqvarna Motorcycles dealer.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)



## 3.1 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must only be carried out in an authorized Husqvarna Motorcycles workshop and confirmed in the **Husqvarna Motorcycles Dealer.net**, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

## 3.2 Fuel, auxiliary substances



### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

## 3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Motorcycles, and have them installed by an authorized Husqvarna Motorcycles workshop. Husqvarna Motorcycles accepts no liability for other products and any resulting damage or loss.

The article numbers of some spare parts and accessory products are specified in parentheses in the descriptions. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

The current **Husqvarna Motorcycles** accessories for your vehicle are available from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)

## 3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, air filter or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

## 3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

## 3.6 Customer service


Your authorized Husqvarna Motorcycles dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Motorcycles.

A list of authorized Husqvarna Motorcycles dealers can be found on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: [www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)


## 4 VIEW OF VEHICLE

### 4.1 View of vehicle, front left (example)

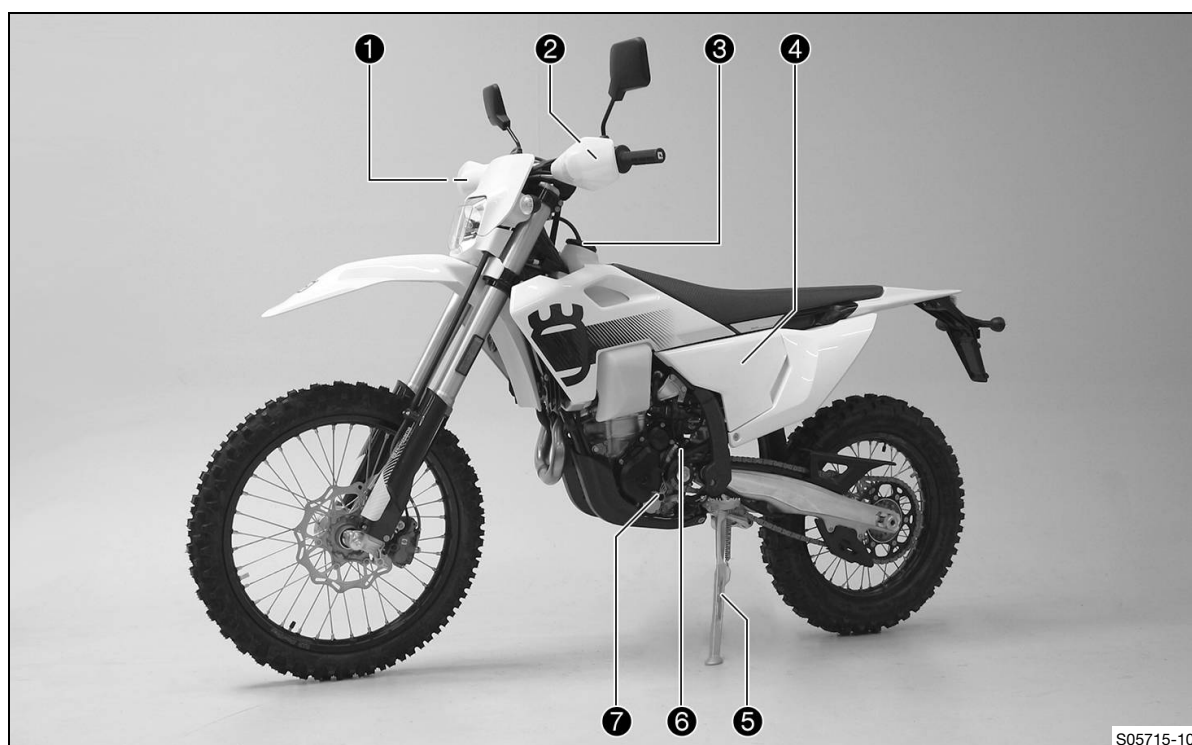

- ❶ Hand brake lever (📖 p. 16)
- ❷ Clutch lever (📖 p. 16)
- ❸ Fuel tank filler cap
- ❹ Air filter box cover
- ❺ Side stand (📖 p. 23)
- ❻ Engine number (📖 p. 14)
- ❼ Shift lever (📖 p. 22)


## 4.2 View of vehicle, rear right (example)

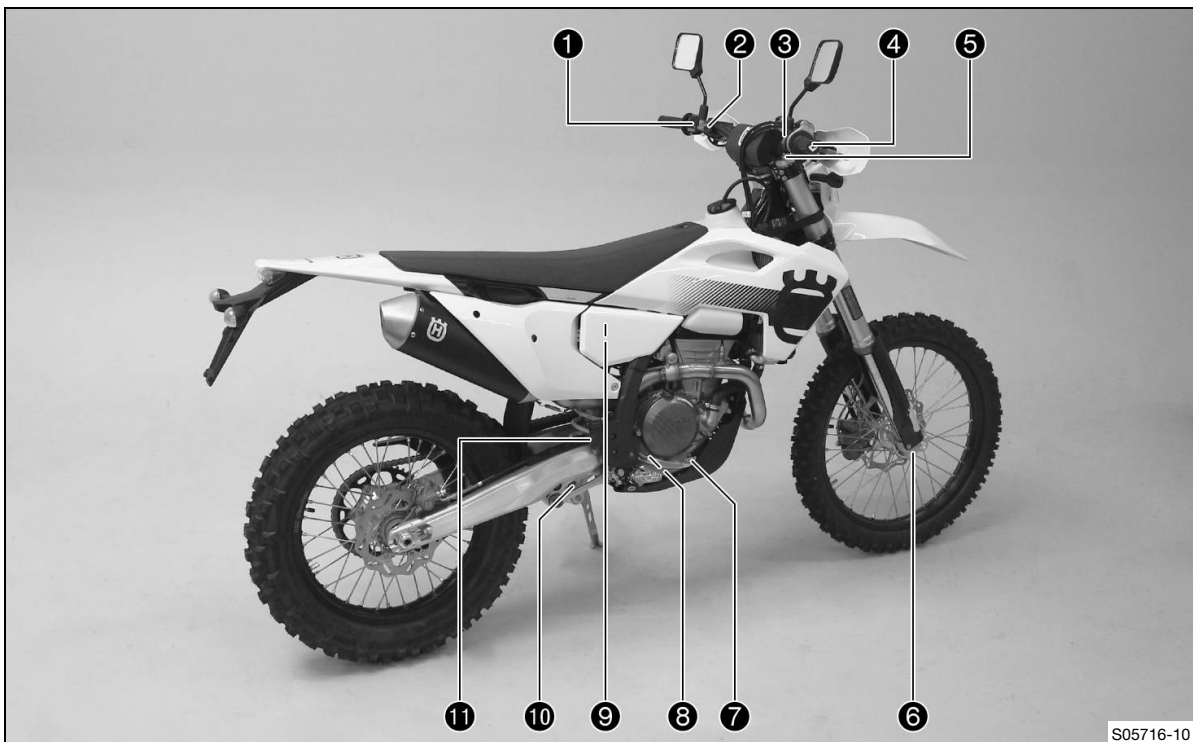

- ① Horn button (📖 p. 17) **(All FE models apart from FE 350w US)**
- ① Light switch (📖 p. 17) **(All FE models apart from FE 350w US)**
- ① Turn signal switch (📖 p. 18) **(All FE models apart from FE 350w US)**
- ② Combination switch (📖 p. 19) **(All FE models apart from FE 350w US)**
- ③ Start button (📖 p. 18)
- ③ Stop button (📖 p. 18)
- ④ Throttle grip (📖 p. 17)
- ⑤ Fork compression adjuster
- ⑥ Fork rebound adjustment
- ⑦ Foot brake lever (📖 p. 23)
- ⑧ Level viewer, engine oil
- ⑨ Shock absorber compression adjuster
- ⑩ Shock absorber rebound adjuster
- ⑪ Level viewer for brake fluid, rear


## 5 SERIAL NUMBERS

### 5.1 Vehicle identification number

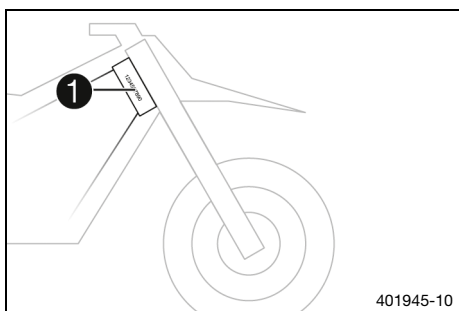

The vehicle identification number ❶ is stamped on the right side of the steering head.


### 5.2 Type label (All FE models apart from FE 350w US)

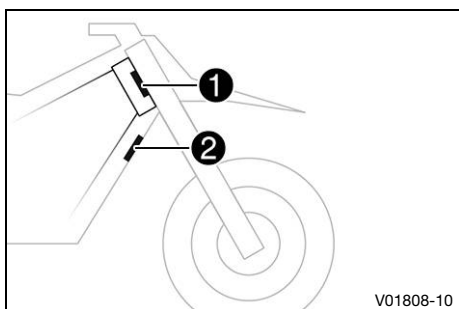 

The Europe type label ❶ is fixed to the front of the steering head.


The Canada type label ❷ is fixed to the front of the chest tube.

### 5.3 Key number (All FE models apart from FE 350w US)

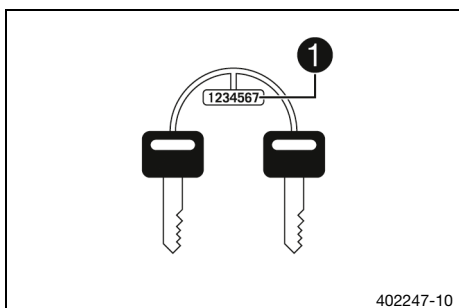


Key number ❶ for the steering lock is stamped on a tag on the key ring.

### 5.4 Engine number

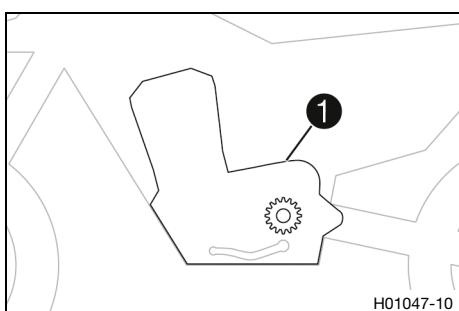


The engine number ❶ is embossed on the left side of the engine over the engine sprocket.

## 5.5 Fork part number

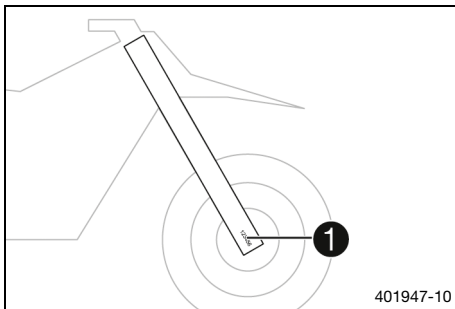

The fork part number ❶ is stamped on the inner side of the fork stub.


## 5.6 Shock absorber article number

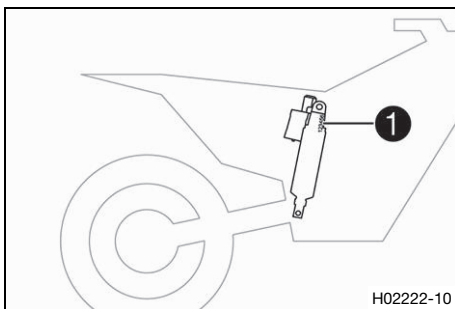

Shock absorber article number ❶ is stamped on the top of the shock absorber above the adjusting ring towards the engine side.


## 6 CONTROLS

### 6.1 Clutch lever

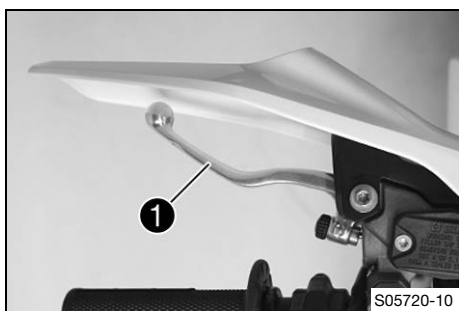

**(All standard models)**

 Clutch lever ❶ is fitted on the handlebar on the left.

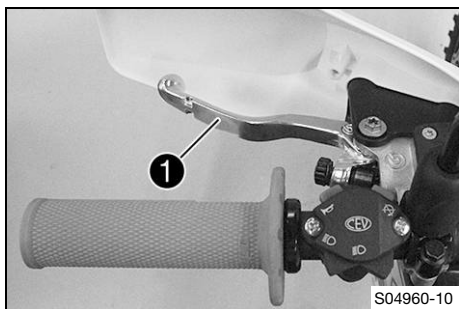


**(All special models)**

Clutch lever ❶ is fitted on the handlebar on the left.


The clutch is activated hydraulically and adjusts itself automatically.
 
### 6.2 Hand brake lever

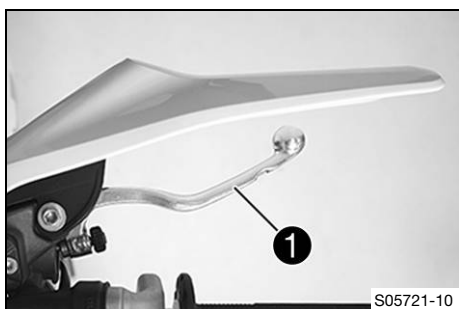

**(All standard models)**

 Hand brake lever ❶ is located on the right side of the handlebar.

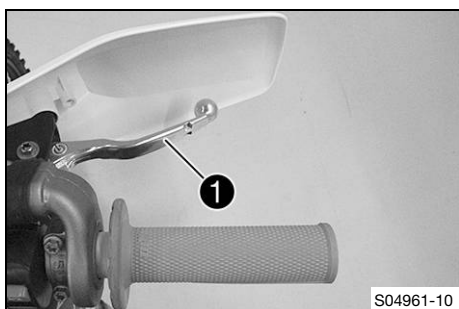


**(All special models)**

Hand brake lever ❶ is located on the right side of the handlebar.


The front brake is engaged using the hand brake lever.

## 6.3 Throttle grip

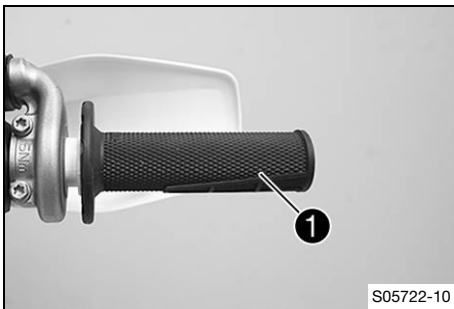

The throttle grip ❶ is fitted on the right side of the handlebar.

## 6.4 Horn button (All FE models apart from FE 350w US)

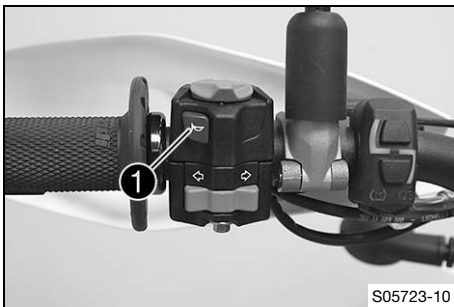


Horn button ❶ is fitted on the left side of the handlebar.

### Possible states

- The horn button ❶ is in the basic position
- The horn button ❶ is pressed – The horn is operated in this position.

## 6.5 Light switch (All FE models apart from FE 350w US)

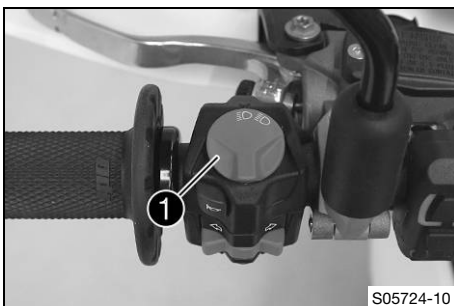


Light switch ❶ is fitted on the left side of the handlebar.

### Possible states

|  |                                                                                                                        |
|--|------------------------------------------------------------------------------------------------------------------------|
|  | Low beam on – Light switch is in the central position. In this position, the low beam and tail light are switched on.  |
|  | High beam on – Light switch is turned to the left. In this position, the high beam and the tail light are switched on. |

## 6.6 Light switch (FE 350w US)

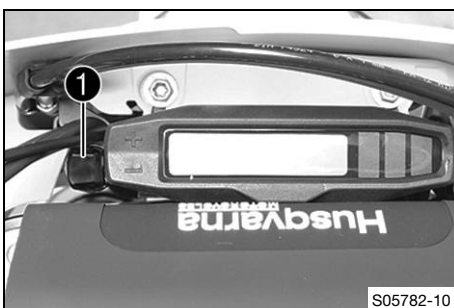

The button ❶ is located to the left of the combination instrument.

### Possible states

- Light off – Button is in the basic position, the light is switched off.
- Light on – Button is pressed in until it engages. Low beam and tail light are switched on.

6.7 Turn signal switch (All FE models apart from FE 350w US)



Turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

|   |                                                                        |
|---|------------------------------------------------------------------------|
|   | Turn signal off – The turn signal switch is in the central position.   |
| ← | Left turn signal, on – The turn signal switch is turned to the left.   |
| → | Right turn signal, on – The turn signal switch is turned to the right. |

6.8 Start button



Start button ❶ is fitted on the right side of the handlebar.

Possible states

- The start button ❶ is in the basic position
- The start button ❶ is pressed – The starter motor is actuated in this position.

6.9 Stop button



The stop button ❶ is located on the right side of the handlebar.

Possible states

- The stop button ❶ is in the basic position – In this position, the ignition circuit is closed and the engine can be started.
- Stop button ❶ pressed – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.



## 6.10 Combination switch (All FE models apart from FE 350w US)



The combination switch is fitted on the left side of the handlebar.

### Possible states

|      |                                                                                                                                             |
|------|---------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | STANDARD – STANDARD mapping is activated when the indicator lamp <b>A</b> lights up.                                                        |
| 1 TC | STANDARD with TC – STANDARD mapping with traction control is activated when the indicator lamp <b>A</b> and the TC indicator lamp light up. |
| 2    | ADVANCED – ADVANCED mapping is activated when the indicator lamp <b>B</b> lights up.                                                        |
| 2 TC | ADVANCED with TC – ADVANCED mapping with traction control is activated when the indicator lamp <b>B</b> and the TC indicator lamp light up. |



### Caution

**Voiding of the government approval for road use and the insurance coverage** If the combination switch is mounted, the vehicle's road permit, if any, expires.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.

The engine characteristic can be changed using button **1** and button **2** on the combination switch.

Traction control can be activated using the TC button **3** on the combination switch.

The quick shifter can also be activated via the combination switch.

## 6.11 Overview of indicator lights (All FE models apart from FE 350w US)



### Possible states

|  |                                                                                                                                                                                                         |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The high beam indicator lamp lights up blue – The high beam is switched on.                                                                                                                             |
|  | Malfunction indicator lamp lights up/flashes yellow – The <u>OBD</u> has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized Husqvarna Motorcycles workshop. |
|  | The fuel level warning lamp lights up yellow – The fuel level has reached the reserve mark.                                                                                                             |
|  | Turn signal indicator lamp flashes green – The turn signal is switched on.                                                                                                                              |

6.12 Overview of indicator lights (FE 350w US)



Possible states

|                                                                                   |                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Malfunction indicator lamp lights up/flashes yellow<br>– The <u>OBD</u> has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized Husqvarna Motorcycles workshop. |
|  | The fuel level warning lamp lights up yellow – The fuel level has reached the reserve mark.                                                                                                                |

6.13 Opening fuel tank filler cap



**Danger**

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



**Warning**

**Danger of poisoning** Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



**Note**


**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

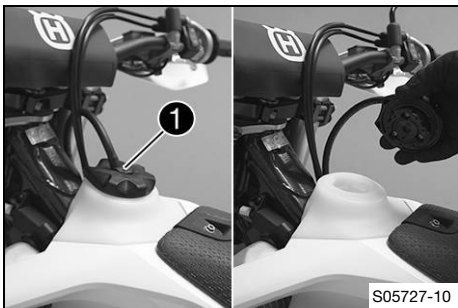

- Press release button **1**, turn the fuel tank filler cap counter-clockwise, and lift it off.

## 6.14 Closing the fuel tank filler cap

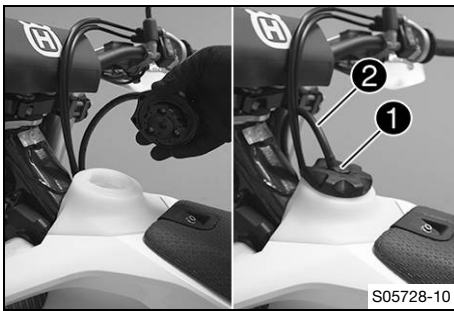

- Mount fuel tank filler cap and turn it clockwise until the release button **1** engages.




### Info

Route fuel tank breather hose **2** without kinks.



## 6.15 Cold start button

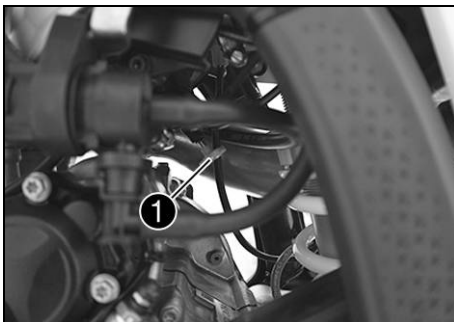

The cold start button **1** is fitted to the bottom of the throttle valve body.

The electronic fuel injection system extends the injection time if the engine is cold and the ambient temperature is low. To help the engine burn the increased fuel quantity, it must be supplied with additional oxygen by pushing the cold start button.

After briefly opening up the throttle and then releasing the throttle grip again, or turning the throttle grip towards the front, the cold start button returns to its original position.




### Info



Check whether the cold start button has returned to its basic position.

### Possible states

- The cold start button is activated – The cold start button is pushed in all the way.
- The cold start button is deactivated – The cold start button is in its basic position.

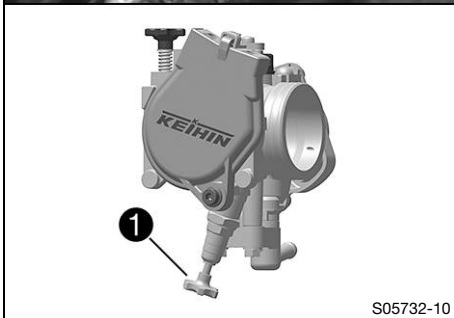

## 6.16 Idle speed adjusting screw

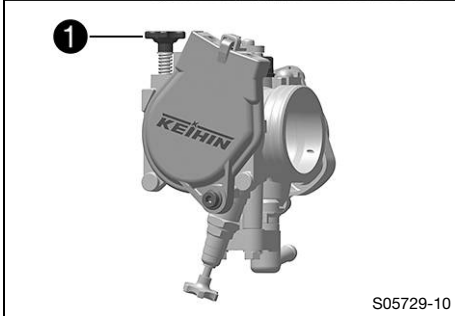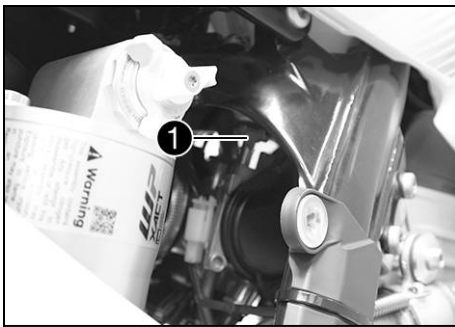

S05729-10

The idle setting of the throttle valve body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using the idle speed adjusting screw ①.

Increase the idle speed by turning the idle speed adjusting screw clockwise.


Decrease the idle speed by turning the idle speed adjusting screw counterclockwise.

## 6.17 Shift lever

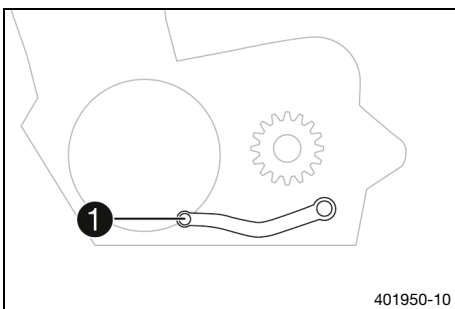

401950-10

Shift lever ① is mounted on the left of the engine.

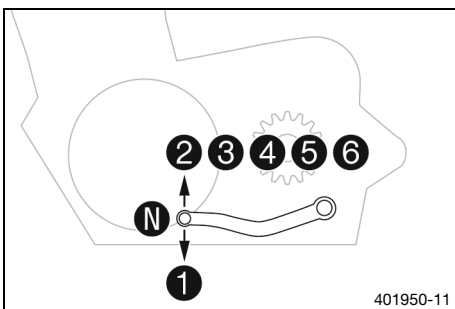


401950-11

The gear positions can be seen in the figure.


The neutral or idle position is between the first and second gears.

## 6.18 Foot brake lever

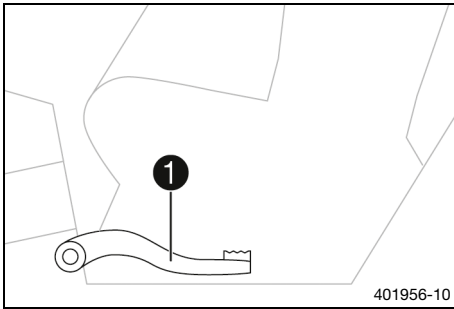


Foot brake lever ① is located in front of the right footrest. The rear brake is engaged with the foot brake lever.

## 6.19 Side stand

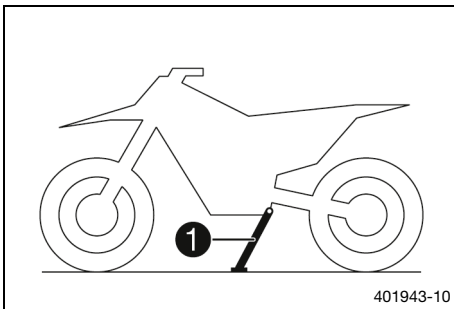

The side stand ① is attached to the left side of the vehicle.

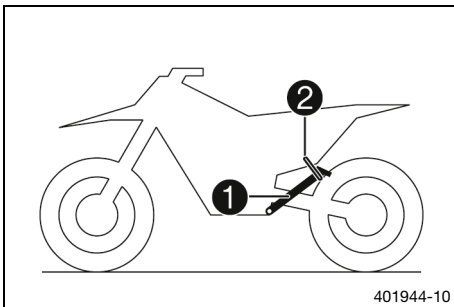


The side stand is used for parking the motorcycle.

### **i** Info

When you are riding, side stand ① must be folded up and secured with rubber strap ②.

## 6.20 Steering lock (All FE models apart from FE 350w US)

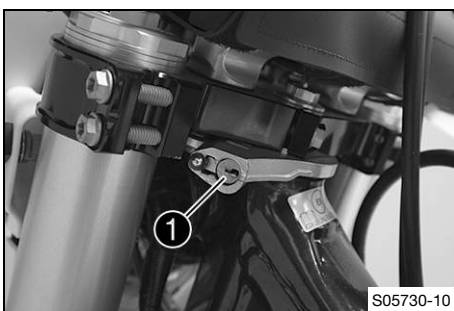

Steering lock ① is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering, and therefore riding, is no longer possible.

## 6.21 Locking the steering (All FE models apart from FE 350w US)

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.



- Park the vehicle.
- Turn handlebar as far as possible to the right.
- Lubricate the steering lock regularly.

Universal oil spray (📖 p. 162)


- Insert the key for the steering lock into the steering lock (📖 p. 23), turn it to the left, push it in, and turn it to the right. Pull out the key for the steering lock.
- ✓ Steering is no longer possible.



### Info

Never leave the key for the steering lock in the steering lock.

## 6.22 Unlocking the steering (All FE models apart from FE 350w US)

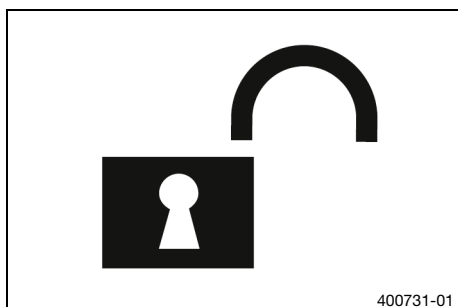


- Insert the key for the steering lock into the steering lock (📖 p. 23), turn it to the left, pull it out, and turn it to the right. Pull out the key for the steering lock.
- ✓ The handlebar can now be moved again.



### Info

Never leave the key for the steering lock in the steering lock.


7.1 Combination instrument overview

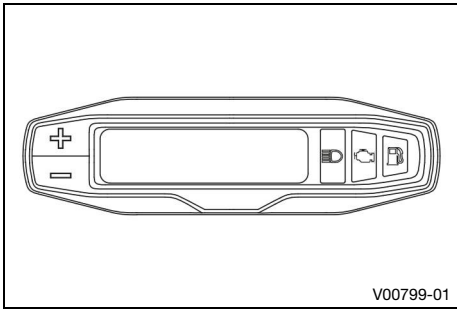

- Press the button to control different functions.
- Press the button to control different functions.

**i Info**  
When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

7.2 Activation and test

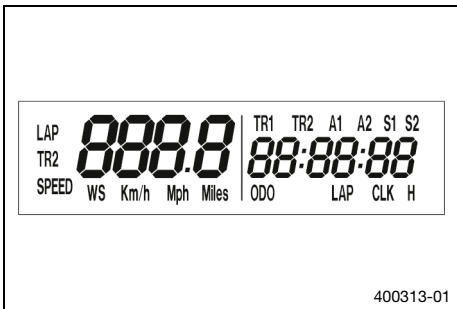


**Activating combination instrument**

The combination instrument is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

**Display test**

To enable you to check that the display is functioning properly, all display segments light up briefly.

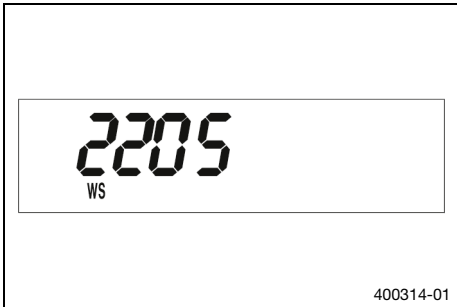

**WS (wheel size)**

After the display function check, the wheel circumference **WS** is displayed briefly.

**i Info**  
The number 2205 equals the circumference of the 21" front wheel with standard tires.


The display then changes to the last selected mode.

7.3 Setting kilometers or miles

**i Info**  
If you change the unit, the value **ODO** is retained and converted accordingly.  
The values **TR1**, **TR2**, **A1**, **A2** and **S1** are cleared when the unit of measure is changed.

**Condition**

The motorcycle is stationary.

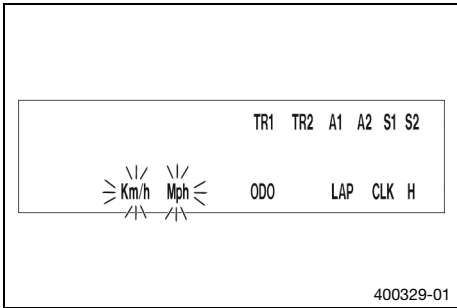

- Repeatedly press the button briefly until **H** appears at the bottom right of the display.
- Press the button for 2–3 seconds.
  - ✓ The Setup menu is displayed and the active functions are shown.
- Repeatedly press the button briefly until **Km/h / Mph** flashes.

**Adjusting the Km/h**

- Press the button .

## 7 COMBINATION INSTRUMENT

### Adjusting the Mph

- Press the button .
- Wait 3 - 5 seconds.
- ✓ The settings are stored.


#### Info

If no button is pressed for 10–12 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

## 7.4 Setting the combination instrument

#### Info

When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

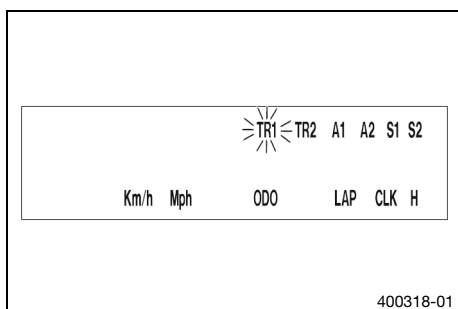

#### Condition

The motorcycle is stationary.

- Repeatedly press the button  briefly until **H** appears at the bottom right of the display.
- Press the button  for 2–3 seconds.
- ✓ The Setup menu is displayed and the active functions are shown.

#### Info

If no button is pressed for 10–12 seconds, the settings are automatically saved.

If no button is pressed for 20 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

- Repeatedly press the button  briefly until the desired function flashes.
- ✓ The selected function flashes.

#### Activating the function


- Press the button .
- ✓ The symbol continues to appear in the display and the next function appears.

#### Deactivating a function

- Press the button .
- ✓ The symbol disappears in the display and the next function appears.



## 7.5 Setting the clock

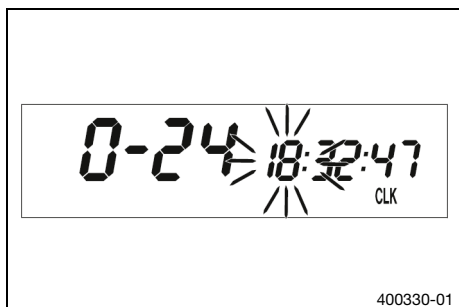

### Condition

The motorcycle is stationary.

- Repeatedly press the button  briefly until **CLK** appears at the bottom right of the display.
- Press the button  for 2–3 seconds.
  - ✓ The hour display flashes.
- Adjust the hour display with button  and/or button .
- Wait 3 - 5 seconds.
  - ✓ The next segment of the display flashes and can be set.
- You can set the following segments in the same way as the hours by pressing the button  and the button .



### Info

The seconds can only be set to zero.

If no button is pressed for 15–20 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

 


## 7.6 Viewing the lap time



### Info

This function can only be opened if lap times have actually been timed.



### Condition

The motorcycle is stationary.

- Repeatedly press the button  briefly until **LAP** appears at the bottom right of the display.
- Briefly press the button .
  - ✓ **LAP 1** appears on the left side of the display.
- The laps 1–10 can be viewed with the button .
- Press and hold the button  for 3–5 seconds.
  - ✓ The lap times are deleted.
- Briefly press the button .
  - ✓ Next display mode



### Info

When an impulse is received from the wheel speed sensor, the left side of the display changes back to the **SPEED** mode.



7.7 Display mode SPEED (speed)



- Repeatedly press the button  briefly until **SPEED** appears on the left side of the display.

The current speed is displayed in the **SPEED** display mode.  
The current speed can be displayed in **Km/h** or **Mph**.

 **Info**

Make the setting according to the country.  
When an impulse comes from the front wheel, the left side of the display changes to the **SPEED** mode and the current speed is shown.

7.8 Display mode SPEED/H (operating hours)



- Condition**
- The motorcycle is stationary.
  - Repeatedly press the button  briefly until **H** appears at the bottom right of the display.


In display mode **H**, the operating hours of the engine are displayed.  
The operating hour counter stores the total traveling time.

 **Info**

The operating hour counter is necessary for ensuring that service work is carried out at the right intervals.  
If the combination instrument is in **H** display mode when starting off, it automatically changes to the **ODO** display mode.  
The **H** display mode is suppressed during the journey.

|                                                                                                                         |                                                  |
|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| Press the button  for 2–3 seconds. | The display changes to the functions setup menu. |
| Briefly press the button  .        | Next display mode                                |
| Press the button  for 2–3 seconds. | No function                                      |
| Briefly press the button  .        | No function                                      |

7.9 Setup menu

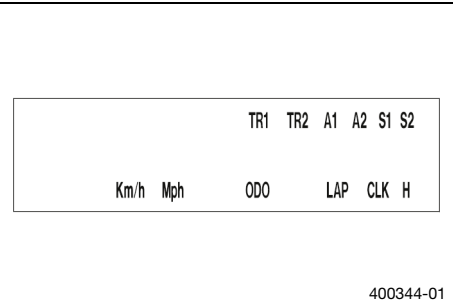

- Condition**
- The motorcycle is stationary.
  - Repeatedly press the button  briefly until **H** appears at the bottom right of the display.
  - Press the button  for 2–3 seconds.

The Setup menu displays the active functions.


**Info**

Repeatedly press the button  briefly until the desired function is reached.

If no button is pressed for 20 seconds, the settings are automatically saved.

|                                                                                                                     |                                                                                 |
|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Briefly press the button  .        | Activates the flashing display and changes to the next display                  |
| Press the button  for 2–3 seconds. | No function                                                                     |
| Briefly press the button  .        | Deactivates the flashing display and changes to the next display                |
| Press the button  for 2–3 seconds. | No function                                                                     |
| Wait 3 - 5 seconds.                                                                                                 | Changes to the next display without changes                                     |
| Wait 10 - 12 seconds.                                                                                               | Setup menu starts, stores the settings, and changes to <b>H</b> or <b>ODO</b> . |

## 7.10 Adjusting the unit of measurement

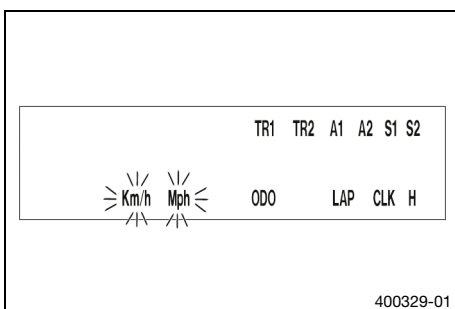**Condition**

- The motorcycle is stationary.
- Repeatedly press the button  briefly until **H** appears at the bottom right of the display.
- Press the button  for 2–3 seconds.
- Repeatedly press the button  briefly until **Km/h / Mph** flashes.

In measurement unit mode, you can change the unit of measurement.

**Info**

If no button is pressed for 5 seconds, the settings are automatically saved.

|                                                                                                                       |                                                                       |
|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Briefly press the button  .        | Starts selection, activates <b>Km/h</b> display                       |
| Press the button  for 2–3 seconds. | No function                                                           |
| Briefly press the button  .        | Activates <b>Mph</b> display                                          |
| Press the button  for 2–3 seconds. | No function                                                           |
| Wait 3 - 5 seconds.                                                                                                   | Changes to the next display, changes from selection to the Setup menu |
| Wait 10 - 12 seconds.                                                                                                 | Stores and closes the Setup menu                                      |

7.11 Display mode SPEED/CLK (time)



- Repeatedly press the button briefly until **CLK** appears at the bottom right of the display.
- The time is shown in display mode **CLK**.

|                                    |                                                     |
|------------------------------------|-----------------------------------------------------|
| Press the button  for 2–3 seconds. | The display changes to the Setup menu of the clock. |
| Briefly press the button .         | Next display mode                                   |
| Press the button  for 2–3 seconds. | No function                                         |
| Briefly press the button .         | No function                                         |

7.12 Setting the clock



- Condition**
- The motorcycle is stationary.
  - Repeatedly press the button briefly until **CLK** appears at the bottom right of the display.
  - Press the button for 2–3 seconds.

|                                    |                           |
|------------------------------------|---------------------------|
| Press the button  for 2–3 seconds. | Increases the value       |
| Briefly press the button .         | Increases the value       |
| Press the button  for 2–3 seconds. | Reduces the value         |
| Briefly press the button .         | Reduces the value         |
| Wait 3 - 5 seconds.                | Changes to the next value |
| Wait 10 - 12 seconds.              | Exit the Setup menu       |

7.13 Display mode SPEED/LAP (lap time)



- Repeatedly press the button briefly until **LAP** appears at the bottom right of the display.
- In the **LAP** display mode, up to 10 lap times can be timed with the stop watch.


**Info**

If the lap time continues running after the button is pressed, 9 memory locations are occupied. Lap 10 must be timed using the button .

|                                    |                                            |
|------------------------------------|--------------------------------------------|
| Press the button  for 2–3 seconds. | The stop watch and the lap time are reset. |
|------------------------------------|--------------------------------------------|

|                                                                                                                     |                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Briefly press the button  .        | Next display mode                                                                                                 |
| Press the button  for 2–3 seconds. | Stops the clock.                                                                                                  |
| Briefly press the button  .        | Starts the stop watch or stop the current lap time measurement, stores it and the stop watch starts the next lap. |

### 7.14 Viewing the lap time

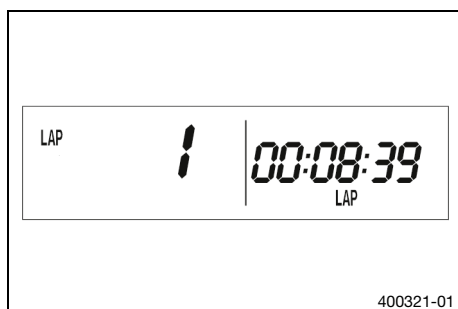

#### Condition

- The motorcycle is stationary.
- Repeatedly press the button  briefly until **LAP** appears at the bottom right of the display.
- Briefly press the button .

|                                                                                                                     |                                            |
|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| Press the button  for 2–3 seconds. | The stop watch and the lap time are reset. |
| Briefly press the button  .        | Select a lap from 1–10                     |
| Press the button  for 2–3 seconds. | No function                                |
| Briefly press the button  .      | View the next lap time.                    |

### 7.15 Display mode SPEED/ODO (odometer)



- Repeatedly press the button  briefly until **ODO** appears at the bottom right of the display.

The total traveled distance is shown in display mode **ODO**.

|                                                                                                                       |                   |
|-----------------------------------------------------------------------------------------------------------------------|-------------------|
| Press the button  for 2–3 seconds. | No function       |
| Briefly press the button  .        | Next display mode |
| Press the button  for 2–3 seconds. | No function       |
| Briefly press the button  .        | No function       |

7.16 Display mode SPEED/TR1 (trip master 1)




- Repeatedly press the button  briefly until **TR1** appears at the top right of the display.
- TR1** (trip master 1) runs constantly and counts up to 999.9. You can use it to measure trips or the distance between refueling stops.
- TR1** is coupled with **A1** (average speed 1) and **S1** (stop watch 1).

**i Info**  
If 999.9 is exceeded, the values of **TR1**, **A1** and **S1** are automatically reset to 0.0.

|                                                                                                                     |                                                                    |
|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| Press the button  for 2–3 seconds. | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0. |
| Briefly press the button  .        | Next display mode                                                  |
| Press the button  for 2–3 seconds. | No function                                                        |
| Briefly press the button  .        | No function                                                        |


7.17 Display mode SPEED/TR2 (trip master 2)

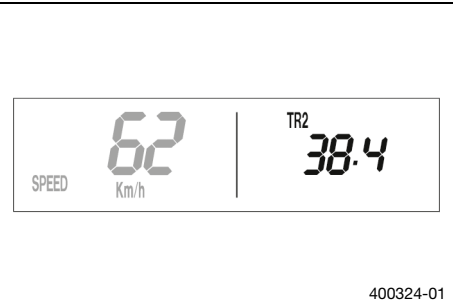

- Repeatedly press the button  briefly until **TR2** appears at the top right of the display.
- TR2** (trip master 2) runs constantly and counts up to 999.9.

|                                                                                                                       |                                              |
|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------|
| Press the button  for 2–3 seconds. | Clears the values <b>TR2</b> and <b>A2</b> . |
| Briefly press the button  .        | Next display mode                            |
| Press the button  for 2–3 seconds. | Reduces value of <b>TR2</b> .                |
| Briefly press the button  .        | Reduces value of <b>TR2</b> .                |

7.18 Adjusting TR2 (trip master 2)

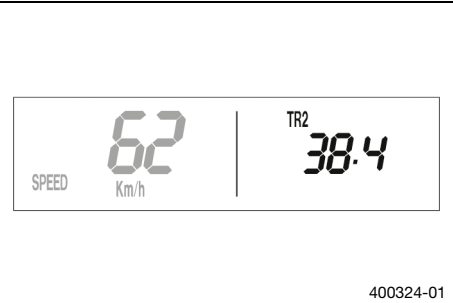

- Condition**
- The motorcycle is stationary.
  - Repeatedly press the button  briefly until **TR2** appears at the top right of the display.
  - Press the button  for 2–3 seconds until **TR2** flashes.
- The displayed value can be set manually with the button  and the button . This is a very practical function when riding using the road book.

**Info**

The **TR2** value can also be corrected manually during the journey with the button  $\oplus$  and the button  $\ominus$ .

If 999.9 is exceeded, the value of **TR2** is automatically reset to 0.0.

|                                             |                                   |
|---------------------------------------------|-----------------------------------|
| Press the button $\oplus$ for 2–3 seconds.  | Increases value of <b>TR2</b> .   |
| Briefly press the button $\oplus$ .         | Increases value of <b>TR2</b> .   |
| Press the button $\ominus$ for 2–3 seconds. | Reduces value of <b>TR2</b> .     |
| Briefly press the button $\ominus$ .        | Reduces value of <b>TR2</b> .     |
| Wait 10 - 12 seconds.                       | Stores and closes the Setup menu. |

### 7.19 Display mode SPEED/A1 (average speed 1)



- Repeatedly press the button  $\oplus$  briefly until **A1** appears at the top right of the display.

**A1** (average speed 1) shows the average speed calculated using **TR1** (trip master 1) and **S1** (stop watch 1).

The calculation of this value is activated by the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

|                                             |                                                                    |
|---------------------------------------------|--------------------------------------------------------------------|
| Press the button $\oplus$ for 2–3 seconds.  | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0. |
| Briefly press the button $\oplus$ .         | Next display mode                                                  |
| Press the button $\ominus$ for 2–3 seconds. | No function                                                        |
| Briefly press the button $\ominus$ .        | No function                                                        |

### 7.20 Display mode SPEED/A2 (average speed 2)



- Repeatedly press the button  $\oplus$  briefly until **A2** appears at the top right of the display.

**A2** (average speed 2) shows the average speed on the basis of the current speed if the stop watch **S2** (stop watch 2) is running.

**Info**

The displayed value can differ from the actual average speed if **S2** was not stopped after the ride.

|                                     |                   |
|-------------------------------------|-------------------|
| Briefly press the button $\oplus$ . | Next display mode |
|-------------------------------------|-------------------|

## 7 COMBINATION INSTRUMENT

|                                                                                                                     |             |
|---------------------------------------------------------------------------------------------------------------------|-------------|
| Press the button  for 2–3 seconds. | No function |
| Press the button  for 2–3 seconds. | No function |
| Briefly press the button  .        | No function |

### 7.21 Display mode SPEED/S1 (stop watch 1)



- Repeatedly press the button  briefly until **S1** appears at the top right of the display.

**S1** (Stop watch 1) shows the riding time based on **TR1** and continues running as soon as an impulse arrives from the wheel speed sensor.

The calculation of this value starts with the first impulse from the wheel speed sensor and ends 3 seconds after the last impulse.

|                                                                                                                     |                                                                    |
|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| Press the button  for 2–3 seconds. | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0. |
| Briefly press the button  .        | Next display mode                                                  |
| Press the button  for 2–3 seconds. | No function                                                        |
| Briefly press the button  .      | No function                                                        |

### 7.22 Display mode SPEED/S2 (stop watch 2)



- Repeatedly press the button  briefly until **S2** appears at the top right of the display.

**S2** (Stop watch 2) is a manual stop watch.

If **S2** is running in the background, the display **S2** flashes.

|                                                                                                                       |                                                         |
|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Press the button  for 2–3 seconds. | The displays of <b>S2</b> and <b>A2</b> are set to 0,0. |
| Briefly press the button  .        | Next display mode                                       |
| Press the button  for 2–3 seconds. | No function                                             |
| Briefly press the button  .        | Starts or stops <b>S2</b> .                             |



7.23 Table of functions

| Display                                       | Press the button $\pm$ for 2–3 seconds.                            | Briefly press the button $\pm$ .                               | Press the button $\equiv$ for 2–3 seconds. | Briefly press the button $\equiv$ .                                                                               | Wait 3 - 5 seconds.                                                   | Wait 10 - 12 seconds.                                                           |
|-----------------------------------------------|--------------------------------------------------------------------|----------------------------------------------------------------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Display mode <b>SPEED/H</b> (operating hours) | The display changes to the functions setup menu.                   | Next display mode                                              | No function                                | No function                                                                                                       |                                                                       |                                                                                 |
| Setup menu                                    | No function                                                        | Activates the flashing display and changes to the next display | No function                                | Deactivates the flashing display and changes to the next display                                                  | Changes to the next display without changes                           | Setup menu starts, stores the settings, and changes to <b>H</b> or <b>ODO</b> . |
| Adjusting the unit of measurement             | No function                                                        | Starts selection, activates <b>Km/h</b> display                | No function                                | Activates <b>Mph</b> display                                                                                      | Changes to the next display, changes from selection to the Setup menu | Stores and closes the Setup menu                                                |
| Display mode <b>SPEED/CLK</b> (time)          | The display changes to the Setup menu of the clock.                | Next display mode                                              | No function                                | No function                                                                                                       |                                                                       |                                                                                 |
| Setting the clock                             | Increases the value                                                | Increases the value                                            | Reduces the value                          | Reduces the value                                                                                                 | Changes to the next value                                             | Exit the Setup menu                                                             |
| Display mode <b>SPEED/LAP</b> (lap time)      | The stop watch and the lap time are reset.                         | Next display mode                                              | Stops the clock.                           | Starts the stop watch or stop the current lap time measurement, stores it and the stop watch starts the next lap. |                                                                       |                                                                                 |
| Viewing the lap time                          | The stop watch and the lap time are reset.                         | Select a lap from 1–10                                         | No function                                | View the next lap time.                                                                                           |                                                                       |                                                                                 |
| Display mode <b>SPEED/ODO</b> (odometer)      | No function                                                        | Next display mode                                              | No function                                | No function                                                                                                       |                                                                       |                                                                                 |
| Display mode <b>SPEED/TR1</b> (trip master 1) | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0. | Next display mode                                              | No function                                | No function                                                                                                       |                                                                       |                                                                                 |
| Display mode <b>SPEED/TR2</b> (trip master 2) | Clears the values <b>TR2</b> and <b>A2</b> .                       | Next display mode                                              | Reduces value of <b>TR2</b> .              | Reduces value of <b>TR2</b> .                                                                                     |                                                                       |                                                                                 |

## 7 COMBINATION INSTRUMENT

| Display                                        | Press the button  for 2-3 seconds. | Briefly press the button  . | Press the button  for 2-3 seconds. | Briefly press the button  . | Wait 3 - 5 seconds. | Wait 10 - 12 seconds.             |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------|-----------------------------------|
| Adjusting <b>TR2</b> (trip master 2)           | Increases value of <b>TR2</b> .                                                                                     | Increases value of <b>TR2</b> .                                                                              | Reduces value of <b>TR2</b> .                                                                                       | Reduces value of <b>TR2</b> .                                                                                 |                     | Stores and closes the Setup menu. |
| Display mode <b>SPEED/A1</b> (average speed 1) | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0.                                                  | Next display mode                                                                                            | No function                                                                                                         | No function                                                                                                   |                     |                                   |
| Display mode <b>SPEED/A2</b> (average speed 2) | No function                                                                                                         | Next display mode                                                                                            | No function                                                                                                         | No function                                                                                                   |                     |                                   |
| Display mode <b>SPEED/S1</b> (stop watch 1)    | Displays of <b>TR1</b> , <b>A1</b> and <b>S1</b> are reset to 0.0.                                                  | Next display mode                                                                                            | No function                                                                                                         | No function                                                                                                   |                     |                                   |
| Display mode <b>SPEED/S2</b> (stop watch 2)    | The displays of <b>S2</b> and <b>A2</b> are set to 0.0.                                                             | Next display mode                                                                                            | No function                                                                                                         | Starts or stops <b>S2</b> .                                                                                   |                     |                                   |

### 7.24 Table of conditions and menu activation

| Display                                        | The motorcycle is stationary. | Menu can be activated |
|------------------------------------------------|-------------------------------|-----------------------|
| Display mode <b>SPEED/H</b> (operating hours)  | •                             |                       |
| Setup menu                                     | •                             |                       |
| Adjusting the unit of measurement              | •                             |                       |
| Setting the clock                              | •                             |                       |
| Display mode <b>SPEED/LAP</b> (lap time)       |                               | •                     |
| Viewing the lap time                           | •                             |                       |
| Display mode <b>SPEED/TR1</b> (trip master 1)  |                               | •                     |
| Display mode <b>SPEED/TR2</b> (trip master 2)  |                               | •                     |
| Adjusting <b>TR2</b> (trip master 2)           | •                             |                       |
| Display mode <b>SPEED/A1</b> (average speed 1) |                               | •                     |
| Display mode <b>SPEED/A2</b> (average speed 2) |                               | •                     |
| Display mode <b>SPEED/S1</b> (stop watch 1)    |                               | •                     |
| Display mode <b>SPEED/S2</b> (stop watch 2)    |                               | •                     |

## 8.1 Advice on preparing for first use



### Danger

**Danger of accidents** A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



### Warning

**Risk of injury** Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



### Warning

**Danger of crashing** Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



### Warning

**Danger of accidents** An unadapted riding style impairs the handling characteristic.

- Adapt your riding speed to the road conditions and your riding ability.



### Warning

**Danger of accidents** The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



### Warning

**Danger of accidents** The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever if you do not want to brake.



### Warning

**Danger of accidents** Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible overall weight or the axle loads.



### Warning

**Risk of injury** People who act without authorization may not be familiar with the vehicle.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



### Info

When using your motorcycle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-sale inspection work has been carried out by an authorized Husqvarna Motorcycles workshop.
  - ✓ You will receive a delivery certificate when the vehicle is handed over.
- Before riding for the first time, read the entire Owner's Manual carefully.
- Get to know the controls.
- Adjust basic position of the clutch lever. (📖 p. 91)

## 8 PREPARING FOR USE

### (All standard models)

- Adjust basic position of the hand brake lever. (📖 p. 95)

### (All special models)

- Adjust the free travel of the handbrake lever. (📖 p. 95)
- Adjust the basic position of the foot brake lever. 🦶 (📖 p. 102)
- Adjust the basic position of the shift lever. 🦶 (📖 p. 135)
- Get used to the handling characteristics of the motorcycle on a suitable surface before undertaking more challenging trips.



#### Info

When offroad, it is recommended that you are accompanied by another person on another vehicle so that you can help each other.

- Try also to ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- If you carry any luggage, make sure you fix it firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.



#### Info

Motorcycles react sensitively to any changes of weight distribution.

- The maximum permissible overall weight and the maximum permissible axle loads must not be exceeded.  
Guideline

|                                     |                  |
|-------------------------------------|------------------|
| Maximum permissible overall weight  | 335 kg (739 lb.) |
| Maximum permissible front axle load | 145 kg (320 lb.) |
| Maximum permissible rear axle load  | 190 kg (419 lb.) |



#### Info

The spoke tension must be checked after half an hour of operation.

- Run the engine in. (📖 p. 38)

### 8.2 Running in the engine


- Do not exceed the specified engine speed and load during the running-in time.

#### Guideline

|                                    |           |
|------------------------------------|-----------|
| Maximum engine speed               |           |
| During the first operating hour    | 7,000 rpm |
| Maximum engine performance         |           |
| During the first 3 operating hours | ≤ 75 %    |

- Avoid fully opening the throttle.

## 8.3 Starting power of lithium-ion batteries at low temperatures

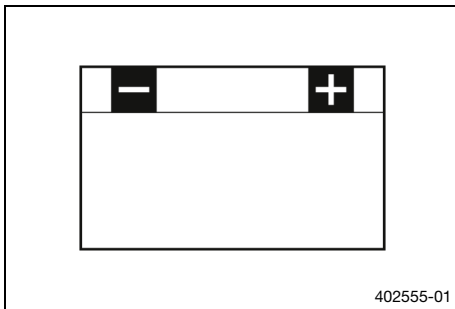

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 6 °C (43 °F).

Several attempts to start may be required. Press the start button for 5 seconds, and wait 15 seconds between attempts. At low temperatures, wait for 30 seconds. The pauses are necessary so that the heat created can distribute through the lithium-ion battery and the lithium-ion battery is not damaged.

The starting power increases as the battery warms up.

Always make sure the lithium-ion battery is charged to that there is enough power to spare for starting at low temperatures.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other errors instead.

## 8.4 Preparing the vehicle for difficult operating conditions

### **i** Info

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

- Clean the air filter and air filter box. 📖 (p. 75)

### **i** Info

Check the air filter approx. every 30 minutes.

- Check the electrical connector for humidity and corrosion and to ensure it is firmly seated.
  - » If humidity, corrosion, or damage is found:
    - Clean and dry the connector, or change it if necessary.

### Difficult operating conditions are:

- Rides on dry sand. 📖 (p. 39)
- Rides on wet sand. 📖 (p. 40)
- Rides on wet and muddy circuits. 📖 (p. 40)
- Rides at high temperatures or slow riding. 📖 (p. 41)
- Riding at low temperatures and in snow. 📖 (p. 41)



## 8.5 Preparing the vehicle for riding on dry sand



- Mount the air filter dust cover.

Air filter dust cover (79006920000)

### **i** Info

Read the fitting instructions for **Husqvarna Motorcycles** accessories.

## 8 PREPARING FOR USE



- Mount the air filter sand cover.

Air filter sand cover (79006922000)



### Info

Read the fitting instructions for **Husqvarna Motorcycles** accessories.



- Clean the chain.
- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (📖 p. 162)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

### 8.6 Preparing the vehicle for riding on wet sand



- Mount the air filter rain cover.

Air filter rain cover (79006921000)



### Info

Read the fitting instructions for **Husqvarna Motorcycles** accessories.



- Clean the chain.
- Mount the steel sprocket.
- Grease the chain.

Universal oil spray (📖 p. 162)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

### 8.7 Preparing the vehicle for riding on wet and muddy circuits



- Mount the air filter rain cover.

Air filter rain cover (79006921000)



### Info

Read the fitting instructions for **Husqvarna Motorcycles** accessories.



- Mount the steel sprocket.
- Clean the motorcycle. (📖 p. 141)
- Straighten the bent radiator fins carefully.



## 8.8 Preparing vehicle for high temperatures or slow riding



- Adjust the secondary drive to the road conditions.



### Info

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

- Clean the chain.

Chain cleaner (📖 p. 161)

- Clean the radiator fins.
- Straighten bent radiator fins carefully.
- Check the coolant level. (📖 p. 127)



## 8.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter rain cover.

Air filter rain cover (79006921000)



### Info

Read the fitting instructions for **Husqvarna Motorcycles** accessories.




## 9.1 Checks and maintenance measures when preparing for use



### Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

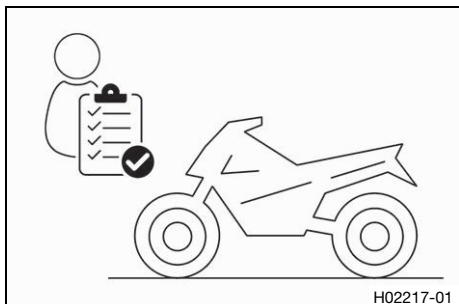

- Check the engine oil level. (📖 p. 137)
- Check the electrical system.
- Check the front brake fluid level. (📖 p. 96)
- Check the rear brake fluid level. (📖 p. 103)
- Check that the brake linings of the front brake are secured. (📖 p. 98)
- Check that the brake linings of the rear brake are secured. (📖 p. 105)
- Check that the brake system is functioning properly.
- Check the coolant level. (📖 p. 127)
- Check for chain dirt accumulation. (📖 p. 83)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 87)
- Check the chain tension. (📖 p. 84)
- Check the tire condition. (📖 p. 114)
- Check tire pressure. (📖 p. 114)
- Check the spoke tension. (📖 p. 115)



### Info

The spoke tension must be checked regularly as incorrect spoke tension will strongly impair riding safety.

- Clean the dust boots of the fork legs. (📖 p. 61)
- Bleed the fork legs. (📖 p. 60)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clips regularly for tightness.
- Check the fuel level.

## 9.2 Starting the vehicle



### Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

### Note

**Engine damage** High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.



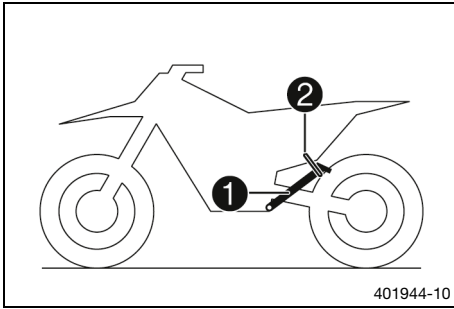


- Take the motorcycle off side stand **1** and secure the side stand with rubber strap **2**.
- Shift the transmission into neutral.

## Condition

Ambient temperature: < 20 °C (< 68 °F)

- Push the cold start button in all the way.

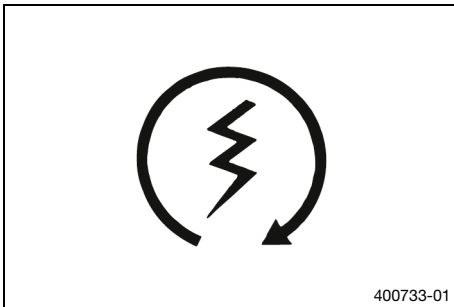

- Press the start button.



## Info

Press the start button for a maximum of 5 seconds. Wait for 15 seconds before a further attempt at starting.

At low temperatures, wait for 30 seconds.

At temperatures below 6 °C (43 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other errors instead. During the starting process, the malfunction indicator lamp lights up.

## 9.3 Activating traction control (All FE models apart from FE 350w US)



## Caution

**Voiding of the government approval for road use and the insurance coverage** If the combination switch is mounted, the vehicle's road permit, if any, expires.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.



## Info

The traction control reduces excessive slip on the rear wheel in favor of more control and propulsion, particularly in wet conditions.

When traction control is switched off, the rear wheel may spin more during high acceleration and on surfaces with low grip.

Traction control can be switched on or off during the ride.

The setting most recently selected is activated again when restarting.



- Press button **TC** to switch the traction control on or off.

## Guideline

|              |             |
|--------------|-------------|
| Engine speed | ≤ 4,000 rpm |
|--------------|-------------|

- ✓ The **TC** LED lights up when the traction control is activated.


## 9.4 Starting off

### **i** Info

Switch on the light before riding the vehicle. You will be seen earlier by other motorists.  
When you are riding, the side stand must be folded up and secured with the rubber strap.

- Pull the clutch lever, shift into first-gear, release the clutch lever slowly and at the same time open the throttle carefully.

## 9.5 Quickshifter (All FE models apart from FE 350w US)

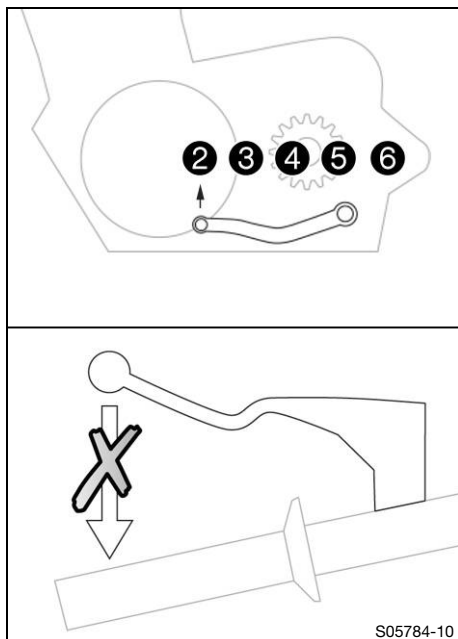

When the quickshifter is activated, you can shift up without actuating the clutch.

### **i** Info

The quickshifter is not activated when shifting up from first to second gear, and the clutch lever must be used when shifting up instead.

Even if the quickshifter is activated, you need to use the clutch lever to shift down.

Because there is no need to close the throttle grip, uninterrupted gear shifts are possible.

The quickshifter uses the shifter shaft position to check whether or not a shift should be initiated, and sends a corresponding signal to the engine control.

If the quickshifter is deactivated, the clutch needs to be actuated in the normal way for each shift.

## 9.6 Activate the quickshifter (All FE models apart from FE 350w US)



- Press the QS button **1** to switch the quickshifter on or off.
- ✓ The QS indicator lamp lights up when the quickshifter is activated.

### **i** Info

The quickshifter is not activated when shifting up from first to second gear, and the clutch lever must be used when shifting up instead.

Even if the quickshifter is activated, you need to use the clutch lever to shift down.

## 9.7 Shifting, riding



### Warning

**Danger of accidents** If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



### Info

If unusual noises occur while riding, stop immediately, switch off the engine, and contact an authorized Husqvarna Motorcycles workshop.

First gear is used for starting off and for steep inclines.

- Shift into a higher gear when conditions allow (incline, road situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is  $\frac{3}{4}$  open. This will barely reduce the speed, but fuel consumption will be considerably lower.
- Always open the throttle only as much as the engine can handle – abrupt throttle opening increases fuel consumption.
- To shift down, apply the brakes and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if running at idle speed or stationary for a long time.

Guideline

$\geq 2$  min

- Avoid frequent and lengthy slipping of the clutch. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed with a slipping clutch.



## 9.8 Braking



### Warning

**Danger of accidents** Excessively forceful application of the brakes blocks the wheels.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



### Warning

**Danger of accidents** A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Warning

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- On sandy, wet, or slippery surfaces, use the rear brake.
- Always finish braking before you go into a bend. Change down to a lower gear appropriate to your road speed.

- Use the braking effect of the engine on long downhill stretches. Change down one or two gears, but do not over-rev the engine. You will have to apply the brakes far less frequently as a result and the brake system will not overheat.

### 9.9 Stopping, parking



#### Warning

**Risk of injury** People who act without authorization may not be familiar with the vehicle.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.



#### Warning

**Danger of burns** Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

#### Note

**Material damage** The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

#### Note

**Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

- Apply the brakes on the motorcycle.
- Shift the transmission into neutral.
- Press and hold the stop button  while the engine is idling until the engine stops.
- Park the motorcycle on firm ground.

### 9.10 Transporting

#### Note

**Material damage** The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.


The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

#### Note

**Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

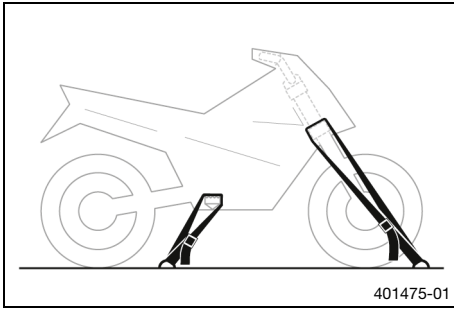

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

## 9.11 Refueling



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.

### Note

**Material damage** Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.

- Refuel only with clean fuel that meets the specified standards. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)




### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

- Switch off engine.
- Open fuel tank filler cap. (📖 p. 20)

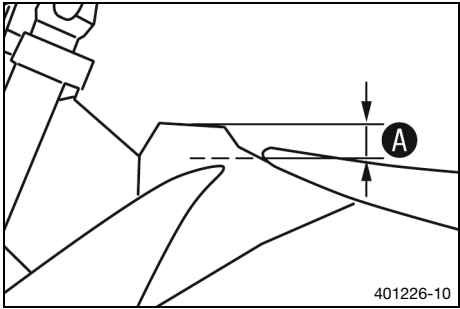

- Fill the fuel tank with fuel up to measurement **A**.

Guideline

|                                                                         |                     |
|-------------------------------------------------------------------------|---------------------|
| Measurement of <b>A</b>                                                 | 35 mm (1.38 in)     |
| Total fuel tank capacity, approx. (All FE models apart from FE 350w US) |                     |
| Super unleaded (ROZ 95) (📖 p. 160)                                      | 8.0 l (2.11 US gal) |
| Total fuel tank capacity, approx. (FE 350w US)                          |                     |
| Super unleaded (ROZ 95) (📖 p. 160)                                      | 8.0 l (2.11 US gal) |

- Close the fuel tank filler cap. (📖 p. 21)



## 10.1 Additional information

Any further work that results from the service work must be ordered separately and invoiced separately.  
 Different service intervals may apply in your country, depending on the local operating conditions.  
 Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on Husqvarna Motorcycles Dealer.net. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

## 10.2 Service schedule

|                                                                                                                                                                                                                   | every 24 months          |   |   |   |   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|---|---|---|---|
|                                                                                                                                                                                                                   | Every 90 operating hours |   |   |   |   |
|                                                                                                                                                                                                                   | Every 45 operating hours |   |   |   |   |
|                                                                                                                                                                                                                   | Every 15 operating hours |   |   |   |   |
|                                                                                                                                                                                                                   | After 1 operating hour   |   |   |   |   |
| Read out the fault memory using the Husqvarna Motorcycles diagnostics tool.                                                     | ○                        | ● | ● | ● | ● |
| Program the gear position sensor.                                                                                                |                          | ● | ● | ● |   |
| Check that the electrical system is functioning properly.                                                                                                                                                         | ○                        | ● | ● | ● |   |
| Check and charge the 12-V battery.                                                                                               |                          | ● | ● | ● | ● |
| Check that the brake linings of the front brake are secured. (📖 p. 98)                                                                                                                                            |                          | ● | ● | ● | ● |
| Check that the brake linings of the rear brake are secured. (📖 p. 105)                                                                                                                                            |                          | ● | ● | ● | ● |
| Check brake discs. (📖 p. 96)                                                                                                                                                                                      |                          | ● | ● | ● | ● |
| Check the brake lines for damage and tightness.                                                                                                                                                                   |                          | ● | ● | ● | ● |
| Check the front brake fluid level. (📖 p. 96)                                                                                                                                                                      |                          | ● | ● |   |   |
| Change the front brake fluid.                                                                                                  |                          |   |   | ● | ● |
| Check the rear brake fluid level. (📖 p. 103)                                                                                                                                                                      |                          | ● | ● |   |   |
| Change the rear brake fluid.                                                                                                   |                          |   |   | ● | ● |
| Check/correct the fluid level of hydraulic clutch. (📖 p. 92)                                                                                                                                                      |                          |   | ● |   |   |
| Change the hydraulic clutch fluid.  (📖 p. 93)                                                                                  |                          |   |   | ● | ● |
| Check the free travel of the hand brake lever.                                                                                 | ○                        | ● | ● | ● | ● |
| Check the free travel of the foot brake lever. (📖 p. 101)                                                                                                                                                         |                          | ● | ● | ● | ● |
| Check the idle speed.                                                                                                          | ○                        | ● | ● | ● | ● |
| Change the engine oil and oil filter, clean the oil screen.  (📖 p. 137)                                                        | ○                        | ● | ● | ● | ● |
| Check all hoses (e.g. fuel, cooling, bleeder, drainage hoses, etc.) and sleeves for cracking, tightness, and correct routing.  | ○                        | ● | ● | ● | ● |
| Check the cables for damage and that there are no kinks in the routing.                                                        |                          | ● | ● | ● | ● |
| Check that the throttle cables are undamaged, routed without kinks, and set correctly.                                                                                                                            |                          | ● | ● | ● |   |
| Check the frame.  (📖 p. 89)                                                                                                    |                          | ● | ● | ● |   |
| Check the link fork.  (📖 p. 89)                                                                                                |                          | ● | ● | ● |   |
| Check the fork bearing for play.                                                                                               |                          |   | ● | ● |   |
| Check the shock absorber heim joint for play.                                                                                  |                          |   | ● | ● |   |
| Check the shock absorber linkage.                                                                                              |                          | ● | ● | ● |   |
| Check the tire condition. (📖 p. 114)                                                                                                                                                                              |                          | ● | ● | ● | ● |
| Check tire pressure. (📖 p. 114)                                                                                                                                                                                   |                          | ● | ● | ● | ● |
| Check the wheel bearing for play.                                                                                              |                          | ● | ● | ● |   |
| Check the wheel hubs.                                                                                                          |                          | ● | ● | ● |   |
| Check the rim run-out.                                                                                                         | ○                        | ● | ● | ● |   |
| Check the spoke tension. (📖 p. 115)                                                                                                                                                                               | ○                        | ● | ● | ● |   |

# 10 SERVICE SCHEDULE

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | every 24 months          |   |   |   |   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|---|---|---|---|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Every 90 operating hours |   |   |   |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Every 45 operating hours |   |   |   |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Every 15 operating hours |   |   |   |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | After 1 operating hour   |   |   |   |   |
| Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 87)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | ○                        | ● | ● | ● |   |
| Check the chain tension. (📖 p. 84)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | ○                        | ● | ● | ● | ● |
| Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | ○                        | ● | ● | ● | ● |
| Check the valve clearance. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | ○                        |   | ● | ● |   |
| Change the fuel filter. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                          |   |   | ● | ● |
| Check the clutch. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                          |   | ● | ● |   |
| Clean the air filter and air filter box. 🛠️ (📖 p. 75)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                          | ● | ● | ● | ● |
| Check the funnel in the inlet sleeve in the air filter box. 🛠️ (All FE models apart from FE 350w US)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                          | ● | ● | ● | ● |
| Check the intake membrane in the airbox rubber. 🛠️ (FE 350w US)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                          |   | ● | ● |   |
| Change the glass fiber yarn filling in the main silencer. 🛠️ (📖 p. 79)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                          |   | ● | ● |   |
| Service the fork. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                          |   | ● | ● |   |
| Perform the shock absorber service. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                          |   | ● | ● |   |
| Check all screws, nuts, and hose clips for a tight fit. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | ○                        | ● | ● | ● | ● |
| Change the fuel screen. 🛠️ (📖 p. 136)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | ○                        | ● | ● | ● | ● |
| Check the fuel pressure. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | ○                        |   | ● | ● | ● |
| Check the antifreeze and coolant level. (📖 p. 126)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                          |   | ● | ● |   |
| Check the coolant level. (📖 p. 127)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | ○                        | ● |   |   |   |
| Change the coolant. 🛠️ (📖 p. 129)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                          |   |   |   | ● |
| Check that the radiator fan is functioning properly. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | ○                        | ● | ● | ● |   |
| Check the steering head bearing for play. (📖 p. 67)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | ○                        | ● |   |   |   |
| Lubricate the steering head bearing. 🛠️ (📖 p. 68)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                          |   | ● | ● | ● |
| Clean the spark arrestor. (FE 350w US) 🛠️ (📖 p. 77)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                          |   |   | ● | ● |
| Check the headlight setting. (📖 p. 123)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                          | ● | ● | ● |   |
| Perform engine service including removing and installing the engine. (Change the spark plug and spark plug connector. Change the piston. Check/measure the cylinder. Check the cylinder head. Change the valves, valve springs, valve spring retainers and valve spring seats. Check the camshaft and cam lever. Change the connecting rod, conrod bearing and crank pin. Check the transmission and the shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Check the timing assembly. Change the timing chain. Change all engine bearings and all gaskets. Change the freewheel.) 🛠️ |                          |   |   | ● |   |
| Final check: Check the vehicle is roadworthy and take a test ride. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | ○                        | ● | ● | ● | ● |
| Read out the fault memory after the test ride using the Husqvarna Motorcycles diagnostics tool. 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | ○                        | ● | ● | ● | ● |
| Make a service entry in <b>Husqvarna Motorcycles Dealer.net</b> . 🛠️                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | ○                        | ● | ● | ● | ● |


- One-time interval
- Periodic interval



## 11.1 Checking the basic chassis setting with rider's weight

### Info

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

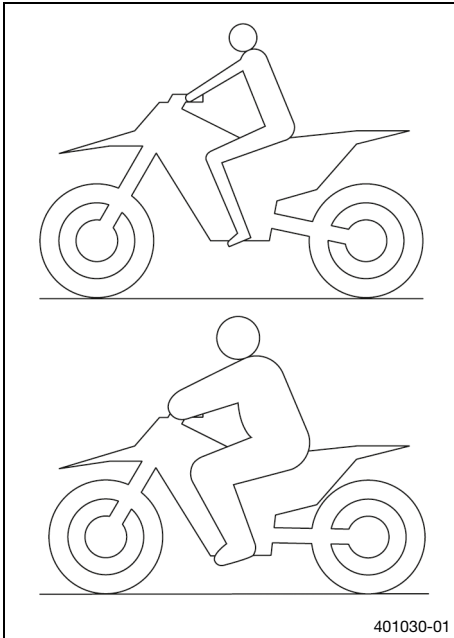

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, Husqvarna motorcycles are adjusted for an average rider's weight (with full protective clothing).

#### Guideline

|                       |                                |
|-----------------------|--------------------------------|
| Standard rider weight | 75 ... 85 kg (165 ... 187 lb.) |
|-----------------------|--------------------------------|

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring preload, but in the case of large weight differences, the springs must be replaced.



## 11.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression adjuster has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression adjuster has an effect, for example, when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, modifications in the high-speed range affect the compression damping in the low-speed range and vice versa.

## 11.3 Adjusting the low-speed compression damping of the shock absorber



### Caution

**Risk of injury** Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

### Info

The effect of the low-speed compression adjuster can be seen in slow to normal compression of the shock absorber.



- Turn adjuster ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

| Lowspeed compression damping |           |
|------------------------------|-----------|
| Comfort                      | 18 clicks |
| Standard                     | 15 clicks |
| Sport                        | 12 clicks |



**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

11.4 Adjusting the high-speed compression damping of the shock absorber



**Caution**

**Risk of injury** Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



**Info**

The effect of the high speed compression adjuster can be seen in the fast compression of the shock absorber.



- Turn adjuster ❶ clockwise all the way to the stop.
- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

| Highspeed compression damping |           |
|-------------------------------|-----------|
| Comfort                       | 2.5 turns |
| Standard                      | 2 turns   |
| Sport                         | 1.5 turns |



**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.

## 11.5 Adjusting the rebound damping of the shock absorber




### Caution

**Risk of injury** Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

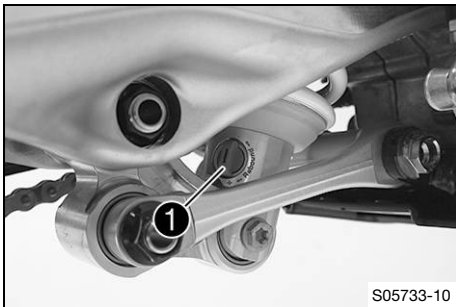

- Turn adjusting screw ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

### Guideline

| Rebound damping |           |
|-----------------|-----------|
| Comfort         | 18 clicks |
| Standard        | 15 clicks |
| Sport           | 12 clicks |



### Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



## 11.6 Measuring the dimension of the rear wheel unloaded

### Preparatory work


- Raise the motorcycle with a lift stand. (📖 p. 60)

### Main work

- Position the sag gage in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag gage (00029090200)

- Note the value as dimension ❶.

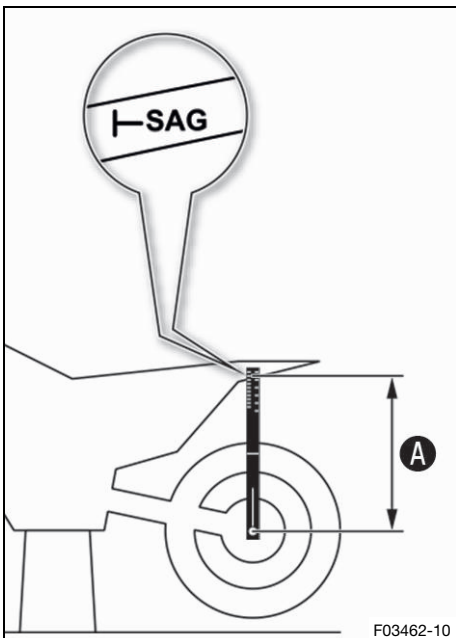


### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)



11.7 Checking the static sag of the shock absorber

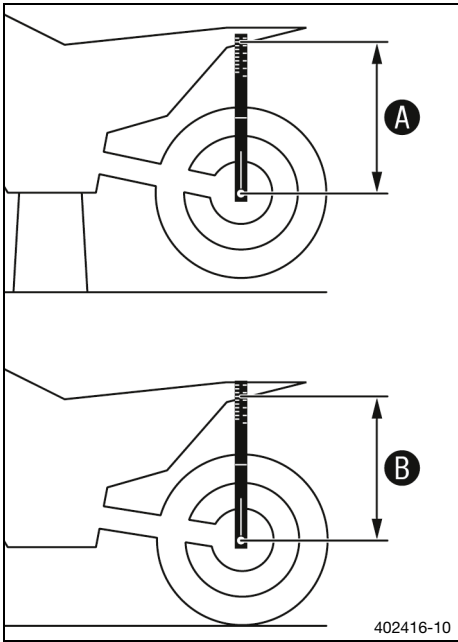

- Measure dimension **A** of rear wheel unloaded. (📖 p. 53)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **B**.


**i Info**  
The static sag is the difference between measurements **A** and **B**.

- Check the static sag.

|            |                 |
|------------|-----------------|
| Static sag | 40 mm (1.57 in) |
|------------|-----------------|

- » If the static sag is less or more than the specified value:
  - Adjust the spring preload of the shock absorber. 🛠️ (📖 p. 55)

11.8 Checking the riding sag of the shock absorber

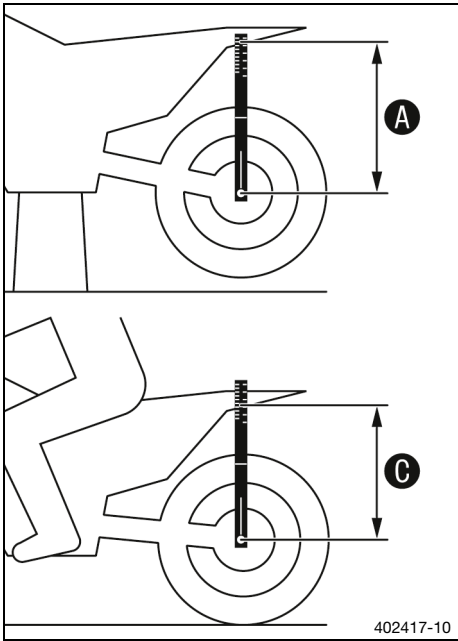

- Measure dimension **A** of rear wheel unloaded. (📖 p. 53)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
  - ✓ The rear wheel suspension levels out.
- Another person again measures the distance between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **C**.

**i Info**  
The riding sag is the difference between measurements **A** and **C**.

- Check riding sag.

Guideline

|            |                  |
|------------|------------------|
| Riding sag | 110 mm (4.33 in) |
|------------|------------------|

- » If the riding sag differs from the specified measurement:
  - Adjust the riding sag. 🛠️ (📖 p. 56)

## 11.9 Adjusting the spring preload of the shock absorber ↴



### Caution

**Risk of injury** Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Info

Before changing the spring preload, make a note of the present setting, e.g., by measuring the spring length.

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)
- Remove the right side cover. (📖 p. 76)
- Remove the frame protector. (📖 p. 64)
- Remove the shock absorber. ↴ (📖 p. 70)
- After removing the shock absorber, clean it thoroughly.

### Main work

- Loosen screw ❶.
- Turn adjusting ring ❷ until the spring is no longer under tension.

|                           |
|---------------------------|
| Hook wrench (90129051000) |
|---------------------------|



### Info

If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

- Measure the total spring length while the spring is not under tension.
- Tension the spring by turning adjusting ring ❷ to specified dimension A.

### Guideline

|                |                |
|----------------|----------------|
| Spring preload | 7 mm (0.28 in) |
|----------------|----------------|



### Info

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.


- Tighten bolt ❶.

### Guideline

|                                      |    |                   |
|--------------------------------------|----|-------------------|
| Screw, shock absorber adjusting ring | M5 | 5 Nm (3.7 lbf ft) |
|--------------------------------------|----|-------------------|


### Finishing work

- Install the shock absorber. ↴ (📖 p. 71)
- Install the frame protector. (📖 p. 64)
- Install the right side cover. (📖 p. 76)

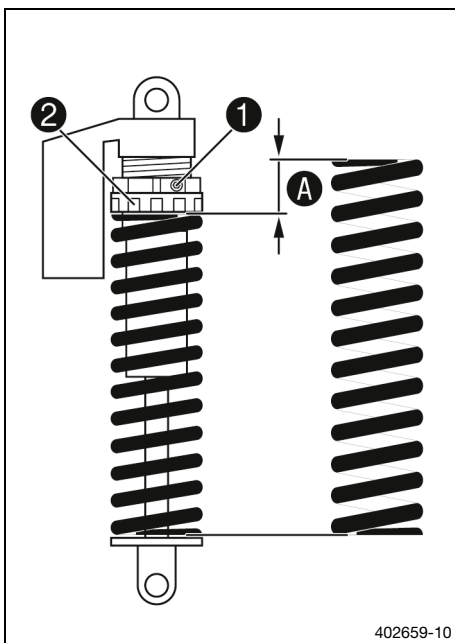

- Remove the motorcycle from the lift stand. (📖 p. 60)

11.10 Adjusting the riding sag 🛠️

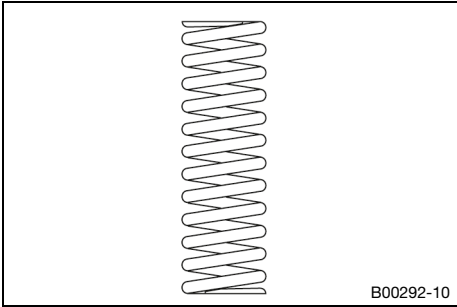

Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)
- Remove the right side cover. (📖 p. 76)
- Remove the frame protector. (📖 p. 64)
- Remove the shock absorber. 🛠️ (📖 p. 70)
- After removing the shock absorber, clean it thoroughly.

Main work

- Select and mount a suitable spring.

Guideline

| Spring rate                                     |                     |
|-------------------------------------------------|---------------------|
| Weight of rider: 65 ... 75 kg (143 ... 165 lb.) | 42 N/mm (240 lb/in) |
| Weight of rider: 75 ... 85 kg (165 ... 187 lb.) | 45 N/mm (257 lb/in) |
| Weight of rider: 85 ... 95 kg (187 ... 209 lb.) | 48 N/mm (274 lb/in) |



Info

The spring rate is shown on the outside of the spring. Smaller weight differences can be compensated by changing the spring preload.

Finishing work


- Install the shock absorber. 🛠️ (📖 p. 71)
- Install the frame protector. (📖 p. 64)
- Install the right side cover. (📖 p. 76)
- Remove the motorcycle from the lift stand. (📖 p. 60)
- Check the static sag of the shock absorber. (📖 p. 54)
- Check the riding sag of the shock absorber. (📖 p. 54)
- Adjust the rebound damping of the shock absorber. (📖 p. 53)

11.11 Checking the basic setting of the fork



Info

For various reasons, no exact riding sag can be determined for the fork.

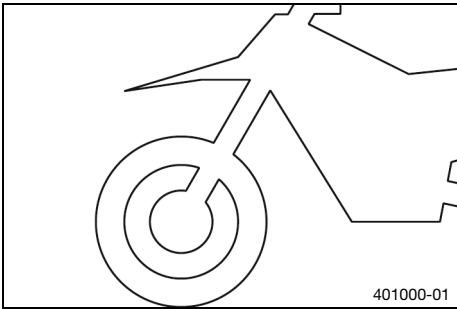


- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork frequently bottoms out (hard end stop on compression), harder springs must be fitted to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

## 11.12 Adjusting the compression damping of the fork

### **i** Info

The hydraulic compression damping determines the fork suspension behavior.

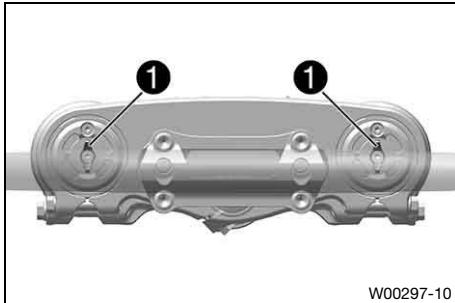

- Turn white adjuster ① clockwise as far as it will go.

### **i** Info

Adjusters ① are located at the top end of the fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

#### Guideline

| Compression damping |           |
|---------------------|-----------|
| Comfort             | 17 clicks |
| Standard            | 15 clicks |
| Sport               | 7 clicks  |

### **i** Info


Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.



## 11.13 Adjusting the rebound damping of the fork

### **i** Info

The hydraulic rebound damping determines the fork suspension behavior.

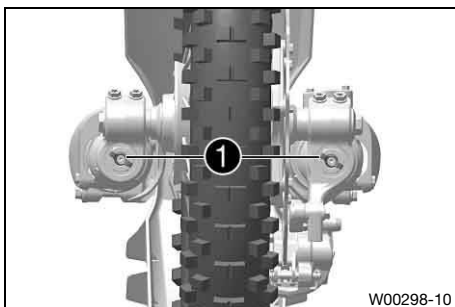

- Turn red adjuster ① clockwise as far as it will go.

### **i** Info

Adjusters ① are located at the bottom end of the fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

#### Guideline


| Rebound damping |           |
|-----------------|-----------|
| Comfort         | 19 clicks |
| Standard        | 17 clicks |
| Sport           | 9 clicks  |

### **i** Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



11.14 Handlebar position

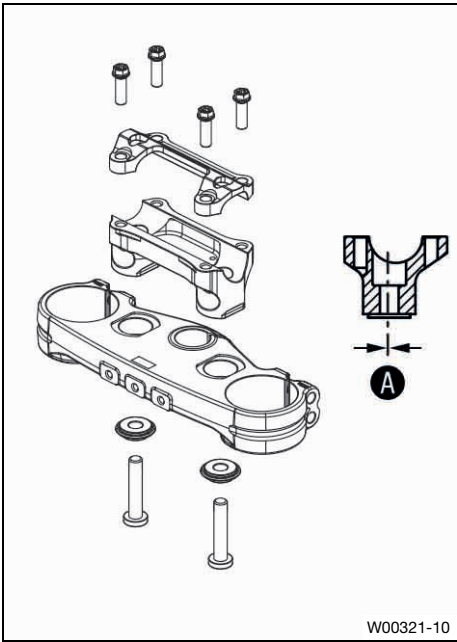

The holes on the handlebar supports are placed at a distance of **A** from the center.

|                        |                   |
|------------------------|-------------------|
| Hole distance <b>A</b> | 3.5 mm (0.138 in) |
|------------------------|-------------------|

The handlebar supports can be mounted in two different positions.


11.15 Adjusting the handlebar position

**Warning**

**Danger of accidents** A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

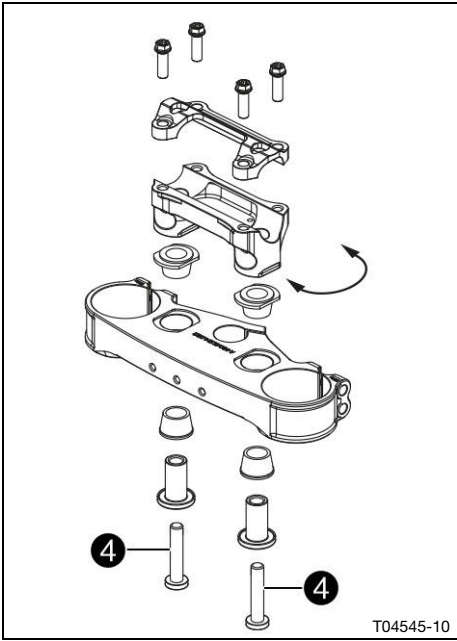

- Remove screws **1**. Take off the handlebar clamp. Take off the handlebar and lay it to one side.

**Info**

Cover the components to protect them against damage.

Do not kink the cables or lines.

- Remove screws **2**. Take off the handlebar support.
- Place the handlebar support in the required position. Mount and tighten screws **2**.

|                          |     |                                            |
|--------------------------|-----|--------------------------------------------|
| Guideline                |     |                                            |
| Screw, handle-bar holder | M10 | 40 Nm (29.5 lbf ft)<br><b>Loctite®243™</b> |

**Info**

Position the handlebar support so that it is even.

- Position the handlebar.



**Info**

Make sure the cables and wiring are positioned correctly.

- Position the handlebar clamp. Mount screws ❶ and tighten evenly.

Guideline


|                        |    |                     |
|------------------------|----|---------------------|
| Screw, handlebar clamp | M8 | 20 Nm (14.8 lbf ft) |
|------------------------|----|---------------------|

**Info**

Make sure the installed gaps are even.



## 12.1 Raising the motorcycle with a lift stand

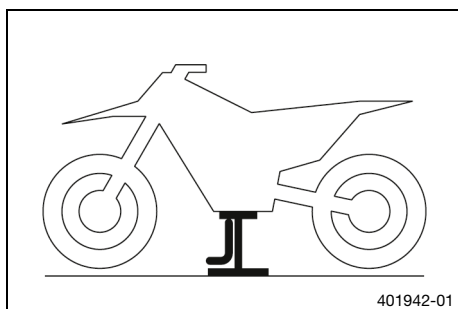

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.
- Raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)


- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

## 12.2 Removing the motorcycle from the lift stand

### Note

**Danger of damage** The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

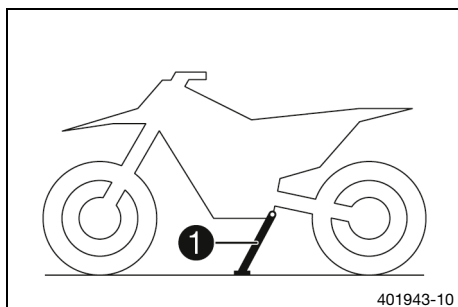


- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.



### Info

When you are riding, the side stand must be folded up and secured with rubber strap.

## 12.3 Bleeding the fork legs

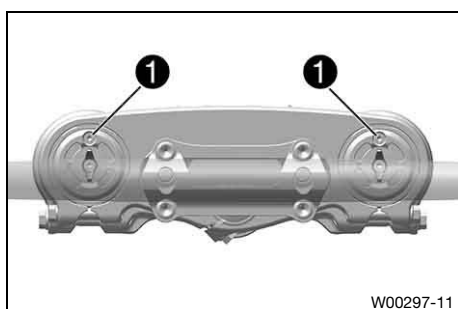

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

### Main work

- Release bleeder screws ①.
- ✓ Any excess pressure escapes from the interior of the fork.
- Tighten the bleeder screws.

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)


## 12.4 Cleaning the dust boots of the fork legs

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)
- Remove the fork protector. (📖 p. 61)

### Main work

- Push dust boots ❶ of both fork legs downward.

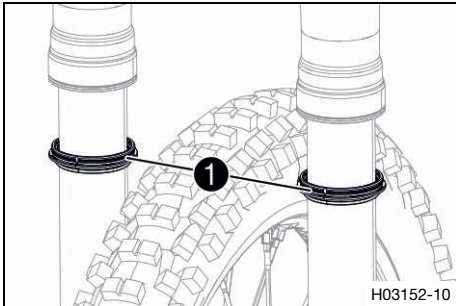

### Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tubes of both fork legs.


Universal oil spray (📖 p. 162)

- Press the dust boots back into their installation position.
- Remove excess oil.

### Finishing work


- Install the fork protector. (📖 p. 62)
- Remove the motorcycle from the lift stand. (📖 p. 60)

## 12.5 Removing the fork protector

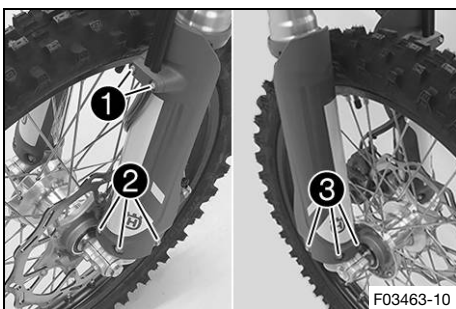

- Remove screws ❶ and take off the clamp.
- Remove screws ❷ on the left fork leg and take off the left fork protector.
- Remove screws ❸ on the right fork leg and take off the right fork protector.

12.6 Installing the fork protector

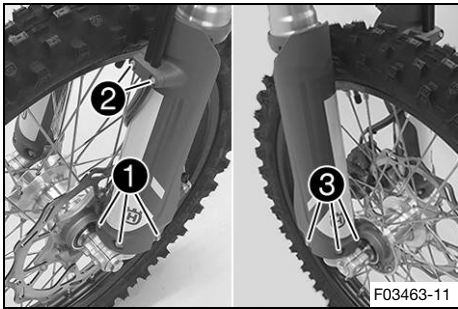

- Position the fork protector on the left fork leg. Mount and tighten screws 1.

Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Position the brake line, wiring harness, and clamp. Mount and tighten screws 2.
- Position the fork protector on the right fork leg. Mount and tighten screws 3.

Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

12.7 Removing the fork legs


Preparatory work

- Remove the headlight mask with the headlight. (p. 120)
- Raise the motorcycle with a lift stand. (p. 60)
- Remove the front wheel. (p. 108)

Main work

(All standard models)


- Remove screws 1 and take off the clamp.
- Remove the cable tie.
- Remove screws 2 and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.

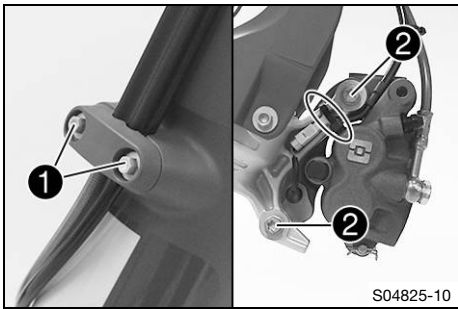


**i Info**  
Do not actuate the hand brake lever when the front wheel is removed.

(All special models)

- Remove screws 1 and take off the clamp.
- Remove the cable tie.
- Remove screws 2 and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.

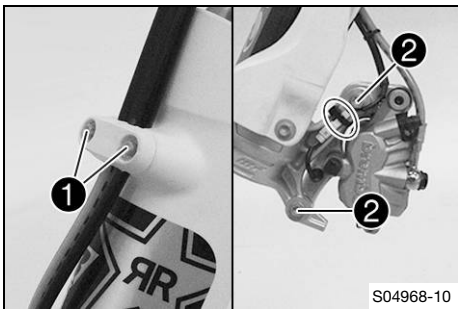


**i Info**  
Do not actuate the hand brake lever when the front wheel is removed.

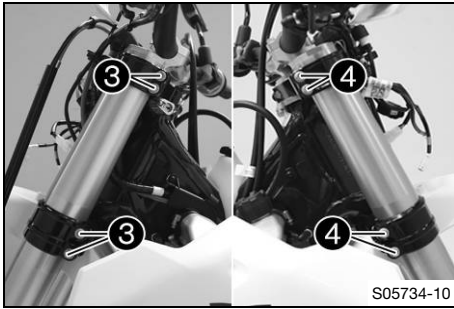

- Loosen screws ③. Remove the left fork leg.
- Loosen screws ④. Remove the right fork leg.

## 12.8 Installing the fork legs

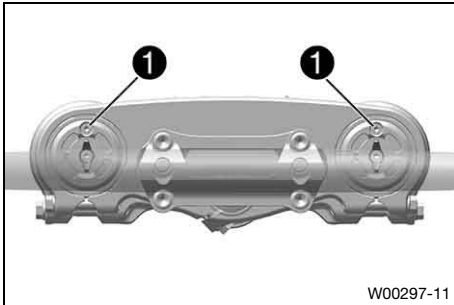


### Main work

- Position the fork legs.
- ✓ Bleeder screws ① are positioned toward the front.



### Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

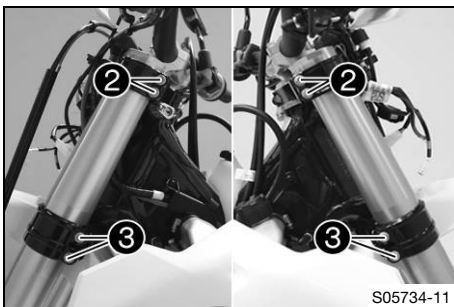

- Tighten screws ②.


### Guideline

|                         |    |                     |
|-------------------------|----|---------------------|
| Screw, top triple clamp | M8 | 17 Nm (12.5 lbf ft) |
|-------------------------|----|---------------------|

- Tighten screws ③.

### Guideline

|                            |    |                    |
|----------------------------|----|--------------------|
| Screw, bottom triple clamp | M8 | 12 Nm (8.9 lbf ft) |
|----------------------------|----|--------------------|

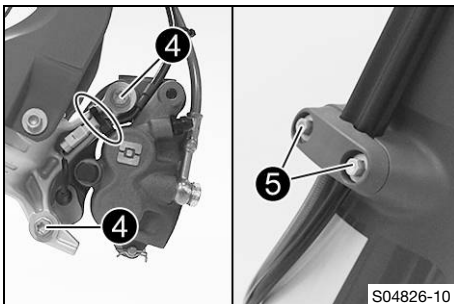

### (All standard models)

- Position the brake caliper, and mount and tighten screws ④.

### Guideline

|                            |    |                                            |
|----------------------------|----|--------------------------------------------|
| Screw, front brake caliper | M8 | 25 Nm (18.4 lbf ft)<br><b>Loctite®243™</b> |
|----------------------------|----|--------------------------------------------|

- Mount the cable ties.
- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws ⑤.


### (All special models)

- Position the brake caliper, and mount and tighten screws ④.

### Guideline

|                            |    |                                            |
|----------------------------|----|--------------------------------------------|
| Screw, front brake caliper | M8 | 25 Nm (18.4 lbf ft)<br><b>Loctite®243™</b> |
|----------------------------|----|--------------------------------------------|

- Mount the cable ties.
- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws ⑤.

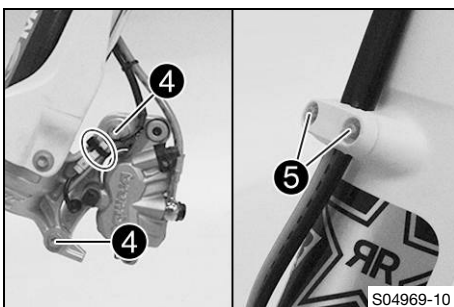

Finishing work

- Install the front wheel. (🔧📖 p. 109)
- Remove the motorcycle from the lift stand. (📖 p. 60)


12.9 Removing the frame protector

Preparatory work

- Remove the right side cover. (📖 p. 76)

Main work

- Remove the cable ties.
- Remove screws ❶ with the bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

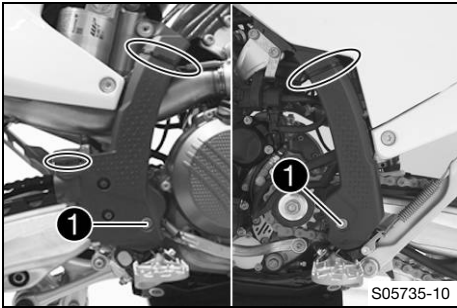

12.10 Installing the frame protector

Main work

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screws ❶ with the bushings and tighten.


Guideline

|                             |    |                   |
|-----------------------------|----|-------------------|
| Screw, frame pro-<br>tector | M5 | 3 Nm (2.2 lbf ft) |
|-----------------------------|----|-------------------|

- Secure the frame protector with cable ties.

Finishing work

- Install the right side cover. (📖 p. 76)

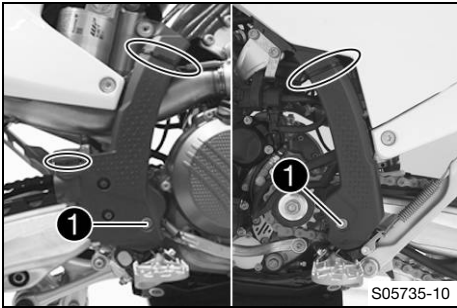


12.11 Removing the lower triple clamp 🛠️

Preparatory work

- Remove the headlight mask with the headlight. (📖 p. 120)
- Raise the motorcycle with a lift stand. (📖 p. 60)
- Remove the front wheel. 🛠️ (📖 p. 108)
- Remove the fork legs. 🛠️ (📖 p. 62)
- Remove front fender. (📖 p. 69)

Main work

- Loosen screw ❶.
- Remove screw ❷.
- Take off the upper triple clamp and handlebar and set it aside.

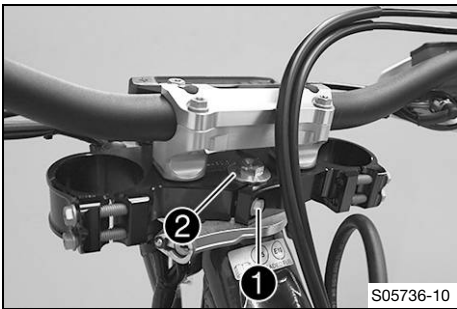



## Info

Protect the components against damage by covering them.


Do not kink the cables or lines.



- Remove protective ring ③.
- Remove the lower triple clamp with steering stem.
- Remove the upper steering head bearing.



## 12.12 Installing the lower triple clamp

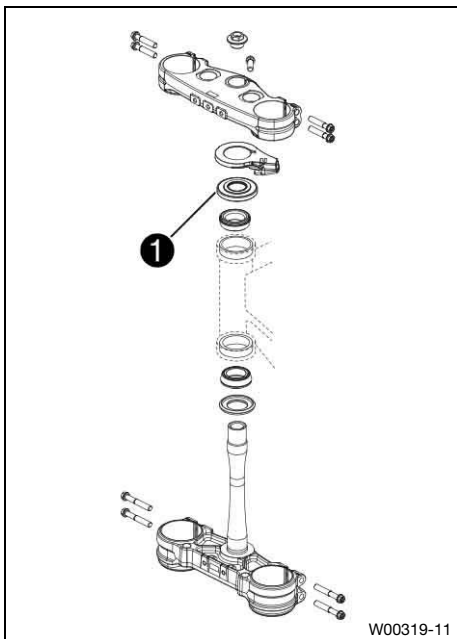


### Main work

- Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease (p. 161)


- Position the lower triple clamp with the steering stem. Mount upper steering head bearing.
- Mount protective ring ①.

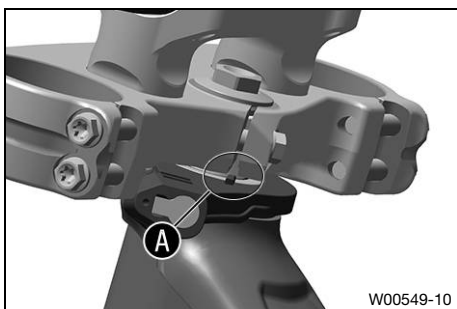


### (All FE models apart from FE 350w US)

- Make sure the steering lock in area A is positioned correctly.
- ✓ The catch on the steering lock engages in the notch on the triple clamp.



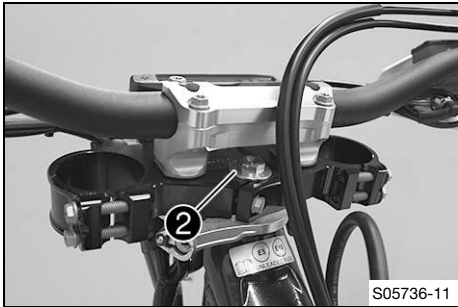


- Position the upper triple clamp and handlebar.
- Mount screw ②, but do not tighten it yet.

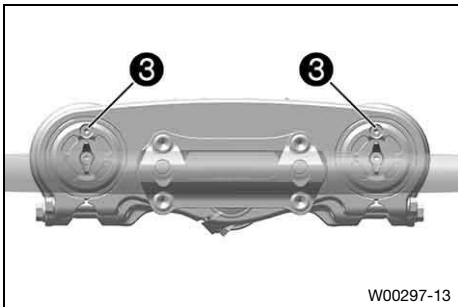

- Position the fork legs.
- ✓ Bleeder screws ③ are positioned toward the front.


**i Info**  
Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

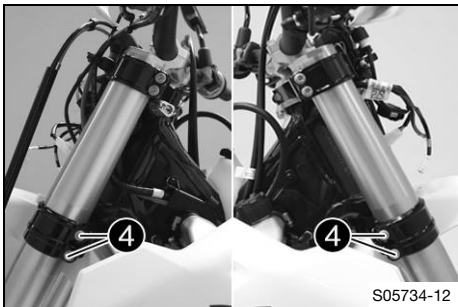

- Tighten screws ④.

Guideline

|                            |    |                    |
|----------------------------|----|--------------------|
| Screw, bottom triple clamp | M8 | 12 Nm (8.9 lbf ft) |
|----------------------------|----|--------------------|

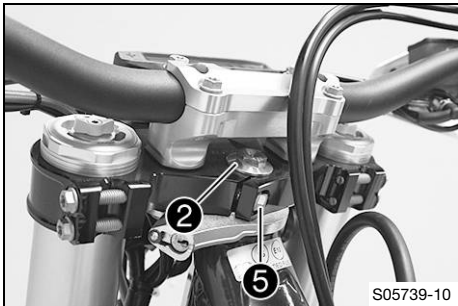

- Tighten screw ②.


Guideline

|                          |         |                    |
|--------------------------|---------|--------------------|
| Screw, top steering head | M20x1.5 | 12 Nm (8.9 lbf ft) |
|--------------------------|---------|--------------------|

- Mount and tighten screw ⑤.

Guideline

|                          |    |                                            |
|--------------------------|----|--------------------------------------------|
| Screw, top steering stem | M8 | 20 Nm (14.8 lbf ft)<br><b>Loctite®243™</b> |
|--------------------------|----|--------------------------------------------|

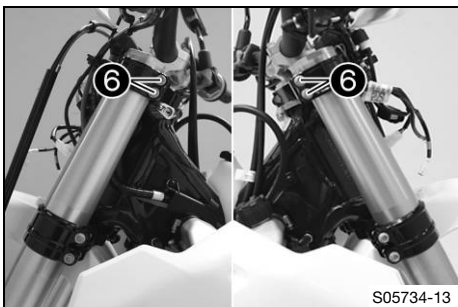


- Tighten screws ⑥.

Guideline

|                         |    |                     |
|-------------------------|----|---------------------|
| Screw, top triple clamp | M8 | 17 Nm (12.5 lbf ft) |
|-------------------------|----|---------------------|



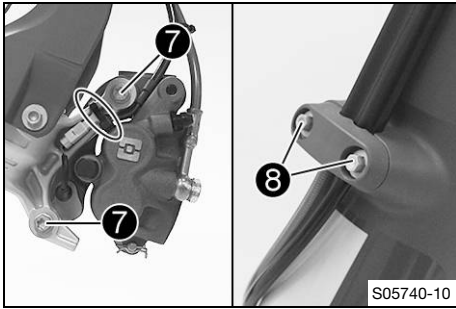

- Position the brake caliper, and mount and tighten screws **7**.

Guideline

|                            |    |                                            |
|----------------------------|----|--------------------------------------------|
| Screw, front brake caliper | M8 | 25 Nm (18.4 lbf ft)<br><b>Loctite®243™</b> |
|----------------------------|----|--------------------------------------------|

- Mount the cable ties.
- Position the brake line, the wiring harness, and the clamp. Mount and tighten screws **8**.

## Finishing work

- Install front fender. (📖 p. 69)
- Install the front wheel. 🛠️ (📖 p. 109)
- Install the headlight mask with the headlight. (📖 p. 121)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check the steering head bearing for play. (📖 p. 67)
- Check the headlight setting. (📖 p. 123)
- Remove the motorcycle from the lift stand. (📖 p. 60)

## 12.13 Checking the steering head bearing play



### Warning

**Danger of accidents** Incorrect steering head bearing play impairs the handling characteristic and damages components.

- Correct incorrect steering head bearing play immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Info

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

## Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

## Main work


- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
  - Adjust the steering head bearing play. 🛠️ (📖 p. 68)
- Move the handlebar to and fro over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
  - Adjust the steering head bearing play. 🛠️ (📖 p. 68)
  - Check the steering head bearing and replace if necessary.

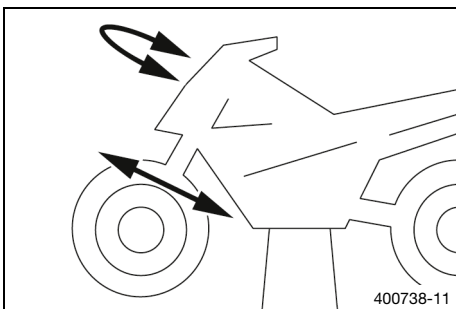


- Check the steering stop bolts for correct adjustment and locking.

Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)

 12.14 Adjusting the steering head bearing play 🛠️



Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

Main work

- Loosen screws ❶.
- Remove screw ❷.
- Loosen and retighten screw ❸.

Guideline

|                          |         |                    |
|--------------------------|---------|--------------------|
| Screw, top steering head | M20x1.5 | 12 Nm (8.9 lbf ft) |
|--------------------------|---------|--------------------|

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws ❶.

Guideline

|                         |    |                     |
|-------------------------|----|---------------------|
| Screw, top triple clamp | M8 | 17 Nm (12.5 lbf ft) |
|-------------------------|----|---------------------|

- Mount and tighten screw ❷.


Guideline

|                          |    |                                            |
|--------------------------|----|--------------------------------------------|
| Screw, top steering stem | M8 | 20 Nm (14.8 lbf ft)<br><b>Loctite®243™</b> |
|--------------------------|----|--------------------------------------------|

Finishing work

- Check the steering head bearing for play. (📖 p. 67)
- Remove the motorcycle from the lift stand. (📖 p. 60)

 12.15 Lubricating the steering head bearing 🛠️



- Remove the lower triple clamp. 🛠️ (📖 p. 64)
- Install the lower triple clamp. 🛠️ (📖 p. 65)



Info

The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.


## 12.16 Removing front fender

### Preparatory work

- Remove the headlight mask with the headlight. (📖 p. 120)

### Main work

- Remove screws ❶.
- Remove screws ❷. Take off the front fender.

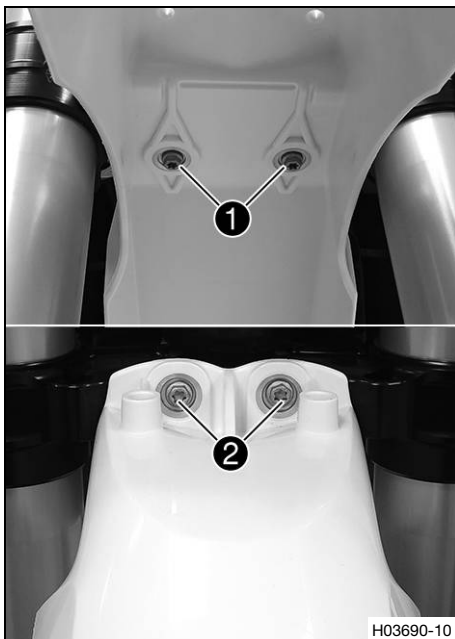

## 12.17 Installing front fender

### Main work

- Position front fender. Mount and tighten screws ❶.


#### Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Mount and tighten screws ❷.

#### Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

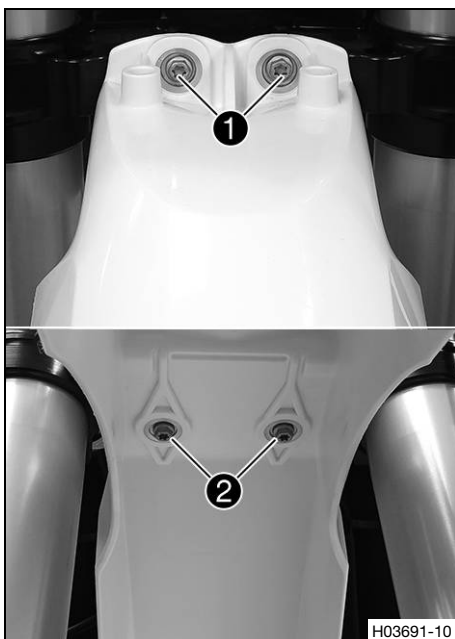

### Finishing work

- Install the headlight mask with the headlight. (📖 p. 121)
- Check the headlight setting. (📖 p. 123)


## 12.18 Removing the shock absorber

### Preparatory work

- Raise the motorcycle with a lift stand. (p. 60)
- Remove the right side cover. (p. 76)
- Remove the frame protector. (p. 64)

### Main work

- Remove screw ①.
- Remove fitting ②.

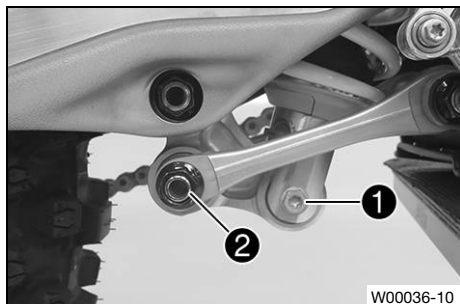

### Info


Raise the link fork slightly to be able to remove the screws more easily.

### (All FE models apart from FE 350w US)

- Disconnect the plug-in connector of the brake light switch.



- Remove screws ③.
- Pull off foot brake cylinder from the push rod.

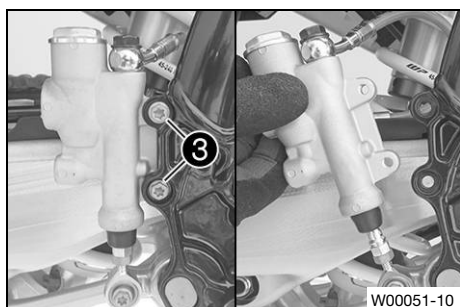


- Remove the connecting link of the chain.




### Info


Cover the components to protect them against damage.

- Take off the chain.

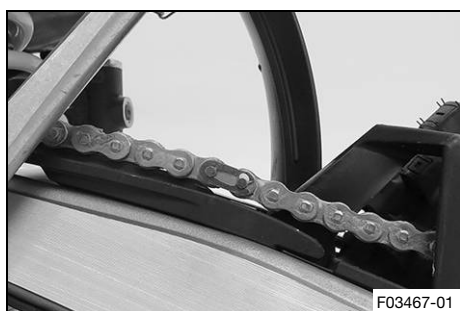

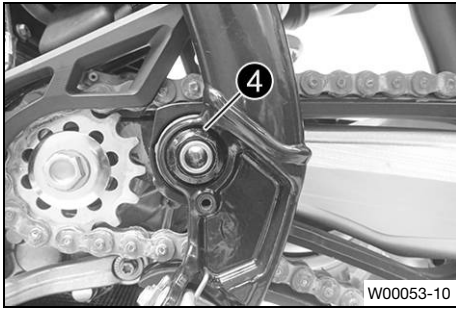


- Remove nut **4** and pull out the swingarm pivot.
- Push the link fork back and secure it against falling over.

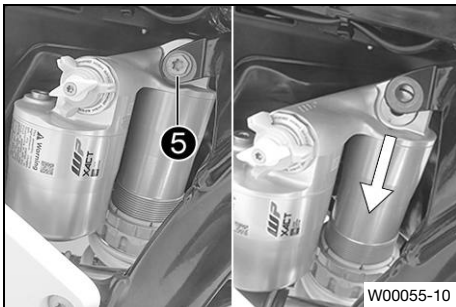

- Hold the shock absorber and remove screw **5**.
- Remove the shock absorber carefully at the bottom.

## 12.19 Installing the shock absorber

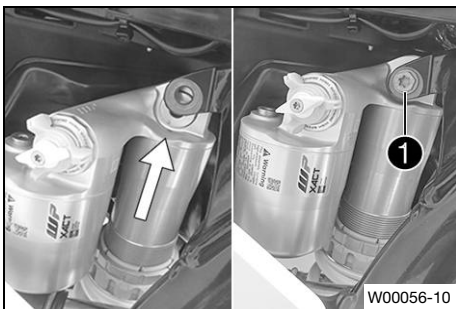


### Main work

- Carefully position the shock absorber into the vehicle from the bottom.
- Mount and tighten screw **1**.

### Guideline

|                           |     |                                              |
|---------------------------|-----|----------------------------------------------|
| Screw, top shock absorber | M10 | 60 Nm (44.3 lbf ft)<br><b>Loctite® 2701™</b> |
|---------------------------|-----|----------------------------------------------|

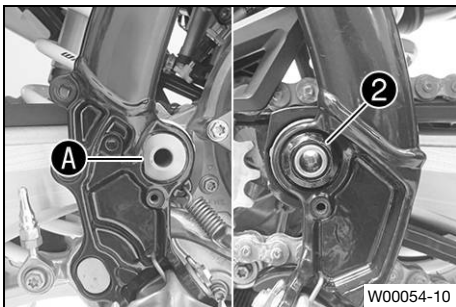

- Position the link fork and mount the swingarm pivot.




### Info

Pay attention to flat area **A**.

- Mount and tighten nut **2**.

### Guideline

|                 |         |                      |
|-----------------|---------|----------------------|
| Nut, fork pivot | M16x1.5 | 100 Nm (73.8 lbf ft) |
|-----------------|---------|----------------------|

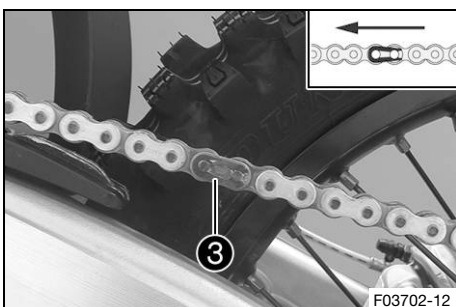


- Mount the chain.
- Connect the chain with connecting link **3**.

### Guideline

The closed side of the chain joint lock must face in the direction of travel.




- (All FE models apart from FE 350w US)
- Join plug-in connector of the brake light switch.

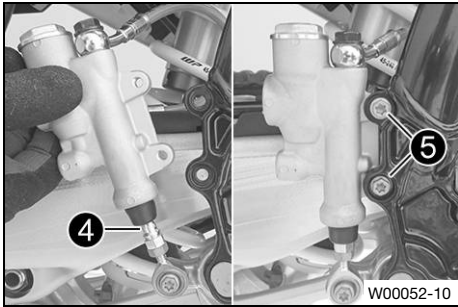

- Position the foot brake cylinder.
  - ✓ Push rod 4 engages in the foot brake cylinder.
  - ✓ The dust boot is correctly positioned.
- Mount and tighten screws 5.

Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

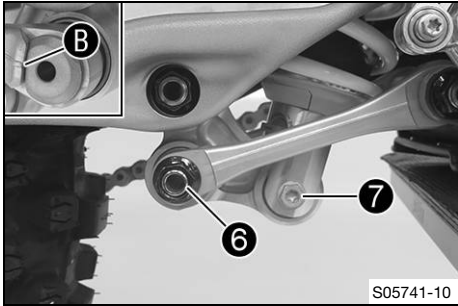

- Position the angle lever and linkage lever.
- Mount and tighten fitting 6.

Guideline

|                                   |         |                   |
|-----------------------------------|---------|-------------------|
| Nut, linkage lever on angle lever | M16x1.5 | 80 Nm (59 lbf ft) |
|-----------------------------------|---------|-------------------|

**i Info**  
Pay attention to flat area B.

- Mount and tighten screw 7.

Guideline

|                              |     |                                             |
|------------------------------|-----|---------------------------------------------|
| Screw, bottom shock absorber | M10 | 60 Nm (44.3 lbf ft)<br><b>Loctite®2701™</b> |
|------------------------------|-----|---------------------------------------------|

**i Info**  
Raise the link fork slightly to be able to mount the screw more easily.

**Finishing work**

- Install the frame protector. (p. 64)
- Install the right side cover. (p. 76)
- Remove the motorcycle from the lift stand. (p. 60)



## 12.20 Removing the seat



- Remove screw ❶.
- Push the seat forward and take it off in an upward direction.

## 12.21 Mounting the seat




- Mount the front of the seat on the collar bushings of the fuel tank, lower the seat at the rear, and push the seat to the rear.  
✓ The holding lugs engage in the recesses at the back.
- Make sure the seat is latched in place correctly.
- Mount and tighten screw ❶.

### Guideline


|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

## 12.22 Removing the air filter box cover

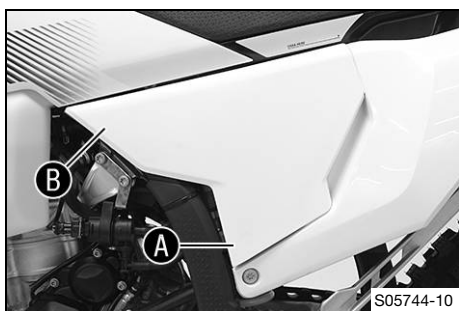

- Pull off the air filter box cover sideways in areas **A** and **B**, and take off toward the front.

## 12.23 Installing the air filter box cover

 

- Attach the air filter box cover in area **A** and slide it to the rear.
- Engage the air filter box cover in areas **B** and **C**.

## 12.24 Removing the air filter

### Note

**Engine damage** Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Only operate the vehicle if it is equipped with an air filter.



### Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

### Preparatory work

- Remove the air filter box cover. (📖 p. 74)


### Main work

- Detach retaining tab **1**. Remove air filter with air filter support.
- Remove air filter from air filter support.






## 12.25 Installing the air filter

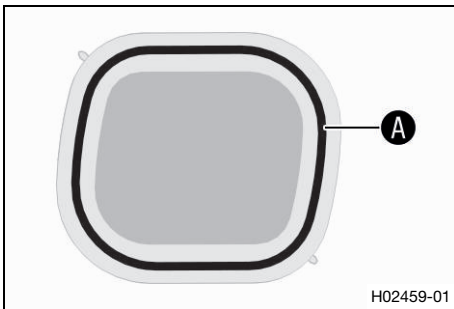

### Main work

- Mount the clean air filter on the air filter support.
- Grease the air filter in area **A**.

Long-life grease (p. 161)

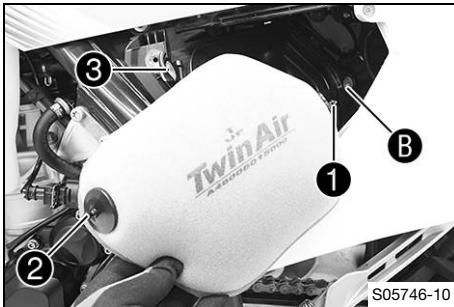

- Insert air filter and position retaining pin **1** in bushing **B**.  
✓ The air filter is correctly positioned.
- Insert retaining tab **3**.  
✓ Retaining pin **2** is secured with retaining tab **3**.



### Info

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

### Finishing work

- Install the air filter box cover. (p. 74)



## 12.26 Cleaning the air filter and air filter box



### Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



### Info

Do not clean the air filter with fuel or petroleum since these substances attack the foam.

### Preparatory work

- Remove the air filter box cover. (p. 74)
- Remove the air filter. (p. 74)

### Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaner (p. 161)



### Info

Only press the air filter to dry it, never wring it out.

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter (p. 161)


- Clean the air filter box.
- Check the intake flange for damage and looseness.



## Finishing work


- Install the air filter. (🔧 p. 75)
- Install the air filter box cover. (🔧 p. 74)

### 12.27 Removing the right side cover

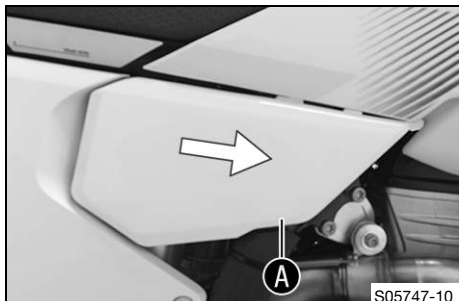

- Detach the side cover in area **A** and take off to the rear.

### 12.28 Installing the right side cover

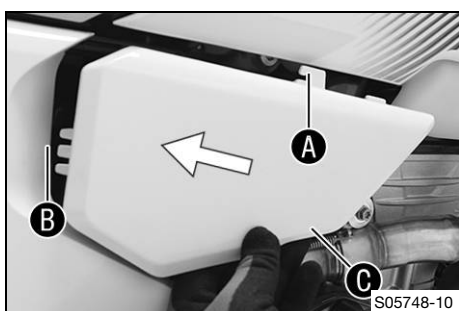

- Attach side cover with holding lug **A** from below and push to the rear.
- Engage the side cover in areas **B** and **C**.

### 12.29 Removing the main silencer



#### Warning

**Danger of burns** The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

## Preparatory work

- Remove the right side cover. (🔧 p. 76)

## Main work

- Detach spring **1**.

Spring hook (50305017000C1)

### (All FE models apart from FE 350w US)


- Remove screws **2** and take off the main silencer with the catalytic converter.

### (FE 350w US)

- Remove screws **2** and take off the main silencer.



## 12.30 Installing the main silencer

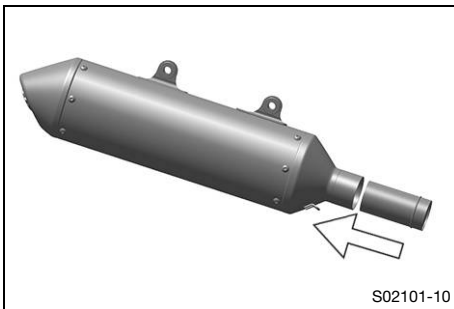

### Main work

(All FE models apart from FE 350w US)

- Position the catalytic converter in the main silencer.



- Position the main silencer.
- Mount screws ①, but do not tighten yet.
- Attach spring ②.

|                             |
|-----------------------------|
| Spring hook (50305017000C1) |
|-----------------------------|

- Tighten screws ①.

### Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

### Finishing work

- Install the right side cover. (📖 p. 76)



## 12.31 Cleaning the spark arrestor 🗑️ (FE 350w US)



### Warning

**Danger of burns** The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.




### Info

Soot particles accumulate on the screen of the spark arrestor over time. This changes the performance characteristics.

### Preparatory work

- Remove the right side cover. (📖 p. 76)
- Remove main silencer. (📖 p. 76)

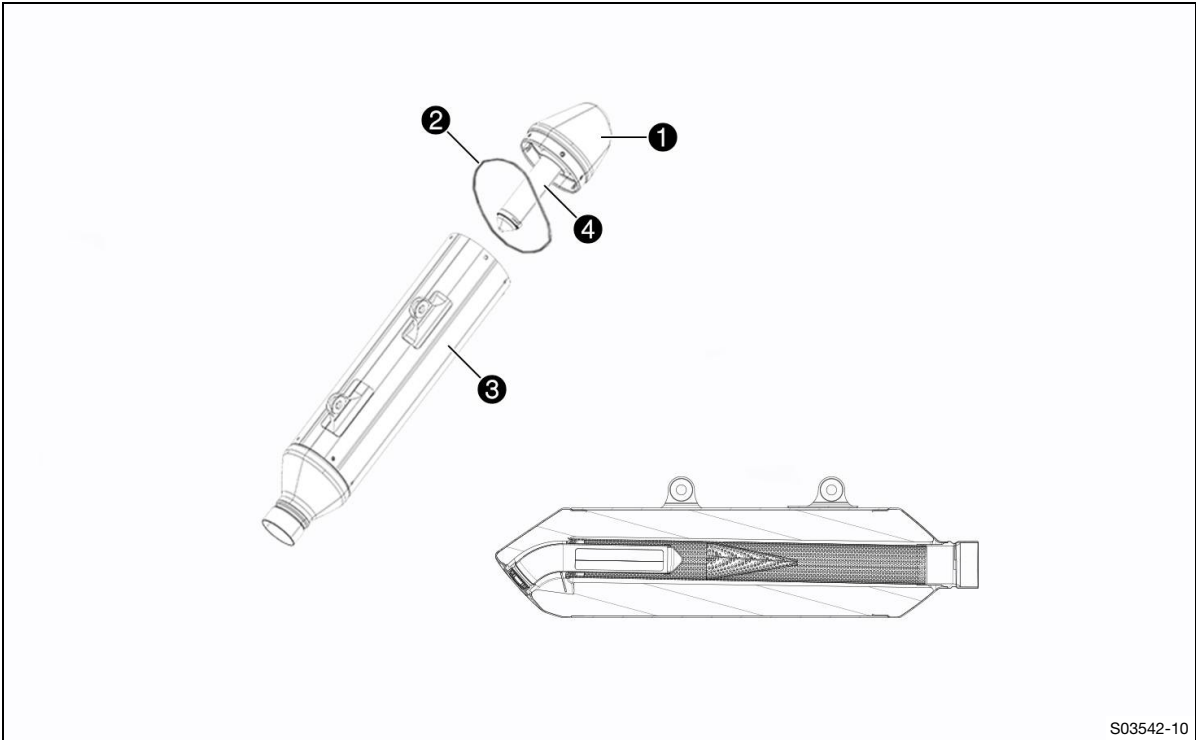

Main work

- Remove all screws, take off silencer cap 1 with O-ring 2.

**i Info**  
Do not remove the glass fiber yarn filling.

**! Caution**  
**Danger to health** Soot particles irritate the eyes and mucuous membranes.  
- Wear suitable breathing and eye protection when cleaning the main silencer and carbon screen.

- Clean main silencer sleeve 3 and screen 4 of the spark arrestor with compressed air.
- Position silencer cap 1 with O-ring 2.
- Mount and tighten all of the screws.

Guideline

|                         |    |                   |
|-------------------------|----|-------------------|
| Screws on main silencer | M5 | 7 Nm (5.2 lbf ft) |
|-------------------------|----|-------------------|

Finishing work

- Install the main silencer. (📖 p. 77)
- Install the right side cover. (📖 p. 76)

## 12.32 Changing the glass fiber yarn filling in the main silencer ↗



### Warning

**Danger of burns** The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.



### Info

Over time, the fibers of the glass fiber yarn filling escape and the damper "burns" out. Not only is the noise level higher, but the performance characteristics change.

### Preparatory work

- Remove the right side cover. (📖 p. 76)
- Remove main silencer. (📖 p. 76)


### Main work


(All FE models apart from FE 350w US)

- Remove all the screws on the main silencer.
- Take off silencer cap ❶ with O-ring ❷.
- Remove glass fiber yarn filling ❸ from main silencer ❹.
- Clean the parts that need to be reinstalled and check for damage.
- Mount the new glass fiber yarn filling between the inner tube and the outer tube.
- Position the silencer cap with O-ring in the outer tube.
- Mount and tighten all of the screws.

#### Guideline

|                         |    |                   |
|-------------------------|----|-------------------|
| Screws on main silencer | M5 | 7 Nm (5.2 lbf ft) |
|-------------------------|----|-------------------|

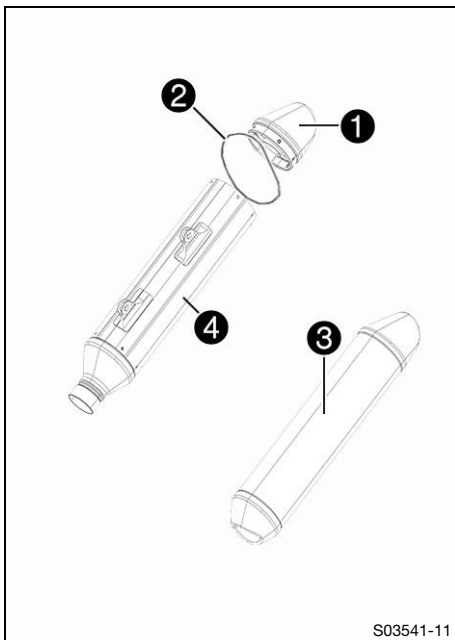

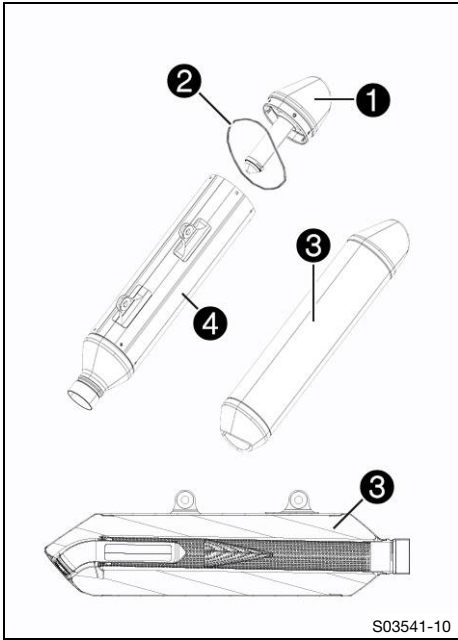

(FE 350w US)

- Remove all the screws on the main silencer.
- Take off silencer cap ① with the filter and O-ring ②.
- Remove glass fiber yarn filling ③ from main silencer ④.
- Clean the parts that need to be reinstalled and check for damage.
- Mount the new glass fiber yarn filling between the inner tube and the outer tube.
- Position the silencer cap with the filter and the O-ring in the outer tube.
- Mount and tighten all of the screws.

Guideline

|                         |    |                   |
|-------------------------|----|-------------------|
| Screws on main silencer | M5 | 7 Nm (5.2 lbf ft) |
|-------------------------|----|-------------------|

Finishing work

- Install the main silencer. (📖 p. 77)
- Install the right side cover. (📖 p. 76)

12.33 Removing the fuel tank 🔧



**Danger**

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



**Warning**

**Danger of poisoning** Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.

Preparatory work

- Remove the seat. (📖 p. 73)



## Main work

- Clean quick release coupling **1** thoroughly with compressed air.



### Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.




### Info


Remaining fuel may flow out of the fuel line.

- Mount the wash cap set.

Wash cap set (81212016100)

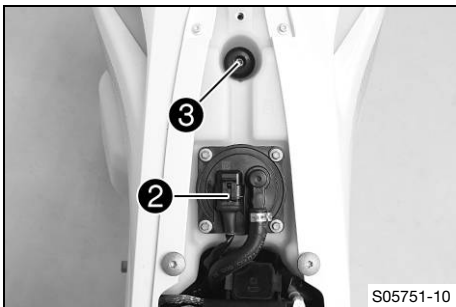


- Unplug fuel pump connector **2**.
- Remove screw **3** with the rubber bushing.
- Remove the hose from the fuel tank breather.

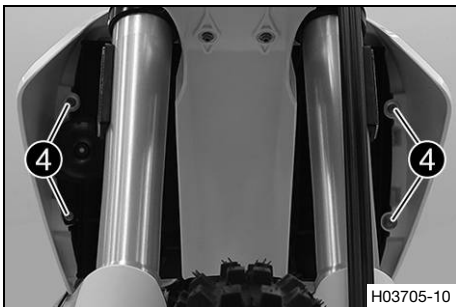

- Remove screws **4**.

**(All FE models apart from FE 350w US)**

- Hang the horn and horn bracket to one side.

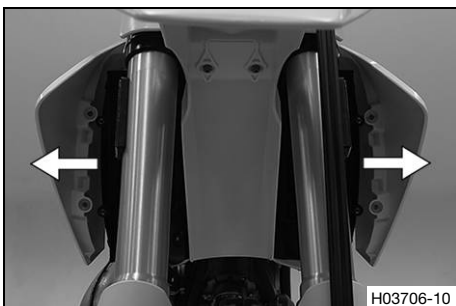

- Pull both spoilers laterally off the radiator and lift off the fuel tank.

12.34 Installing the fuel tank ↱



**Danger**  
**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.





**Warning**  
**Danger of poisoning** Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.

**Main work**

 - Check the throttle cable routing. (📖 p. 89)
- Position the fuel tank and fit the two spoilers to the sides in front of the radiator bracket.
- Make sure that no cables or throttle cables are trapped or damaged.

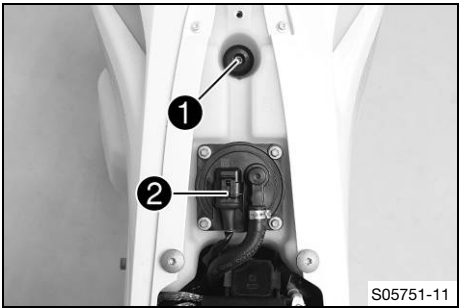

- Attach the fuel tank breather hose.
- Mount and tighten screw ① with the rubber bushing.

Guideline


|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Plug in fuel pump connector ②.

**(All FE models apart from FE 350w US)**

- Position the horn with the horn bracket.



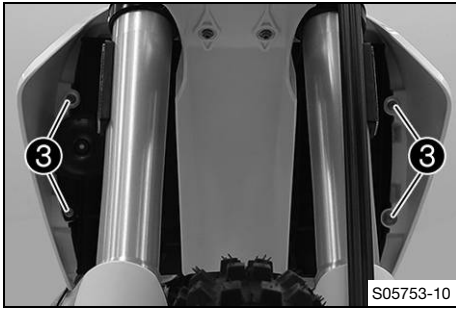

- Mount and tighten screws ③.

Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|



- Remove the wash cap set.
- Clean the quick release coupling thoroughly with compressed air.



## Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-release coupling.

Silicone spray (📖 p. 161)

- Join quick release coupling ④.



## Info


Route the cable and fuel line at a safe distance from the exhaust system.

## Finishing work

- Mount the seat. (📖 p. 73)



## 12.35 Checking for chain dirt accumulation

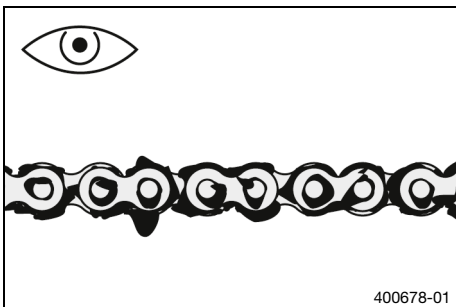

- Check the chain for coarse dirt accumulation.
  - » If the chain is very dirty:
    - Clean the chain. (📖 p. 83)



## 12.36 Cleaning the chain



### Warning

**Danger of accidents** Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

## 12 SERVICE WORK ON THE CHASSIS



### Note

 
**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



### Info

The service life of the chain depends largely on its maintenance.



400725-01

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

### Main work

- Rinse off loose dirt with a soft jet of water.
- Remove old grease residue with chain cleaner.

Chain cleaner (📖 p. 161)

- After drying, apply chain spray.

Off-road chain spray (📖 p. 161)

### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)

## 12.37 Checking the chain tension



### Warning

**Danger of accidents** Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

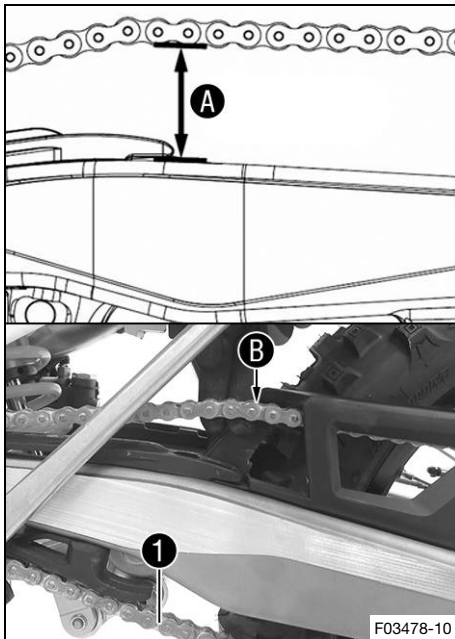

## Main work

- Pull the chain at the end of the chain sliding piece upward to measure chain tension **A**.



## Info

Lower chain section **1** must be taut.

When the chain guard is mounted, it must be possible to pull up the chain at least to the point where it makes contact with chain guard **B**.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

|               |                                |
|---------------|--------------------------------|
| Chain tension | 58 ... 61 mm (2.28 ... 2.4 in) |
|---------------|--------------------------------|

- » If the chain tension does not meet the specification:
  - Adjust the chain tension. (📖 p. 85)

## Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)



## 12.38 Adjusting the chain tension



### Warning

**Danger of accidents** Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

## Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)
- Check the chain tension. (📖 p. 84)

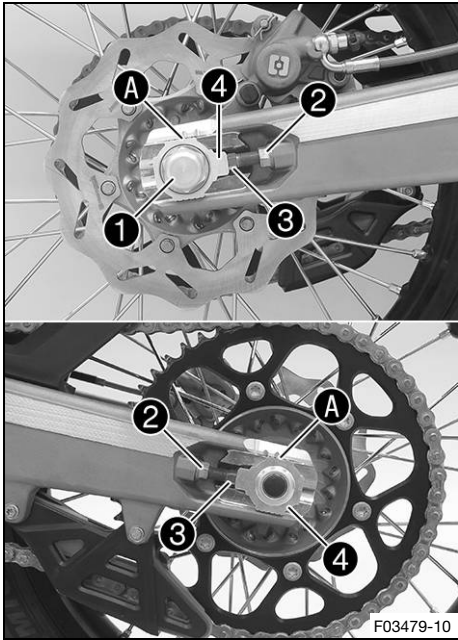

**Main work**  
**(All standard models)**

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

**Guideline**

|                                                                                                                                                                                                            |                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| Chain tension                                                                                                                                                                                              | 58 ... 61 mm (2.28 ... 2.4 in) |
| Turn adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned. |                                |

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.

**Guideline**


|                          |         |                   |
|--------------------------|---------|-------------------|
| Nut, wheel spindle, rear | M22x1.5 | 80 Nm (59 lbf ft) |
|--------------------------|---------|-------------------|

i

**Info**

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters ④ can be turned by 180°.

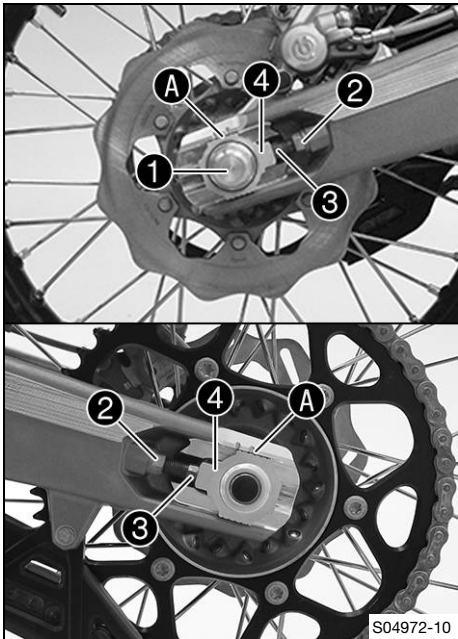

**(All special models)**

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

**Guideline**

|                                                                                                                                                                                                            |                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| Chain tension                                                                                                                                                                                              | 58 ... 61 mm (2.28 ... 2.4 in) |
| Turn adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned. |                                |

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.

**Guideline**

|                          |         |                   |
|--------------------------|---------|-------------------|
| Nut, wheel spindle, rear | M22x1.5 | 80 Nm (59 lbf ft) |
|--------------------------|---------|-------------------|



## Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters ④ can be turned by 180°.

## Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)



## 12.39 Checking the chain, rear sprocket, engine sprocket, and chain guide

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)


### Main work

- Shift the transmission into neutral.
- Check the chain, rear sprocket, and engine sprocket for wear.
  - » If the chain, rear sprocket or engine sprocket is worn:
    - Change the drivetrain kit. 🛠️




## Info

The engine sprocket, rear sprocket, and chain should always be replaced together.

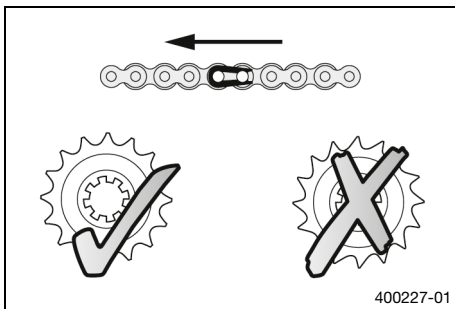

400227-01

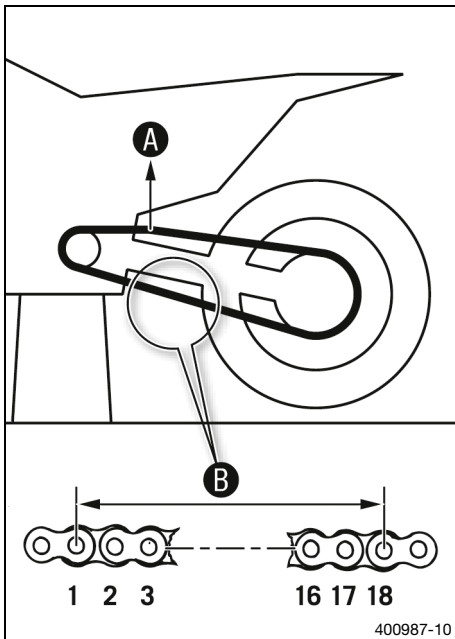

400987-10

- Pull on the top section of the chain with the specified weight A.

### Guideline

|                                  |                              |
|----------------------------------|------------------------------|
| Weight of chain wear measurement | 10 ... 15 kg (22 ... 33 lb.) |
|----------------------------------|------------------------------|

- Measure distance B of 18 chain rollers in the lower chain section.



## Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.

|                                                                       |                   |
|-----------------------------------------------------------------------|-------------------|
| Maximum distance B from 18 chain rollers at the longest chain section | 272 mm (10.71 in) |
|-----------------------------------------------------------------------|-------------------|


- » If distance B is greater than the specified measurement:
  - Change the drivetrain kit. 🛠️



## Info

When a new chain is mounted, the rear sprocket and engine sprocket should also be changed.


New chains wear out faster on old, worn sprockets.

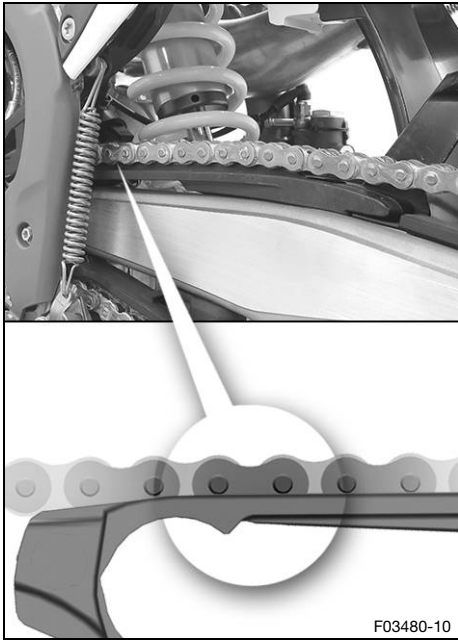

- Check the chain sliding guard for wear.
  - » If the lower edge of the chain pins is in line with, or below, the chain sliding guard:
    - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
  - » If the chain sliding guard is loose:
    - Tighten screws on the chain sliding guard.

Guideline


|                            |    |                                          |
|----------------------------|----|------------------------------------------|
| Screw, chain sliding guard | M6 | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b> |
|----------------------------|----|------------------------------------------|

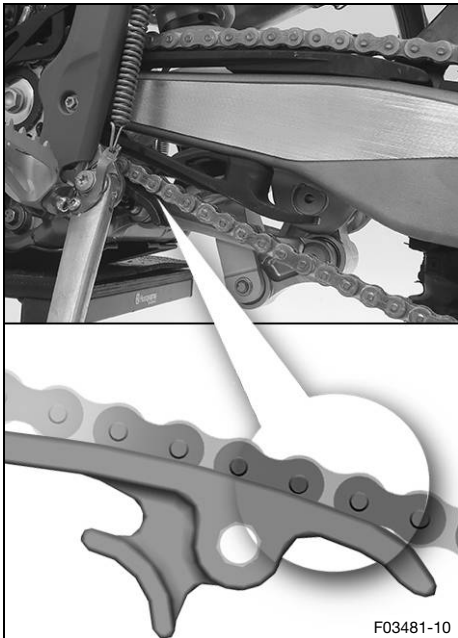

- Check chain sliding piece for wear.
  - » If the lower edge of the chain pins is in line with or below the chain sliding piece:
    - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
  - » If the chain sliding piece is loose:
    - Tighten the screw of the chain sliding piece.

Guideline

|                            |    |                        |
|----------------------------|----|------------------------|
| Screw, chain sliding piece | M8 | 15 Nm<br>(11.1 lbf ft) |
|----------------------------|----|------------------------|

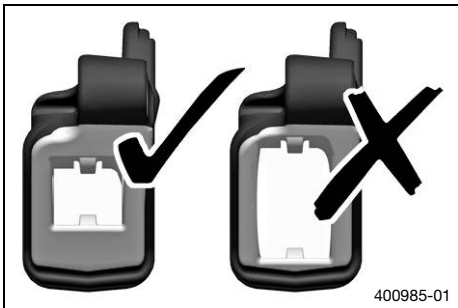


- Check the chain guide for wear.



**Info**  
Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
  - Change the chain guide. 🛠️



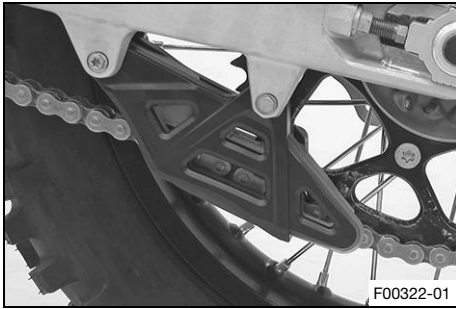

- Check that the chain guide is firmly seated.
  - » If the chain guide is loose:
    - Tighten the fitting on the chain guide.

#### Guideline


|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
| Remaining nuts, chassis   | M6 | 10 Nm (7.4 lbf ft) |

#### Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)



## 12.40 Checking the frame 🛠️

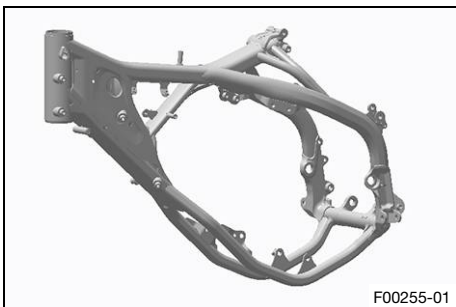

- Check the frame for damage, cracking, and deformation.
  - » If the frame shows signs of damage, cracking, or deformation:
    - Change the frame. 🛠️

#### Guideline

Repairs on the frame are not permitted.



## 12.41 Checking the link fork 🛠️



- Check the link fork for damage, cracking, and deformation.
  - » If the link fork exhibits damage, cracking, or deformation:
    - Change the link fork. 🛠️

#### Info

Always replace a damaged link fork. Repair of the link fork is not authorized by Husqvarna Motorcycles.



## 12.42 Checking the throttle cable routing



### Warning

**Danger of accidents** The throttle cable can become kinked, trapped or blocked if it is not routed correctly.

If the throttle cable is kinked, trapped or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in throttle cable complies with the specification.

#### Preparatory work

- Remove the seat. (📖 p. 73)
- Remove the fuel tank. 🛠️ (📖 p. 80)



Main work

- Check the throttle cable routing.


Both throttle cables must be routed, side by side, on the back of the handlebars and above the fuel tank bracket, to the throttle valve body. Both throttle cables must be secured behind the rubber strap of the fuel tank support.

- » If the throttle cable is not routed as specified:
  - Correct the throttle cable routing.

Finishing work

- Install the fuel tank. (🔧📖 p. 82)
- Mount the seat. (📖 p. 73)

12.43 Checking the rubber grip

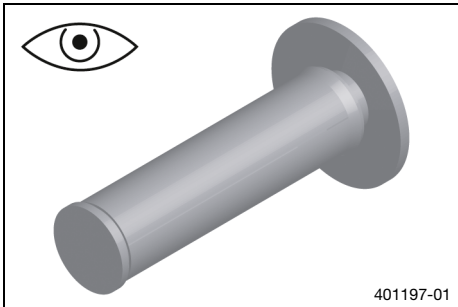

- Check the rubber grips on the handlebar for damage, wear, and looseness.

**i Info**  
The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged, worn, or loose:
  - Change the rubber grip.


(All FE models apart from FE 350w US)

- Check that screw 1 is firmly seated.


Guideline

|                   |    |                                          |
|-------------------|----|------------------------------------------|
| Screw, fixed grip | M4 | 5 Nm (3.7 lbf ft)<br><b>Loctite®243™</b> |
|-------------------|----|------------------------------------------|

Diamond A must be positioned visibly as shown in the figure.

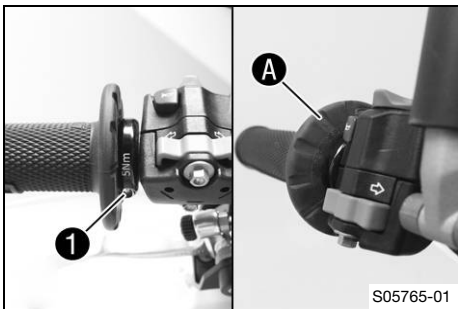



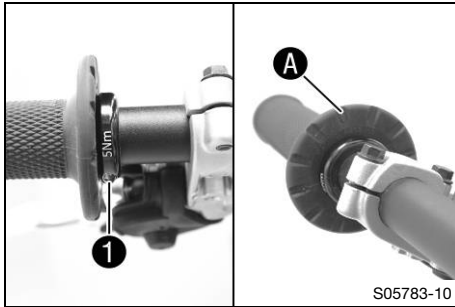

- Check that screw ① is firmly seated.

Guideline

|                   |    |                                          |
|-------------------|----|------------------------------------------|
| Screw, fixed grip | M4 | 5 Nm (3.7 lbf ft)<br><b>Loctite®243™</b> |
|-------------------|----|------------------------------------------|

Diamond ① must be positioned visibly as shown in the figure.

## 12.44 Programming the quickshifter (All FE models apart from FE 350w US)

### **i** Info

If the shifting performance of the quickshifter starts to decrease, it must be reprogrammed.




- Carry out start procedure. (📖 p. 42)
- Press and hold the QS button ① for at least 10 seconds.  
✓ The QS indicator lamp flashes.
- Pull the clutch lever, engage first-gear and press the shift lever as far down as it will go for at least a second.
- Briefly press the QS button ①.  
✓ The QS indicator lamp lights up blue, the teaching procedure was successful.

### **i** Info

If the quickshifter cannot be activated, the teaching procedure was unsuccessful and must be repeated.

## 12.45 Adjusting the basic position of the clutch lever

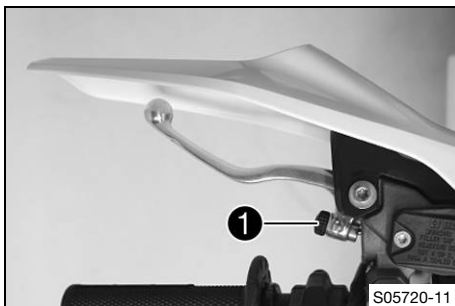

(All standard models)

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw ①.

### **i** Info


Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.

The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding.

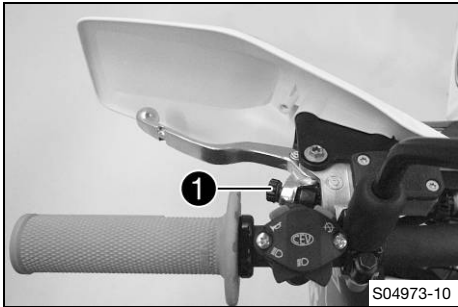

(All special models)

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw 1.

i

**Info**  
Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.  
Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.  
The range of adjustment is limited.  
Turn the adjusting screw by hand only, and do not apply any force.  
Do not make any adjustments while riding.

12.46 Checking/correcting the fluid level of hydraulic clutch

**Warning**  
**Skin irritation** Brake fluid is a harmful substance.


- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Note**  
**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

i

**Info**  
The fluid level rises with increasing wear of the clutch facing discs.  
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

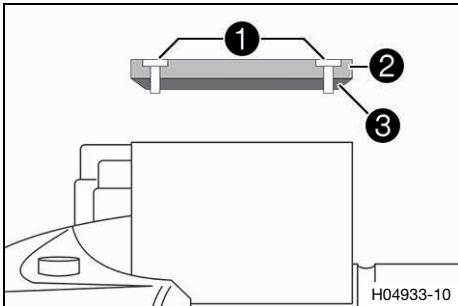

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Check the fluid level.

|                                 |                |
|---------------------------------|----------------|
| Fluid level below container rim | 4 mm (0.16 in) |
|---------------------------------|----------------|

- » If the fluid level does not meet specifications:
- Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (📖 p. 159)

- Position the cover with the membrane. Mount and tighten the screws.



## Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.



## 12.47 Changing the hydraulic clutch fluid



## Warning

**Skin irritation** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



## Note


**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




## Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

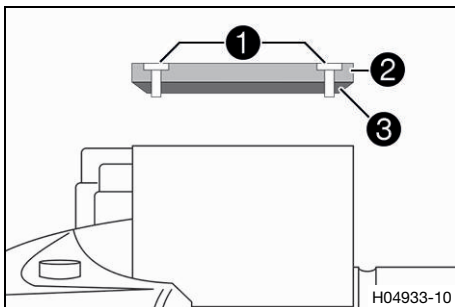

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.

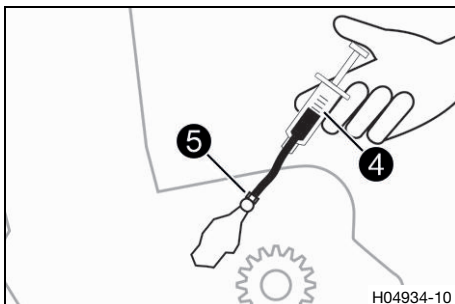


- Fill bleeding syringe ④ with the appropriate hydraulic fluid.

Syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1 ( p. 159)

- On the clutch slave cylinder, remove the protection cap, remove bleeder screw ⑤ and mount bleeding syringe ④.

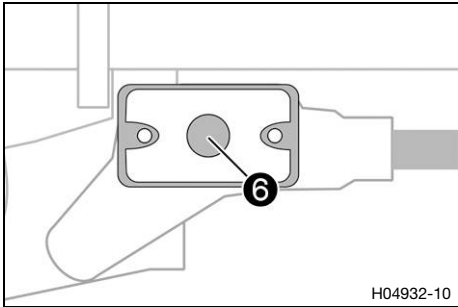

- Inject the liquid into the system until it escapes from openings 6 of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Remove the bleeding syringe. Mount and tighten the bleeder screw. Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Guideline

|                                 |                |
|---------------------------------|----------------|
| Fluid level below container rim | 4 mm (0.16 in) |
|---------------------------------|----------------|


- Position the cover with the membrane. Mount and tighten the screws.



Info


Use water to immediately clean up any brake fluid that has overflowed or spilled.

12.48 Removing the engine guard

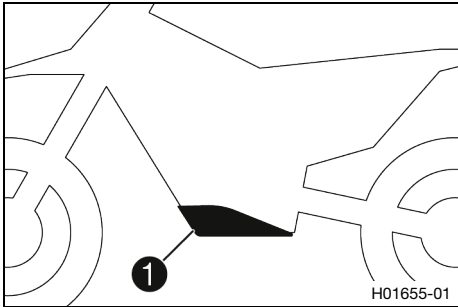

- Remove screws 1 and engine guard.

12.49 Installing the engine guard

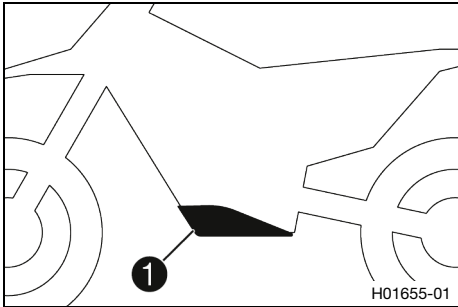


- Attach the engine guard on the frame at the rear and swing up at the front.
- Mount and tighten screws 1.

Guideline

|                           |    |                    |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

### 13.1 Adjusting the basic position of the hand brake lever (All standard models)

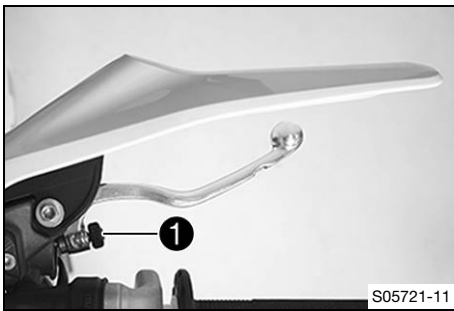

- Adjust basic position of the hand brake lever to your hand size by turning adjusting screw ①.



#### Info

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.

The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding.



### 13.2 Checking the free travel of the hand brake lever (All special models)



#### Warning

**Danger of accidents** The brake system fails in the event of overheating.

If there is no free travel on the hand brake lever, pressure builds up on the front brake circuit.

- Set the free travel on the hand brake lever in accordance with the specification.




- Push the hand brake lever to the handlebar and check free travel A.

|                                 |                                             |
|---------------------------------|---------------------------------------------|
| Free travel of hand brake lever | $\geq 3 \text{ mm } (\geq 0.12 \text{ in})$ |
|---------------------------------|---------------------------------------------|

- » If the free travel does not match the specification:
  - Adjust the free travel of the handbrake lever. (📖 p. 95)



### 13.3 Adjusting the free travel of the handbrake lever (All special models)

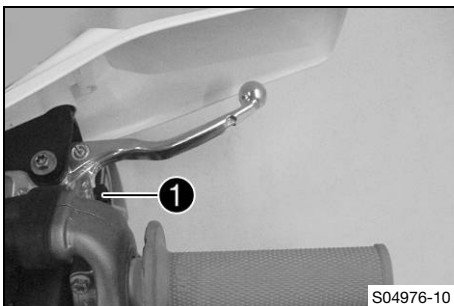

- Check the free travel of the hand brake lever. (📖 p. 95)
- Adjust the free travel of the hand brake lever with adjusting screw ①.



#### Info

Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.

Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.

The range of adjustment is limited.

Turn the adjusting screw by hand only, and do not apply any force.

Do not make any adjustments while riding.




13.4 Checking brake discs



**Warning**

**Danger of accidents** Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

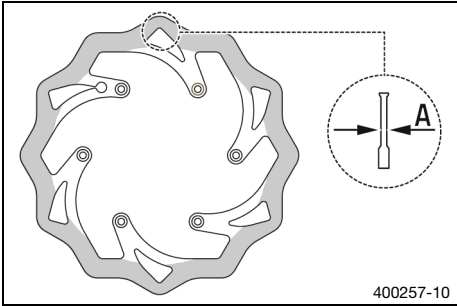

- Check front and rear brake disc thickness at multiple points for the dimension **A**.



**Info**

Wear reduces the thickness of the brake disc around the contact surface of the brake linings.

| Brake discs - wear limit (All standard models) |                   |
|------------------------------------------------|-------------------|
| front                                          | 2.5 mm (0.098 in) |
| rear                                           | 3.5 mm (0.138 in) |

| Brake discs - wear limit (All special models) |                   |
|-----------------------------------------------|-------------------|
| front                                         | 2.5 mm (0.098 in) |
| rear                                          | 3.7 mm (0.146 in) |

- » If the brake disc thickness is less than the specified value:
  - Change the front brake disc. 🛠️
  - Change the rear brake disc. 🛠️
- Check front and rear brake discs for damage, cracking, and deformation.
  - » If the brake disc exhibits damage, cracking, or deformation:
    - Change the front brake disc. 🛠️
    - Change the rear brake disc. 🛠️

13.5 Checking the front brake fluid level



**Warning**

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)




**Warning**

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

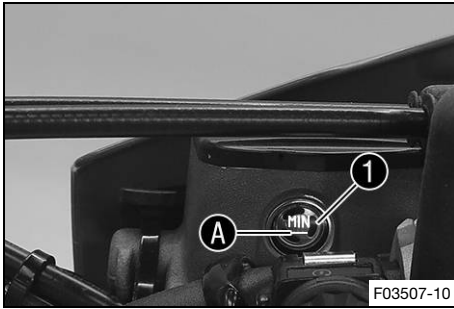**(All standard models)**

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in level viewer ①.
  - » If the brake fluid level has dropped below the **MIN** marking A:
  - Add front brake fluid. 🛠️ (📖 p. 97)

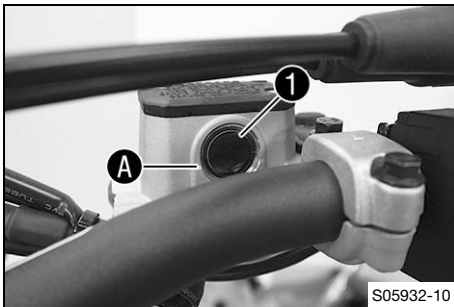**(All special models)**

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in level viewer ①.
  - » When the brake fluid level has dropped to lower edge A of the level viewer:
  - Add front brake fluid. 🛠️ (📖 p. 97)

### 13.6 Adding front brake fluid 🛠️

**Warning**

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**

**Skin irritation** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Warning**

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)




**Note**  
**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



**Info**  
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

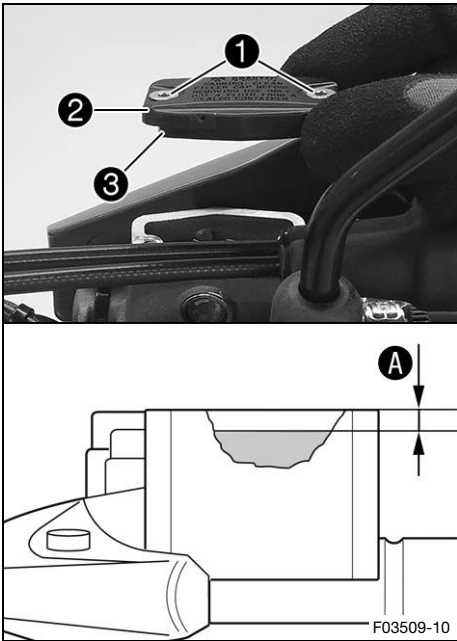

**Preparatory work**

- Check that the brake linings of the front brake are secured. (📖 p. 98)

**Main work**

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Add brake fluid to level A.

**Guideline**

|                                                 |               |
|-------------------------------------------------|---------------|
| Level A (brake fluid level below reservoir rim) | 5 mm (0.2 in) |
|-------------------------------------------------|---------------|

|                                        |
|----------------------------------------|
| Brake fluid DOT 4 / DOT 5.1 (📖 p. 159) |
|----------------------------------------|

- Position the cover with the membrane. Mount and tighten the screws.




**Info**  
Use water to immediately clean up any brake fluid that has overflowed or spilled.

13.7 Checking that the brake linings of the front brake are secured



**Warning**  
**Danger of accidents** Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

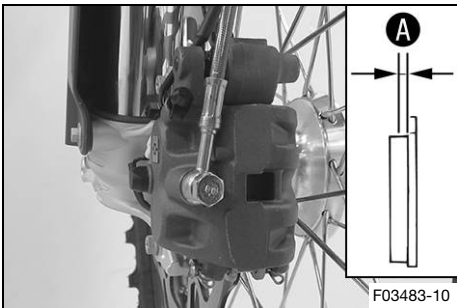

**(All standard models)**


- Check the brake linings for minimum thickness A.

|                     |                    |
|---------------------|--------------------|
| Minimum thickness A | ≥ 1 mm (≥ 0.04 in) |
|---------------------|--------------------|

- » If the minimum thickness is less than specified:
  - Change the brake linings of the front brake. (📖 p. 99)
- Check the brake linings for damage and cracking.
  - » If damage or wear is encountered:
    - Change the brake linings of the front brake. (📖 p. 99)
- Check that the brake linings are secured.
  - » If the brake linings are not secured correctly:



- Secure brake linings, replace with new parts if necessary.

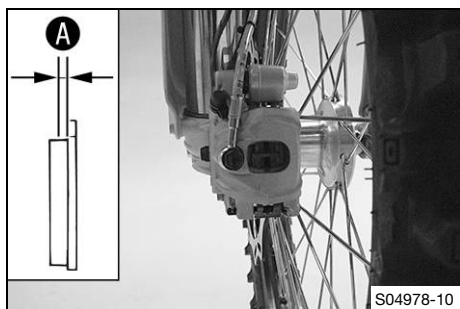

**(All special models)**

- Check the brake linings for minimum thickness **A**.

|                            |                                             |
|----------------------------|---------------------------------------------|
| Minimum thickness <b>A</b> | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---------------------------------------------|

- » If the minimum thickness is less than specified:
  - Change the brake linings of the front brake. 🛠️  
(📖 p. 99)
- Check the brake linings for damage and cracking.
  - » If damage or wear is encountered:
    - Change the brake linings of the front brake. 🛠️  
(📖 p. 99)
- Check that the brake linings are secured.
  - » If the brake linings are not secured correctly:
    - Secure brake linings, replace with new parts if necessary.



## 13.8 Changing the brake linings of the front brake 🛠️



### Warning

**Danger of accidents** Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Warning

**Skin irritation** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



### Warning

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



## Warning

**Danger of accidents** Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.



## Note


**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




## Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

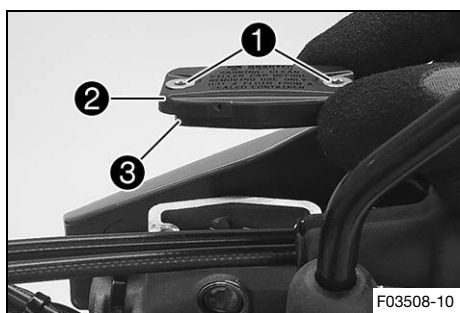

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.

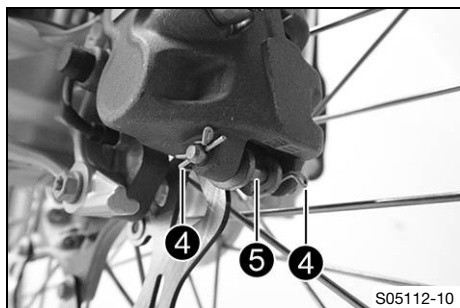


- Manually press the brake caliper toward the brake disc to push back the brake pistons. Ensure that brake fluid does not flow out of the brake fluid reservoir, extract some if necessary.



## Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

- Remove cotter pin ④.
- Pull out pin ⑤.
- Remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.
- Check that spring plate ⑥ in the brake caliper and brake pad sliding plate ⑦ in the brake caliper bracket are seated correctly.

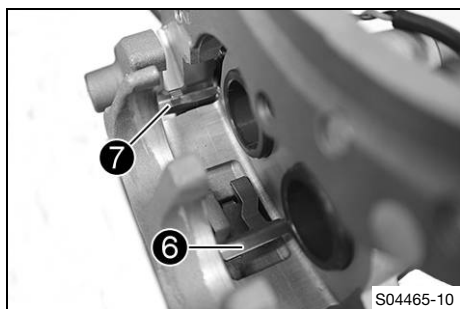



- Insert the new brake linings.
- Mount pin ⑤.
- ✓ Spring plate ⑥ engages in the groove on the pin.

**Info**

Always change the brake linings in pairs.


- Mount cotter pins ④.

**Guideline**

|                                                         |
|---------------------------------------------------------|
| Mount the outer cotter pins from the front to the rear. |
|---------------------------------------------------------|

|                                                         |
|---------------------------------------------------------|
| Mount the inner cotter pins from the rear to the front. |
|---------------------------------------------------------|

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

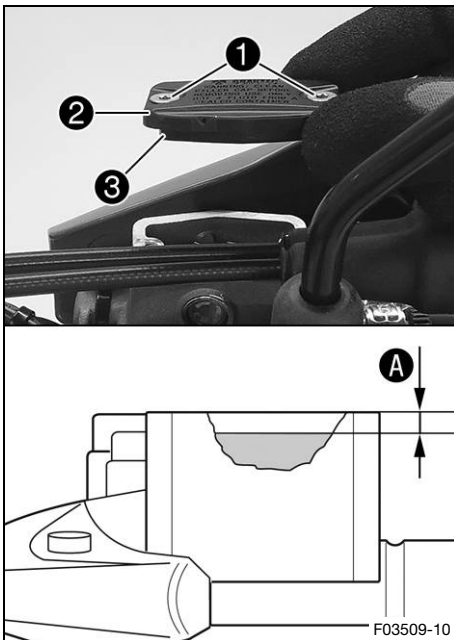

- Add brake fluid up to level A.

**Guideline**

|                                                 |               |
|-------------------------------------------------|---------------|
| Level A (brake fluid level below reservoir rim) | 5 mm (0.2 in) |
|-------------------------------------------------|---------------|

|                                      |
|--------------------------------------|
| Brake fluid DOT 4 / DOT 5.1 (p. 159) |
|--------------------------------------|

- Position cover ② with membrane ③.
- Mount and tighten screws ①.

**Info**

Use water to immediately clean up any brake fluid that has overflowed or spilled.


### 13.9 Checking the free travel of foot brake lever

**Warning**

**Danger of accidents** The brake system will fail if it overheats or is adjusted incorrectly.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.
- Ensure that the adjustment steps are performed properly. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

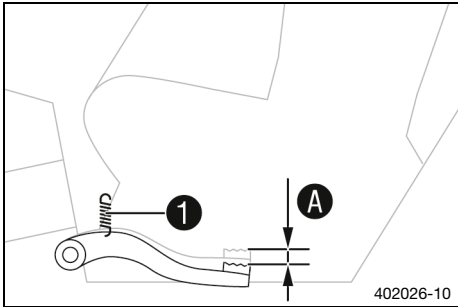

- Disconnect spring 1.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel A.

Guideline

|                                 |                              |
|---------------------------------|------------------------------|
| Free travel at foot brake lever | 3 ... 5 mm (0.12 ... 0.2 in) |
|---------------------------------|------------------------------|

- » If the free travel does not meet specifications:
  - Adjust the basic position of the foot brake lever. (p. 102)
- Reconnect spring 1.


13.10 Adjusting the basic position of the foot brake lever

**Warning**

**Danger of accidents** The brake system will fail if it overheats or is adjusted incorrectly.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.
- Ensure that the adjustment steps are performed properly. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

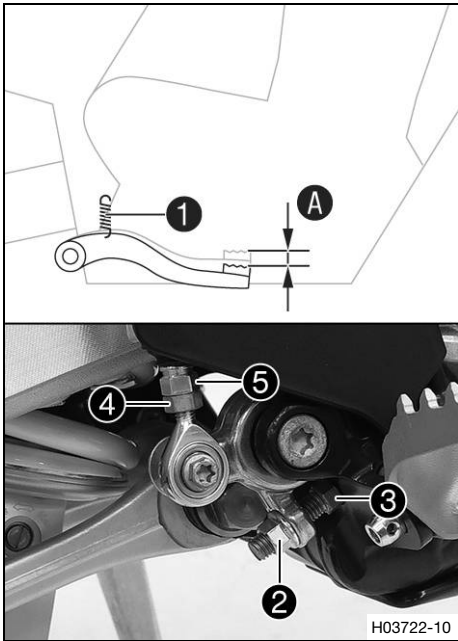

- Detach spring 1.
- Loosen nut 4 and, with push rod 5, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever to individual requirements, loosen nut 2 and turn screw 3 accordingly.

**Info**  
The range of adjustment is limited.

- Turn push rod 5 accordingly until you have free travel A. If necessary, adjust the basic position of the foot brake lever.

Guideline

|                                 |                              |
|---------------------------------|------------------------------|
| Free travel at foot brake lever | 3 ... 5 mm (0.12 ... 0.2 in) |
|---------------------------------|------------------------------|

- Hold screw 3 and tighten nut 2.

Guideline

|                           |    |                     |
|---------------------------|----|---------------------|
| Rear brake lever stop nut | M8 | 20 Nm (14.8 lbf ft) |
|---------------------------|----|---------------------|

- Hold push rod 5 and tighten nut 4.

Guideline

|                         |    |                    |
|-------------------------|----|--------------------|
| Remaining nuts, chassis | M6 | 10 Nm (7.4 lbf ft) |
|-------------------------|----|--------------------|

- Attach spring 1.

### 13.11 Checking the rear brake fluid level



#### Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



#### Warning


**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

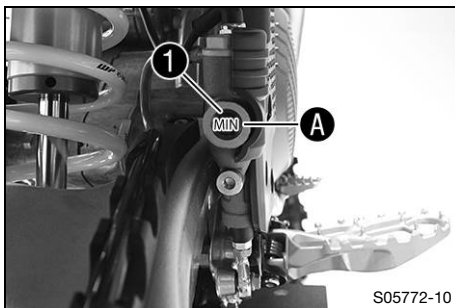

#### (All standard models)

- Position the vehicle vertically.
- Check the brake fluid level in level viewer **1**.
  - » If the brake fluid level has dropped below the **MIN** marking **A**:
    - Add rear brake fluid. 📖 (p. 103)

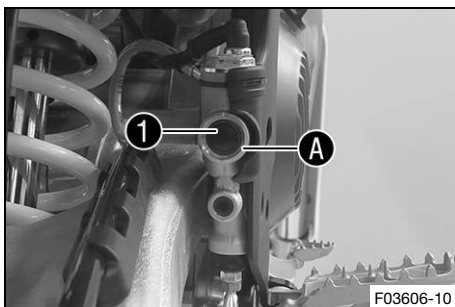

#### (All special models)

- Position the vehicle vertically.
- Check the brake fluid level in level viewer **1**.
  - » When the brake fluid level has dropped to lower edge **A** of the level viewer:
    - Add rear brake fluid. 📖 (p. 103)

### 13.12 Adding rear brake fluid 📖



#### Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



## Warning

**Skin irritation** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



## Warning

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



## Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



## Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

## Preparatory work

- Check that the brake linings of the rear brake are secured. (p. 105)
- Remove the right side cover. (p. 76)
- Remove the frame protector. (p. 64)

## Main work

- Stand the vehicle upright.
- Remove screw cap ① with membrane ②.
- Add brake fluid up to the marking A.

 
Brake fluid DOT 4 / DOT 5.1 (p. 159)

- Mount and tighten the screw cap with the membrane.



## Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.



## Finishing work

- Install the frame protector. (p. 64)
- Install the right side cover. (p. 76)




### 13.13 Checking that the brake linings of the rear brake are secured



#### Warning

**Danger of accidents** Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

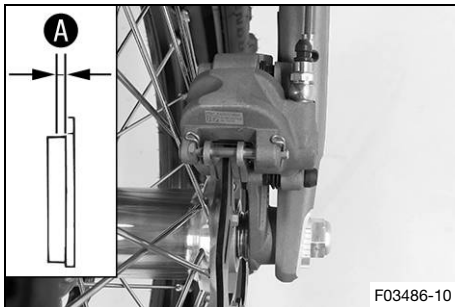


#### (All standard models)

- Check the brake linings for minimum thickness **A**.

|                            |                                             |
|----------------------------|---------------------------------------------|
| Minimum thickness <b>A</b> | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---------------------------------------------|

- » If the minimum thickness is less than specified:
  - Change the rear brake linings. 🛠️ (📖 p. 105)
- Check the brake linings for damage and cracking.
  - » If damage or wear is encountered:
    - Change the rear brake linings. 🛠️ (📖 p. 105)
- Check that the brake linings are secured.
  - » If the brake linings are not secured correctly:
    - Secure brake linings, replace with new parts if necessary.

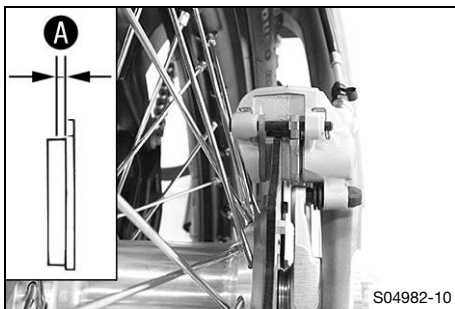

#### (All special models)

- Check the brake linings for minimum thickness **A**.

|                            |                                             |
|----------------------------|---------------------------------------------|
| Minimum thickness <b>A</b> | $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ |
|----------------------------|---------------------------------------------|

- » If the minimum thickness is less than specified:
  - Change the rear brake linings. 🛠️ (📖 p. 105)
- Check the brake linings for damage and cracking.
  - » If damage or wear is encountered:
    - Change the rear brake linings. 🛠️ (📖 p. 105)
- Check that the brake linings are secured.
  - » If the brake linings are not secured correctly:
    - Secure brake linings, replace with new parts if necessary.



### 13.14 Changing the rear brake linings 🛠️



#### Warning

**Danger of accidents** Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



## Warning

**Skin irritation** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



## Warning

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



## Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



## Warning

**Danger of accidents** Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.



## Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.




## Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

## Preparatory work


- Remove the right side cover. (📖 p. 76)
- Remove the frame protector. (📖 p. 64)



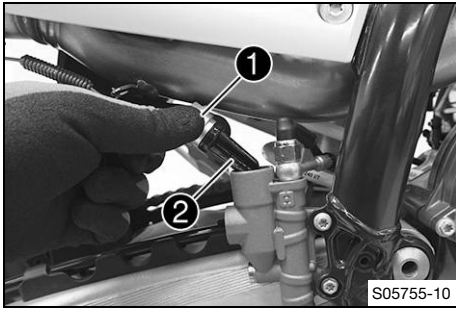

## Main work

- Stand the vehicle upright.
- Remove screw cap ① with membrane ②.

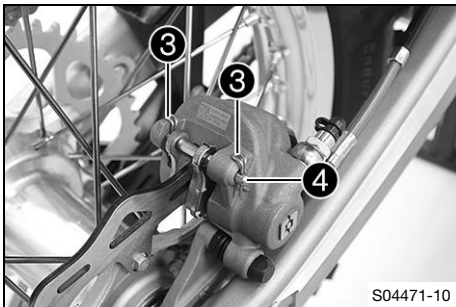


- Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.



### Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove cotter pin ③.
- Pull out pin ④.
- Remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.
- Check that spring plate in the brake caliper and brake pad sliding plate in the brake caliper bracket are fitted correctly.

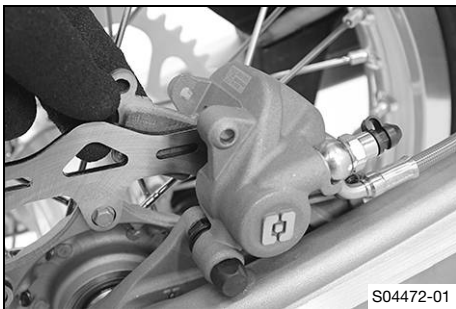

- Insert the new brake linings.
- Mount pin ④.
- ✓ The spring plate engages in the groove on the pin.



### Info


Always change the brake linings in pairs.

- Mount cotter pins ③.
- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

- Correct brake fluid level to marking A.

Brake fluid DOT 4 / DOT 5.1 (p. 159)

- Mount and tighten screw cap ① with membrane ②.

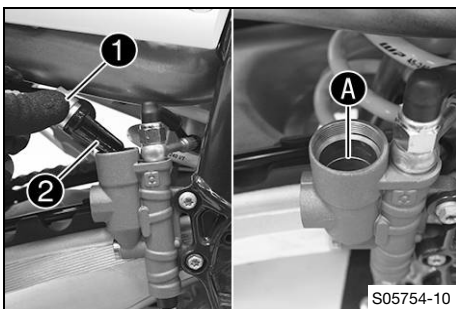

### Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

## Finishing work

- Install the frame protector. (p. 64)
- Install the right side cover. (p. 76)



## 14.1 Removing the front wheel

### Preparatory work

- Raise the motorcycle with a lift stand. (📖 p. 60)

### Main work

 
#### (All standard models)

- Manually press the brake caliper toward the brake disc to push back the brake pistons.



#### Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.



S04840-10

#### (All special models)

- Manually press the brake caliper toward the brake disc to push back the brake pistons.

 


#### Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.




S04985-10



S04841-10

- Loosen screw ❶ by several rotations.
- Loosen screws ❷.
- Press on screw ❶ to push the wheel spindle out of the axle clamp.
- Remove screw ❶.

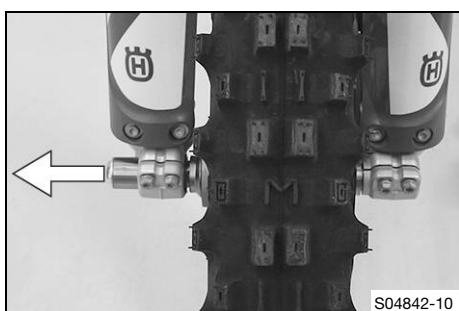

S04842-10



### Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.


- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.




#### Info

Do not actuate the hand brake lever when the front wheel is removed.

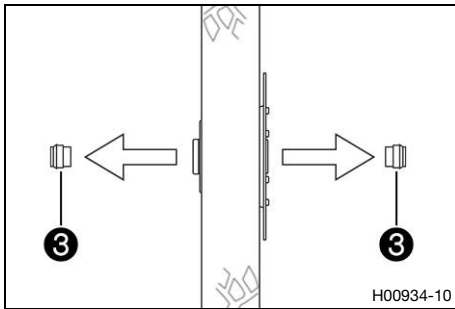

## (All standard models)

- Remove spacers ③.

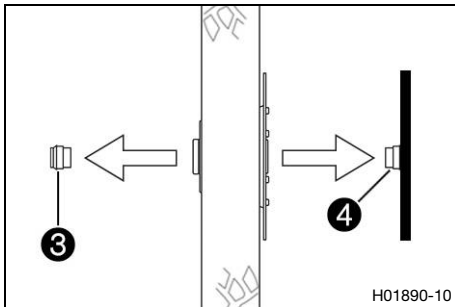

## (All special models)

- Remove spacer ③ and brake disc guard ④.


## 14.2 Installing the front wheel



### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

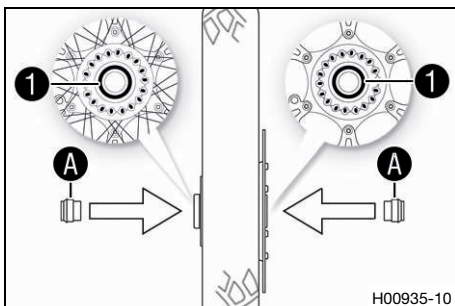


## (All standard models)

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change front wheel bearing. 🛠️
- Clean and grease shaft seal rings ① and contact surfaces A of the spacers.

Long-life grease (📖 p. 161)

- Insert the spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (📖 p. 161)

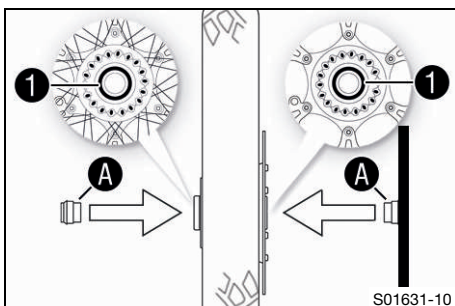


## (All special models)

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change front wheel bearing. 🛠️
- Clean and grease shaft seal rings ① and contact surfaces A of the spacers.


Long-life grease (📖 p. 161)

- Insert the spacer and brake disc guard.
- Clean and lightly grease the wheel spindle.

Long-life grease (📖 p. 161)

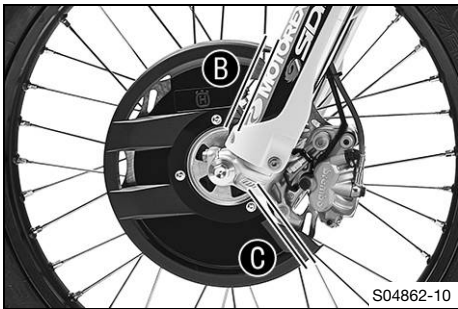

- Align the brake disc guard so that distance **B** and **C** are equal in size.

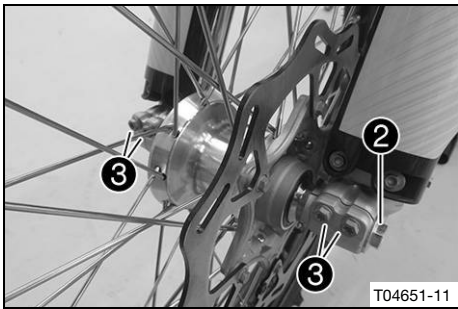

- Position the front wheel and insert the wheel spindle.  
✓ The brake linings are correctly positioned.
- Mount and tighten screw **2**.

Guideline

|                            |         |                     |
|----------------------------|---------|---------------------|
| Screw, front wheel spindle | M20x1.5 | 35 Nm (25.8 lbf ft) |
|----------------------------|---------|---------------------|

- Operate the hand brake lever several times until the brake linings are seated correctly against the brake disc.
- Remove the motorcycle from the lift stand. (p. 60)
- Operate the front brake and compress the fork a few times firmly.  
✓ The fork legs straighten.
- Tighten screws **3**.

Guideline

|                  |    |                     |
|------------------|----|---------------------|
| Screw, fork stub | M8 | 15 Nm (11.1 lbf ft) |
|------------------|----|---------------------|

14.3 Removing the rear wheel

Preparatory work

- Raise the motorcycle with a lift stand. (p. 60)

Main work

(All standard models)

- Manually press the brake caliper toward the brake disc to push back the brake piston.


i

**Info**  
Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove nut **1**.
- Take off chain adjuster **2**. Pull out wheel spindle **3** far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.

i

**Info**  
Cover the components to protect them against damage.

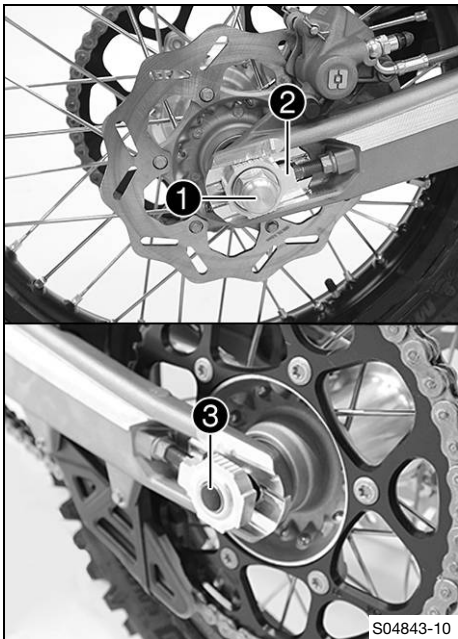



## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.


- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold the rear wheel and remove the wheel spindle. Take the rear wheel out of the link fork.



## Info

Do not operate the foot brake lever when the rear wheel is removed.

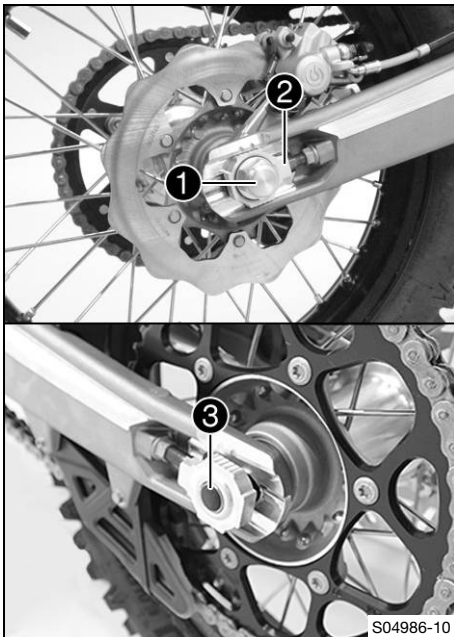

## (All special models)

- Manually press the brake caliper toward the brake disc to push back the brake piston.



## Info

Make sure that you do not press the brake caliper against the spokes when pushing back the brake piston.

- Remove nut ①.
- Take off chain adjuster ②. Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.



## Info

Cover the components to protect them against damage.



## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold the rear wheel and remove the wheel spindle. Take the rear wheel out of the link fork.



## Info

Do not operate the foot brake lever when the rear wheel is removed.



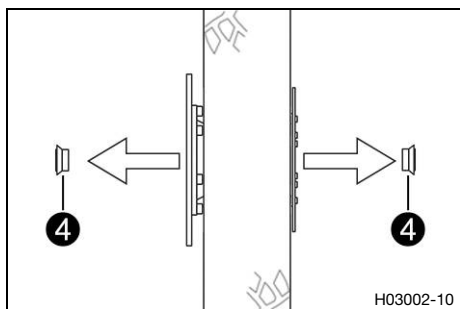

- Remove spacers ④.


## 14.4 Installing the rear wheel



### Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

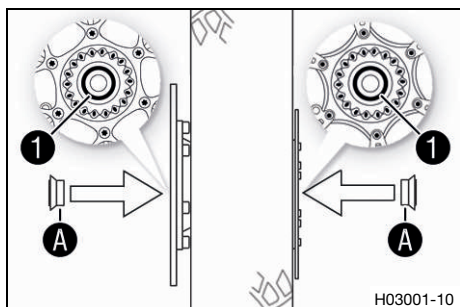

### Main work

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the rear wheel bearing.
- Clean and grease shaft seal rings ① and contact surfaces A of the spacers.


Long-life grease (p. 161)

- Insert the spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 161)

- Position rear wheel and insert wheel spindle ②.
- Mount the chain.
- ✓ The brake linings are correctly positioned.



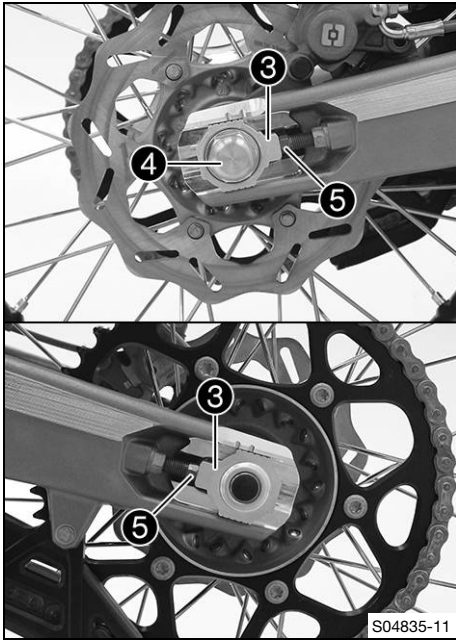

## (All standard models)

- Position chain adjuster **3**. Mount nut **4**, but do not tighten it yet.
- Make sure that chain adjusters **3** are fitted correctly on adjusting screws **5**.
- Check the chain tension. (📖 p. 84)
- Tighten nut **4**.

### Guideline

|                          |         |                   |
|--------------------------|---------|-------------------|
| Nut, wheel spindle, rear | M22x1.5 | 80 Nm (59 lbf ft) |
|--------------------------|---------|-------------------|




### Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters **3** can be turned by 180°.

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

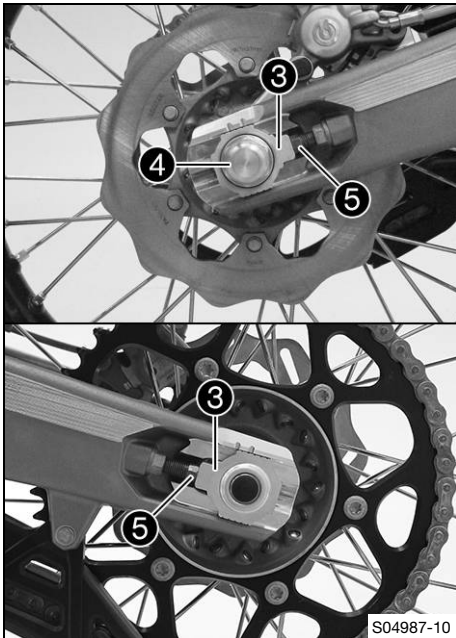

## (All special models)

- Position chain adjuster **3**. Mount nut **4**, but do not tighten it yet.
- Make sure that chain adjusters **3** are fitted correctly on adjusting screws **5**.
- Check the chain tension. (📖 p. 84)
- Tighten nut **4**.

### Guideline

|                          |         |                   |
|--------------------------|---------|-------------------|
| Nut, wheel spindle, rear | M22x1.5 | 80 Nm (59 lbf ft) |
|--------------------------|---------|-------------------|



### Info

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length.

Chain adjusters **3** can be turned by 180°.


- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

## Finishing work

- Remove the motorcycle from the lift stand. (📖 p. 60)

14.5 Checking the tire condition

**i Info**  
Only mount tires approved and/or recommended by Husqvarna Motorcycles.  
Other tires could have a negative effect on handling characteristics.  
The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.  
The tires mounted on the front and rear wheels must have a similar profile.  
Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

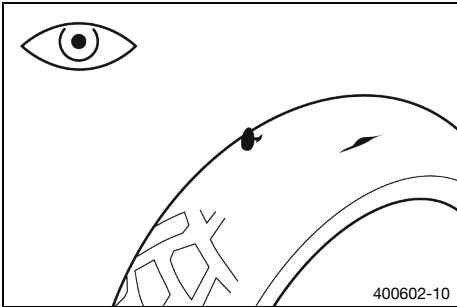


- Check the front and rear tires for cuts, run-in objects, and other damage.
  - » If the tires have cuts, run-in objects, or other damage:
    - Change the tires. 🛠️
- Check the tread depth.

**i Info**  
Adhere to the legally required minimum tread depth.

|                     |                    |
|---------------------|--------------------|
| Minimum tread depth | ≥ 2 mm (≥ 0.08 in) |
|---------------------|--------------------|

- » If the tread depth is less than the minimum tread depth:
  - Change the tires. 🛠️
- Check the tire age.

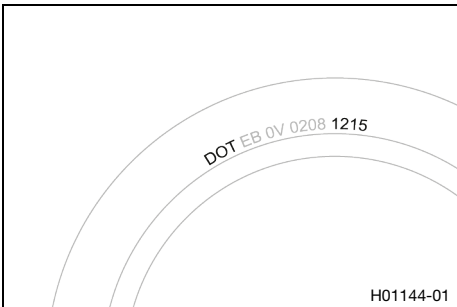


**i Info**  
The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.  
Husqvarna Motorcycles recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tires are more than 5 years old:
  - Change the tires. 🛠️

14.6 Checking tire pressure

**i Info**  
Low tire pressure leads to abnormal wear and overheating of the tire.  
Correct tire pressure ensures optimal riding comfort and maximum tire service life.



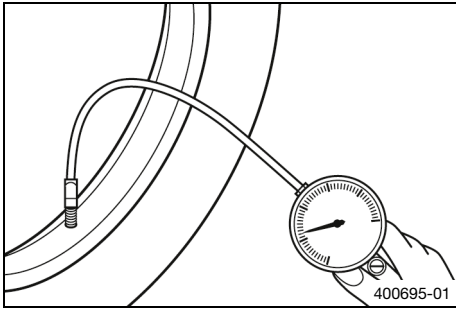

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

| Offroad tire pressure |                  |
|-----------------------|------------------|
| front                 | 1.0 bar (15 psi) |
| rear                  | 1.0 bar (15 psi) |
| Street tire pressure  |                  |
| front                 | 2.0 bar (29 psi) |
| rear                  | 2.0 bar (29 psi) |

- » If the tire pressure does not meet specifications:
  - Correct the tire pressure.
- Mount the protection cap.



## 14.7 Checking spoke tension




### Warning

**Danger of accidents** Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.

The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.

- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

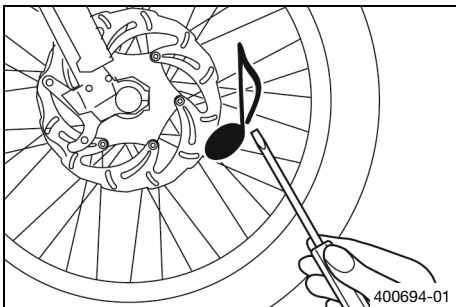

- Strike each spoke briefly using a screwdriver blade.



### Info

The frequency of the sound depends on the spoke length and spoke diameter.

If you hear different tone frequencies from different spokes of equal length and diameter, this is an indication of different spoke tensions.

You should hear a high note.

- » If the spoke tension differs:
  - Correct the spoke tension. 🛠️
- Check the spoke torque.

### Guideline

|                           |      |                   |
|---------------------------|------|-------------------|
| Spoke nipple, front wheel | M4.5 | 6 Nm (4.4 lbf ft) |
| Spoke nipple, rear wheel  | M4.5 | 6 Nm (4.4 lbf ft) |

Torque wrench kit (58429094000)



## 15.1 Removing the 12-V battery



### Note

**Environmental hazard** 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



### Note


**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

### Preparatory work

- Remove the seat. (📖 p. 73)

### Main work

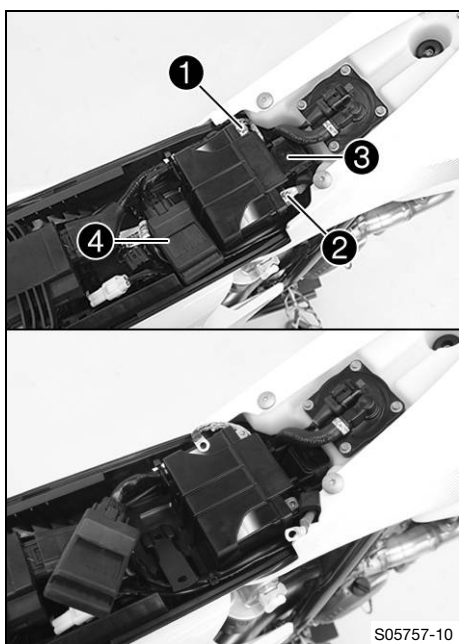


### Warning

**Risk of injury** 12 V batteries contain harmful substances.

- Keep 12 V batteries out of the reach of children.
- Keep sparks and open flames away from 12 V batteries.
- Only charge 12 V batteries in well-ventilated rooms.
- Maintain a minimum clearance from inflammable materials when charging 12 V batteries.  
Minimum clearance 1 m (3 ft)
- Do not charge deeply discharged 12 V batteries if the charge is already below the minimum voltage.  
Minimum voltage 9 V  
before the start of the charge
- Dispose of 12 V batteries correctly if they have less than the minimum voltage.


- Disconnect negative cable ❶ from the 12-V battery.
- Pull back positive terminal cover and disconnect positive cable ❷ from the 12-V battery.
- Pull off starter relay ❸ and OCU ❹ and hang to the side.

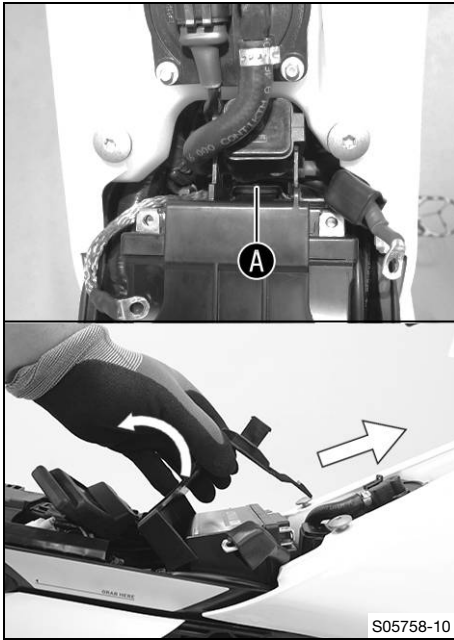

- Open the battery holding bracket in the area **A** and fold it upward.
- Take out the 12-V battery to the front.



## 15.2 Installing the 12-V battery ↗

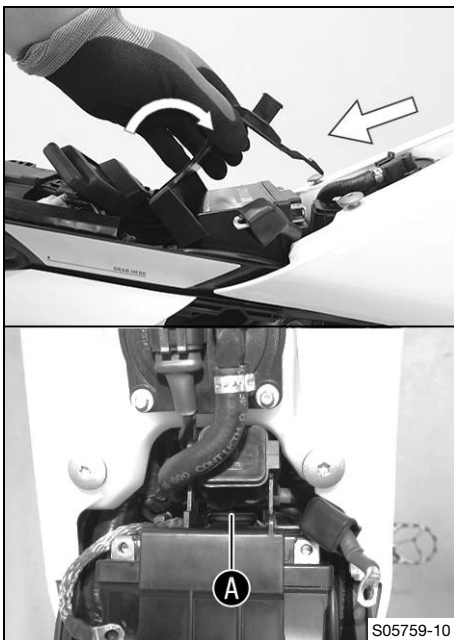


### Main work

- Insert the 12-V battery into the battery compartment with the terminals facing forward and secure with holding bracket.

12-V battery (HJTZ5S-FP-C) (📖 p. 155)

- Attach the battery holding bracket in area **A** and engage it.

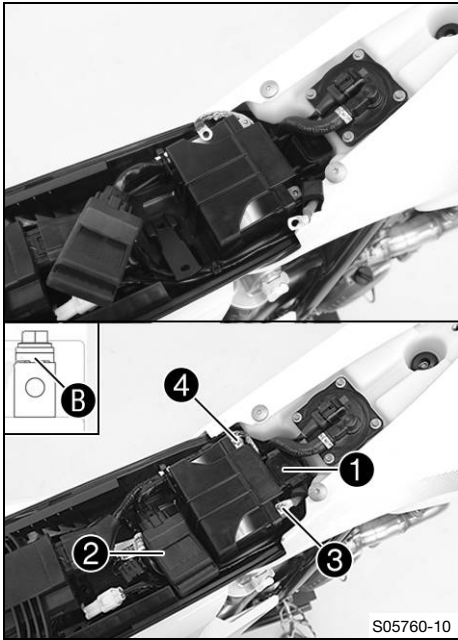

- Attach starter relay ① and OCU ② to the holding bracket.
- Connect positive cable ③ to the 12-V battery.

Guideline

|                         |    |                      |
|-------------------------|----|----------------------|
| Screw, battery terminal | M5 | 2.5 Nm (1.84 lbf ft) |
|-------------------------|----|----------------------|



**Info**

Contact disks **B** must be mounted under the screws and the cable lug with the claws toward the battery terminal.

- Connect negative cable ④ to the 12 V battery.

Guideline

|                         |    |                      |
|-------------------------|----|----------------------|
| Screw, battery terminal | M5 | 2.5 Nm (1.84 lbf ft) |
|-------------------------|----|----------------------|



**Info**

Contact disks **B** must be mounted under the screws and the cable lug with the claws toward the battery terminal.

- Slide the positive terminal cover over the positive terminal.

**Finishing work**

- Mount the seat. (📖 p. 73)

15.3 Charging the 12-V battery 🔧



**Warning**

**Risk of injury** 12 V batteries contain harmful substances.

- Keep 12 V batteries out of the reach of children.
- Keep sparks and open flames away from 12 V batteries.
- Only charge 12 V batteries in well-ventilated rooms.
- Maintain a minimum clearance from inflammable materials when charging 12 V batteries.  
Minimum clearance 1 m (3 ft)
- Do not charge deeply discharged 12 V batteries if the charge is already below the minimum voltage.  
Minimum voltage before the start of the charge 9 V
- Dispose of 12 V batteries correctly if they have less than the minimum voltage.



**Note**

**Environmental hazard** 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



**Note**

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

**Info**

Even if there is no load on the 12-V battery, it discharges each day.

The charging level and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current or charging voltage are exceeded, the 12 V battery will be destroyed.

If the 12-V battery is depleted by repeated starting, the 12-V battery must be charged immediately.

If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.

The 12-V battery is maintenance-free.

**Preparatory work**

- Remove the seat. (📖 p. 73)
- Remove the 12-V battery. 🛠️ (📖 p. 116)

**Main work**

- Check the battery voltage.
  - » Battery voltage:  $< 9\text{ V}$ 
    - Do not charge the 12 V battery.
    - Replace the 12 V battery and dispose of the old 12 V battery properly.
  - » If the specifications have been met:  
Battery voltage:  $\geq 9\text{ V}$ 
    - Connect a battery charger to the 12-V battery. Switch on the battery charger.

**Guideline**

|                                                                                 |                             |
|---------------------------------------------------------------------------------|-----------------------------|
| The charging current, charging voltage, and charging time must not be exceeded. |                             |
| Maximum charging voltage                                                        | 14.4 V                      |
| Maximum charging current                                                        | 3.0 A                       |
| Maximum charging time                                                           | 24 h                        |
| Recharge the 12-V battery regularly when the motorcycle is not being used       | 6 months                    |
| Ideal charging and storage temperature of the lithium-ion battery               | 10 ... 20 °C (50 ... 68 °F) |

Battery charger (26529974000)

This battery charger tests whether the 12-V battery retains its voltage. It is also impossible to overcharge the 12-V battery with this battery charger. The charging time may be longer at low temperatures.

This battery charger is only suitable for lithium iron phosphate batteries. Read the accompanying instructions for **Husqvarna Motorcycles** accessories.

**Info**

Never remove cover ❶.

- Switch off the battery charger after charging and disconnect it from the 12-V battery.



## Finishing work

- Install the 12-V battery. 🛠️ (📖 p. 117)
- Mount the seat. (📖 p. 73)

## 15.4 Changing the main fuse



### Warning

**Fire hazard** Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



### Info

The main fuse protects all electrical power consumers of the vehicle.

## Preparatory work

- Remove the seat. (📖 p. 73)
- Remove the 12-V battery. 🛠️ (📖 p. 116)

## Main work

 
- Take off the protection caps and remove faulty fuse ①.



### Info

A faulty fuse has a burned-out fuse wire **A**.

A spare fuse ② is located in the starter relay.




## Finishing work

- Install the 12-V battery. 🛠️ (📖 p. 117)
- Mount the seat. (📖 p. 73)

## 15.5 Removing the headlight mask with the headlight




- Remove screws ①. Slide the headlight mask up and swing it forward.
- Detach the brake line and wiring harness from the headlight mask.
- Pivot the headlight mask forwards and place it on the fender.

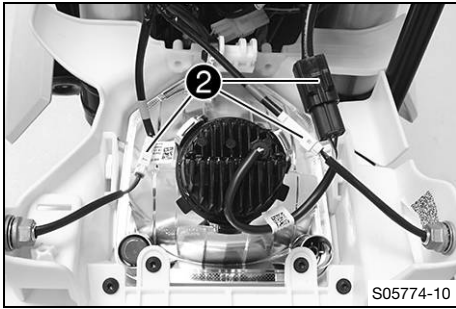

**(All FE models apart from FE 350w US)**


- Detach plug-in connectors ② and take off the headlight mask with the headlight.

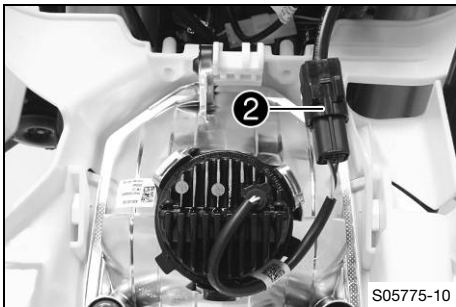

**(FE 350w US)**

- Disconnect plug-in connector ② and take off the headlight mask together with the headlight.


## 15.6 Installing the headlight mask with the headlight

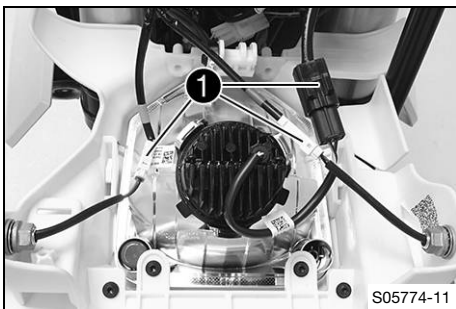

**Main work**

**(All FE models apart from FE 350w US)**

- Join plug-in connectors ①.

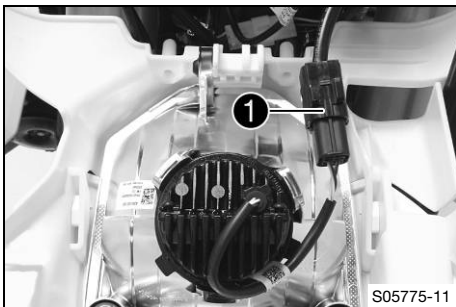

**(FE 350w US)**

- Join plug-in connector ①.



- Position the brake line and the wiring harness in the cable guide.
- Position the headlight mask.
- ✓ The holding lugs engage in the fender.
- Mount and tighten screws ②.



Finishing work

- Check the headlight setting. (📖 p. 123)

15.7 Changing the headlight bulb

Preparatory work



- Remove the headlight mask with the headlight. (📖 p. 120)

Main work

- Turn LED unit ❶ counterclockwise all the way and take it out of the reflector.

Guideline

Only touch the LED unit on the cooling element.

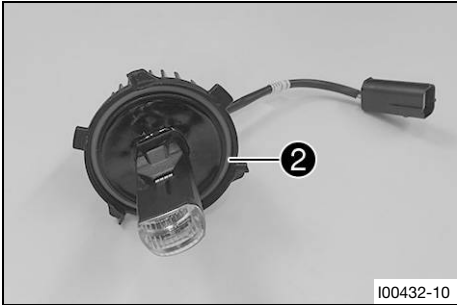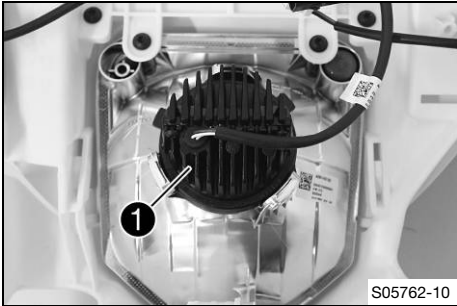

- Insert the LED unit into the reflector and turn it clockwise all the way.

Headlight (LED)



Info

Ensure that O-ring ❷ is seated properly.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 121)
- Check the headlight setting. (📖 p. 123)

15.8 Changing the turn signal bulb (All FE models apart from FE 350w US)

Note


**Impairments to reflectors and lamps** Grease on the reflector reduces the emitted light.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

Grease residue on the bulb reduces heat dissipation and increases the heat of the bulb, thus reducing its service life.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

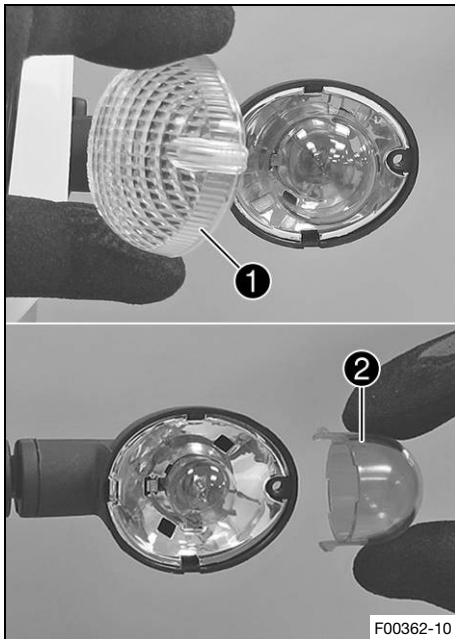

**Main work**

- Remove the screw on the rear of the turn signal housing.
- Carefully remove turn signal glass ①.
- Lightly squeeze orange cap ② in the area of the holding lugs and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and pull it out of the socket.

**Info**

Do not touch the reflector with your fingers and keep it free from grease.


- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.

|                                              |
|----------------------------------------------|
| Turn signal (R10W / socket BA15s) (📖 p. 155) |
|----------------------------------------------|

- Mount the orange cap.
- Position the turn signal glass.
- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk. Tighten the screw lightly.

**Finishing work**

- Check that the turn signal system is functioning properly.

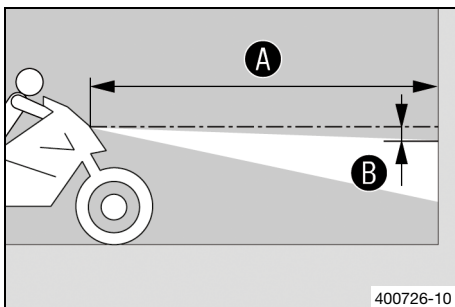**15.9 Checking the headlight setting**

- Position the vehicle upright on a horizontal surface in front of a light wall and make a marking at the height of the center of the low beam headlight.

- Make another mark at a distance B under the first marking.

**Guideline**

|            |             |
|------------|-------------|
| Distance B | 5 cm (2 in) |
|------------|-------------|

- Position the vehicle vertically at a distance A away from the wall.

**Guideline**

|            |             |
|------------|-------------|
| Distance A | 5 m (16 ft) |
|------------|-------------|

- The rider now sits down on the motorcycle.
- Switch on the low beam.
- Check the headlight setting.

|                                                                                                    |
|----------------------------------------------------------------------------------------------------|
| The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider. |
|----------------------------------------------------------------------------------------------------|

- » If the boundary between light and dark does not meet specifications:

- Adjust the headlight range. (📖 p. 124)



## 15.10 Adjust the headlight range.



### Preparatory work

- Check the headlight setting. (📖 p. 123)

### Main work

- Loosen screw ❶.
- Adjust the headlight range by pivoting the headlight.

#### Guideline

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider (instructions on how to apply the mark: Checking the headlight setting).

 


### Info

A change in weight on the vehicle may require a correction of the headlight range.

- Tighten screw ❶.

## 15.11 Changing the combination instrument battery




### Preparatory work

- Remove the headlight mask with the headlight. (📖 p. 120)

### Main work


- Remove screws ❶ with the washers.
- Pull the combination instrument upward out of the holder.

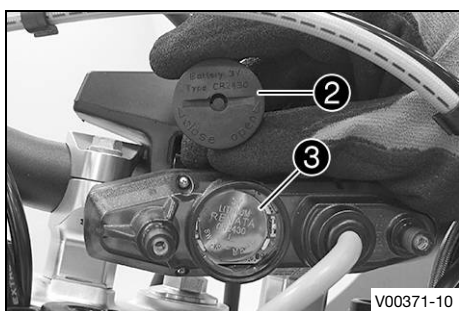

- Using a coin, turn protection cap ❷ all the way counter-clockwise and take it off.
- Remove combination instrument battery ❸.
- Insert the combination instrument battery with the label facing outward.

Combination instrument battery (CR 2430) (📖 p. 155)

- Check the O-ring of the protection cap for correct seating.

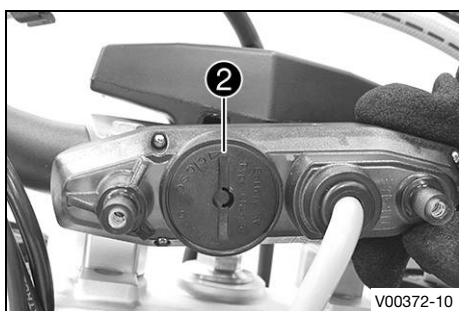


- Position protection cap ❷ and turn all the way clockwise using a coin.
- Press any button on the combination instrument.
- ✓ The combination instrument is activated.
- Position the combination instrument in the holder.
- Mount and tighten the screws with washers.

Finishing work

- Install the headlight mask with the headlight. (📖 p. 121)
- Check the headlight setting. (📖 p. 123)
- Set the combination instrument.




15.12 Diagnostics connector

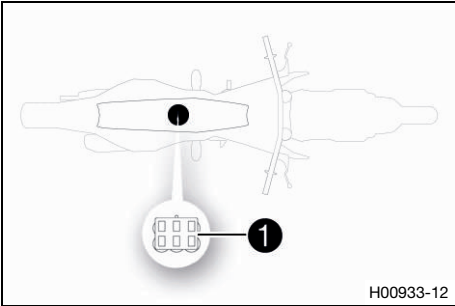

Diagnostics connector 1 is located under the seat.

15.13 OCU

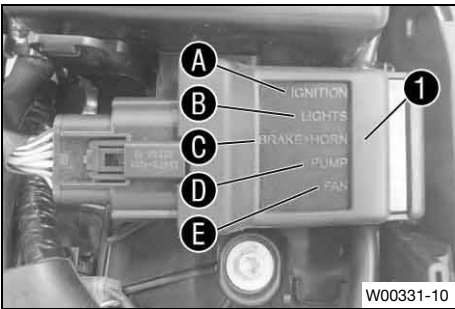

OCU 1 is located under the seat.

The OCU replaces the electronic fuses and relays.

All outputs are switched depending on the signals of the voltage regulator and ECU.

The outputs are deactivated individually in the event of overcurrent.

This enables easy error detection because the status of each output is indicated via LED lights.


The OCU monitors the electronics system completely independently.

As soon as an indicated error is rectified, the status light of the OCU changes from red to green.

Overview

|   |                    |
|---|--------------------|
| A | Ignition           |
| B | Light              |
| C | Brake light + horn |
| D | Fuel pump          |
| E | Radiator fan       |

16.1 Cooling system

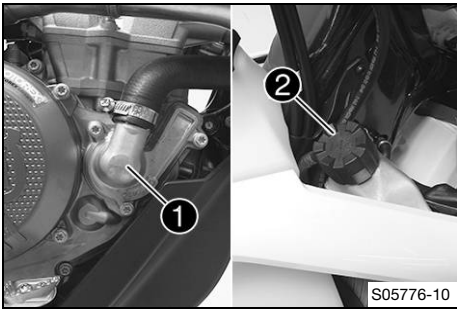

Water pump ❶ in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ❷. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

Additional cooling is provided by the radiator fan, which is activated on a temperature-dependent basis.

16.2 Checking the antifreeze and coolant level

**Warning**

**Danger of scalding** During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

**Warning**

**Danger of poisoning** Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

**Condition**

The engine is cold.

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the antifreeze in the coolant.


-25 ... -45 °C (-13 ... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
  - Correct the antifreeze in the coolant.
- Check the coolant level in the radiator.

|                                         |                 |
|-----------------------------------------|-----------------|
| Coolant level ❶ above the radiator fins | 10 mm (0.39 in) |
|-----------------------------------------|-----------------|

- » If the coolant level does not match the specified value:
  - Correct the coolant level.

Coolant (📖 p. 159)

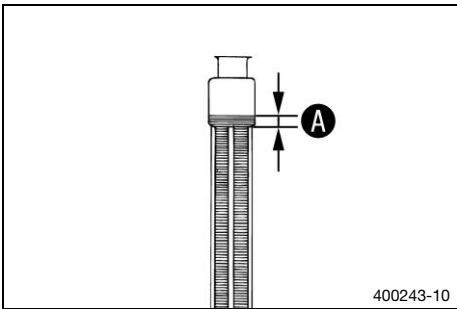

- Mount the radiator cap.



16.3 Checking the coolant level



Warning

- Danger of scalding** During motorcycle operation, the coolant gets hot and is under pressure.
- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
  - Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
  - In the event of scalding, rinse the area affected immediately with lukewarm water.




Warning

- Danger of poisoning** Coolant is harmful to health.
- Keep coolant out of the reach of children.
  - Do not allow coolant to come into contact with the skin, the eyes and clothing.
  - Consult a doctor immediately if coolant is swallowed.
  - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
  - Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
  - Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

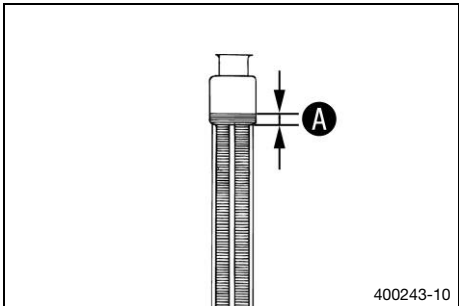

- Stand the motorcycle upright on a horizontal surface.
- Remove the radiator cap.
- Check the coolant level in the radiator.

|                                                |                 |
|------------------------------------------------|-----------------|
| Coolant level <b>A</b> above the radiator fins | 10 mm (0.39 in) |
|------------------------------------------------|-----------------|

- » If the coolant level does not match the specified value:
- Correct the coolant level.

|                    |
|--------------------|
| Coolant (📖 p. 159) |
|--------------------|

- Mount the radiator cap.



16.4 Draining the coolant 🔄



Warning

- Danger of scalding** During motorcycle operation, the coolant gets hot and is under pressure.
- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
  - Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
  - In the event of scalding, rinse the area affected immediately with lukewarm water.



**Warning**  
**Danger of poisoning** Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

**Condition**  
The engine is cold.

**Preparatory work**  
- Remove the engine guard. (📖 p. 94)

**Main work**  
- Position the motorcycle upright.  
- Place an appropriate container under the water pump cover.  
- Remove screw ❶. Take off radiator cap ❷.  
- Completely drain the coolant.  
- Mount and tighten screw ❶ with a new seal ring.

|                         |    |                    |
|-------------------------|----|--------------------|
| Guideline               |    |                    |
| Screw, water pump cover | M6 | 10 Nm (7.4 lbf ft) |

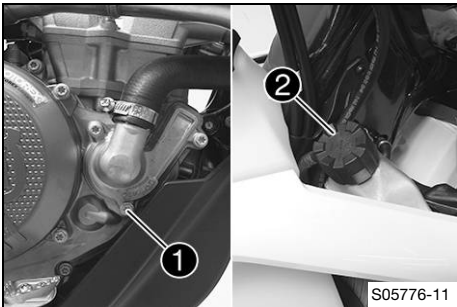

16.5 Refilling with coolant 🐘



**Warning**  
**Danger of poisoning** Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

**Main work**  
- Make sure that screw ❶ is tightened.  
- Position the motorcycle vertically.  
- Pour coolant in up to measurement A above the radiator fins.

|           |                 |                    |
|-----------|-----------------|--------------------|
| Guideline | 10 mm (0.39 in) |                    |
| Coolant   | 1.2 l (1.3 qt.) | Coolant (📖 p. 159) |

- Mount the radiator cap.

**Finishing work**  
- Install the engine guard. (📖 p. 94)  
- Go for a short test ride.

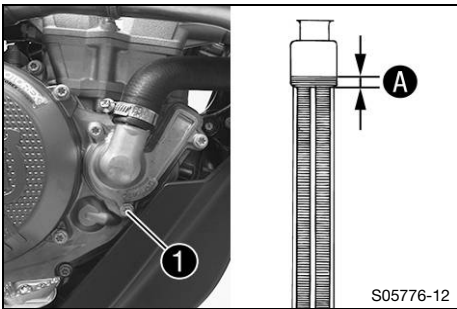

- Check the coolant level. (📖 p. 127)



16.6 Changing the coolant 🛠️



**Warning**

- Danger of scalding** During motorcycle operation, the coolant gets hot and is under pressure.
- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
  - Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
  - In the event of scalding, rinse the area affected immediately with lukewarm water.



**Warning**

- Danger of poisoning** Coolant is harmful to health.
- Keep coolant out of the reach of children.
  - Do not allow coolant to come into contact with the skin, the eyes and clothing.
  - Consult a doctor immediately if coolant is swallowed.
  - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
  - Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
  - Change clothing if coolant spills onto your clothing.

**Condition**

The engine is cold.

**Preparatory work**

- Remove the engine guard. (📖 p. 94)

**Main work**

- Position the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ❶. Take off radiator cap ❷.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

|                         |    |                    |
|-------------------------|----|--------------------|
| Screw, water pump cover | M6 | 10 Nm (7.4 lbf ft) |
|-------------------------|----|--------------------|

- Pour coolant in up to level A above the radiator fins.

Guideline



|                 |
|-----------------|
| 10 mm (0.39 in) |
|-----------------|

|         |                 |                    |
|---------|-----------------|--------------------|
| Coolant | 1.2 l (1.3 qt.) | Coolant (📖 p. 159) |
|---------|-----------------|--------------------|

- Mount the radiator cap.


**Finishing work**

- Install the engine guard. (📖 p. 94)
- Go for a short test ride.
- Check the coolant level. (📖 p. 127)

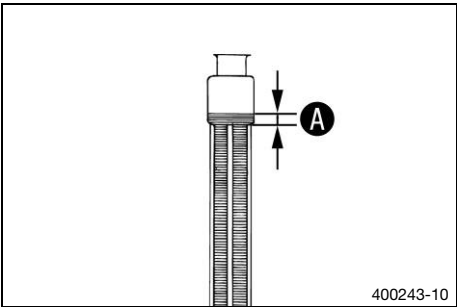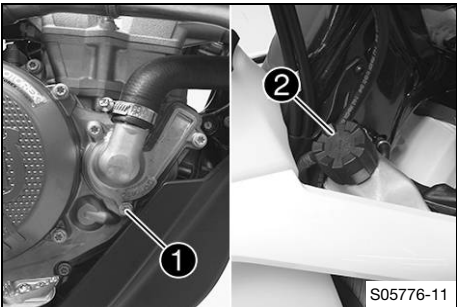



17.1 Checking the play in the throttle cable

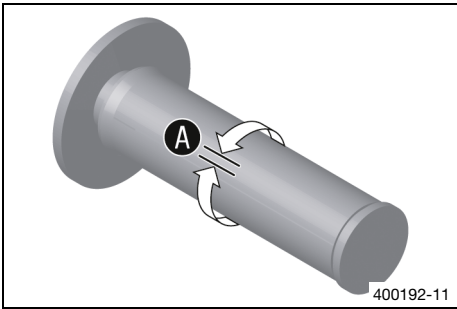

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

|                        |                              |
|------------------------|------------------------------|
| Play in throttle cable | 3 ... 5 mm (0.12 ... 0.2 in) |
|------------------------|------------------------------|

- » If the throttle cable play does not meet the specified value:
  - Adjust the play in the throttle cable. 🛠️ (📖 p. 130)
- Push the cold start button in all the way.

When the throttle grip is turned forward, the cold start button returns to its original position.

- » If the cold start button does not return to its original position:
  - Adjust the play in the throttle cable. 🛠️ (📖 p. 130)

**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
  - Adjust the play in the throttle cable. 🛠️ (📖 p. 130)


17.2 Adjusting the play in the throttle cable 🛠️

**Info**

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

- Preparatory work**
- Remove the seat. (📖 p. 73)
  - Remove the fuel tank. 🛠️ (📖 p. 80)
  - Check the throttle cable routing. (📖 p. 89)



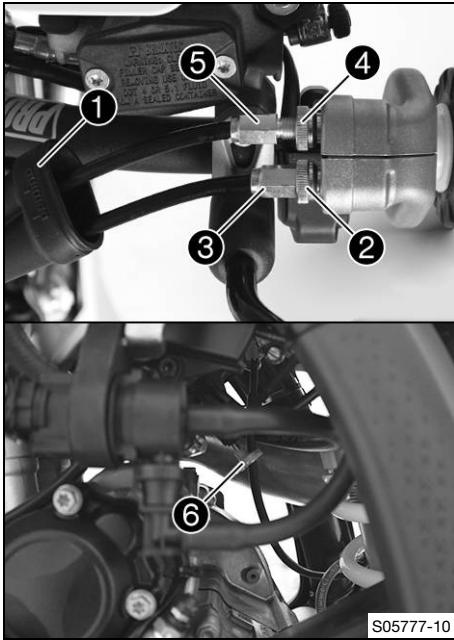

## Main work

- Move the handlebar to the straight-ahead position.
- Push back sleeve ①.
- Loosen nut ②.
- Turn adjusting screw ③ in as far as possible.
- Loosen nut ④.
- Push cold start button ⑥ all the way to the stop.
- Turn adjusting screw ⑤ so that the cold start button moves to the basic position when the throttle grip is turned to the front.
- Tighten nut ④.
- Turn adjusting screw ③ so that there is play in the throttle cable at the throttle grip.

## Guideline

|                        |                              |
|------------------------|------------------------------|
| Play in throttle cable | 3 ... 5 mm (0.12 ... 0.2 in) |
|------------------------|------------------------------|

- Tighten nut ②.
- Slide on sleeve ①.
- Check the throttle grip for smooth operation.

## Finishing work

- Check the play in the throttle cable. (📖 p. 130)




## 17.3 Adjusting the characteristic map of the throttle response ↗



### Info


On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate.

A guide plate with a different characteristic map is supplied.

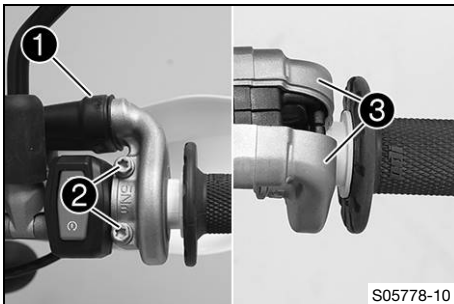

## Main work

- Push back sleeve ①.
- Remove screws ② and half-shells ③.
- Detach the throttle cables and take off the grip tube.

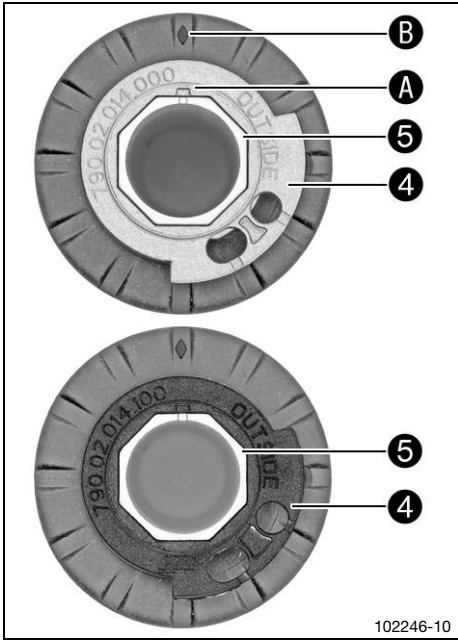

- Remove guide plate 4 from handle tube 5.
- Position the required guide plate on the grip tube.

Guideline

The label **OUTSIDE** must be visible. Marking **A** must be positioned at marking **B**.

Grey guide plate (79002014000)


Alternative 1

Black guide plate (79002014100)



Info

The gray guide plate opens the throttle valve more slowly.  
The black guide plate opens the throttle valve more quickly.  
The gray guide plate is mounted upon delivery.

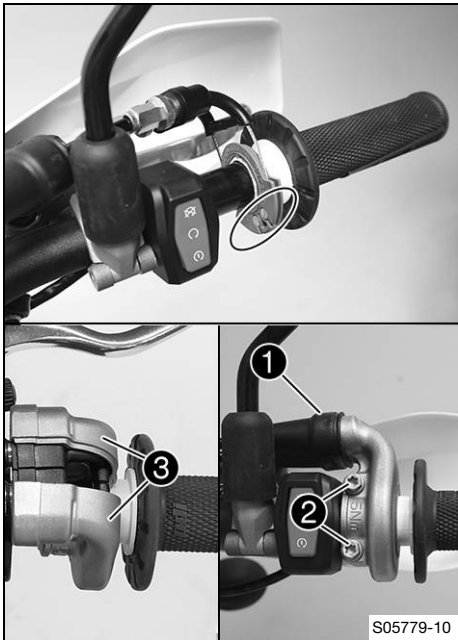

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.
- Position half-shells 3, mount and tighten screws 2.

Guideline

|                      |    |                   |
|----------------------|----|-------------------|
| Screw, throttle grip | M6 | 5 Nm (3.7 lbf ft) |
|----------------------|----|-------------------|

- Slide on sleeve 1 and check the throttle grip for ease of movement.

Finishing work

- Check the play in the throttle cable. (p. 130)

## 17.4 Changing the mapping (All FE models apart from FE 350w US)



### Caution


**Voiding of the government approval for road use and the insurance coverage** If the combination switch is mounted, the vehicle's road permit, if any, expires.

- Only operate the vehicle in closed-off areas remote from public road traffic if the combination switch is installed.



### Info

Traction control can be activated additionally using button **TC**.  
The mapping can also be changed during the ride.

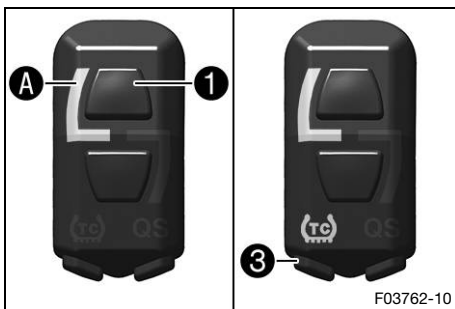

### Activating STANDARD mapping:

- Press button **1**.

Guideline


|              |             |
|--------------|-------------|
| Engine speed | < 4,000 rpm |
|--------------|-------------|

- ✓ The indicator lamp **A** lights up.
- ✓ STANDARD – balanced response



### Info

Traction control can be activated additionally using TC button **3**.

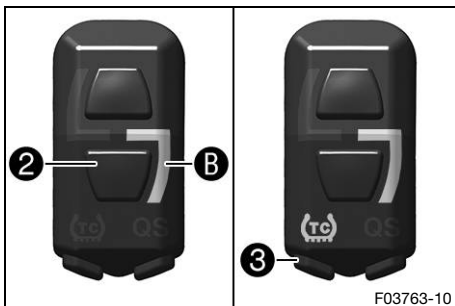

### Activating ADVANCED mapping:

- Press button **2**.

Guideline

|              |             |
|--------------|-------------|
| Engine speed | < 4,000 rpm |
|--------------|-------------|

- ✓ The indicator lamp **B** lights up.
- ✓ ADVANCED – direct response



### Info

Traction control can be activated additionally using TC button **3**.




## 17.5 Adjusting the idle speed ↴



### Warning

**Danger of accidents** The engine may go out spontaneously if the idle speed is set too low.

- Set the idle speed to the specified value. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

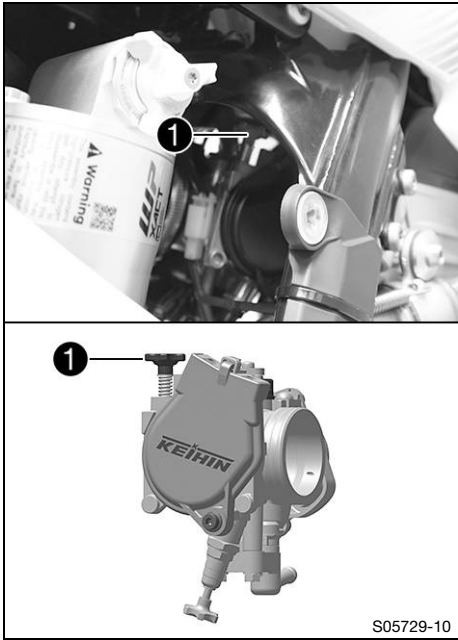

- Run the engine until warm.
- ✓ The cold start button is deactivated – The cold start button is in its basic position. (p. 21)



**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjusting screw **1** using a suitable tachometer.

**Guideline**

|            |                     |
|------------|---------------------|
| Idle speed | 1,950 ... 2,050 rpm |
|------------|---------------------|



**Info**


Turning counterclockwise lowers the idle speed.  
Turning clockwise raises the idle speed.

17.6 Programming the throttle valve position



**Info**

If the control unit detects that the throttle valve position at idle speed needs to be reprogrammed, then the malfunction indicator lamp flashes 2x per second.

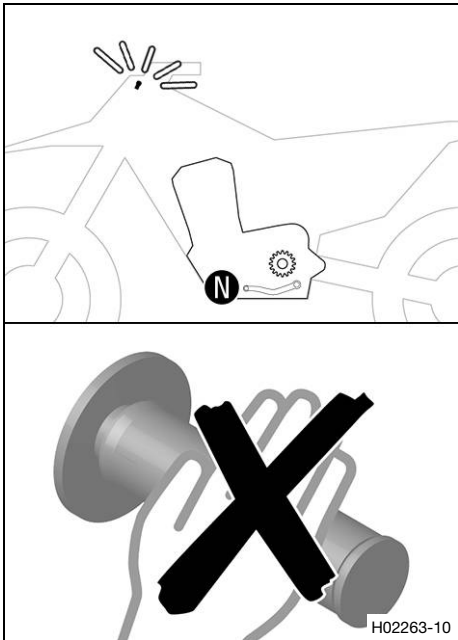

**Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Allow the vehicle to run at idle speed.
- ✓ The malfunction indicator lamp stops flashing once programming is completed.




**Info**

If the engine becomes too warm, perform a cool-down ride at medium speed.  
After this, do not switch off the engine, but leave it running at idle speed until the programming is finished.

17.7 Checking the basic position of the shift lever

**i Info**  
When driving, the shift lever must not touch the rider's boot when in the basic position.  
When the shift lever keeps touching the boot, the transmission will be subject to an excessive load.

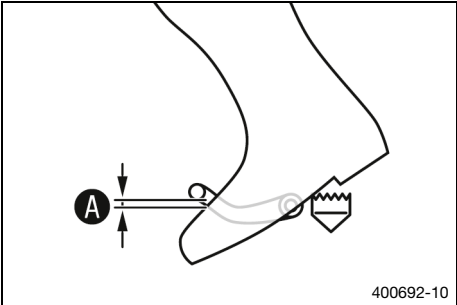


- Sit on the vehicle in the riding position and determine distance **A** between the upper edge of your boot and the shift lever.


|                                                     |                                 |
|-----------------------------------------------------|---------------------------------|
| Gap between the shift lever and the top of the boot | 10 ... 20 mm (0.39 ... 0.79 in) |
|-----------------------------------------------------|---------------------------------|

- » If the distance does not meet specifications:
  - Adjust the basic position of the shift lever. 

17.8 Adjusting the basic position of the shift lever 

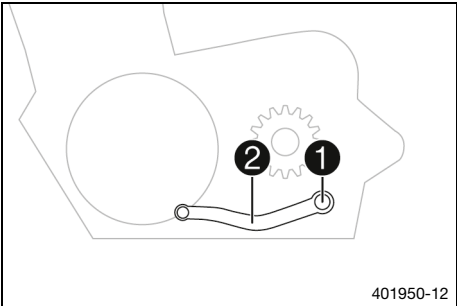

- Remove screw **1** with the washers and take off shift lever **2**.

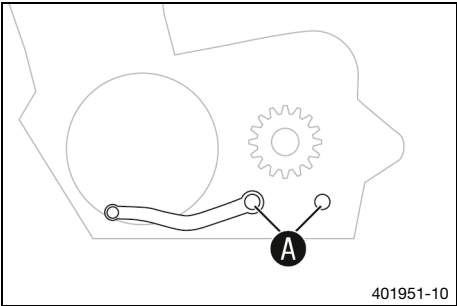

- Clean gear teeth **A** of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage gearing.

**i Info**  
The range of adjustment is limited.  
The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw **1** with washers.

Guideline

|                    |    |                                            |
|--------------------|----|--------------------------------------------|
| Screw, shift lever | M6 | 14 Nm (10.3 lbf ft)<br><b>Loctite®243™</b> |
|--------------------|----|--------------------------------------------|

## 18.1 Changing the fuel screen ↴



### Danger

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



### Warning

**Danger of poisoning** Fuel is harmful to health.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.



### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

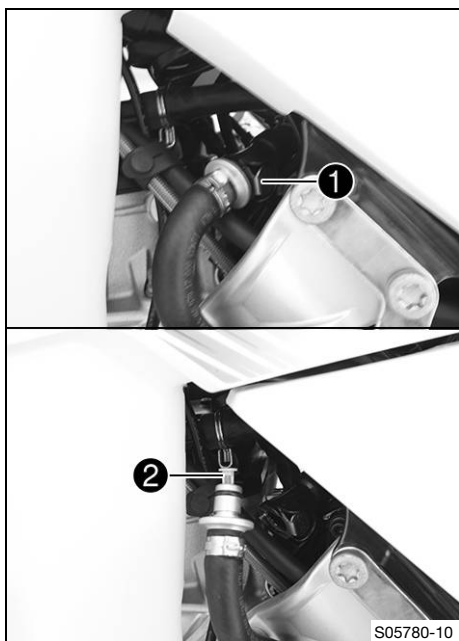

- Clean quick release coupling **1** thoroughly with compressed air.



### Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.



### Info

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **2** out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-release coupling.

Silicone spray (📖 p. 161)

- Join the quick release coupling.



## Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check the response.



## 18.2 Checking the engine oil level

### Preparatory work

- Stand the motorcycle upright on a horizontal surface.

### Condition

The engine is cold.

- Check the engine oil level.

The engine oil reaches the lower edge of level viewer **A**.

- » If the engine oil does not reach the lower edge of the level viewer:
  - Add engine oil. (📖 p. 140)

### Condition

The engine is at operating temperature.

- Check the engine oil level.




### Info

After switching off the engine, wait one minute before checking the level.

The engine oil is at a level between lower edge **A** and middle **B** of the level viewer.

- » If the engine oil is not at a level between lower edge **A** and middle **B** of the level viewer:
  - Add engine oil. (📖 p. 140)

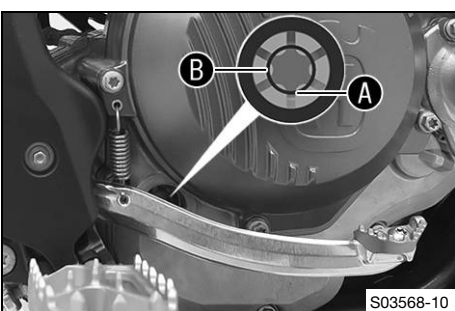

## 18.3 Changing the engine oil and oil filter, cleaning the oil screen 🛠️



### Warning

**Danger of scalding** Engine and gear oil get hot when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



### Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.







**Info**  
Drain the engine oil with the engine at operating temperature.

**Preparatory work**

- Park the motorcycle on a level surface.
- Remove the engine guard. (📖 p. 94)

**Main work**

- Position an appropriate container under the engine.
- Remove screw plug ❶ with oil screen and the O-rings.
- Remove oil drain plug ❷ with the magnet and seal ring.

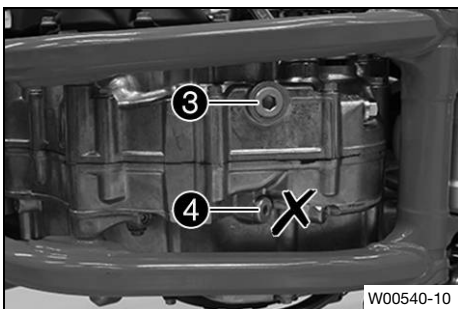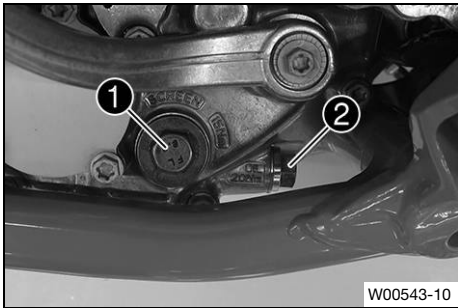

- Remove screw plug ❸ with the O-ring.




**Info**  
Do not remove screw ❹.

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.
- Mount and tighten screw plug ❸ with new O-ring.

|                |         |                     |
|----------------|---------|---------------------|
| Guideline      |         |                     |
| Oil drain plug | M14x1.5 | 15 Nm (11.1 lbf ft) |

- Position oil screen ❺ with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

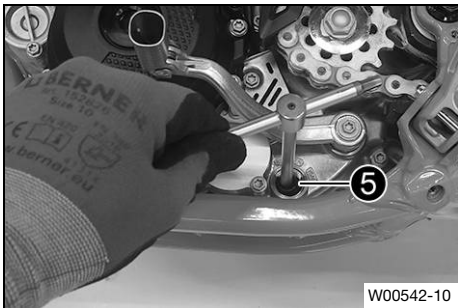


- Mount and tighten screw plug ❶ with the O-ring.


|                        |         |                     |
|------------------------|---------|---------------------|
| Guideline              |         |                     |
| Screw plug, oil screen | M20x1.5 | 15 Nm (11.1 lbf ft) |

- Mount and tighten oil drain plug ❷ with the magnet and a new seal ring.


|                            |         |                     |
|----------------------------|---------|---------------------|
| Guideline                  |         |                     |
| Oil drain plug with magnet | M12x1.5 | 20 Nm (14.8 lbf ft) |

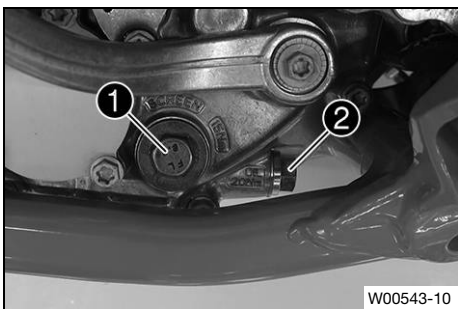



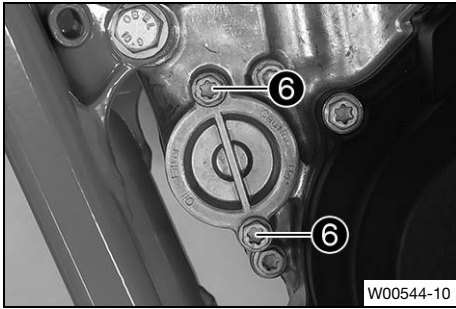


- Remove screws **6**. Take off the oil filter cover with the O-ring.

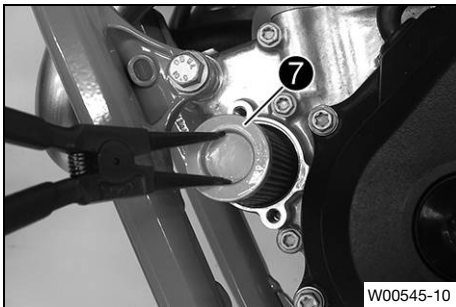

- Pull oil filter **7** out of the oil filter housing.

Lock ring plier (51012011000)

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.

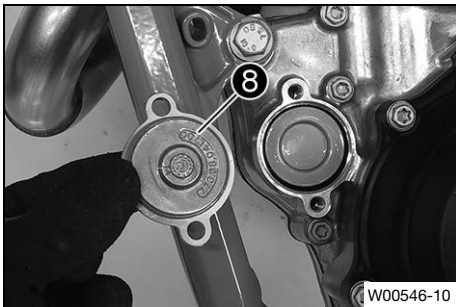

- Lay the motorcycle on its side and fill the oil filter housing to about  $\frac{1}{3}$  full with engine oil.
- Place the oil filter into the oil filter housing.
- Oil the O-ring of the oil filter cover and mount it together with oil filter cover **8**.
- Mount and tighten the screws.

#### Guideline

|                         |    |                    |
|-------------------------|----|--------------------|
| Screw, oil filter cover | M6 | 10 Nm (7.4 lbf ft) |
|-------------------------|----|--------------------|

- Stand the motorcycle upright.
- Remove filler plug **9** with the O-ring, and fill up with engine oil.

|            |                 |                                     |
|------------|-----------------|-------------------------------------|
| Engine oil | 1.0 l (1.1 qt.) | Engine oil (SAE 10W/50)<br>(p. 159) |
|------------|-----------------|-------------------------------------|



#### Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

- Mount and tighten the filler plug together with the O-ring.




#### Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

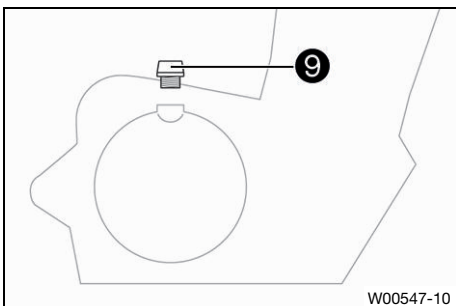


## Finishing work

- Check the engine oil level. (📖 p. 137)
- Install the engine guard. (📖 p. 94)

## 18.4 Adding engine oil

### **i** Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

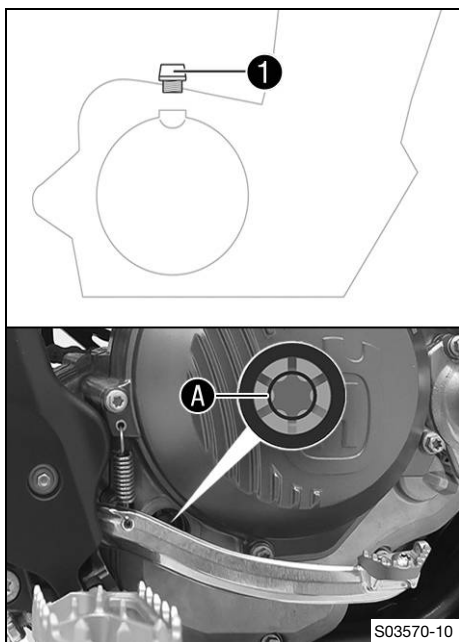

## Main work

- Remove filler plug ① with the O-ring.
- Fill engine oil to the middle ① of the level viewer.

Engine oil (SAE 10W/50) (📖 p. 159)

### **i** Info

In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils. Husqvarna Motorcycles recommends changing the engine oil.

- Mount and tighten the filler plug together with the O-ring.



## Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check for leaks.

## Finishing work

- Check the engine oil level. (📖 p. 137)

## 19.1 Cleaning the motorcycle

### Note

**Material damage** Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.  
Minimum clearance 60 cm (23.6 in)



### Note


**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



### Info

To maintain the value and appearance of the motorcycle over a long period, clean it regularly. Avoid direct sunshine when cleaning the motorcycle.

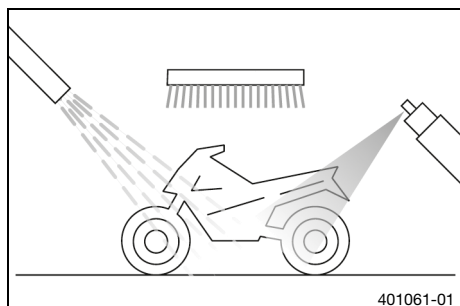

- Close off the exhaust system to keep water from entering.
- Remove the coarse dirt particles with a gentle water jet.
- Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.



### Info

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



### Warning

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



### Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Clean the chain. (📖 p. 83)

- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber  
(📖 p. 161)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 161)

## (All FE models apart from FE 350w US)

- Lubricate the steering lock.

 
Universal oil spray (📖 p. 162)

## 19.2 Checks and maintenance steps for winter operation

### **i** Info

If you use the vehicle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

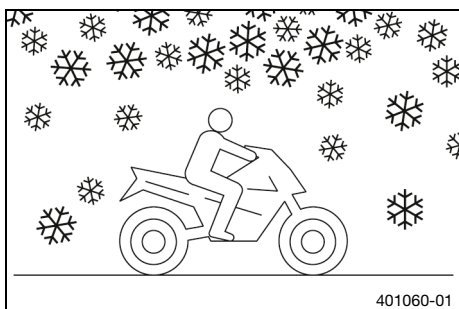

- Clean the motorcycle. (📖 p. 141)
- Clean brake system.

### **i** Info

After **EVERY** trip on salted roads, thoroughly clean the brake calipers and brake linings, after they have cooled down and without removing them, with cold water and dry them carefully.

After riding on salted roads, thoroughly clean the vehicle with cold water and dry it well.

- Treat the engine, link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.

### **i** Info

Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (📖 p. 83)

## 20.1 Storage

**Warning**


**Danger of poisoning** Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.

**Info**

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

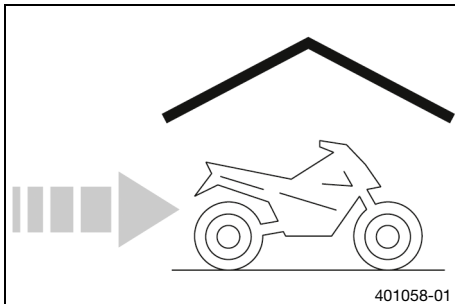

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.
- Refuel. (📖 p. 47)

**Tip**

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle. (📖 p. 141)
- Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 137)
- Check the antifreeze and coolant level. (📖 p. 126)
- Check tire pressure. (📖 p. 114)
- Remove the 12-V battery. 🛠️ (📖 p. 116)
- Charge the 12-V battery. 🛠️ (📖 p. 118)

**Guideline**

|                                                                   |                             |
|-------------------------------------------------------------------|-----------------------------|
| Ideal charging and storage temperature of the lithium-ion battery | 10 ... 20 °C (50 ... 68 °F) |
|-------------------------------------------------------------------|-----------------------------|

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

**Info**


Husqvarna Motorcycles recommends jacking up the motorcycle.

- Raise the motorcycle with a lift stand. (📖 p. 60)
- Preferably cover the motorcycle with a tarp or similar cover that is permeable to air. Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.

### **i** Info

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

## 20.2 Preparing for use after storage

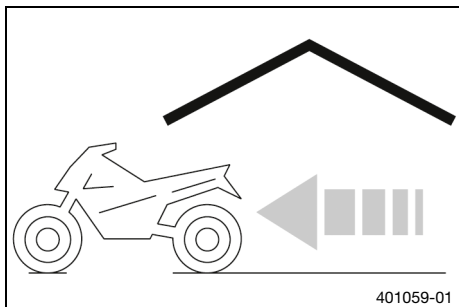

- Remove the motorcycle from the lift stand. (📖 p. 60)
- Install the 12-V battery. 🔧 (📖 p. 117)
- Perform checks and maintenance measures when preparing for use. (📖 p. 42)
- Take a test ride.

| Faults                                       | Possible cause                                                                             | Action                                                                                                                                                               |
|----------------------------------------------|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine cannot be cranked (starter motor) | Operating error                                                                            | – Carry out start procedure. (📖 p. 42)                                                                                                                               |
|                                              | 12-V battery discharged                                                                    | – Charge the 12-V battery. 🛠️ (📖 p. 118)<br>– Check charging voltage. 🛠️<br>– Check the open-circuit current. 🛠️<br>– Check the stator winding of the alternator. 🛠️ |
|                                              | Main fuse blown                                                                            | – Change the main fuse. (📖 p. 120)                                                                                                                                   |
|                                              | Starter relay defective                                                                    | – Check the starter relay. 🛠️                                                                                                                                        |
|                                              | Starter motor defective                                                                    | – Check the starter motor. 🛠️                                                                                                                                        |
| The engine turns but does not start          | Operating error                                                                            | – Carry out start procedure. (📖 p. 42)                                                                                                                               |
|                                              | Quick release coupling not joined                                                          | – Join quick release coupling.                                                                                                                                       |
|                                              | Fuse 1 blown                                                                               | – Change the fuses of individual electrical power consumers.                                                                                                         |
|                                              | Fuse 4 blown                                                                               | – Change the fuses of individual electrical power consumers.                                                                                                         |
|                                              | Idle speed is not set correctly                                                            | – Adjust the idle speed. 🛠️ (📖 p. 133)                                                                                                                               |
|                                              | Spark plug sooty or wet                                                                    | – Clean and dry the spark plug and spark plug connector, or change if necessary.                                                                                     |
|                                              | Plug gap of spark plug too wide                                                            | – Adjust plug gap.<br>Guideline<br>Spark plug electrode gap<br>1.0 mm (0.039 in)                                                                                     |
|                                              | Ignition system defective                                                                  | – Check the ignition system. 🛠️                                                                                                                                      |
|                                              | Short-circuit cable in wiring harness frayed, stop button or emergency OFF switch faulty   | – Check the wiring harness. (visual check)<br>– Check the electrical system.                                                                                         |
|                                              | Error in the electronic fuel injection                                                     | – Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️                                                                                     |
| Engine does not speed up                     | Error in the electronic fuel injection                                                     | – Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️                                                                                     |
|                                              | Ignition system defective                                                                  | – Ignition coil - check the secondary winding. 🛠️<br>– Check the spark plug connector. 🛠️<br>– Check the stator winding of the alternator. 🛠️                        |
| Engine has too little power                  | Air filter heavily contaminated                                                            | – Clean the air filter and air filter box. 🛠️ (📖 p. 75)                                                                                                              |
|                                              | Fuel filter is very dirty                                                                  | – Change the fuel filter. 🛠️                                                                                                                                         |
|                                              | Fuel screen is very dirty                                                                  | – Change the fuel screen. 🛠️ (📖 p. 136)                                                                                                                              |
|                                              | Error in the electronic fuel injection                                                     | – Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️                                                                                     |
|                                              | Exhaust system leaky, deformed or too little glass fiber yarn filling in the main silencer | – Check exhaust system for damage.<br>– Change the glass fiber yarn filling in the main silencer. 🛠️ (📖 p. 79)                                                       |

| Faults                                                                                      | Possible cause                                          | Action                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine has too little power                                                                 | Valve clearance too little                              | – Adjust the valve clearance. 🛠️                                                                                                                                          |
|                                                                                             | Ignition system defective                               | – Ignition coil - check the secondary winding. 🛠️<br>– Check the spark plug connector. 🛠️<br>– Check the stator winding of the alternator. 🛠️                             |
| The engine dies during the trip                                                             | Lack of fuel                                            | – Refuel. (📖 p. 47)                                                                                                                                                       |
|                                                                                             | Fuse 1 blown                                            | – Change the fuses of individual electrical power consumers.                                                                                                              |
|                                                                                             | Fuse 4 blown                                            | – Change the fuses of individual electrical power consumers.                                                                                                              |
| Engine overheats                                                                            | Coolant level low in cooling system                     | – Check the cooling system for leaks.<br>– Check the coolant level. (📖 p. 127)                                                                                            |
|                                                                                             | Insufficient airflow                                    | – Switch off engine when stationary.                                                                                                                                      |
|                                                                                             | Radiator fins very dirty                                | – Clean radiator fins.                                                                                                                                                    |
|                                                                                             | Foam formation in cooling system                        | – Drain the coolant. 🛠️ (📖 p. 127)<br>– Refill with coolant. 🛠️ (📖 p. 128)                                                                                                |
|                                                                                             | Bent radiator hose                                      | – Change the radiator hose. 🛠️                                                                                                                                            |
|                                                                                             | Thermostat defective                                    | – Check the thermostat. 🛠️<br>Guideline<br>Opening temperature: 70 °C (158 °F)                                                                                            |
|                                                                                             | Defect in radiator fan system                           | – Check fuse 3.<br>– Check the radiator fan. 🛠️                                                                                                                           |
| Malfunction indicator lamp lights up or flashes                                             | Error in the electronic fuel injection                  | – Check wiring for damage and electrical plug-in connectors for corrosion and damage.<br>– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️ |
| High oil consumption                                                                        | Engine vent hose bent                                   | – Route the vent hose without bends or replace it if necessary.                                                                                                           |
|                                                                                             | Engine oil level too high                               | – Check the engine oil level. (📖 p. 137)                                                                                                                                  |
|                                                                                             | Engine oil too thin (low viscosity)                     | – Change the engine oil and oil filter, clean the oil screen. 🛠️ (📖 p. 137)                                                                                               |
|                                                                                             | Piston and cylinder worn                                | – Measure the piston/cylinder mounting clearance. 🛠️                                                                                                                      |
| 12-V battery discharged                                                                     | The 12-V battery is not being charged by the alternator | – Check charging voltage. 🛠️<br>– Check the stator winding of the alternator. 🛠️                                                                                          |
|                                                                                             | Unwanted electrical power consumer                      | – Check the open-circuit current. 🛠️                                                                                                                                      |
| Combination instrument values deleted (time, stop watch, lap times)                         | The combination instrument battery is empty             | – Change combination instrument battery. (📖 p. 124)                                                                                                                       |
| The high beam, low beam, tail light, position light, and license plate lamp are not working | Fuse 2 blown                                            | – Change the fuses of individual electrical power consumers.                                                                                                              |



| Faults                                                               | Possible cause | Action                                                       |
|----------------------------------------------------------------------|----------------|--------------------------------------------------------------|
| The horn, brake light, turn signal, and radiator fan are not working | Fuse 3 blown   | – Change the fuses of individual electrical power consumers. |



## Info

The blink codes are only displayed by the derestricted version of the vehicle.

|                                                  |                                                                                                                                                |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Blink code for malfunction indicator lamp</b> | <br>02a Malfunction indicator lamp flashes 2x per second      |
| <b>Error level condition</b>                     | Throttle valve position programming necessary                                                                                                  |
| <b>Blink code for malfunction indicator lamp</b> | <br>02 Malfunction indicator lamp flashes 2x short            |
| <b>Error level condition</b>                     | Crankshaft speed sensor – circuit fault                                                                                                        |
| <b>Blink code for malfunction indicator lamp</b> | <br>06 Malfunction indicator lamp flashes 6x short            |
| <b>Error level condition</b>                     | Throttle valve position sensor circuit A – input signal too low<br>Throttle valve position sensor circuit A – input signal too high            |
| <b>Blink code for malfunction indicator lamp</b> | <br>09 Malfunction indicator lamp flashes 9x short            |
| <b>Error level condition</b>                     | Induction manifold pressure sensor, cylinder 1 – input signal too low<br>Induction manifold pressure sensor cylinder 1 – input signal too high |
| <b>Blink code for malfunction indicator lamp</b> | <br>12 Malfunction indicator lamp flashes 1x long, 2x short |
| <b>Error level condition</b>                     | Coolant temperature sensor – input signal too low<br>Coolant temperature sensor – input signal too high                                        |
| <b>Blink code for malfunction indicator lamp</b> | <br>13 Malfunction indicator lamp flashes 1x long, 3x short |
| <b>Error level condition</b>                     | Intake air temperature sensor – input signal too low<br>Intake air temperature sensor – input signal too high                                  |
| <b>Blink code for malfunction indicator lamp</b> | <br>15 Malfunction indicator lamp flashes 1x long, 5x short |
| <b>Error level condition</b>                     | Tilt sensor – input signal too low<br>Tilt sensor – input signal too high                                                                      |
| <b>Blink code for malfunction indicator lamp</b> | <br>21 Malfunction indicator lamp flashes 2x long, 1x short |
| <b>Error level condition</b>                     | Battery voltage - input voltage too high                                                                                                       |

|                                                  |                                                                                                                                           |
|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Blink code for malfunction indicator lamp</b> |  22 Malfunction indicator lamp flashes 2x long, 2x short |
| <b>Error level condition</b>                     | Gear position sensor – input voltage too high                                                                                             |
|                                                  | Gear position sensor – input voltage too low                                                                                              |
| <b>Blink code for malfunction indicator lamp</b> |  33 Malfunction indicator lamp flashes 3x long, 3x short |
| <b>Error level condition</b>                     | Injector cylinder 1 - circuit fault                                                                                                       |
| <b>Blink code for malfunction indicator lamp</b> |  37 Malfunction indicator lamp flashes 3x long, 7x short |
| <b>Error level condition</b>                     | Ignition coil 1, cylinder 1 - circuit fault                                                                                               |
| <b>Blink code for malfunction indicator lamp</b> |  41 Malfunction indicator lamp flashes 4x long, 1x short |
| <b>Error level condition</b>                     | Fuel pump relay - short circuit to ground or open circuit                                                                                 |
|                                                  | Fuel pump relay - input signal too low                                                                                                    |

## 23.1 Engine

|                           |                                                                                   |
|---------------------------|-----------------------------------------------------------------------------------|
| Design                    | 1-cylinder 4-stroke engine, water-cooled                                          |
| Displacement              | 349.7 cm <sup>3</sup> (21.34 cu in)                                               |
| Stroke                    | 57.5 mm (2.264 in)                                                                |
| Bore                      | 88 mm (3.46 in)                                                                   |
| Compression ratio         | 13.7:1                                                                            |
| Control                   | DOHC, four valves controlled via cam lever, drive via timing chain                |
| Valve diameter, intake    | 36.3 mm (1.429 in)                                                                |
| Valve diameter, exhaust   | 29.1 mm (1.146 in)                                                                |
| Valve clearance           |                                                                                   |
| Intake at: 20 °C (68 °F)  | 0.08 ... 0.15 mm (0.0031 ... 0.0059 in)                                           |
| Exhaust at: 20 °C (68 °F) | 0.12 ... 0.19 mm (0.0047 ... 0.0075 in)                                           |
| Crankshaft bearing        | 2 cylinder bearings                                                               |
| Conrod bearing            | Slide bearing                                                                     |
| Piston pin bearing        | Bearing bush                                                                      |
| Pistons                   | Forged light alloy                                                                |
| Piston rings              | 1 compression ring, 1 oil scraper ring                                            |
| Engine lubrication        | Pressure circulation lubrication with 2 trochoidal pumps                          |
| Primary transmission      | 24:72                                                                             |
| Clutch                    | Multidisc clutch in oil bath/hydraulically activated/damped                       |
| Gearbox                   | 6-gear transmission, claw shifted                                                 |
| Transmission ratio        |                                                                                   |
| first-gear                | 13:33                                                                             |
| second-gear               | 16:30                                                                             |
| third-gear                | 18:26                                                                             |
| fourth-gear               | 22:26                                                                             |
| fifth-gear                | 23:23                                                                             |
| sixth-gear                | 26:22                                                                             |
| Alternator                | 14 V, 200 W                                                                       |
| Ignition                  | Contactless controlled fully electronic ignition with digital ignition adjustment |
| Spark plug                | NGK LMAR9AI-10                                                                    |
| Spark plug electrode gap  | 1.0 mm (0.039 in)                                                                 |
| Cooling                   | Water cooling, permanent circulation of coolant by water pump                     |
| Starting aid              | Starter motor                                                                     |

## 23.2 Engine tightening torques

|                                              |       |                                                                                             |
|----------------------------------------------|-------|---------------------------------------------------------------------------------------------|
| Hose clip, intake flange                     | M4    | 3 Nm (2.2 lbf ft)                                                                           |
| Nozzle, crank chamber ventilation            | M4    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil nozzle for clutch lubrication            | M4    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil nozzle for conrod bearing lubrication    | M4    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil nozzle for main bearing lubrication      | M4    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, oil nozzle bent for piston cooling    | M4    | 2.5 Nm (1.84 lbf ft)<br><b>Loctite®243™</b>                                                 |
| Locking screw for bearing                    | M5    | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil channel screw plug in alternator cover   | M5    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil nozzle for cam lever lubrication         | M5    | 3 Nm (2.2 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Oil nozzle, piston cooling                   | M5    | 2 Nm (1.5 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, bearing bolt, oil pump idler gear     | M5    | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, clutch spring retainer                | M5    | 6 Nm (4.4 lbf ft)                                                                           |
| Screw, gear position sensor                  | M5    | 5 Nm (3.7 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, locking lever                         | M5    | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, oil pump cover                        | M5    | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>                                                    |
| Screw, stator                                | M5    | 6 Nm (4.4 lbf ft)<br><b>Loctite®2701™</b>                                                   |
| Stud, alternator cover                       | M5    | 2 Nm (1.5 lbf ft)                                                                           |
| Fuel vapor retention system connection screw | M6    | 5 Nm (3.7 lbf ft)                                                                           |
| Nut, cylinder head                           | M6    | 10 Nm (7.4 lbf ft)                                                                          |
| Nut, water pump impeller                     | M6    | 6 Nm (4.4 lbf ft)<br><b>Loctite® 243™</b> also in gap between shaft and water pump impeller |
| Screw, alternator cover                      | M6    | 10 Nm (7.4 lbf ft)                                                                          |
| Screw, clutch cover                          | M6x25 | 10 Nm (7.4 lbf ft)                                                                          |
| Screw, clutch slave cylinder                 | M6    | 10 Nm (7.4 lbf ft)                                                                          |
| Screw, engine case                           | M6x55 | 10 Nm (7.4 lbf ft)                                                                          |
| Screw, engine case                           | M6x70 | 10 Nm (7.4 lbf ft)                                                                          |
| Screw, exhaust flange                        | M6    | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>                                                   |
| Screw, fuel vapor retention system lock      | M6    | 5 Nm (3.7 lbf ft)<br><b>Loctite®243™</b>                                                    |

## 23 TECHNICAL SPECIFICATIONS

|                                            |          |                                                                                                                                                                       |
|--------------------------------------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screw, guide rail                          | M6       | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>                                                                                                                             |
| Screw, oil filter cover                    | M6       | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, outer clutch cover                  | M6x25    | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, outer clutch cover                  | M6x45    | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, shift drum locating                 | M6       | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>                                                                                                                             |
| Screw, shift lever                         | M6       | 14 Nm (10.3 lbf ft)<br><b>Loctite®243™</b>                                                                                                                            |
| Screw, starter motor                       | M6       | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, starter motor - intermediate gear   | M6       | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>                                                                                                                             |
| Screw, timing chain failure protection     | M6       | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>                                                                                                                             |
| Screw, valve cover                         | M6       | 8 Nm (5.9 lbf ft)                                                                                                                                                     |
| Screw, water pump cover                    | M6x25    | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, water pump cover                    | M6x40    | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Stud, cylinder head                        | M6       | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>                                                                                                                              |
| Screw, autodecompression                   | M7x1     | 15 Nm (11.1 lbf ft)<br><b>Loctite®243™</b>                                                                                                                            |
| Screw, camshaft bearing bridge             | M7x1     | Tightening sequence:<br>Tighten diagonally.<br>1st tightening stage<br>5 Nm (3.7 lbf ft)<br>2nd tightening stage<br>14 Nm (10.3 lbf ft)<br>Lubricated with engine oil |
| Crankshaft clamp screw plug                | M8       | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Crankshaft locking bolt                    | M8       | 8 Nm (5.9 lbf ft)                                                                                                                                                     |
| Screw, tensioning rail                     | M8       | 15 Nm (11.1 lbf ft)<br><b>Loctite®243™</b>                                                                                                                            |
| Screw, engine sprocket                     | M10      | 60 Nm (44.3 lbf ft)<br><b>Loctite®243™</b>                                                                                                                            |
| Plug, oil channel                          | M10x1    | 15 Nm (11.1 lbf ft)<br><b>Loctite®243™</b>                                                                                                                            |
| Screw plug, cam lever axis                 | M10x1    | 10 Nm (7.4 lbf ft)                                                                                                                                                    |
| Screw, rotor                               | M10x1    | 70 Nm (51.6 lbf ft)<br>Collar and thread oiled / cone degreased                                                                                                       |
| Screw, unlocking of timing chain tensioner | M10x1    | 8 Nm (5.9 lbf ft)                                                                                                                                                     |
| Spark plug                                 | M10x1    | 12 Nm (8.9 lbf ft)                                                                                                                                                    |
| Coolant temperature sensor                 | M10x1.25 | 12 Nm (8.9 lbf ft)                                                                                                                                                    |

|                                        |           |                                                                                                                                                                                              |
|----------------------------------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Nut, cylinder head                     | M10x1.25  | Tightening sequence:<br>Tighten diagonally.<br>1st tightening stage<br>10 Nm (7.4 lbf ft)<br>2nd tightening stage<br>30 Nm (22.1 lbf ft)<br>3rd tightening stage<br>180°<br><br>Thread oiled |
| Stud, cylinder head                    | M10x1.25  | 20 Nm (14.8 lbf ft)<br><b>Loctite®243™</b>                                                                                                                                                   |
| Oil drain plug with magnet             | M12x1.5   | 20 Nm (14.8 lbf ft)                                                                                                                                                                          |
| Screw plug, oil pressure control valve | M12x1.5   | 20 Nm (14.8 lbf ft)                                                                                                                                                                          |
| Oil drain plug                         | M14x1.5   | 15 Nm (11.1 lbf ft)                                                                                                                                                                          |
| Nut, inner clutch hub                  | M18x1.5   | 100 Nm (73.8 lbf ft)                                                                                                                                                                         |
| Nut, primary gear wheel                | M18LHx1.5 | 120 Nm (88.5 lbf ft)<br><b>Loctite®243™</b>                                                                                                                                                  |
| Screw plug, oil screen                 | M20x1.5   | 15 Nm (11.1 lbf ft)                                                                                                                                                                          |
| Plug, timing chain tensioner           | M24x1.5   | 40 Nm (29.5 lbf ft)                                                                                                                                                                          |
| Screw, alternator cover                | M24x1.5   | 18 Nm (13.3 lbf ft)                                                                                                                                                                          |
| Filler plug                            | M24x3     | hand-tight                                                                                                                                                                                   |

## 23.3 Capacities


### 23.3.1 Engine oil

|            |                 |                                    |
|------------|-----------------|------------------------------------|
| Engine oil | 1.0 l (1.1 qt.) | Engine oil (SAE 10W/50) (📖 p. 159) |
|------------|-----------------|------------------------------------|

### 23.3.2 Coolant

|         |                 |                    |
|---------|-----------------|--------------------|
| Coolant | 1.2 l (1.3 qt.) | Coolant (📖 p. 159) |
|---------|-----------------|--------------------|

### 23.3.3 Fuel

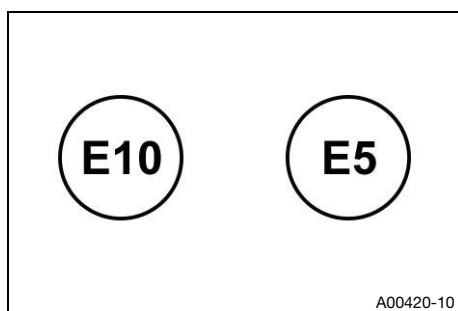

Please observe the labels on EU fuel pumps.

|                                                                         |                     |
|-------------------------------------------------------------------------|---------------------|
| Total fuel tank capacity, approx. (All FE models apart from FE 350w US) |                     |
| Super unleaded (ROZ 95) (📖 p. 160)                                      | 8.0 l (2.11 US gal) |
| Total fuel tank capacity, approx. (FE 350w US)                          |                     |
| Super unleaded (ROZ 95) (📖 p. 160)                                      | 8.0 l (2.11 US gal) |
| Fuel reserve, approx.                                                   | 1.5 l (1.6 qt.)     |

## 23.4 Chassis

|                                                                    |                                                           |
|--------------------------------------------------------------------|-----------------------------------------------------------|
| Frame                                                              | Central tube frame made of chrome molybdenum steel tubing |
| Fork                                                               | <b>WP XPLOR</b>                                           |
| Suspension travel                                                  |                                                           |
| front                                                              | 300 mm (11.81 in)                                         |
| rear                                                               | 310 mm (12.2 in)                                          |
| Fork offset                                                        | 22 mm (0.87 in)                                           |
| Shock absorber                                                     | <b>WP XPLOR LDS</b>                                       |
| Brake system                                                       | Disc brakes, floating brake calipers                      |
| Brake discs - diameter                                             |                                                           |
| front                                                              | 260 mm (10.24 in)                                         |
| rear                                                               | 220 mm (8.66 in)                                          |
| Brake discs - wear limit (All standard models)                     |                                                           |
| front                                                              | 2.5 mm (0.098 in)                                         |
| rear                                                               | 3.5 mm (0.138 in)                                         |
| Brake discs - wear limit (All special models)                      |                                                           |
| front                                                              | 2.5 mm (0.098 in)                                         |
| rear                                                               | 3.7 mm (0.146 in)                                         |
| Offroad tire pressure                                              |                                                           |
| front                                                              | 1.0 bar (15 psi)                                          |
| rear                                                               | 1.0 bar (15 psi)                                          |
| Street tire pressure                                               |                                                           |
| front                                                              | 2.0 bar (29 psi)                                          |
| rear                                                               | 2.0 bar (29 psi)                                          |
| Final drive (All FE models apart from FE 350w US)                  | 14:46 (13:46)                                             |
| Final drive (FE 350w US)                                           | 13:48                                                     |
| Chain                                                              | 5/8 x 1/4"                                                |
| Rear sprockets available                                           | 45, 48, 49, 50, 51, 52                                    |
| Steering head angle                                                | 63.9°                                                     |
| Wheelbase                                                          | 1,487 ± 10 mm (58.54 ± 0.39 in)                           |
| Seat height unloaded                                               | 952 mm (37.48 in)                                         |
| Ground clearance unloaded                                          | 343 mm (13.5 in)                                          |
| Weight without fuel, approx. (All FE models apart from FE 350w US) | 108 kg (238 lb.)                                          |
| Weight without fuel, approx. (FE 350w US)                          | 111.4 kg (245.6 lb.)                                      |
| Maximum permissible front axle load                                | 145 kg (320 lb.)                                          |
| Maximum permissible rear axle load                                 | 190 kg (419 lb.)                                          |
| Maximum permissible overall weight                                 | 335 kg (739 lb.)                                          |



## 23.5 Electrical system

|                                                          |                        |                                                                                              |
|----------------------------------------------------------|------------------------|----------------------------------------------------------------------------------------------|
| 12-V battery                                             | HJTZ5S-FP-C            | Lithium-ion battery<br>Battery voltage: 12 V<br>Nominal capacity: 2.0 Ah<br>Maintenance-free |
| Combination instrument battery                           | CR 2430                | Battery voltage: 3 V                                                                         |
| Fuse                                                     | 58011109120            | 20 A                                                                                         |
| Headlight                                                | LED                    |                                                                                              |
| Parking light                                            | LED                    |                                                                                              |
| Indicator lamp (All FE models apart from FE 350w US)     | W2.3W / socket W2x4.6d | 12 V<br>2.3 W                                                                                |
| Turn signal (All FE models apart from FE 350w US)        | R10W / socket BA15s    | 12 V<br>10 W                                                                                 |
| Tail light                                               | LED                    |                                                                                              |
| Brake light (All FE models apart from FE 350w US)        | LED                    |                                                                                              |
| License plate lamp (All FE models apart from FE 350w US) | LED                    |                                                                                              |

## 23.6 Tires

| Validity                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Front tire                                                 | Rear tire                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|-------------------------------------------------------------|
| (All FE models apart from FE 350w US)                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>90/90 - 21 M/C 54R M+S TT</b><br>Michelin Enduro Medium | <b>140/80 - 18 M/C 70R M+S TT</b><br>Michelin Enduro Medium |
| (FE 350w US)                                                                                                                                                                                                                                                                                                                                                                                                                                                | <b>80/100 - 21 M/C 51M TT</b><br>Dunlop GEOMAX AT 81 F     | <b>110/100 - 18 M/C 64M TT</b><br>Dunlop GEOMAX AT81        |
| <p>The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed. Additional information is available in the Service section under:</p> <p><a href="http://www.husqvarna-motorcycles.com">www.husqvarna-motorcycles.com</a></p> |                                                            |                                                             |

## 23.7 Fork

|                                                 |                       |
|-------------------------------------------------|-----------------------|
| Fork article number                             | A390C167X402000       |
| Fork                                            | <b>WP XPLOR</b>       |
| Compression damping                             |                       |
| Comfort                                         | 17 clicks             |
| Standard                                        | 15 clicks             |
| Sport                                           | 7 clicks              |
| Rebound damping                                 |                       |
| Comfort                                         | 19 clicks             |
| Standard                                        | 17 clicks             |
| Sport                                           | 9 clicks              |
| Spring length with preload spacer(s)            | 476 mm (18.74 in)     |
| Spring rate                                     |                       |
| Weight of rider: 65 ... 75 kg (143 ... 165 lb.) | 4.4 N/mm (25.1 lb/in) |
| Weight of rider: 75 ... 85 kg (165 ... 187 lb.) | 4.6 N/mm (26.3 lb/in) |

## 23 TECHNICAL SPECIFICATIONS

|                                                 |                        |                                             |
|-------------------------------------------------|------------------------|---------------------------------------------|
| Weight of rider: 85 ... 95 kg (187 ... 209 lb.) | 4.8 N/mm (27.4 lb/in)  |                                             |
| Fork length                                     | 940 mm (37.01 in)      |                                             |
| Oil capacity, external mechanism                | 390 ml (13.19 fl. oz.) | Fork oil (SAE 4) (48601166S1)<br>(📖 p. 160) |
| Oil capacity, cartridge                         | 175 ml (5.92 fl. oz.)  | Fork oil (SAE 4) (48601166S1)<br>(📖 p. 160) |

### 23.8 Shock absorber

|                                                 |                                                                                                                                                |
|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Shock absorber article number                   | A390C463X408000                                                                                                                                |
| Shock absorber                                  | <b>WP XPLOR LDS</b>                                                                                                                            |
| Lowspeed compression damping                    |                                                                                                                                                |
| Comfort                                         | 18 clicks                                                                                                                                      |
| Standard                                        | 15 clicks                                                                                                                                      |
| Sport                                           | 12 clicks                                                                                                                                      |
| Highspeed compression damping                   |                                                                                                                                                |
| Comfort                                         | 2.5 turns                                                                                                                                      |
| Standard                                        | 2 turns                                                                                                                                        |
| Sport                                           | 1.5 turns                                                                                                                                      |
| Rebound damping                                 |                                                                                                                                                |
| Comfort                                         | 18 clicks                                                                                                                                      |
| Standard                                        | 15 clicks                                                                                                                                      |
| Sport                                           | 12 clicks                                                                                                                                      |
| Spring preload                                  | 7 mm (0.28 in)                                                                                                                                 |
| Spring rate                                     |                                                                                                                                                |
| Weight of rider: 65 ... 75 kg (143 ... 165 lb.) | 42 N/mm (240 lb/in)                                                                                                                            |
| Weight of rider: 75 ... 85 kg (165 ... 187 lb.) | 45 N/mm (257 lb/in)                                                                                                                            |
| Weight of rider: 85 ... 95 kg (187 ... 209 lb.) | 48 N/mm (274 lb/in)                                                                                                                            |
| Spring length                                   | 240 mm (9.45 in)                                                                                                                               |
| Gas pressure                                    | 10 bar (145 psi)                                                                                                                               |
| Static sag                                      | 40 mm (1.57 in)                                                                                                                                |
| Riding sag                                      | 110 mm (4.33 in)                                                                                                                               |
| Fitted length                                   | 456.3 mm (17.965 in)                                                                                                                           |
| Shock absorber oil                              | Shock absorber fluid (SAE 2.5)<br>(50180751S1) (  p. 160) |

### 23.9 Chassis tightening torques

|                                              |                          |                      |
|----------------------------------------------|--------------------------|----------------------|
| Fitting, inlet sleeve to throttle valve body | -                        | 2.8 Nm (2.07 lbf ft) |
| Hose clamp, radiator                         | -                        | 2.4 Nm (1.77 lbf ft) |
| Hose clip, activated carbon filter           | -                        | 3.8 Nm (2.8 lbf ft)  |
| Remaining screws, chassis                    | <b>EJOT PT®</b> K60x25-Z | 2 Nm (1.5 lbf ft)    |
| Screw cap, inner membrane<br>(FE 350w US)    | <b>EJOT PT®</b> 30x5.5   | 1 Nm (0.7 lbf ft)    |
| Screw cap, outer membrane<br>(FE 350w US)    | <b>EJOT PT®</b> 35x25    | 0.8 Nm (0.59 lbf ft) |

|                                                      |                           |                                             |
|------------------------------------------------------|---------------------------|---------------------------------------------|
| Screw for spoiler attachment                         | <b>EJOT PT®</b> K60x23/18 | 2.5 Nm (1.84 lbf ft)                        |
| Screw, air filter box, on subframe                   | <b>EJOT PT®</b> K70x25    | 5 Nm (3.7 lbf ft)                           |
| Screw, combination switch                            | <b>EJOT PT®</b> K50x18    | 2 Nm (1.5 lbf ft)                           |
| Screw, fuel pump                                     | <b>EJOT PT®</b> K60x25-Z  | 2.5 Nm (1.84 lbf ft)                        |
| Screw, intake air temperature sensor                 | <b>EJOT PT®</b> K50x18    | 0.7 Nm (0.52 lbf ft)                        |
| Screw, start button (FE 350w US)                     | <b>EJOT PT</b> K50X18     | 2 Nm (1.5 lbf ft)                           |
| Screw, fixed grip                                    | M4                        | 5 Nm (3.7 lbf ft)<br><b>Loctite®243™</b>    |
| Spoke nipple, front wheel                            | M4.5                      | 6 Nm (4.4 lbf ft)                           |
| Spoke nipple, rear wheel                             | M4.5                      | 6 Nm (4.4 lbf ft)                           |
| Remaining nuts, chassis                              | M5                        | 5 Nm (3.7 lbf ft)                           |
| Remaining screws, chassis                            | M5                        | 5 Nm (3.7 lbf ft)                           |
| Screw, battery terminal                              | M5                        | 2.5 Nm (1.84 lbf ft)                        |
| Screw, frame protector                               | M5                        | 3 Nm (2.2 lbf ft)                           |
| Screw, shock absorber adjusting ring                 | M5                        | 5 Nm (3.7 lbf ft)                           |
| Screw, throttle valve body cover                     | M5                        | 2.6 Nm (1.92 lbf ft)                        |
| Screws on main silencer                              | M5                        | 7 Nm (5.2 lbf ft)                           |
| Nut, starter motor                                   | M6                        | 4 Nm (3 lbf ft)                             |
| Nut, throttle cable on throttle valve body           | M6                        | 3 Nm (2.2 lbf ft)                           |
| Remaining nuts, chassis                              | M6                        | 10 Nm (7.4 lbf ft)                          |
| Remaining screws, chassis                            | M6                        | 10 Nm (7.4 lbf ft)                          |
| Screw, ball joint of push rod on rear brake cylinder | M6                        | 10 Nm (7.4 lbf ft)<br><b>Loctite®243™</b>   |
| Screw, battery support bracket                       | M6                        | 6 Nm (4.4 lbf ft)                           |
| Screw, brake lever                                   | M6                        | 5 Nm (3.7 lbf ft)                           |
| Screw, brake line guide on link fork                 | M6                        | 4.5 Nm (3.32 lbf ft)                        |
| Screw, cable on starter relay                        | M6                        | 6 Nm (4.4 lbf ft)                           |
| Screw, chain guide on link fork                      | M6                        | 10 Nm (7.4 lbf ft)                          |
| Screw, chain sliding guard                           | M6                        | 6 Nm (4.4 lbf ft)<br><b>Loctite®243™</b>    |
| Screw, clutch lever                                  | M6                        | 5 Nm (3.7 lbf ft)                           |
| Screw, connector board                               | M6                        | 5 Nm (3.7 lbf ft)                           |
| Screw, front brake disc                              | M6                        | 14 Nm (10.3 lbf ft)<br><b>Loctite®243™</b>  |
| Screw, ground wire in tail section                   | M6                        | 10 Nm (7.4 lbf ft)                          |
| Screw, rear brake disc                               | M6                        | 14 Nm (10.3 lbf ft)<br><b>Loctite®243™</b>  |
| Screw, seat fixing                                   | M6                        | 8 Nm (5.9 lbf ft)                           |
| Screw, throttle grip                                 | M6                        | 5 Nm (3.7 lbf ft)                           |
| Nut, rear sprocket screw                             | M8                        | 35 Nm (25.8 lbf ft)<br><b>Loctite®2701™</b> |
| Nut, rim lock                                        | M8                        | 12 Nm (8.9 lbf ft)                          |
| Rear brake lever stop nut                            | M8                        | 20 Nm (14.8 lbf ft)                         |

## 23 TECHNICAL SPECIFICATIONS

|                                         |         |                                             |
|-----------------------------------------|---------|---------------------------------------------|
| Remaining nuts, chassis                 | M8      | 25 Nm (18.4 lbf ft)                         |
| Remaining screws, chassis               | M8      | 25 Nm (18.4 lbf ft)                         |
| Screw, bottom triple clamp              | M8      | 12 Nm (8.9 lbf ft)                          |
| Screw, chain sliding piece              | M8      | 15 Nm (11.1 lbf ft)                         |
| Screw, engine sprocket cover            | M8      | 15 Nm (11.1 lbf ft)                         |
| Screw, fork stub                        | M8      | 15 Nm (11.1 lbf ft)                         |
| Screw, front brake caliper              | M8      | 25 Nm (18.4 lbf ft)<br><b>Loctite®243™</b>  |
| Screw, handlebar clamp                  | M8      | 20 Nm (14.8 lbf ft)                         |
| Screw, manifold                         | M8      | 15 Nm (11.1 lbf ft)                         |
| Screw, side stand attachment            | M8      | 33 Nm (24.3 lbf ft)<br><b>Loctite®2701™</b> |
| Screw, subframe, bottom                 | M8x18   | 30 Nm (22.1 lbf ft)<br><b>Loctite®2701™</b> |
| Screw, subframe, top                    | M8x15   | 35 Nm (25.8 lbf ft)<br><b>Loctite®2701™</b> |
| Screw, top steering stem                | M8      | 20 Nm (14.8 lbf ft)<br><b>Loctite®243™</b>  |
| Screw, top triple clamp                 | M8      | 17 Nm (12.5 lbf ft)                         |
| Screw, wheel speed sensor on axle clamp | M8      | 4.5 Nm (3.32 lbf ft)                        |
| Engine attachment bolt                  | M10     | 60 Nm (44.3 lbf ft)                         |
| Remaining nuts, chassis                 | M10     | 45 Nm (33.2 lbf ft)                         |
| Remaining screws, chassis               | M10     | 45 Nm (33.2 lbf ft)                         |
| Screw, bottom shock absorber            | M10     | 60 Nm (44.3 lbf ft)<br><b>Loctite®2701™</b> |
| Screw, handlebar holder                 | M10     | 40 Nm (29.5 lbf ft)<br><b>Loctite®243™</b>  |
| Screw, top shock absorber               | M10     | 60 Nm (44.3 lbf ft)<br><b>Loctite®2701™</b> |
| Nut, frame on linkage lever             | M14x1.5 | 60 Nm (44.3 lbf ft)                         |
| Nut, angle lever to link fork           | M16x1.5 | 80 Nm (59 lbf ft)                           |
| Nut, fork pivot                         | M16x1.5 | 100 Nm (73.8 lbf ft)                        |
| Nut, linkage lever on angle lever       | M16x1.5 | 80 Nm (59 lbf ft)                           |
| Screw, front wheel spindle              | M20x1.5 | 35 Nm (25.8 lbf ft)                         |
| Screw, top steering head                | M20x1.5 | 12 Nm (8.9 lbf ft)                          |
| Nut, wheel spindle, rear                | M22x1.5 | 80 Nm (59 lbf ft)                           |
| Screw-in fitting, cooling system        | M24x1.5 | 7.5 Nm (5.53 lbf ft)                        |

**Brake fluid DOT 4 / DOT 5.1****Standard/classification**

- DOT

**Guideline**

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

**Recommended supplier****Castrol**

- REACT PERFORMANCE DOT 4

**MOTOREX®**

- Brake Fluid DOT 5.1

**Coolant****Guideline**

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

|                                   |                 |
|-----------------------------------|-----------------|
| Antifreeze protection to at least | -25 °C (-13 °F) |
|-----------------------------------|-----------------|

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

**Recommended supplier****MOTOREX®**

- COOLANT M3.0

**Engine oil (SAE 10W/50)****Standard/classification**

- JASO T903 MA2 (📖 p. 163)
- SAE (📖 p. 163) (SAE 10W/50)

**Guideline**

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

|                            |
|----------------------------|
| Fully synthetic engine oil |
|----------------------------|

**Recommended supplier****MOTOREX®**

- Cross Power 4T

### Fork oil (SAE 4) (48601166S1)

**Standard/classification**

- SAE (📖 p. 163) (SAE 4)

**Guideline**

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

### Shock absorber fluid (SAE 2.5) (50180751S1)

**Standard/classification**

- SAE (📖 p. 163) (SAE 2.5)

**Guideline**

- Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

### Super unleaded (ROZ 95)

**Standard/classification**

- DIN EN 228 (ROZ 95)

**Guideline**

- Only use super unleaded fuel that matches or is equivalent to the specified standard.
- Fuel with an ethanol content of up to 10% (E10 fuel) is safe to use.

**Info**

Do **not** use fuel containing methanol (e.g., M15, M85, M100) or more than 10% ethanol (e.g., E15, E25, E85, E100).

---

**Air filter cleaner**

Recommended supplier

**MOTOREX®**

- Racing Bio Dirt Remover

**Chain cleaner**

Recommended supplier

**MOTOREX®**

- Chain Clean

**High viscosity grease**

Recommended supplier

**SKF®**

- LGHB 2

**Long-life grease**

Recommended supplier

**MOTOREX®**

- Bike Grease 2000

**Off-road chain spray**

Recommended supplier

**MOTOREX®**

- Chainlube Offroad

**Oil for foam air filter**

Recommended supplier

**MOTOREX®**

- Racing Bio Liquid Power

**Preserving materials for paints, metal and rubber**

Recommended supplier

**MOTOREX®**

- Moto Protect

**Silicone spray**

Recommended supplier

**MOTOREX®**

- Silicone Spray

**Special cleaner for glossy and matte paint finishes, metal and plastic surfaces**

Recommended supplier

**MOTOREX®**

- Quick Cleaner

### Universal oil spray

Recommended supplier

**MOTOREX®**

– Joker 440 Synthetic



### JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The **JASO T903 MA2** standard meets these special requirements.

### SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

## 27 INDEX OF SPECIAL TERMS

|     |                    |                                                                                    |
|-----|--------------------|------------------------------------------------------------------------------------|
| OBD | On-board diagnosis | Vehicle system, which monitors the specified parameters of the vehicle electronics |
| -   | Quickshifter       | Function of the engine electronics for shifting up without clutch actuation        |

|          |                |
|----------|----------------|
| Art. no. | Article number |
| ca.      | circa          |
| cf.      | compare        |
| e.g.     | for example    |
| etc.     | et cetera      |
| i.a.     | inter alia     |
| no.      | number         |
| poss.    | possibly       |

### 29.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

|                                                                                   |                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Malfunction indicator lamp lights up/flashes yellow – The OBD has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized Husqvarna Motorcycles workshop. |
|  | The fuel level warning lamp lights up yellow – The fuel level has reached the reserve mark.                                                                                                      |

### 29.2 Green and blue symbols

Green and blue symbols reflect information.

|                                                                                   |                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
|  | The high beam indicator lamp lights up blue – The high beam is switched on. |
|  | Turn signal indicator lamp flashes green – The turn signal is switched on.  |

## 1

|                     |     |
|---------------------|-----|
| <b>12-V battery</b> |     |
| charging            | 118 |
| starting power      | 39  |

|                     |     |
|---------------------|-----|
| <b>12-V battery</b> |     |
| installing          | 117 |
| removing            | 116 |

## A

|                    |    |
|--------------------|----|
| <b>Accessories</b> | 11 |
|--------------------|----|

|                   |    |
|-------------------|----|
| <b>Air filter</b> |    |
| cleaning          | 75 |
| installing        | 75 |
| removing          | 74 |

|                       |    |
|-----------------------|----|
| <b>Air filter box</b> |    |
| cleaning              | 75 |

|                             |    |
|-----------------------------|----|
| <b>Air filter box cover</b> |    |
| installing                  | 74 |
| removing                    | 74 |

|                   |     |
|-------------------|-----|
| <b>Antifreeze</b> |     |
| checking          | 126 |

|                             |    |
|-----------------------------|----|
| <b>Auxiliary substances</b> | 11 |
|-----------------------------|----|

## B

|                               |    |
|-------------------------------|----|
| <b>Basic chassis setting</b>  |    |
| rider's weight, checking with | 51 |

|                   |         |
|-------------------|---------|
| <b>Blink code</b> | 148-149 |
|-------------------|---------|

|                    |    |
|--------------------|----|
| <b>Brake discs</b> |    |
| checking           | 96 |

|                     |     |
|---------------------|-----|
| <b>Brake fluid</b>  |     |
| front brake, adding | 97  |
| rear brake, adding  | 103 |

|                          |     |
|--------------------------|-----|
| <b>Brake fluid level</b> |     |
| of front brake, checking | 96  |
| of rear brake, checking  | 103 |

|                               |     |
|-------------------------------|-----|
| <b>Brake lining retainers</b> |     |
| of front brake, checking      | 98  |
| of rear brake, checking       | 105 |

|                             |     |
|-----------------------------|-----|
| <b>Brake linings</b>        |     |
| of front brake, changing    | 99  |
| of front brake, checking    | 98  |
| of rear brake, checking     | 105 |
| of the rear brake, changing | 105 |

|                     |        |
|---------------------|--------|
| <b>Brake system</b> | 95-107 |
|---------------------|--------|

## C

|                 |              |
|-----------------|--------------|
| <b>Capacity</b> |              |
| coolant         | 128-129, 153 |
| engine oil      | 139, 153     |

|      |         |
|------|---------|
| fuel | 48, 153 |
|------|---------|

|              |    |
|--------------|----|
| <b>Chain</b> |    |
| checking     | 87 |
| cleaning     | 83 |

|                    |    |
|--------------------|----|
| <b>Chain guide</b> |    |
| checking           | 87 |

|                      |    |
|----------------------|----|
| <b>Chain tension</b> |    |
| adjusting            | 85 |
| checking             | 84 |

|                                                    |     |
|----------------------------------------------------|-----|
| <b>Characteristic map of the throttle response</b> |     |
| adjusting                                          | 131 |

|                                  |    |
|----------------------------------|----|
| <b>Clutch</b>                    |    |
| fluid level, checking/correcting | 92 |
| fluid, changing                  | 93 |

|                           |    |
|---------------------------|----|
| <b>Clutch lever</b>       | 16 |
| basic position, adjusting | 91 |

|                          |    |
|--------------------------|----|
| <b>Cold start button</b> | 21 |
|--------------------------|----|

|                                          |     |
|------------------------------------------|-----|
| <b>Combination instrument</b>            |     |
| adjusting                                | 26  |
| combination instrument battery, changing | 124 |
| overview                                 | 25  |
| setting kilometers or miles              | 25  |
| the clock, setting                       | 27  |
| viewing the lap time                     | 27  |

|                            |    |
|----------------------------|----|
| <b>Compression damping</b> |    |
| fork, adjusting            | 57 |

|                                        |     |
|----------------------------------------|-----|
| <b>Coolant</b>                         |     |
| antifreeze and coolant level, checking | 126 |
| changing                               | 129 |
| draining                               | 127 |
| level, checking                        | 127 |
| refilling                              | 128 |

|                       |     |
|-----------------------|-----|
| <b>Cooling system</b> | 126 |
|-----------------------|-----|

|                         |    |
|-------------------------|----|
| <b>Customer service</b> | 11 |
|-------------------------|----|

## D

|                    |   |
|--------------------|---|
| <b>Defined use</b> | 7 |
|--------------------|---|

|                              |     |
|------------------------------|-----|
| <b>Diagnostics connector</b> | 125 |
|------------------------------|-----|

|                                       |    |
|---------------------------------------|----|
| <b>Difficult operating conditions</b> | 39 |
| dry sand                              | 39 |
| high temperatures                     | 41 |
| low temperature                       | 41 |
| muddy surfaces                        | 40 |
| slow speed                            | 41 |
| snow                                  | 41 |
| wet sand                              | 40 |
| wet surfaces                          | 40 |

## E

|                           |     |
|---------------------------|-----|
| <b>Engine</b>             |     |
| running in                | 38  |
| <b>Engine guard</b>       |     |
| installing                | 94  |
| removing                  | 94  |
| <b>Engine number</b>      | 14  |
| <b>Engine oil</b>         |     |
| adding                    | 140 |
| changing                  | 137 |
| <b>Engine oil level</b>   |     |
| checking                  | 137 |
| <b>Engine sprocket</b>    |     |
| checking                  | 87  |
| <b>Environment</b>        | 10  |
| <b>F</b>                  |     |
| <b>Figures</b>            | 11  |
| <b>Filling up</b>         |     |
| fuel                      | 47  |
| <b>Foot brake lever</b>   | 23  |
| basic position, adjusting | 102 |
| free travel, checking     | 101 |
| <b>Fork legs</b>          |     |
| basic setting, checking   | 56  |
| bleeding                  | 60  |
| dust boots, cleaning      | 61  |
| installing                | 63  |
| removing                  | 62  |
| <b>Fork protector</b>     |     |
| installing                | 62  |
| removing                  | 61  |
| <b>Frame</b>              |     |
| checking                  | 89  |
| <b>Frame protector</b>    |     |
| installing                | 64  |
| removing                  | 64  |
| <b>Front fender</b>       |     |
| installing                | 69  |
| removing                  | 69  |
| <b>Front wheel</b>        |     |
| installing                | 109 |
| removing                  | 108 |
| <b>Fuel screen</b>        |     |
| changing                  | 136 |
| <b>Fuel tank</b>          |     |
| installing                | 82  |
| removing                  | 80  |

|                                       |     |
|---------------------------------------|-----|
| <b>Fuel tank filler cap</b>           |     |
| closing                               | 21  |
| opening                               | 20  |
| <b>Fuel, oils, etc.</b>               | 11  |
| <b>Fuse</b>                           |     |
| main fuse, changing                   | 120 |
| <b>H</b>                              |     |
| <b>Hand brake lever</b>               | 16  |
| basic position, adjusting             | 95  |
| free travel, adjusting                | 95  |
| free travel, checking                 | 95  |
| <b>Handlebar position</b>             | 58  |
| adjusting                             | 58  |
| <b>Headlight</b>                      |     |
| range, adjusting                      | 124 |
| <b>Headlight bulb</b>                 |     |
| changing                              | 122 |
| <b>Headlight mask with headlight</b>  |     |
| installing                            | 121 |
| removing                              | 120 |
| <b>Headlight setting</b>              |     |
| checking                              | 123 |
| <b>High-speed compression damping</b> |     |
| shock absorber, adjusting             | 52  |
| <b>Horn button</b>                    | 17  |
| <b>I</b>                              |     |
| <b>Idle speed</b>                     |     |
| adjusting                             | 133 |
| <b>Idle speed adjusting screw</b>     | 22  |
| <b>Implied warranty</b>               | 11  |
| <b>Intended use</b>                   | 7   |
| <b>K</b>                              |     |
| <b>Key number</b>                     | 14  |
| <b>L</b>                              |     |
| <b>Light switch</b>                   | 17  |
| <b>Link fork</b>                      |     |
| checking                              | 89  |
| <b>Lower triple clamp</b>             |     |
| installing                            | 65  |
| removing                              | 64  |
| <b>Low-speed compression damping</b>  |     |
| shock absorber, adjusting             | 51  |
| <b>M</b>                              |     |
| <b>Main fuse</b>                      |     |
| changing                              | 120 |

|                                                                    |         |  |
|--------------------------------------------------------------------|---------|--|
| <b>Main silencer</b>                                               |         |  |
| glass fiber yarn filling, changing                                 | 79      |  |
| installing                                                         | 77      |  |
| removing                                                           | 76      |  |
| spark arrestor, cleaning                                           | 77      |  |
| <b>Manufacturer warranty</b>                                       | 11      |  |
| <b>Mapping</b>                                                     |         |  |
| changing                                                           | 133     |  |
| <b>Misuse</b>                                                      | 7       |  |
| <b>Motorcycle</b>                                                  |         |  |
| cleaning                                                           | 141     |  |
| lift stand, removing from                                          | 60      |  |
| raising with lift stand                                            | 60      |  |
| <b>O</b>                                                           |         |  |
| <b>OCU</b>                                                         | 125     |  |
| <b>Oil filter</b>                                                  |         |  |
| changing                                                           | 137     |  |
| <b>Oil screen</b>                                                  |         |  |
| cleaning                                                           | 137     |  |
| <b>Overview of indicator lights</b>                                | 19-20   |  |
| <b>Owner's Manual</b>                                              | 10      |  |
| <b>P</b>                                                           |         |  |
| <b>Play in throttle cable</b>                                      |         |  |
| adjusting                                                          | 130     |  |
| checking                                                           | 130     |  |
| <b>Preparing for use</b>                                           |         |  |
| advice on preparing for first use                                  | 37      |  |
| after storage                                                      | 144     |  |
| checks and maintenance measures when preparing for use             | 42      |  |
| <b>Protective clothing</b>                                         | 9       |  |
| <b>Q</b>                                                           |         |  |
| <b>Quickshifter</b>                                                | 44      |  |
| activating                                                         | 44      |  |
| programming                                                        | 91      |  |
| <b>R</b>                                                           |         |  |
| <b>Rear sprocket</b>                                               |         |  |
| checking                                                           | 87      |  |
| <b>Rear wheel</b>                                                  |         |  |
| installing                                                         | 112     |  |
| removing                                                           | 110     |  |
| <b>Rebound damping</b>                                             |         |  |
| fork, adjusting                                                    | 57      |  |
| shock absorber, adjusting                                          | 53      |  |
| <b>Riding sag</b>                                                  |         |  |
| adjusting                                                          | 56      |  |
| <b>Rubber grip</b>                                                 |         |  |
| checking                                                           | 90      |  |
| <b>S</b>                                                           |         |  |
| <b>Safe operation</b>                                              | 8       |  |
| <b>Seat</b>                                                        |         |  |
| mounting                                                           | 73      |  |
| removing                                                           | 73      |  |
| <b>Service</b>                                                     | 11      |  |
| <b>Service schedule</b>                                            | 49-50   |  |
| <b>Shift lever</b>                                                 | 22      |  |
| basic position, adjusting                                          | 135     |  |
| basic position, checking                                           | 135     |  |
| <b>Shock absorber</b>                                              |         |  |
| installing                                                         | 71      |  |
| removing                                                           | 70      |  |
| riding sag, checking                                               | 54      |  |
| spring preload, adjusting                                          | 55      |  |
| static sag, checking                                               | 54      |  |
| <b>Side cover, right</b>                                           |         |  |
| installing                                                         | 76      |  |
| removing                                                           | 76      |  |
| <b>Side stand</b>                                                  | 23      |  |
| <b>Spare parts</b>                                                 | 11      |  |
| <b>Spoke tension</b>                                               |         |  |
| checking                                                           | 115     |  |
| <b>Start button</b>                                                | 18      |  |
| <b>Starting</b>                                                    | 42      |  |
| <b>Starting power of lithium-ion batteries at low temperatures</b> | 39      |  |
| <b>Steering</b>                                                    |         |  |
| locking                                                            | 24      |  |
| unlocking                                                          | 24      |  |
| <b>Steering head bearing</b>                                       |         |  |
| lubricating                                                        | 68      |  |
| <b>Steering head bearing play</b>                                  |         |  |
| adjusting                                                          | 68      |  |
| checking                                                           | 67      |  |
| <b>Stop button</b>                                                 | 18      |  |
| <b>Storage</b>                                                     | 143-144 |  |
| <b>T</b>                                                           |         |  |
| <b>Technical specifications</b>                                    |         |  |
| capacities                                                         | 153     |  |
| chassis                                                            | 154     |  |
| chassis tightening torques                                         | 156     |  |
| electrical system                                                  | 155     |  |
| engine                                                             | 150     |  |
| engine tightening torques                                          | 151     |  |
| fork                                                               | 155     |  |

|                                                |         |
|------------------------------------------------|---------|
| shock absorber . . . . .                       | 156     |
| tires . . . . .                                | 155     |
| <b>Throttle cable routing</b>                  |         |
| checking . . . . .                             | 89      |
| <b>Throttle grip</b> . . . . .                 | 17      |
| <b>Throttle valve position</b>                 |         |
| programming . . . . .                          | 134     |
| <b>Tire condition</b>                          |         |
| checking . . . . .                             | 114     |
| <b>Tire pressure</b>                           |         |
| checking . . . . .                             | 114     |
| <b>Traction control</b>                        |         |
| activating . . . . .                           | 43      |
| <b>Transporting</b> . . . . .                  | 46      |
| <b>Troubleshooting</b> . . . . .               | 145-147 |
| <b>Turn signal bulb</b>                        |         |
| changing . . . . .                             | 122     |
| <b>Turn signal switch</b> . . . . .            | 18      |
| <b>Type label</b> . . . . .                    | 14      |
| <b>V</b>                                       |         |
| <b>Vehicle identification number</b> . . . . . | 14      |
| <b>View of vehicle</b>                         |         |
| front left . . . . .                           | 12      |
| rear right . . . . .                           | 13      |
| <b>W</b>                                       |         |
| <b>Winter operation</b>                        |         |
| checks and maintenance steps . . . . .         | 142     |
| <b>Work rules</b> . . . . .                    | 9       |





3402719en

30.11.2023



Husqvarna Motorcycles GmbH  
Stallhofnerstraße 3 | 5230 Mattighofen | Austria  
[www.husqvarna-motorcycles.com](http://www.husqvarna-motorcycles.com)



Photo: Mitterbauer/KISKA,  
Husqvarna Motorcycles GmbH