

OWNER'S MANUAL 2024



Svartpilen 401

Art. no. 3402768en



DEAR HUSQVARNA MOTORCYCLES CUSTOMER

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with appropriate care, will bring you pleasure for a long time to come.

We wish you good and safe riding at all times!

Enter the serial numbers of your vehicle below.

Vehicle identification number (📖 p. 14)	Dealer's stamp
Engine number (📖 p. 14)	
Key number (📖 p. 14)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Motorcycles accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2025 Husqvarna Mobility GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

Husqvarna Mobility GmbH applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV SÜD Management Service GmbH

Husqvarna Mobility GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

Svartpilen 401 EU (F1303X5, F1303X6)

Svartpilen 401 B.D. EU (F1303X6L, F1303X7)

Svartpilen 401 JP (F1386X5)

Svartpilen 401 UK (F1322X6)

Svartpilen 401 AR (F1342X5)

Svartpilen 401 ASEAN (F1388X6)

Svartpilen 401 CN (F1387X5)

Svartpilen 401 CO (F1341X5)

Svartpilen 401 PH (F1382X5)

Svartpilen 401 TW (F1381X5)



3402768en

28.01.2025

TABLE OF CONTENTS

1	MEANS OF REPRESENTATION.....	6	6.6	Ignition and steering lock.....	18
1.1	Symbols used	6	6.7	USB socket.....	18
1.2	Formats used.....	6	6.8	Locking the steering	18
2	SAFETY ADVICE	7	6.9	Unlocking the steering	19
2.1	Use definition – intended use	7	6.10	Opening fuel tank filler cap	19
2.2	Misuse.....	7	6.11	Closing the fuel tank filler cap.....	20
2.3	Safety advice	7	6.12	Seat lock	20
2.4	Degrees of risk and symbols	7	6.13	Luggage rack	21
2.5	Tampering warning	8	6.14	Tool set	21
2.6	Safe operation.....	8	6.15	Grab handle	21
2.7	Protective clothing	9	6.16	Passenger foot pegs.....	21
2.8	Work rules.....	9	6.17	Shift lever	22
2.9	Environment.....	9	6.18	Foot brake lever	22
2.10	Owner's Manual.....	9	6.19	Side stand.....	22
3	IMPORTANT NOTES.....	11	7	COMBINATION INSTRUMENT	23
3.1	Manufacturer warranty, implied warranty	11	7.1	Combination instrument	23
3.2	Fuel, auxiliary substances.....	11	7.2	Activation and test	23
3.3	Spare parts, Husqvarna Motorcycles technical accessories	11	7.3	Warnings.....	24
3.4	Service	11	7.4	Indicator lamps	25
3.5	Figures	11	7.5	Display	26
3.6	Customer service.....	11	7.6	Minimum display.....	27
4	VIEW OF VEHICLE	12	7.7	Engine speed	28
4.1	View of vehicle, front left (example)	12	7.8	Shift warning light	28
4.2	View of vehicle, rear right (example).....	13	7.9	Speedometer	28
5	SERIAL NUMBERS.....	14	7.10	Speed limiter display	29
5.1	Vehicle identification number.....	14	7.11	Time	29
5.2	Type label.....	14	7.12	Ride-Mode display.....	29
5.3	Key number.....	14	7.13	ABS display.....	29
5.4	Engine number.....	14	7.14	MTC display (optional)	30
5.5	Fork article number.....	15	7.15	Coolant temperature indicator	30
5.6	Shock absorber article number	15	7.16	Fuel level display.....	30
6	CONTROLS	16	7.17	Heated grip (optional)	31
6.1	Clutch lever	16	7.18	Favorites display	31
6.2	Hand brake lever.....	16	7.19	Quick Selector 1 display	31
6.3	Throttle grip.....	16	7.20	Quick Selector 2 display	32
6.4	Switches on the left side of the handlebar	16	7.21	"Navigation" display (optional).....	32
6.4.1	Light switch	16	7.22	Call display.....	32
6.4.2	Turn signal switch	17	7.23	Remote Control Mode (optional) (RCM)	33
6.4.3	Horn button	17	7.24	Menu	33
6.5	Switches on the right side of the handlebar	17	7.24.1	Motorcycle	33
6.5.1	Emergency OFF switch	17	7.24.2	Ride Mode.....	34
6.5.2	Start button	18	7.24.3	ABS	34
			7.24.4	MTC.....	35
			7.24.5	Easy Shift (optional).....	35
			7.24.6	Grip Heating (optional)	35
			7.24.7	Interface	36
			7.24.8	Bike Info	36
			7.24.9	Bike Info	36
			7.24.10	Warning	36
			7.24.11	Trip Info	37

7.24.12	Trip 1	37	10	SERVICE SCHEDULE.....	64
7.24.13	Trip 2	38	10.1	Additional information.....	64
7.24.14	Speed limiter	38	10.2	Service work	64
7.24.15	Speed limiter State.....	38	11	TUNING THE CHASSIS.....	66
7.24.16	"Navigation (optional)"	39	11.1	Fork/shock absorber.....	66
7.24.17	Volume (optional).....	39	11.2	Adjusting the compression damping of the fork.....	66
7.24.18	State (optional)	40	11.3	Adjusting the rebound damping of the fork.....	66
7.24.19	Audio	40	11.4	Adjusting the rebound damping of the shock absorber	67
7.24.20	Settings	41	11.5	Adjusting the spring preload of the shock absorber 	67
7.24.21	Favorites	41	11.6	Handlebar position.....	68
7.24.22	Favorites-Anzeige 1-4.....	41	11.7	Adjusting the handlebar position 	68
7.24.23	Quick Selector 1	42	12	SERVICE WORK ON THE CHASSIS.....	70
7.24.24	Quick Selector 2.....	42	12.1	Raising the motorcycle with rear lifting gear	70
7.24.25	Connectivity	42	12.2	Removing the rear of the motorcycle from the lifting gear	70
7.24.26	Bluetooth.....	43	12.3	Lifting the motorcycle with the front lifting gear	70
7.24.27	Pairing a cellphone.....	43	12.4	Taking the motorcycle off the front lifting gear	71
7.24.28	Pairing a headset.....	44	12.5	Cleaning the dust boots of the fork legs	72
7.24.29	Headset Type	45	12.6	Removing the passenger seat	72
7.24.30	Shift Light	46	12.7	Mounting the passenger seat	73
7.24.31	Shift Light State.....	46	12.8	Removing the front rider's seat	73
7.24.32	RPM1	46	12.9	Mounting the front rider's seat	73
7.24.33	RPM2.....	47	12.10	Removing the luggage rack	74
7.24.34	Setting the time and date	47	12.11	Installing the luggage rack.....	74
7.24.35	Clock Format.....	48	12.12	Removing the left side cover 	74
7.24.36	Date Format	48	12.13	Installing the left side cover 	75
7.24.37	Units	49	12.14	Removing the right side cover 	75
7.24.38	Distance	49	12.15	Installing the right side cover 	75
7.24.39	Temperature.....	49	12.16	Removing the right radiator spoiler 	76
7.24.40	Consumption	50	12.17	Mounting the right radiator spoiler 	76
7.24.41	Heating (optional)	50	12.18	Removing the front spoiler.....	76
7.24.42	Language.....	50	12.19	Fitting front spoiler.....	77
7.24.43	Extra Functions	51	12.20	Checking for chain dirt accumulation	77
8	PREPARING FOR USE.....	52	12.21	Cleaning the chain	77
8.1	Advice on preparing for first use.....	52	12.22	Checking the chain tension	78
8.2	Running in the engine	53	12.23	Adjusting the chain tension.....	79
8.3	Loading the vehicle.....	53	12.24	Checking the chain, rear sprocket, and engine sprocket	80
9	RIDING INSTRUCTIONS	54	12.25	Adjusting the basic position of the clutch lever.....	81
9.1	Checks and maintenance measures when preparing for use.....	54			
9.2	Starting	54			
9.3	Starting off	55			
9.4	Easy Shift	56			
9.5	Shifting, riding.....	56			
9.6	Applying the brakes	59			
9.7	Stopping, parking	60			
9.8	Transport.....	61			
9.9	Towing in the event of a breakdown	61			
9.10	Refueling	62			

TABLE OF CONTENTS

13	BRAKE SYSTEM	82	17.2	Motorcycle traction control (optional) (Cornering MTC).....	115
13.1	Anti-lock braking system (ABS)	82	17.3	Checking the clutch lever play.....	116
13.2	Adjusting the basic position of the hand brake lever	83	17.4	Adjusting play in the clutch lever 	116
13.3	Checking the brake discs	83	17.5	Checking the basic position of the shift lever.....	117
13.4	Checking the front brake fluid level	84	17.6	Adjusting the basic position of the shift lever.....	117
13.5	Adding front brake fluid 	84	18	SERVICE WORK ON THE ENGINE	118
13.6	Checking that the brake linings of the front brake are secured	85	18.1	Checking the engine oil level	118
13.7	Checking the rear brake fluid level	86	18.2	Changing the engine oil and oil filter, cleaning the oil screens 	118
13.8	Adding rear brake fluid 	86	18.3	Adding engine oil	120
13.9	Checking that the brake linings of the rear brake are secured.....	88	19	CLEANING, CARE	121
14	WHEELS, TIRES	90	19.1	Cleaning the motorcycle.....	121
14.1	Removing the front wheel 	90	19.2	Checks and maintenance steps for winter operation	122
14.2	Installing the front wheel 	90	20	STORAGE.....	124
14.3	Removing the rear wheel 	92	20.1	Storage	124
14.4	Installing the rear wheel 	92	20.2	Preparing for use after storage.....	125
14.5	Checking the rear hub damping rubber pieces 	94	21	TROUBLESHOOTING	126
14.6	Checking the tire condition.....	94	22	TECHNICAL SPECIFICATIONS.....	128
14.7	Checking tire pressure.....	96	22.1	Engine	128
14.8	Checking the spoke tension	96	22.2	Engine tightening torques.....	129
14.9	Using tire repair spray.....	97	22.3	Capacities	131
15	ELECTRICAL SYSTEM.....	98	22.3.1	Engine oil.....	131
15.1	Removing the 12-V battery 	98	22.3.2	Coolant	131
15.2	Installing the 12-V battery 	99	22.3.3	Fuel.....	131
15.3	Charging the 12-V battery 	100	22.4	Chassis	131
15.4	Changing the main fuse	102	22.5	Electrical system.....	132
15.5	Changing the ABS fuses.....	103	22.6	Tires	132
15.6	Changing the fuses of individual electrical power consumers.....	105	22.7	Fork.....	133
15.7	Checking the headlight setting	106	22.8	Shock absorber	133
15.8	Adjusting the headlight range	106	22.9	Chassis tightening torques	133
15.9	Diagnostics connector.....	107	23	DECLARATIONS OF CONFORMITY	137
15.10	Front ACC1 and ACC2	107	23.1	Declarations of conformity.....	137
15.11	Rear ACC1 and ACC2	107	23.2	Country-specific declarations of conformity	137
16	COOLING SYSTEM.....	108	24	SUBSTANCES.....	138
16.1	Cooling system	108	25	AUXILIARY SUBSTANCES.....	140
16.2	Checking the antifreeze and coolant level.....	108	26	STANDARDS	141
16.3	Checking the coolant level.....	110	27	INDEX OF SPECIAL TERMS	142
16.4	Draining the coolant 	111	28	LIST OF ABBREVIATIONS	143
16.5	Filling/bleeding the cooling system 	111			
16.6	Changing the coolant 	113			
17	TUNING THE ENGINE.....	115			
17.1	Ride Mode	115			

29	LIST OF SYMBOLS	144
29.1	Red symbols	144
29.2	Yellow and orange symbols.....	144
29.3	Green and blue symbols.....	144
	INDEX	145

1 MEANS OF REPRESENTATION

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g., of a work step or a function).



Indicates an unexpected reaction (e.g., of a work step or a function).



Indicates work that requires expert knowledge and technical understanding.
In the interests of your own safety, have these jobs performed by an authorized Husqvarna Motorcycles workshop. Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates the end of an activity, including potential reworking.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name

Indicates a proprietary name.

Name[®]

Indicates a protected name.

Brand[™]

Indicates a brand available on the open market.

Underlined terms

Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Use definition – intended use

This vehicle has been designed and built to withstand the normal stresses and strains of road use.
This vehicle is not suitable for use on race tracks or offroad.



Info

This vehicle is only authorized for operation on public roads in its homologated version.

2.2 Misuse

The vehicle must only be used as intended.
Dangers can arise for people, property and the environment through use not as intended.
Any use of the vehicle beyond the intended and defined use constitutes misuse.
Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described.
Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to drive the vehicle on public roads.

Have malfunctions that impair safety immediately eliminated by an authorized Husqvarna Motorcycles workshop.

Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, Husqvarna Motorcycles recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with transponder key) or the motor must be at a standstill (models without ignition lock or transponder key). Special tools are necessary for certain tasks. If these special tools are not included in the scope of supply of the vehicle, the special tools can be ordered using the specified article number. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ± 5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screw connections, a thread locker (e.g., **Loctite**®) is required. Observe the manufacturer's instructions.

If a thread locker (e.g. **Precote**®) has already been applied to a new part, do not apply any additional thread locker.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

Ensure that the work area is clean and clean components before disassembly if necessary. Penetrating dirt can lead to increased wear and consequential damage.

After completing a repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, be environmentally aware, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, used components, and, if applicable, the end-of-life motorcycle, comply with the respective laws and regulations of the respective country.

2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way to find out how best to customize the vehicle for your own use and how you can protect yourself from injury.



Tip

Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized Husqvarna Motorcycles dealer.

2 SAFETY ADVICE

The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.

The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate.

The Owner's Manual is also available for download from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website. A printed copy can also be ordered from your authorized Husqvarna Motorcycles dealer.

International Husqvarna Mobility website: www.husqvarna-motorcycles.com

3.1 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must be carried out in an authorized Husqvarna Motorcycles workshop only and confirmed in the electronic proof of service, as otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.2 Fuel, auxiliary substances



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

3.3 Spare parts, Husqvarna Motorcycles technical accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Motorcycles and have them installed by an authorized Husqvarna Motorcycles workshop. Husqvarna Motorcycles accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

The current Husqvarna Motorcycles technical accessories for your vehicle can be found on the Husqvarna Motorcycles website.

International Husqvarna Mobility website: www.husqvarna-motorcycles.com

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle in difficult conditions, such as in rain, dusty or sandy environments, high heat or with a heavy payload, can lead to significantly increased wear on components such as the drivetrain, air filter, brake systems or suspension components. It may therefore be necessary to check parts before each journey or to replace parts before the next service interval is reached.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized Husqvarna Motorcycles dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Motorcycles.

A list of authorized Husqvarna Motorcycles dealers can be found on the Husqvarna Motorcycles website.

International Husqvarna Mobility website: www.husqvarna-motorcycles.com


4 VIEW OF VEHICLE

4.1 View of vehicle, front left (example)



- ❶ Combination instrument
- ❷ High beam flasher button
- ❷ Light switch (📖 p. 16)
- ❷ Turn signal switch (📖 p. 17)
- ❷ Horn button (📖 p. 17)
- ❸ Clutch lever (📖 p. 16)
- ❹ Front rider's seat
- ❺ Passenger seat
- ❻ Passenger foot pegs (📖 p. 21)
- ❼ Seat lock (📖 p. 20)
- ❽ Shift lever (📖 p. 22)
- ❾ Engine number (📖 p. 14)

4.2 View of vehicle, rear right (example)

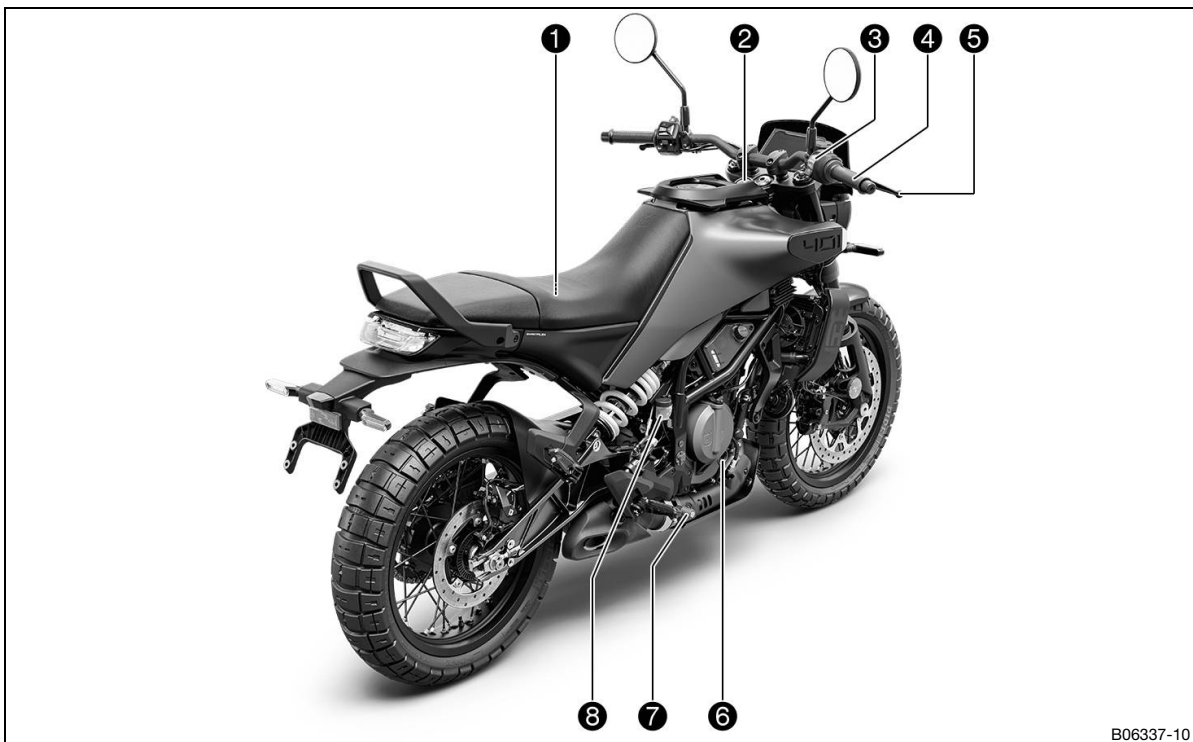


B06337-10

- ❶ Tool set (📖 p. 21)
- ❷ Ignition and steering lock (📖 p. 18)
- ❸ Emergency OFF switch (📖 p. 17)
- ❹ Start button (📖 p. 18)
- ❺ Throttle grip (📖 p. 16)
- ❻ Hand brake lever (📖 p. 16)
- ❼ Level viewer, engine oil
- ❼ Foot brake lever (📖 p. 22)
- ❽ Brake fluid compensating tank


5 SERIAL NUMBERS

5.1 Vehicle identification number

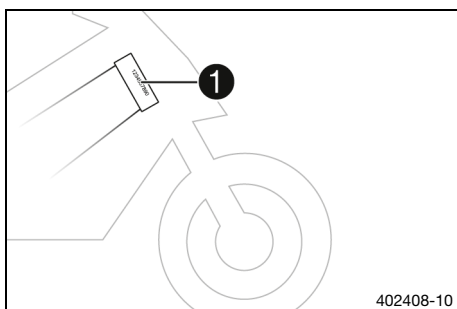


The vehicle identification number ❶ is stamped on the right side of the steering head.

5.2 Type label

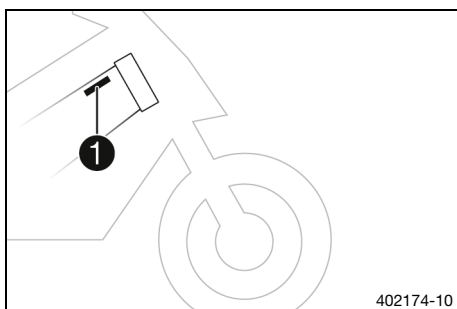

The type label ❶ is on the right of the frame.

5.3 Key number

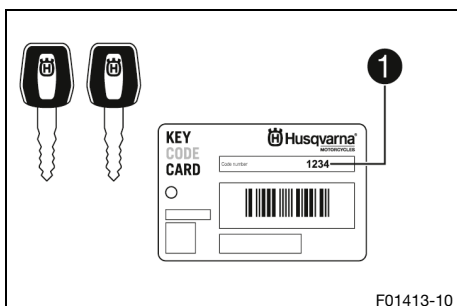


The key number ❶ can be found on the **KEYCODECARD**.

i Info

The key number is needed to order a replacement key. Keep the **KEYCODECARD** in a safe place.


If at least one ignition key is still available, a spare key can be produced. If an ignition key is no longer present, the entire lock system must be replaced.

5.4 Engine number

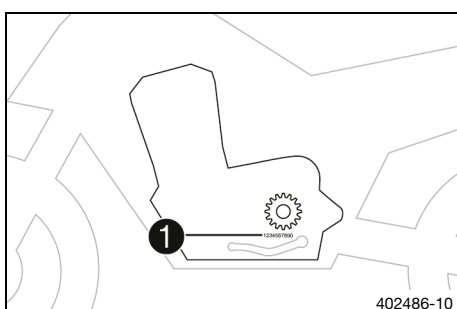


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

5.5 Fork article number

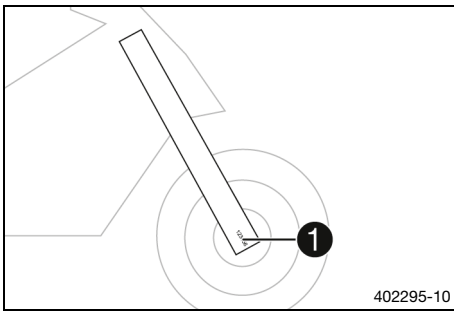

The fork article number **1** is stamped on the inside of the axle clamp.


5.6 Shock absorber article number

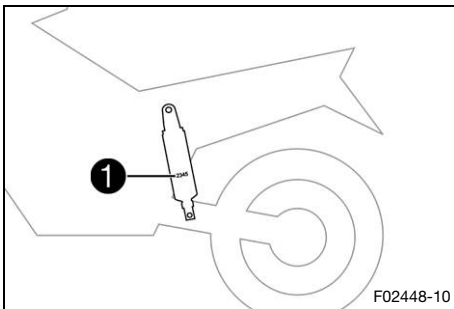

Shock absorber article number **1** is on the left side of the shock absorber.


6 CONTROLS

6.1 Clutch lever

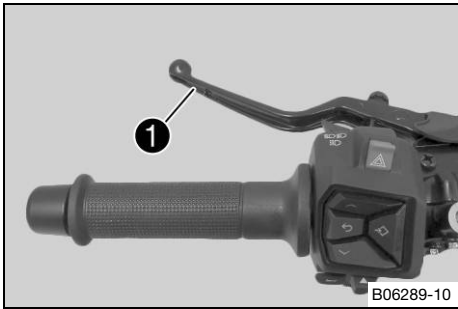


The clutch lever 1 is fitted on the left side of the handlebar.

6.2 Hand brake lever

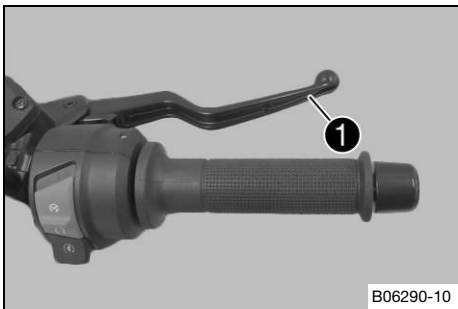

The hand brake lever 1 is fitted on the right side of the handlebar.
The front brake is engaged using the hand brake lever.


6.3 Throttle grip

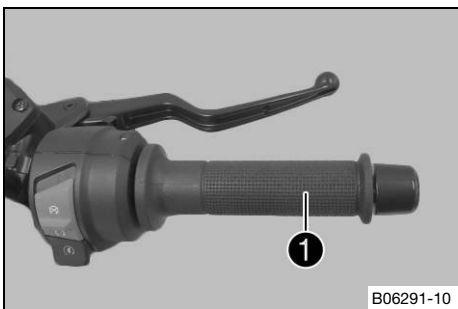

The throttle grip 1 is fitted on the right side of the handlebar.

6.4 Switches on the left side of the handlebar

6.4.1 Light switch

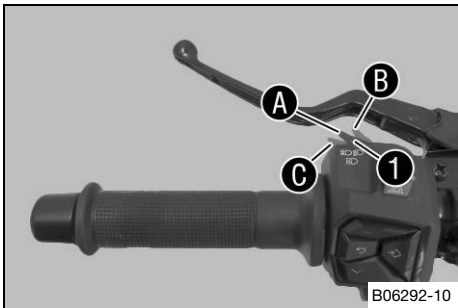


Light switch 1 is fitted on the left side of the handlebar.

Possible states

	Low beam on – Light switch in position A. In this position, the low beam and the tail light are switched on.
	High beam on – Push the light switch to position B. In this position, the high beam and the tail light are switched on.
	Headlight flasher – Push the light switch into position C.

6.4.2 Turn signal switch

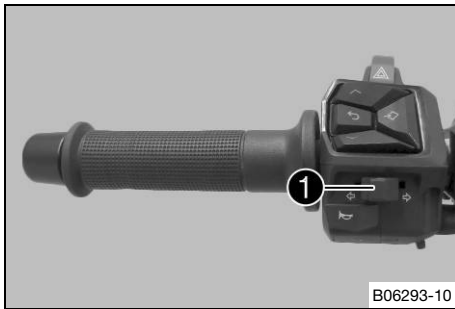

Turn signal switch **1** is fitted on the left side of the handlebar.

Possible states

	Turn signal off
	Left turn signal, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use.
	Right turn signal, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use.



Info

An automatic turn signal switch-off function (**ATIR**) is available as a software feature.


The **ATIR** function uses a time and distance counter.

If the turn signal has been on for at least 10 seconds and 150 meters of riding distance, the turn signal is switched off.

If the vehicle is stationary, both counters are stopped.

If the turn signal switch is reactivated, both counters are reset.

6.4.3 Horn button

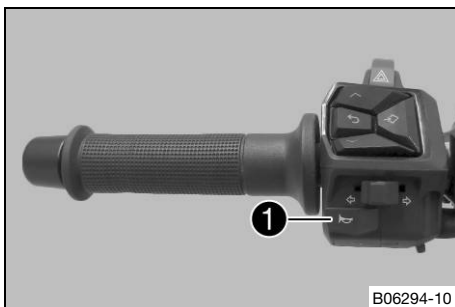


Horn button **1** is fitted on the left side of the handlebar.

Possible states

- The horn button is in the basic position
- The horn button is pressed – The horn is operated in this position.

6.5 Switches on the right side of the handlebar

6.5.1 Emergency OFF switch

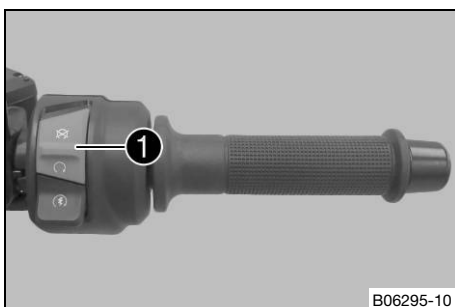


The emergency OFF switch **1** is fitted on the right side of the handlebar.

Possible states

	Emergency OFF switch off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine cannot be started.
	Emergency OFF switch on – This position is required for operation; the ignition circuit is closed.

6.5.2 Start button

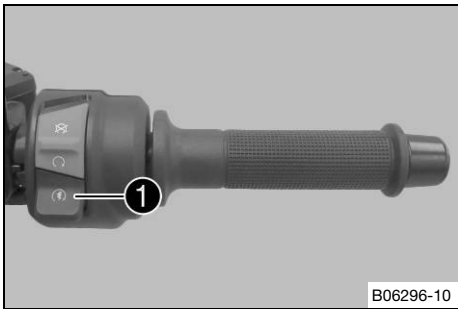


Start button ❶ is fitted on the right side of the handlebar.

Possible states

- The start button ❸ is in the basic position
- The start button ❸ is pressed – In this position, the starter motor is actuated.

6.6 Ignition and steering lock

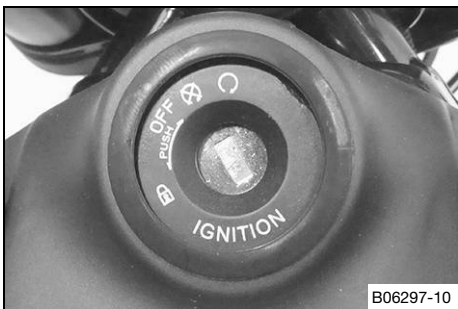


The ignition and steering lock is located in front of the upper triple clamp.

Possible states

	Ignition off OFF – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.
	Ignition on – In this position, the ignition circuit is closed and the engine can be started.
	Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.

6.7 USB socket

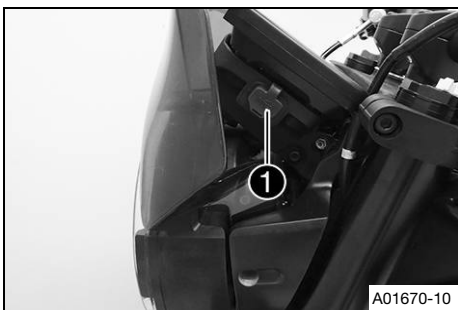


USB socket ❶ for the power supply to external devices is mounted on the left side of the mask support.
The USB socket is activated when the ignition is switched on.

USB socket	
Voltage	5 V
Maximum current consumption	2.1 A

6.8 Locking the steering


Note
Danger of damage The parked vehicle can roll away or fall over.
– Park the vehicle on a firm and level surface.

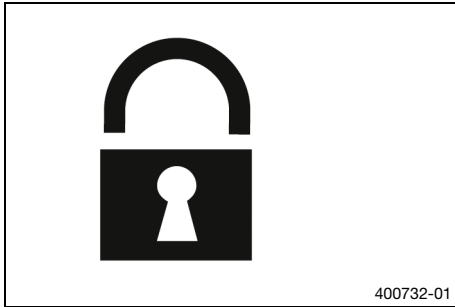

- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the ignition key into the ignition and steering lock, press in, and turn to the left. Remove the ignition key.
- ✓ Steering is no longer possible.



6.9 Unlocking the steering

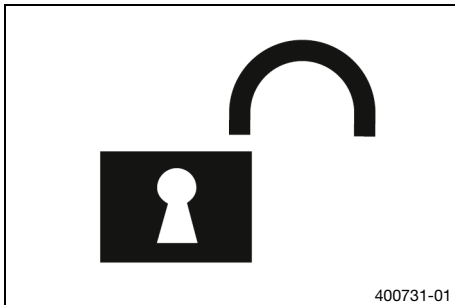

- Insert the ignition key into the ignition and steering lock, press in, and turn to the right. Remove the ignition key.
- ✓ The handlebar can now be moved again.



6.10 Opening fuel tank filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.

 


Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

6 CONTROLS



- Lift cover ❶ of the fuel tank filler cap and insert the ignition key into the lock.


Note

Danger of damage The ignition key may break if overloaded.

Damaged ignition keys must be replaced.

- Push down on the fuel tank filler cap to take pressure off the ignition key.
- Turn the ignition key 90° clockwise.
- Lift the fuel tank filler cap.

6.11 Closing the fuel tank filler cap

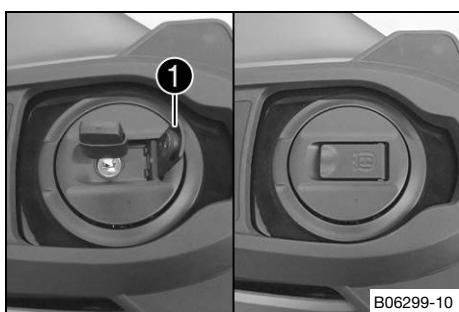


Warning

Fire hazard Fuel is highly flammable and a health hazard.


- Check that the fuel tank filler cap is locked correctly after closing.
 - Change your clothing if fuel spills on them.
 - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
-
- Fold down the fuel tank filler cap.
 - Turn the ignition key 90° clockwise.
 - Push down the fuel tank filler cap and turn the ignition key counterclockwise until the fuel tank filler cap lock engages.
 - Remove ignition key and close cover ❶.

6.12 Seat lock

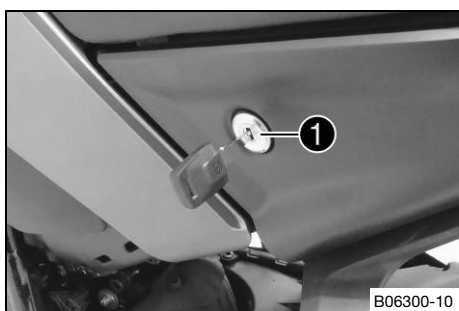

The seat lock ❶ is located at the rear left below the seat. The seat lock can be unlocked using the ignition key.


6.13 Luggage rack

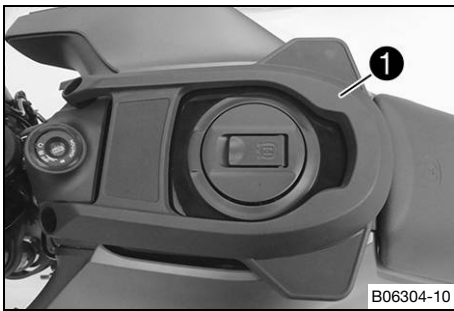

The luggage rack **1** is located on the fuel tank.
The luggage rack must not be loaded with more than the specified weight.

Maximum permissible luggage rack load	5 kg (11 lb.)
---------------------------------------	---------------

6.14 Tool set

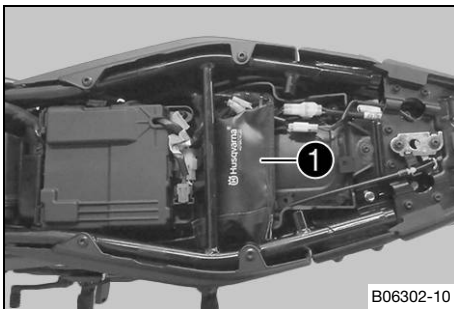


The tool set **1** is located under the front rider's seat.

6.15 Grab handle



The grab handle **1** is used for maneuvering the motorcycle.
If you carry a passenger, the passenger can hold onto the grab handles during the trip.

6.16 Passenger foot pegs

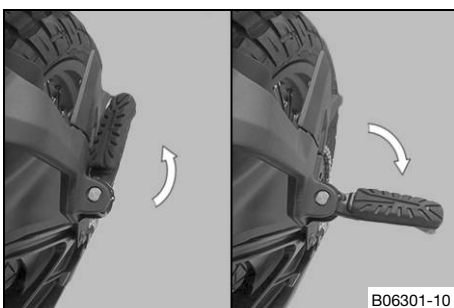


The passenger foot pegs can be folded up and down.


Possible states

- Passenger foot pegs folded up – For operation without a passenger.
- Passenger foot pegs folded down – For operation with a passenger.

6.17 Shift lever

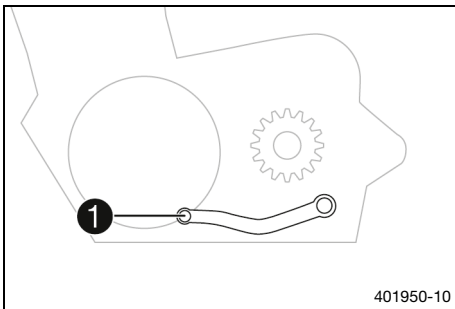


Shift lever **1** is mounted on the left side of the engine.

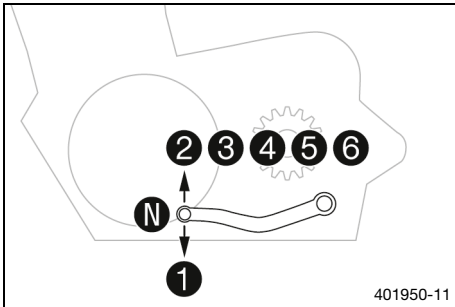

The gear positions can be seen in the photograph.
The neutral or idle position is between the first and second gears.

6.18 Foot brake lever

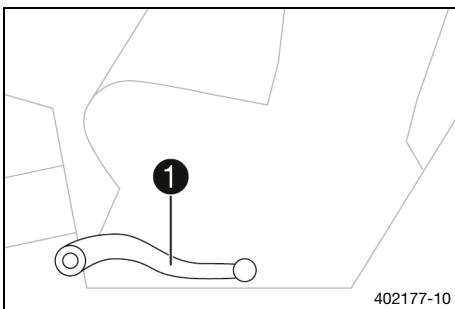

Foot brake lever **1** is located in front of the right footrest.




Info

The basic position of the foot brake lever is set at the factory and must not be changed.

The rear brake is engaged with the foot brake lever.

6.19 Side stand

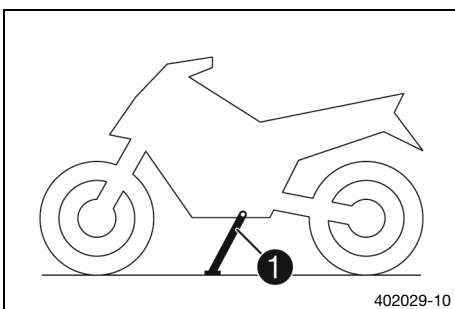

The side stand **1** is located on the left of the vehicle.
The side stand is used for parking the motorcycle.



Info

The side stand must be folded up during motorcycle use.
The side stand is coupled with the safety starting system; follow the riding instructions.

Possible states

- Side stand folded out – The vehicle can be supported on the side stand. The safety starting system is active.
- Side stand folded in – This position is mandatory when riding the motorcycle. The safety starting system is inactive.

7.1 Combination instrument



The combination instrument is attached in front of the handlebar.

The combination instrument is divided into two function areas.

① indicator lamps

Display ②



Caution

Danger of burns Parts of the combination instrument become hot in certain situations.

In particular, the display gets hot in ambient temperatures above 55 °C (131 °F), during extended stationary periods, for example, at a traffic light, or in direct sunlight.

- Do not touch the combination instrument with bare hands in the situations referred to.
- Where appropriate protective clothing.
- If you have been burned, hold the area affected under lukewarm water immediately.

7.2 Activation and test



Activation

The combination instrument is activated when the ignition is switched on.



Info

The brightness of the displays is controlled by an ambient light sensor in the combination instrument.

Test

The welcome text appears on the display and all indicator lamps are briefly activated for a function check.

i


Info

The malfunction indicator lamp  always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp  lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized Husqvarna Motorcycles workshop.

The oil pressure warning lamp  always lights up as long as the engine is not running. If the engine is running and the oil pressure warning lamp  lights up, stop immediately (taking care not to endanger yourself or other road users in the process) and switch off the engine.

The ABS warning lamp  and TC indicator lamp  light up until a speed of approx. 6 km/h (approx. 4 mph) or faster has been reached.

7.3 Warnings

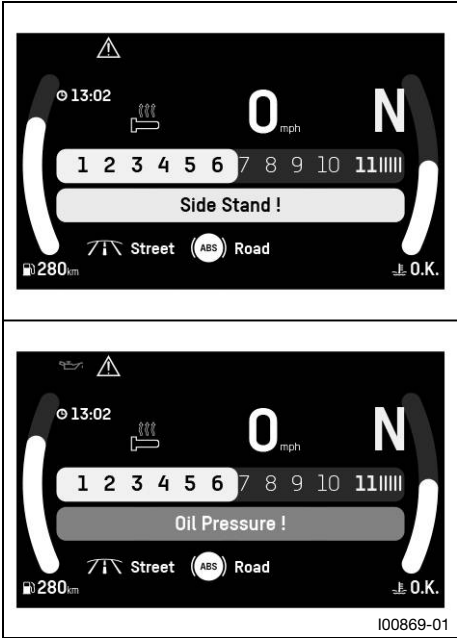

Warnings appear in the middle of the display; these are marked yellow or red depending on their relevance. Yellow warnings indicate a malfunction or information which requires prompt intervention or an adjustment to the riding style. Red warnings indicate a malfunction or information which requires immediate intervention.


i

Info

Warnings can be hidden by pressing any button. All the existing warnings are displayed in the **Warning** submenu until they are no longer active.

7.4

Indicator lamps

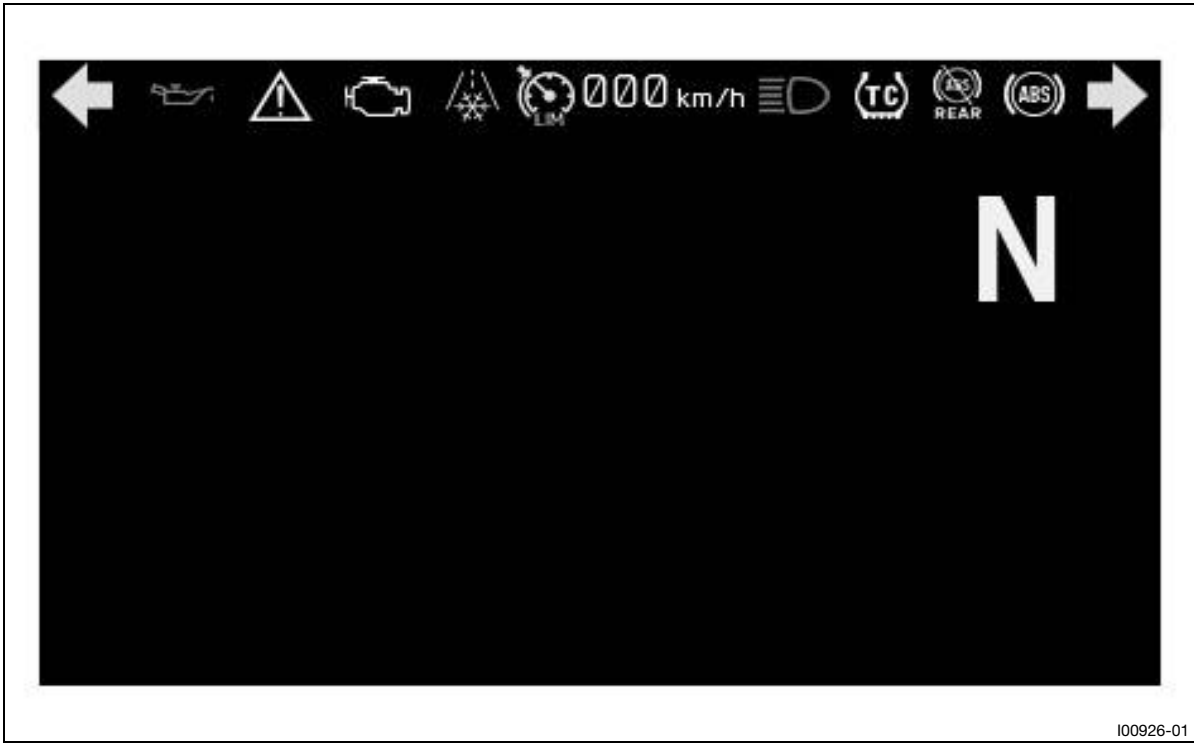

I00926-01

The indicator lamps offer additional information about the operating state of the motorcycle.
When the ignition is switched on, all indicator lamps light up briefly, except for the TC indicator lamp .

i Info

The malfunction indicator lamp  always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp  lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized Husqvarna Motorcycles workshop.

The oil pressure warning lamp  always lights up as long as the engine is not running. If the engine is running and the oil pressure warning lamp  lights up, stop immediately (taking care not to endanger yourself or other road users in the process) and switch off the engine.

The ABS warning lamp  and TC indicator lamp  light up until a speed of approx. 6 km/h (approx. 4 mph) or faster has been reached.


Possible states

	The turn signal indicator lamp flashes green with a steady rhythmic flash – The turn signal is switched on.
	The malfunction indicator lamp lights up yellow – The <u>OBD</u> has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized Husqvarna Motorcycles workshop.
	ABS warning lamp lights up yellow – Status or error messages relating to <u>ABS</u> .
	The ABS rear warning lamp lights up yellow – <u>ABS</u> is deactivated on the rear wheel.
	The idle indicator lamp lights up green – The transmission is in neutral.

7 COMBINATION INSTRUMENT

	TC indicator lamp lights up/flashs yellow – MTC (p. 115) is not enabled or is currently intervening. The TC indicator lamp also lights up if a malfunction is detected. Contact an authorized Husqvarna Motorcycles workshop. The TC indicator lamp flashes if MTC makes an active intervention.
	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.
	The alarm system indicator lamp lights up or flashes red – Status or error message of the alarm system.
	The speed limiter indicator lamp lights up yellow – The speed limiter function is switched on, but the speed limiter is not active.
	The speed limiter indicator lamp lights up green – The speed limiter function is switched on and the speed limiter is active.
	The high beam indicator lamp lights up blue – The high beam is switched on.
	The general warning lamp lights up yellow – A note/warning note on operating safety has been detected. This is also shown in the display.


7.5 Display

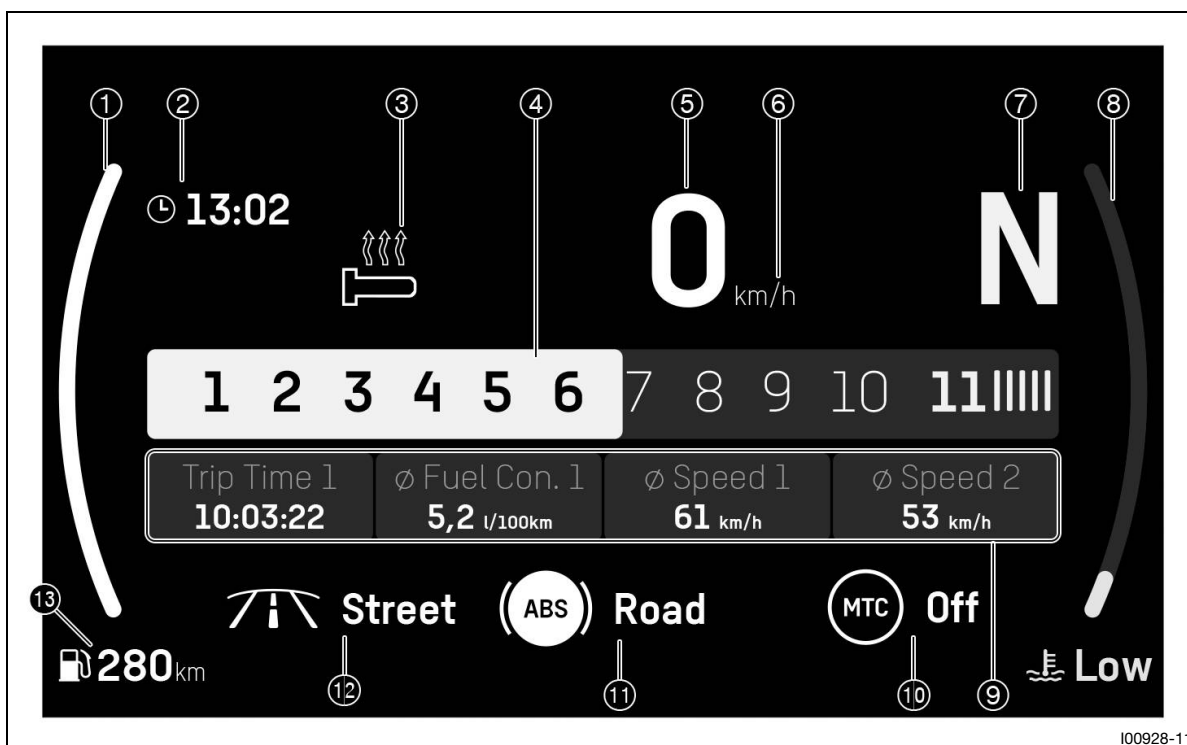

- 1 Fuel level display (p. 30)
- 2 Time (p. 29)
- 3 Heated grip (optional) (p. 31)
- 4 Engine speed (p. 28)
- 4 Shift warning light (p. 28)
The shift warning light is integrated in the tachometer display.
- 5 Speedometer (p. 28)
- 6 Unit for the speedometer

- 7 Gear display
- 8 Coolant temperature indicator (p. 30)
- 9 **Favorites** display (p. 31)
- 10 **MTC** display (optional) (p. 30)
- 11 **ABS** display (p. 29)
- 12 **Ride-Mode** display (p. 29)
- 13 Fuel range display

7.6 Minimum display

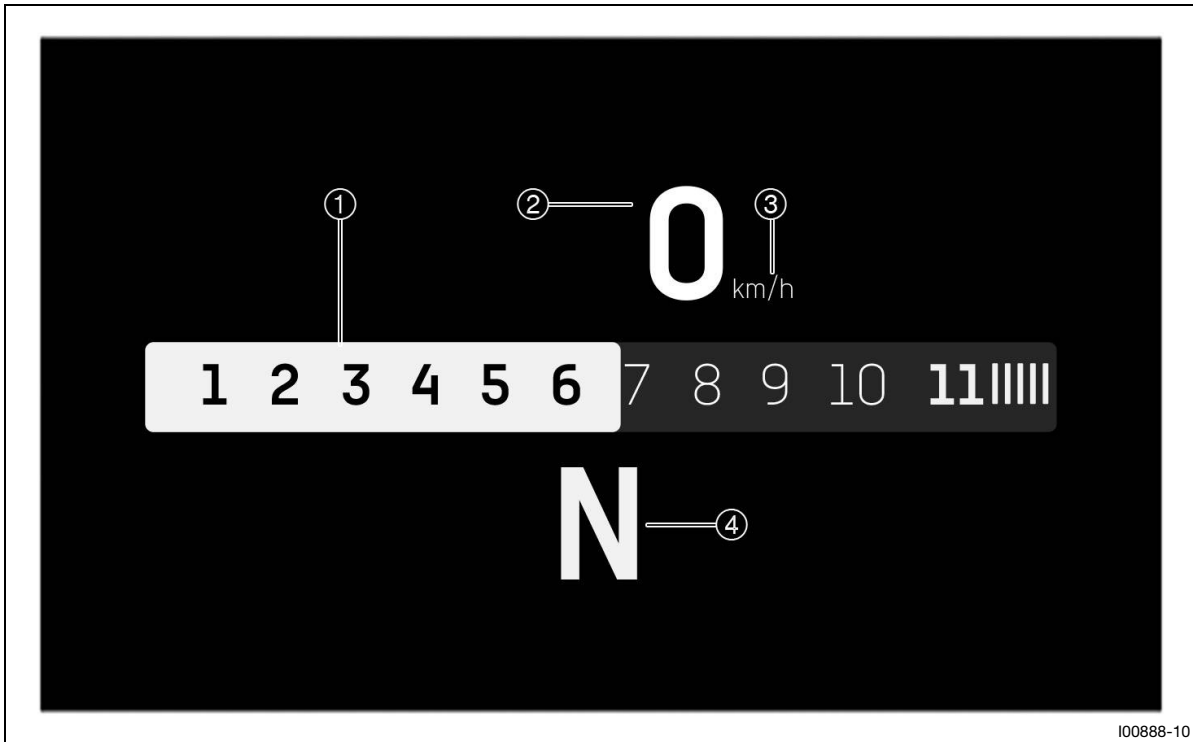


Info

The figure shows the start screen of the combination instrument in active mode **Minimal**. If the menu is open, the speed and the selected gear are still displayed.


- 1 Engine speed (p. 28)
- 1 Shift warning light (p. 28)
- 2 Speedometer (p. 28)
- 3 Unit for the speedometer
- 4 Gear display

7.7 Engine speed

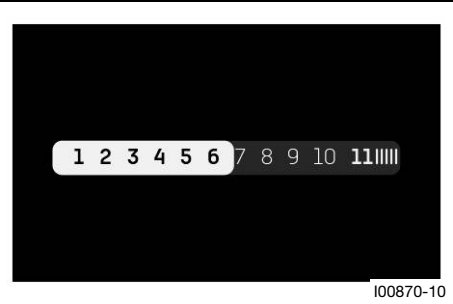

The engine speed is displayed in revolutions per minute.

7.8 Shift warning light

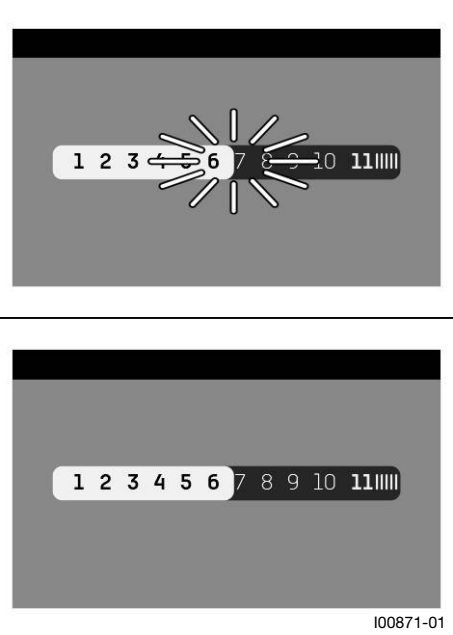


The shift warning light is integrated in the display. In the **Shift Light** submenu, the engine speed for the shift warning light can be set. The shift warning light is always active during the running-in time (up to 1000 km / 621 mi). The shift warning light can only be deactivated, and the values for **RPM1** and **RPM2** can only be adjusted after this. At **RPM1**, the display flashes and at **RPM2**, the entire display is continuously red/orange.

i Info
After the first service, the shift warning light is deactivated when the engine is warm and in sixth-gear.

Coolant temperature	≤ 35 °C (≤ 95 °F)
ODO	< 1,000 km (< 620 mi)
The shift warning light always flashes at	6,500 rpm


Coolant temperature	> 35 °C (> 95 °F)
ODO	> 1,000 km (> 620 mi)
RPM1 shift warning light	flashes
RPM2 shift warning light	Lights up continuously

7.9 Speedometer

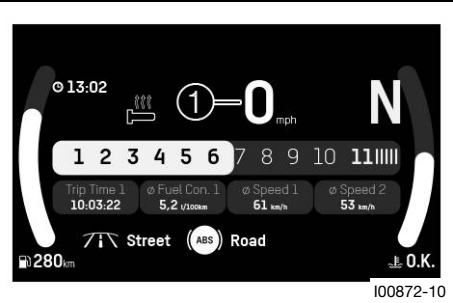

The speed is shown in area ① of the display. Speed is shown in kilometers per hour **km/h** or in miles per hour **mph**. The unit of speed can be configured in the **Distance** submenu.

7.10 Speed limiter display

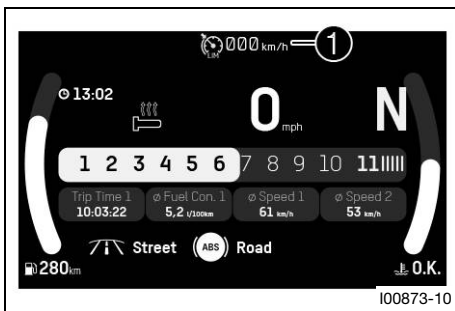

The operating status of the activated speed limiter is shown in display area ①.

The speed limiter is controlled using the combination switch.




Info

If the speed limiter function is switched on but the speed limiter is not active, the speed limiter indicator lamp lights up yellow.

When the speed limiter function is switched on and the speed limiter is active, the speed limiter indicator lamp lights up green.

7.11 Time

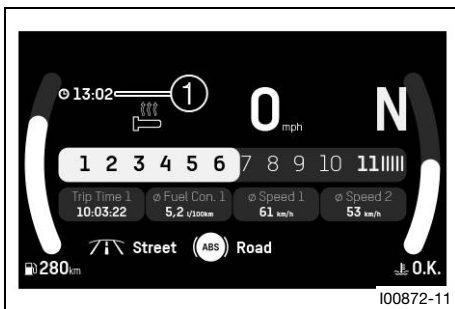

The time is shown in area ① of the display.

The time can be displayed in 24-hour format or 12-hour format in all languages.


The format of the time can be configured in the **Clock Format** menu.



Info

The time must be reset if the 12-V battery was disconnected from the vehicle or the fuse was removed.


7.12 Ride-Mode display

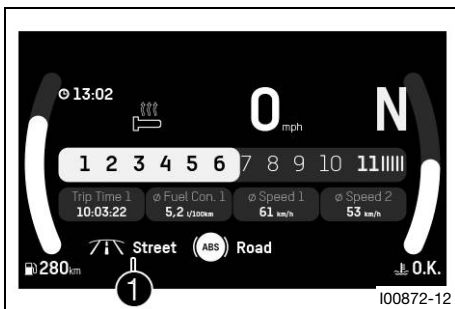

The **Ride Mode** (p. 115) setting is shown in area ① of the display.

The drive mode can be configured in the **Ride Mode** submenu.

7.13 ABS display

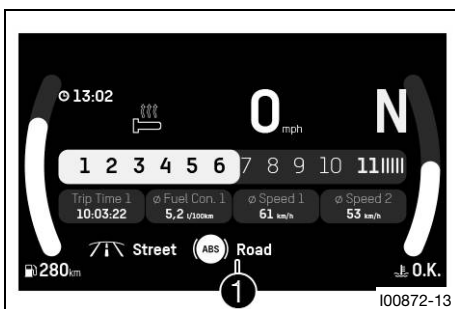

The ABS mode setting is shown in the ① area of the display. ABS can be configured separately in the **ABS** submenu.




Info

When the ABS mode **Road** is active, ABS controls both wheels.


When the **Supernoto** ABS mode is active, ABS only controls the front wheel. The rear wheel is not controlled by ABS and may lock during braking maneuvers.

7.14 MTC display (optional)

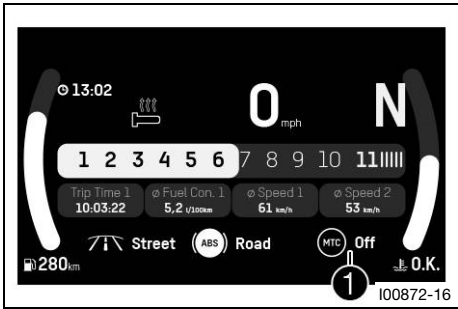

The **1** area of the display indicates whether **MTC** (p. 115) (optional) is switched on or off.
The motorcycle traction control can be switched on or off in the **MTC** submenu (optional).

7.15 Coolant temperature indicator

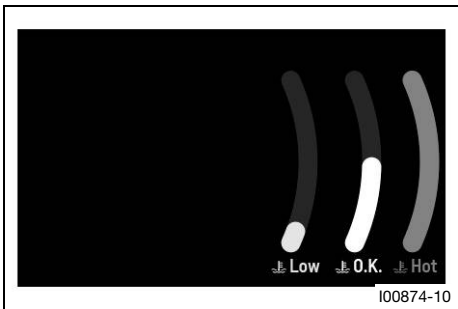


The coolant temperature is displayed by a symbol. The symbol changes between **LOW**, **OK** and **HOT** depending on the temperature.

- Note**
Engine failure Overheating damages the engine.
- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
 - Allow the engine and cooling system to cool down.
 - Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.

i Info
If the coolant temperature indicator shows **HOT**, the indicator also starts to flash.
If the cooling system overheats, the maximum engine speed is limited.

- Possible states**
- The engine is cold – The coolant temperature indicator shows **LOW**.
 - Engine warm – The coolant temperature indicator shows **OK**.
 - Engine hot – The coolant temperature indicator shows **HOT**.

7.16 Fuel level display

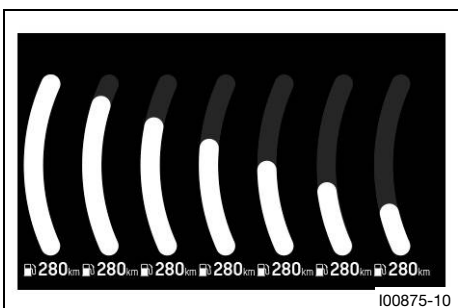

The fuel level display consists of the fuel range display and a bar. The higher the bar is filled, the more fuel is in the fuel tank

i Info


If the fuel level is getting low, the last segment flashes red and the following warning **LOW FUEL** also appears.

The fuel level is displayed with a slight delay to prevent the indicator from constantly moving while riding.


The fuel level display is not updated while the side stand is folded out or the emergency OFF switch is switched off.

Once the side stand is folded up and the emergency OFF switch is switched on, the fuel level display is next updated after 2 minutes.

The fuel level display flashes if the combination instrument does not receive a signal from the fuel level sensor.

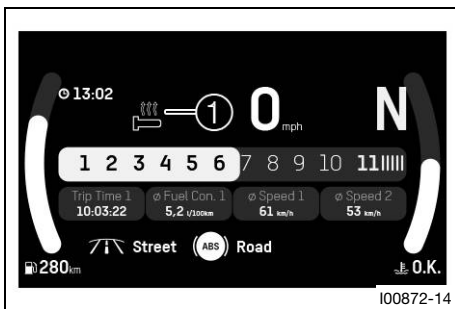
7.17 Heated grip (optional)

The status of the heated grip is shown in area **1** of the display. The heated grip can be configured in the **Heated Grip** menu.

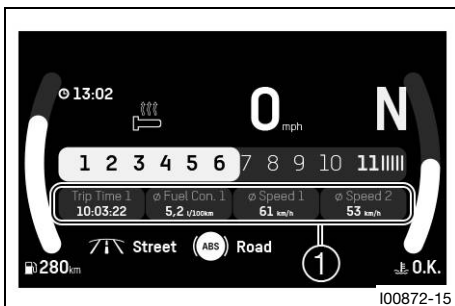7.18 Favorites display

Up to four items of information are displayed in the **Favorites** display **1**.

The **Favorites** indicator can be freely configured in the **Favorites** submenu.

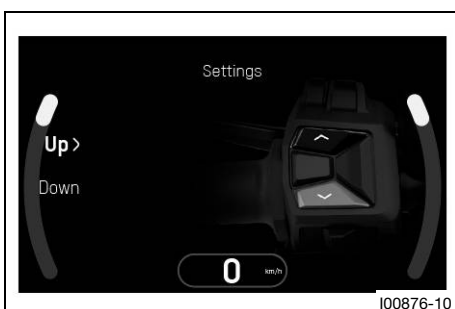7.19 Quick Selector 1 display


When the menu is closed, the **Quick Selector 1** display is opened by pressing the **UP** button.

Press the **BACK** button to close the **Quick Selector 1** display.

i Info

The **Quick Selector 1** display can be configured in the **Settings** menu under **Quick Selector 1**. Any information can be selected.

7.20 Quick Selector 2 display

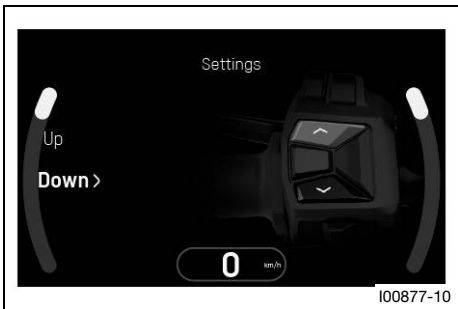

When the menu is closed, the **Quick Selector 2** display is opened by pressing the **DOWN** button.
Press the **BACK** button to close the **Quick Selector 2** display.

Info

The **Quick Selector 2** display can be configured in the **Settings** menu under **Quick Selector 2**. Any information can be selected.


7.21 "Navigation" display (optional)



The **"Navigation"** display (optional) appears when the navigation function is activated.
In the **"Navigation"** display (optional), the direction arrow, the distance from the destination, the estimated arrival time of the cellphone, the distance to the next waypoint, and the street name are displayed.
The **"Navigation"** display (optional) can be switched on or off in the **"Navigation"** submenu (optional).

- Conditions for use:**
- The combination instrument is connected to a suitable phone.
 - The **Ride Husqvarna** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).

7.22 Call display

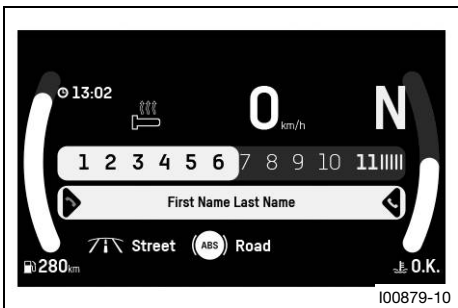

Warning

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

The **Call** indicator appears for incoming or active calls.
Press the **SET** button to accept an incoming call.
Press the **BACK** button to reject an incoming call.
Press the **UP** button to increase the audio volume.
Press the **DOWN** button to reduce the audio volume.


Info

It is not possible to change the audio volume using the combination switch with every cellphone.
The call duration and contact are displayed. Depending on the cellphone settings, the contact is shown by name. You cannot navigate in the menu during an active phone conversation.

Conditions for use:

- The combination instrument is connected to a suitable phone.

7.23 Remote Control Mode (optional) (RCM)

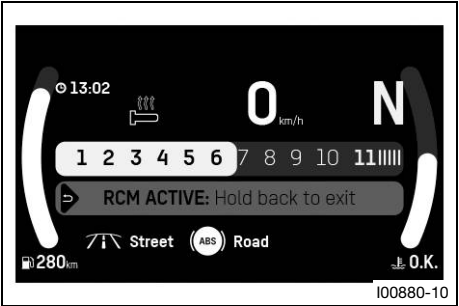

The **Remote Control Mode** indicator (optional) appears when **Remote Control Mode** is activated.

Pressing the **BACK** button for approx. 3 seconds activates the **Remote Control Mode** (optional).

Pressing the **BACK** button for approx. 3 seconds exits the **Remote Control Mode** (optional).

If **Remote Control Mode** is activated (optional), you can navigate using the combination switch in the app on your cellphone.



Info

In **Remote Control Mode** (optional), you can only navigate within the app.


If **Remote Control Mode** (optional) is active, you cannot navigate in the combination instrument.

Remote Control Mode (optional) cannot be activated when a menu is open.

Conditions for use:

- The combination instrument must be connected to a suitable cellphone.
- The **Ride Husqvarna** app (optional) must be installed, connected, and opened on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).

7.24 Menu

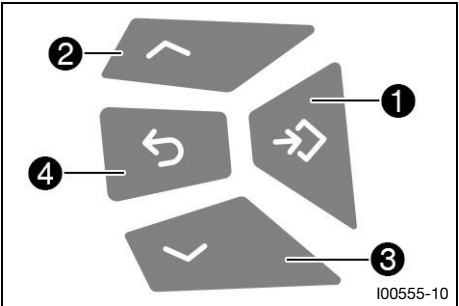


Info

Press **SET** button ① in the start screen to open the menu.

Navigate through the menu using the **UP** button ② or the **DOWN** button ③.

By pressing the **BACK** button ④, the menu structure jumps one step back, or the menu is closed.


7.24.1 Motorcycle

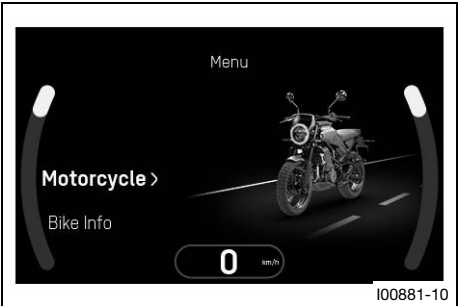

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

The riding mode and ABS mode can be set in **Motorcycle**.

7.24.2 Ride Mode

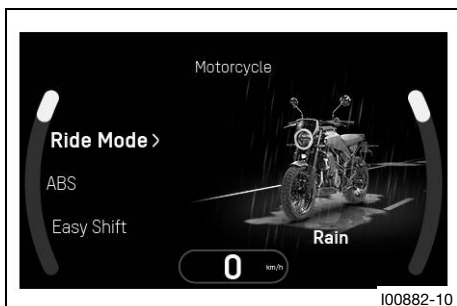

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.



Warning

Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.


The riding modes are each only suitable for certain conditions.

- Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

- Press the **UP** or **DOWN** button until **Ride Mode** is highlighted. Press the **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to select the riding mode, which changes coordinated settings for the engine and motorcycle traction control.
- ✓ **Street** - Homologated performance with balanced response.
- ✓ **Rain** - Homologated performance with soft response for better rideability.

The riding mode of the vehicle can be configured in the **Ride Mode** menu.

7.24.3 ABS

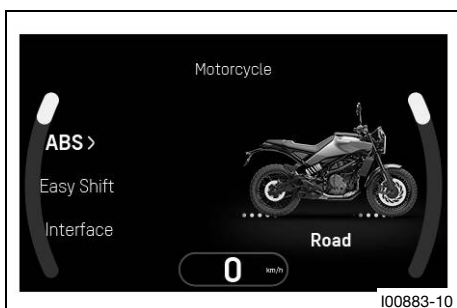

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **ABS** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.



Warning

Danger of accidents An incorrectly selected ABS mode makes control of the vehicle considerably more difficult.

The ABS modes are each only suitable for certain conditions.

- Always select an ABS mode that is compatible with the surface of the ground.

- Press the **SET** button to select the desired ABS mode.


**Info**

The ABS mode can be switched during the journey.

Do not open the throttle during the selection.

When the ABS mode **Road** is active, ABS controls both wheels.

When the **Supermoto** ABS mode is active, ABS only controls the front wheel. The rear wheel is no longer controlled by ABS and may lock during braking maneuvers. The indicator lamp **ABS REAR** lights up.

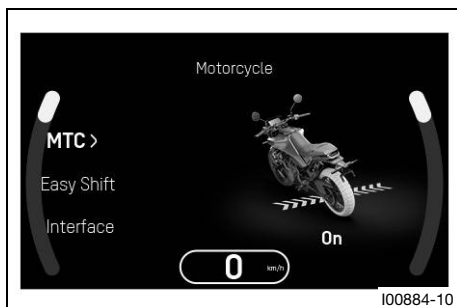7.24.4 MTC**Condition**

- Speed limiter function deactivated.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **MTC** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Switch **MTC** on or off by pressing the **SET** button.


**Info**

Do not open the throttle when switching on or off.


Press the **SET** button briefly when activating the motorcycle traction control.

Hold down the **SET** button when switching off the motorcycle traction control.

After the ignition is switched on, motorcycle traction control is enabled again.

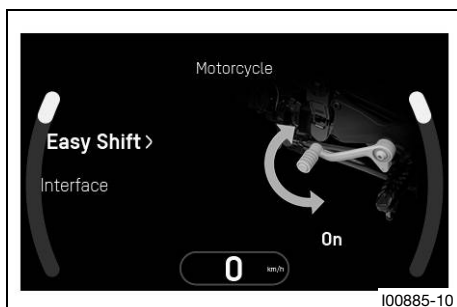7.24.5 Easy Shift (optional)**Condition**

- Model with Easy Shift
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Easy Shift** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Switch Easy Shift on or off by pressing the **SET** button.

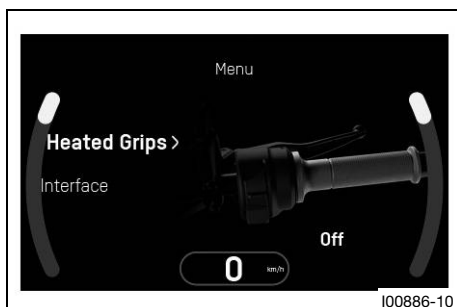
7.24.6 Grip Heating (optional)**Condition**

- Model with heated grip.
- **Heated Grip** menu (optional) activated.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Heating** is highlighted. Press **SET** button to open the menu.

7 COMBINATION INSTRUMENT

- Press the **UP** or **DOWN** button until **Grip Heating** is highlighted. Press **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to select the heating level or to switch the heated grip on or off.

7.24.7 Interface

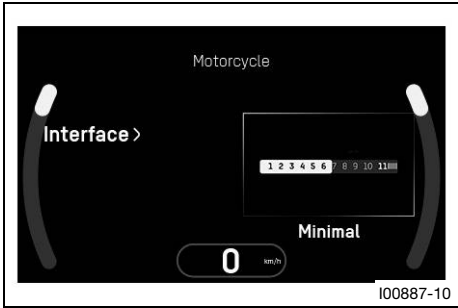

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Interface** is highlighted. Press **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- You can switch between the normal and minimum speedometer view by pressing the **SET** button.

7.24.8 Bike Info



- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press the **SET** button to open the menu.

General information and warnings that may be present can be called up in **Bike Info**.

7.24.9 Bike Info



- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press **SET** button to open the menu.

Water displays the coolant temperature.

Fuel Range indicates the possible fuel range you can cover with the fuel reserve.

Battery indicates the battery voltage.

Odometer displays the total distance covered.

Service displays when the next service is due.

Warnings displays warnings that have occurred until they are no longer active.

7.24.10 Warning



Condition

- Message or warning is present.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Warning** is highlighted. Press the **SET** button to open the submenu.
- Use the **UP** or **DOWN** button to navigate through the warnings.



Info

The warnings that have occurred are saved in the display until they are no longer active.


7.24.11 Trip Info



- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Trip** is highlighted. Press the **SET** button to open the menu.

General information on the odometer, riding time, average fuel consumption, and average speed can be accessed in the menu **Trip**.

7.24.12 Trip 1

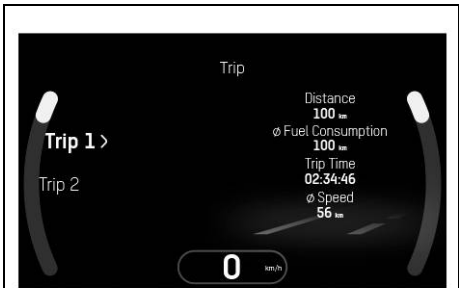

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Trip** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Trip 1** is highlighted. Press the **SET** button to open the submenu.

Information on **Trip 1** can be viewed in the **Trip 1** submenu.



Info


Trip displays the distance since the last reset, e.g. between two refueling stops. **Trip** is running and counts up to 9999.

Trip Time shows the riding time on the basis of **Trip** and runs as soon as a speed signal is received.


ØConsump. indicates the average fuel consumption based on **Trip**.

ØSpeed indicates the average speed based on **Trip** and **Trip Time**.

Press **Reset Trip** to reset all entries in the **Trip 1** menu.

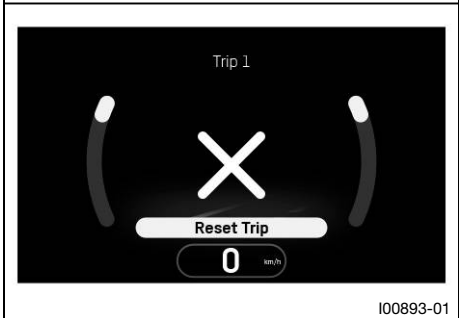

7.24.13 Trip 2

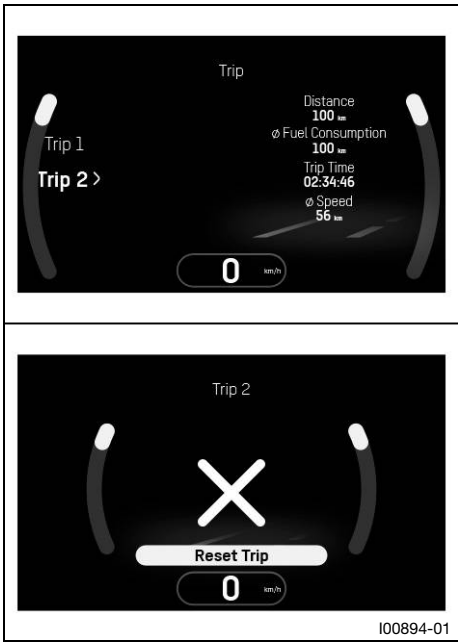

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Trip** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Trip 2** is highlighted. Press the **SET** button to open the submenu.

Information on **Trip 2** can be viewed in the **Trip 2** submenu.

Info

Trip displays the distance since the last reset, e.g. between two refueling stops. **Trip** is running and counts up to **9999**.


Trip Time shows the riding time on the basis of **Trip** and runs as soon as a speed signal is received.

ØConsump. indicates the average fuel consumption based on **Trip**.

ØSpeed indicates the average speed based on **Trip** and **Trip Time**.

Press **Reset Trip** to reset all entries in the **Trip 2** menu.

7.24.14 Speed limiter

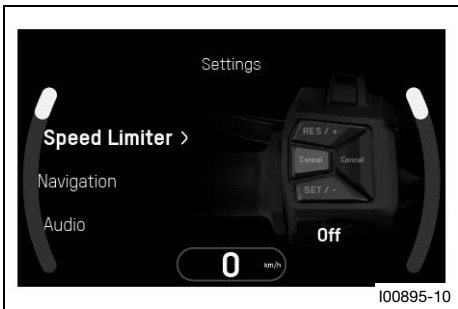

- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until the speed limiter is marked. Press the **SET** button to open the menu.


The speed limiter can be activated and deactivated in the speed limiter menu.

7.24.15 Speed limiter State




- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until the speed limiter is marked. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **State** is highlighted. Press the **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to switch the speed limiter on or off.

7.24.16 "Navigation (optional)"

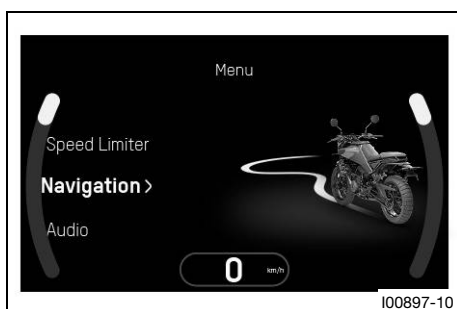**Condition**

- **Bluetooth®** function is activated.
 - The **Ride Husqvarna** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).
 - The combination instrument is connected to a suitable phone.
 - The GPS function is activated on the connected phone.
 - For voice navigation: The combination instrument is connected to a suitable communication system and an appropriate language package has been downloaded in the **Ride Husqvarna "Navigation (optional)"** app (optional).
- Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until "**Navigation**" is marked. Press the **SET** button to open the submenu.

7.24.17 Volume (optional)

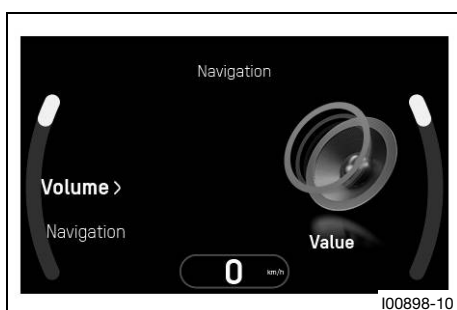**Condition**

- The **Ride Husqvarna** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).
 - The combination instrument is connected to a suitable phone.
 - For voice navigation: The combination instrument is connected to a suitable communication system and an appropriate language package has been downloaded in the **Ride Husqvarna** app (optional).
- Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until "**Navigation**" is marked. Press the **SET** button to open the submenu.


**Warning**

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

- Press the **UP** or **DOWN** button until **Volume** is marked. Press the **SET** button to open the submenu.
- Press the **UP** button to increase the volume of the activated voice navigation.
- Press the **DOWN** button to reduce the volume of the activated voice navigation.

7.24.18 State (optional)

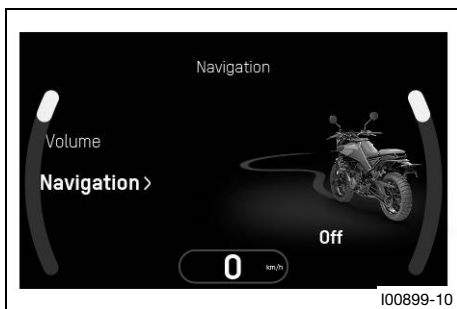

Condition

- **Bluetooth®** function is activated.
- The **Ride Husqvarna** app (optional) is installed and opened on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).
- The combination instrument is connected to a suitable phone.
 - Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until "**Navigation**" is marked. Press the **SET** button to open the submenu.
 - Press the **UP** or **DOWN** button until **State** is marked. Press the **SET** button to confirm the selection.
 - Press the **SET** button to switch the visual navigation on or off.

Info

Voice navigation remains switched on if it has been activated.

The volume of the activated voice navigation is identical to the volume of the audio player on the cellphone. If the volume on the cellphone is changed, the volume of the activated voice navigation also changes.

7.24.19 Audio



Condition

- **Bluetooth®** function is activated.
- The combination instrument is connected to a suitable phone.
- The combination instrument is connected to a suitable communication system or the **Headset Type Corded** is selected.
 - Press the **SET** button when the menu is closed.



Warning

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.


- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

- Press the **UP** or **DOWN** button until **Audio** is highlighted. Press the **SET** button to open the submenu.
- Press and hold **UP** button to increase the audio volume.
- Press and hold **DOWN** button to reduce the audio volume.
- Press **UP** button briefly to change to the next audio track.
- Briefly pressing **DOWN** button twice changes to the previous audio title or plays the current audio title from the start, depending on the cellphone model.
- Press **SET** button to play or pause the audio track.

**Info**


With some cellphones, the audio player needs to be started before playback is possible.

The audio function can be added to **Quick Selector 1** or **Quick Selector 2** for easier operation.

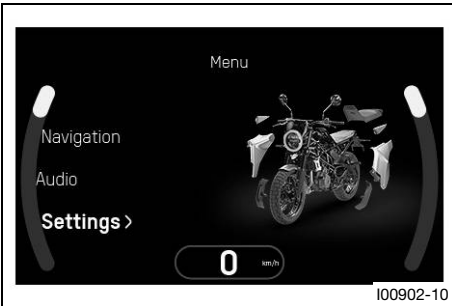7.24.20 Settings**Condition**


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.

In the **Settings** menu, favorites, quick selections, **Connectivity** (optional), and the shift warning light can be configured. Settings can be made for units or various values. Several functions can be enabled or disabled.

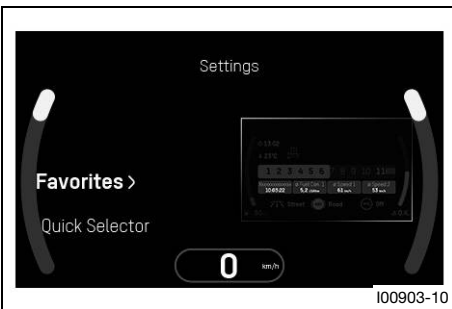7.24.21 Favorites**Condition**


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until "Favorites" is highlighted. Press the **SET** button to open the submenu.
- Access menu item with the **UP** or **DOWN** button, and add the selected information to the Favorites display using the **SET** button.

Up to four sets of information can be selected in the **Favorites** menu.

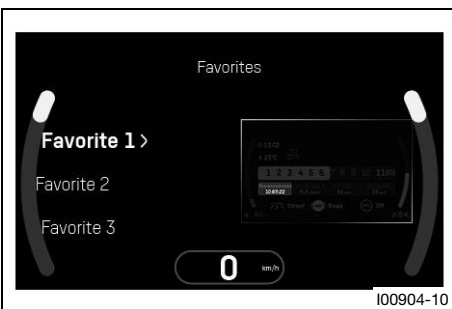7.24.22 Favorites-Anzeige 1-4**Condition**

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Favorites** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button to select **Favorite 1**, **Favorite 2**, **Favorite 3**, or **Favorite 4**. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button to select the desired information. Press the **SET** button to confirm the selection.

7.24.23 Quick Selector 1

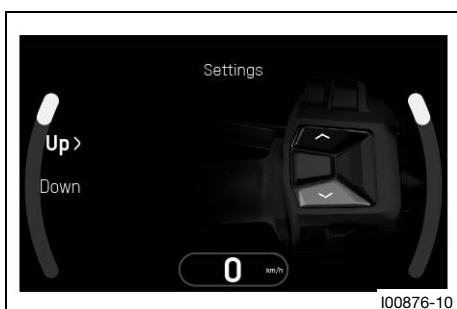

Condition

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Quick Selector 1** is highlighted. Press **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to set a direct selection submenu for **Quick Selector 1**.

Info

When the menu is closed, the submenu defined in **Quick Selector 1** is opened by pressing the **UP** button.

7.24.24 Quick Selector 2




Condition

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Quick Selector 2** is highlighted. Press **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to set a direct selection submenu for **Quick Selector 2**.

Info

When the menu is closed, the submenu defined in **Quick Selector 2** is opened by pressing the **DOWN** button.

7.24.25 Connectivity

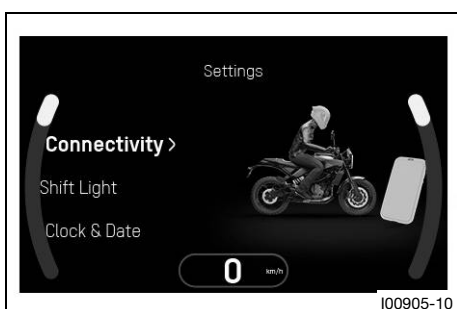

Condition


- The motorcycle is stationary.
- **Bluetooth®** function is activated.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Ride Mode** is marked. Press the **SET** button to open the menu.

In the **Connectivity** menu, a suitable cellphone or communication system can be paired with the combination instrument via **Bluetooth®** and the audio function and navigation function can be configured.

Info

Not every cellphone or communication system is suitable for pairing with the combination instrument. The standard **Bluetooth®** 4.0 must be supported.

7.24.26 Bluetooth

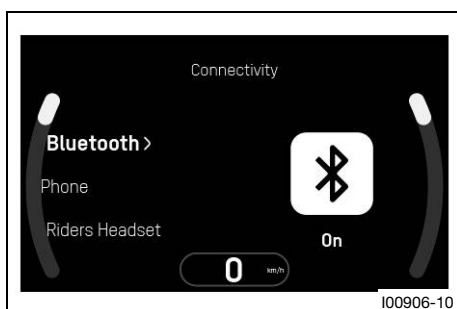
**Condition**

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Ride Mode** is marked. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Bluetooth** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to switch the **Bluetooth®** function on or off.

i **Info**

The **Bluetooth®** function must be activated to pair a suitable cellphone or communication system with the vehicle. Not every cellphone or communication system is suitable for pairing with the vehicle.

7.24.27 Pairing a cellphone

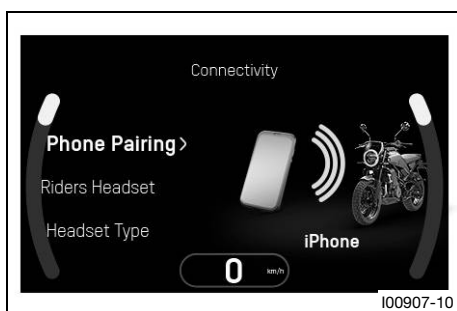**Condition**

- The motorcycle is stationary.
- **Bluetooth®** function is activated.
- The **Bluetooth®** function should also be activated in the device to be paired.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Ride Mode** is marked. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until "Pair phone" is highlighted. Press the **SET** button to open the submenu.

i **Info**

Only one cellphone can be paired with the vehicle.

- Press the **UP** or **DOWN** button until **New Pairing** is marked. Press the **SET** button to open the menu.
- The vehicle starts searching for a suitable cellphone. If the search was successful, the name of the cell phone is displayed again in the Pairing menu. Press the **SET** button to start the pairing.

i **Info**

The cellphone must be visible via **Bluetooth®** for the vehicle to find the cellphone. Not every cellphone is suitable for pairing with the vehicle.

- A message appears on the combination instrument indicating that the vehicle is now ready for pairing. The pairing is

completed successfully by confirming the **Passkey** on the cellphone and on the combination instrument.



Info

Follow the instructions in the app when connecting with **Ride Husqvarna**. Confirmation may be required on the combination instrument.

- Press the **UP** or **DOWN** button until “Delete pairing” is highlighted. The paired device can be deleted by pressing the **SET** button.
- Move the previously paired device into the range of the vehicle while the **Bluetooth®** function is active.
 - ✓ The device is automatically connected with the vehicle.
 - ✗ If the device is not automatically connected with the vehicle after approx. 30 seconds:
 - Switch on the vehicle again or repeat the **New Pairing** procedure.

A suitable cellphone can be paired with the combination instrument in the **Phone Pairing** submenu via **Bluetooth®**.




Info

Not every cellphone or communication system is suitable for pairing with the combination instrument.

Make sure the end device is in the correct pairing mode for call management. If the end device is only paired for media playback, the call function may not work.

7.24.28 Pairing a headset

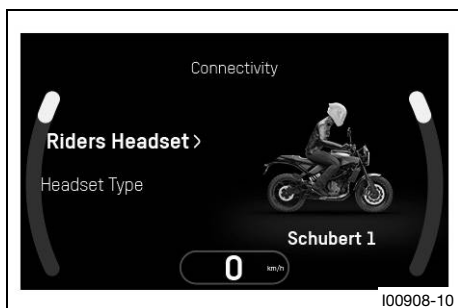

Condition

- The motorcycle is stationary.
- **Bluetooth®** function is activated.
- The **Bluetooth®** function should also be activated in the device to be paired.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Ride Mode** is marked. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Riders Headset** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **New Pairing** is marked. Press the **SET** button to open the menu.
- The vehicle starts searching for a suitable communication system. If the search was successful, the name of the rider's headset is displayed in the **New Pairing** submenu. Press the **SET** button to start the pairing.

**Info**

The communication system must be in pairing mode for the communication system to be found by the vehicle. Follow the instructions in the communication system owner's manual.


Press the **UP** or **DOWN** button until **Delete Pairing** is highlighted. The paired device can be deleted by pressing the **SET** button.

Not every communication system is suitable for pairing with the vehicle.

- Move the previously paired device into the range of the vehicle while the **Bluetooth®** function is active.
- ✓ The device is automatically connected with the vehicle.
- ✗ If the device is not automatically connected with the vehicle after approx. 30 seconds:
 - Switch on the vehicle again or repeat the **New Pairing** procedure.

In the **Riders Headset** menu, a suitable rider communication system can be paired with the vehicle.

7.24.29 Headset Type

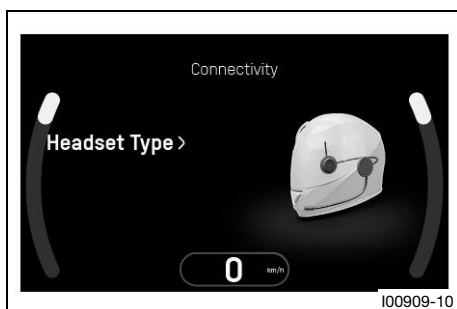**Condition**

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Headset Type** is highlighted.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to change the rider headset type.

The connection mode for the rider headset can be selected in the **Headset Type** menu.


The communication system is connected to the vehicle wirelessly via **Bluetooth®** in **Bluetooth Headset** display mode.

The communication system is connected directly to the smartphone in display mode **Corded Headset**.

**Info**


The **Riders Headset** menu item is only available in **Headset Type Bluetooth**.

7.24.30 Shift Light

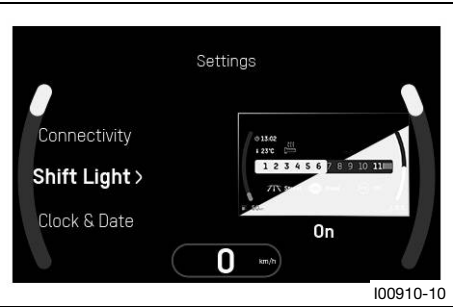


- Condition**
- The motorcycle is stationary.
 - **ODO** > 1,000 km (621 mi).
 - Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
 - Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
- The shift warning light can be configured in the **Shift Light** submenu.

7.24.31 Shift Light State

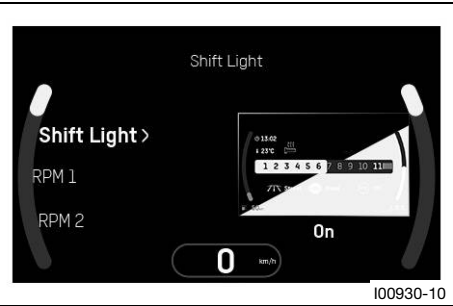

- Condition**
- The motorcycle is stationary.
 - **ODO** > 1,000 km (621 mi).
 - Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
 - Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
 - Activate the menu item using the **UP** or **DOWN** button.
 - Press the **SET** button to switch the shift warning light on or off.

7.24.32 RPM1

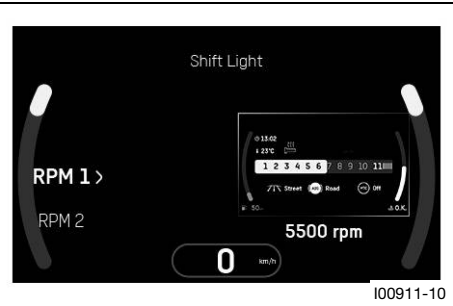

- Condition**
- The motorcycle is stationary.
 - **ODO** > 1,000 km (621 mi).
 - Press the **SET** button when the menu is closed.
 - Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
 - Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
 - Press the **UP** or **DOWN** button until **RPM1** is highlighted. Press the **SET** button to open the submenu.
 - Activate the menu item using the **UP** or **DOWN** button.
 - Set the value for **SET** by pressing the **RPM1** button.


**Info**

RPM1 can be set in intervals of 500 between 5,500 and 10,000 rpm.

RPM1 must not be larger than **RPM2**.

If the engine speed reaches the set value **RPM1**, the shift warning light flashes.

7.24.33 RPM2

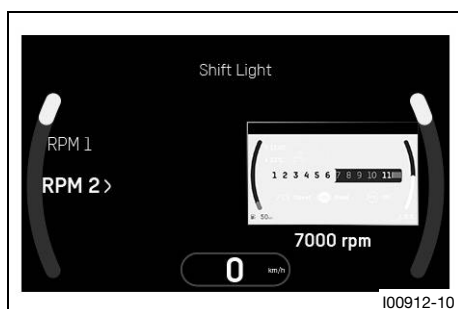**Condition**

- The motorcycle is stationary.
- **ODO** > 1,000 km (621 mi).
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
- Press the **UP** or **DOWN** button until **RPM2** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Set the value for **SET** by pressing the **RPM2** button.


**Info**

RPM2 can be set in intervals of 500 between 7,000 and 10,000 rpm.

RPM2 must not be smaller than **RPM1**.

If the engine speed reaches the set value **RPM2**, the shift warning light flashes and the color changes.

7.24.34 Setting the time and date

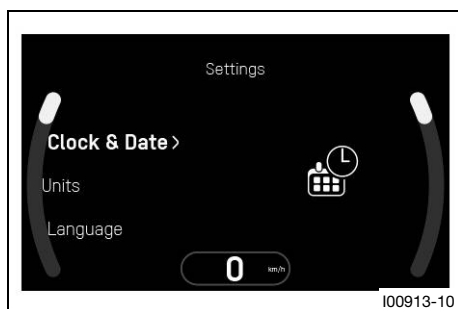
**Condition**

The motorcycle is stationary.


- Press the **SET** button when the menu is closed.
- Press **UP** or **DOWN** button until **Settings** appears. Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.

Setting the clock

- Press the **UP** or **DOWN** button until **Set Clock** is marked.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until the current hour is set. Press the **SET** button to select the hour.
- Press the **UP** or **DOWN** button until the current minute is set. Press the **SET** button to select the minute.
- Press the **BACK** button to exit the menu.

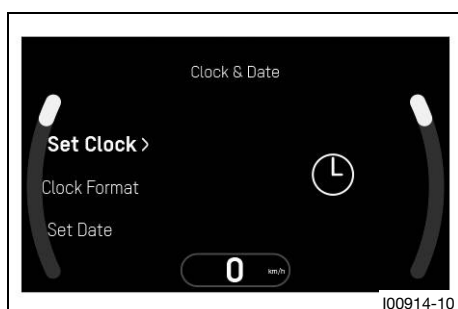


7 COMBINATION INSTRUMENT

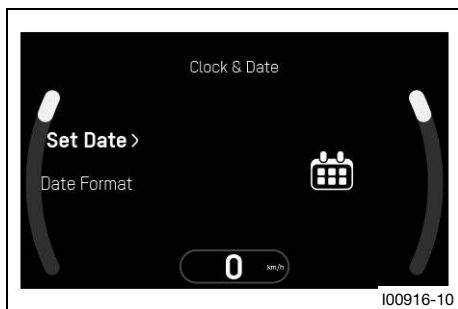

Setting the date

- Press the **UP** or **DOWN** button until **Set Date** is marked.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until the current day is set. Press the **SET** button to select the day.
- Press the **UP** or **DOWN** button until the current month is set. Press the **SET** button to select the month.
- Press the **UP** or **DOWN** button until the current year is set. Press the **SET** button to select the year.
- Press the **BACK** button to exit the menu.

7.24.35 Clock Format

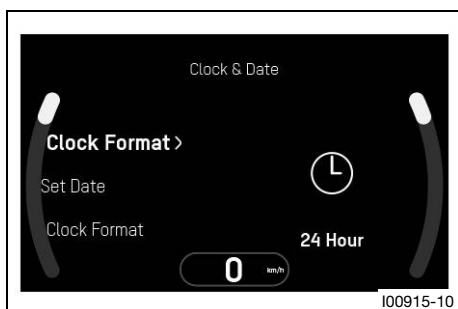

Condition


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.
- Press the **UP** or **DOWN** button until **Clock Format** is highlighted. Press the **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to select the time format.



Info

The possible settings are 24h and 12h.

7.24.36 Date Format

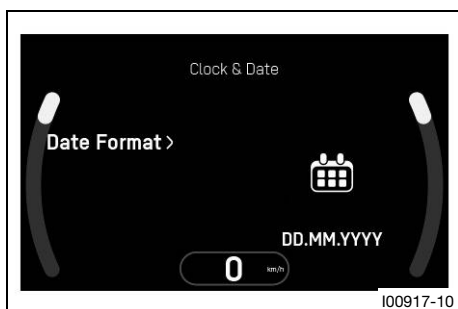

Condition


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.
- Press the **UP** or **DOWN** button until **Date Format** is highlighted. Press the **SET** button to open the menu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to select the date format.



Info

The setting options are DD.MM.YYYY, MM.DD.YYYY and YYYY.MM.DD.

7.24.37 Units

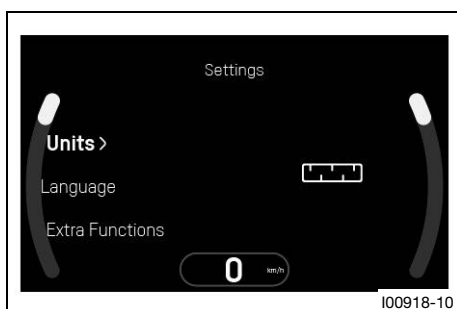


Condition

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.

The **Units** submenu allows settings to be made for units or various values.

7.24.38 Distance

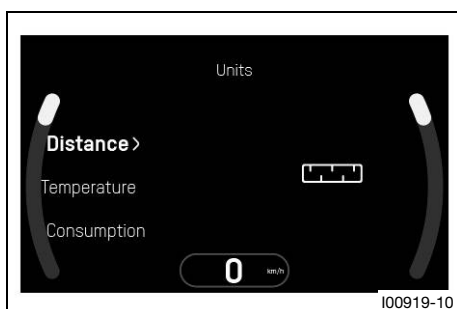

Condition


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
- Press **UP** or **DOWN** button until **Distance** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to confirm the desired unit.



Info

The setting options are kilometers or miles.

7.24.39 Temperature

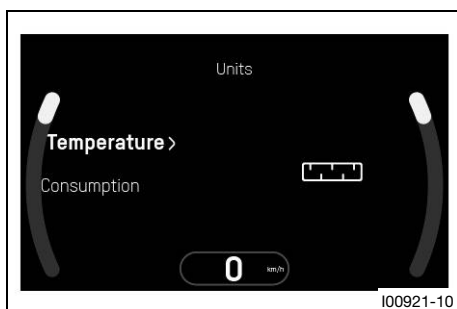

Condition

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
- Press **UP** or **DOWN** button until **Temperature** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to confirm the desired unit.



Info

The setting options are Celsius or Fahrenheit.

7.24.40 Consumption



Condition


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
- Press **UP** or **DOWN** button until **Consumption** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to confirm the desired unit.



Info

The setting options are l/100km, km/l, USG/100mi, mi/USG, malfunction indicator lamp, UKG/100mi and mi/UKG.

7.24.41 Heating (optional)

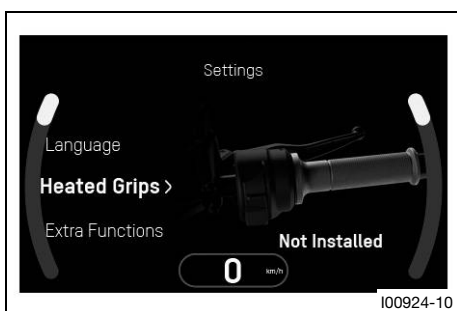

Condition

- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Heating** is highlighted. Press the **SET** button to open the submenu.


The heated grip can be configured in the **Heating** submenu.



Info

In the **Settings** menu, the **Heating** submenu only controls the visibility of **Heated Grips** in the menu.

7.24.42 Language

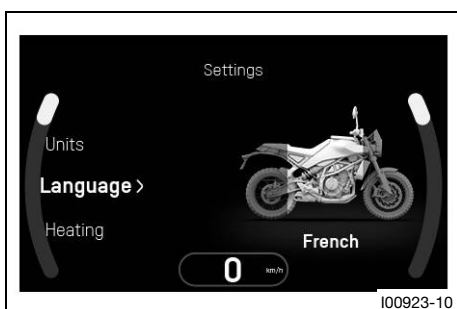

Condition


- The motorcycle is stationary.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Language** is highlighted. Press the **SET** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the **SET** button to confirm the desired language.



Info

The menu languages are US English, UK English, German, Italian, French, and Spanish.

7.24.43 Extra Functions

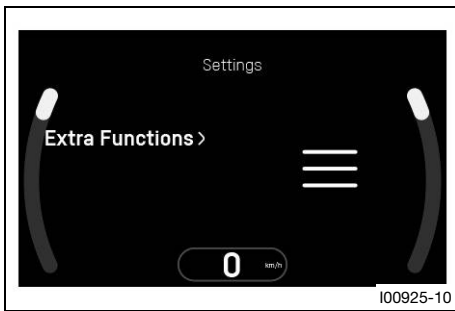

Condition

- The motorcycle is stationary.
- Motorcycle with optional supplementary function.
- Press the **SET** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **SET** button to open the menu.
- Press the **UP** or **DOWN** button until **Extra Functions** is highlighted. Press the **SET** button to open the submenu.
- Use the **UP** or **DOWN** button to navigate through the extra functions.



Info

The optional extra functions are listed.

The current **Husqvarna Motorcycles Technisches Zubehör** and available software for your vehicle can be found on the Husqvarna Motorcycles website.

8.1 Advice on preparing for first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by Husqvarna Motorcycles with the corresponding speed index.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding and only gradually increase the lean angle.

Run-in distance	200 km (124 mi)
-----------------	-----------------



Info

When using the vehicle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-sale inspection work has been carried out by an authorized Husqvarna Motorcycles workshop.
 - ✓ You will receive a delivery certificate when the vehicle is handed over.
- Read the entire Owner's Manual before riding for the first time.
- Get to know the controls.
- Get used to the handling characteristic of the motorcycle on suitable terrain before undertaking a more challenging ride. Also, ride as slowly as possible to get a better feeling for the motorcycle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Do not make any trips that exceed your personal ability and experience.
- Run the engine in. (📖 p. 53)

8.2 Running in the engine

- During the running-in time, do not exceed the specified engine speed.

Guideline

Maximum engine speed	
During first: 1,000 km (620 mi)	7,500 rpm



Info

During the running-in phase, the shift warning light is set to a specified value and cannot be changed.

- Avoid fully opening the throttle.



8.3 Loading the vehicle



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational motorcycle with a full tank, rider and, if necessary, a passenger with protective clothing and helmet, and, if necessary, mounted luggage.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents The luggage system will be damaged if it is overloaded.

- Read the manufacturer information on maximum payload when mounting cases.



Warning

Danger of accidents Luggage which has slipped impairs visibility.

If the tail light is covered, you are less visible to traffic behind you, especially when it is dark.

- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A high payload alters the handling characteristic and increases the stopping distance.

- Adapt your speed to your payload.

- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
- Do not exceed the maximum permissible weight and maximum permissible axle loads.

Guideline


Maximum permissible overall weight	355 kg (783 lb.)
Maximum permissible front axle load	127 kg (280 lb.)
Maximum permissible rear axle load	228 kg (503 lb.)



9.1 Checks and maintenance measures when preparing for use

Info

Before every trip, check the condition of the vehicle and ensure that it is roadworthy.
The vehicle must be in perfect technical condition when it is being operated.

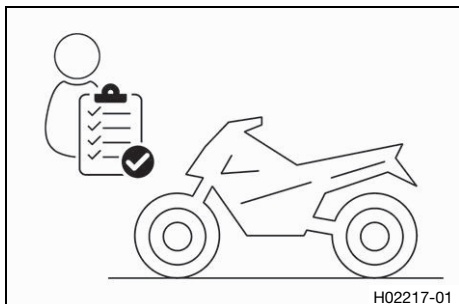

- Check the engine oil level. (📖 p. 118)
- Check the front brake fluid level. (📖 p. 84)
- Check the rear brake fluid level. (📖 p. 86)
- Check that the brake linings of the front brake are secured. (📖 p. 85)
- Check that the brake linings of the rear brake are secured. (📖 p. 88)
- Check that the brake system is functioning properly.
- Check the coolant level. (📖 p. 110)
- Check for chain dirt accumulation. (📖 p. 77)
- Check the chain tension. (📖 p. 78)
- Check the tire condition. (📖 p. 94)
- Check tire pressure. (📖 p. 96)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical system is functioning properly.
- Check that luggage is properly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

9.2 Starting



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



Caution

Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

- Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.


Dust and dirt will enter the engine without an air filter.

- Only operate the vehicle if it is equipped with an air filter.

Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.

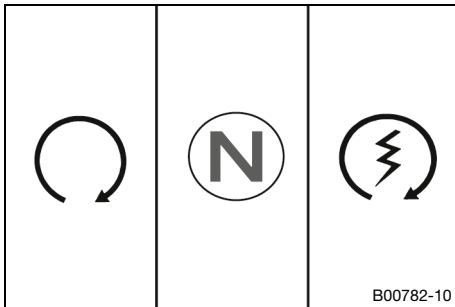

- Unlock the steering. (🔑 p. 19)
- Sit on the vehicle, take the weight off of the side stand, and move it all the way up with your foot.
- Turn the emergency OFF switch to the position ○.
- Switch on the ignition by turning the ignition key to the position ○.

Guideline

To avoid malfunctions in the control unit communication, do not switch the ignition off and on in rapid succession.

- ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift the transmission into neutral.
- ✓ The green idle indicator lamp **N** lights up.
- ✓ The **ABS** warning lamp lights up and goes out again after starting off.
- Briefly press the start button (🔑).



Info

Do not press the start button until the combination instrument function check has finished.

Do not open the throttle to start.

If the starting attempt is unsuccessful, wait for 15 seconds before making another attempt at starting.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch lever, the engine stops.



9.3 Starting off

- Pull the clutch lever, shift into first-gear, release the clutch lever slowly and at the same time open the throttle carefully.




Tip

If the engine stalls while starting off, only pull the clutch lever and press the start button. The transmission must not be shifted into neutral.



9.4 Easy Shift

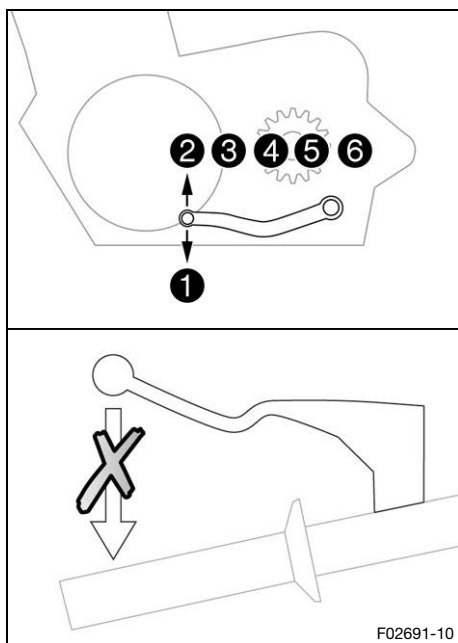

Using Easy Shift, you can shift up and down without actuating the clutch.

Because there is no need to close the throttle grip, uninterrupted gear shifts are possible.

Easy Shift uses the shifter shaft position to check whether or not a shift should be initiated, and sends a corresponding signal to the engine control unit.

9.5 Shifting, riding



Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions.
- Adapt your speed to the road conditions.



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Warning

Danger of accidents An incorrect ignition key position causes malfunctions.

- Do not change the ignition key position while driving.



Warning

Danger of accidents Adjustments to the vehicle distract attention from traffic activity.

- Make all adjustments when the vehicle is at a standstill.



Warning

Risk of injury The passenger may fall from the motorcycle if they conduct themselves incorrectly.

- Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot pegs and holds on to the rider or the grab handles.
- Note the regulations governing the minimum age of passengers in your country.



Warning

Danger of accidents A risky riding style constitutes a major risk.

- Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.



Warning

Danger of accidents Cold tires have reduced road grip.

- Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding and only gradually increase the lean angle.
Run-in distance 200 km (124 mi)



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational motorcycle with a full tank, rider and, if necessary, a passenger with protective clothing and helmet, and, if necessary, mounted luggage.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A fall can damage the vehicle more seriously than it may first appear.

- Check the vehicle after a fall as you do when preparing for use.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

- Only operate the vehicle if it is equipped with an air filter.

Note

Engine failure Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.

Note

Transmission damage Incorrect use of Easy Shift will damage the transmission.

 
Easy Shift can only be used if the function is activated in the combination instrument.

Easy Shift is not active if you pull the clutch lever.

- Only use Easy Shift in the permitted speed range shown.

i Info

If unusual noises occur while riding, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine, and contact an authorized Husqvarna Motorcycles workshop.



- Shift into a higher gear when conditions allow (incline, road situation, etc.).
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.

i Info

You can see the positions of the 6 forward gears in the figure. The idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

- Brake if necessary and close the throttle at the same time in order to shift down.
- Pull clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- Switch off the engine if running at idle speed or stationary for a long time.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is $\frac{3}{4}$ open. This will barely reduce the speed, but fuel consumption will be considerably lower.
- Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- If the engine stalls (e.g. at an intersection), just pull the clutch lever and press the start button. The transmission must not be shifted into neutral.
- If the oil pressure warning lamp  lights up during a trip, stop as soon as it is safe to do so and switch off the engine. Contact an authorized Husqvarna Motorcycles workshop.
- If the malfunction indicator lamp  lights up during a trip, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine, and contact an authorized Husqvarna Motorcycles workshop.
- If the general warning lamp  lights up during a trip, an operating safety (warning) message was detected.


i Info

All warnings which have occurred are displayed and stored in the **Warning** menu until these are no longer active.

- If the general warning symbol begins to flash in the display during the trip, several warnings have been detected.

i Info

Warnings which have occurred are shown and saved in the **Info** display until these are no longer active.

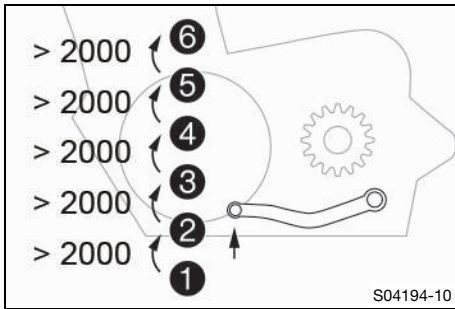


- Using Easy Shift, you can shift up in the speed range shown without pulling the clutch lever.



Info

The minimum engine speed before shifting up in revolutions per minute is shown in the figure.

Pull the shift lever quickly back to the stop without changing the throttle twist grip position.

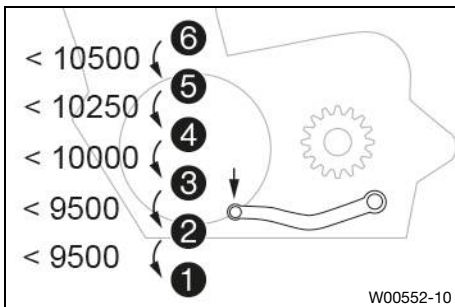

- Using Easy Shift, you can shift down in the speed range shown without pulling the clutch lever.



Info

The maximum engine speed before shifting down in revolutions per minute is shown in the figure.

Depress the shift lever quickly back to the stop without changing the throttle twist grip position.

9.6 Applying the brakes



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever if you do not want to brake.



Warning

Danger of accidents Higher total weight increases the stopping distance.

- Take the longer stopping distance into account when carrying a passenger or luggage with you.



Warning

Danger of accidents Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



Warning

Danger of accidents ABS may increase the stopping distance in certain situations.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

The ABS effectiveness is only ensured if it is switched on.

- Leave the ABS switched on in order to benefit from the protective effect.

- When braking, release the throttle and apply the front and rear brakes at the same time.



Info

When the ABS is enabled, maximum braking power can be achieved even with low road grip surfaces such as sandy, wet, or slippery terrain without locking the wheels.



Warning

Danger of accidents The rear wheel can lock due to the engine braking effect.

- Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.



Warning

Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.

- Always finish braking before you go into a bend. Shift down to a lower gear appropriate to your speed.
- Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

9.7 Stopping, parking



Warning

Risk of injury People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.
- Lock the steering and remove the ignition key if you leave the vehicle unattended.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

- Apply the brakes on the motorcycle.
- Shift the transmission into neutral.
- Switch off the ignition by turning the ignition key to the position ☒.



Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on in the ignition lock, the power supply to most electrical power consumers remains uninterrupted and this discharges the 12-V battery. You should therefore always switch off the engine with the ignition lock – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering. (📖 p. 18)



9.8 Transport

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.


The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

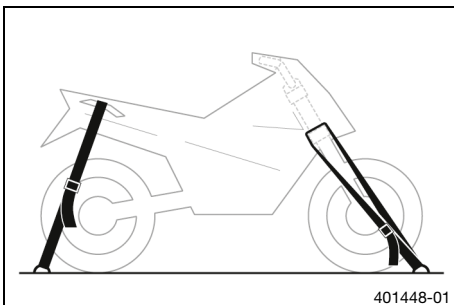

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

9.9 Towing in the event of a breakdown

 
Note

Danger of damage Towing away using a towing vehicle is not an appropriate vehicle recovery method.

Damage to the drive train or transmission may occur during towing.

- Do not use towing equipment where the wheels of the broken down vehicle remain on the road and rotate as it is towed.
- Always transport a broken down vehicle on a trailer or on the loading area of a transport vehicle.

9 RIDING INSTRUCTIONS



- Ensure that the broken down vehicle is properly secured on the trailer or transport vehicle.
- Observe local regulations for the recovery of broken down vehicles.

9.10 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.


- Refuel only with clean fuel that meets the specified standards. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

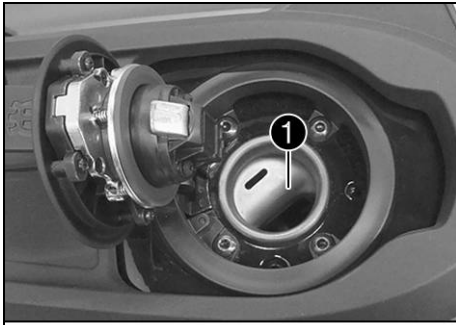

- Switch off the engine.
- Open fuel tank filler cap. (📖 p. 19)
- Fill the fuel tank with fuel up to the lower edge ❶ of the filler neck.

Total fuel tank capacity, approx.	13 l (3.4 US gal)	Super unleaded (ROZ 95) (📖 p. 139)
-----------------------------------	----------------------	--

- Close the fuel tank filler cap. (📖 p. 20)



B06303-10

10 SERVICE SCHEDULE

10.1 Additional information

Any further work that results from the service work must be ordered separately and invoiced separately. Different service intervals may apply in your country, depending on the local operating conditions. Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized Husqvarna Motorcycles dealers for the electronic proof of service. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.


10.2 Service work

	every 48 months					
	every 24 months					
	every 12 months					
	every 20,000 km (12,400 mi)					
	every 10,000 km (6,200 mi)					
	after 1,000 km (620 mi)					
Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🛠️	○	●	●	●	●	●
Program the shift shaft sensor. 🛠️	○	●	●			
Check that the electrical system is functioning properly. 🛠️	○	●	●	●	●	●
Check that the brake linings of the front brake are secured. (📖 p. 85)	○	●	●	●	●	●
Check that the brake linings of the rear brake are secured. (📖 p. 88)	○	●	●	●	●	●
Check the brake discs. (📖 p. 83)	○	●	●	●	●	●
Check the brake lines for damage and tightness. 🛠️	○	●	●	●	●	●
Check the front brake fluid level. (📖 p. 84)	○	●	●	●		
Change the front brake fluid. 🛠️					●	●
Check the rear brake fluid level. (📖 p. 86)	○	●	●	●		
Change the rear brake fluid. 🛠️					●	●
Change the engine oil and the oil filter, clean the oil screens. 🛠️ (📖 p. 118)	○	●	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage hoses, etc.) and sleeves for cracking, tightness, and correct routing. 🛠️	○	●	●	●	●	●
Empty the drainage hoses. 🛠️	○	●	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 🛠️	○	●	●	●	●	●
Check the frame. 🛠️			●			
Check the link fork. 🛠️			●			
Checking the fork bearing for play. 🛠️		●	●			
Checking the steering head bearing for play. 🛠️	○	●	●			
Check the wheel bearing for play. 🛠️		●	●			
Check the shock absorber and fork for leaks. 🛠️	○	●	●	●	●	●
Check the tire condition. (📖 p. 94)	○	●	●	●	●	●
Check tire pressure. (📖 p. 96)	○	●	●	●	●	●
Check the rim run-out. (Option: Spoked wheels) 🛠️	○	●	●			
Retighten the spokes. (Option: Spoked wheels) 🛠️	○					
Check the spoke tension. (📖 p. 96)		●	●			
Check the chain, rear sprocket, and engine sprocket. (📖 p. 80)		●	●	●	●	●
Check the chain tension. (📖 p. 78)	○	●	●	●	●	●
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 🛠️	○	●	●	●	●	●

	every 48 months					
	every 24 months					
	every 12 months					
	every 20,000 km (12,400 mi)					
	every 10,000 km (6,200 mi)					
	after 1,000 km (620 mi)					
Check that the throttle cables are undamaged, routed without kinks, and set correctly. 🛠️	○	●	●	●	●	●
Check the valve clearance, change the spark plug. 🛠️			●			
Change the air filter, clean the air filter box. 🛠️		●	●			
Check the headlight setting. (📖 p. 106)	○	●	●			
Check the tightness of the safety-relevant screws and nuts which are easily accessible. 🛠️	○	●	●	●	●	●
Clean the dust boots of the fork legs. (📖 p. 72)		●	●			
Check that the radiator fan is functioning properly. 🛠️	○	●	●	●	●	●
Check the coolant level. (📖 p. 110)	○	●	●	●	●	
Checking the antifreeze. 🛠️		●	●		●	
Change the coolant. 🛠️ (📖 p. 113)						●
Final check: Check the vehicle is roadworthy and take a test ride. 🛠️	○	●	●	●	●	●
Read out the fault memory after the test ride using the Husqvarna Motorcycles diagnostics tool. 🛠️	○	●	●	●	●	●
Set the service interval display. 🛠️	○	●	●	●	●	●
Enter electronic proof of service in the dealer portal. 🛠️	○	●	●	●	●	●

- One-time interval
- Periodic interval

11.1 Fork/shock absorber

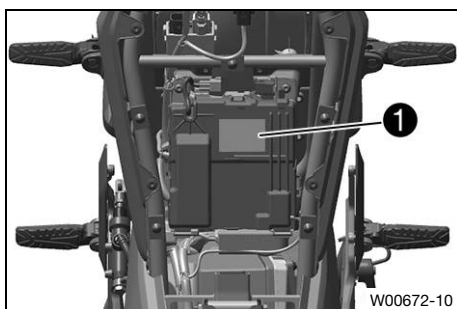

The fork and the shock absorber offer many options for adapting the chassis to the riding style and the payload.

i Info

The recommendations for the suspension setting are shown in table ①. The table is attached to the battery cover.

These adjustments should be understood as a guideline and should always be the basis for one's personal suspension setting. Do not change the adjustments at random, as otherwise the riding characteristics could deteriorate, particularly at high speeds.

11.2 Adjusting the compression damping of the fork

i Info

The hydraulic compression damping determines the fork suspension behavior.



- Turn adjuster ① clockwise all the way to the stop.

i Info

Adjuster ① is located at the upper end of the left fork leg.

The compression damping is located in left fork leg **COMP** (white adjuster). The rebound damping is located in right fork leg **REB** (red adjuster).

- Turn counterclockwise by the number of clicks corresponding to the fork type.

i Info

Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.

11.3 Adjusting the rebound damping of the fork

i Info

The hydraulic rebound damping determines the fork suspension behavior.



- Turn adjuster ① clockwise all the way to the stop.

i Info

Adjuster ① is located at the upper end of the right fork leg.

The rebound damping is located in right fork leg **REB** (red adjuster). The compression damping is located in left fork leg **COMP** (white adjuster).

- Turn counterclockwise by the number of clicks corresponding to the fork type.



Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



11.4 Adjusting the rebound damping of the shock absorber




Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

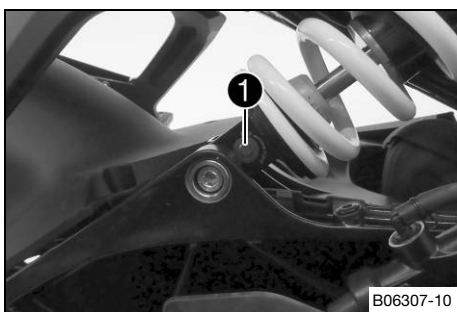

- Turn adjusting screw ① clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.



Info

Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.



11.5 Adjusting the spring preload of the shock absorber ↗



Warning

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic.


- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.



Info

The spring preload defines the initial status of the spring operation on the shock absorber.

The best spring preload setting is achieved when it is set for the weight of the rider and that of any luggage and a passenger, thus ensuring an ideal compromise between handling and stability.

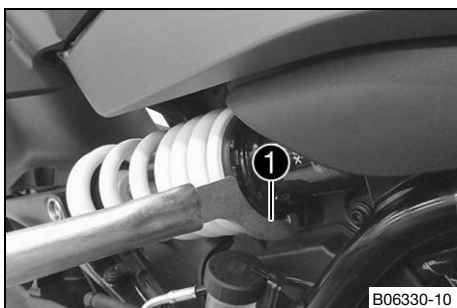

- Set the spring preload by turning adjusting ring ① using the hook wrench and the extension from the tool set.

Guideline

Spring preload	
Standard	11 mm (0.43 in)




Info

The spring preload can be set to 10 different positions.



11.6 Handlebar position

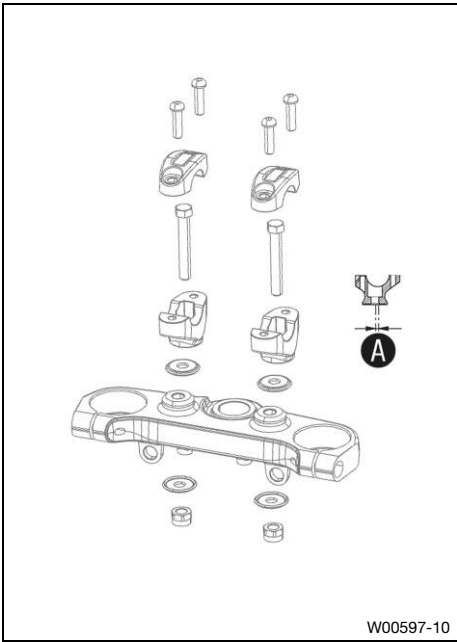

The holes on the handlebar support are placed at a distance of **A** from the center.

Hole distance A	5 mm (0.2 in)
------------------------	---------------

The handlebar can be mounted in 2 different positions. This allows the handlebar to be mounted in the most comfortable position for the rider.


11.7 Adjusting the handlebar position ↱

Warning

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

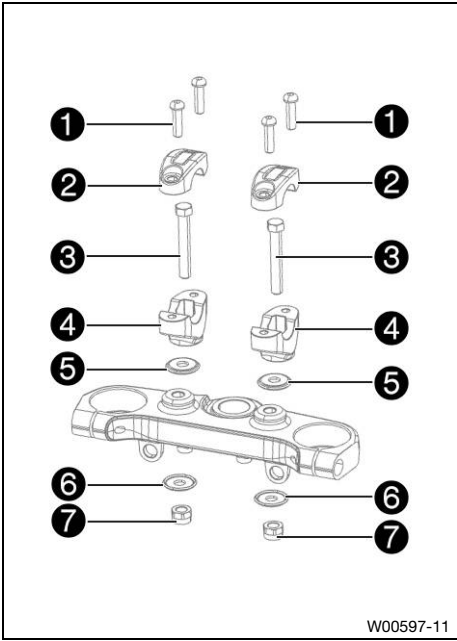

- Remove screws **1**.
- Take off the handlebar clamps **2**. Take off the handlebar, place to one side and secure.


Info

Cover the components to protect them against damage.

Do not kink the cables or lines.

- Remove screws **3** with washers **6** and nuts **7**. Take off handlebar supports **4**.
- Position washers **5**.
- Place handlebar supports **4** in the required position.
- Mount and tighten screws **3** with washers **6** and nuts **7**.

Guideline		
Screw, handlebar support	M10	21 Nm (15.5 lbf ft)

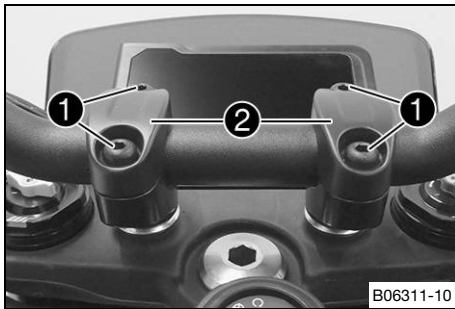

- Position the handlebar.

i Info
Make sure the cables and wiring are positioned correctly.

- Position handlebar clamps ②.
- Mount screws ①, but do not tighten yet.

Guideline

Screw, handle-bar clamp	M8	20 Nm (14.8 lbf ft) Loctite®243™
-------------------------	----	--

- ✓ Align handlebar centrally on handlebar support and handlebar clamps.

- Position handlebar clamps with screws ①.
- Tighten screws ① evenly.

Guideline

Screw, handle-bar clamp	M8	20 Nm (14.8 lbf ft) Loctite®243™
-------------------------	----	--



12.1 Raising the motorcycle with rear lifting gear


Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

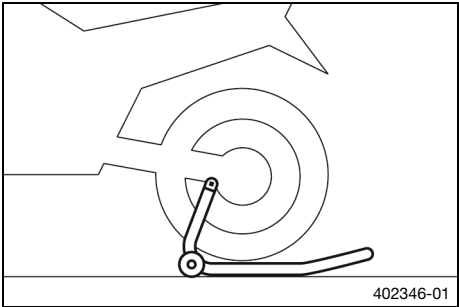

- Mount the supports of the lifting gear.
- Insert the adapter in the rear lifting gear.

Retaining adapter (61029955244)
Rear wheel work stand (69329955000)

- Stand the motorcycle upright, align the lifting gear with the link fork and the adapters, and raise the motorcycle.

12.2 Removing the rear of the motorcycle from the lifting gear

 
Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.



- Secure the motorcycle against falling over.
- Remove the rear lifting gear and lean the vehicle on side stand 1.
- Remove bushings kit.

12.3 Lifting the motorcycle with the front lifting gear


Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.


Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 70)

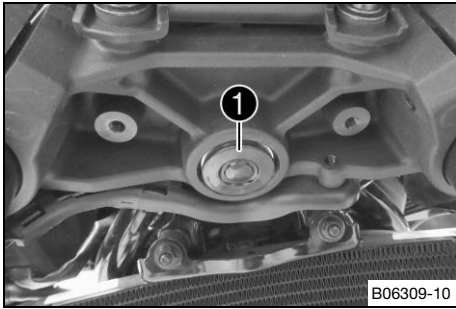

Main work

- Remove protection cap ①.

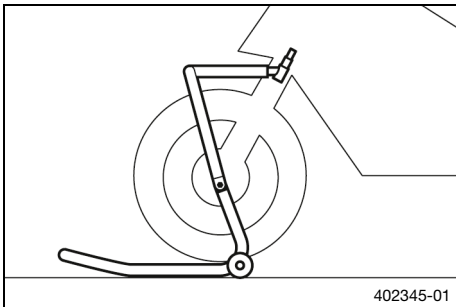

- Move the handlebar to the straight-ahead position. Position the lifting gear.

Mounting pin (69329965030)

Front wheel work stand, large (6932996510033)



Info

Always raise the motorcycle at the rear first.

- Lift the motorcycle at the front.




12.4 Taking the motorcycle off the front lifting gear

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

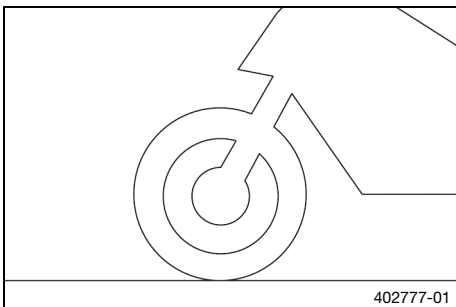

Main work

- Secure the motorcycle against falling over.
- Remove the front lifting gear.

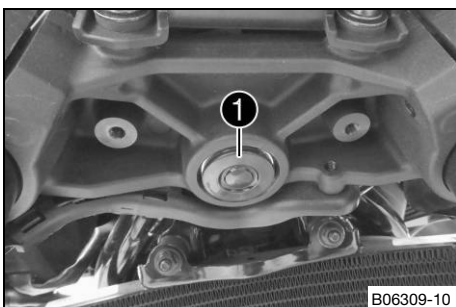


- Mount protection cap ①.

Finishing work

- Remove the rear of the motorcycle from the lifting gear.
(📖 p. 70)



12.5 Cleaning the dust boots of the fork legs

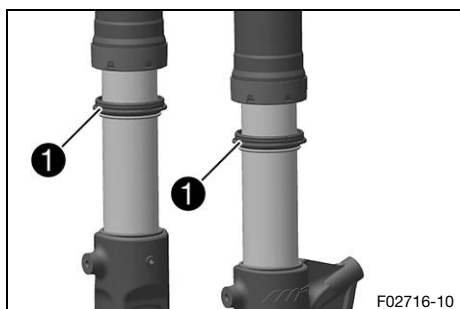

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 70)
- Lift the motorcycle with the front lifting gear. (📖 p. 70)

Main work

- Push dust boots **1** of both fork legs downward.



Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inside fork tubes of both fork legs.


Universal oil spray (📖 p. 140)

- Press the dust boots back into the installation position.
- Remove the excess oil.

Finishing work


- Take the motorcycle off the front lifting gear. (📖 p. 71)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

12.6 Removing the passenger seat

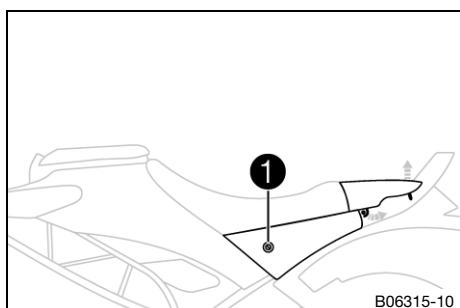

- Insert the ignition key in seat lock **1** and turn it clockwise.
- Raise the rear of the passenger seat, push it towards the rear, and lift it off.
- Remove the ignition key from the seat lock.

12.7 Mounting the passenger seat

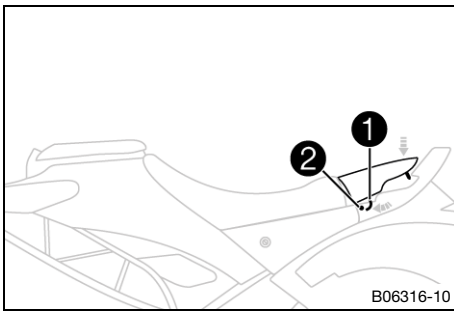

- Attach hooks ① on the passenger seat to seat mounting ② on the subframe, and lower it at the rear while pushing forward.
- Press the passenger seat downward until it clicks into place.



Warning

Danger of accidents The seat can come loose from the anchoring if it is not mounted correctly.

- After assembly, check whether the seat is correctly locked and cannot be pulled up.

- Finally, check that the passenger seat is correctly mounted.




12.8 Removing the front rider's seat

Preparatory work


- Remove the passenger seat. (📖 p. 72)

Main work

- Raise the rear of the front rider's seat, pull it toward the rear, and remove it upward.

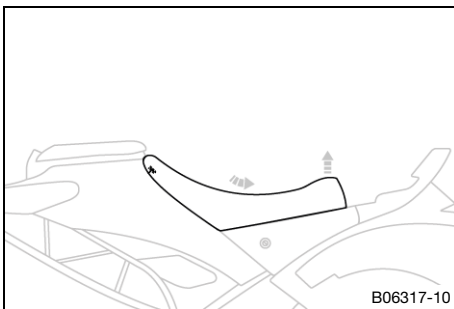

12.9 Mounting the front rider's seat

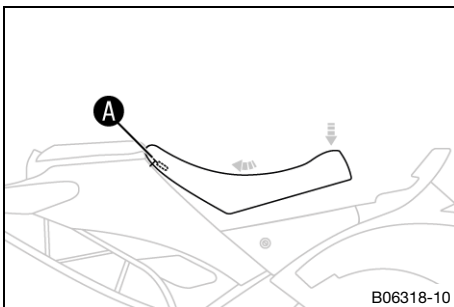

Main work

- Attach the front rider's seat in area A and lower at the rear.
- Finally, check that the front rider's seat is correctly mounted.

Finishing work

- Mount the passenger seat. (📖 p. 73)




12.10 Removing the luggage rack

Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

Main work

- Remove screws ❶.
- Take off the luggage rack.

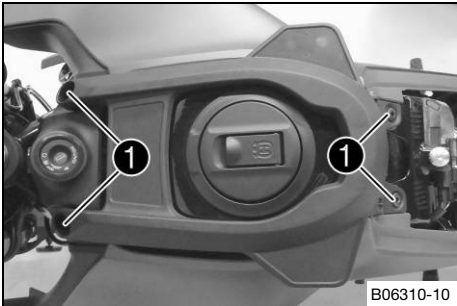


12.11 Installing the luggage rack

Main work

- Position the luggage rack.
- Mount and tighten screws ❶.

Guideline

Screw, luggage rack	M6x45	10 Nm (7.4 lbf ft)
---------------------	-------	--------------------

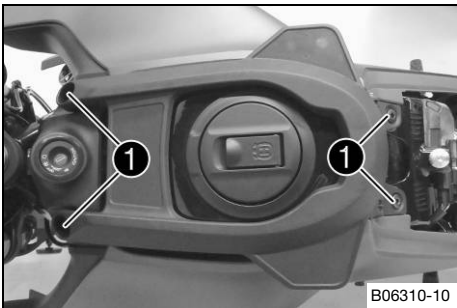

Finishing work

- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)


12.12 Removing the left side cover 🛠️

Preparatory work


- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)
- Remove the luggage rack. (📖 p. 74)

Main work

- Remove screws ❶ and ❷.
- Pull off holding lugs in area A.
- Detach side cover in area B.
- Take off side cover to side.

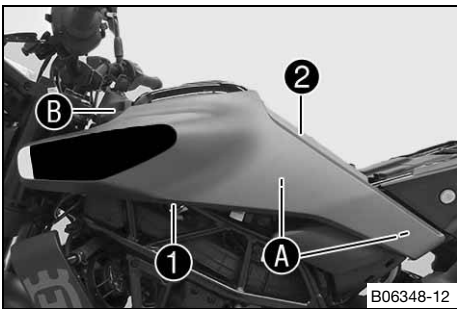

12.13 Installing the left side cover

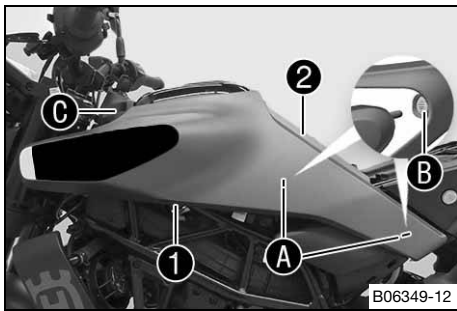

Main work

- Position the side cover.

Guideline

Grease the holding lug and rubber bushing.

- ✓ Holding lugs **A** engage in rubber bushings **B**.
- ✓ Hook side cover into area **C**.
- Mount and tighten screws **1** and **2**.


Guideline

Screw, front trim	M6x15	3.8 Nm (2.8 lbf ft)
-------------------	-------	---------------------

Finishing work

- Install the luggage rack. (p. 74)
- Mount the front rider's seat. (p. 73)
- Mount the passenger seat. (p. 73)

12.14 Removing the right side cover

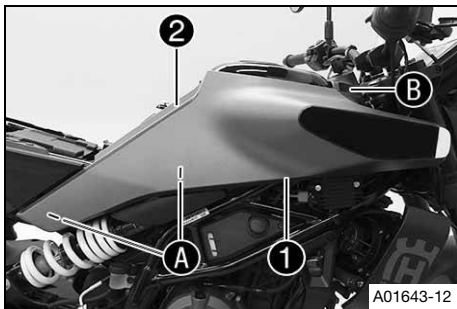


Preparatory work

- Remove the passenger seat. (p. 72)
- Remove the front rider's seat. (p. 73)
- Remove the luggage rack. (p. 74)

Main work

- Remove screws **1** and **2**.
- Pull off holding lugs in area **A**.
- Detach side cover in area **B**.
- Take off side cover to side.

12.15 Installing the right side cover

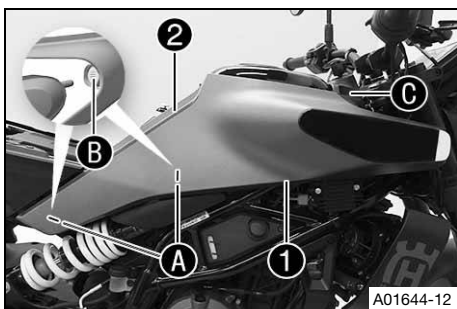

Main work

- Position the side cover.

Guideline

Grease the holding lug and rubber bushing.

- ✓ Holding lugs **A** engage in rubber bushings **B**.
- ✓ Hook side cover into area **C**.
- Mount and tighten screws **1** and **2**.


Guideline

Screw, front trim	M6x15	3.8 Nm (2.8 lbf ft)
-------------------	-------	---------------------

Finishing work


- Install the luggage rack. (p. 74)
- Mount the front rider's seat. (p. 73)
- Mount the passenger seat. (p. 73)

12.16 Removing the right radiator spoiler

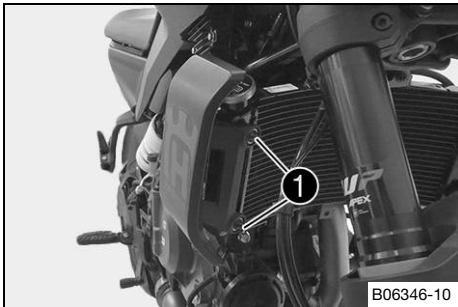

- Remove screws 1.
- Take off the radiator spoiler to the side.

12.17 Mounting the right radiator spoiler

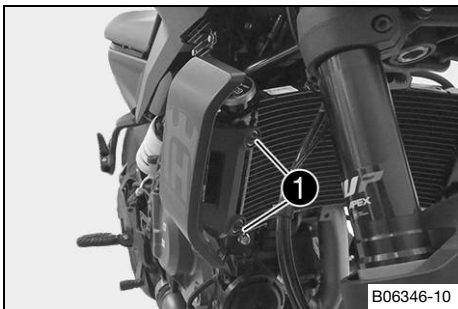


- Position the right radiator spoiler.

**Info**
Mount the opposite side in the same way.

- Tighten screws 1.


Guideline		
Screw, radiator shroud on radiator	M6	5 Nm (3.7 lbf ft)

12.18 Removing the front spoiler

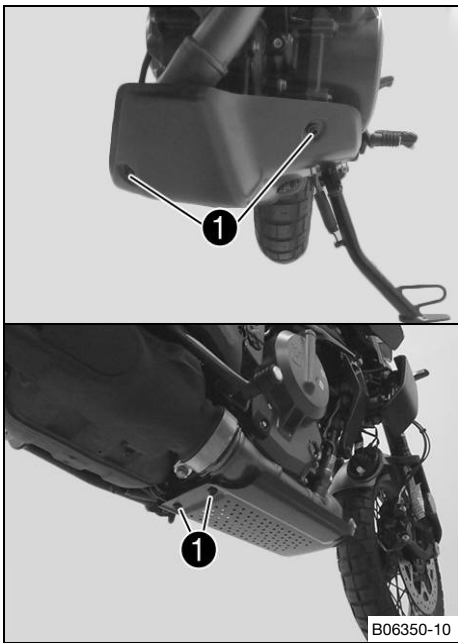

- Remove screws 1.
- Take off the front spoiler.

12.19 Fitting front spoiler

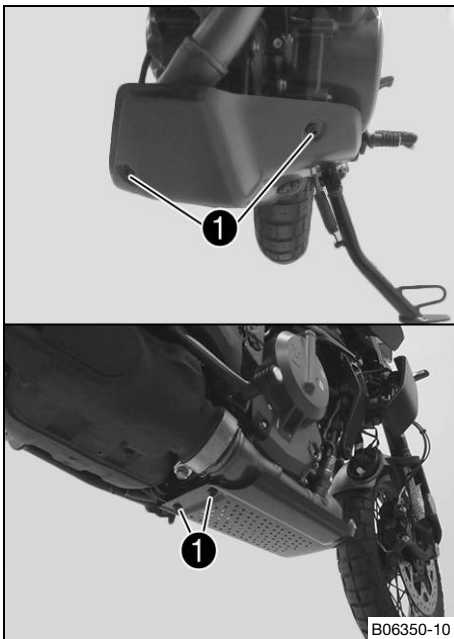


- Position the front spoiler, mount and tighten screws ①.

Guideline

Screw, front spoiler	M6	7 Nm (5.2 lbf ft)
----------------------	----	-------------------



12.20 Checking for chain dirt accumulation

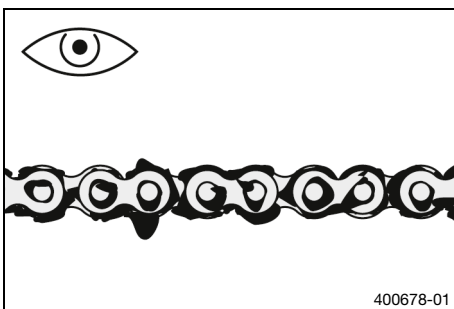

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 77)



12.21 Cleaning the chain



Warning

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.




Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

i Info
The service life of the chain depends largely on its maintenance.

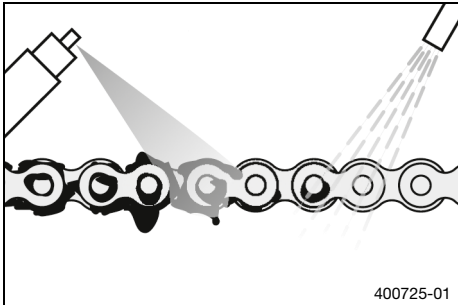

Preparatory work
– Raise the motorcycle with the rear lifting gear. (📖 p. 70)

Main work
– Clean the chain regularly.
– Rinse off the loose dirt with a gentle jet of water.
– Remove grease residue with chain cleaner.

Chain cleaner (📖 p. 140)


– After drying, apply chain spray.

Street chain spray (📖 p. 140)

Finishing work
– Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

12.22 Checking the chain tension

⚠ Warning
Danger of accidents Incorrect chain tension damages components and results in accidents.
If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.
If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.
– Check the chain tension regularly.
– Set the chain tension in accordance with the specification.

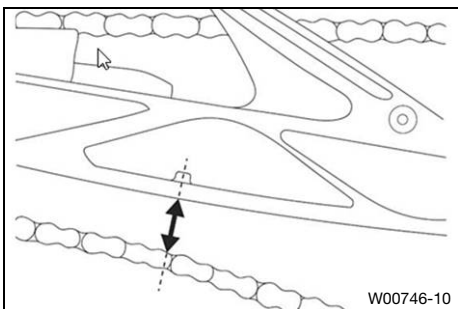

Preparatory work
– Raise the motorcycle with the rear lifting gear. (📖 p. 70)

Main work
– Shift the transmission into neutral.
– In the area after the chain sliding guard, press the chain upward toward the link fork and measure chain tension.

i Info
The upper part of the chain must be taut.
Chain wear is not always even, so repeat this measurement at different positions on the chain.

Chain tension	7 ... 10 mm (0.28 ... 0.39 in)
---------------	--------------------------------

» If the chain tension does not meet the specification:
– Adjust the chain tension. (📖 p. 79)
– Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

12.23 Adjusting the chain tension



Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 70)
- Check the chain tension. (📖 p. 78)

Main work

- Loosen nut ❶.
- Loosen nuts ❷.
- Adjust the chain tension by turning adjusting screws ❸ left and right.

Guideline

Chain tension	7 ... 10 mm (0.28 ... 0.39 in)
Turn the adjusting screws ❸ on the left and right so that the markings on the left and right chain adjusters ❹ are in the same position relative to the reference marks A. The rear wheel is then correctly aligned.	



Info

The top chain section must be taut.

Chain wear is not always even, so you should check the setting at different chain positions.


- Tighten nuts ❷.
- Make sure that chain adjusters ❹ are fitted correctly on adjusting screws ❸.
- Tighten nut ❶.

Guideline

Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)
-------------------------	---------	---------------------

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

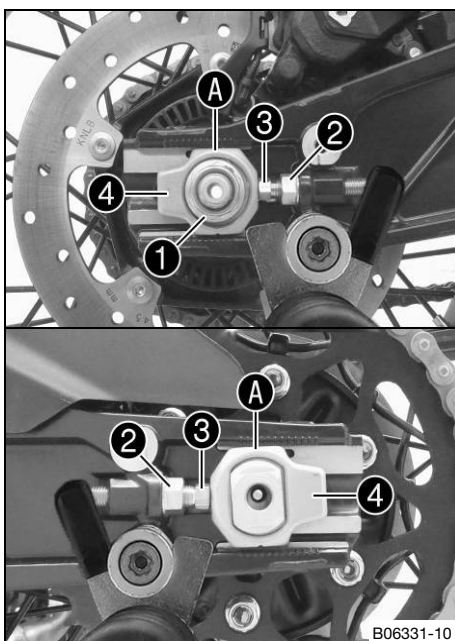


12.24 Checking the chain, rear sprocket, and engine sprocket

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 70)


Main work

- Check the chain, rear sprocket and engine sprocket for wear.
 - » If the chain, rear sprocket or engine sprocket is worn:
 - Change the drivetrain kit. 🛠️

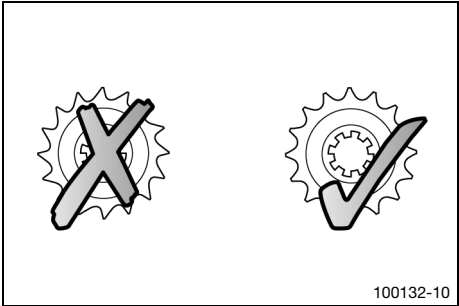

Info

The engine sprocket, rear sprocket and chain should always be replaced together.

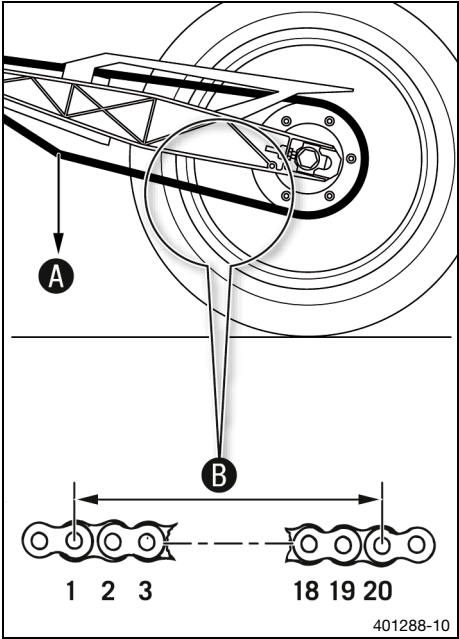

- Shift the transmission into neutral.
- Pull on the lower chain section with specified weight **A**.

Guideline

Weight, chain wear measurement	15 kg (33 lb.)
--------------------------------	----------------

- Measure distance **B** of 20 chain rollers in the lower chain section.

Info

Chain wear is not always even, so repeat this measurement at different positions on the chain.


Maximum distance B from 20 chain rollers at the longest chain section	304.0 mm (11.968 in)
--	----------------------

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 🛠️

Info

When a new chain is mounted, the rear sprocket and the engine sprocket should also be changed.

New chains wear out faster on old, worn sprockets.

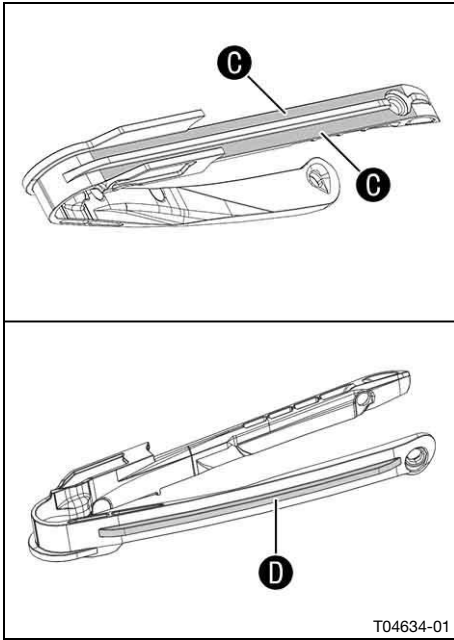

- Check the chain sliding guard for wear.
 - » If continuous signs of wear to the chain are visible on the chain sliding guard in the area **C** marked:
 - Change the chain sliding guard. 🛠️
 - » If the chain sliding guard is highly worn on the underside in the marked area **D**:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly fitted.
 - » If the chain sliding guard is loose:
 - Tighten the screw of the chain sliding guard.

Guideline


Screw, chain sliding guard	M6	9 Nm (6.6 lbf ft)
----------------------------	----	-------------------

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)



12.25 Adjusting the basic position of the clutch lever

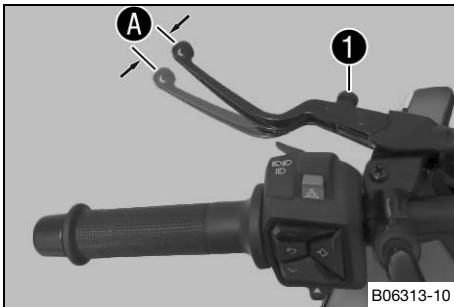

- Adjust the basic position of the clutch lever to your hand size by turning adjusting wheel **1**.
- Push the clutch lever forward and turn the adjusting wheel until a suitable position is reached in area **A**.




Info

Do not make any adjustments while riding.



13.1 Anti-lock braking system (ABS)

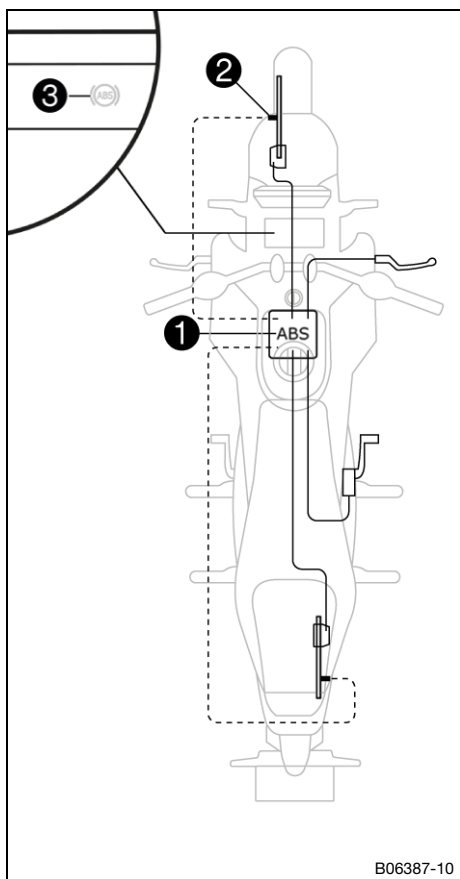

The ABS module **1**, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the fuel tank. One wheel speed sensor **2** is located in each case on the front and the rear wheel.



Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by Husqvarna Motorcycles.
- Only use tires/wheels approved by Husqvarna Motorcycles with the corresponding speed index.
- Maintain the specified tire pressure.
- Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

The ABS is a safety system that prevents the wheels locking when driving straight ahead or when cornering (within the limits of physics).



Warning

Danger of accidents Driving aids can reduce the probability of a fall only within physical limits.

It is not always possible to compensate for certain riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

- Adapt your riding style to the road conditions and your driving ability.



Warning

Danger of accidents An incorrectly selected ABS mode makes control of the vehicle considerably more difficult.

The ABS modes are each only suitable for certain conditions.

- Always select an ABS mode that is compatible with the surface of the ground.

The ABS operates with two independent brake circuits (front and rear brakes). When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating the brake pressure. The control function causes a slight pulsing of the hand and foot brake levers.


The ABS warning lamp **3** must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it is lit while riding, this indicates a fault in the ABS. In this case, the ABS is no longer enabled and the

wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making "wheelies" or if the rear wheel spins. This causes the ABS to switch off.

To reactivate the ABS, stop the vehicle and switch off the ignition. The ABS is reactivated when the vehicle is switched on again. The ABS warning lamp goes out after starting off.

13.2 Adjusting the basic position of the hand brake lever

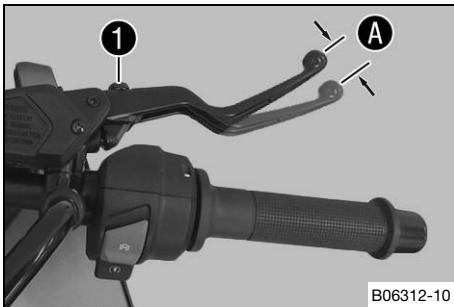

- Adjust the basic position of the hand brake lever to your hand size by turning adjusting wheel **1**.
- Push the hand brake lever forward and turn the adjusting wheel until a suitable position is reached in area **A**.



Info

Do not make any adjustments while riding.


13.3 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

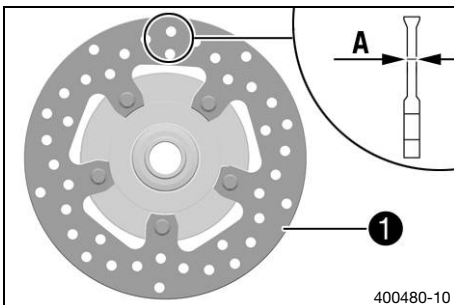

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.



Info

Wear will reduce the thickness of the brake disc at contact surface **1** of the brake linings.

Brake discs - wear limit

front	4.5 mm (0.177 in)
Rear	4.5 mm (0.177 in)

- » If the brake disc thickness is less than the specified value.
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️

13.4 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

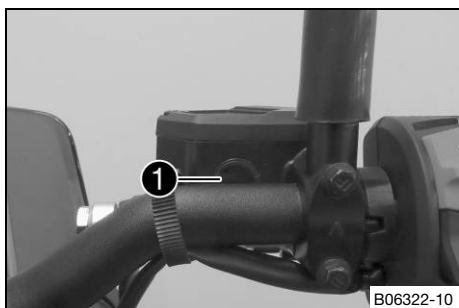

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in level viewer ①.
 - » If the brake fluid level is below the **MIN** marking:
 - Add front brake fluid. 📖 (p. 84)

13.5 Adding front brake fluid 📖



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Warning**

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Note**

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

**Info**

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake linings of the front brake are secured. (p. 85)

Main work


- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with membrane ③.
- Add brake fluid to level A.

Guideline

Dimension A	5 mm (0.2 in)
-------------	---------------

Brake fluid DOT 4 / DOT 5.1 (p. 138)

- Position the cover with the membrane. Mount and tighten the screws.

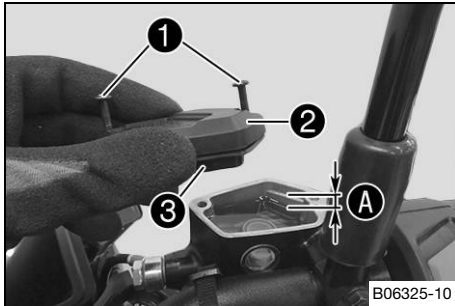**Info**

Use water to immediately clean up any brake fluid that has overflowed or spilled.



13.6 Checking that the brake linings of the front brake are secured

**Warning**

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)


**Warning**

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

13 BRAKE SYSTEM

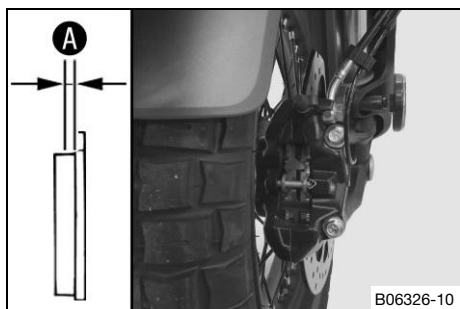

- Check the brake linings for lining thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If it is less than the minimum thickness:
 - Change the brake linings of the front brake. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the brake linings of the front brake. 🛠️
- Check that the brake linings are secured.
 - » If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.

13.7 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

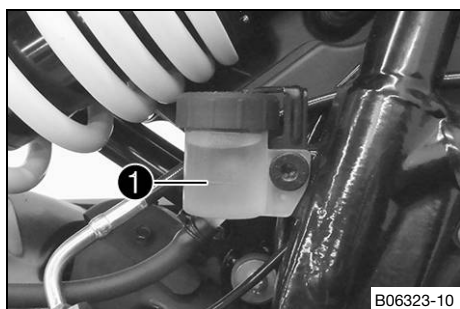

- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
 - » If the fluid level reaches the **MIN** marking **1**:
 - Add rear brake fluid. 🛠️ (📖 p. 86)

13.8 Adding rear brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Warning**

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**Warning**

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

**Note**

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

**Info**



Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work


- Check that the brake linings of the rear brake are secured. (p. 88)

Main work

- Remove screw ❶ and take off the screw cap lock.

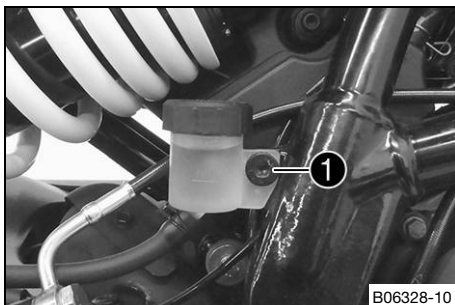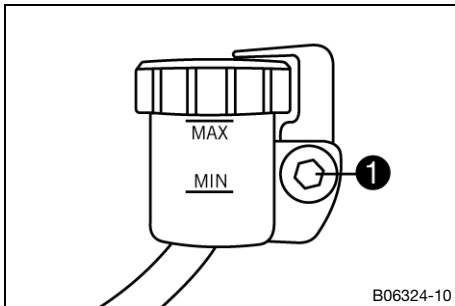

- Mount screw ❶.

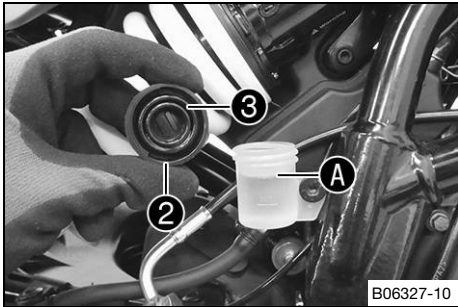


- Stand the vehicle upright.
- Remove screw cap ② with membrane ③.
- Add brake fluid up to the marking A.


Brake fluid DOT 4 / DOT 5.1 (📖 p. 138)

- Mount the screw cover with the membrane.

i Info
Use water to immediately clean up any brake fluid that has overflowed or spilled.

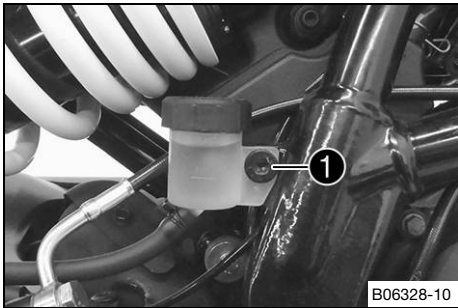

- Remove screw ①.

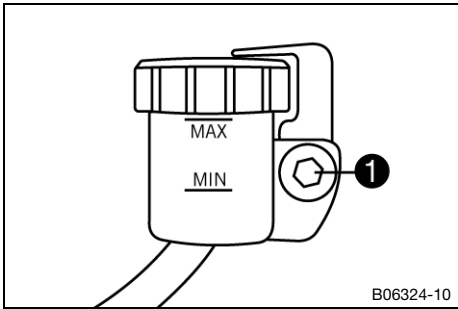

- Position the screw cap lock and mount and tighten screw ①.

Guideline

Screw, compensating tank cap lock, rear brake	M5	9 Nm (6.6 lbf ft)
---	----	-------------------

13.9 Checking that the brake linings of the rear brake are secured


⚠ Warning
Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

⚠ Warning
Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

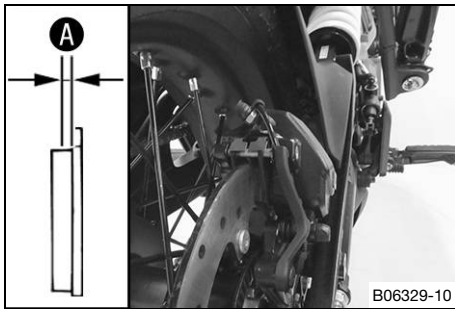


- Check the brake linings for lining thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If it is less than the minimum thickness:
 - Change the rear brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the rear brake linings. 🛠️
- Check that the brake linings are secured.
 - » If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.



14.1 Removing the front wheel

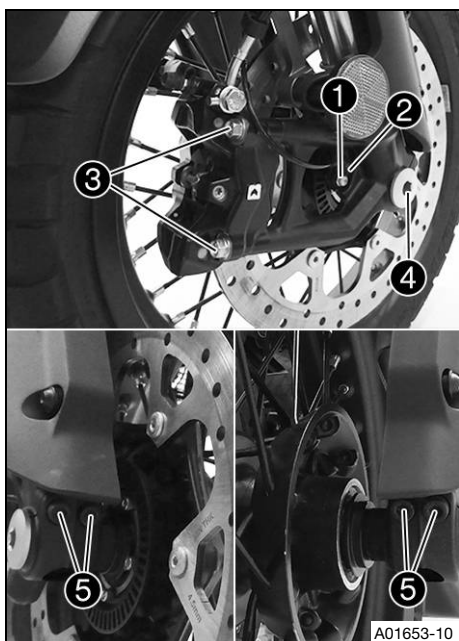

Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 70)
- Lift the motorcycle with the front lifting gear. (p. 70)

Main work

- Remove screw ① and pull wheel speed sensor ② out of the hole.
- Remove screws ③ and hang front wheel brake caliper to the side.
- Loosen screw ④ by several rotations.
- Loosen screws ⑤.
- Press on screw ④ to push the wheel spindle out of the axle clamp.
- Remove screw ④.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.



Info

Do not actuate the hand brake lever when the front wheel is removed.

- Remove spacers ⑥.

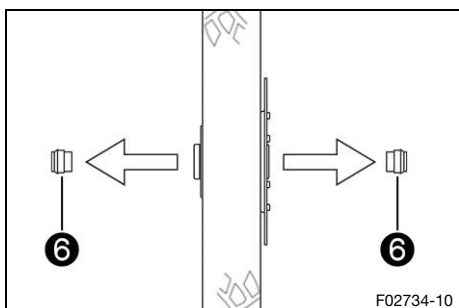



14.2 Installing the front wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

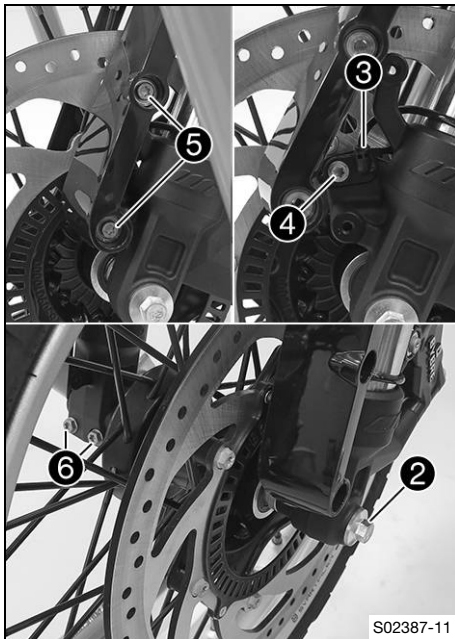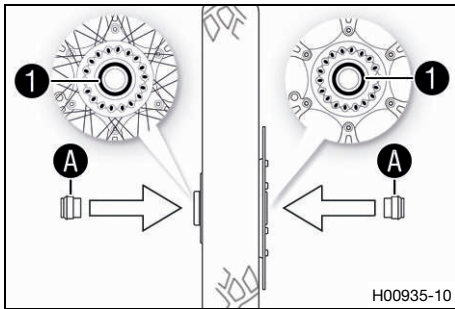

Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing. 🛠️
- Clean and grease shaft seal rings (1) and contact surfaces (A) of the spacers.

Long-life grease (📖 p. 140)

- Insert the spacers.

- Clean the thread of the wheel spindle and screw (2).
- Clean and lightly grease the wheel spindle.

Long-life grease (📖 p. 140)

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake linings are correctly positioned.
- Mount and tighten screw (2).

Guideline

Screw, front wheel spindle	M8	20 Nm (14.8 lbf ft)
----------------------------	----	---------------------

- Position front brake caliper and tighten screws (3).

Guideline

Screw, front brake caliper	M8x1	30 Nm (22.1 lbf ft) Loctite®243™
----------------------------	------	--

- Position wheel speed sensor (4) in the hole and tighten screw (5).

Guideline

Screw, wheel speed sensor	M6	7 Nm (5.2 lbf ft) Loctite®243™
---------------------------	----	--

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Take the motorcycle off the front lifting gear. (📖 p. 71)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws (6).


Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	---------------------

Finishing work

- Take the motorcycle off the front lifting gear. (📖 p. 71)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

14.3 Removing the rear wheel

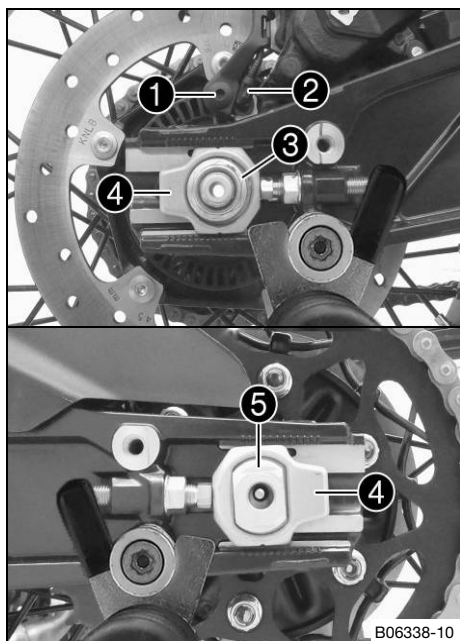

Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 70)

Main work

- Remove screw ① and pull wheel speed sensor ② out of the hole.
- Remove nut ③ with washer.
- Take off chain adjuster ④.
- Hold the rear wheel and remove wheel spindle ⑤ with the washer and chain adjuster ④.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Pull the rear wheel back and take it out of the link fork.



Info

Do not operate the foot brake lever when the rear wheel is removed.

- Remove spacers ⑥.

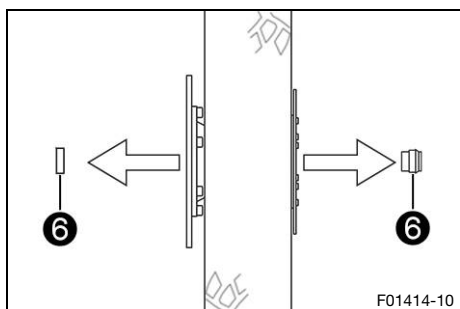

14.4 Installing the rear wheel



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.




Warning

Danger of accidents There is no braking effect to start with at the rear brake after installing the rear wheel.

- Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

Main work

- Check the rear hub damping rubber pieces. (p. 94)

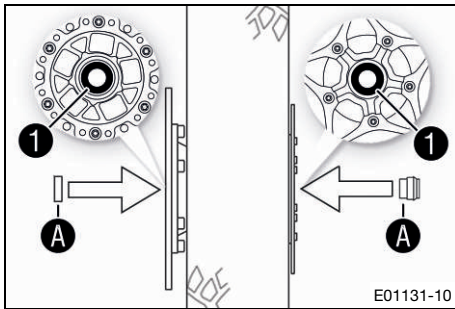

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Clean and grease shaft seal rings **1** and contact surfaces **A** of the spacers.

Long-life grease (📖 p. 140)

- Clean the thread of the wheel spindle and axle nut.
- Clean and lightly grease the wheel spindle.

Long-life grease (📖 p. 140)

- Clean the contact areas on the brake caliper bracket and link fork.
- Mount the damping rubber pieces and rear sprocket carrier on the rear wheel.
- Insert the narrow spacer into the side of the rear sprocket.
- Insert the wide spacer into the side of the brake disc.
- Position the rear wheel.
 - ✓ The brake linings are correctly positioned.
- Push the rear wheel forward as far as possible and lay the chain on the rear sprocket.

- Pull the rear wheel back and mount wheel spindle **3** with the washer and chain adjuster **4**.

Guideline

Mount left and right chain adjusters **4** in the same position.

- Mount nut **2** with washer.
- Make sure that the chain adjusters are positioned correctly on the screws.
- Check the chain tension. (📖 p. 78)
- Tighten nut **2**.

Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings **B**.

Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)
-------------------------	---------	---------------------


- Position wheel speed sensor **5** in the hole.
- Mount and tighten screw **6**.

Guideline

Screw, wheel speed sensor	M6	7 Nm (5.2 lbf ft) Loctite®243™
---------------------------	----	--


Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)

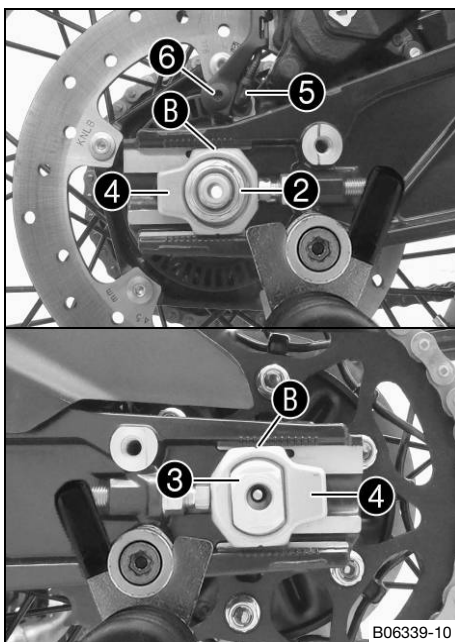

14.5 Checking the rear hub damping rubber pieces

Info
The engine power is transmitted from the rear sprocket to the rear wheel via the six damping rubber pieces. They eventually wear out during operation. If the damping rubber pieces are not changed in time, the rear sprocket carrier and the rear hub will be damaged.

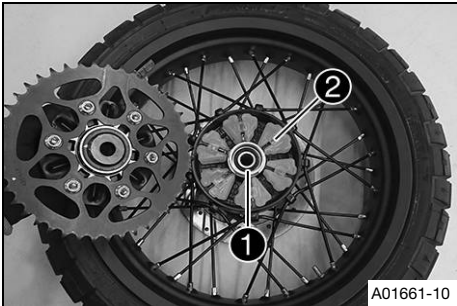

- Preparatory work**
- Raise the motorcycle with the rear lifting gear. (p. 70)
 - Remove the rear wheel. (p. 92)
- Main work**
- Check bearing 1.
 - » If the bearing is damaged or worn:
 - Change the bearing.
 - Check damping rubber pieces 2 of the rear hub for damage and wear.
 - » If the damping rubber pieces of the rear hub are damaged or worn:
 - Change all the damping rubber pieces of the rear hub.
 - Lay the rear wheel on a workbench with the rear sprocket facing upward and insert the wheel spindle in the hub.
 - To check play A, hold the rear wheel tight and try to rotate the rear sprocket.

Info
Measure the play on the outside of the rear sprocket.

Play of damping rubber pieces on rear wheel	≤ 5 mm (≤ 0.2 in)
---	-------------------

- » If clearance A is larger than the specified value:
 - Change all the damping rubber pieces of the rear hub.

- Finishing work**
- Install the rear wheel. (p. 92)
 - Remove the rear of the motorcycle from the lifting gear. (p. 70)

14.6 Checking the tire condition

Warning
Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

Warning
Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by Husqvarna Motorcycles with the corresponding speed index.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.


- Run in new tires with moderate riding and only gradually increase the lean angle.
Run-in distance 200 km (124 mi)



Info

The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

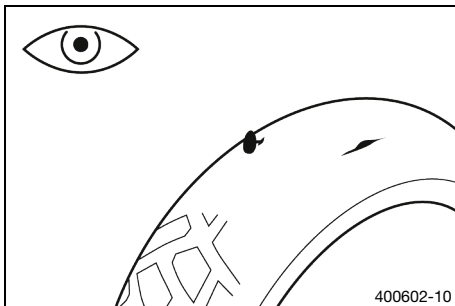

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 🛞
- Check tread depth.




Info

Observe the minimum profile depth required by national law.

Minimum tread depth	≥ 2 mm (≥ 0.08 in)
---------------------	--------------------

- » If the tread depth is less than the minimum tread depth:
 - Change the tires. 🛞
- Check the tire age.

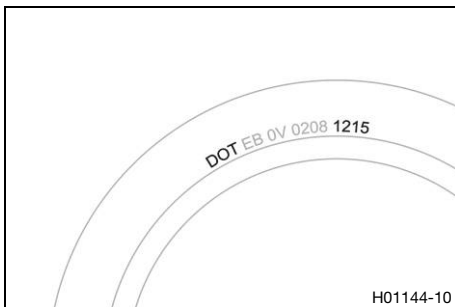

Info


The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

Husqvarna Motorcycles recommends that the tires be changed after five years at the latest, regardless of the actual wear.

- » If the tires are more than five years old:
 - Change the tires. 🛞

14.7 Checking tire pressure

i Info
Low tire pressure leads to abnormal wear and overheating of the tire.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

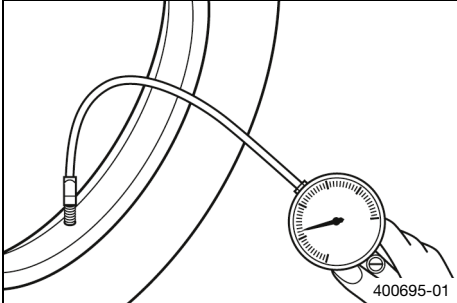

- Remove the protection cap.
- Check the tire pressure when the tires are cold.


Tire pressure when solo	
front	2.0 bar (29 psi)
rear	2.0 bar (29 psi)

Tire pressure with passenger / full payload	
front	2.0 bar (29 psi)
rear	2.2 bar (32 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire pressure.
- Mount the protection cap.

14.8 Checking the spoke tension

! Warning
Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and result in secondary damage.
The spokes break due to being overloaded if they are too tightly tensioned. If the tension in the spokes is too low, then lateral and radial run-out will form in the wheel. Other spokes will become looser as a result.
- Check spoke tension regularly, and in particular on a new vehicle. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

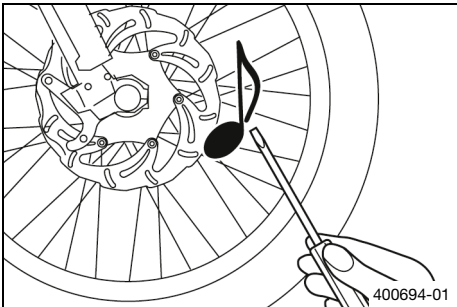


- Strike each spoke briefly using a screwdriver blade.

i Info
The frequency of the sound depends on the spoke length and spoke diameter.
If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

You should hear a high note.

- » If the spoke tension differs:
 - Correct the spoke tension. 🛠️

14.9 Using tire repair spray

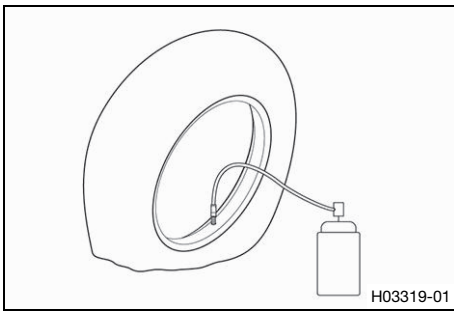

Warning

Danger of accidents Incorrect use of tire repair spray will result in the repaired tire losing pressure.

Tire repair spray cannot be used for all types of damage.

- Observe the instructions and specifications of the manufacturer of the tire repair spray.
- After repairing a tire with tire repair spray, ride slowly and carefully.
- Ride no further than to the nearest workshop and have the tire changed.

Tire repair spray should only be used in an emergency. We recommend transporting the broken down vehicle to the nearest workshop instead of using tire repair spray.

15.1 Removing the 12-V battery



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



Caution

Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.


- Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.


Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

Main work


- Remove battery cover ❶ from the 12-V battery.

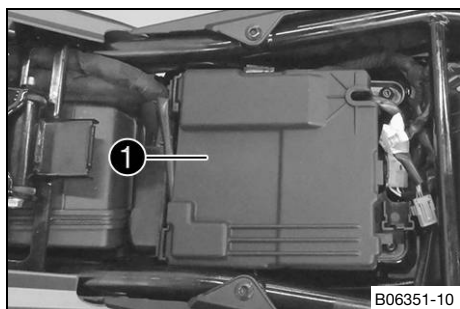

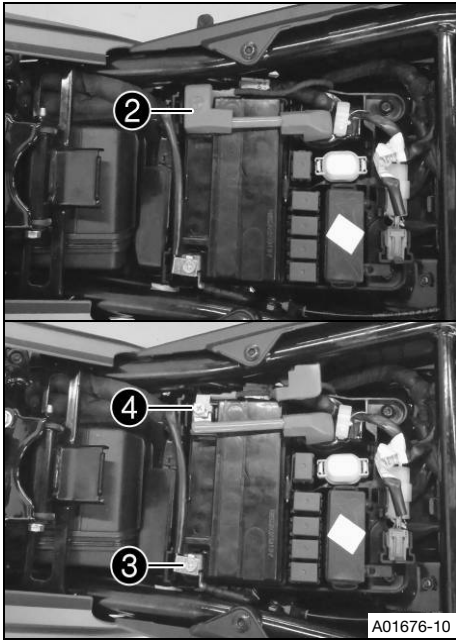


- Pull back positive terminal cover ②.
- Disconnect negative cable ③ from the 12-V battery.
- Disconnect positive cable ④ from the 12-V battery.
- Pull the 12-V battery upwards and out of the battery compartment.

15.2 Installing the 12-V battery ↗

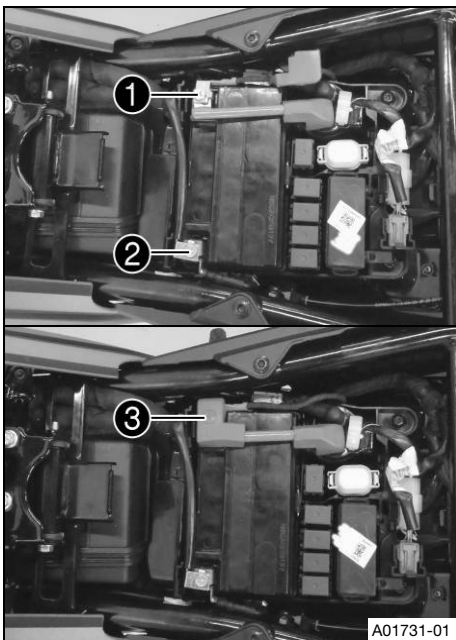

Main work

- Position the 12-V battery in the battery compartment.
- 12-V battery (ETZ-9-BS) (📖 p. 132)
- Position positive cable ① and mount and tighten the screw.
 - Position negative cable ② and mount and tighten the screw.
 - Position positive terminal cover ③.

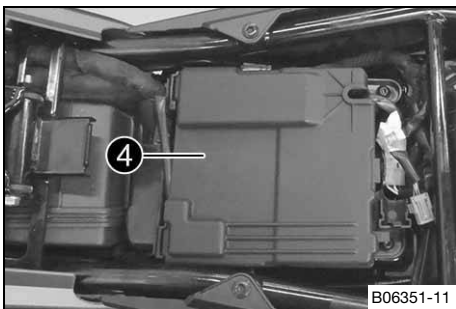

- Mount battery cover ④ on 12-V battery.

Finishing work

- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)
- Set time and date. (📖 p. 47)

15.3 Charging the 12-V battery 🔧



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



Info

Even when there is no load on the 12-V battery, it discharges steadily each day.

The charging level and the method of charging are very important for the service life of the 12-V battery.

Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery.

If the 12-V battery is discharged by repeated starting, charge the 12-V battery immediately.

If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, destroying the battery.


The 12-V battery is maintenance-free. The acid level does not have to be checked.


Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

Main work

- Remove battery cover ❶ from the 12-V battery.

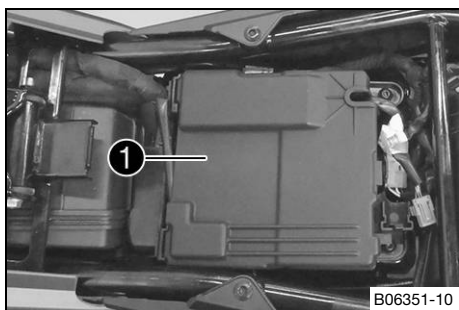

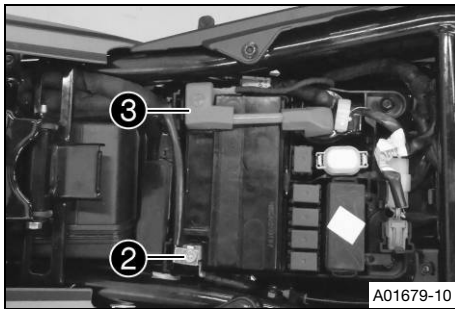

- Disconnect negative cable ② from the 12 V battery to avoid damaging the onboard electronics.
- Pull back positive terminal cover ③.



- Connect a battery charger to the 12-V battery. Connect the battery charger to the mains connection.

EU battery charger **TecMATE Optimate PRO**
(A61029974044)

Alternative 1

USA/CA battery charger **TecMATE Optimate PRO**
(A61029974144)

Alternative 2

UK battery charger **TecMATE Optimate PRO**
(A61029974244)

It is impossible to overcharge the 12-V battery using this battery charger.



Info

After charging, the battery charger can remain on the vehicle, ensuring that the battery voltage is maintained during the maintenance charging cycle.


- Disconnect the battery charger from the mains connection and the 12-V battery after charging.

Guideline


The charging current, charging voltage, and charging time must not be exceeded.

Recharge the 12-V battery regularly when the motorcycle is not being used

3 months

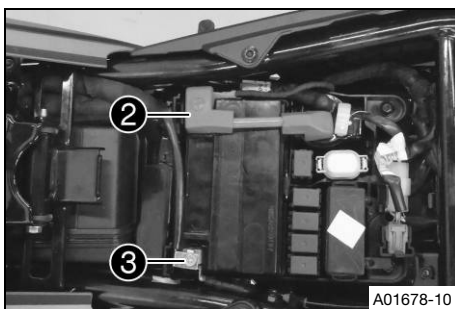

 - Position positive terminal cover ②.
- Position negative cable ③ and mount and tighten the screw.



- Mount battery cover **1** on 12-V battery.

Finishing work

- Mount the front rider's seat. (p. 73)
- Mount the passenger seat. (p. 73)
- Set time and date. (p. 47)

15.4 Changing the main fuse



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Info


 
The main fuse protects all electrical power consumers of the vehicle. The main fuse is under the seat.

Preparatory work

- Remove the passenger seat. (p. 72)
- Remove the front rider's seat. (p. 73)

Main work

- Remove protection cap **1**.

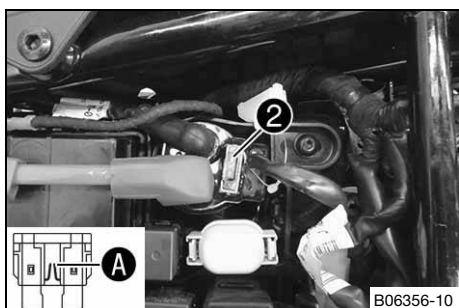

- Remove faulty main fuse **2**.



Info


A faulty fuse has a burned-out fuse wire **A**.
A spare fuse is located in the fuse box.

- Insert a new main fuse.

Fuse (75011088030) (p. 132)

**Tip**

Put a spare fuse in the fuse box so that it is available if needed.

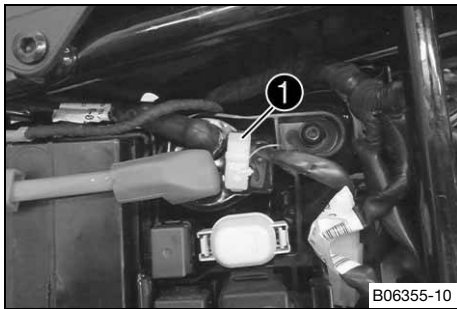

- Mount protection cap ①.

Finishing work

- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)
- Set time and date. (📖 p. 47)



15.5 Changing the ABS fuses

**Info**


Two fuses for the ABS are located under the protection cap next to the fuse box. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

To change the fuse of the ABS hydraulic unit:



- Take off protection cap ①.

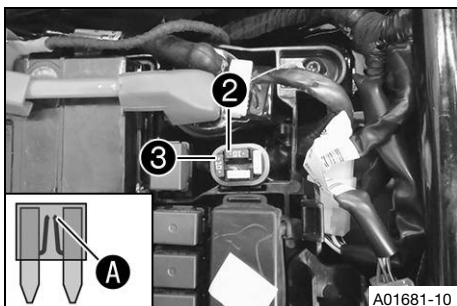

- Remove fuse ②.

**Info**

You can recognize a faulty fuse by a burned-out fuse wire ①.

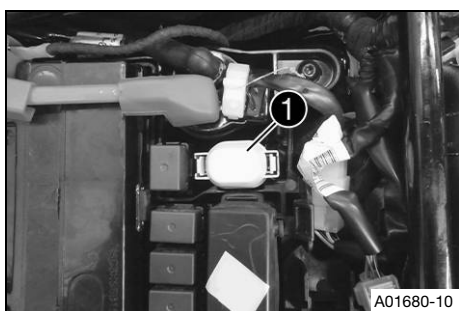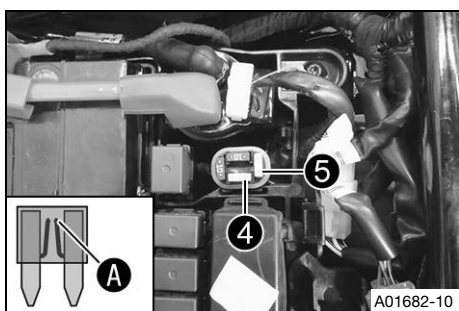

Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088010) (p. 132)



Tip

Insert spare fuse ③ in the fuse box so that it is available if needed.

- Mount the protection cap.

To change the fuse of the ABS return pump:

- Take off the protection cap and remove fuse ④.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088025) (p. 132)



Tip

Insert spare fuse ⑤ in the fuse box so that it is available if needed.

- Mount protection cap ①.

Finishing work

- Mount the front rider's seat. (p. 73)
- Mount the passenger seat. (p. 73)

15.6 Changing the fuses of individual electrical power consumers

Info

The fuse box containing the fuses of individual electrical power consumers is located under the seat.



Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

Main work

- Open fuse box cover ①.
- Remove the faulty fuse.

Guideline

Fuse 1 - 10 A - left combination switch, combination instrument, brake light, high beam, tail light
Fuse 2 - 10 A - combination instrument power supply, connectivity unit power supply
Fuse 3 - 15 A - power relay, fuel pump
Fuse 4 - 10 A - start auxiliary relay, horn
Fuse 5 - 20 A - radiator fan relay (fan)
Fuse 6 - 10 A - parking light, license plate lamp, light relay (low beam)
Fuse 7 - 10 A - engine control unit (ECU), ABS, diagnostics connector, connectivity unit, immobilizer
Fuse 8 - not assigned
Fuse 9 - 10 A - permanent positive for accessories (ACC1 front, ACC1 rear)
Fuse 10 - 15 A - ignition positive for accessories (ACC2 front, ACC2 rear), USB, heater control unit
Fuse SPARE - 10 A/15 A/20 A/30 A - spare fuses



Info

A faulty fuse has a burned-out fuse wire ①.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Insert the spare fuse with the correct rating.

Fuse (75011088010) (📖 p. 132)
Fuse (75011088015) (📖 p. 132)
Fuse (75011088020) (📖 p. 132)
Fuse (75011088030) (📖 p. 132)



Tip


Put a spare fuse in the fuse box so that it is available if needed.

- Check the function of the electrical power consumer.
- Close the fuse box cover ❶.

Finishing work

- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)

15.7 Checking the headlight setting

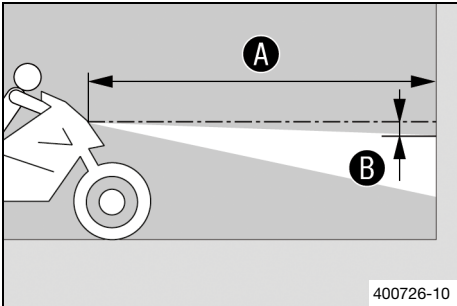

- Park the vehicle on a horizontal surface in front of a light-colored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance B under the first marking.

Guideline

Distance B	5 cm (2 in)
------------	-------------

- Position the vehicle upright at distance A from the wall and switch on the low beam.

Guideline


Distance A	5 m (16 ft)
------------	-------------

- The rider now mounts the motorcycle with luggage and passenger if applicable.
- Check the headlight setting.

The light-dark boundary must be exactly on the lower marking when the motorcycle is ready to be operated with the rider mounted along with any luggage and a passenger if applicable.

- » If the boundary between light and dark does not meet specifications:
- Adjust the headlight range. (📖 p. 106)

15.8 Adjusting the headlight range

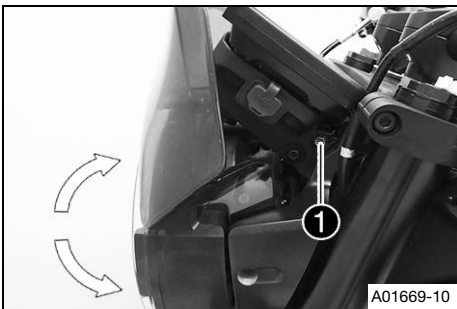

Preparatory work


- Check the headlight setting. (📖 p. 106)

Main work

- Loosen screw ❶.
- To set the headlight range of the headlight, swivel the headlight upwards or downwards.

i Info

Swiveling the headlight upwards increases the headlight range. Swiveling the headlight downwards reduces the headlight range. If you have a payload, you may have to correct the headlight range.

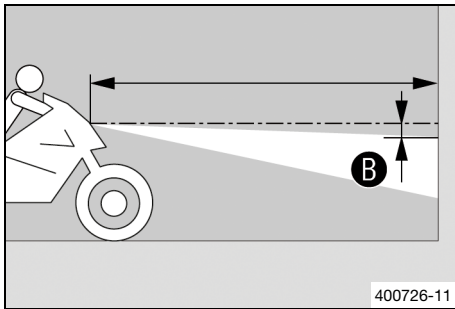

- Set the headlight to marking **B**.

Guideline

The light-dark boundary must lie exactly on lower marking **B** when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.

- Tighten screw **1**.

Guideline

Screw, headlight-range adjustment	M6	6 ... 7 Nm (4.4 ... 5.2 lbf ft)
-----------------------------------	----	---------------------------------




Info

Screw **1** also secures the headlight. Make sure that screw is always tightened.




15.9 Diagnostics connector

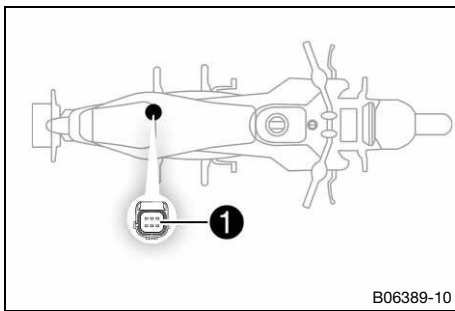

Diagnostics connector **1** is located under the seat.


15.10 Front ACC1 and ACC2

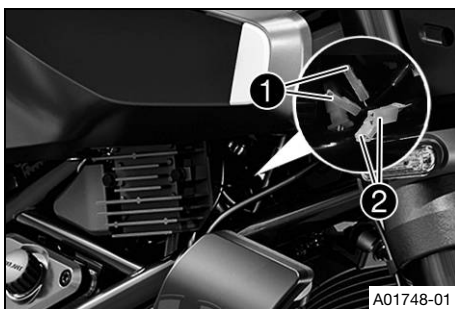

Installation location

- Power supplies ACC1 **1** and ACC2 **2** front are located on the right side under the fuel tank.


15.11 Rear ACC1 and ACC2

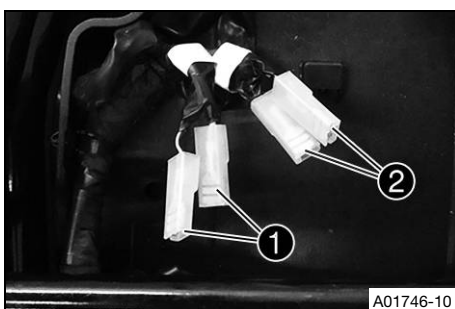

Installation location

- Power supplies ACC1 **1** and ACC2 **2** rear are located under the seat.

 16.1 Cooling system




B06340-10

Water pump ❶ in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ❷. Heat expansion causes excess coolant to flow into compensating tank ❸. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

 110 °C (230 °F)



W00559-10

The coolant is cooled by the air stream and a radiator fan ❹, which is activated at high temperature.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

i Info

If the cooling system overheats, the maximum engine speed is limited.

16.2 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)
- Remove the luggage rack. (📖 p. 74)
- Remove the right side cover. 🛠️ (📖 p. 75)

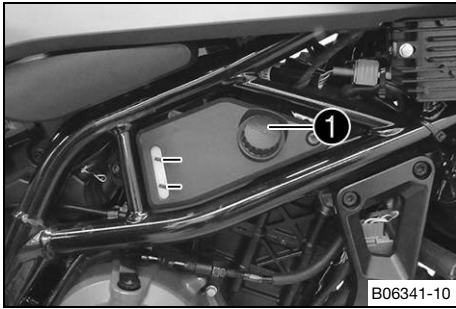

Main work

- Stand the motorcycle upright on a horizontal surface.
- Remove cap ① of the compensating tank.
- Check the antifreeze in the coolant.

-25 ... -45 °C (-13 ... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.

- Check the coolant level in the compensating tank.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 138)

- Mount the cap of the compensating tank.
- Remove radiator cap ②.
- Check the antifreeze in the coolant.

-25 ... -45 °C (-13 ... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.

- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.


Coolant (📖 p. 138)

- » If you had to add more coolant than the specified amount:
 - > 0.20 l (> 0.21 qt.)
 - Fill/bleed the cooling system. 🛠️ (📖 p. 111)

- Mount the radiator cap.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 75)
- Install the luggage rack. (📖 p. 74)
- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)

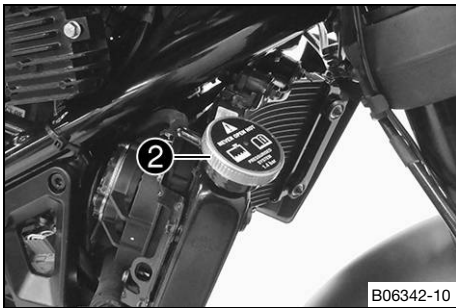

16.3 Checking the coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)
- Remove the luggage rack. (📖 p. 74)
- Remove the right side cover. 🛠️ (📖 p. 75)

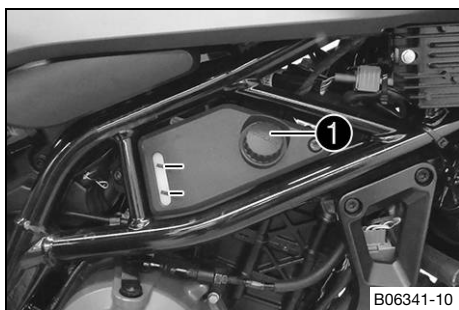


Main work

- Stand the motorcycle upright on a horizontal surface.
- Check the coolant level in compensating tank ①.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 138)

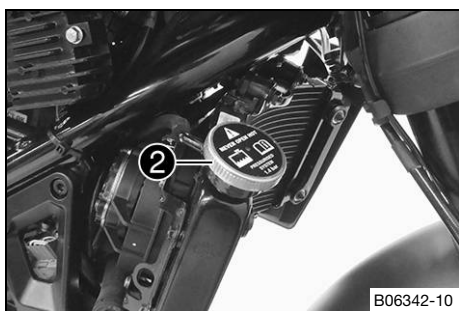

- Remove radiator cap ② and check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.
- » If you had to add more coolant than the specified amount:
 - Fill/bleed the cooling system. 🛠️ (📖 p. 111)

- Mount the radiator cap.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 75)
- Install the luggage rack. (📖 p. 74)
- Mount the front rider's seat. (📖 p. 73)

- Mount the passenger seat. (📖 p. 73)



16.4 Draining the coolant 🛠️



 
Warning

- Danger of scalding** During motorcycle operation, the coolant gets hot and is under pressure.
- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
 - Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
 - In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

- Danger of poisoning** Coolant is harmful to health.
- Keep coolant out of the reach of children.
 - Do not allow coolant to come into contact with the skin, the eyes and clothing.
 - Consult a doctor immediately if coolant is swallowed.
 - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
 - Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
 - Change clothing if coolant spills onto your clothing.



Condition

The engine is cold.

- Position the motorcycle upright.
- Position an appropriate container under the engine.
- Remove screw ❶ with the seal ring.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

Screw plug, water pump drain hole	M6	11 Nm (8.1 lbf ft) Loctite®243™
---	----	---



16.5 Filling/bleeding the cooling system 🛠️





Warning

- Danger of poisoning** Coolant is harmful to health.
- Keep coolant out of the reach of children.
 - Do not allow coolant to come into contact with the skin, the eyes and clothing.
 - Consult a doctor immediately if coolant is swallowed.
 - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
 - Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
 - Change clothing if coolant spills onto your clothing.

Preparatory work

- Remove the passenger seat. (📖 p. 72)
- Remove the front rider's seat. (📖 p. 73)

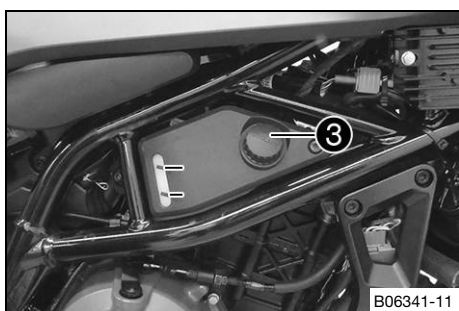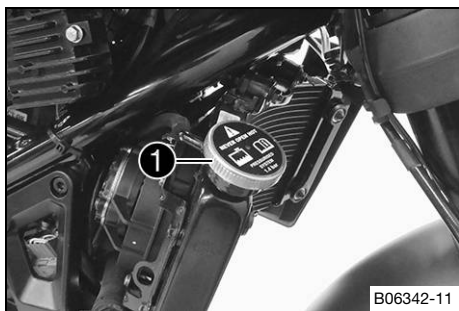

- Remove the luggage rack. (📖 p. 74)
- Remove the right side cover. 🛠️ (📖 p. 75)

Main work

- Remove radiator cap ❶.

- Loosen bleeder screw ❷.

Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant (📖 p. 138)

- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and allow it to warm up.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cover ❸ of the compensating tank and top up the coolant level up to the **MAX** marking.
- Mount the cover of the compensating tank.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 75)
- Install the luggage rack. (📖 p. 74)
- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)

16.6 Changing the coolant



Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




Warning

Danger of poisoning Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition
The engine is cold.

- Preparatory work**
- Remove the passenger seat. (📖 p. 72)
 - Remove the front rider's seat. (📖 p. 73)
 - Remove the luggage rack. (📖 p. 74)
 - Remove the right side cover. 🛠️ (📖 p. 75)

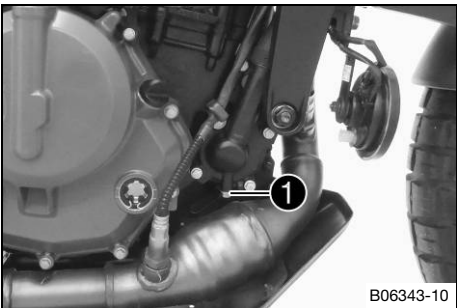

- Main work**
- Position the motorcycle upright.
 - Position an appropriate container under the engine.
 - Remove screw ❶ with the seal ring.

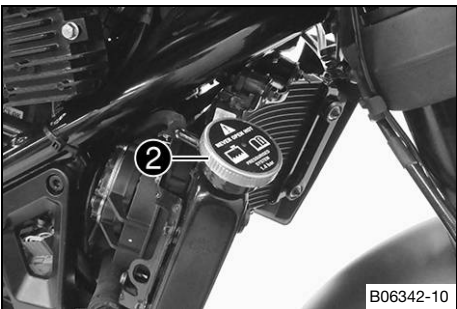

- Remove radiator cap ❷.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline		
Screw plug, water pump drain hole	M6	11 Nm (8.1 lbf ft) Loctite®243™



- Loosen bleeder screw ③.

Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant (📖 p. 138)

 
- Completely fill the radiator with coolant.
- Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.




- Start the engine and allow it to warm up.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cover of compensating tank ④ and top up the coolant level up to the **MAX** marking.
- Mount the cover of the compensating tank.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 75)
- Install the luggage rack. (📖 p. 74)
- Mount the front rider's seat. (📖 p. 73)
- Mount the passenger seat. (📖 p. 73)

17.1 Ride Mode

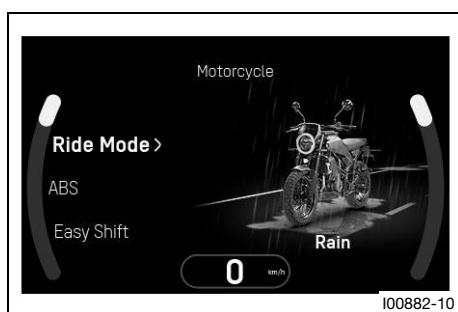

Possible states

- **Street** – Homologated performance with balanced response.
- **Rain** – Homologated performance with soft response for better rideability.



Warning

Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.


The riding modes are each only suitable for certain conditions.

- Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

Various vehicle tunings can be selected in the combination instrument in the **Ride Mode** submenu. **Street** and **Rain** are available.

The most recently selected riding mode appears in the display. The riding mode can also be changed while riding with the throttle grip closed.

17.2 Motorcycle traction control (optional) (Cornering MTC)

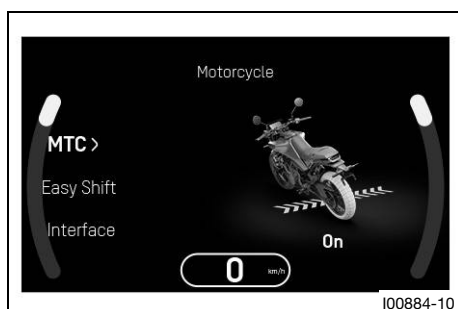

The motorcycle traction control (MTC) (optional) lowers the engine torque in case of loss of traction in the rear wheel. Depending on the riding mode (p. 115), different amounts of slip are allowed when traction control is activated.



Info

When motorcycle traction control is switched off, the rear wheel may spin during strong acceleration and on surfaces with low grip, resulting in a risk of falling.

After the ignition is switched on, motorcycle traction control is enabled again.

In the combination instrument, the motorcycle traction control can be switched on or off via the **MTC** submenu (optional).



Info

When the motorcycle traction control is active, the TC indicator lamp  flashes.


When motorcycle traction control is switched off, the TC indicator lamp  lights up.

17.3 Checking the clutch lever play

Note

Clutch damage If there is no free travel by the clutch lever, the clutch will begin to slip.

- Check the free travel of the clutch lever each time before using the motorcycle.
- Adjust the free travel of the clutch lever when necessary in accordance with the specification.

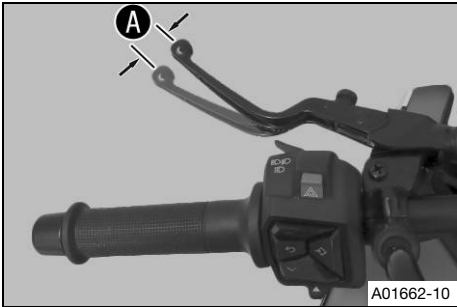

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position.
- Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever **A**.


Clutch lever play A	1 ... 3 mm (0.04 ... 0.12 in)
----------------------------	-------------------------------

- » If the clutch lever play does not meet the specified value:
 - Adjust play in the clutch lever. (🔧 p. 116)
- Move the handlebar to and fro over the entire steering range.

The clutch lever play must not change.
--

- » If the clutch lever play changes:
 - Check the routing of the clutch cable.

17.4 Adjusting play in the clutch lever 🛠️

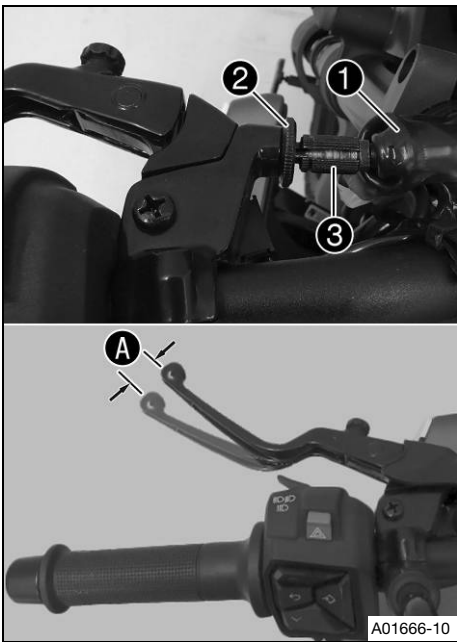

- Move the handlebar to the straight-ahead position.
- Push back sleeve **1**.
- Loosen lock nut **2**.
- Adjust the play in the clutch lever **A** by turning adjusting screw **3**.

Guideline


Clutch lever play A	1 ... 3 mm (0.04 ... 0.12 in)
----------------------------	-------------------------------

- Tighten lock nut **2**.
- Position bellows **1**.

17.5 Checking the basic position of the shift lever

i Info

When driving, the shift lever must not touch the rider's boot when in the basic position.
If the shift lever is permanently touching the boot, the transmission will be subject to excessive load; this can cause a malfunction of the Easy Shift.

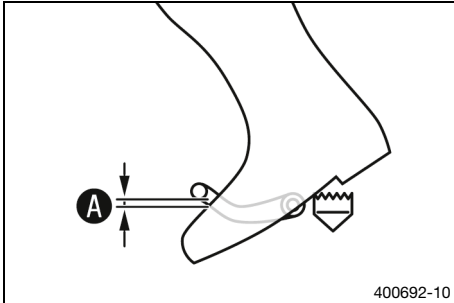

- Sit on the vehicle in the riding position and determine distance **A** between the upper edge of your boot and the shift lever.

Distance between shift lever and upper edge of boot	10 ... 20 mm (0.39 ... 0.79 in)
---	---------------------------------


- » If the distance does not meet specifications:
 - Adjust the basic position of the shift lever. (📖 p. 117)



17.6 Adjusting the basic position of the shift lever

i Info

The adjustment range of the shift lever is limited.

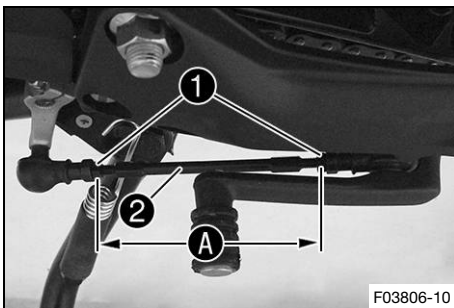

- Loosen nuts **1**.
- Adjust the shift lever by turning shift rod **2**.

Guideline

Shift rod adjustment range A	110 ... 120 mm (4.33 ... 4.72 in)
Make equal adjustments on both sides.	
At least five threaded ends must be screwed into the seating.	

- Tighten nuts **1**.

Guideline


Nut, shift rod	M6	6 Nm (4.4 lbf ft)
Nut, shift rod	M6LH	6 Nm (4.4 lbf ft)

After the nuts have been tightened, the bearings of the shift rod must be central and aligned identically to each other in order to ensure freedom of movement in the bearing shells.

- Check the shift lever to ensure it is functioning properly and can move freely.



18.1 Checking the engine oil level

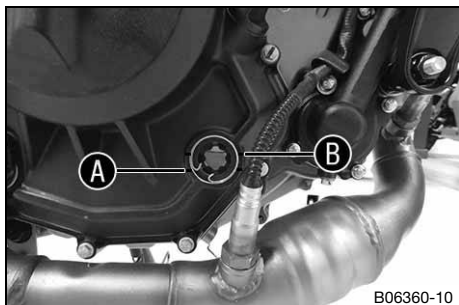

Condition

The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.



Info

After switching off the engine, wait one minute before checking the level.

The engine oil must be between the **A** and **B** markings .

- » When the engine oil level is below the **A** marking:
 - Add engine oil. (📖 p. 120)
- » When the engine oil level is above the **B** marking:
 - Correct the engine oil level.

18.2 Changing the engine oil and oil filter, cleaning the oil screens 🛠️



Warning

Danger of scalding Engine and gear oil get hot when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Note

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.





Info

Drain the engine oil while the engine is at operating temperature.

Preparatory work

- Stand the motorcycle on a level surface using the side stand.
- Remove the front spoiler. (📖 p. 76)

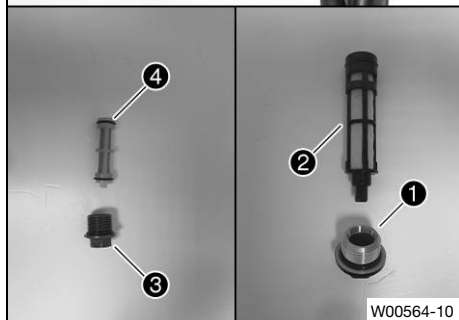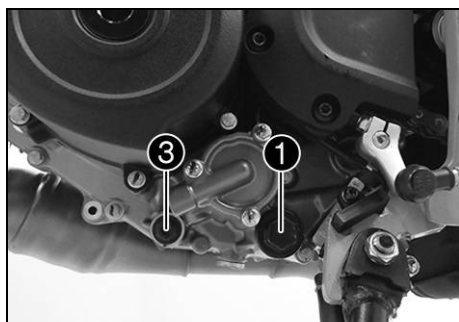

Main work

- Position an appropriate container under the engine.
- Remove oil drain plug **1** with the O-ring.
- Remove oil screen **2** with the O-ring.
- Remove screw plug **3** with oil screen **4**.
- Allow the engine oil to drain completely.
- Thoroughly clean the oil drain plugs and oil screens.
- Position oil screen **2** and mount and tighten oil drain plug **1** with the O-ring.


Guideline

Oil drain plug	M24x1.5	12.5 Nm (9.22 lbf ft)
----------------	---------	--------------------------


- Mount and tighten screw plug **3** with oil screen **4** and the O-ring.

Guideline

Oil screen screw plug, small	M17x1.5	11 Nm (8.1 lbf ft)
------------------------------	---------	--------------------

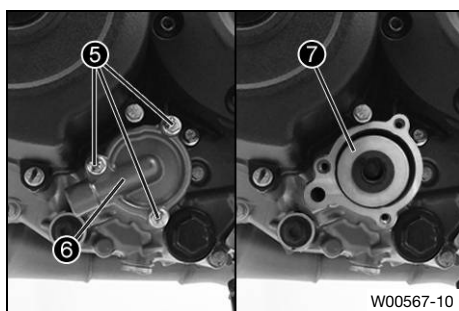

- Remove screws **5**. Take off oil filter cover **6** with the O-ring.
- Pull oil filter **7** out of the oil filter housing.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.

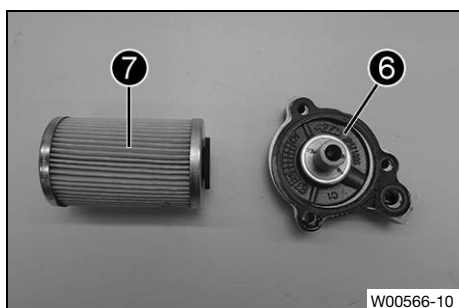

- Insert new oil filter **7**.
- Oil the O-ring of the oil filter cover. Mount oil filter cover **6**.
- Mount and tighten the screws.


Guideline

Screw, oil filter cover	M6	11 Nm (8.1 lbf ft)
-------------------------	----	--------------------



Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

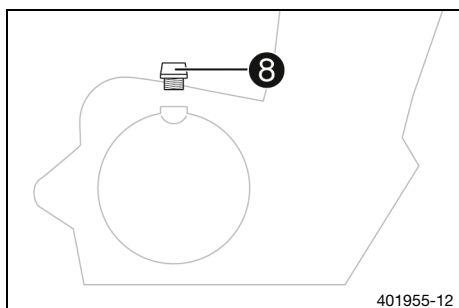

- Remove filler plug **8** with the O-ring, and fill up with engine oil.

Engine oil	1.5 l (1.6 qt.)	Engine oil (SAE 15W/50) (p. 138)
------------	-----------------	-------------------------------------

- Mount and tighten the filler plug together with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Finishing work


- Check the engine oil level. (📖 p. 118)
- Fit the front spoiler. (📖 p. 77)

18.3 Adding engine oil



Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

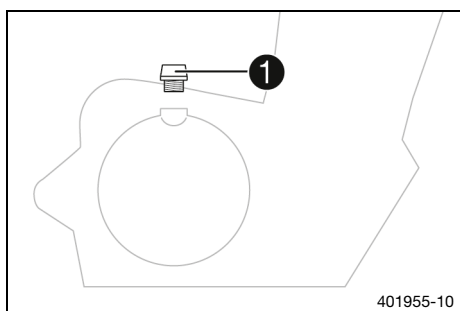

Main work

- Remove filler plug ① with the O-ring, and fill up with engine oil.

Engine oil (SAE 15W/50) (📖 p. 138)



Info

In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils. Husqvarna Motorcycles recommends changing the engine oil when necessary.

- Mount and tighten the filler plug together with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check for leaks.

Finishing work

- Check the engine oil level. (📖 p. 118)

19.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.
Minimum clearance 60 cm (23.6 in)



Note


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Clean the motorcycle regularly to maintain its value and appearance over a long period.
Avoid direct sunshine when cleaning the motorcycle.

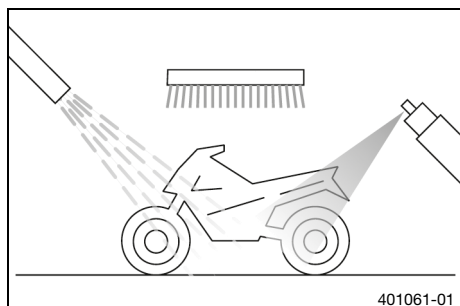

- Close off exhaust system to keep water from entering.
- Remove loose dirt first with a soft jet of water.
- Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.

Motorcycle cleaner (📖 p. 140)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry motorcycle; always rinse the vehicle with water first.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.

i Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Clean the chain. (📖 p. 77)
- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber
(📖 p. 140)

- Treat all painted parts with a mild paint care product.

Shine spray for paint, plastic and chromium (📖 p. 140)

i Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 140)

- Lubricate the ignition and steering lock.


Universal oil spray (📖 p. 140)

19.2 Checks and maintenance steps for winter operation

i Info

If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

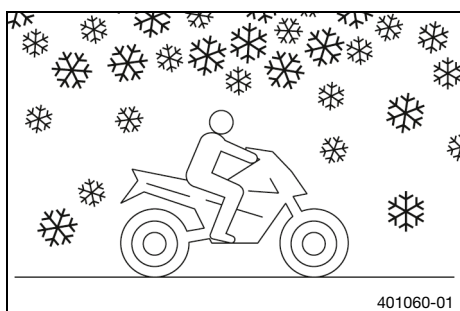

- Clean the motorcycle. (📖 p. 121)
- Clean the brakes.

i Info

After **EVERY** trip on salted roads, thoroughly clean the motorcycle and, in particular, the brake calipers and brake linings, after they have cooled down and without removing them, with cold water and dry carefully.

- Treat the engine, the link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.

**Info**


Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.

-
- Clean the chain. (📖 p. 77)



20.1 Storage

i Info
If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.
Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

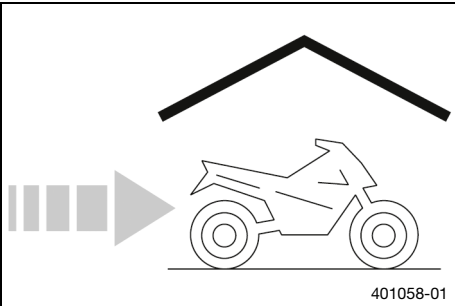

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (📖 p. 140)
- Refuel. (📖 p. 62)

i Tip
Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle. (📖 p. 121)
- Change the engine oil and the oil filter, clean the oil screens. 🛠️ (📖 p. 118)
- Check the antifreeze and coolant level. (📖 p. 108)
- Check tire pressure. (📖 p. 96)
- Remove the 12-V battery. 🛠️ (📖 p. 98)
- Charge the 12-V battery. 🛠️ (📖 p. 100)

Guideline	
Storage temperature of the 12-V battery without direct sunlight	0 ... 35 °C (32 ... 95 °F)


- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

i Info
Husqvarna Motorcycles recommends jacking up the motorcycle.

- Raise the motorcycle with the rear lifting gear. (📖 p. 70)
- Lift the motorcycle with the front lifting gear. (📖 p. 70)
- Cover the motorcycle with a tarp or a similar cover that is permeable to air.

i Info
Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.
Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

20.2 Preparing for use after storage

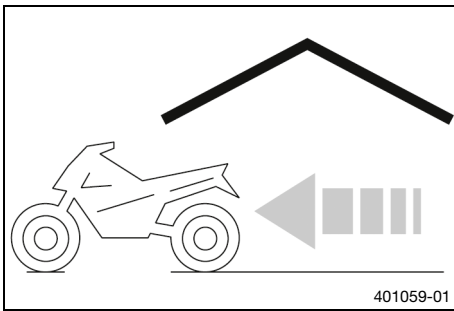

- Take the motorcycle off the front lifting gear. (📖 p. 71)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 70)
- Install the 12-V battery. 🔧 (📖 p. 99)
- Set time and date. (📖 p. 47)
- Perform checks and maintenance measures when preparing for use. (📖 p. 54)
- Take a test ride.



Faults	Possible cause	Action
The engine does not turn when the start button is pressed	Operating error	– Carry out start procedure. (📖 p. 54)
	12-V battery discharged	– Charge the 12-V battery. 🔧 (📖 p. 100)
	Main fuse or fuse 3 , 4 or 7 blown	– Change the main fuse. (📖 p. 102) – Change the fuses of individual electrical power consumers. (📖 p. 105)
	No ground connection present on the starter motor	– Check the ground connection.
Engine turns only if the clutch lever is drawn	The vehicle is in gear	– Shift the transmission into neutral.
	The vehicle is in gear and the side stand is folded out	– Shift the transmission into neutral.
The engine turns but does not start	Operating error	– Carry out start procedure. (📖 p. 54)
	Quick release coupling not joined	– Join the quick release coupling.
	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🔧
Engine has too little power	Air filter is very dirty	– Change the air filter.
	Fuel filter is very dirty	– Check the fuel pressure. 🔧
	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🔧
Engine overheats	Too little coolant in cooling system	– Check the cooling system for leakage. – Check the coolant level. (📖 p. 110)
	Radiator fins very dirty	– Clean the radiator fins.
	Foam formation in cooling system	– Drain the coolant. 🔧 (📖 p. 111) – Fill/bleed the cooling system. 🔧 (📖 p. 111)
	Thermostat defective	– Check the thermostat. 🔧
	Fuse 5 blown	– Change the fuses of individual electrical power consumers. (📖 p. 105)
	Defect in radiator fan system	– Check the radiator fan system. 🔧
Malfunction indicator lamp lights up yellow	Malfunction in the electronic fuel injection	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🔧
Engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 62)
	Main fuse or fuse 3 , 4 or 7 blown	– Change the main fuse. (📖 p. 102) – Change the fuses of individual electrical power consumers. (📖 p. 105)
ABS warning lamp lights up	ABS fuse blown	– Change the ABS fuses. (📖 p. 103)
	Large difference in wheel speeds of the front and rear wheels	– Stop the vehicle, switch off the ignition, and start it again.
	Malfunction in ABS	– Read out the fault memory using the Husqvarna Motorcycles diagnostics tool. 🔧
High oil consumption	Engine vent hose bent	– Route the vent hose without bends or change it if necessary.
	Engine oil level too high	– Check the engine oil level. (📖 p. 118)

Faults	Possible cause	Action
High oil consumption	Engine oil too thin (low viscosity)	– Change the engine oil and the oil filter, clean the oil screens.  (📖 p. 118)
Headlight and position light are not functioning	Fuse 6 blown	– Change the fuses of individual electrical power consumers. (📖 p. 105)
Turn signal, brake light, and horn are not functional	Fuse 4 or 6 blown	– Change the fuses of individual electrical power consumers. (📖 p. 105)
Time is not displayed or not correctly displayed	Fuse 2 or 7 blown	– Change the fuses of individual electrical power consumers. (📖 p. 105)
12 V battery discharged	Ignition was not switched off when vehicle was parked	– Charge the 12-V battery.  (📖 p. 100)
	The 12-V battery is not being charged by the alternator	– Check the charging voltage.  – Check the open-circuit current. 
The combination instrument shows nothing on the display	Fuse 2 or 7 blown	– Change the fuses of individual electrical power consumers. (📖 p. 105)
Speedometer in combination instrument not functioning	Speedometer wiring harness is damaged or plug-in connector is oxidized	– Check the wiring harness and plug-in connector.

22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	398 cm ³ (24.29 cu in)
Stroke	64 mm (2.52 in)
Bore	89 mm (3.5 in)
Compression ratio	12.59:1
Control	DOHC, four valves controlled via cam lever, chain drive
Valve diameter, intake	36 mm (1.42 in)
Valve diameter, exhaust	29 mm (1.14 in)
Valve clearance, intake, cold	0.10 ... 0.15 mm (0.0039 ... 0.0059 in)
Valve clearance, exhaust, cold	0.15 ... 0.20 mm (0.0059 ... 0.0079 in)
Crankshaft bearing	Slide bearing
Conrod bearing	Slide bearing
Pistons	Forged aluminum
Piston rings	1 compression ring, 1 tapered compression piston ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication
Primary transmission	33:86
Clutch	Multi-disc clutch in oil bath
Transmission	Sixth-gear manual transmission
Transmission ratio	
1st gear	12:32
2nd gear	14:26
3rd gear	19:27
4th gear	21:24
5th gear	23:22
6th gear	25:21
Mixture preparation	Electronic fuel injection
Ignition	Fully electric ignition
Alternator	12 V, 230 W
Spark plug	BOSCHVR6NEU
Spark plug electrode gap	1 mm (0.04 in)
Cooling	Water cooling, permanent circulation of coolant by water pump
idle speed	1,600 ± 50 rpm
Starting aid	Starter motor

22.2 Engine tightening torques

Screw, gear position sensor	M5	5.5 Nm (4.06 lbf ft) Loctite®243™
Oil nozzle	M5x0.8	6 Nm (4.4 lbf ft) Loctite®243™
Oil spray jet	M5x0.8	5.5 Nm (4.06 lbf ft) Loctite®243™
Oil spray jet, camshaft bearing bridge	M5x0.8	9 Nm (6.6 lbf ft) Loctite®243™
Screw, crankshaft speed sensor	M5x0.8	5.5 Nm (4.06 lbf ft) Loctite®243™
Screw, retaining bracket, stator cable	M5x0.8	5.5 Nm (4.06 lbf ft) Loctite®243™
Screw, shift shaft sensor	M5x0.8	6 Nm (4.4 lbf ft) Loctite®243™
Screw, stator	M5x0.8	7.5 Nm (5.53 lbf ft) Loctite®243™
Chain shaft screw, cylinder head	M6	11 Nm (8.1 lbf ft)
Ignition coil cable holder	M6	11 Nm (8.1 lbf ft)
Nut, water pump impeller	M6	8 Nm (5.9 lbf ft) Loctite®243™
Screw plug, water pump drain hole	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, alternator cover	M6	11 Nm (8.1 lbf ft)
Screw, autodecompression mechanism	M6	9 Nm (6.6 lbf ft) Loctite®243™
Screw, bearing retainer	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, camshaft bearing bridge	M6x35	9 Nm (6.6 lbf ft)
Screw, camshaft bearing bridge	M6x40	9 Nm (6.6 lbf ft)
Screw, camshaft bearing bridge	M6x45	9 Nm (6.6 lbf ft)
Screw, clutch cover	M6	11 Nm (8.1 lbf ft)
Screw, clutch spring	M6	10 Nm (7.4 lbf ft)
Screw, cylinder head	M6	11 Nm (8.1 lbf ft)
Screw, engine case	M6x35	11 Nm (8.1 lbf ft) Loctite®243™
Screw, engine case	M6x70	11 Nm (8.1 lbf ft) Loctite®243™
Screw, engine vent plate	M6	11 Nm (8.1 lbf ft)
Screw, freewheel gear retaining bracket	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, inlet sleeve	M6	9 Nm (6.6 lbf ft)
Screw, locking lever	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, oil filter cover	M6	11 Nm (8.1 lbf ft)
Screw, oil pump	M6	11 Nm (8.1 lbf ft)
Screw, release for timing chain tensioner	M6	8 Nm (5.9 lbf ft)

Screw, retaining bracket	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, shift drum locating unit	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, starter motor	M6	11 Nm (8.1 lbf ft)
Screw, thermostat	M6	11 Nm (8.1 lbf ft)
Screw, timing chain shaft	M6x46	11 Nm (8.1 lbf ft)
Screw, timing chain tensioner	M6	11 Nm (8.1 lbf ft)
Screw, timing chain tensioning rail	M6	11 Nm (8.1 lbf ft) Loctite®243™
Screw, valve cover	M6	11 Nm (8.1 lbf ft)
Screw, water pump cover	M6	11 Nm (8.1 lbf ft)
Nut, exhaust flange	M8	21 Nm (15.5 lbf ft)
Screw, intermediate gear	M8	21 Nm (15.5 lbf ft)
Stud, exhaust flange	M8	21 Nm (15.5 lbf ft)
Screw, spring thrust bearing of the shift shaft	M8x1.25	21 Nm (15.5 lbf ft) Loctite®243™
TDC locking screw, balancer shaft	M8x1.25	15.5 Nm (11.43 lbf ft) Loctite®243™
TDC locking screw, crankshaft	M8x1.25	15.5 Nm (11.43 lbf ft) Loctite®243™
Screw, conrod bearing	M9x1	1st stage 17.7 Nm (13.06 lbf ft) 2nd stage 60° Collar and thread oiled
Screw plug, cam lever shafts	M10	9 Nm (6.6 lbf ft) Loctite®243™
Oil pressure sensor	M10x1	9 Nm (6.6 lbf ft)
Screw, camshaft gear wheel	M10x1	42 Nm (31 lbf ft) Loctite®243™
Screw, cylinder head	M10x1.25	60 Nm (44.3 lbf ft) Thread is oiled, head flat is greased
Coolant temperature sensor	M10x1.5	13 Nm (9.6 lbf ft)
Spark plug	M12x1.25	16 Nm (11.8 lbf ft)
Screw, rotor	M12x1.5	125 Nm (92.2 lbf ft)
Nut, inner clutch hub	M16LHx1.5	119 Nm (87.8 lbf ft)
Nut, primary gear wheel/timing chain sprocket	M16x1.5	136 Nm (100.3 lbf ft)
Oil pressure regulator valve	M16x1.5	39 Nm (28.8 lbf ft)
Oil screen screw plug, small	M17x1.5	11 Nm (8.1 lbf ft)
Screw plug, alternator cover TDC	M18x1.5	9 Nm (6.6 lbf ft)
Screw, countershaft gear	M18x1.5	95 Nm (70.1 lbf ft)
Oil drain plug	M24x1.5	12.5 Nm (9.22 lbf ft)
Screw plug, alternator cover	M24x1.5	11 Nm (8.1 lbf ft)

22.3 Capacities


22.3.1 Engine oil

Engine oil	1.5 l (1.6 qt.)	Engine oil (SAE 15W/50) (📖 p. 138)
------------	-----------------	------------------------------------

22.3.2 Coolant

Coolant	1 l (1 qt.)	Coolant (📖 p. 138)
---------	-------------	--------------------

22.3.3 Fuel

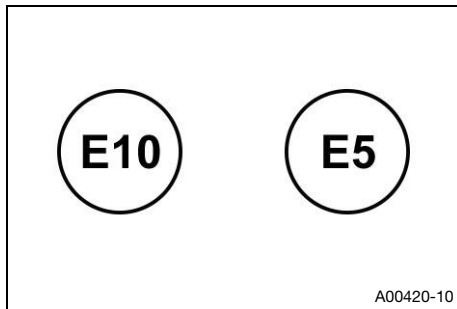

Please observe the labels on EU fuel pumps.

Total fuel tank capacity, approx.	13 l (3.4 US gal)	Super unleaded (ROZ 95) (📖 p. 139)
-----------------------------------	-------------------	---------------------------------------

Fuel reserve, approx.	1.5 l (1.6 qt.)
-----------------------	-----------------

22.4 Chassis

Frame	Lattice frame of steel tubes, powder-coated
Fork	WP APEX 3343
Shock absorber	WP APEX 3446
Brake system	
front	Disc brake with 4-piston brake caliper
rear	Disc brake with single-pot brake caliper, floating
Suspension travel	
Front	150 mm (5.91 in)
Rear	150 mm (5.91 in)
Brake discs - diameter	
Front	320 mm (12.6 in)
Rear	240 mm (9.45 in)
Brake discs - wear limit	
front	4.5 mm (0.177 in)
Rear	4.5 mm (0.177 in)
Tire pressure when solo	
front	2.0 bar (29 psi)
rear	2.0 bar (29 psi)
Tire pressure with passenger / full payload	
front	2.0 bar (29 psi)
rear	2.2 bar (32 psi)

Secondary ratio	15:45
	 Info Modifications to the transmission ratio are not permitted and can lead to malfunctions.
Chain	5/8 x 1/4" (520) X-ring
Steering head angle	66°
Wheelbase	1,368 ± 15.5 mm (53.86 ± 0.61 in)
Seat height, unloaded	820 mm (32.28 in)
Weight without fuel, approx.	159.37 kg (351.35 lb.)
Maximum permissible front axle load	127 kg (280 lb.)
Maximum permissible rear axle load	228 kg (503 lb.)
Maximum permissible overall weight	355 kg (783 lb.)

22.5 Electrical system

12-V battery	ETZ-9-BS	Battery voltage: 12 V Nominal capacity: 8 Ah Maintenance-free
Fuse	75011088010	10 A
Fuse	75011088015	15 A
Fuse	75011088020	20 A
Fuse	75011088025	25 A
Fuse	75011088030	30 A
Headlight	LED	
Position light	LED	
Combination instrument lighting and indicator lamps	LED	
Turn signal	LED	
Brake/tail light	LED	
License plate lamp	LED	

22.6 Tires



Info

Hoses must be used in the tubeless tires on this vehicle.

Front tire	Rear tire
110/70 R 17 M/C 54H M+S TL Pirelli SCORPION RALLY STR	150/60 R 17 M/C 66H M+S TL Pirelli SCORPION RALLY STR
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed. Additional information is available in the Service section under: www.husqvarna-motorcycles.com	

22.7 Fork

Fork article number	A617C132X201102	
Fork	WP APEX 3343	
Fork oil per fork leg	420 ± 5 ml (14.2 ± 0.17 fl. oz.)	Fork oil (SAE 5) (📖 p. 139)

22.8 Shock absorber

Shock absorber article number	A617C432X313102	
Shock absorber	WP APEX 3446	
Spring preload		
Standard	11 mm (0.43 in)	

22.9 Chassis tightening torques

Exhaust clamp	-	21 Nm (15.5 lbf ft)
Screw, license plate lamp	4.2x13	1 ... 1.5 Nm (0.7 ... 1.11 lbf ft)
Remaining screws, chassis	M4	4 Nm (3 lbf ft)
Screw, wheel speed sensor - wheel	M4	2 Nm (1.5 lbf ft) Loctite®243™
Nut, chain guard	M5	7 Nm (5.2 lbf ft)
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
Screw, battery compartment	M5	4 Nm (3 lbf ft)
Screw, brake line guide	M5	7 Nm (5.2 lbf ft)
Screw, fender	M5x12	4 ... 5 Nm (3 ... 3.7 lbf ft)
Screw, fuel tank cover	M5	5 Nm (3.7 lbf ft)
Screw, light switch	M5	1.5 Nm (1.11 lbf ft)
Screw, speedometer on speedometer holder	M5x18	4 Nm (3 lbf ft)
Screw, tail light	M5	4 ... 5 Nm (3 ... 3.7 lbf ft)
Screw, throttle grip	M5	1.5 Nm (1.11 lbf ft)
Screw, turn signal bracket	M5	4 Nm (3 lbf ft)
Screw, wheel cover license plate bracket	M5	4 ... 5 Nm (3 ... 3.7 lbf ft)
Screw, windshield on headlight bracket	M5	3 Nm (2.2 lbf ft)
Spoke nipple	M5	4 Nm (3 lbf ft)
Fender screw	M6	5 Nm (3.7 lbf ft)
Fitting, ABS module retaining bracket	M6	7 Nm (5.2 lbf ft)
Handlebar cross-strut screw	M6	7 Nm (5.2 lbf ft) Loctite®243™
Nut, foot brake lever adjustment	M6	7 Nm (5.2 lbf ft)
Nut, radiator	M6	5 Nm (3.7 lbf ft)
Nut, radiator fan	M6	3 Nm (2.2 lbf ft) Loctite®243™
Nut, shift rod	M6	6 Nm (4.4 lbf ft)
Nut, shift rod	M6LH	6 Nm (4.4 lbf ft)

22 TECHNICAL SPECIFICATIONS

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Screw, 5D sensor	M6	9 Nm (6.6 lbf ft)
Screw, ABS module	M6	7 Nm (5.2 lbf ft)
Screw, brake cylinder	M6	7 Nm (5.2 lbf ft) Loctite®243™
Screw, brake fluid reservoir, rear brake	M6	6 Nm (4.4 lbf ft) Loctite®243™
Screw, brake line holder	M6	7 Nm (5.2 lbf ft) Loctite®243™
Screw, chain guard	M6	9 Nm (6.6 lbf ft)
Screw, chain sliding guard	M6	9 Nm (6.6 lbf ft)
Screw, control unit holder	M6	7 Nm (5.2 lbf ft)
Screw, engine shift lever	M6	11 Nm (8.1 lbf ft)
Screw, engine sprocket cover	M6	11 Nm (8.1 lbf ft)
Screw, fender on fork shoe	M6	9 ... 12 Nm (6.6 ... 8.9 lbf ft)
Screw, fork protector on fender	M6x16	5 Nm (3.7 lbf ft)
Screw, frame cover	M6	5 Nm (3.7 lbf ft)
Screw, front spoiler	M6	7 Nm (5.2 lbf ft)
Screw, front trim	M6x15	3.8 Nm (2.8 lbf ft)
Screw, front wheel speed sensor	M6	9 Nm (6.6 lbf ft)
Screw, fuel pump	M6	9 Nm (6.6 lbf ft)
Screw, fuel tank bridge	M6x90	9 Nm (6.6 lbf ft)
Screw, fuel tank bridge	M6	9 Nm (6.6 lbf ft)
Screw, handlebar weight on handlebar	M6x40	9 Nm (6.6 lbf ft)
Screw, headlight	M6	6 ... 7 Nm (4.4 ... 5.2 lbf ft)
Screw, headlight fixation on bottom triple clamp	M6x20	10 Nm (7.4 lbf ft)
Screw, headlight position adjuster	M6	5 Nm (3.7 lbf ft)
Screw, headlight-range adjustment	M6	6 ... 7 Nm (4.4 ... 5.2 lbf ft)
Screw, ignition lock (tamper-proof screw)	M6	Tighten until the head tears off.
Screw, lower rear panel on front of frame	M6x15	9 Nm (6.6 lbf ft)
Screw, lower rear panel on rear of frame	M6x9	5 Nm (3.7 lbf ft)
Screw, luggage rack	M6x45	10 Nm (7.4 lbf ft)
Screw, luggage rack on rear fuel tank	M6x15	7 Nm (5.2 lbf ft)
Screw, radiator shroud on radiator	M6	5 Nm (3.7 lbf ft)
Screw, seat fixing	M6	15 ... 18 Nm (11.1 ... 13.3 lbf ft)
Screw, seat lock	M6	7 Nm (5.2 lbf ft)
Screw, shift lever bell crank	M6	16 Nm (11.8 lbf ft)
Screw, shift rod	M6	9 Nm (6.6 lbf ft) Loctite®243™
Screw, side stand sensor	M6	5 Nm (3.7 lbf ft)

Screw, splash protector	M6	9 Nm (6.6 lbf ft)
Screw, spoiler	M6	4 Nm (3 lbf ft)
Screw, wheel speed sensor	M6	7 Nm (5.2 lbf ft) Loctite®243™
Screw, windshield on speedometer holder	M6	5 Nm (3.7 lbf ft)
Spacer, license plate bracket	M6x1	7 Nm (5.2 lbf ft)
Nut, rear sprocket	M8	35 ... 38 Nm (25.8 ... 28 lbf ft) Loctite®243™
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)
Screw, battery support bracket	M8	19 Nm (14 lbf ft)
Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
Screw, cable guide holder on license plate bracket	M8	19 Nm (14 lbf ft)
Screw, engine bearer	M8	22 ... 25 Nm (16.2 ... 18.4 lbf ft) Loctite®243™
Screw, fork stub	M8	15 Nm (11.1 lbf ft)
Screw, front brake disc	M8	20 Nm (14.8 lbf ft) Loctite®243™
Screw, front wheel spindle	M8	20 Nm (14.8 lbf ft)
Screw, fuel tank bridge	M8	18 Nm (13.3 lbf ft)
Screw, fuel tank fastening	M8x12	19 Nm (14 lbf ft)
Screw, fuel tank fastening	M8x45	25 Nm (18.4 lbf ft) Loctite®243™
Screw, grab handle	M8	21 Nm (15.5 lbf ft) Loctite®243™
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft) Loctite®243™
Screw, horn on horn holder	M8	16 Nm (11.8 lbf ft)
Screw, license plate bracket	M8x18	19 Nm (14 lbf ft) Loctite®243™
Screw, license plate bracket	M8x35	19 Nm (14 lbf ft) Loctite®243™
Screw, main silencer	M8	21 Nm (15.5 lbf ft)
Screw, passenger footrest unit	M8	22 Nm (16.2 lbf ft) Loctite®243™
Screw, rear brake disc	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, subframe	M8	25 Nm (18.4 lbf ft) Loctite®243™
Screw, tail section on frame	M8x16	5 Nm (3.7 lbf ft)
Screw, top triple clamp	M8	15 Nm (11.1 lbf ft)
Screw, front brake caliper	M8x1	30 Nm (22.1 lbf ft) Loctite®243™
Adjusting screw, wheel position	M10	17 Nm (12.5 lbf ft)
Banjo bolt, brake line	M10	24 Nm (17.7 lbf ft)

22 TECHNICAL SPECIFICATIONS

Fitting, engine mounting bracket	M10	45 ... 50 Nm (33.2 ... 36.9 lbf ft) Loctite® 243™
Nut, side stand	M10	38 Nm (28 lbf ft)
Nut, side stand bracket	M10	35 ... 38 Nm (25.8 ... 28 lbf ft)
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, foot brake lever	M10	25 ... 30 Nm (18.4 ... 22.1 lbf ft) Loctite® 243™
Screw, footrest bracket	M10	45 ... 50 Nm (33.2 ... 36.9 lbf ft)
Screw, handlebar support	M10	21 Nm (15.5 lbf ft)
Screw, license plate holder	M10x30	25 ... 30 Nm (18.4 ... 22.1 lbf ft) Loctite® 243™
Screw, rear at bottom of frame	M10x110	43 Nm (31.7 lbf ft) Loctite® 620™
Screw, rear at top of frame	M10x30	43 Nm (31.7 lbf ft) Loctite® 620™
Screw, shift lever	M10	25 ... 30 Nm (18.4 ... 22.1 lbf ft) Loctite® 243™
Nut, turn signal	M10x1.25	11 Nm (8.1 lbf ft)
Screw, bottom shock absorber	M10x1.25	51 Nm (37.6 lbf ft) Loctite® 243™
Screw, top shock absorber	M10x1.25	51 Nm (37.6 lbf ft) Loctite® 243™
Nut, fork pivot	M14x1.5	100 Nm (73.8 lbf ft)
Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)
Screw, steering head, top	M16	50 ... 55 Nm (36.9 ... 40.6 lbf ft) Loctite® 243™
Lambda sensor	M18	50 Nm (36.9 lbf ft)
Nut, steering head	M30x1	1st stage 50 Nm (36.9 lbf ft) 2nd stage (loosen, counterclock- wise) 2 turns 3rd stage 5 Nm (3.7 lbf ft)

23.1 Declarations of conformity

**Info**

The functional and equipment scope is model-dependent and may not include all wireless systems and application areas referred to.

JNS Instruments Ltd. hereby declares that the **320T1100** wireless system conforms with the relevant guidelines. The full text of the Declaration of Conformity is available at the following Internet address.

Certification website: <https://www.husqvarna-motorcycles.com/320T1100>

23.2 Country-specific declarations of conformity

--

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

Coolant

Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	–25 °C (–13 °F)
-----------------------------------	-----------------

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier

MOTOREX®

- COOLANT M3.0

Engine oil (SAE 15W/50)

Standard/classification

- JASO T903 MA2 (📖 p. 141)
- SAE (📖 p. 141) (SAE 15W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Partially synthetic engine oil

Recommended supplier

MOTOREX®

- Formula 4T

Fork oil (SAE 5)

Standard/classification

- SAE (📖 p. 141) (SAE 5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Recommended supplier

MOTOREX®

- Racing Fork Oil

Super unleaded (ROZ 95)

Standard/classification

- DIN EN 228 (ROZ 95)

Guideline

- Only use super unleaded fuel that matches or is equivalent to the specified standard.
- Fuel with an ethanol content of up to 10% (E10 fuel) is safe to use.



Info

Do **not** use fuel containing methanol (e.g., M15, M85, M100) or more than 10% ethanol (e.g., E15, E25, E85, E100).

Chain cleaner

Recommended supplier

MOTOREX®

- Chain Clean

Fuel additive

Recommended supplier

MOTOREX®

- Fuel Stabilizer

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

MOTOREX®

- Moto Clean

Preserving materials for paints, metal and rubber

Recommended supplier

MOTOREX®

- Moto Protect

Shine spray for paint, plastic and chromium

Recommended supplier

MOTOREX®

- Moto Shine

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

MOTOREX®

- Quick Cleaner

Street chain spray

Guideline

Recommended supplier

MOTOREX®

- Chainlube Road Strong

Universal oil spray

Recommended supplier

MOTOREX®

- Joker 440 Synthetic

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The **JASO T903 MA2** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

27 INDEX OF SPECIAL TERMS

ABS	Anti-lock braking system	Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces
ATIR	Automatic Turn Indicator Reset	Software, which automatically switches the indicator off according to a time or travel distance counter
-	Easy Shift	Engine electronics function for shifting up and down without clutch actuation
MTC	Motorcycle Traction Control	Auxiliary function of the motor control that reduces engine torque with spinning rear wheel
OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-	Ride Husqvarna	System for wireless communication with appropriate cellphones and headsets for telephony and audio

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

29.1 Red symbols

Red symbols indicate an error condition that requires immediate intervention.

	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.
---	--

29.2 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	The malfunction indicator lamp lights up yellow – The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized Husqvarna Motorcycles workshop.
	ABS warning lamp lights up yellow – Status or error messages relating to ABS.
	The ABS rear warning lamp lights up yellow – ABS is deactivated on the rear wheel.
	TC indicator lamp lights up/flashes yellow – MTC (p. 115) is not enabled or is currently intervening. The TC indicator lamp also lights up if a malfunction is detected. Contact an authorized Husqvarna Motorcycles workshop. The TC indicator lamp flashes if MTC makes an active intervention.
	The speed limiter indicator lamp lights up yellow – The speed limiter function is switched on, but the speed limiter is not active.
	The general warning lamp lights up yellow – A note/warning note on operating safety has been detected. This is also shown in the display.

29.3 Green and blue symbols

Green and blue symbols reflect information.

	The turn signal indicator lamp flashes green with a steady rhythmic flash – The turn signal is switched on.
	The idle indicator lamp lights up green – The transmission is in neutral.
	The speed limiter indicator lamp lights up green – The speed limiter function is switched on and the speed limiter is active.
	The high beam indicator lamp lights up blue – The high beam is switched on.

1	
12-V battery	
charging	100
installation	99
removing	98
A	
ABS	82
ABS fuses	
changing	103
ACC1	
front	107
ACC1 and ACC2	
rear	107
ACC2	
front	107
Antifreeze	
checking	108
Anti-lock braking system	82
Apply the brakes.	59
Auxiliary substances	11
B	
Brake discs	
checking	83
Brake fluid	
adding to rear brake	86
front brake, adding	84
Brake fluid level	
of front brake, checking	84
rear brake, checking	86
Brake lining retainers	
of front brake, checking	85
of rear brake, checking	88
Brake linings	
of front brake, checking	85
of rear brake, checking	88
Brakes	59
Breakdown	
towing	61
C	
Capacity	
coolant	131
engine oil	131
fuel	63, 131
Chain	
chain dirt accumulation, checking	77
checking	80

cleaning	77
Chain tension	
adjusting	79
checking	78
Clutch lever	16
basic position, adjusting	81
Clutch lever play	
checking	116
Combination instrument	23-51
ABS	34
ABS display	29
activation and test	23
Audio	40
Bike Info	36
Bluetooth	43
Call display	32
Clock Format	48
connectivity	42
coolant temperature indicator	30
Date Format	48
display	26
Distance	49
Easy Shift (optional)	35
engine speed	28
Extra Functions	51
Favoriten	41
Favorites display	31
Favorites-Anzeige 1-4	41
fuel level display	30
Fuel Cons	50
headset pairing	44
Headset Type	45
heated grip (optional)	31
Heated Grip (optional)	35
"Heating" (optional)	50
indicator lamps	25
Interface	36
Language	50
menu	33
minimum display	27
Motorcycle	33
MTC	35
MTC display (optional)	30
navigation	39
"Navigation" display (optional)	32
overview	23
pairing a cellphone	43
Quick Selector 1	42
Quick Selector 1 display	31
Quick Selector 2	42
Quick Selector 2 display	32

Remote Control Mode (optional)	33
Ride Mode	34, 115
Ride-Mode display	29
Settings	41
shift warning light	28
speed limiter	38
speed limiter display	29
speed limiter State	38
speedometer	28
state	40
Temperature	49
time	29
Trip	37
Trip 1	37
Trip 2	38
Units	49
volume	39
Warning	36
warnings	24
Coolant	
changing	113
draining	111
Coolant level	
checking	108, 110
Cooling system	108
filling/bleeding	111
Cornering MTC	115
Customer service	11
D	
Date	
setting	47
Declarations of conformity	137
country-specific	137
Diagnostics connector	107
E	
Easy Shift	56
Emergency OFF switch	17
Engine	
running in	53
Engine number	14
Engine oil	
adding	120
changing	118
Engine oil level	
checking	118
Engine sprocket	
checking	80
Environment	9

F

Figures	11
Foot brake lever	22
Fork	66
compression damping, adjusting	66
rebound, adjusting	66
Fork article number	15
Fork legs	
dust boots, cleaning	72
Front rider's seat	
mounting	73
removing	73
Front spoiler	
installing	77
removing	76
Front wheel	
installation	90
removing	90
Fuel tank filler cap	
closing	20
opening	19
Fuel, oils, etc.	11
Fuse	
changing of individual electrical power consumers	105

G

Grab handle	21
------------------------------	----

H

Hand brake lever	16
basic position, adjusting	83
Handlebar position	68
setting	68
Headlight	
range, adjusting	106
Headlight setting	
checking	106
Horn button	17
Husqvarna Motorcycles technical accessories	11

I

Ignition lock	18
Implied warranty	11
Indicator lamps	25
Intended use	7

K

Key number	14
-----------------------------	----

L	
Left side cover	
installation	75
removal	74
Light switch	16
Load the vehicle	53
Luggage	53
Luggage rack	21
installation	74
removing	74
M	
Main fuse	
changing	102
Manufacturer warranty	11
Misuse	7
Motorcycle	
cleaning	121
lifting with front lifting gear	70
raising the rear with lifting gear	70
removing the rear from the lifting gear	70
taking off front lifting gear	71
Motorcycle traction control (optional)	115
O	
Oil filter	
changing	118
Oil screens	
cleaning	118
Owner's Manual	9
P	
Parking	60
Passenger foot pegs	21
Passenger seat	
mounting	73
removing	72
Play in the clutch lever	
adjusting	116
Preparing for use	
advice on preparing for first use	52
after storage	125
checks and maintenance measures when preparing for use	54
Protective clothing	9
R	
Rear hub damping rubbers	
checking	94

Rear sprocket	
checking	80
Rear wheel	
installation	92
removing	92
Refueling	
fuel	62
Riding	56
starting off	55
Right radiator spoiler	
mounting	76
removing	76
Right side cover	
installation	75
removal	75
S	
Safe operation	8
Seat lock	20
Service	11
Service schedule	64-65
Shift lever	22
basic position, adjusting	117
basic position, checking	117
Shifting	56
Shock absorber	66
adjusting rebound damping	67
spring preload, adjusting	67
Shock absorber article number	15
Side stand	22
Spare parts	11
Spoke tension	
checking	96
Start button	18
Starting	54
Steering	
locking	18
unlocking	19
Steering lock	18
Stopping	60
Storage	124
Storage compartment	
USB socket	18
Switch	
on the left side of the handlebar	16
on the right side of the handlebar	17

T

Technical specifications

capacities	131
chassis	131
chassis tightening torques	133
electrical system	132
engine	128
engine tightening torques	129
fork	133
shock absorber	133
tires	132

Throttle grip	16
----------------------	----

Time

setting	47
---------	----

Tire condition

checking	94
----------	----

Tire pressure

checking	96
----------	----

Tire repair spray

using	97
-------	----

Tool set	21
-----------------	----

Towing	61
---------------	----

Transport	61
------------------	----

Troubleshooting	126-127
------------------------	---------

Turn signal switch	17
---------------------------	----

Type label	14
-------------------	----

U

USB socket	18
-------------------	----

Use definition	7
-----------------------	---

V

Vehicle identification number	14
--------------------------------------	----

View of vehicle

front left	12
rear right	13

W

Winter operation

checks and maintenance steps	122
------------------------------	-----

Work rules	9
-------------------	---



3402768en

28.01.2025



Husqvarna Mobility GmbH
Stallhofnerstraße 3 | 5230 Mattighofen | Austria
www.husqvarna-motorcycles.com



Photo: Mitterbauer/KISKA,
Husqvarna Mobility GmbH