

Owner's manual 2025



FC 350
FC 350 Heritage
FX 350
FX 350 Heritage

Item no.: 3402804en

FOR | PIONEERS

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art, sporty motorcycle that you will continue to enjoy for a long time if you maintain it properly.

We wish you good and safe riding at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number  (p. 16)	Dealer stamp
Engine number  (p. 16)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications are non-binding. Husqvarna Mobility GmbH specifically reserve the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc. without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Mobility assumes no liability for delivery options, deviations from figures and descriptions, as well as misprints and other errors. Some of the models shown partly contain special equipment that does not belong to the standard scope of supply.

© 2024 Husqvarna Mobility GmbH, Mattighofen Austria
All rights reserved. Figures: Mitterbauer / Visus Studios / KISKA / Husqvarna Mobility
Written permission from the copyright owner is required before any duplication or reproduction.

ISO 9001

Husqvarna Mobility GmbH applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

12 100 6061



Issuing institution:
TÜV SÜD Management Service GmbH

Husqvarna Mobility GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

- FC 350 EU (F2201Y1)
- FC 350 US (F2275Y1)
- FC 350 Heritage US (F2275Y3)
- FX 350 (F2275Y2)
- FX 350 Heritage (F2475YD)



Table of contents

1	Means of representation	9	6.12	Cold start button	23
1.1	Conventions.....	9	6.13	Idle speed adjustment screw	23
1.1.1	Icons.....	9	6.14	Gear shift lever	24
1.1.2	Formatting.....	9	6.15	Brake pedal	24
1.1.3	Abbreviations	9	6.16	Plug-in stand (All FC models)	25
2	Safety	10	6.17	Side stand (All FX models)	25
2.1	Safety instructions	10	7	Preparing for use.....	26
2.2	Ban on tampering	10	7.1	Notes on preparing for first use	26
2.3	Safe use	10	7.2	Running in the engine	27
2.4	Protective clothing	11	7.3	Starting performance of lithium-ion batteries at low temperatures	27
2.5	Work rules	11	7.4	Preparing the vehicle for difficult operating conditions	28
2.6	Environment	12	7.5	Preparing the vehicle for rides on dry sand	28
2.7	Owner's manual	12	7.6	Preparing the vehicle for rides on wet sand	29
2.8	Use definition – intended use	12	7.7	Preparing for rides on wet and muddy surfaces	29
2.9	Improper use	12	7.8	Preparing vehicle for rides at high temperature or slow speed	30
3	Important notes	13	7.9	Preparing the vehicle for low temperatures or snow	30
3.1	Manufacturer's warranty, implied warranty	13	8	Riding instructions.....	31
3.2	Auxiliary material, operating material	13	8.1	Checks and maintenance measures when preparing for use	31
3.3	Spare parts, accessories	13	8.2	Starting the vehicle	31
3.4	Service	13	8.3	Activating launch control	33
3.5	Figures	13	8.4	Activating traction control	33
3.6	Customer service	13	8.5	Starting off	34
4	View of the vehicle.....	14	8.6	Quickshifter	34
4.1	View of vehicle, left side (example)	14	8.7	Activate the quickshifter	34
4.2	View of vehicle, right side (example)	15	8.8	Shifting, riding	34
5	Serial number	16	8.9	Braking	36
5.1	Vehicle identification number	16	8.10	Stop, park	36
5.2	Steering head label	16	8.11	Transportation	37
5.3	Engine number	16	8.12	Refueling	38
5.4	Fork part number	16	9	Service schedule	39
5.5	Shock absorber part number	17	9.1	Service schedule	39
6	Controls.....	18	10	Tuning the chassis	41
6.1	Clutch lever	18	10.1	Checking the basic chassis setting with the rider's weight	41
6.2	Handbrake lever	18	10.2	Air suspension XACT (All FC models)	41
6.3	Throttle grip	18	10.3	Compression damping of the shock absorber	42
6.4	Kill switch	18	10.4	Adjusting the low-speed compression damping of the shock absorber	42
6.5	Electric starter	19			
6.6	Combination switch	19			
6.7	Overview of indicator lights (All FC models)	19			
6.8	Overview of indicator lights (All FX models)	20			
6.9	Dashboard	21			
6.10	Opening the fuel tank cap	21			
6.11	Closing the fuel tank cap	22			

10.5	Adjusting the high-speed compression damping of the shock absorber	43	11.20	Removing the front top fender	65
10.6	Adjusting the rebound damping of the shock absorber	43	11.21	Installing the front top fender	66
10.7	Measuring the dimension of the unloaded rear wheel	44	11.22	Removing the shock absorber 	66
10.8	Checking the static sag of the shock absorber	45	11.23	Installing the shock absorber 	68
10.9	Checking the rider sag of the shock absorber	45	11.24	Removing the seat	69
10.10	Adjusting the preload for the shock absorber 	46	11.25	Mounting the seat	70
10.11	Adjusting the rider sag 	47	11.26	Removing air filter box cover	70
10.12	Checking the basic setting of the fork	48	11.27	Installing air filter box cover	71
10.13	Adjusting the fork air pressure	48	11.28	Removing the air filter 	72
10.14	Adjusting the compression damping of the fork	49	11.29	Cleaning the air filter and air filter box 	73
10.15	Adjusting the rebound damping of the fork	50	11.30	Installing the air filter 	74
10.16	Handlebar position	51	11.31	Securing the air filter box cover 	75
10.17	Adjusting the handlebar position 	51	11.32	Removing the muffler	75
11	Service work on the chassis.....	54	11.33	Installing muffler	75
11.1	Raising the motorcycle with a lift stand	54	11.34	Changing the glass fiber filling of the muffler 	76
11.2	Removing the motorcycle from the lift stand	54	11.35	Removing the fuel tank 	76
11.3	Bleeding the fork legs	55	11.36	Installing the fuel tank 	78
11.4	Cleaning the dust boots of the fork legs	56	11.37	Checking the chain for dirt	80
11.5	Removing the fork protector	56	11.38	Cleaning the chain	80
11.6	Installing the fork protector	57	11.39	Checking the chain tension	81
11.7	Removing the skid plate (All FX models)	57	11.40	Adjusting the chain tension	81
11.8	Installing the skid plate (All FX models)	58	11.41	Checking the chain, rear sprocket, front sprocket, and chain guide	82
11.9	Removing the frame protector	58	11.42	Checking the frame 	85
11.10	Installing the frame protector	58	11.43	Checking the swingarm 	85
11.11	Removing the fork legs 	59	11.44	Checking the throttle cable routing	85
11.12	Installing the fork legs 	59	11.45	Checking the rubber grips	86
11.13	Removing the lower triple clamp 	60	11.46	Program the Quickshifter	87
11.14	Installing the lower triple clamp 	61	11.47	Adjusting the basic position of the clutch lever	87
11.15	Checking the steering head bearing play	63	11.48	Checking/correcting the fluid level of hydraulic clutch	87
11.16	Adjusting the steering head bearing play 	64	11.49	Changing the hydraulic clutch fluid 	88
11.17	Lubricating the steering head bearing 	64	12	Brake system.....	90
11.18	Removing the number plate	65	12.1	Checking the free travel on the hand brake lever	90
11.19	Mounting the number plate	65	12.2	Adjusting the basic position of the hand brake lever	90
			12.3	Checking the brake discs	90
			12.4	Checking the brake fluid level for the front brake	91
			12.5	Adding brake fluid for the front brake 	92
			12.6	Checking that the brake pads of the front brake are secured	93
			12.7	Changing the brake pads of the front brake 	94

12.8	Checking the free travel of the brake pedal	96	16.6	Programming the throttle valve position	124
12.9	Adjusting the basic position of the brake pedal 	96	16.7	Checking the basic position of the gear shift lever	125
12.10	Checking the brake fluid level for the rear brake	97	16.8	Adjusting the basic position of the gear shift lever 	125
12.11	Adding brake fluid for the rear brake 	98	17	Service work on the engine	126
12.12	Checking that the brake pads of the rear brake are secured	99	17.1	Changing the fuel screen 	126
12.13	Changing the rear brake pads 	99	17.2	Checking the engine oil level	127
13	Wheels, tires	103	17.3	Changing the engine oil and oil filter, cleaning the oil screens 	127
13.1	Removing the front wheel 	103	17.4	Adding engine oil	130
13.2	Installing the front wheel 	104	18	Cleaning, care	131
13.3	Removing the rear wheel 	104	18.1	Cleaning the motorcycle	131
13.4	Installing the rear wheel 	105	19	Storage	133
13.5	Checking the tire condition	107	19.1	Storage	133
13.6	Checking the tire pressure	108	19.2	Preparing for use after storage	134
13.7	Checking the spoke tension	108	20	Troubleshooting	135
14	Electrics	109	20.1	troubleshooting	135
14.1	Removing the 12 V battery 	109	21	Technical specifications	137
14.2	Installing the 12-V battery 	110	21.1	Engine	137
14.3	Charging the 12-V battery 	111	21.1.1	Technical data - engine	137
14.4	Changing the main fuse	112	21.1.2	Capacities - engine	138
14.5	Changing the fuse of the fuel pump	113	21.2	Chassis	138
14.6	Diagnostic connector	114	21.2.1	Technical data - chassis	138
15	Cooling system	115	21.2.2	Technical data - tires	139
15.1	Cooling system	115	21.2.3	Capacities - vehicle	139
15.2	Checking the frost protection and coolant level	115	21.3	Electrics	139
15.3	Checking the coolant level	116	21.3.1	Electrics	139
15.4	Draining the coolant 	116	21.3.2	Fuses	139
15.5	Refilling the coolant 	117	21.3.3	Lamps	139
15.6	Changing the coolant	118	21.4	Fork	140
16	Tuning the engine	120	21.4.1	Technical data - fork (FC EU)	140
16.1	Checking the play in the throttle cable	120	21.4.2	Capacities - fork (FC EU)	140
16.2	Adjusting the throttle cable play 	120	21.4.3	Technical data - fork (FC US)	140
16.3	Adjusting the characteristic map of the throttle response 	121	21.4.4	Capacities - fork (FC US)	140
16.4	Changing the mapping	123	21.4.5	Technical data - fork (All FX models)	141
16.5	Adjusting the idle speed 	123	21.4.6	Capacities - fork (All FX models)	141
			21.5	Shock absorber	141
			21.5.1	Technical data - shock absorber (FC EU)	141
			21.5.2	Capacities - shock absorber (FC EU)	142
			21.5.3	Technical data - shock absorber (FC US)	142

21.5.4	Capacities - shock absorber (FC US)	143
21.5.5	Technical data - shock absorber (All FX models)	143
21.5.6	Capacities - shock absorber (All FX models)	143
21.6	Tightening torque.....	143
21.6.1	Chassis tightening torques	143
21.6.2	engine tightening torques	147
Notes		151
A	Technical terms	151
B	Fuels	152
C	Operating supplies	153
D	Cleaning agents.....	156
E	Icons.....	157
E.1	Symbol colors	157
E.1.1	Yellow and orange symbols	157
E.1.2	Green and blue symbols	157
Index.....		158

1.1 Conventions

1.1.1 Icons



Indicates a desired result (e.g. of a work step or a function).



Indicates an undesired result (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. Ensure that this work is carried out or supervised by trained personnel from an authorized Husqvarna Motorcycles workshop with any special tools required.



Indicates a page reference.



Indicates information with more details.



Indicates a tip, e.g. to simplify work.



Indicates the result from a test step.



Indicates the end of an activity, including any rework.

1.1.2 Formatting

Proprietary name	Indicates a proprietary name.
Name[®]	Indicates a protected name.
Brand[™]	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

1.1.3 Abbreviations

2-pc.	2-piece
Part no.	Part number
or	respectively
approx.	circa
etc.	et cetera
poss.	possibly/possible
if necessary	if necessary
cmpl.	complete
min.	at least
no.	number
no fig.	no figure
s.	see
among others	among others/not limited to
and the like	and the like
etc.	et cetera
cf.	compare
e.g.	for example

2.1 Safety instructions

Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



DANGER

Indicates an imminent danger that leads to serious injury or death.



WARNING

Indicates a potentially imminent danger that could lead to serious injury or death.



CAUTION

Indicates a potentially imminent danger that can lead to minor or slight injuries.



NOTE

Indicates a situation that can lead to damage to the product or the product environment.



NOTE

Indicates a situation that can lead to environmental damage.

2.2 Ban on tampering

No changes may be made to the noise control equipment and components.

Tampering that is prohibited

- Removing or disabling any devices or components used for noise control before the new vehicle is sold or delivered to the end customer.
- Removing or disabling any device or component used for noise control for purposes other than service, repair, or replacement during the service life of the vehicle.
- Use of the vehicle after a device or component used for noise control has been removed, disabled, or inadequately maintained.

Examples of prohibited tampering

- Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
- Removing or puncturing parts of the intake system.
- Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.3 Safe use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

The vehicle must only be used by trained persons.

Any faults that affect safety must be rectified immediately at an authorized Husqvarna Mobility workshop.

Observe the information and warning stickers on the vehicle.

2.4 Protective clothing



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, Husqvarna Mobility recommends that you only operate the vehicle while wearing protective clothing.

2.5 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key).

Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C
Ambient air pressure	1,013 mbar
Relative air humidity	60 ±5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite®**) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread lock.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

2.6 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, be environmentally aware, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized Husqvarna Mobility dealer will be happy to assist you.

2.7 Owner's manual

Read this owner's manual carefully and completely before making your first trip. The owner's manual contains useful information and many tips on how to operate, handle, and service your vehicle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.



Tip

Store the owner's manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have any questions about the material you have read, please contact an authorized Husqvarna Mobility dealer.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized Husqvarna Mobility dealer and on the Husqvarna Mobility website. A printed copy can also be ordered from your authorized Husqvarna Mobility dealer.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

2.8 Use definition – intended use

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Note

Only use this vehicle on designated tracks away from public roads.

2.9 Improper use

The vehicle may only be used as intended.

Improper use can result in danger to people, property and the environment.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

3.1 Manufacturer's warranty, implied warranty

The work specified in the service schedule must only be carried out in an authorized Husqvarna Mobility workshop and confirmed in the electronic proof of service, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Mobility and have them installed by an authorized Husqvarna Mobility workshop. Husqvarna Mobility accepts no liability for other products and any resulting damage or loss.

The part numbers of some spare parts and accessories are given in brackets in the respective descriptions. Your authorized Husqvarna Mobility dealer will be happy to advise you.

You can find the latest Husqvarna Mobility Technical Accessories for your vehicle at your authorized Husqvarna Mobility dealer and on the Husqvarna Mobility website.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under arduous conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the powertrain, brake system, air filter, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

Please adhere to the prescribed run-in times and service intervals at all times. Strictly adhering to this will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.

3.6 Customer service

Your authorized Husqvarna Mobility dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Mobility.

The list of authorized Husqvarna Mobility dealers can be found on the Husqvarna Mobility website.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

4 View of the vehicle


4.1 View of vehicle, left side (example)



F03904-10

- | | |
|--------------------------------|-------------------------------|
| ❶ Clutch lever 📖 (p. 18) | ❺ Cold start button 📖 (p. 23) |
| ❷ Combination switch 📖 (p. 19) | ❻ Engine number 📖 (p. 16) |
| ❸ Fuel tank cap | ❼ Gear shift lever 📖 (p. 24) |
| ❹ Air filter box cover | |

4.2 View of vehicle, right side (example)

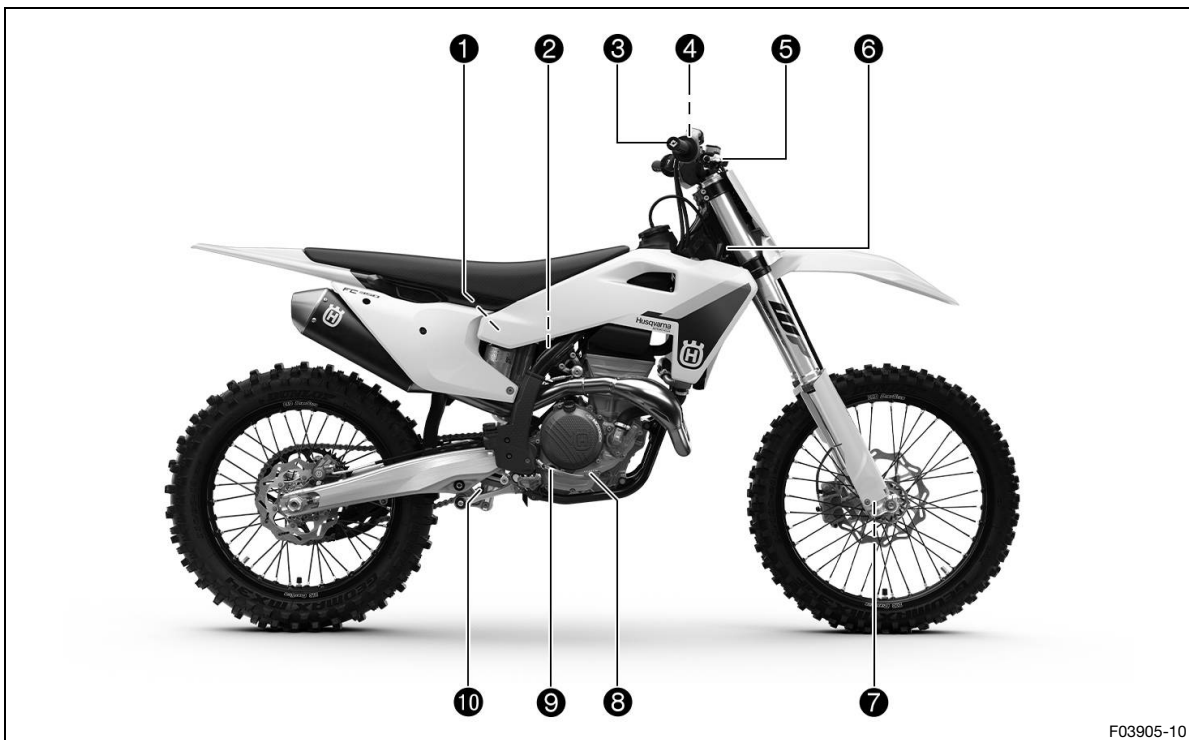


F03905-10

- | | |
|---|---|
| ① Shock absorber compression adjustment | ⑥ Vehicle identification number 📖 (p. 16) |
| ② Idle speed adjustment screw 📖 (p. 23) | ⑥ Frame label |
| ③ Throttle grip 📖 (p. 18) | ⑦ Fork part number 📖 (p. 16) |
| ④ Kill switch 📖 (p. 18) | ⑧ Brake pedal 📖 (p. 24) |
| ④ Electric starter 📖 (p. 19) | ⑨ Engine oil level viewer |
| ⑤ Handbrake lever 📖 (p. 18) | ⑩ Shock absorber rebound adjuster |


5 Serial number

 5.1 Vehicle identification number




The vehicle identification number ❶ is stamped on the right-hand side of the steering head.

 5.2 Steering head label




The steering head label ❶ is attached to the front of the steering head.

5.3 Engine number

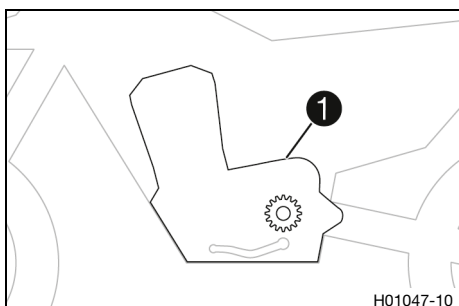


The engine number ❶ is located on the left side of the engine under the engine sprocket.

5.4 Fork part number

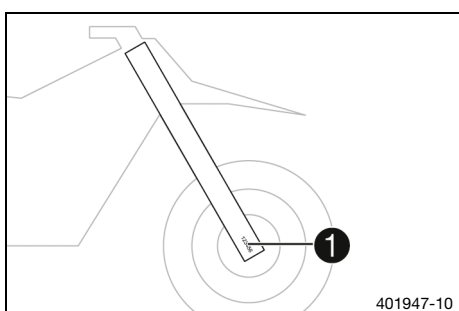


Fork part number ❶ is stamped on the inside of the fork shoe.

5.5 Shock absorber part number

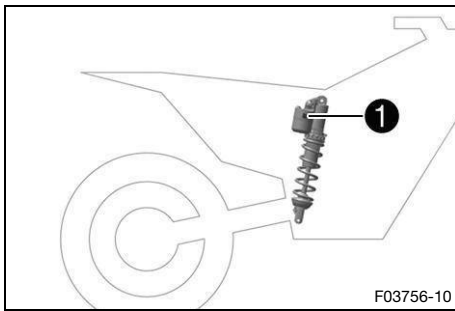


The shock absorber article number ❶ is stamped on the bottom of the shock absorber toward the right-hand side.

6.1 Clutch lever

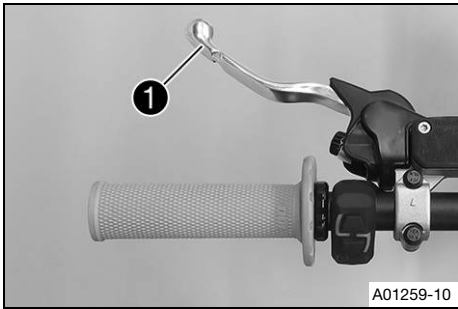


Clutch lever 1 is fitted on the left side of the handlebar. The clutch is activated hydraulically and adjusts itself automatically.

6.2 Handbrake lever

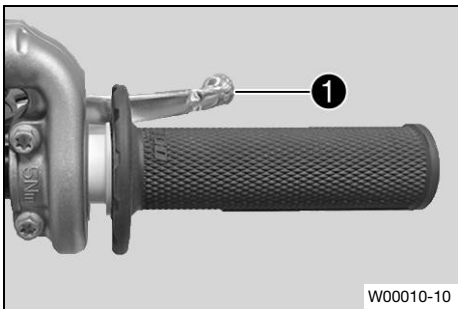


Hand brake lever 1 is fitted on the right side of the handlebar. The front brake is engaged using the hand brake lever.

6.3 Throttle grip

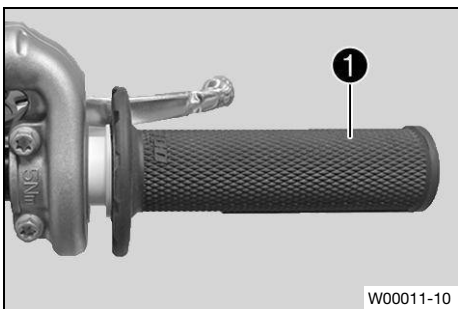

The throttle twist grip 1 is fitted on the right side of the handlebar.


6.4 Kill switch

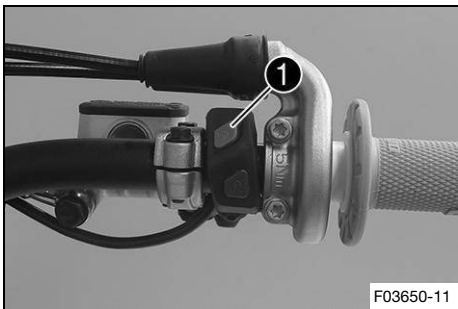

Kill switch 1 is fitted on the right side of the handlebar.

Condition	Meaning
The kill switch is not pressed.	In this position, the ignition circuit is closed, and the engine can be started.
The kill switch is pressed and held.	In this position, the ignition circuit is interrupted, a running engine stops, and an engine at standstill will not start.

6.5 Electric starter

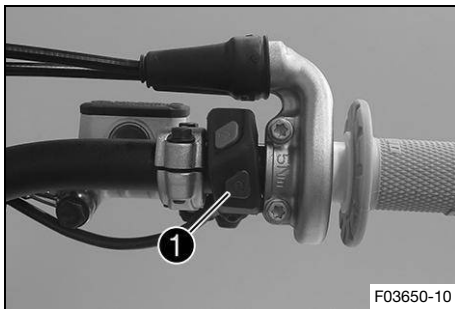

Electric starter **1** is fitted on the right side of the handlebar.

Condition	Meaning
Electric starter (⚡) in the basic position	No function.
Electric starter (⚡) pressed – In this position, the starter motor is actuated.	In this position, the starter motor is actuated.

6.6 Combination switch




The combination switch is fitted on the left side of the handlebar. The engine characteristic can be changed using button **1** and button **2** on the combination switch.

Traction control can be activated using the TC button **3** on the combination switch.

Launch control and the **quickshifter** can also be activated using the combination switch.


Condition	Meaning
STANDARD 1	STANDARD mapping is activated when indicator light A lights up.
STANDARD 1 with TC	STANDARD mapping with traction control is activated when the indicator light A and the TC indicator light illuminate.
ADVANCED 2	ADVANCED mapping is activated when the indicator light B illuminates.
ADVANCED 2 with TC	ADVANCED mapping with traction control is activated when the indicator light B and the TC indicator light illuminate.

6.7 Overview of indicator lights (All FC models)

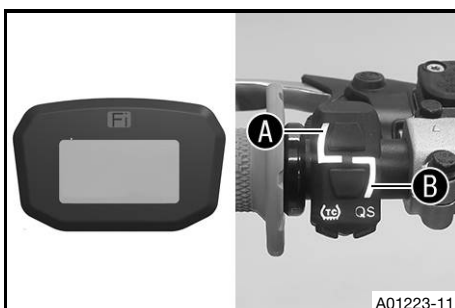


Condition		Meaning
	Failure indicator lamp lights up or flashes red	The OBD has detected a malfunction in the vehicle electronics.
	Indicator light A lights up white – STANDARD mapping is activated.	Lean mapping is activated. This mapping is recommended for firm/hard surfaces.
	Indicator light B lights up green – ADVANCED mapping is activated.	Rich mapping is activated. This mapping is recommended for sandy/loose surfaces.
	TC indicator lamp lights up orange	TC is not enabled or is currently intervening. The TC indicator lamp flashes if launch control is activated.
	QS indicator lamp lights up blue	The quickshifter is activated. The QS indicator light flashes when the Quickshifter is being programmed.

6.8 Overview of indicator lights (All FX models)

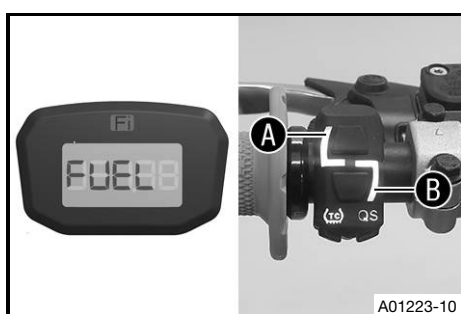

Condition		Meaning
	Failure indicator lamp lights up or flashes red	The OBD has detected a malfunction in the vehicle electronics.
	Indicator light A lights up white – STANDARD mapping is activated.	Lean mapping is activated. This mapping is recommended for firm/hard surfaces.
	Indicator light B lights up green – ADVANCED mapping is activated.	Rich mapping is activated. This mapping is recommended for sandy/loose surfaces.
	TC indicator lamp lights up orange	TC is not enabled or is currently intervening. The TC indicator lamp flashes if launch control is activated.
	QS indicator lamp lights up blue	The quickshifter is activated. The QS indicator light flashes when the Quickshifter is being programmed.
	FUEL is displayed	The fuel level of the fuel tank has reached the reserve mark.

6.9 Dashboard

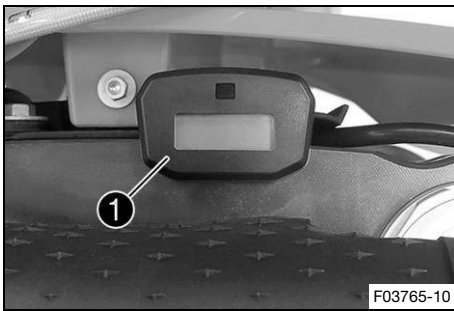

Dashboard **1** is fitted in the front of the handlebar. The dashboard shows the total operating hours of the engine. The operating hours are counted when the engine is started and stopped when the engine is switched off.



Note

Nothing can be cleared or modified on the dashboard. As soon as the diagnostics tool is connected, the hourmeter starts running. Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

6.10 Opening the fuel tank cap



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.




NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.


(All FC models)

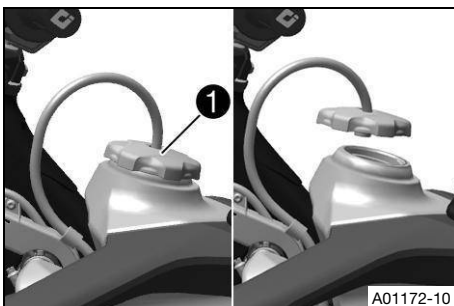

- Turn fuel tank cap **1** counterclockwise and lift it off.

(All FX models)


- Press release button **1**, turn the fuel tank cap counter-clockwise, and lift it off.

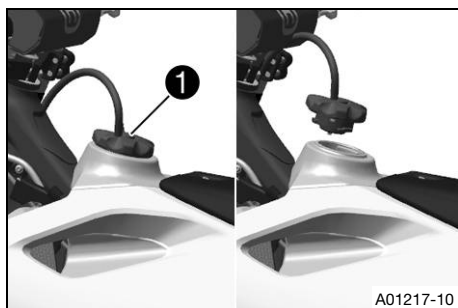

6.11 Closing the fuel tank cap

(All FC models)


- Mount fuel tank cap **1** and turn it clockwise until the fuel tank is tightly closed.

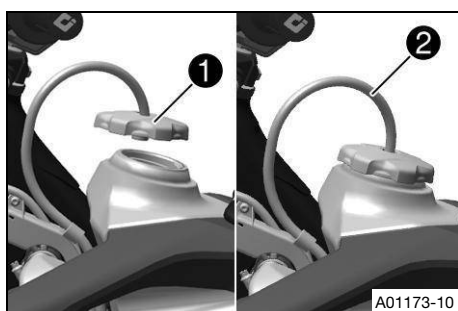

i Note
Route hose of fuel tank vent **2** without kinks.



(All FX models)

- Mount filler cap **1** and turn it clockwise until the release button engages.

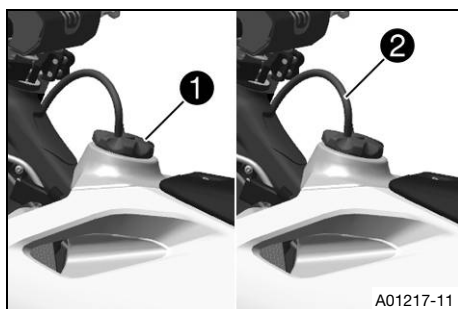

i Note
Route hose of fuel tank vent **2** without kinks.

6.12 Cold start button

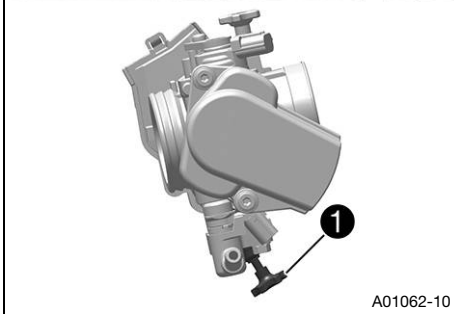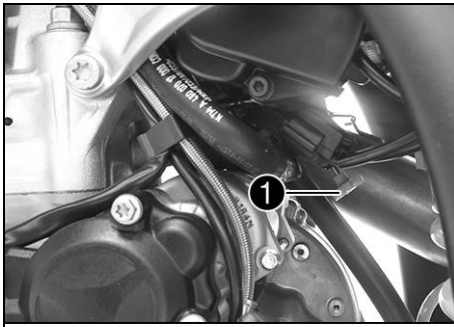

Cold start button ① is fitted to the bottom of the throttle body. The electronic fuel injection extends the injection time when the engine is cold and the ambient temperature is low. To help the engine burn the increased amount of fuel, it must be supplied with additional oxygen by pushing the cold start button. After briefly opening up the throttle and then releasing the throttle twist grip again, or turning the throttle twist grip towards the front, the cold start button returns to its original position.




Note

Check whether the cold start button has returned to its basic position.

Condition	Meaning
Cold start button activated	Cold start button is pressed in as far as it will go
Condition	Meaning
Cold start button deactivated	Cold start button is in the basic position

6.13 Idle speed adjustment screw

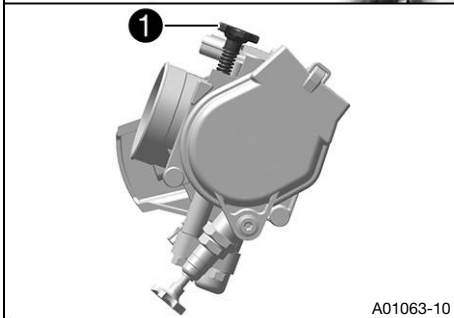


The idle setting of the throttle body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.

An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using idle speed adjusting screw ①. Increase the idle speed by turning the idle speed adjustment screw clockwise.


Decrease the idle speed by turning the idle speed adjustment screw counterclockwise.

6.14 Gear shift lever

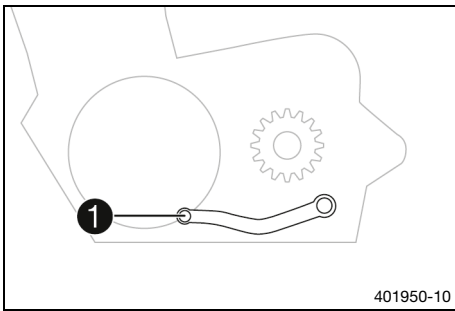

Gear shift lever ① is mounted on the left of the engine.


(All FC models)

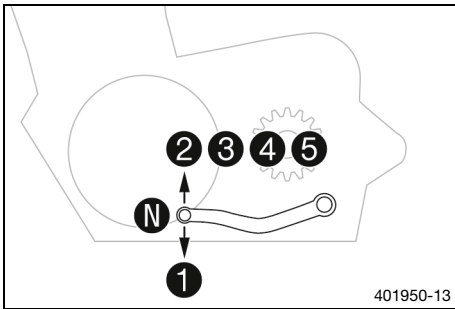

The gear positions can be seen in the figure.

The neutral or idle position is between the first and second gears.


(All FX models)

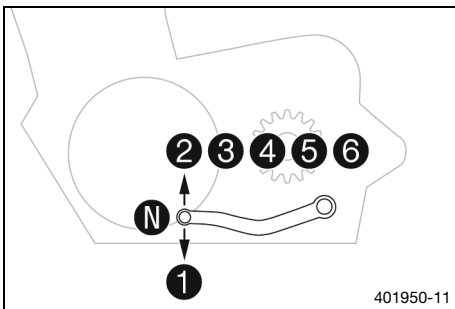

The gear positions can be seen in the figure.

The neutral or idle position is between the first and second gears.


6.15 Brake pedal

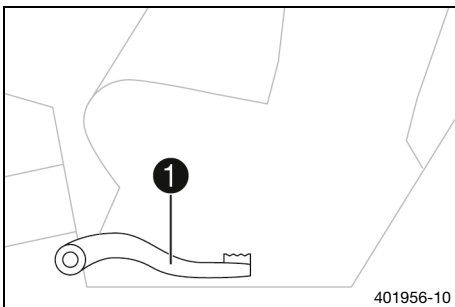

Brake pedal ① is located in front of the right footpeg.

The rear brake is operated with the brake pedal.

6.16 Plug-in stand (All FC models)

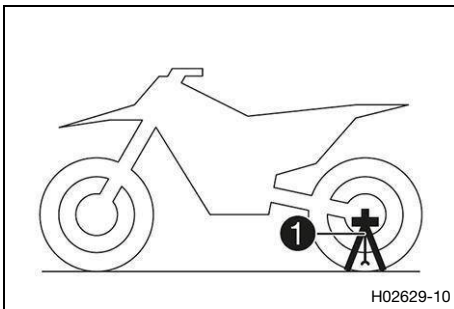

The holder for the plug-in stand **1** is the left side of the wheel spindle.

The plug-in stand is used to park the motorcycle.

The plug-in stand is used as a fork support when transporting the motorcycle.




Note


Remove the plug-in stand before riding.

The tool can be attached to the plug-in stand.

6.17 Side stand (All FX models)

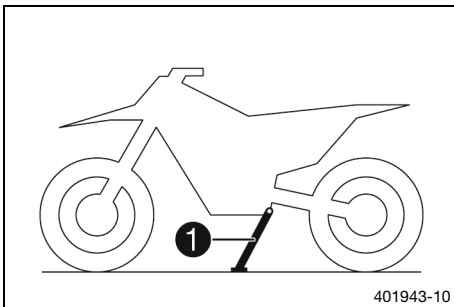

The side stand **1** is located on the left of the vehicle.

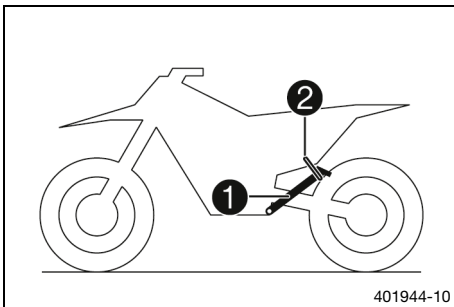

The side stand is used for parking the motorcycle.



Note

When you are riding, side stand **1** must be folded up and secured with rubber band **2**.

7.1 Notes on preparing for first use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



WARNING

Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

- Make sure that only tires of the same tread type are mounted to the front and rear wheel.



WARNING

Danger of accidents Not adapting the riding style constitutes a major risk.

- Adapt the vehicle speed to the road conditions and your riding ability.



WARNING

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



WARNING

Danger of accidents The brake system fails in the event of overheating.

If the brake pedal is not released, the brake pads grind continuously.

- Take your foot off the brake pedal when you are not braking.



WARNING

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible total weight or the axle loads.



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



Note

When using the motorcycle, remember that others may be disturbed by excessive noise.

- Ensure that the pre-delivery inspection work has been carried out by an authorized Husqvarna Mobility workshop.
 - ✓ You will receive the delivery certificate at vehicle handover.
- Read the entire owner's manual before riding for the first time.
- Get to know the controls.
- Adjust the basic position of the clutch lever.  (p. 87)
- Adjust the basic position of the hand brake lever.  (p. 90)
- Adjust the basic position of the brake pedal.   (p. 96)
- Adjust the basic position of the gear shift lever.   (p. 125)

- Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride.



Note

This vehicle is not approved for use on public roads.

When off-road, it is recommended that you be accompanied by another person with another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not undertake any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.
- Do not take any luggage.
- The maximum permissible total weight and the maximum permissible axle loads must not be exceeded.

Maximum permissible total weight	335 kg
Maximum permissible front axle load	145 kg
Maximum permissible rear axle load	190 kg

- Run in the engine. 📖 (p. 27)



7.2 Running in the engine


- Do not exceed the specified engine speed and load during the running-in time.

Maximum engine speed	
During the first operating hour	7,000 rpm
Maximum engine power	
during the first 3 operating hours	≤ 75 %

- Avoid fully opening the throttle.



7.3 Starting performance of lithium-ion batteries at low temperatures

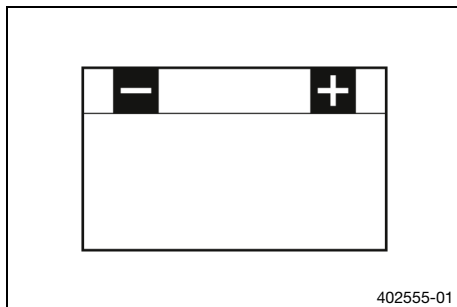

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 6 °C (43 °F).

Several attempts to start may be required. Press the start button for 5 seconds, and wait 15 seconds between attempts. At low temperatures, wait for 30 seconds. The pauses are necessary so that the heat created can be distributed through the lithium-ion battery without damaging the lithium-ion battery.

The starting power increases as the battery warms up.

Always make sure the lithium-ion battery is charged to that there is enough power to spare for starting at low temperatures.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

7.4 Preparing the vehicle for difficult operating conditions

i Note

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

- Clean the air filter and air filter box.  (p. 73)

i Note

Check the air filter approx. every 30 minutes.

- Check the electrical socket connector for humidity and corrosion and to ensure it is firmly seated.
 - » If moisture, corrosion, or damage is found:
 - Clean and dry the socket connector, or change it if necessary.
- Riding on dry sand.  (p. 28)
- Riding on wet sand.  (p. 29)
- Rides on wet and muddy surfaces.  (p. 29)
- Riding at high temperatures or slow speed.  (p. 30)
- Riding at low temperatures and in snow.  (p. 30)

7.5 Preparing the vehicle for rides on dry sand



- Mount the air filter dust protection.

Air filter dust protection cover (A46009620000)

i Note

Follow the mounting instructions for Husqvarna Mobility Technical Accessories.



- Mount the air filter sand protection.

Air filter sand protection (A46006922000)

i Note

Follow the mounting instructions for Husqvarna Mobility Technical Accessories.



- Clean the chain.

Chain cleaner  (p. 156)


- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 153)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.



7.6 Preparing the vehicle for rides on wet sand

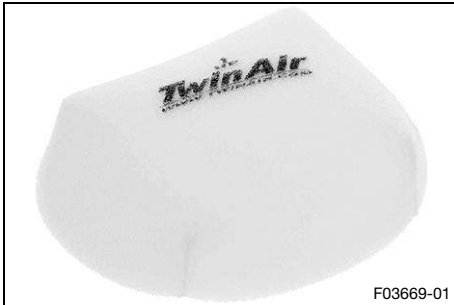

- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note

Follow the mounting instructions for Husqvarna Mobility Technical Accessories.



- Clean the chain.

Chain cleaner  (p. 156)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 153)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.



7.7 Preparing for rides on wet and muddy surfaces



- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note

Follow the mounting instructions for Husqvarna Mobility Technical Accessories.

7 Preparing for use



- Mount the steel sprocket.
- Clean the motorcycle. 📖 (p. 131)
- Straighten the bent radiator fins carefully.

7.8 Preparing vehicle for rides at high temperature or slow speed



- Adjust the secondary transmission to the road conditions.



Note

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

- Clean the chain. 📖 (p. 80)
- Clean the radiator fins.
- Straighten the bent radiator fins carefully.
- Check the coolant level. 📖 (p. 116)

7.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter water protection.

Air filter water protection (A46006921000)



Note


Follow the mounting instructions for Husqvarna Mobility Technical Accessories.

8.1 Checks and maintenance measures when preparing for use



Note

Before every trip, check the condition of the vehicle and ensure that it is safe to operate. The vehicle must be in perfect technical condition when it is being operated.

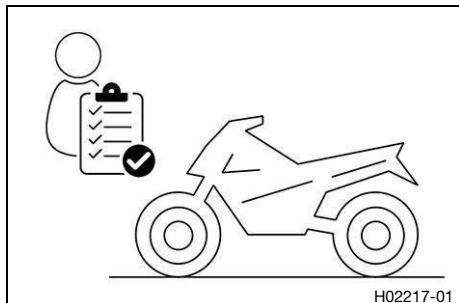

- Check that the electrical equipment is functioning properly.
- Check the engine oil level. (p. 127)
- Check the brake fluid level for the front brake. (p. 91)
- Check the brake fluid level for the rear brake. (p. 97)
- Check that the brake pads of the front brake are secured. (p. 93)
- Check that the brake pads of the rear brake are secured. (p. 99)
- Check the function, condition, and free travel of the brake system.
- Check the coolant level. (p. 116)
- Check the chain for dirt. (p. 80)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (p. 82)
- Check the chain tension. (p. 81)
- Check the tire condition. (p. 107)
- Check the tire pressure. (p. 108)
- Check the spoke tension. (p. 108)



Note

The spoke tension must be checked regularly as incorrect spoke tension will severely impair riding safety.

- Clean the dust boots of the fork legs. (p. 56)
- Bleed the fork legs. (p. 55)
- Check the air filter and clean if necessary.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.



8.2 Starting the vehicle



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

8 Riding instructions




NOTE

Engine failure Running a cold engine at high engine speeds negatively impacts the service life of the engine.


- Always warm up the engine at low engine speeds.

(All FC models)

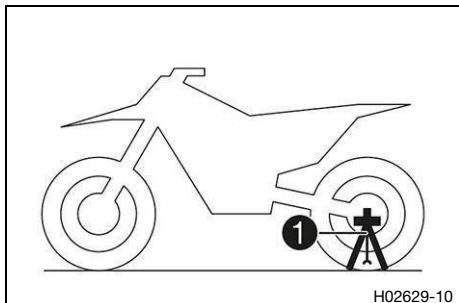

- Remove plug-in stand **1**.

(All FX models)

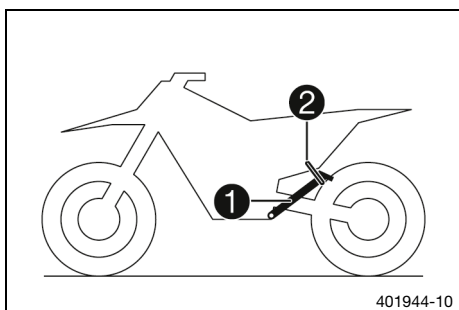

- Take the motorcycle off side stand **1** and secure the side stand with rubber band **2**.
- Shift the transmission into the neutral position.

Condition: Ambient temperature: < 20 °C

- Press the cold start button in all the way to the stop.
- Press electric starter (⚡).



Note

Press the electric starter for a maximum of 5 seconds. Wait for 15 seconds before making another attempt at starting.

At low temperatures, wait for 30 seconds.

At temperatures below 6 °C (43 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

The malfunction indicator light lights up during the starting process.

8.3 Activating launch control



Note

The launch control helps the rider to generate optimum motorcycle acceleration at the beginning of a race. The maximum speed of the engine with the throttle valve fully opened (full throttle) is reduced. After the start, it is gradually increased up to the maximum engine speed. The clutch must be operated exactly as it would be without launch control activated.

Condition: Motorcycle is stationary, The engine is running at idle speed, The transmission is in neutral.



- Press and hold the TC button ① and the QS button ② simultaneously.
- ✓ The TC indicator lamp and the QS indicator lamp flash when launch control is activated.



Note

The launch control is deactivated automatically for a few seconds after the vehicle has started.

Launch control is also deactivated in the following cases: if the throttle valve is closed more than 1/3 of the way after full throttle, and/or if there is no start within 3 minutes.

For safety reasons, the engine must be switched off for at least 10 seconds before the launch control can be activated again, regardless of whether the vehicle has been started or not.

If the engine has already been running for some time, the engine must first be restarted before the launch control can be activated.



8.4 Activating traction control



Note

The traction control reduces excessive slip on the rear wheel in favor of more control and propulsion, particularly in wet conditions.

When traction control is switched off, the rear wheel may spin more during high acceleration and on surfaces with low grip.

Traction control can be switched on or off during the ride.

The setting most recently selected is activated again when restarting.



- Press the TC button ① to switch traction control on or off.

Engine speed	≤ 4,000 rpm
--------------	-------------


- ✓ The TC indicator lamp lights up when traction control is activated.



8.5 Starting off

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.

8.6 Quickshifter

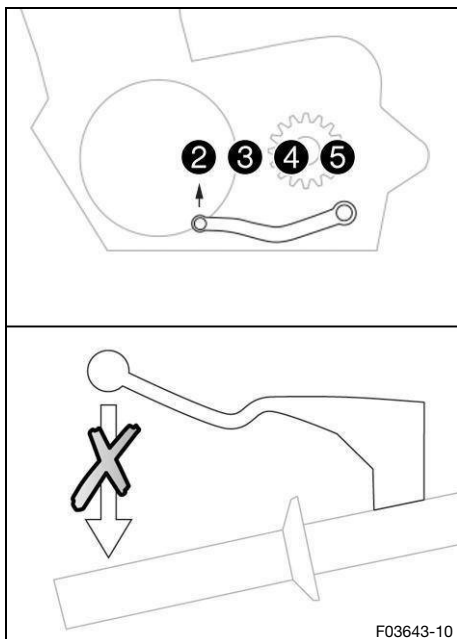

When the **quickshifter** is activated, you can shift up without actuating the clutch.

i Note

The quickshifter is not activated when shifting up from first to second gear, and the clutch lever must be used when shifting up instead.

Even if the quickshifter is activated, you need to use the clutch lever to shift down.

Because there is no need to close the throttle grip, uninterrupted gear shifts are possible.

The quickshifter uses the shifter shaft position to check whether or not a shift should be initiated, and sends a corresponding signal to the engine control.

If the quickshifter is deactivated, the clutch needs to be actuated in the normal way for each shift.

8.7 Activate the quickshifter



- Press the QS button **1** to switch the quickshifter on or off.
 - ✓ The QS indicator lamp lights up when the quickshifter is activated.

i Note

The quickshifter is not activated when shifting up from first to second gear, and the clutch lever must be used when shifting up instead.

Even if the quickshifter is activated, you need to use the clutch lever to shift down.

8.8 Shifting, riding



WARNING

Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.

- Do not downshift to a lower gear at high engine speeds.



Note

If unusual noises occur during operation, stop immediately, switch off the engine, and contact an authorized Husqvarna Mobility workshop.

First gear is used for starting off or for steep inclines.

- Shift into a higher gear when conditions allow (incline, riding situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- If you pushed the cold start button while starting, open the throttle briefly and release the throttle twist grip or turn the throttle twist grip forward.
 - ✓ The cold start button goes to the basic position.
- After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is $\frac{3}{4}$ open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle. Abruptly opening the throttle increases fuel consumption.
- To shift down, brake and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

≥ 1 min

- Avoid riding the clutch frequently or for too long. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed when riding the clutch.

Condition: Quickshifter activated.

- If the **quickshifter** is activated, you can shift up in the engine speed range shown without pulling the clutch lever.



Note


The quickshifter is not activated when shifting up from first to second gear, and the clutch lever must be used when shifting up instead.

The minimum engine speed before shifting up in revolutions per minute is shown in the figure.

Pull the shift lever to the stop quickly without changing the throttle twist grip position.

Even if the quickshifter is activated, you need to use the clutch lever to shift down.

If the shifting performance of the Quickshifter starts to decrease, it must be reprogrammed.

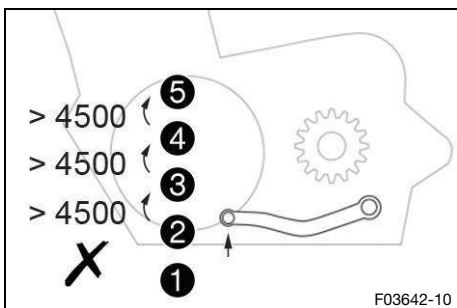

8.9 Braking



WARNING

Danger of accidents Braking with excessive force locks the wheels.

- Adapt your braking to the riding situation and the road conditions.



WARNING

Danger of accidents A spongy pressure point on the front or rear brake reduces the brake action.

- Do not drive the vehicle if the brake system has a spongy pressure point.



WARNING

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- On sandy, wet, or slippery surfaces, use mostly the rear brake.
- Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
- Use the brake action of the engine on long downhill stretches. Shift down one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and means the brake system does not overheat.

8.10 Stop, park



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

- Brake the motorcycle.
- Shift the transmission into the neutral position.
- Press and hold the stop button  while the engine is idling until the engine stops.
- Park the motorcycle on firm ground.

8.11 Transportation



NOTE

Material damage The vehicle may be damaged if parked incorrectly. Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.


- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

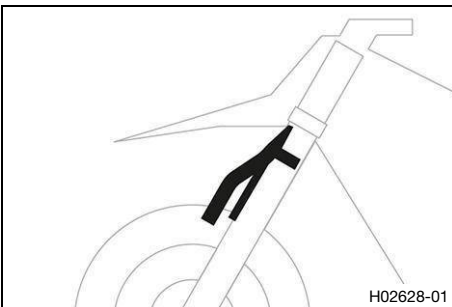


- Switch off the engine.
- Mount the plug-in stand on the fork legs.

Plug-in stand (A46029094000)



Note

The plug-in stand is included in the scope of supply. Make sure the brake line runs in front of the plug-in stand and does not become wedged.

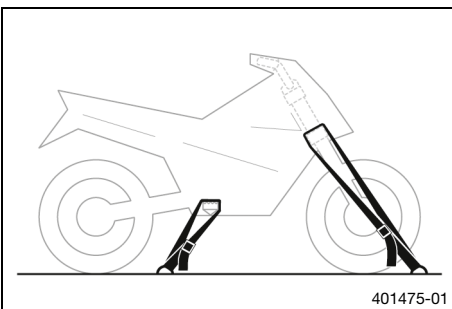


- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.



Note

Only tighten the tie downs to the point that the plug-in stand is firmly in contact with the fender and tires. Make sure that the plug-in stand is aligned with the underside of the fender.

(All FX models)

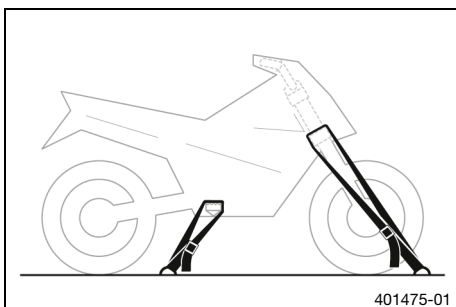

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

8.12 Refueling



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.




NOTE

Material damage Inadequate fuel quality can lead to losses in performance and consequential damage.

- Refuel only with clean fuel that meets the specified standards.

- Switch off the engine.
- Open the fuel tank cap.  (p. 21)
- Fill the fuel tank with fuel no higher than **A**.

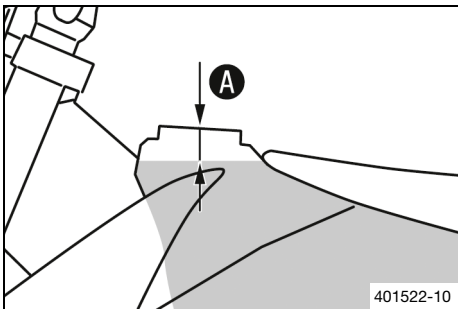

Level A	35 mm
Total fuel tank capacity, approx. (All FC models)	
Super unleaded (ROZ 95)  (p. 152)	7.2 l
Total fuel tank capacity, approx. (All FX models)	
Super unleaded (ROZ 95)  (p. 152)	8.5 l

- Close the fuel tank cap.  (p. 22)

9.1 Service schedule

Any further work that results from the service work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

If the vehicle is used in particularly harsh conditions such as heavy rain, mud, sand, snow, extreme temperatures, frequent full load etc., shorter service intervals than those in the table may be necessary.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized dealers for the electronic proof of service. Your authorized dealer will be happy to advise you.

	Every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	Every 15 operating hours				
	After one operating hour				
Read out the fault memory using the diagnostics tool. 	○	●	●	●	●
Program the gear position sensor. 		●	●	●	
Check that the electrical equipment is functioning properly.	○	●	●	●	
Check and charge the 12 V battery. 	○	●	●	●	●
Check that the brake pads of the front brake are secured.  (p. 93)	○	●	●	●	●
Check that the brake pads of the rear brake are secured.  (p. 99)	○	●	●	●	●
Check the brake discs.  (p. 90)	○	●	●	●	●
Check the brake lines for damage and tightness.	○	●	●	●	●
Check the brake fluid level for the front brake.  (p. 91)	○	●	●		
Change the brake fluid for the front brake. 				●	●
Check the brake fluid level for the rear brake.  (p. 97)	○	●	●		
Change the brake fluid for the rear brake. 				●	●
Check/correct the fluid level of the hydraulic clutch.  (p. 87)			●		
Change the hydraulic clutch fluid.   (p. 88)				●	●
Check the free travel on the hand brake lever.  (p. 90)	○	●	●	●	●
Check the free travel of the brake pedal.  (p. 96)	○	●	●	●	●
Check the idle speed. 	○	●	●	●	●
Change the engine oil and the oil filter, clean the oil screens.   (p. 127)	○	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing. 	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 		●	●	●	●
Check that the clutch cables are undamaged, routed without kinks, and set correctly. 		●	●	●	●
Check the frame.   (p. 85)		●	●	●	
Check the swingarm.   (p. 85)		●	●	●	
Check the swingarm bearing for play. 			●	●	
Check the heim joint on the shock absorber for play.			●	●	
Check the shock absorber linkage. 		●	●	●	
Check the tire condition.  (p. 107)		●	●	●	●
Check the tire pressure.  (p. 108)		●	●	●	●
Check the wheel bearing for play. 		●	●	●	


9 Service schedule

	Every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	Every 15 operating hours				
	After one operating hour				
Check the hubs. 		•	•	•	
Check the rim run-out. 	○	•	•	•	
Check the spoke tension.  (p. 108)	○	•	•	•	
Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 82)	○	•	•	•	
Check the chain tension.  (p. 81)	○	•	•	•	•
Grease all moving parts (e.g., hand lever, chain, etc.) and check for smooth operation. 	○	•	•	•	•
Change the spark plug and spark plug connector. 			•	•	
Check the valve clearance. 	○		•	•	
Change the fuel filter. 				•	•
Check the clutch. 		•	•	•	
Clean the air filter and air filter box.   (p. 73)		•	•	•	•
Change the glass fiber filling of the muffler.   (p. 76)			•	•	
Carry out fork service. (FC EU, FC US) 			•	•	
Carry out fork service. (All FX models) 			•	•	
Service the shock absorber. (FC EU, FC US, All FX models) 			•	•	
Check all screws, nuts, and hose clamps for a tight fit. 	○	•	•	•	•
Change the fuel screen.   (p. 126)	○	•	•	•	•
Check the fuel pressure. 	○		•	•	•
Check the frost protection and coolant level.  (p. 115)			•	•	
Check the coolant level.  (p. 116)	○	•			
Change the coolant.  (p. 118)					•
Check the steering head bearing play.  (p. 63)	○	•			
Lubricate the steering head bearing.   (p. 64)			•	•	•
Perform minor engine service including removing and installing the engine. (Change the piston, check/measure the cylinder. Check the cylinder head. Check the camshaft and valve train components. Check the timing assembly. Change the radial shaft seals and water pump gasket. Change the intake flange. Change inlet sleeve.) 			•	•	
Perform major engine service, engine is removed. (Change valves, valve springs, valve spring seats, and valve spring retainer. Change the connecting rod, conrod bearing and crank pin. Check the transmission and shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Change the timing chain. Change all engine bearings and all gaskets. Change the free-wheel.) 				•	
Final check: check vehicle for operating safety. 	○	•	•	•	•
Take a test ride. 	○	•	•	•	•
Read out the fault memory after the test ride using the diagnostics tool. 	○	•	•	•	•
Enter electronic proof of service. 	○	•	•	•	•

- One-time interval
- Periodic interval


10.1 Checking the basic chassis setting with the rider's weight

Note
When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

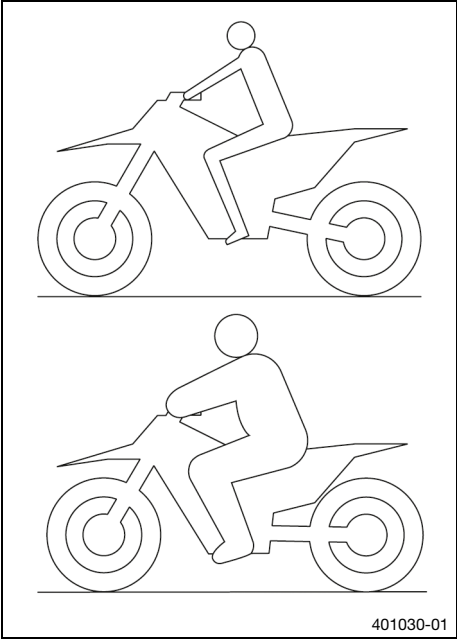

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm, and frame, the basic settings of the suspension components must match the rider's weight.
 - In the delivered condition, Husqvarna motorcycles are adjusted for an average rider's weight (with full protective clothing).
- | | |
|-------------------------|-----------------|
| Standard rider's weight | 75 kg ... 85 kg |
|-------------------------|-----------------|
- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
 - Small weight differences can be compensated by adjusting the spring pretension of the shock absorber, but in the case of large weight differences, the springs must be replaced.

10.2 Air suspension XACT (All FC models)

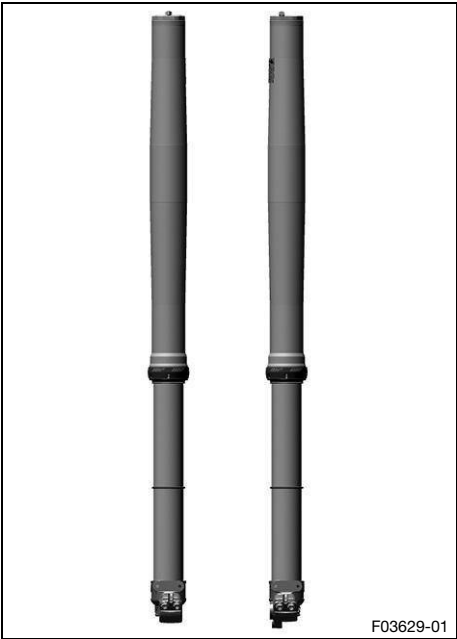

Air suspension **WP XACT** is used in the fork.
In this system, the suspension is located in the left fork leg and damping in the right fork leg.
As fork springs are no longer required, a significant weight advantage is achieved when compared to conventional forks. The response on slightly uneven surfaces is significantly improved.
In normal driving mode, suspension is provided exclusively by an air cushion. A steel spring is located in the left fork leg as an end stop.

Note
If the fork frequently bottoms out, then the fork air pressure must be increased to avoid damage to the fork and frame.

The air pressure in the fork can be quickly adjusted to the rider's weight, surface conditions, and the rider's preference using a fork air pump. The fork does not have to be dismantled. The time-consuming mounting of harder or softer fork springs is not required.
If the air chamber loses air due to a damaged seal, the fork will still not sag. In this case the air is retained in the fork. The suspension travel is maintained as far as possible. The damping becomes harder, and the riding comfort is reduced.
As with a conventional fork, the damping can be adjusted in rebound and compression stages.
The rebound adjustment is located at the lower end of the right fork leg.

The compression adjustment is located at the upper end of the right fork leg.

10.3 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression has an effect, for example, when riding over long bumps: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is floating. As a result, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.4 Adjusting the low-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.


The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

The effect of the low-speed compression adjustment can be seen in slow to normal compression of the shock absorber.

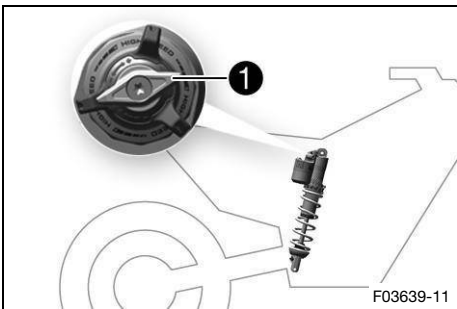

- Turn adjusters ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Low-speed compression damping (FC EU)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Low-speed compression damping (FC US)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Low-speed compression damping (All FX models)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks



Note

Turning clockwise increases damping; turning anti-clockwise reduces damping.

10.5 Adjusting the high-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

 
The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

The effect of the high-speed compression adjustment can be seen in the fast compression of the shock absorber.



- Turn adjusters ❶ clockwise all the way to the stop.
- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

High-speed compression damping (FC EU)	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn

High-speed compression damping (FC US)	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn

High-speed compression damping (All FX models)	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn



Note

Turning clockwise increases damping; turning anti-clockwise reduces damping.

10.6 Adjusting the rebound damping of the shock absorber




CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.

10 Tuning the chassis

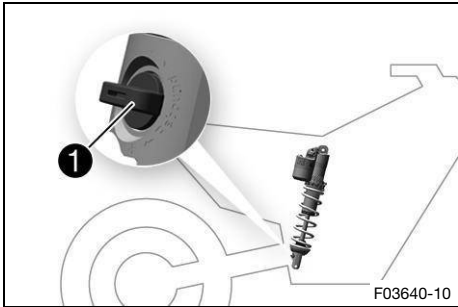

- Turn adjusters **1** clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Rebound damping (FC EU)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Rebound damping (FC US)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Rebound damping (All FX models)	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Note
Turning clockwise increases damping; turning anti-clockwise reduces damping on rebound.

10.7 Measuring the dimension of the unloaded rear wheel

Preparatory work


- Raise the motorcycle with a lift stand. (p. 54)

Control process

- Position the sag gage in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag scale (00029090200)

- Note the value as dimension **A**.

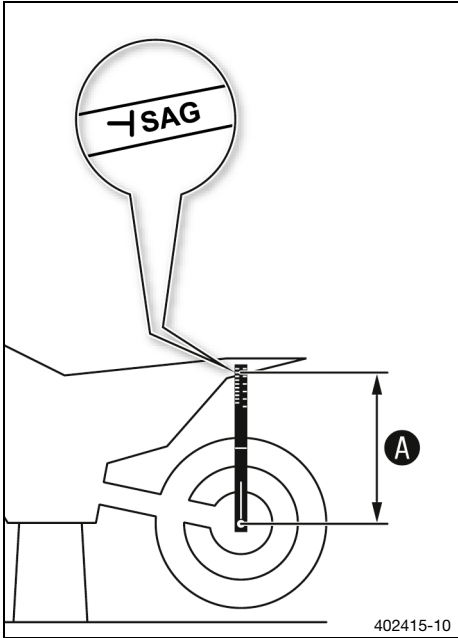


Reworking

- Remove the motorcycle from the lift stand.  (p. 54)



10.8 Checking the static sag of the shock absorber

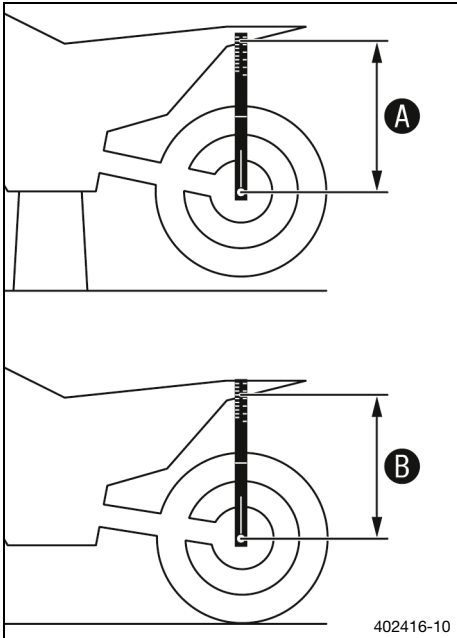

- Measure the dimension of the unloaded rear wheel.  (p. 44)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag gage.
- Note the value as dimension **B**.

i Note
The static sag is the difference between measurements **A** and **B**.

- Check the static sag.


Static sag (FC EU)	35 mm
Static sag (FC US)	35 mm
Static sag (All FX models)	35 mm

- » If the static sag is more or less than the specified value:
 - Adjust the preload for the shock absorber. 

 (p. 46)



10.9 Checking the rider sag of the shock absorber

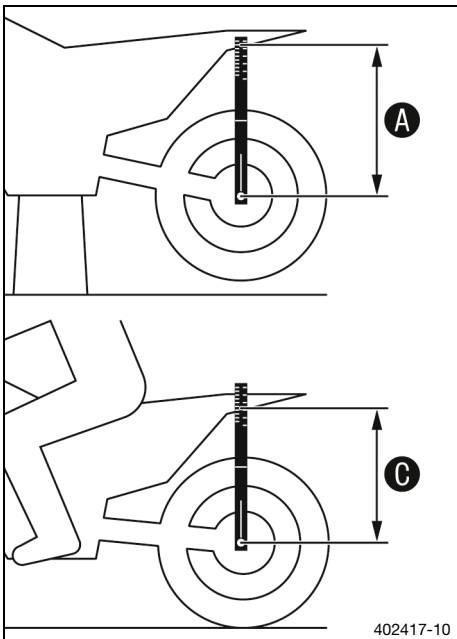

- Measure the dimension of the unloaded rear wheel.  (p. 44)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal seating position (feet on footpegs) and bounces up and down a few times.
 - ✓ The rear wheel suspension levels out.
- With the help of another person, remeasure the distance between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **C**.

i Note
The rider sag is the difference between measurements **A** and **C**.

- Check the rider sag.

Rider sag (FC EU)	105 mm
Rider sag (FC US)	105 mm
Rider sag (All FX models)	105 mm

- » If the rider sag differs from the specified measurement:
 - Adjust the rider sag.   (p. 47)



10.10 Adjusting the preload for the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

Note the current adjustment before changing the spring preload - e.g. measure the spring length.

- Preparatory work**
- Remove the frame protector.  (p. 58)
 - Remove the muffler.  (p. 75)
 - Raise the motorcycle with a lift stand.  (p. 54)
 - Remove the shock absorber.   (p. 66)
 - After removing the shock absorber, clean it thoroughly.

- Adjustment procedure**
- Loosen screw **1**.
 - Turn adjusting ring **2** until the spring is no longer under tension.
- | | |
|---------------------------|--|
| Hook wrench (90129051000) | |
|---------------------------|--|



Note

If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

- Measure the total spring length while the spring is not under tension.
- Tension the spring by turning adjusting ring **2** to the specified degree **A**.


Preload (FC EU)	8 mm
Preload (FC US)	8 mm
Preload (All FX models)	8 mm



Note

Depending on the static sag and/or the rider sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw **1**.
- | | |
|--------------------------------------|------|
| Screw, shock absorber adjusting ring | |
| M5 | 5 Nm |

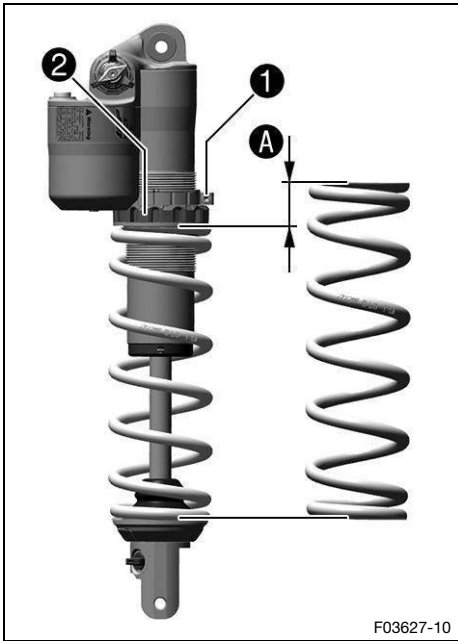

Reworking

- Install the shock absorber.   (p. 68)
- Install the muffler.  (p. 75)
- Install the frame protector.  (p. 58)
- Check the free travel of the brake pedal.  (p. 96)
- Remove the motorcycle from the lift stand.  (p. 54)




10.11 Adjusting the rider sag

Preparatory work

- Remove the frame protector.  (p. 58)
- Remove the muffler.  (p. 75)
- Raise the motorcycle with a lift stand.  (p. 54)
- Remove the shock absorber.   (p. 66)
- After removing the shock absorber, clean it thoroughly.

Adjustment procedure

- Select and mount a suitable spring.

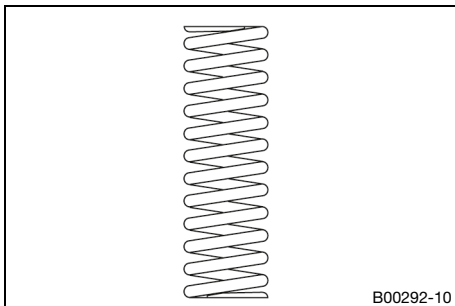

Spring rate (FC EU)	
Weight of rider: 65 kg ... 75 kg	36 N/mm
Weight of rider: 75 kg ... 85 kg	39 N/mm
Weight of rider: 85 kg ... 95 kg	42 N/mm

Spring rate (FC US)	
Weight of rider: 65 kg ... 75 kg	36 N/mm
Weight of rider: 75 kg ... 85 kg	39 N/mm
Weight of rider: 85 kg ... 95 kg	42 N/mm

Spring rate (All FX models)	
Weight of rider: 65 kg ... 75 kg	42 N/mm
Weight of rider: 75 kg ... 85 kg	45 N/mm
Weight of rider: 85 kg ... 95 kg	48 N/mm

i Note
The spring rate is shown on the outside of the spring.


Reworking

- Install the shock absorber.   (p. 68)
- Install the muffler.  (p. 75)
- Install the frame protector.  (p. 58)
- Check the free travel of the brake pedal.  (p. 96)
- Remove the motorcycle from the lift stand.  (p. 54)
- Check the static sag of the shock absorber.  (p. 45)
- Check the rider sag of the shock absorber.  (p. 45)
- Adjust the rebound damping of the shock absorber.  (p. 43)
- Remove the motorcycle from the lift stand.  (p. 54)



10.12 Checking the basic setting of the fork

i Note
For various reasons, no exact rider sag can be determined for the fork.

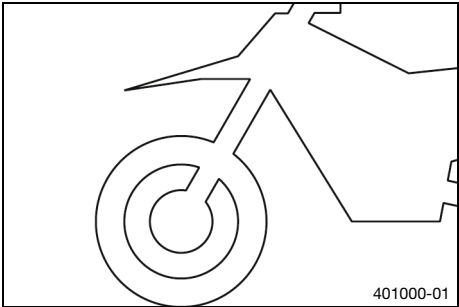

- Smaller differences in the rider's weight can be compensated for by the fork air pressure.
- However, if the fork frequently bottoms out (hard end stop on compression), the fork air pressure must be increased, within the specified values, to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

10.13 Adjusting the fork air pressure

! WARNING
Danger of accidents Modifications to the suspension settings that are not properly coordinated can impair the handling and overload components.

 
- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristics.

i Note
Check or adjust the air pressure under the same conditions at the earliest 5 minutes after switching off the engine.
The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

Preparatory work
- Raise the motorcycle with a lift stand. (p. 54)

- Filling procedure**
- Remove protection cap **1**.
 - Fully put fork air pump **2** together.

Fork air pump (79412966100)



i Note
The fork air pump is included as part of the motorcycle's accessory pack.

- Connect the fork air pump to the left fork leg.
 - ✓ The fork air pump indicator switches on automatically.
 - ✓ A little air escapes from the fork leg when connecting.

i Note
This is due to the volume of the hose and is not due to a defect in the fork air pump or the fork.
Observe the accompanying instructions for Husqvarna Mobility Technical Accessories.

- Adjust the air pressure as specified.

Air pressure (FC EU)	8.6 bar
Air pressure (FC US)	8.6 bar
Gradual change of the air pressure in steps by	0.2 bar
Minimum air pressure	7 bar
Maximum air pressure	12 bar



Note

Never adjust the air pressure to a value outside the stated range.

- Disconnect the fork air pump from the left fork leg.
 - ✓ When disconnecting, excess pressure will escape from the hose – the fork leg itself does not lose any air.
 - ✓ The fork air pump display switches off automatically after 80 seconds.
- Mount the protection cap.



Note

Only mount the protection cap by hand.

Reworking

- Remove the motorcycle from the lift stand. (p. 54)




10.14 Adjusting the compression damping of the fork



Note

The hydraulic compression damping determines the fork suspension behavior.

(All FC models)

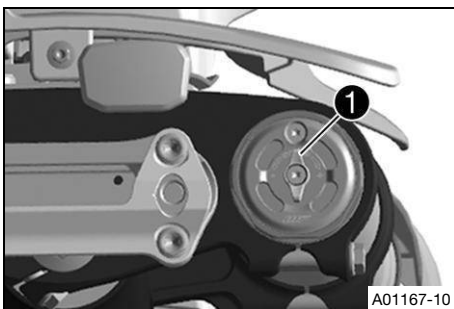

- Turn adjusters **1** clockwise all the way to the stop.




Note

Adjusters **1** are located at the top end of the fork legs.

- Turn clockwise by the number of clicks corresponding to the fork type.

Compression damping (FC EU)	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

Compression damping (FC US)	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

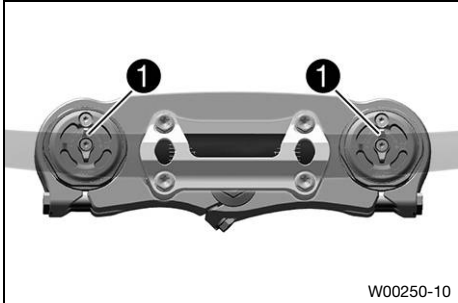

i Note
Turning clockwise increases damping; turning counterclockwise reduces damping during compression.

(All FX models)

- Turn adjusters 1 clockwise all the way to the stop.

i Note
Adjusters 1 are located at the top end of the fork legs.

- Turn clockwise by the number of clicks corresponding to the fork type.


Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

- Turning clockwise increases damping; turning counterclockwise reduces damping during compression.

10.15 Adjusting the rebound damping of the fork

i Note
The hydraulic rebound damping determines the fork suspension behavior.

(All FC models)

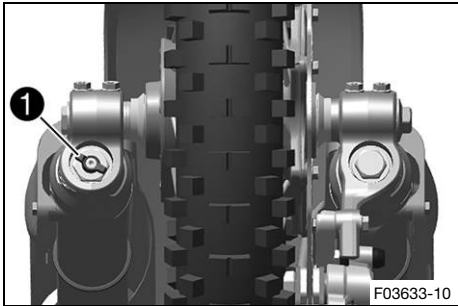

- Turn adjusters 1 clockwise all the way to the stop.

i Note
Adjuster 1 is located at the lower end of the right fork leg.


- Turn clockwise by the number of clicks corresponding to the fork type.

Rebound damping (FC EU)	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

Rebound damping (FC US)	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

i Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.

(All FX models)

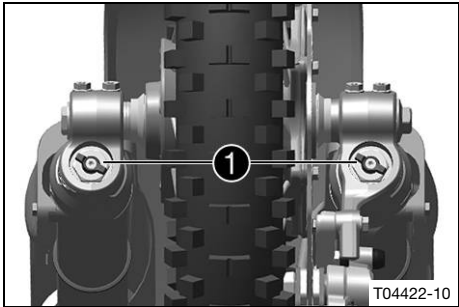

- Turn adjusters ① clockwise all the way to the stop.



Note

Adjusters ① are located at the bottom end of the fork legs.

- Turn clockwise by the number of clicks corresponding to the fork type.


Rebound damping	
Comfort	23 clicks
Standard	18 clicks
Sport	13 clicks



Note

Turning clockwise increases damping; turning counterclockwise reduces the damping when rebounding

10.16 Handlebar position

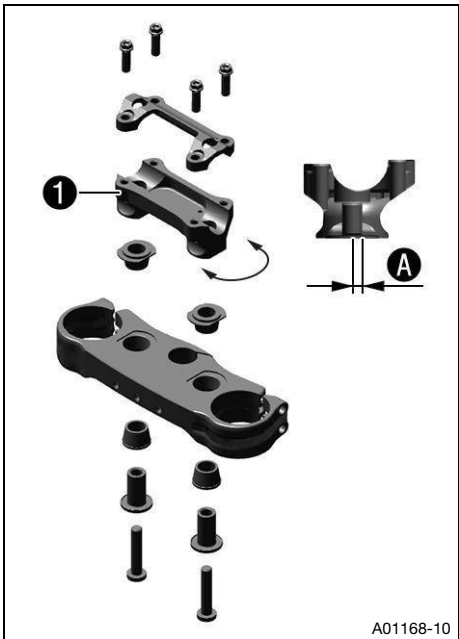

The holes on handlebar mount ① are placed at a distance of ①A from the center.

Hole distance A	3.5 mm
-----------------	--------

The handlebar can be mounted in 2 different positions. This allows the handlebar to be mounted in the most comfortable position for the rider.



Note

In addition, the handlebar can be mounted rigidly or on a rubber support.

10.17 Adjusting the handlebar position



WARNING

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.



Note
The handlebar can be mounted rigidly or on a rubber bearing.

Preparatory work

- Remove the handlebar pad.


Adjustment procedure

- Remove ❶ screws. Remove handlebar clamp ❷. Remove the handlebar and lay it to one side.



Note
Protect the components against damage by covering them.
Do not kink the cables or lines.

- Remove screws ❷ and bushings ❸. Remove handlebar mount ❹.

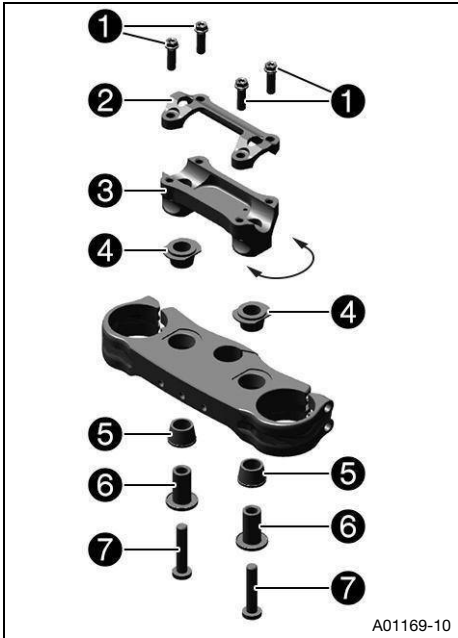

Adjusting the handlebar position with handlebar clamp with rubber bushings

- Position the rubber bushings ❺ and ❻.
- Place the handlebar mount in the required position.



Note
The handlebar mount is longer and higher on one side.

- Mount screws ❼ and bushings ❸ and tighten.

Screw, handlebar mount		
M10	40 Nm	Loctite® 243

- Position the handlebar.




Note
Make sure the cables and wiring are positioned correctly.

- Position handlebar clamp ❷.
- Mount and tighten screws ❶ but do not tighten yet.
- First fasten the handlebar clamp with screws ❶ onto the longer, higher side of the handlebar mounts.
- Tighten screws ❶ evenly.

Handlebar clamp screw		
M8	20 Nm	

Adjusting the handlebar position with the rigid handlebar clamp

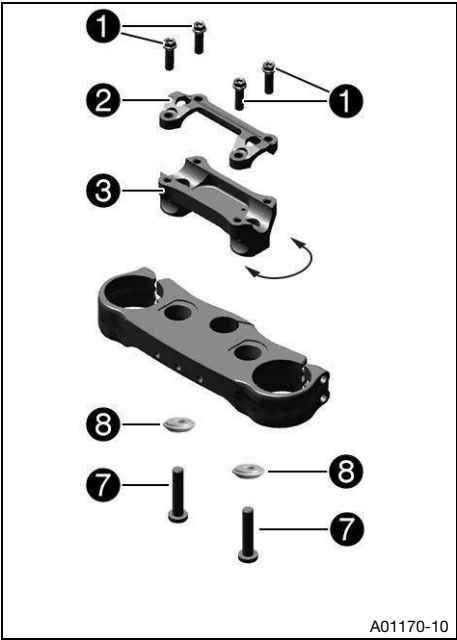

- Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

- Mount screws **7** and bushings **8** and tighten.

Screw, handlebar mount	
M10	40 Nm Loctite® 243

Rigid handlebar clamp bushing (A46001038010)
--

✓ The conical side of the bushing faces downward.

- Position the handlebar.

Note
Make sure the cables and wiring are positioned correctly.

- Position handlebar clamp **2**.
- Mount and tighten screws **1** but do not tighten yet.
- First fasten the handlebar clamp with screws **1** onto the longer, higher side of the handlebar mounts.
- Tighten screws **1** evenly.

Handlebar clamp screw	
M8	20 Nm

Reworking

- Mount the handlebar pad.



11 Service work on the chassis

11.1 Raising the motorcycle with a lift stand



NOTE

 
Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

(All FC models)




- Raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)

- ✓ Neither wheel is in contact with the ground.

 (All FX models)



- Fold in side stand ❶ and raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

11.2 Removing the motorcycle from the lift stand



NOTE

 
Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

(All FC models)



- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, insert plug-in stand ① into the left side of the wheel spindle.


Plug-in stand (A46029094000)



Note

The plug-in stand is included in the scope of supply.
The plug-in stand must be removed before riding.

(All FX models)

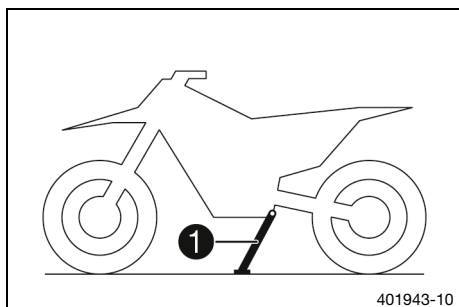

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.



Note

When you are riding, the side stand must be folded up and secured with the rubber band.



 
11.3 Bleeding the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. (p. 54)

Operating procedure

- Loosen bleeder screw ①.
- ✓ Any excess pressure escapes from the inner fork.
- Tighten the bleeder screw.



Reworking

- Remove the motorcycle from the lift stand. (p. 54)




11.4 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)
- Remove the fork protector.  (p. 56)

Cleaning process

- Push dust boot **1** downward on both fork legs.

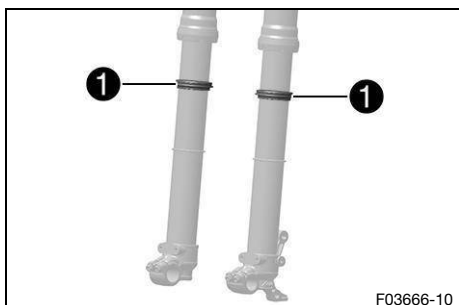

Note

The dust boots should remove dust and coarse dirt particles from the inner fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and the inner fork tube of both fork legs.


Universal oil spray  (p. 153)

- Press the dust boots back into their installation position.
- Remove excess oil.

Reworking


- Install the fork protector.  (p. 57)
- Remove the motorcycle from the lift stand.  (p. 54)

11.5 Removing the fork protector

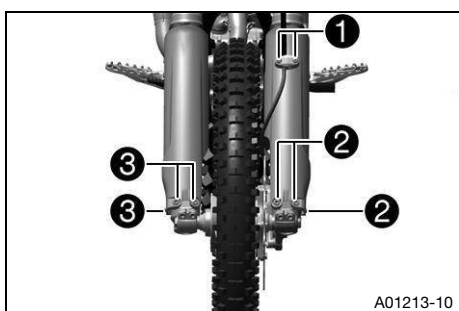

- Remove screw **1** and take off the clamp.
- Remove screws **2** and take off the left fork protector.
- Remove screws **3** and take off the right fork protector.

 11.6 Installing the fork protector



- Position the fork protector on the left fork leg. Mount and tighten screws ①.


Remaining screws on chassis	
M6	10 Nm

- Position the brake line and the clamp. Mount and tighten screws ②.
- Position the fork protector on the right fork leg. Mount and tighten screws ③.

Remaining screws on chassis	
M6	10 Nm



11.7 Removing the skid plate (All FX models)

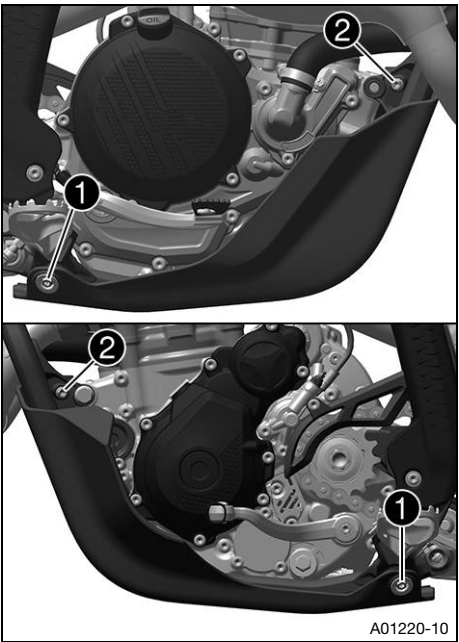


- Remove screws ① and bushings.
- Remove ② screws. Take off the skid plate.



11 Service work on the chassis

11.8 Installing the skid plate (All FX models)

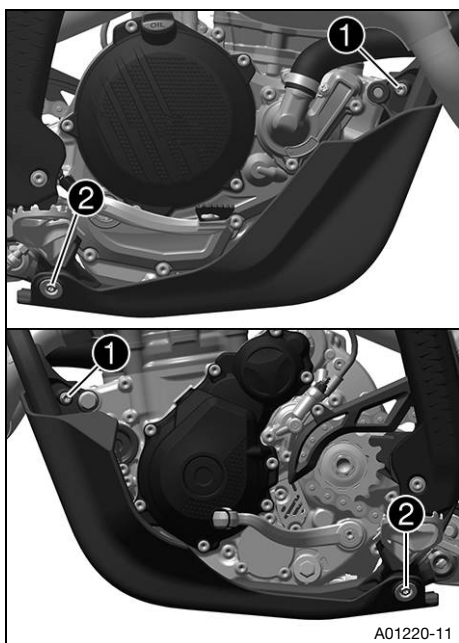

- Position the skid plate on the frame.
- Mount and tighten screws ❶ but do not tighten yet.

Remaining screws on chassis	
M6	10 Nm

- Mount screws ❷ with bushings, but do not tighten yet.


Remaining screws on chassis	
M6	10 Nm

✓ The skid plate is directed evenly toward the front.

- Tighten all the screws of the skid plate.


Remaining screws on chassis	
M6	10 Nm

 11.9 Removing the frame protector



- Remove the cable ties.
- Remove screws ❶ and bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

11.10 Installing the frame protector

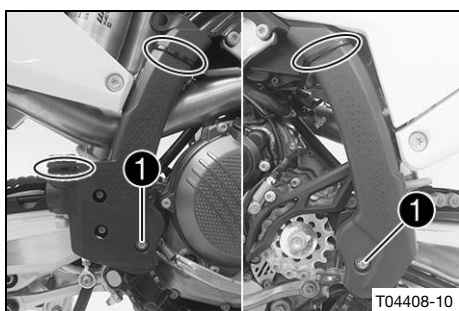

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screw ❶ and bushing and tighten.

Screw, frame protector	
M5	3 Nm

- Secure the frame protector with cable ties.

Turn the head of the cable tie so far back that it does not touch any other components.	
---	--

11.11 Removing the fork legs

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)
- Remove the front wheel.   (p. 103)


Removal process

- Remove screw ① and take off the clamp.
- Remove screws ② and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.




Note

Do not actuate the hand brake lever when the front wheel is removed.

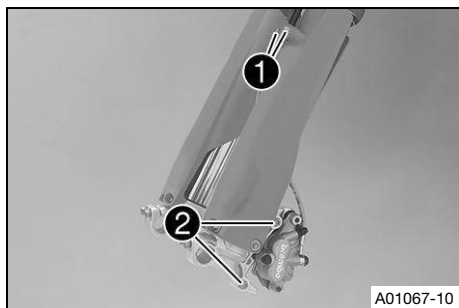

A01067-10

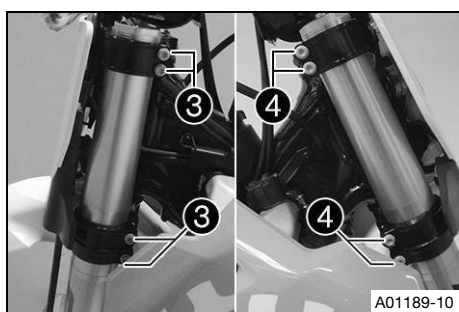

A01189-10

- Loosen screws ③. Remove the left fork leg.
- Loosen screws ④. Remove the right fork leg.

11.12 Installing the fork legs


Installation procedure

- Position the fork legs.
 - ✓ Bleed screw ① of the right fork leg is positioned to the front.
 - ✓ Valve A of the left fork leg faces the front.




Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp. The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

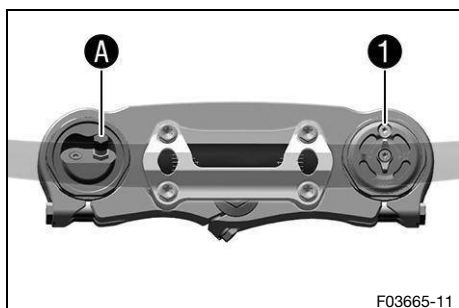

F03665-11

 

A01189-11


- Tighten screws ②.

Screw, top triple clamp	
M8	17 Nm

- Tighten screws ③.

Screw, bottom triple clamp	
M8	12 Nm

 11 Service work on the chassis



- Position the brake caliper. Mount and tighten screws ④.

Screw, front brake caliper	
M8	25 Nm
Loctite® 243	

- Position the brake line and the clamp. Mount and tighten screws ⑤.

 
Reworking

- Install the front wheel. (p. 104)

11.13 Removing the lower triple clamp

Preparatory work

- Raise the motorcycle with a lift stand. (p. 54)
- Remove the front wheel. (p. 103)
- Remove the fork legs. (p. 59)
- Remove the number plate. (p. 65)
- Remove the front top fender. (p. 65)
- Remove the handlebar pad.



Removal process


- Remove screw ①. Detach the wiring harness.
- Remove screw ②.
- Remove screw ③.
- Take off the upper triple clamp and handlebar and set it aside.



Note

Protect the components against damage by covering them.

Do not kink the cables or lines.

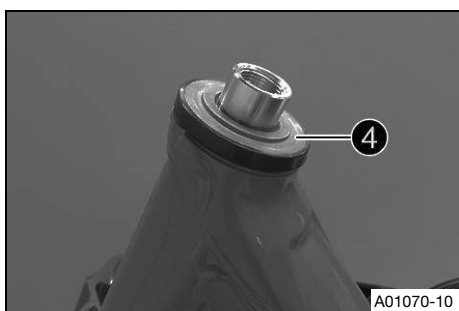

- Remove steering head seal ④.
- Remove the steering stem from the lower triple clamp.
- Remove the upper steering head bearing.


11.14 Installing the lower triple clamp

Installation procedure

- Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease  (p. 154)
--


- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Push on steering head seal ❶.

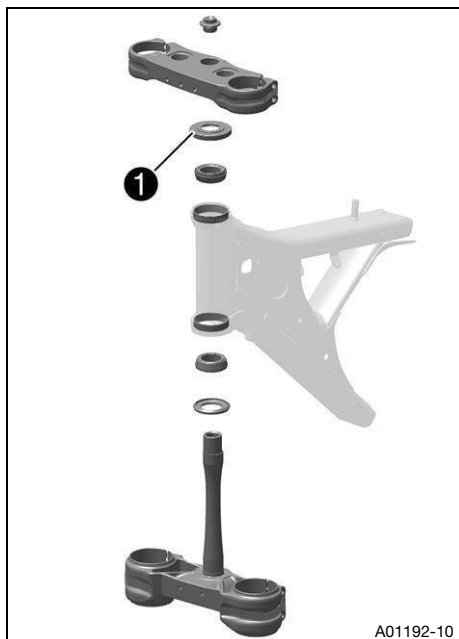

- Position the upper triple clamp and handlebar.
- Mount screw ❷ but do not tighten yet.

Screw, top steering head	
--------------------------	--

M20×1.5	12 Nm
---------	-------

 


- Position the fork legs.
 - ✓ Bleed screw ❸ of the right fork leg is positioned to the front.
 - ✓ Valve A of the left fork leg faces the front.

Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

 
11 Service work on the chassis



- Tighten screws ④.

Screw, bottom triple clamp	
----------------------------	--


M8	12 Nm
----	-------

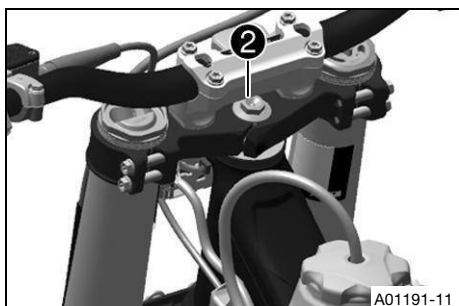

- Tighten screw ②.

Screw, top steering head	
--------------------------	--


M20×1.5	12 Nm
---------	-------

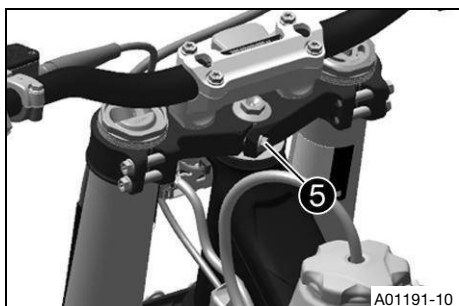

- Mount and tighten screw ⑤.

Screw, upper steering stem	
----------------------------	--

M8	20 Nm
Loctite® 243	

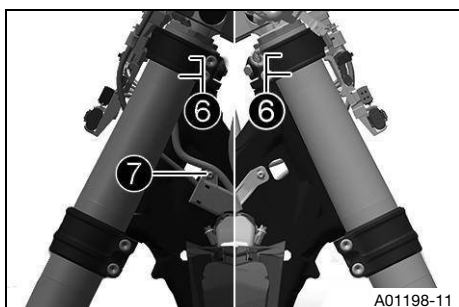


- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.

- Tighten screws ⑥.

Screw, top triple clamp	
-------------------------	--

M8	17 Nm
----	-------

 - Secure the wiring harness with the left cable bracket. Mount and tighten screw ⑦.



- Position the brake caliper. Mount and tighten screws ⑧.

Screw, front brake caliper	
----------------------------	--

M8	25 Nm
Loctite® 243	

- Position the brake line and the clamp. Mount and tighten screws ⑨.

Reworking

- Install the front top fender. 📖 (p. 66)
- Mount the handlebar pad.
- Mount the number plate. 📖 (p. 65)
- Install the front wheel. 🛠️ 📖 (p. 104)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check the steering head bearing play. 📖 (p. 63)
- Remove the motorcycle from the lift stand. 📖 (p. 54)

**11.15 Checking the steering head bearing play****WARNING**

Danger of accidents Incorrect steering head bearing play can impair the handling characteristic and damage components.

- Correct incorrect steering head bearing play immediately.

**Note**

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged.

Preparatory work

- Raise the motorcycle with a lift stand. 📖 (p. 54)

Control process

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

» If there is detectable play:


- Adjust the steering head bearing play. 🛠️ 📖 (p. 64)

- Move the handlebar back and forth over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

» If detent positions are detected:

- Adjust the steering head bearing play. 🛠️ 📖 (p. 64)
- Check the steering head bearing and adjust if necessary.

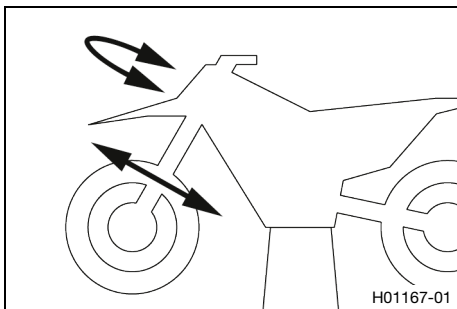


Reworking

- Remove the motorcycle from the lift stand.  (p. 54)

11.16 Adjusting the steering head bearing play

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)
- Remove the handlebar pad.

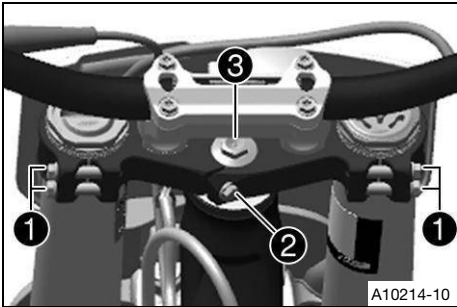

Adjustment procedure

- Loosen screws **1**.
- Remove screw **2**.
- Loosen and retighten screw **3**.

Screw, top steering head	
M20×1.5	12 Nm

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws **1**.

Screw, top triple clamp	
M8	17 Nm


- Mount and tighten screw **2**.

Screw, upper steering stem	
M8	20 Nm
Loctite® 243	

Reworking

- Check the steering head bearing play.  (p. 63)
- Remove the motorcycle from the lift stand.  (p. 54)
- Mount the handlebar pad.


11.17 Lubricating the steering head bearing

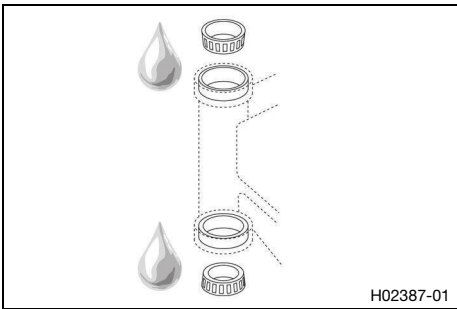

- Remove the lower triple clamp.   (p. 60)
- Install the lower triple clamp.   (p. 61)


	Note The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.
---	---

11.18 Removing the number plate

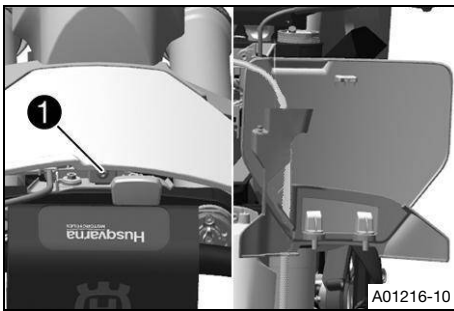

- Remove screw ❶.
- Unhook the number plate from the brake line and remove it.

11.19 Mounting the number plate

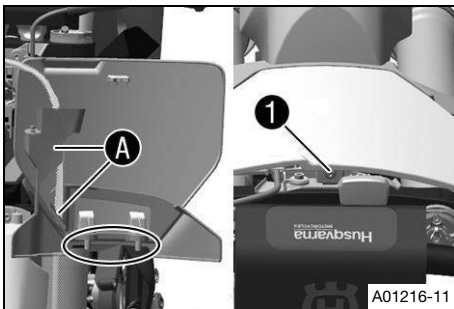

- Position the brake line in holders A on the number plate.
- Position the number plate.
- ✓ The holding lugs engage in the fender.
- Mount and tighten screw ❶.

Remaining screws on chassis	
M6	10 Nm


11.20 Removing the front top fender

Preparatory work


- Remove the number plate. 📖 (p. 65)

Removal process

- Remove screws ❶ and ❷. Remove the front fender.

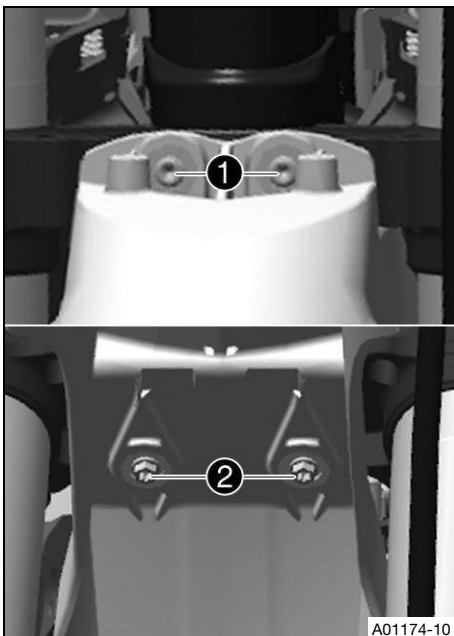

11.21 Installing the front top fender

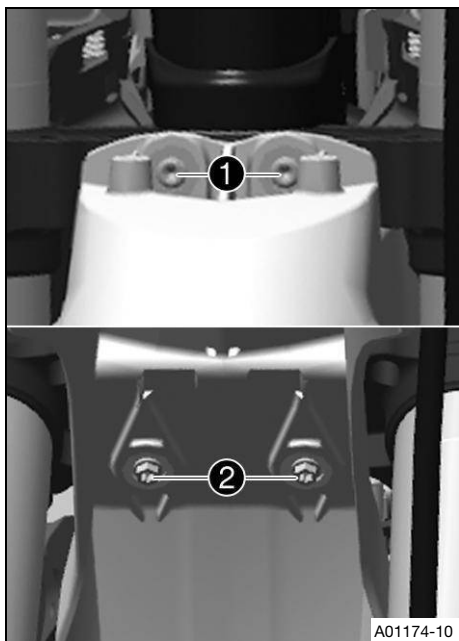

Installation procedure

- Position the front fender. Mount and tighten screws ❶ and ❷.

Fender screw	
M6	12 Nm

Reworking

- Mount the number plate. 📖 (p. 65)


11.22 Removing the shock absorber 🔧

Preparatory work

- Remove the frame protector. 📖 (p. 58)
- Remove the muffler. 📖 (p. 75)
- Raise the motorcycle with a lift stand. 📖 (p. 54)


Removal process

- Remove screw ❶.
- Remove screw connection ❷.

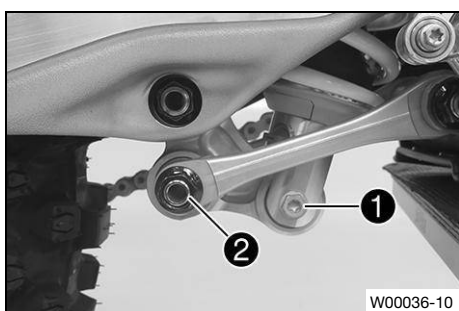


Note

Raise the swingarm slightly to be able to remove the screws more easily.

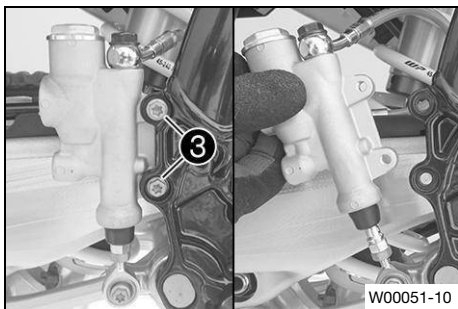


- Remove ③ screws.
- Pull rear brake cylinder off of the push rod.

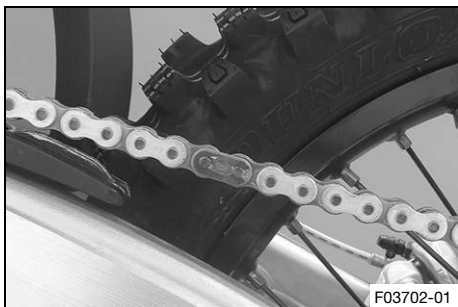


- Remove the connecting link on the chain.
- Take off the chain.

i Note
Protect the components against damage by covering them.

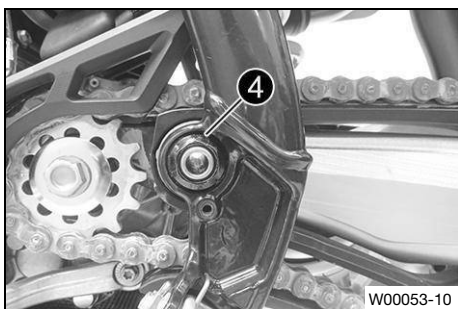

- Remove nut ④ and the swingarm pivot.
- Push the swingarm back and secure it against falling over.

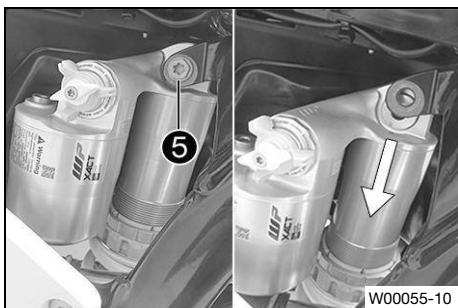


- Hold the shock absorber and remove screw ⑤.
- Remove the shock absorber carefully at the bottom.




11.23 Installing the shock absorber

Installation procedure

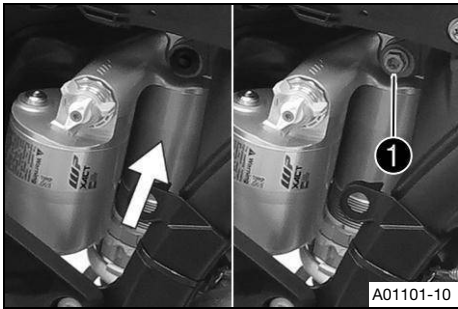

- Carefully position the shock absorber into the vehicle from the bottom.
- Mount and tighten screw ①.

Top shock absorber screw		
M10	60 Nm	Loctite® 2701

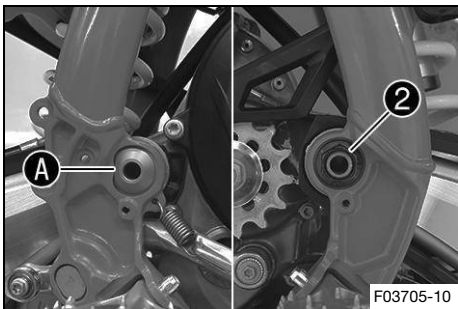


- Position the swingarm and fit the swingarm pivot.

Note Pay attention to flat area A.		
--	--	--


- Mount and tighten nut ②.

Nut, swingarm pivot		
M16×1.5	100 Nm	

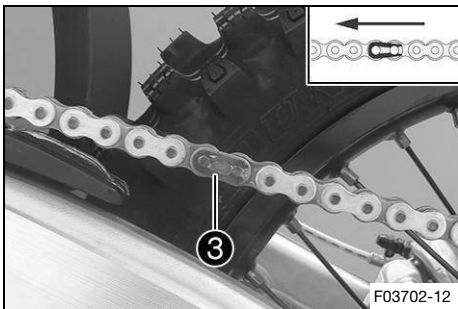

- Mount the chain.
- Connect the chain with connecting link ③.

The closed side of the master link clip must face in the direction of travel.		
---	--	--

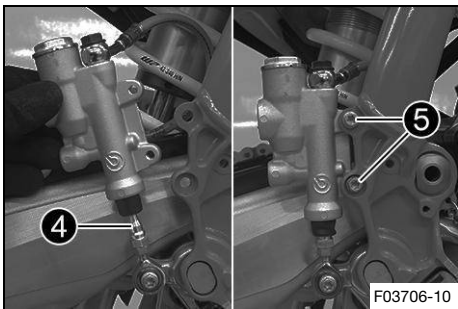


- Position the rear brake cylinder.
- ✓ Push rod ④ engages in the rear brake cylinder.

Note Ensure that the dust boot is properly seated.		
--	--	--

- Mount and tighten screws ⑤.

Remaining screws on chassis		
M6	10 Nm	

 

- Position the power valve control lever and linkage lever.
- Mount and tighten screw connection ⑥.

Nut, linkage lever on angle lever	
M16×1.5	80 Nm

Note
Pay attention to flat area B.

- Mount and tighten screw ⑦.

Bottom shock absorber screw	
M10	60 Nm
Loctite® 2701	

Note
Raise the swingarm slightly to be able to mount the screw more easily.

Reworking

- Install the muffler. 📖 (p. 75)
- Install the frame protector. 📖 (p. 58)
- Check the free travel of the brake pedal. 📖 (p. 96)
- Remove the motorcycle from the lift stand. 📖 (p. 54)



 
11.24 Removing the seat




CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

- Allow the regulator rectifier to cool down before performing any work.




- Remove screw ①.

 


- Raise seat, pull it toward the fuel tank and take it off.



11.25 Mounting the seat

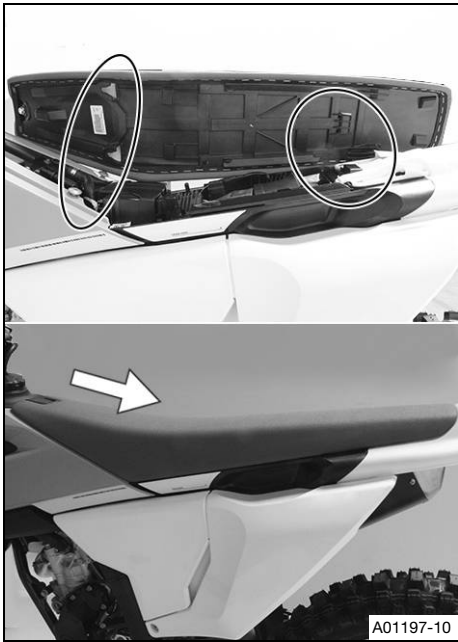

- Attach the seat to the collar bushings at the front and simultaneously push it back.
 - ✓ The holding lugs engage in the recesses at the back.
- Make sure the seat is latched in place correctly.

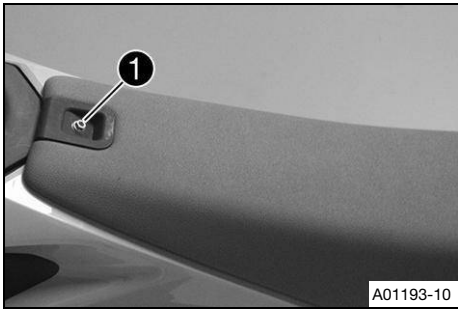


- Mount and tighten screw ❶.


Screw, seat installation	
M6	8 Nm

11.26 Removing air filter box cover

Condition: Air filter box cover is secured.

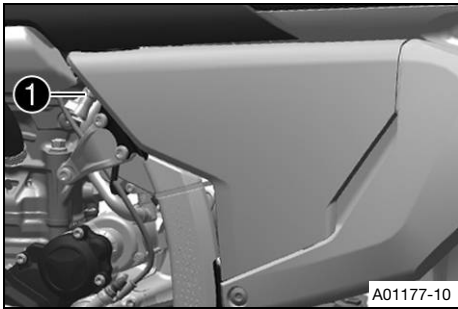


- Remove screw ❶.

 

- Pull off air filter box cover in area **A** and push it side-ways and forward. Remove air filter box cover.

Condition: Air filter box cover is not secured.

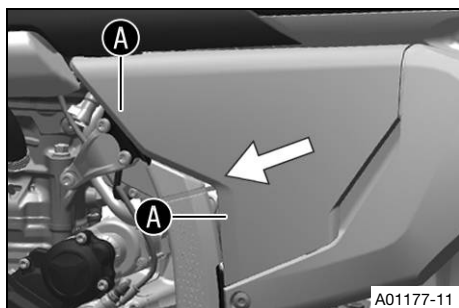


- Pull off air filter box cover in area **A** and push it side-ways and forward. Remove air filter box cover.



11.27 Installing air filter box cover

Condition: Air filter box cover is secured.

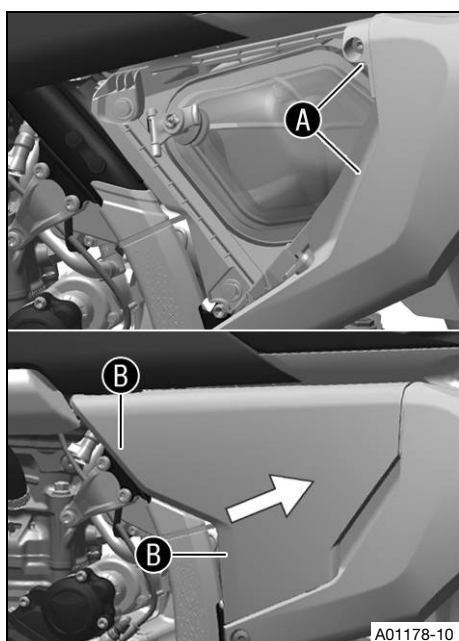


- Attach air filter box cover in area **A** and engage it in area **B**.



Note

An air filter box cover with openings for greater airflow and a more direct response is included.

11 Service work on the chassis

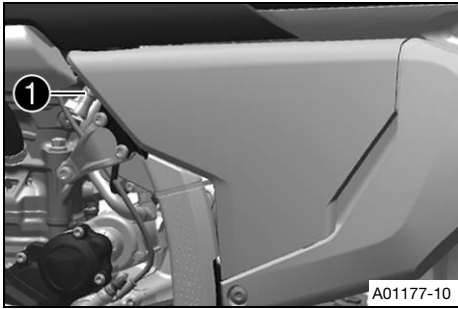


- Mount and tighten screw 1.

Screw, air filter box cover	
EJOT PT® – K60×20 – Z	5 Nm

Condition: Air filter box cover is not secured.

- Attach air filter box cover in area A and engage it in area B.

i Note
An air filter box cover with openings for greater airflow and a more direct response is included.

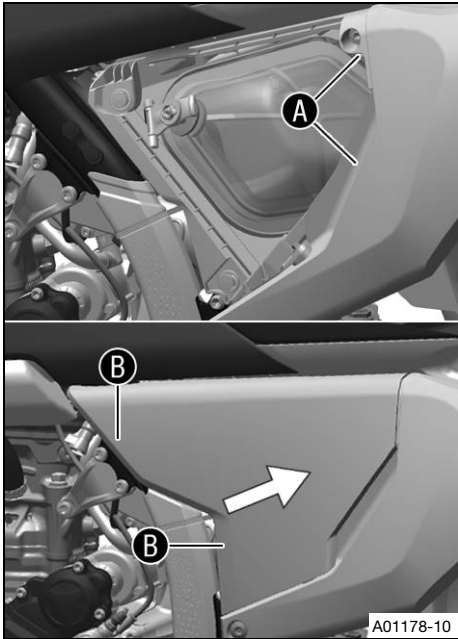

11.28 Removing the air filter

**NOTE**

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**NOTE**

Engine failure Unfiltered intake air has a negative effect on the service life of the engine.
Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.


- Only operate the vehicle if an air filter is correctly fitted.

Preparatory work

- Remove air filter box cover.  (p. 70)

Removal process

- Detach tab **1**.
- Remove air filter with air filter support.
- Remove the air filter with the air filter support.

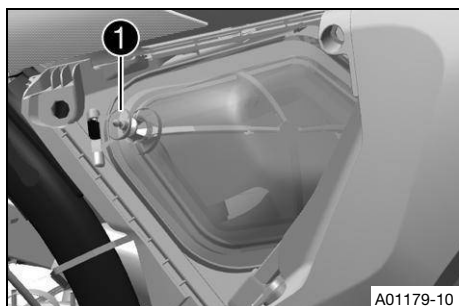

11.29 Cleaning the air filter and air filter box



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Do not clean the air filter with fuel or petroleum as these substances will damage the foam rubber.

Preparatory work

- Remove air filter box cover.  (p. 70)
- Remove the air filter.   (p. 72)

Cleaning process

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaning agent  (p. 156)




Note

Only press the air filter to dry it, never wring it out.

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter  (p. 154)


- Clean the air filter box.
- Clean the intake flange and check it for damage and that it is firmly seated.

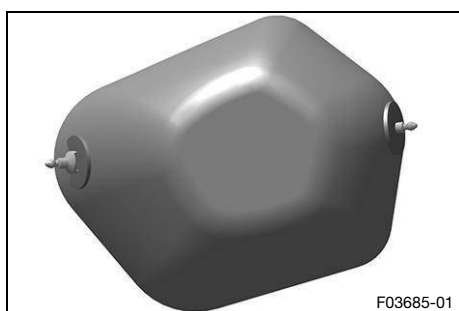

Reworking

- Install the air filter. 🛠️ 📖 (p. 74)
- Install the air filter box cover. 📖 (p. 71)

11.30 Installing the air filter 🛠️

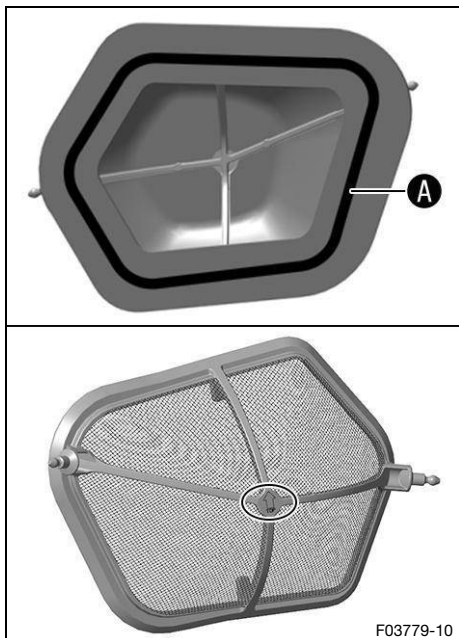

Installation procedure

- Mount the clean air filter on the air filter support.




Note

The marking on the air filter support must face upwards.

- Grease the air filter in area **A**.

Long-life grease 📖 (p. 153)

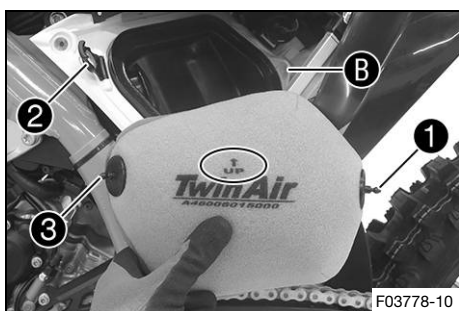

- Insert air filter and position retaining pin **1** in bushing **B**.
✓ The air filter is correctly positioned.



Note

The marking on the air filter must face upwards.

- Attach tab **2**.
✓ Retaining pin **3** is secured by tab **2**.



Note

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Reworking

- Install the air filter box cover. 📖 (p. 71)

11.31 Securing the air filter box cover

Preparatory work

- Remove air filter box cover.  (p. 70)

Installation procedure

- Drill a hole at marking **A**.

Diameter	6 mm
----------	------



Reworking

- Install the air filter box cover.  (p. 71)




11.32 Removing the muffler



WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

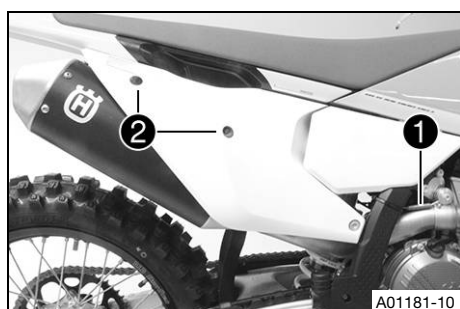

- Detach spring **1**.

Spring hook (50305017000C1)

- Remove screws **2** with the washers and take off the main silencer.



11.33 Installing muffler



- Position the main silencer.
- Mount screws **1** with washers, but do not tighten yet.
- Attach spring **2**.

Spring hook (50305017000C1)

- Tighten screws **1**.

Remaining screws on chassis	
M6	10 Nm



11.34 Changing the glass fiber filling of the muffler



WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.




Note

Over time, the fibers of the glass fiber yarn filling escape and the damper "burns" out. Not only does this make the noise level higher, but the performance characteristics also change.

- Preparatory work**
- Remove the muffler.  (p. 75)

- Replacement process**
- Remove the screws **1** on the main silencer.
 - Take off silencer cap **2** and O-ring **3**.
 - Pull glass fiber filling **4** out of the silencer cap.
 - Pull glass fiber filling **5** out of the inner tube.
 - Clean the parts that need to be reinstalled and check for damage.
 - Pull glass fiber filling **5** out of the inner tube.
 - Position new glass fiber filling **4** in the silencer cap.
 - Insert O-ring and silencer cap into outer tube **6**.
 - Mount and tighten screws **1**.

Screws on muffler	
M5	7 Nm

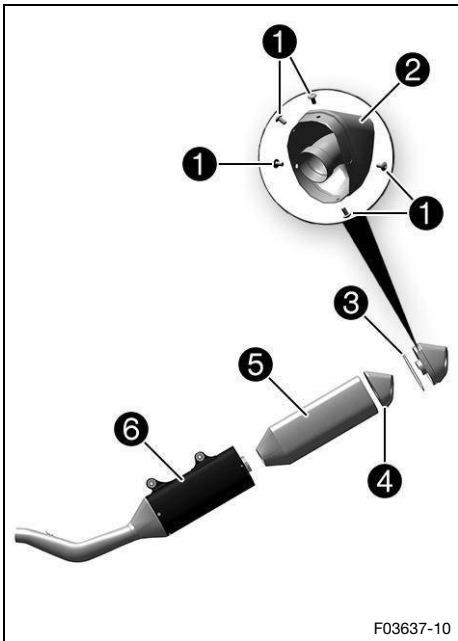

- Reworking**
- Install the muffler.  (p. 75)

11.35 Removing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.

**WARNING**

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Preparatory work

 
- Remove the seat.  (p. 69)

Removal process

- Unplug socket connector ① of the fuel pump.
- Clean quick-lock coupling ② thoroughly with compressed air.

**Note**


Under no circumstances should dirt enter into the fuel line. Dirt in the fuel hose clogs the injector!



- Disconnect the quick-lock coupling.

**Note**

Remaining fuel may flow out of the fuel hose.

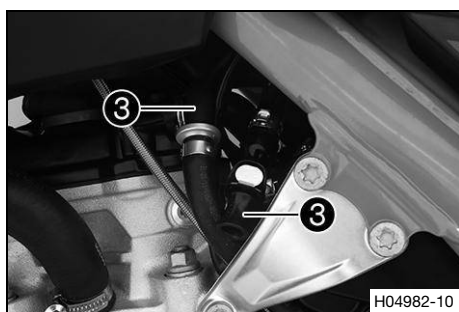

- Mount wash cap set ③.

 
Wash cap set (81212016100)

- Pull the fuel tank vent hose off the fuel tank cap.




- Remove screw ④ with the rubber bushing.

11 Service work on the chassis



- Remove screws ⑤ with collar bushings.

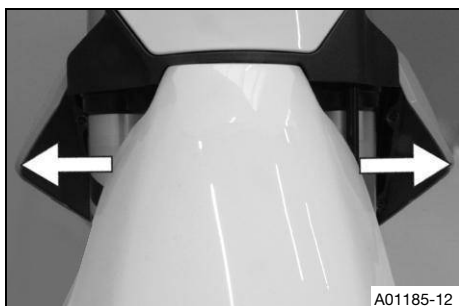

- Pull both spoilers laterally off the radiator and lift off the fuel tank.

11.36 Installing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.




WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Installation procedure

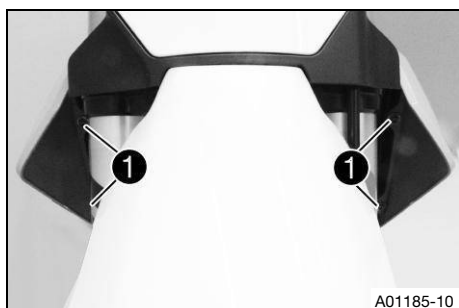


- Check the throttle cable routing. (p. 85)
- Position the fuel tank and fit both spoilers to the side of the radiator.
- Make sure that no wires or cables are trapped or damaged.
- Attach the fuel tank vent hose to the fuel tank cap.
- Mount and tighten screws **1** with the collar bushings.

Screw, fuel tank spoiler on radiator	
M6	6 Nm

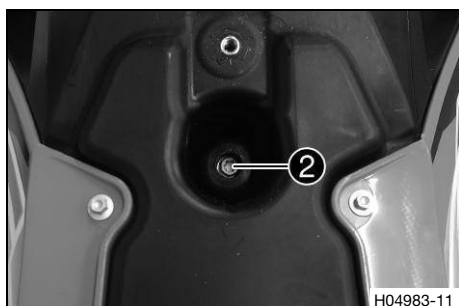

- Mount and tighten screw **2** with the rubber bushing.

Remaining screws on chassis	
M6	10 Nm

 

- Plug in fuel pump socket connector **3**.
- Remove the wash cap set and thoroughly clean the quick-lock coupling using compressed air.

i Note
Under no circumstances should dirt enter into the fuel line. Dirt in the fuel hose clogs the injector!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 154)

- Join quick-lock coupling **4** of the fuel line.

 
i Note
Route the wire and fuel line at a safe distance from the exhaust system.

Reworking

- Mount the seat. (p. 70)



11.37 Checking the chain for dirt



- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain.  (p. 80)

11.38 Cleaning the chain



WARNING

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)

 
Cleaning process

- Rinse off the loose dirt with a gentle jet of water.
- Remove old grease residues with a chain cleaner.

Chain cleaner  (p. 156)

- After drying, apply chain spray.

Off-road chain spray  (p. 153)



Reworking

- Remove the motorcycle from the lift stand.  (p. 54)

**11.39 Checking the chain tension****WARNING**

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)

Control process

- Pull the chain at the end of the chain slider upward to measure chain tension **A**.

 
Chain tension	58 mm ... 61 mm
---------------	-----------------

**Note**

Lower chain section **1** must be taut.

Chain wear is not always even, so repeat this measurement at different positions on the chain.

- » If the chain tension does not meet the specification:
 - Adjust the chain tension.  (p. 81)

**Reworking**

- Remove the motorcycle from the lift stand.  (p. 54)

**11.40 Adjusting the chain tension****WARNING**

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)
- Check the chain tension.  (p. 81)

Adjustment procedure

- Loosen nut **1**.
- Loosen nuts **2**.
- Adjust the chain tension by turning adjusting screws **3** on the left and right.


Chain tension	58 mm ... 61 mm
Turn adjusting screws 3 on the left and right so that the markings on the left and right chain tension adjusters are in the same position relative to reference marks A . The rear wheel is then correctly aligned.	

- Tighten nuts **2**.
- Make sure that chain tension adjusters **4** are fitted correctly on adjusting screws **3**.
- Tighten nut **1**.

Nut, wheel spindle, rear	
M22×1.5	80 Nm

**Note**

The wide range of adjustment of the chain tension adjusters (32 mm) enables different secondary transmissions with the same chain length.
Chain tension adjusters **4** can be turned by 180°.

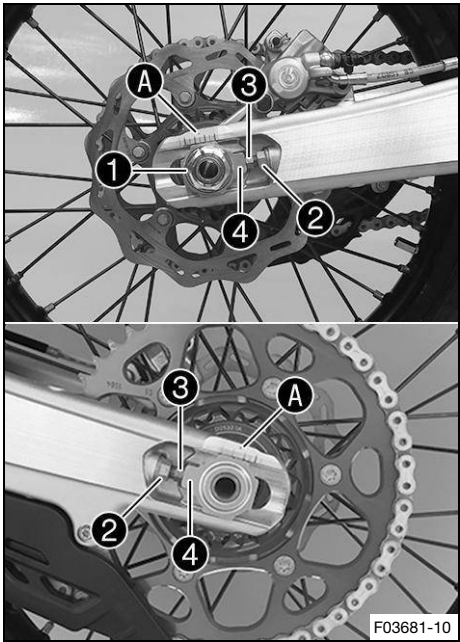

Reworking

- Remove the motorcycle from the lift stand.  (p. 54)

11.41 Checking the chain, rear sprocket, front sprocket, and chain guide

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 54)


Control process

- Shift the transmission into the neutral position.
- Check the chain, rear sprocket, and front sprocket for wear.
 - » If the chain, rear sprocket, or front sprocket is worn:
 - Change the drivetrain kit. 

**Note**

The front sprocket, rear sprocket, and chain should always be replaced together.

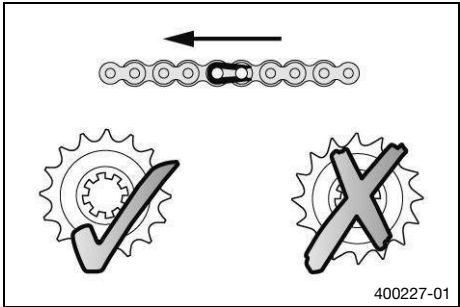

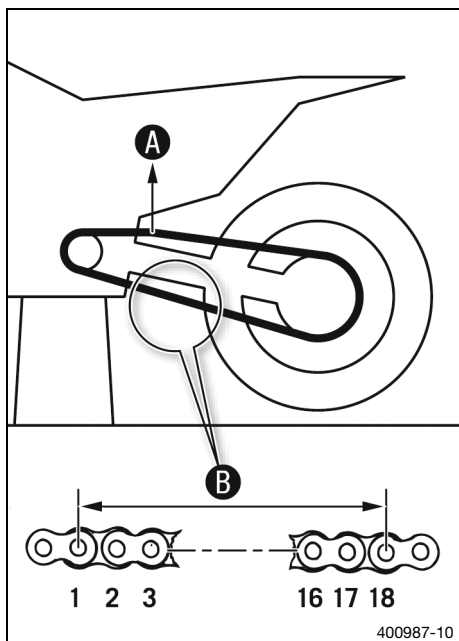

- Pull on the top section of the chain with the specified weight **A**.

Weight, chain wear measurement	10 kg ... 15 kg
--------------------------------	-----------------


- Measure distance **B** of chain rollers in the lower chain section.

Maximum distance B of chain rollers at the longest chain section	272 mm
---	--------

i Note
Chain wear is not always even, so repeat this measurement at different positions on the chain.

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit.


i Note
When you replace the chain, you should also replace the rear sprocket and front sprocket.
New chains wear out faster on old, worn front or rear sprockets.

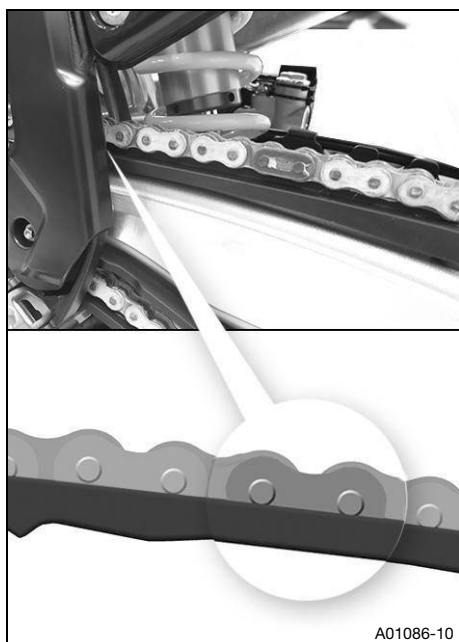

- Check the chain slider at the top for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain slider:
 - Change the chain slider.
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.


Screw, chain slider guard	
M6	6 Nm Loctite® 243

11 Service work on the chassis

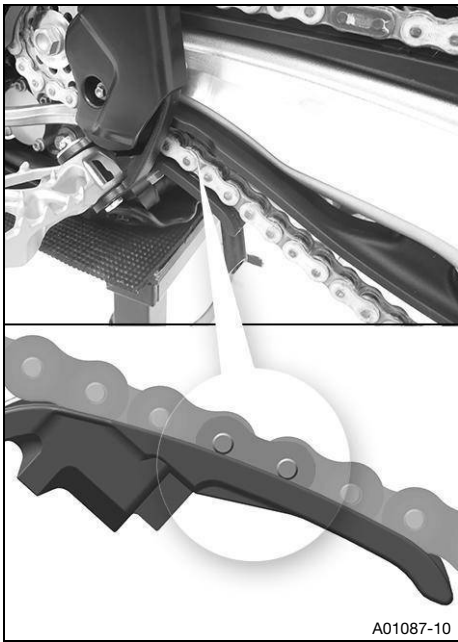

- Check the chain slider for wear.
 - » If the lower edge of the chain pins is in line with or below the chain slider:
 - Change the chain slider. 🔧
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain slider	
M8	15 Nm

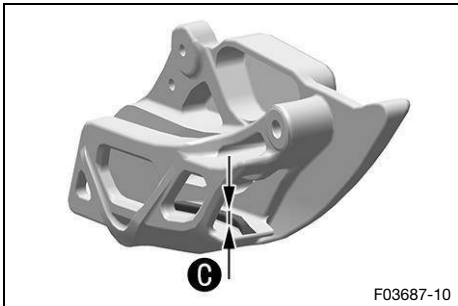

- Check the chain guide with a slide gage for dimension **C**.

Minimum thickness C of the chain guide	6 mm
---	------

- » If the specifications have not been met:
 - Change the chain guide. 🔧




- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.

Screw, chain guide on swingarm, front	
M6	10 Nm
Screw, chain guide on swingarm, rear	
M6	10 Nm
Loctite® 243	

Reworking

 - Remove the motorcycle from the lift stand. 📖 (p. 54)

11.42 Checking the frame 

- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
- Change the frame. 

Repairs on the frame are not permitted.

11.43 Checking the swingarm 

- Check the swingarm for damage, cracks, and deformation.
 - » If the swingarm shows signs of damage, cracks, or deformation:
- Change the swingarm. 

**Note**

Always replace a damaged link fork. Repairs to the swingarm are not authorized.



11.44 Checking the throttle cable routing

**WARNING**

Danger of accidents The throttle cable can become kinked, jammed, or blocked if it has been routed incorrectly.

If the throttle cable is kinked, jammed or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in the throttle cable complies with the specification.

Preparatory work

- Remove the seat.  (p. 69)
- Remove the fuel tank.   (p. 76)




Control process

- Check the throttle cable routing.
- Both throttle cables must be routed to the throttle valve body side by side on the back of the handlebars and above the fuel tank roller. Both throttle cables must be secured behind the rubber strap of the fuel tank support.
- » If the throttle cable routing is not as specified:
 - Correct the throttle cable routing.

Reworking


- Install the fuel tank. (p. 78)
- Mount the seat. (p. 70)

11.45 Checking the rubber grips

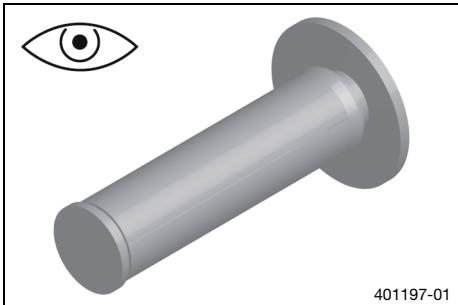

- Check the hand grips on the handlebar for damage, wear, and that they are firmly seated.
- Note**

The hand grips are vulcanized onto a sleeve on the left and onto the grip tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The hand grip can only be replaced with the sleeve or the gas pipe.
- » If a hand grip is damaged or worn:
 - Replace the hand grip.

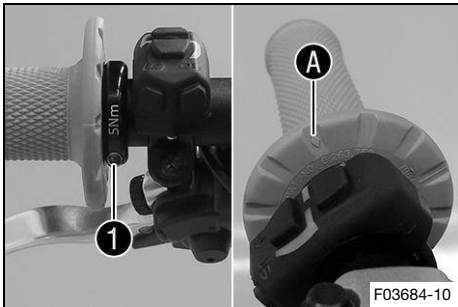

- Check that screw **1** is firmly seated.
- | | |
|-------------------|------|
| Screw, fixed grip | |
| M4 | 5 Nm |
| Loctite® 243 | |
- Diamond **A** must be positioned visibly as shown in the figure.

11.46 Program the Quickshifter

i Note

If the shifting performance of the Quickshifter starts to decrease, it must be reprogrammed.




- Carry out the starting procedure. (p. 31)
- Press and hold the QS button **1** for at least 10 seconds.
 - ✓ The QS indicator lamp flashes.
- Pull the clutch lever, engage first gear and press the clutch lever as far down as it will go for at least a second.
- Briefly press the QS button **1**.
 - ✓ The QS indicator lamp lights up blue, the teaching procedure was successful.

i Note

If the quickshifter cannot be activated, the teaching procedure was unsuccessful and must be repeated.



11.47 Adjusting the basic position of the clutch lever

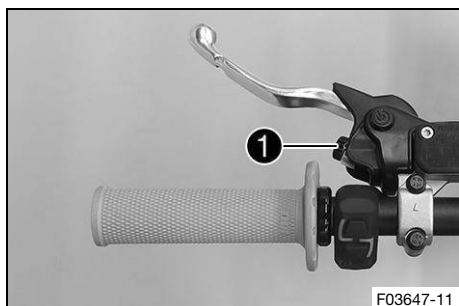

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw **1**.

i Note

When the adjusting screw is turned counterclockwise, the clutch lever moves closer to the handlebar.

When the adjusting screw is turned clockwise, the clutch lever moves away from the handlebar.

The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.



11.48 Checking/correcting the fluid level of hydraulic clutch



WARNING


Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

i Note

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

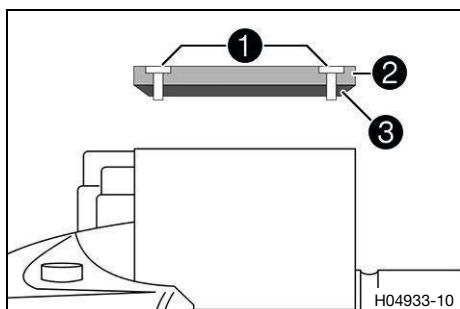

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove ❶ screws.
- Take off cover ❷ with diaphragm ❸.
- Check the fluid level.

Fluid level below reservoir rim	4 mm
---------------------------------	------

» If the fluid level does not meet the specifications:

- Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (p. 154)

- Position the cover with diaphragm. Mount and tighten the screws.

i Note

Immediately clean up any brake fluid that has overflowed or spilled with water.

11.49 Changing the hydraulic clutch fluid



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

 
Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.


i Note

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.



- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove ① screws.
- Take off cover ② with diaphragm ③.

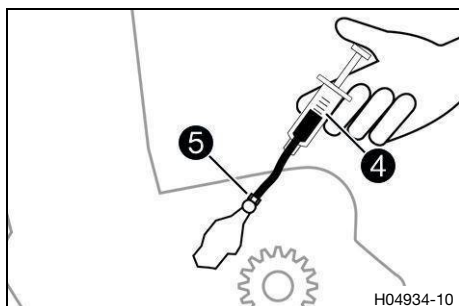

- Fill bleeding syringe ④ with the appropriate hydraulic fluid.

Syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1  (p. 154)

- On the clutch slave cylinder, remove the protection cap and mount bleeding syringe ④ with an appropriate hose piece on bleed screw ⑤.
- Only loosen bleed screw ⑤ on the clutch slave cylinder until filling is possible.

 


Note

Immediately clean up any brake fluid that has overflowed or spilled using water.

Avoid contact between brake fluid and painted parts.
Brake fluid corrodes paint.

Only use clean brake fluid from a sealed container.



- Inject the liquid into the system until it escapes from bore ⑥ of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Tighten the bleed screw and remove the bleeding syringe with the hose. Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Fluid level below reservoir rim	4 mm
---------------------------------	------

- Position the cover with diaphragm. Mount and tighten the screws.


12.1 Checking the free travel on the hand brake lever



WARNING

Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

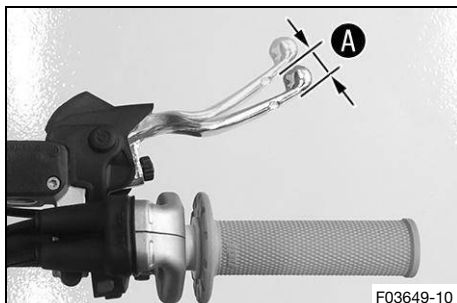

- Push the hand brake lever forward and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm}$
---------------------------------	---------------------

- » If the free travel does not meet the specifications:
 - Adjust the basic position of the hand brake lever.
 (p. 90)


12.2 Adjusting the basic position of the hand brake lever

Preparatory work

- Check the free travel on the hand brake lever.  (p. 90)

Adjustment procedure

- Adjust the basic position of the hand brake lever to your hand size by turning adjusting screw **1**.

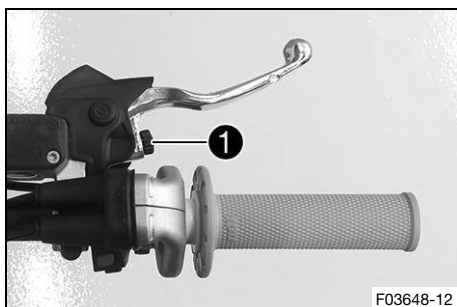

Note

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.

The range of adjustment is limited.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.


12.3 Checking the brake discs



WARNING

Danger of accidents Worn-out brake discs reduce the braking action.

- Make sure that worn-out brake discs are replaced immediately.

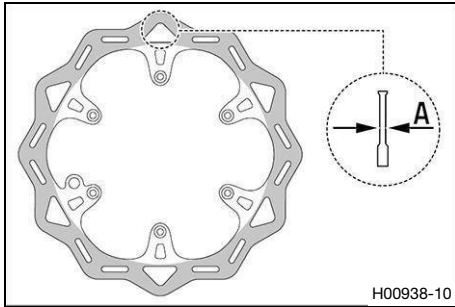

- Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement **A**.

Brake disc wear limit	
front	2.5 mm
rear	3.5 mm

i Note
Wear reduces the thickness of the brake discs at the contact surface of the brake pads.

- » If the brake disc thickness is less than the specification:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.
- Check the front and rear brake discs for damage, cracks, and deformation.
 - » If the brake disc shows signs of damage, cracks, or deformation:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.



12.4 Checking the brake fluid level for the front brake



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

 
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

Preparatory work

- Check that the brake pads of the front brake are secured.
 (p. 93)

Control process



- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in sight glass ①.
 - » If the brake fluid level has fallen below marking A:
 - Add brake fluid for the front brake. 🛠️ 📖 (p. 92)

12.5 Adding brake fluid for the front brake 🛠️



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the front brake are secured.
 (p. 93)

Filling procedure

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove ❶ screws.
- Take off cover ❷ with diaphragm ❸.
- Add brake fluid up to level A.

Level A (brake fluid level below reservoir rim)	5 mm
---	------


Brake fluid DOT 4 / DOT 5.1  (p. 154)

- Position cover ❷ with diaphragm ❸. Mount and tighten screws ❶.



Note

Immediately clean up any brake fluid that has overflowed or spilled with water.

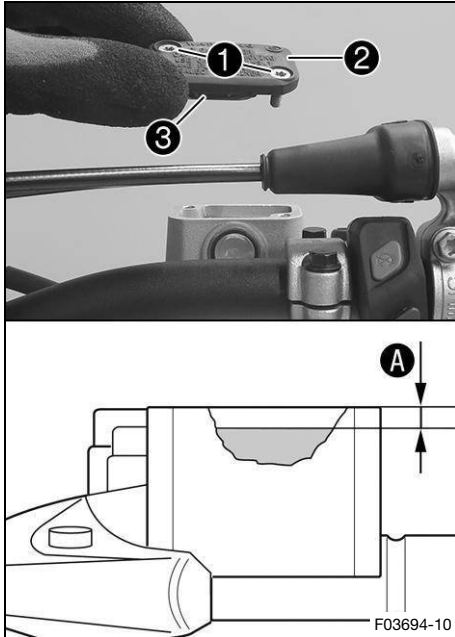


12.6 Checking that the brake pads of the front brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

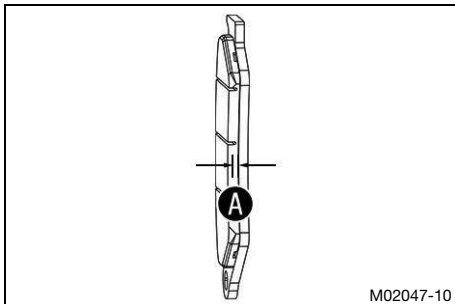

- Check the brake linings for minimum thickness A.

Minimum pad thickness A	$\geq 1 \text{ mm}$
-------------------------	---------------------

- » If the minimum thickness is less than specified:
 - Change the front brake pads.   (p. 94)
- Check the brake pads for damage and cracking.
 - » If damage or wear is encountered:
 - Change the front brake pads.   (p. 94)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.

12.7 Changing the brake pads of the front brake



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

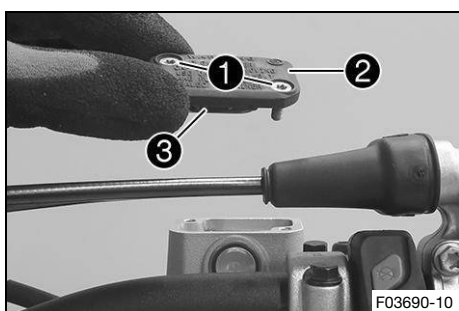

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove ❶ screws.
- Take off cover ❷ with diaphragm ❸.

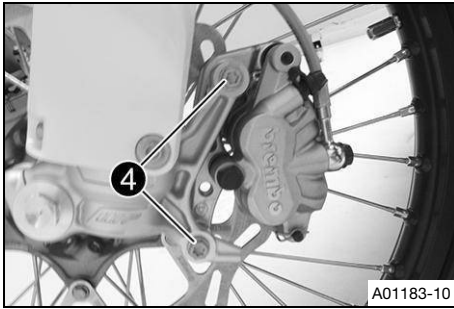


- Remove ④ screws.
- Press the brake pads back by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper up and off the brake disc.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake reservoir, extract some brake fluid if necessary.




Note


Do not operate the hand brake lever if the brake caliper has been removed.

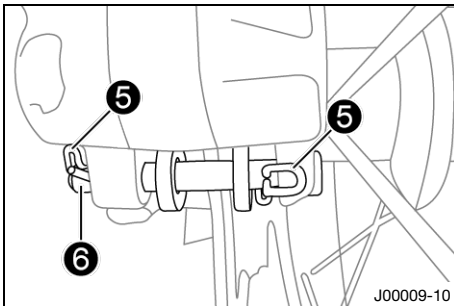

- Remove cotter pin ⑤, pull out stud ⑥, and remove the brake pads.
- Clean brake caliper and brake caliper support.

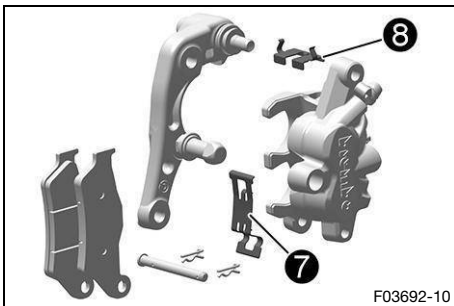

- Check that spring steel clip ⑦ in the brake caliper and brake pad guide plate ⑧ in the brake caliper support are properly seated.

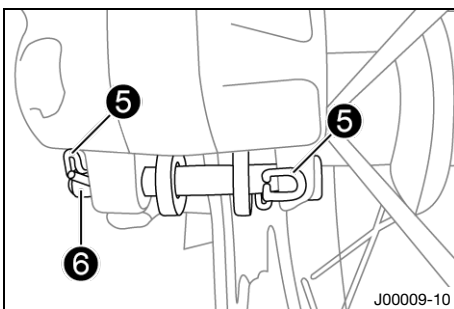

- Insert the new brake pads, mount stud ⑥ and cotter pins ⑤.



Note

Always replace brake pads in sets.

To make it easier to mount the stud, push the brake pads upward against the retaining spring.


Make sure the brake pads and retaining spring are properly seated.



- Position the brake caliper.
- Mount and tighten screws ④.

Screw, front brake caliper	
M8	25 Nm
Loctite® 243	

- Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is reached.

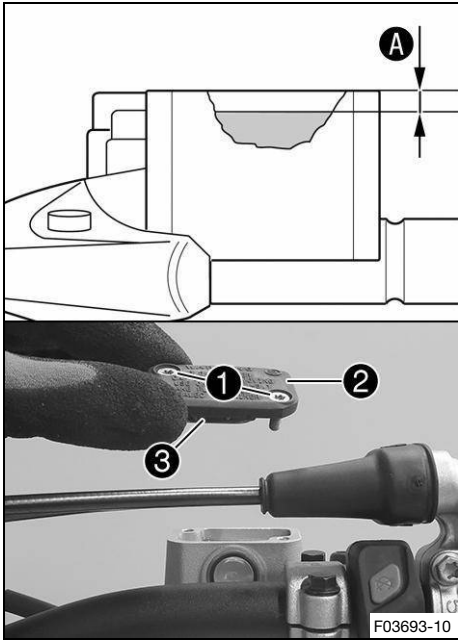

- Add brake fluid to level **A**.

Level A (brake fluid level below reservoir rim)	5 mm
--	------

Brake fluid DOT 4 / DOT 5.1 (p. 154)


- Position cover **2** with diaphragm **3**.
- Mount and tighten screws **1**.

Note
Immediately clean up any brake fluid that has overflowed or spilled with water.

12.8 Checking the free travel of the brake pedal

WARNING
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

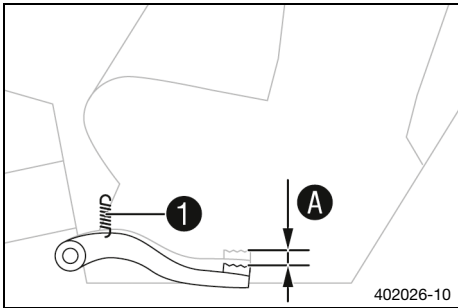


- Detach spring **1**.
 - Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston actuation and check free travel **A**.
- | | |
|----------------------------|---------------|
| Free travel of brake pedal | 3 mm ... 5 mm |
|----------------------------|---------------|
- » If the free travel does not meet the specifications:
- Adjust the basic position of the brake pedal.
- (p. 96)
- Attach spring **1**.

12.9 Adjusting the basic position of the brake pedal

WARNING
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

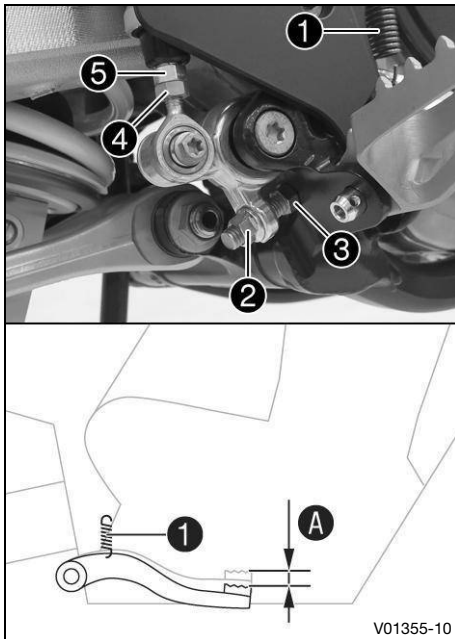

- Detach spring ①.
- Loosen nut ④ and unscrew it with push rod ⑤ until you have maximum free travel.
- To adjust the basic position of the brake pedal to individual requirements, loosen nut ② and turn screw ③ accordingly.



Note

The range of adjustment is limited.

- Turn push rod ⑤ accordingly until you have free travel A. If necessary, adjust the basic position of the brake pedal.

Free travel of brake pedal	3 mm ... 5 mm
----------------------------	---------------

- Hold push rod ⑤ and tighten nut ④.

Remaining nuts on chassis	
M6	10 Nm

- Hold screw ③ and tighten nut ②.

Brake pedal stop nut	
M8	20 Nm

- Attach spring ①.



12.10 Checking the brake fluid level for the rear brake



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

 
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

Preparatory work

- Check that the brake pads of the rear brake are secured.
 (p. 99)

Control process



- Stand the vehicle upright.
- Check the brake fluid level in sight glass **1**.
 - » If the brake fluid level has fallen below marking **A**:
 - Add brake fluid for the rear brake.   (p. 98)

12.11 Adding brake fluid for the rear brake



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the rear brake are secured.  (p. 99)
- Remove the frame protector.  (p. 58)

Filling procedure

- Stand the vehicle upright.
- Remove screw cap **1** with diaphragm **2** and the O-ring.
- Add brake fluid to mark **A**.


Brake fluid DOT 4 / DOT 5.1  (p. 154)

- Mount and tighten the screw cap with the membrane and O-ring.



Note

Immediately clean up any brake fluid that has overflowed or spilled with water.

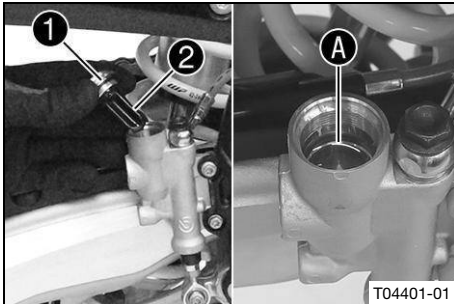

Reworking

- Install the frame protector.  (p. 58)


12.12 Checking that the brake pads of the rear brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

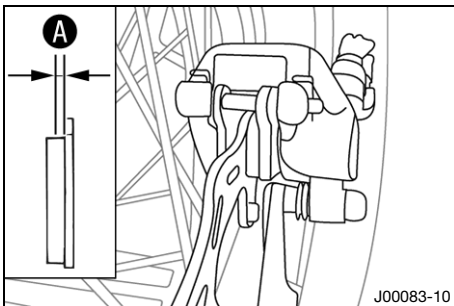

- Check the brake linings for minimum thickness **A**.

Minimum pad thickness **A** $\geq 1 \text{ mm}$

- » If the minimum thickness is less than specified:
 - Change the rear brake pads.   (p. 99)
- Check the brake pads for damage and cracking.
 - » If damage or wear is encountered:
 - Change the rear brake pads.   (p. 99)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.

12.13 Changing the rear brake pads



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note


Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.


Preparatory work

- Remove the frame protector.  (p. 58)

Replacement process

- Stand the vehicle upright.
- Remove screw cap ② with diaphragm ③ and O-ring.

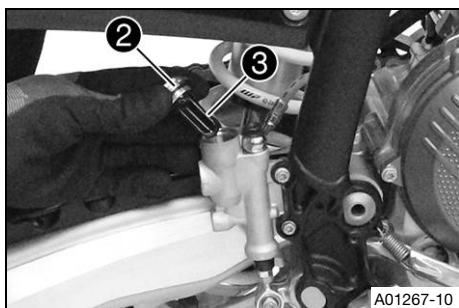

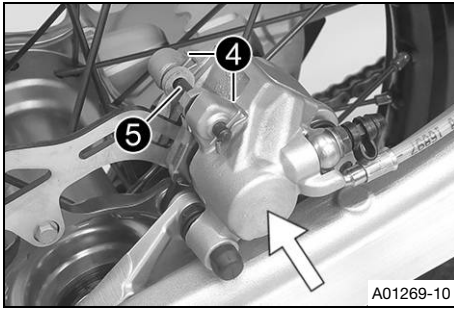


- Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake reservoir, and siphon off excess if required.



Note

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

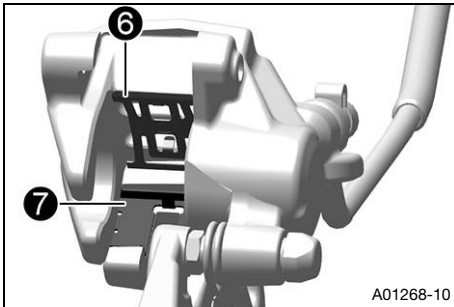


- Remove cotter pin 4, pull out stud 5, and remove the brake pads.
- Clean brake caliper and brake caliper support.
- Check that spring steel clip 6 in the brake caliper and brake pad guide plate 7 in the brake caliper support are properly seated.



Note

The arrow on the spring steel clip points in the rotation direction of the brake disc.

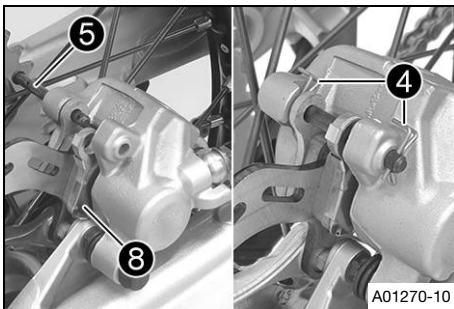

- Insert the new brake pads, mount stud 5 and cotter pins 4.




Note

Always replace brake pads in sets.

Make sure that decoupling plate 8 is mounted on the piston side of the brake pad.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

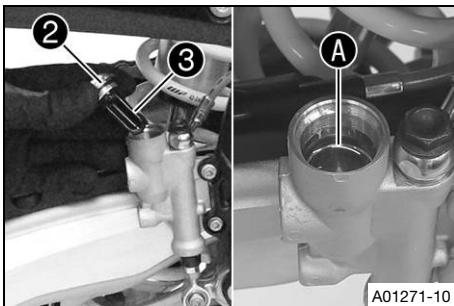

- Correct the brake fluid level to mark A.

Brake fluid DOT 4 / DOT 5.1  (p. 154)

- Mount and tighten screw cap 2 with diaphragm 3 and the O-ring.



Note

Immediately clean up any brake fluid that has overflowed or spilled with water.

Reworking

- Install the frame protector.  (p. 58)





13.1 Removing the front wheel

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 54)

Removal process

- Manually press the brake caliper toward the brake disc to push back the brake pistons.

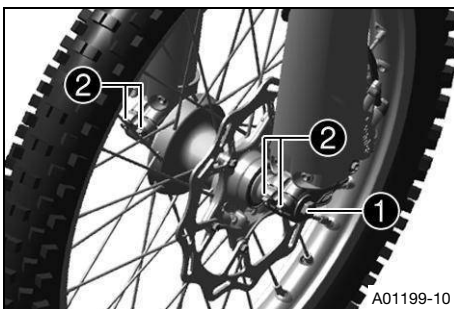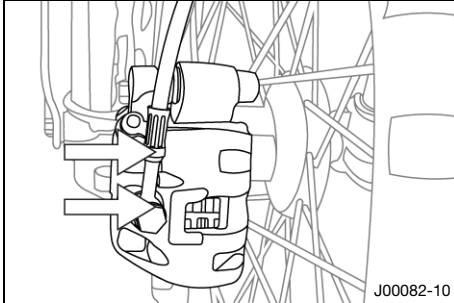

- Loosen screw ① by four turns.
- Loosen screws ②.
- Press on screw ① to push the wheel spindle out of the fork shoe.
- Remove screw ①.

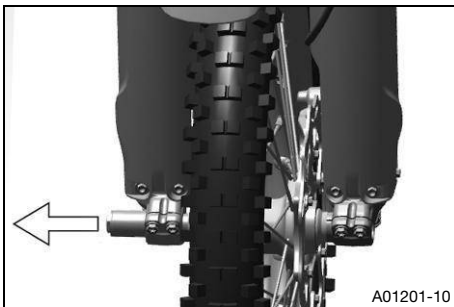


WARNING

Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

Do not actuate the hand brake lever when the front wheel is removed.

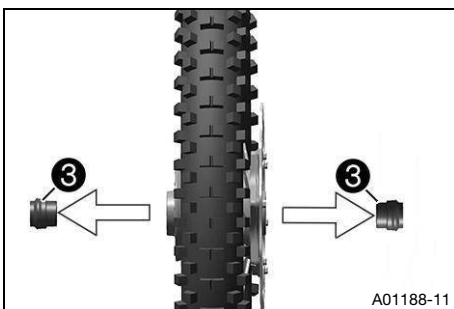

- Remove spacers ③.




13.2 Installing the front wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

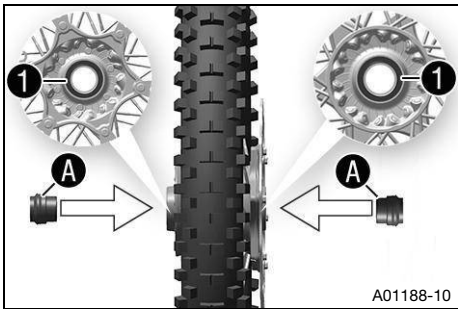

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease (p. 153)

- Insert spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 153)


- Position the front wheel and insert the wheel spindle.
 - ✓ The brake pads are positioned correctly.

- Mount and tighten screw ②.

Screw, wheel spindle, front	
M20×1.5	35 Nm


- Operate the hand brake lever several times until the brake pads are in contact with the brake disc.
- Remove the motorcycle from the lift stand. (p. 54)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws ③.

Screw, fork shoe	
M8	15 Nm

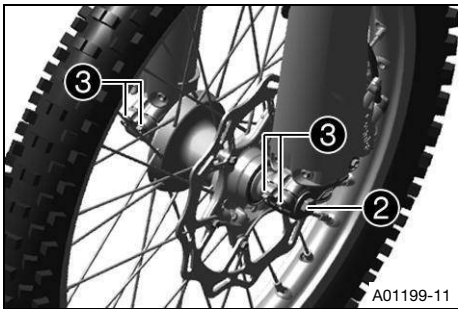

13.3 Removing the rear wheel

- Preparatory work**
- Raise the motorcycle with a lift stand. (p. 54)

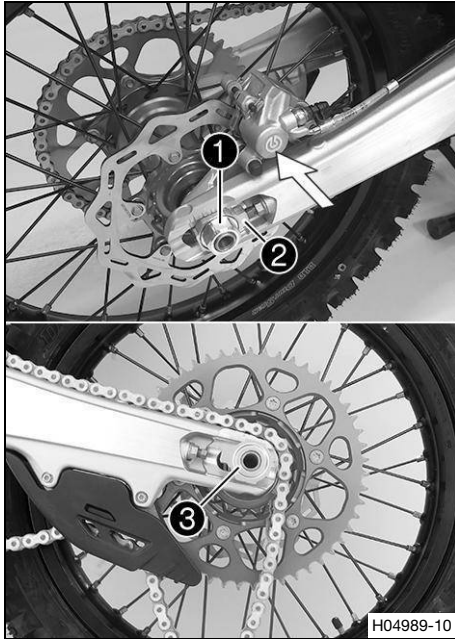

Removal process

- Manually press the brake caliper toward the brake disc to push back the brake pistons.



Note

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

- Remove nut ①.
- Remove chain tension adjuster ②. Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.



Note

Protect the components against damage by covering them.



WARNING

Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.


- Hold the rear wheel and remove wheel spindle. Take the rear wheel out of the swingarm.



Note

Do not actuate the brake pedal when the rear wheel is removed.

- Remove spacers ④.

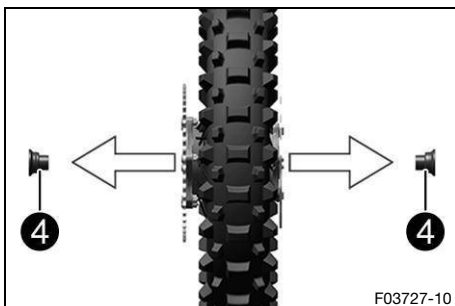


13.4 Installing the rear wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

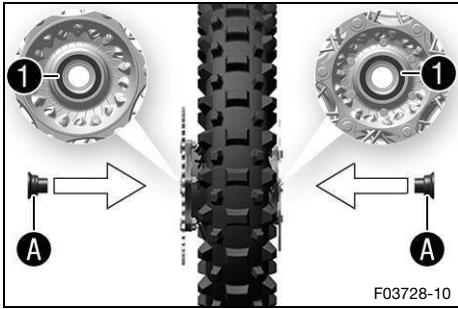


Installation procedure


- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease 📖 (p. 153)

- Insert spacers.

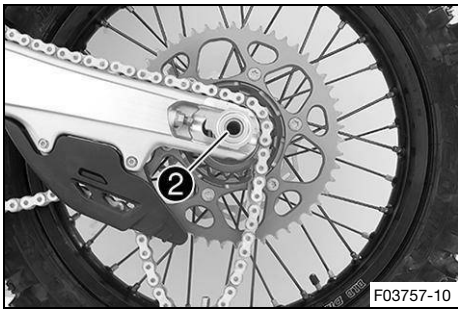

- Clean and lightly grease the wheel spindle.
- Long-life grease 📖 (p. 153)
- Position the rear wheel and insert wheel spindle ②.
 - ✓ The brake pads are positioned correctly.
 - Attach the chain.

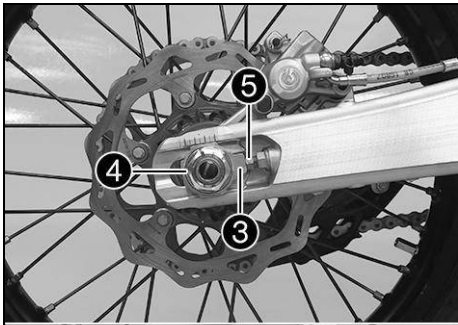

- Position chain tension adjuster ③. Mount nut ④ but do not tighten yet.
- Make sure that chain tension adjusters ③ are fitted correctly on adjusting screws ⑤.
- Check the chain tension. 📖 (p. 81)
- Tighten nut ④.

Nut, wheel spindle, rear	
M22×1.5	80 Nm



Note

The wide range of adjustment of the chain tension adjusters (32 mm) enables different secondary transmissions with the same chain length.
Chain tension adjusters ③ can be turned by 180°.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

Reworking

- Remove the motorcycle from the lift stand.  (p. 54)

**13.5 Checking the tire condition****Note**



Only mount tires approved and/or recommended by Husqvarna Mobility.
 Other tires could have a negative effect on handling characteristics.
 The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle.
 The tires mounted on the front and rear wheels must have a similar profile.
 Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 54)

Control process

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 

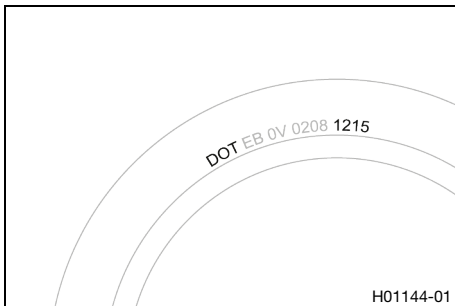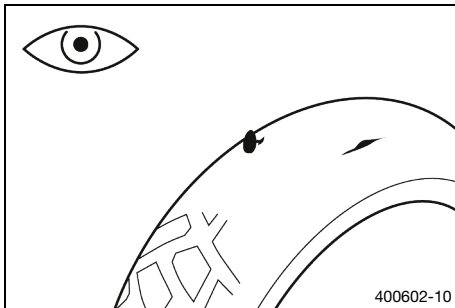

- Check the tire age.

**Note**

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

Husqvarna Mobility recommends changing the tires, regardless of the actual wear, after 5 years at the latest.

- » If the tires are older than five years:
 - Change the tires. 

Reworking

- Remove the motorcycle from the lift stand.  (p. 54)




13.6 Checking the tire pressure



Note

Low tire pressure leads to abnormal wear and the tire overheating.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

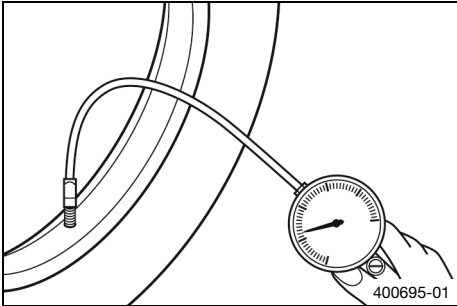

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Off-road tire pressure	
front	1.0 bar
rear	1.0 bar

- » If the tire pressure does not meet specifications:
 - Correct tire pressure.
- Mount the protection cap.

13.7 Checking the spoke tension




WARNING

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.
Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

- Check the spoke tension regularly, especially on a new vehicle.

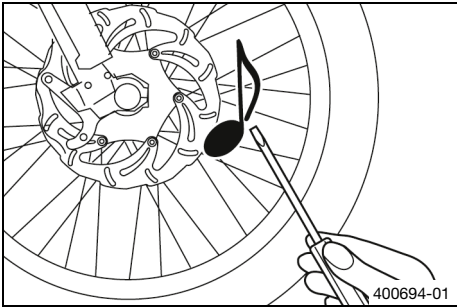

- Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.



Note

The frequency of the sound depends on the spoke length and spoke diameter.

If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

- » If the spoke tension differs:
 - Correct the spoke tension. 
- Check the spoke torque.

Spoke nipple, front wheel	
M4,5	6 Nm
Spoke nipple, rear wheel	
M4,5	6 Nm
Torque wrench kit (58429094000)	

14.1 Removing the 12 V battery



CAUTION

- Danger of burns** The regulator rectifier gets very hot when the vehicle is operated.
- Allow the regulator rectifier to cool down before performing any work.



NOTE

 

- Environmental hazard** 12-V batteries contain environmentally-hazardous materials.
- Do not dispose of 12-V batteries as household waste.
 - Dispose of 12-V batteries at a collection point for used batteries.

Preparatory work


- Remove the seat. (p. 69)

Removal process

- Disconnect negative cable **1** from the 12-V battery.
- Pull back positive terminal cover **2** and disconnect positive cable **3** from the 12-V battery.

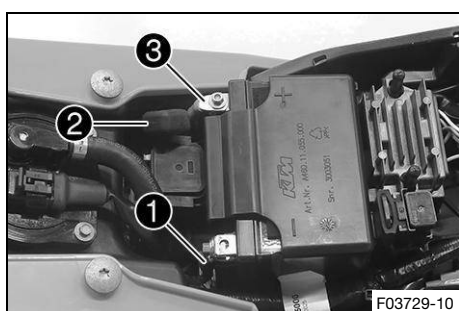

 - Remove screw **4**.
- Pull off engine control unit **5** from the holder and hang to the side.



- Pull up battery holding bracket **6** and remove the 12-V battery to the rear.



Note

Pay attention to the wiring harness.

14.2 Installing the 12-V battery


Installation procedure

- Pull up battery holding bracket **1**, insert the 12-V battery into the battery compartment with the terminals facing upwards and secure with battery holding bracket **1**.

12-V battery (HJTZ5S-FP-C)

 **Note**


Ensure that the cable is routed correctly.

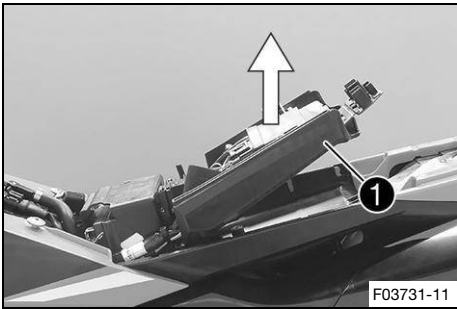

- Mount and tighten screw **2**.

Remaining screws on chassis	
M6	10 Nm

- Attach the engine control unit **3** to the holder.

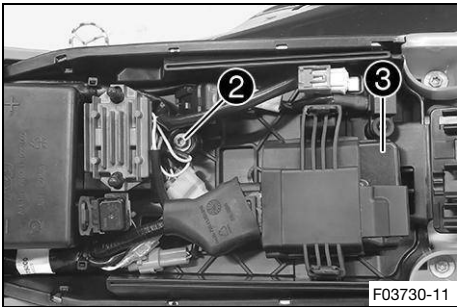

- Connect positive cable **4** to the 12 V battery.


Screw, battery terminal	
M5	2.5 Nm

- Connect negative cable **5** to the 12-V battery.

Screw, battery terminal	
M5	2.5 Nm

Contact disks **A** must be mounted under screws **6** and cable lug **7** with the claws toward the battery terminal.

- Slide positive terminal cover **8** over the positive terminal.

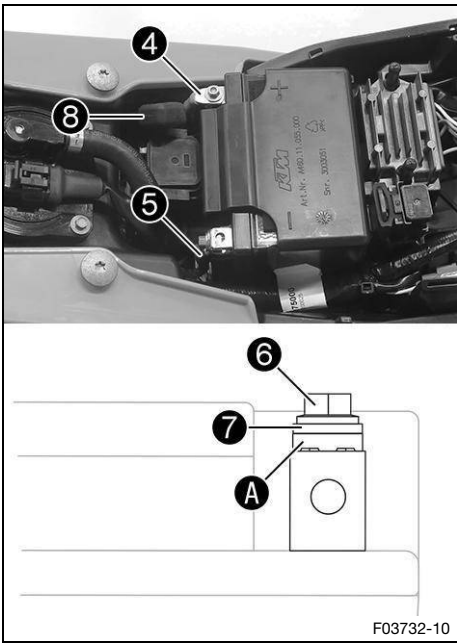

Reworking

- Mount the seat.  (p. 70)

14.3 Charging the 12-V battery **WARNING**

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m
------------------	-----

- Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.

**NOTE**

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.

**Note**

Even when there is no load on the 12-V battery, it discharges steadily each day.

The state of charge and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current, charging voltage, or charging time is exceeded, the 12 V battery will be destroyed. If the 12-V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.

If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.


The 12-V battery is maintenance-free.

Preparatory work

- Remove the seat.  (p. 69)
- Remove the 12-V battery.   (p. 109)

Filling procedure

- Check the battery voltage.
 - » Battery voltage:
 - < 9 V
 - Do not charge the 12-V battery.
 - Replace the 12-V battery and dispose of the old 12-V battery properly.
 - » If the specifications have been met:
 - ≥ 9 V
 - Connect a charger to the 12-V battery. Switch the charger on.

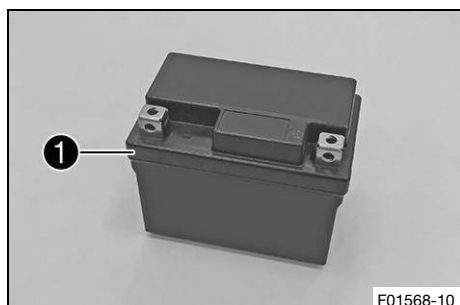

The charging current, charging voltage, and charging time must not be exceeded.	
Maximum charging voltage	14.4 V
Minimum charging voltage	3.0 A
Maximum charging time	24 h
Recharge the 12-V battery regularly when the motorcycle is not being used.	6 months
Never remove cover ❶.	

Work material (Alternative 1 / 2)
(EU) battery charger (26529974000)
Work material (Alternative 2 / 2)
(US) battery charger (26529974500)

**Note**

This charger tests whether the 12-V battery retains its voltage. It is also impossible to overcharge the 12-V battery with this charger. The charging time may be longer at low temperatures.

These chargers are only suitable for lithium iron phosphate batteries. Read the accompanying instructions.

- Switch off the charger after charging and disconnect from the 12-V battery.

Reworking

- Install the 12-V battery.   (p. 110)
- Mount the seat.  (p. 70)

14.4 Changing the main fuse

**WARNING**

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.

**CAUTION**

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

- Allow the regulator rectifier to cool down before performing any work.

**Note**



The main fuse protects all electrical power loads of the vehicle. It is located in the starter relay housing under the seat.

Preparatory work

- Remove the seat.  (p. 69)
- Remove the fuel tank.   (p. 76)

Replacement process

- Pull starter relay **1** off of the bracket.

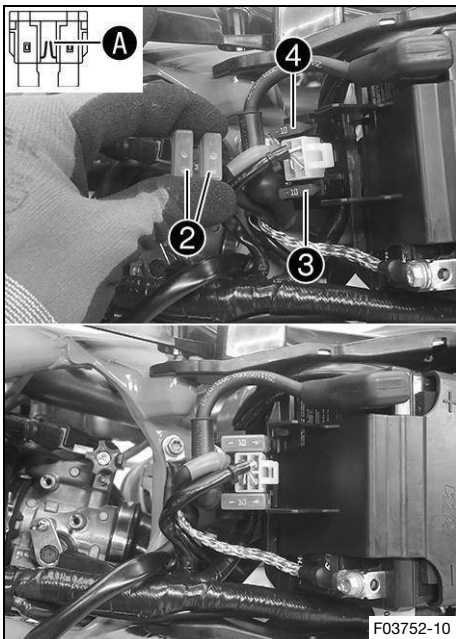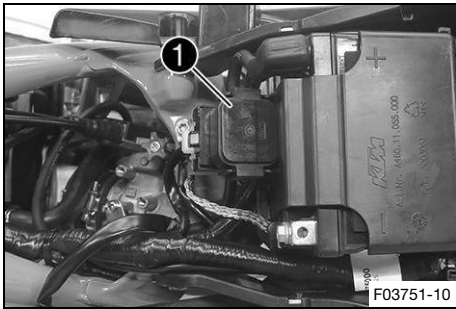

- Remove protection caps **2**.
- Remove faulty main fuse **3**.

**Note**

A faulty fuse has a burned-out fuse wire **A**.
A spare fuse **4** is located in the starter relay.

- Insert the main fuse.
- Check that the electrical equipment is functioning properly.

Fuse (58011109110)

**Tip**

Insert a new spare fuse so that it is available if needed.

- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

Reworking

- Install the fuel tank.   (p. 78)
- Mount the seat.  (p. 70)



14.5 Changing the fuse of the fuel pump

**WARNING**

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



CAUTION

- Danger of burns** The regulator rectifier gets very hot when the vehicle is operated.
- Allow the regulator rectifier to cool down before performing any work.



Note

The fuel pump is protected by the fuel pump fuse. This is located under the seat.

Preparatory work

- Remove the seat. (p. 69)

Replacement process

- Remove protection cap **1**.
- Remove faulty main fuse **2**.




Note

A faulty fuse has a burned-out fuse wire **A**.

- Put in the new fuse for the fuel pump.

Fuse (58011109105)


- Check that the electrical equipment is functioning properly.
- Attach the protection cap.

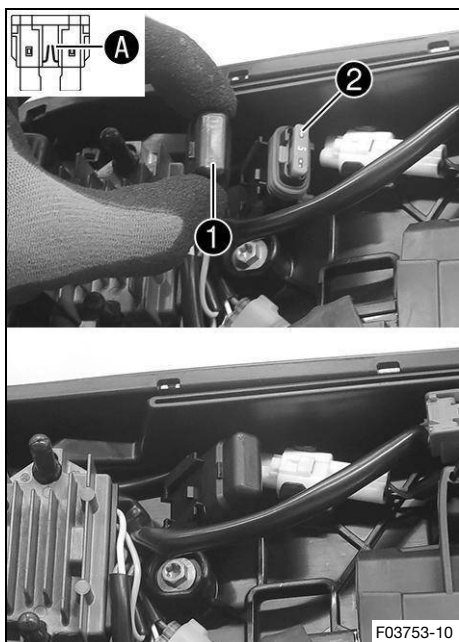

Reworking

- Mount the seat. (p. 70)

14.6 Diagnostic connector

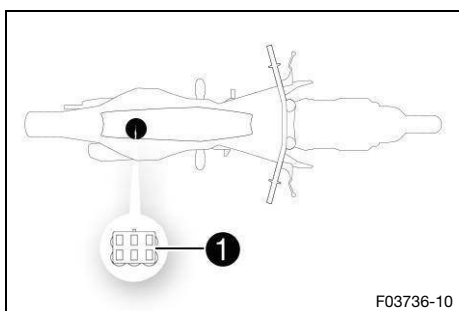

Diagnostics connector **1** is located under the seat.




Note

As soon as the diagnostics tool is connected, the hourmeter starts running.

Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

15.1 Cooling system

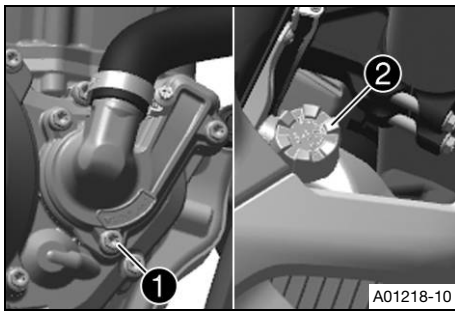

Water pump **1** in the engine circulates the coolant. The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap **2**. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C

The coolant is cooled by the air stream.

The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the frost protection and coolant level



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold.

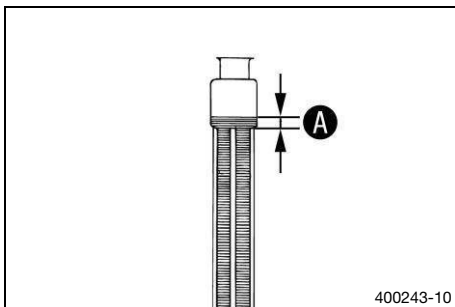

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the frost protection in the coolant.

–45 °C ... –25 °C

- » If the frost protection in the coolant does not match the specified value:
 - Correct the frost protection in the coolant.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm
--	-------

- » If the coolant level does not meet the specifications:
 - Correct the coolant level.

coolant	
Coolant  (p. 155) Antifreeze protection to at least: –25 °C	0.90 l

- Mount the radiator cap.

15.3 Checking the coolant level


**WARNING**
Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

**WARNING**
Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold.

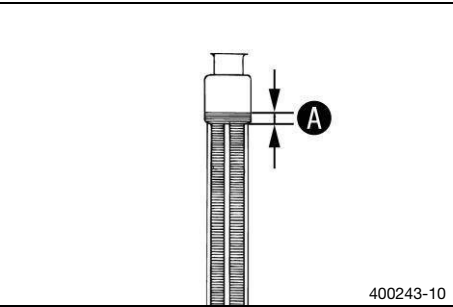

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm
--	-------

- » If the coolant level does not meet the specifications:
- Correct the coolant level.

coolant	
Coolant  (p. 155) Antifreeze protection to at least: -25 °C	0.90 l

- Mount the radiator cap.

15.4 Draining the coolant

**WARNING**
Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

**WARNING****Health hazard** Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold.

Preparatory work**(All FX models)**

- Remove the skid plate. (p. 57)


Emptying process

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw **1**. Take off radiator cap **2**.
- Completely drain the coolant.
- Mount screw **1** with the new sealing ring and tighten.


Screw, water pump cover

M6

10 Nm

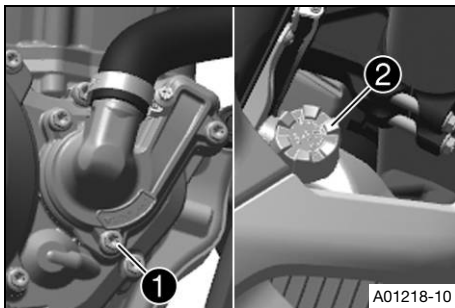**15.5 Refilling the coolant** **WARNING****Health hazard** Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

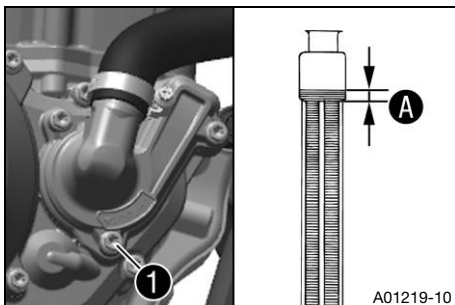

- Make sure that screw **1** is tightened.
- Stand the motorcycle upright.
- Pour coolant in up to level **A** above the radiator fins.

Distance **A** above the radiator fins

10 mm

coolant

Coolant (p. 155)

Antifreeze protection to at least: -25 °C

0.90 l

- Mount the radiator cap.

- Go for a short test ride.
- Check the coolant level.  (p. 116)

15.6 Changing the coolant



WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.


Condition: The engine is cold.

Preparatory work
(All FX models)

- Remove the skid plate.  (p. 57)

Replacement process

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw **1**. Take off radiator cap **2**.
- Completely drain the coolant.

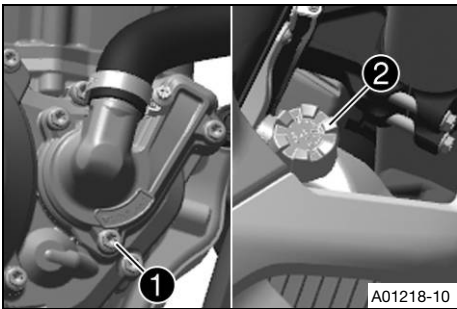


- Mount screw **1** with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm

- Pour coolant in up to level **A** above the radiator fins.

Distance A above the radiator fins	10 mm
---	-------

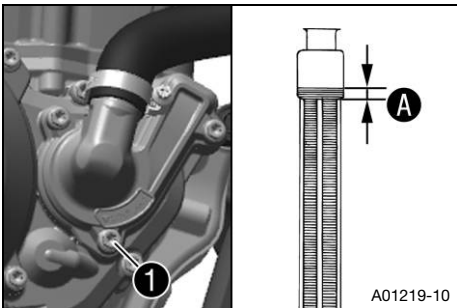


coolant	
Coolant  (p. 155) Antifreeze protection to at least: -25 °C	0.90 l

- Mount the radiator cap.
- Go for a short test ride.
- Check the coolant level.  (p. 116)



16.1 Checking the play in the throttle cable

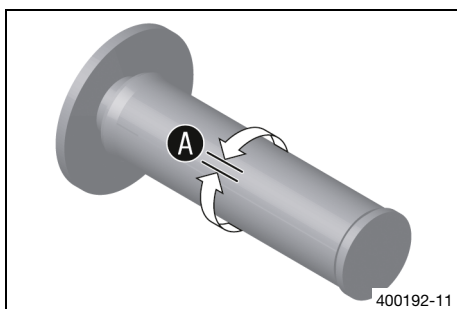

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle twist grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play	3 mm ... 5 mm
---------------------	---------------

- » If the throttle cable play does not meet the specified value:
 - Adjust the throttle cable play.   (p. 120)
- Press the cold start button in all the way to the stop.

When the throttle twist grip is turned forward, the cold start button jumps back to the start position.

- » If the cold start button does not return to its original position:
 - Adjust the throttle cable play.   (p. 120)



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar back and forth over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the throttle cable play.   (p. 120)

16.2 Adjusting the throttle cable play


Note

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

Preparatory work

- Remove the seat.  (p. 69)
- Remove the fuel tank.   (p. 76)
- Check the throttle cable routing.  (p. 85)

Adjustment procedure

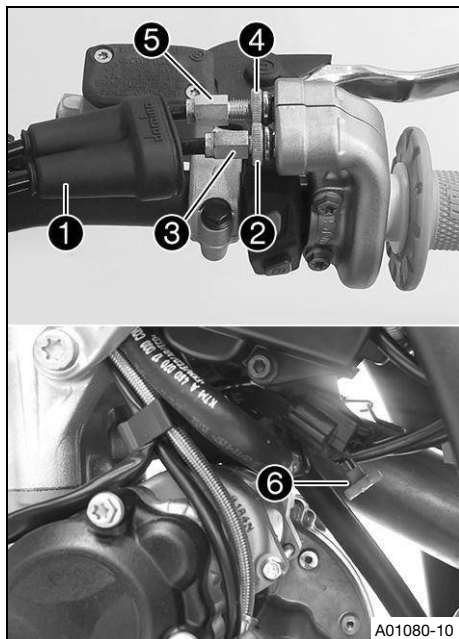

- Move the handlebar to the straight-ahead position.
- Push back boot ①.
- Loosen nut ②.
- Screw adjusting screw ③ in as far as possible.
- Loosen nut ④.
- Press cold start button ⑥ all the way to the stop.
- Turn adjusting screw ⑤ so that the cold start button moves to the basic position when the throttle twist grip is turned forward.
- Tighten nut ④.
- Turn adjusting screw ③ so that there is play in the throttle cable at the throttle twist grip.

Throttle cable play	3 mm ... 5 mm
---------------------	---------------

- Tighten nut ②.
- Slide on boot ①.
- Check the throttle grip for smooth operation.

Reworking

- Check the play in the throttle cable. 📖 (p. 120)
- Install the fuel tank. 🛠️ 📖 (p. 78)
- Mount the seat. 📖 (p. 70)



16.3 Adjusting the characteristic map of the throttle response 🛠️




Note


On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate.

A guide plate with a different characteristic map is supplied.

Adjustment procedure

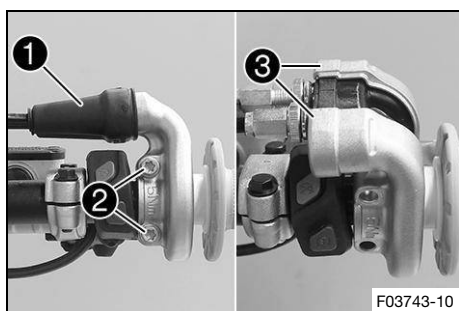


- Push back boot ①.
- Remove screws ② and half-shells ③.
- Detach the throttle cables and take off the grip tube.

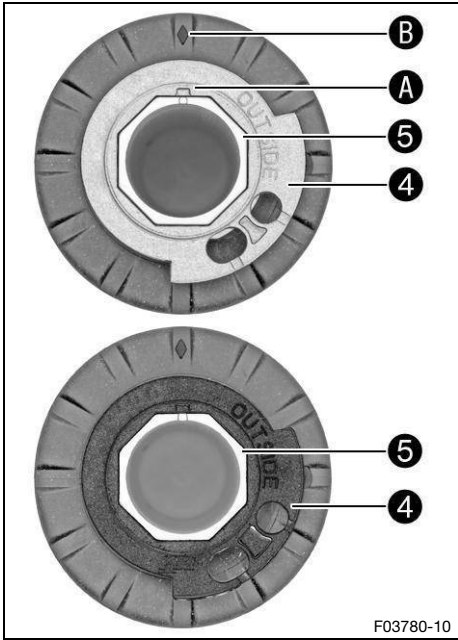

- Remove guide plate ④ from handle tube ⑤.
- Position the required guide plate on the grip tube.

The label OUTSIDE must be visible. Marking A must be positioned at marking B .	
Black guide plate (A46002014000)	
Work material (Alternative 1 / 1)	
Gray guide plate (A48002014000)	

Note
The gray guide plate opens the throttle valve more slowly.
The black guide plate opens the throttle valve more quickly.

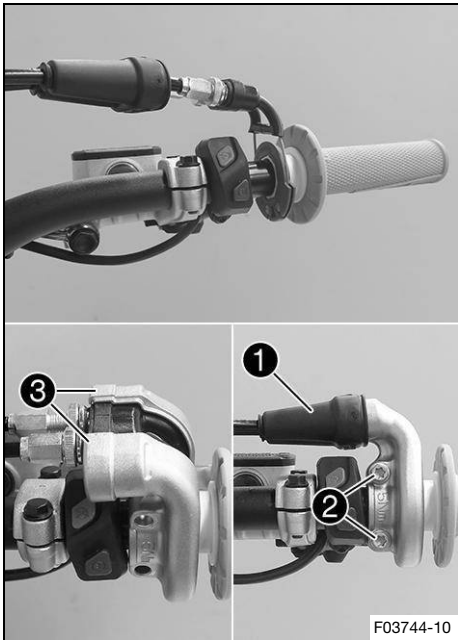

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
 - Attach the throttle cables to the guide plate and route correctly.
 - Position half-shells ③, mount and tighten screws ②.
- | | |
|----------------------------|------|
| Screw, throttle twist grip | |
| M6 | 5 Nm |
- Slide on sleeve ① and check the throttle grip for ease of movement.

Reworking

- Check the play in the throttle cable. 📖 (p. 120)

16.4 Changing the mapping



Note

The desired engine characteristic can be activated using the combination switch.
The setting most recently selected is activated again when restarting.
Traction control can also be activated in each mapping.
The mapping can also be changed during the ride.

- Select one of the following alternatives.

Activating STANDARD mapping:

- Press button ①.


Engine speed	< 4,000 rpm
--------------	-------------

- ✓ Indicator light ① lights up.
- ✓ STANDARD: balanced response



Note

Traction control can be activated additionally using TC button ③.

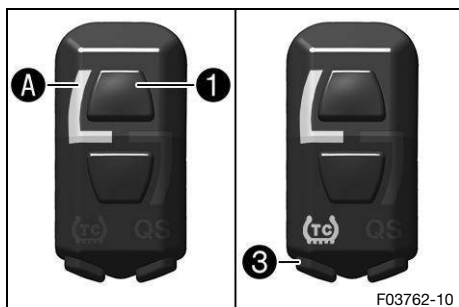

Activating ADVANCED mapping:

- Press button ②.


Engine speed	< 4,000 rpm
--------------	-------------

- ✓ Indicator light ② lights up.
- ✓ ADVANCED: direct response



Note

 Traction control can be activated additionally using TC button ③.




16.5 Adjusting the idle speed



WARNING

Danger of accidents The engine may suddenly come to a halt if the idle speed is set too low.

- Set the idle speed to the specified value.

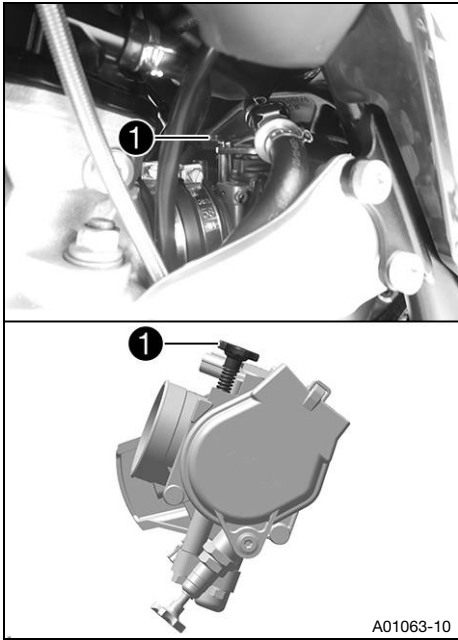

- Run the engine until warm.
✓ Cold start button deactivated

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjustment screw **1** using a suitable rpm gage.

Idle speed	2,250 rpm ... 2,350 rpm
------------	----------------------------


Note

Turning counterclockwise lowers the idle speed.
Turning clockwise increases the idle speed.

16.6 Programming the throttle valve position

Note

If the control unit detects that the throttle valve position at idle speed needs to be reprogrammed, then the malfunction indicator lamp flashes 2x per second.

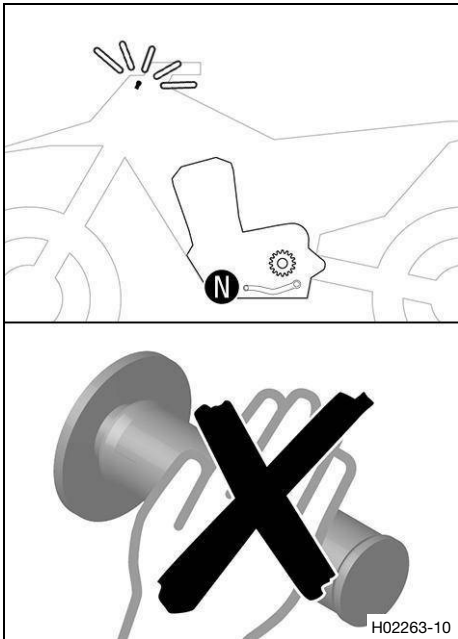

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Allow the vehicle to run at idle speed.
✓ The malfunction indicator lamp stops flashing once programming is completed.

Note


If the engine becomes too warm, perform a cool-down ride at medium speed.
After this, do not switch off the engine, but leave it running at idle speed until the programming is finished.

16.7 Checking the basic position of the gear shift lever



Note

When driving, the gear shift lever must not touch the rider's boot when in the basic position.
If the shift lever is permanently touching the boot, the transmission will be subject to excessive load; this can cause a malfunction of the quickshifter.

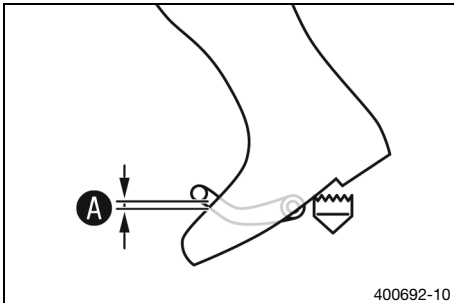


- Sit on the vehicle in the riding position and measure the distance **A** between the upper edge of your boot and the shift lever.


Distance between the gear shift lever and upper edge of boot	10 mm ... 20 mm
--	-----------------

- » If the distance does not meet the specifications:
 - Adjust the basic position of the gear shift lever.
- (p. 125)

16.8 Adjusting the basic position of the gear shift lever

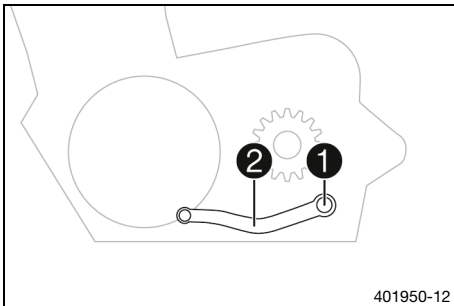

- Remove screws **1** with the washers and remove gear shift lever **2**.

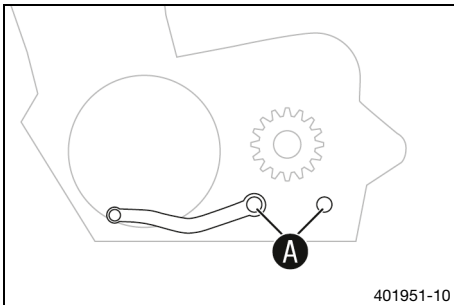

- Clean tothing **A** of the gear shift lever and shift shaft.
- Mount the gear shift lever on the shift shaft in the desired position and engage the tothing.



Note

The range of adjustment is limited.
The gear shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten screw **1** with the washers.

Screw, shift lever	
M6	14 Nm
	Loctite® 243

17.1 Changing the fuel screen



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

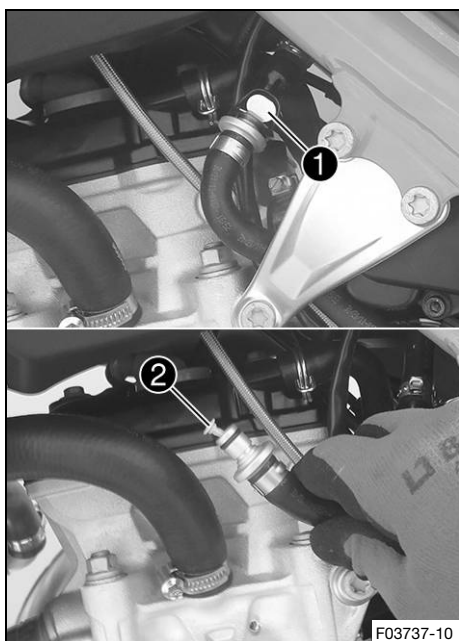

- Clean quick-lock coupling **1** thoroughly with compressed air.



Note

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel hose clogs the injector!

- Disconnect the quick-lock coupling.



Note

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **2** out of the connecting piece.
- Slide the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray  (p. 154)

- Join quick release coupling **1**.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check the response.



17.2 Checking the engine oil level



Note

The engine oil level can be checked when the engine is cold or warm.

Preparatory work

- Stand the motorcycle upright on a level surface.

Control process

- Select one of the following alternatives.


Condition: The engine is cold.

- Check the engine oil level.

The engine oil reaches the middle of level viewer **A**.

» If the engine oil does not reach the middle of the level viewer:

- Add engine oil. (p. 130)

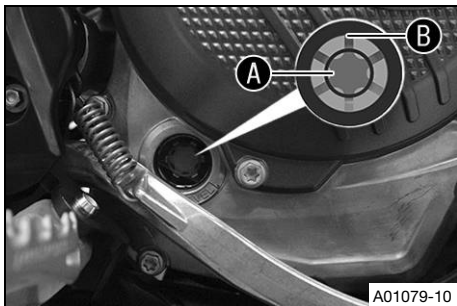

Condition: The engine is at operating temperature.

- Check the engine oil level.

The engine oil level is between the middle of the level viewer **A** and the upper edge of the level viewer **B**.




Note

After switching off the engine, wait one minute before checking the level.

» If the engine oil does not reach the middle of level viewer **A**:

- Add engine oil. (p. 130)

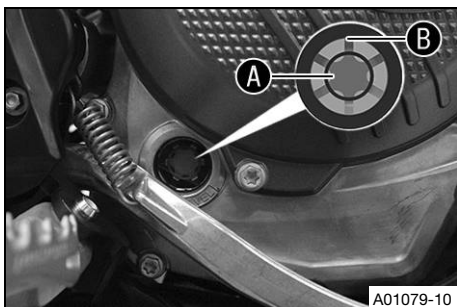

17.3 Changing the engine oil and oil filter, cleaning the oil screens



WARNING

Danger of scalding Engine and gear oil heat up when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.





Note
Drain the engine oil while the engine is at operating temperature.

Preparatory work

- Park the motorcycle on a level surface.
- (All FX models)**
- Remove the skid plate. (p. 57)

Replacement process

- Position an appropriate container under the engine.
- Remove screw plug ❶ with oil screen and the O-rings.
- Remove oil drain plug ❷ with the magnet and seal ring.

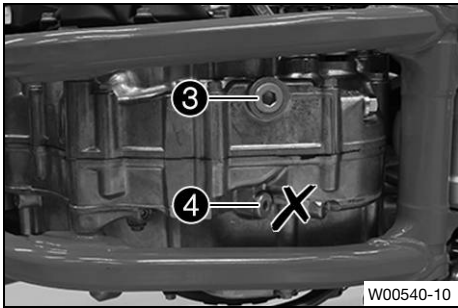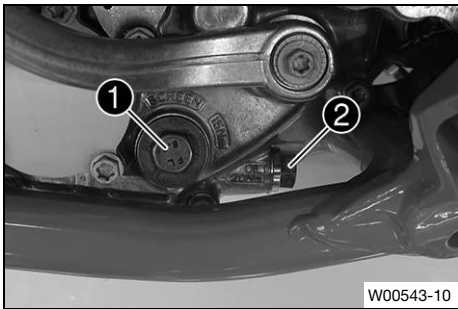


- Remove screw plug ❸ with O-ring.




Note
Do not remove screw ❹.

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.
- Mount and tighten screw plug ❸ with new O-ring.

Oil drain plug	
M14×1.5	15 Nm

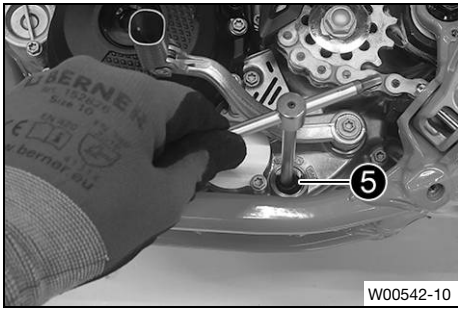


- Position oil screen ❺ with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

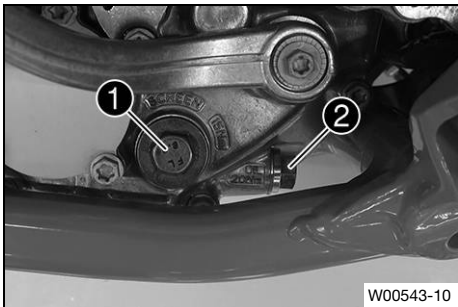


- Mount and tighten screw plug ❶ with O-ring.
- Mount and tighten oil drain plug ❷ with the magnet and a new seal ring.

Plug, oil screen	
M20×1.5	15 Nm

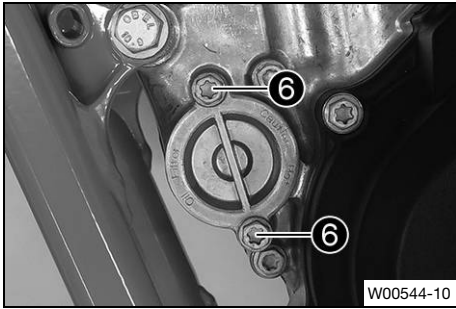


- Remove ⑥ screws. Take off the oil filter cover with the O-ring.

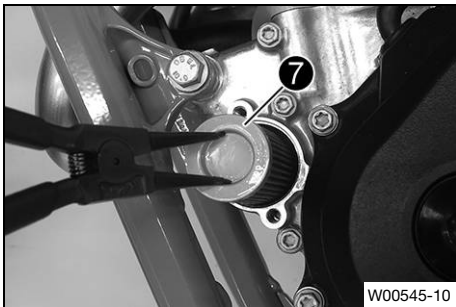

- Pull oil filter ⑦ out of the oil filter housing.

Lock ring plier (51012011000)


- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.

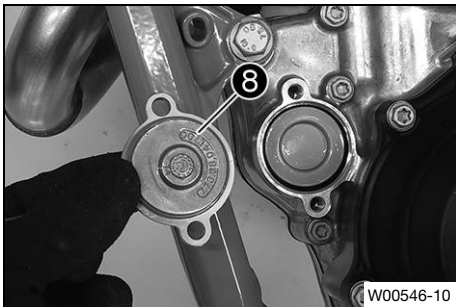

- Lay the motorcycle on its side and fill the oil filter housing to about $\frac{1}{3}$ full with engine oil.
- Fill the oil filter with engine oil and position the oil filter in the housing.
- Oil the O-ring of the oil filter cover and mount it together with oil filter cover ⑧.
- Mount and tighten the screws.

Screw, oil filter cover

M6	10 Nm
----	-------

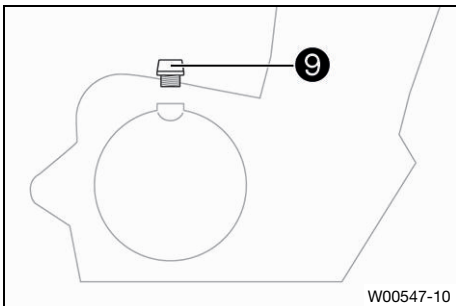

- Remove filler plug ⑨ with the O-ring, and fill up with engine oil.

engine oil

Engine oil (10W/50)	1.0 l
---------------------	-------

(p. 153)	
----------	--

fully synthetic	
-----------------	--



Note

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

- Mount and tighten oil plug with O-ring.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

(All FX models)


- Install the skid plate.  (p. 58)
- Check the engine oil level.  (p. 127)

17.4 Adding engine oil



Note

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

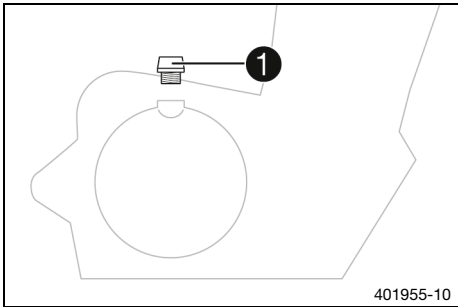

Filling procedure

- Remove oil plug **1** with O-ring.
- Add the same engine oil used when the last oil change was carried out.

engine oil	
Engine oil (10W/50)  (p. 153) fully synthetic	1.0 l



Note

For optimal performance of the engine oil, do not mix different types of engine oil.

Husqvarna Mobility recommends changing the engine oil when necessary.

- Mount and tighten the oil plug together with the O-ring.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

- Check the engine oil level.  (p. 127)

18.1 Cleaning the motorcycle



NOTE

Material damage Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc.

Too high a pressure can cause malfunctions and destroy components.

- Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
- Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm
------------------	-------



NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

To maintain the value and appearance of the motorcycle over a long period, clean it regularly. Avoid direct sunshine when cleaning the motorcycle.

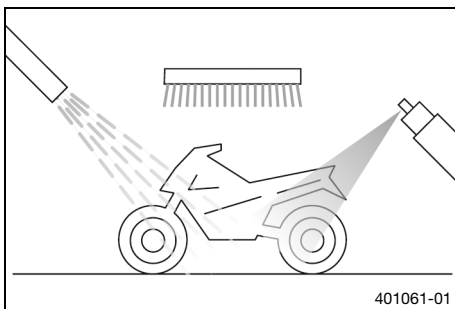

- Seal the exhaust system to prevent water from entering into it.
- Remove loose dirt first with a soft jet of water.
- Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.

Environmentally neutral universal cleaning agent
 (p. 156)



Note

Use warm water containing standard motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the cover from the exhaust system.



WARNING

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



Note

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

- Push back the protection caps of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, lubricate all moving parts and pivot points.
- Clean the chain.  (p. 80)
- Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials  (p. 156)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors  (p. 156)

19.1 Storage

**WARNING**


Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

**Note**

If the vehicle will not be ridden for an extended period, additional steps are recommended.

Before storing the vehicle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (workshops less busy). This allows you to avoid long waiting periods when the next season starts.

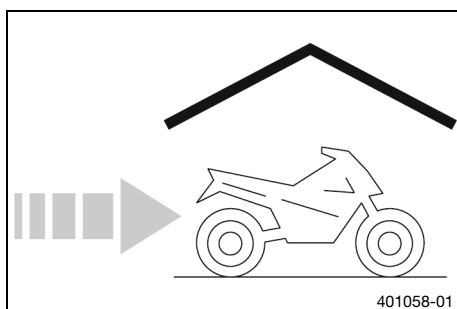

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (p. 152)

- Refuel. (p. 38)

**Tip**

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle. (p. 131)
- Change the engine oil and the oil filter, clean the oil screens. (p. 127)
- Check the frost protection and coolant level. (p. 115)
- Check the tire pressure. (p. 108)
- Remove the 12-V battery. (p. 109)
- Charge the 12-V battery. (p. 111)

Ideal charging and storage temperature of the lithium-ion battery	10 °C ... 20 °C
---	-----------------

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

**Note**

Husqvarna Mobility recommends picking up the motorcycle.

- Raise the motorcycle with a lift stand. (p. 54)
- Cover the vehicle with a tarpaulin or similar cover that is permeable to air.


**Note**

Do not use non-porous materials since they prevent humidity from escaping, and, as a result, contribute to corrosion.

Avoid running the engine of a motorcycle in storage for a short time only. Since the engine cannot warm up

properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

19.2 Preparing for use after storage

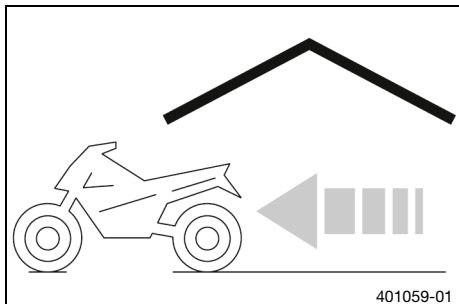

- Install the 12-V battery. 🛠️ 📖 (p. 110)
- Remove the motorcycle from the lift stand. 📖 (p. 54)
- Perform checks and maintenance measures when preparing for use. 📖 (p. 31)
- Take a test ride.

20.1 troubleshooting

Cause	Finding	Remedy		
The engine does not turn over when the start button is actuated	Operating error 12 V battery discharged Main fuse blown Starter relay defective Starter motor defective	– Carry out the starting procedure.  (p. 31) – Charge the 12-V battery.  –  (p. 111) – Check the charging voltage.  – Check the open-circuit current.  – Check the stator winding of the alternator.  – Change the main fuse.  (p. 112) – Check the starter relay.  – Check the starter motor. 		
The engine turns but does not start	Quick-lock coupling not joined Fuel screen in the quick-lock coupling is clogged Idle speed is not set correctly Spark plug sooty or wet Plug gap of spark plug too wide Short-circuit cable in wiring harness frayed, kill switch faulty Malfunction in the electronic fuel injection	– Join quick-lock couplings. – Change the fuel screen.  –  (p. 126) – Adjust the idle speed.   (p. 123) – Clean and dry the spark plug and spark plug connector, or change if necessary. – Adjust plug gap.<table border="1" data-bbox="900 949 1313 1016"><tr><td>Plug gap of spark plug</td><td>1.0 mm</td></tr></table> – Check the wiring harness. (Visual check). – Check the electrical system. – Read out the fault memory using the diagnostics tool. 	Plug gap of spark plug	1.0 mm
Plug gap of spark plug	1.0 mm			
Engine does not speed up	Malfunction in the electronic fuel injection	– Read out the fault memory using the diagnostics tool. 		
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Malfunction in the electronic fuel injection Exhaust system leaks, deformed or too little glass fiber filling in the silencer Valve clearance too little	– Clean the air filter and air filter box.  –  (p. 73) – Change the fuel filter.  – Read out the fault memory using the diagnostics tool.  – Check exhaust system for damage. – Change the glass fiber filling of the muffler.   (p. 76) – Adjust the valve clearance. 		
The engine dies during the trip	Lack of fuel	– Refuel.  (p. 38)		
Engine overheats	Too little coolant in cooling system Too little air stream Radiator fins very dirty Foam formation in the cooling system Bent radiator hose	– Check the transmission and cooling system for leaks. – Check the coolant level.  (p. 116) – Switch off the engine when standing. – Clean the radiator fins. – Drain the coolant.   (p. 116) – Refill the coolant.   (p. 117) – Change the radiator hose. 		

Cause	Finding	Remedy
Malfunction indicator lamp lights up or flashes	Error in the electronic fuel injection	– Check the wiring for damage and the electrical plug-in connections for corrosion and damage. – Read out the fault memory using the diagnostics tool. 
High oil consumption	Engine vent hose bent The engine oil level is too high The engine oil is too thin (low viscosity) Piston or cylinder worn	– Route the vent hose without bends or change it if necessary. – Check the engine oil level.  (p. 127) – Change the engine oil and the oil filter, clean the oil screens.   (p. 127) – Measure the piston/cylinder mounting clearance.

21.1 Engine

21.1.1 Technical data - engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	349.7 cm ³
Stroke	57.5 mm
Bore	88 mm
Compression ratio	14.6:1
Control	DOHC, four valves controlled via cam lever, drive via timing chain
Valve diameter, intake	36.3 mm
Valve diameter, exhaust	29.1 mm
Valve clearance	
Intake at: 20 °C	0.08 mm ... 0.15 mm
Exhaust at: 20 °C	0.12 mm ... 0.19 mm
Crankshaft bearing	2-cylinder roller bearing
Big (bottom) end bearing	Plain bearing
Wrist pin bearing	Bearing bush
Piston	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with 2 trochoidal pumps
Primary transmission	24:72
Clutch	Multidisc clutch in oil bath/hydraulically activated/damped
Transmission	
(All FC models)	5 speed transmission, claw shifted
(All FX models)	6 speed transmission, claw shift
Gear ratios (All FC models)	
1st gear	2:28 PM
2nd Gear	16:26
3rd Gear	18:24
4th Gear	21:24
5th Gear	22:21
Gear ratios (All FX models)	
1st gear	13:33
2nd Gear	16:30
3rd Gear	18:26
4th Gear	22:26
5th Gear	23:23
6th Gear	26:22
Alternator	14 V 70 W
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment
Spark plug	NGK LMAR9AI-10

21 Technical specifications

Plug gap of spark plug	1.0 mm
Cooling	Liquid cooling, permanent circulation of coolant by water pump
Starting aid	Starter motor
Idle speed	2,250 rpm ... 2,350 rpm

21.1.2 Capacities - engine

engine oil	
Engine oil (10W/50)  (p. 153) fully synthetic	1.0 l
coolant	
Coolant  (p. 155) Antifreeze protection to at least: -25 °C	0.90 l

21.2 Chassis

21.2.1 Technical data - chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Suspension travel:	
front	305 mm
rear	293 mm
Triple clamp offset	22 mm
Brake system	Disc brakes, floating brake calipers
Brake discs - diameter	
front	260 mm
rear	220 mm
Brake disc wear limit	
front	2.5 mm
rear	3.5 mm
Final drive	
(FC EU)	14:52
(FC US)	14:51
Chain	5/8 x 1/4"
Rear sprockets available	• 47 teeth • 48 teeth • 49 teeth • 50 teeth • 51 teeth • 52 teeth
Steering head angle	63.9°
Wheelbase	1,490 ±10 mm
Seat Height unloaded	946 mm
Ground clearance unloaded	336 mm
Weight without fuel approx.	
(FC EU)	101.3 kg

(FC US)	101.5 kg
Maximum permissible front axle load	145 kg
Maximum permissible rear axle load	190 kg
Maximum permissible total weight	335 kg

21.2.2 Technical data - tires

Off-road tire pressure	
front	1.0 bar
rear	1.0 bar

Tire front	Rear tire
80/100 - 21 51M TT Dunlop GEOMAX MX-34F	110/90 - 19 62M TT Dunlop GEOMAX MX-34
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.	

21.2.3 Capacities - vehicle

Total fuel tank capacity, approx. (All FC models)	
Super unleaded (ROZ 95)  (p. 152)	7.2 l

21.3 Electrics

21.3.1 Electrics

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
--------------	-------------	--

21.3.2 Fuses

Fuse	58011109105	5 A
Fuse	58011109110	10 A

21.3.3 Lamps

Dashboard illumination and indicator lights	LED
---	-----

21.4 Fork

21.4.1 Technical data - fork (FC EU)

Fork part number	A360C107Y406000
Fork	WP XACT AER
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Air pressure	8.6 bar
Fork length	950 mm

21.4.2 Capacities - fork (FC EU)

Oil capacity, right outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 153)	240 $\pm$ ₅₀ ¹⁰ ml
Oil capacity, left outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 153)	240 $\pm$ ₅₀ ¹⁰ ml
Oil capacity, right cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 153)	380 ml
Grease capacity, left cartridge	
Special grease (00062010053)  (p. 154)	5 g

21.4.3 Technical data - fork (FC US)

Fork part number	A360C157Y406000
Fork	WP XACT AER
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Air pressure	8.6 bar
Fork length	950 mm

21.4.4 Capacities - fork (FC US)

Oil capacity, right outer assembly	
Fork oil (48601166S1) (SAE 4)	240 $\pm$ ₅₀ ¹⁰ ml

Oil capacity, left outer assembly	
Fork oil (48601166S1) (SAE 4)	240 $\pm$ ₃₀ ¹⁰ ml
Oil capacity, right cartridge	
Fork oil (48601166S1) (SAE 4)	380 ml
Grease capacity, left cartridge	
Special grease (00062010053)	5 g

21.4.5 Technical data - fork (All FX models)

Fork part number	A590C179Y402000
Fork	WP XACT
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	23 clicks
Standard	18 clicks
Sport	13 clicks
Air pressure	5 bar
Fork length	940 mm

21.4.6 Capacities - fork (All FX models)

Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4)	390 ml
Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4)	175 ml

21.5 Shock absorber

21.5.1 Technical data - shock absorber (FC EU)

Shock absorber part number	A360C407Y408000
Shock absorber	WP XACT LDS
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
High-speed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Preload	8 mm
Spring rate	
Weight of rider: 65 kg ... 75 kg	36 N/mm
Weight of rider: 75 kg ... 85 kg	39 N/mm
Weight of rider: 85 kg ... 95 kg	42 N/mm
Spring length	240 mm
Gas assisted	10 bar
Static sag	35 mm
Rider sag	105 mm
Installation position	456.3 mm

21.5.2 Capacities - shock absorber (FC EU)

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)  (p. 154)	Fill to the maximum mark

21.5.3 Technical data - shock absorber (FC US)

Shock absorber part number	A360C457Y408000
Shock absorber	WP XACT LDS
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
High-speed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Preload	8 mm
Spring rate	
Weight of rider: 65 kg ... 75 kg	36 N/mm
Weight of rider: 75 kg ... 85 kg	39 N/mm
Weight of rider: 85 kg ... 95 kg	42 N/mm
Spring length	240 mm
Gas assisted	10 bar
Static sag	35 mm
Rider sag	105 mm
Installation position	456.3 mm

21.5.4 Capacities - shock absorber (FC US)

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)	Fill to the maximum mark

21.5.5 Technical data - shock absorber (All FX models)

Shock absorber part number	A460C479Y408000
Shock absorber	WP XACT LDS
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
High-speed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1 turn
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Preload	8 mm
Spring rate	
Weight of rider: 65 kg ... 75 kg	42 N/mm
Weight of rider: 75 kg ... 85 kg	45 N/mm
Weight of rider: 85 kg ... 95 kg	48 N/mm
Spring length	240 mm
Gas assisted	10 bar
Static sag	35 mm
Rider sag	105 mm
Installation position	456.3 mm

21.5.6 Capacities - shock absorber (All FX models)

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)	Fill to the maximum mark

21.6 Tightening torque

21.6.1 Chassis tightening torques

Screw, hose clamp, throttle body	M4	2.8 Nm
Screw, fixed grip	M4	5 Nm
Screw, hose clip for cooling system	M4	2.4 Nm

21 Technical specifications

Screw, throttle body cover	M5	2.6 Nm
Remaining nuts on chassis	M5	5 Nm
Remaining screws on chassis	M5	5 Nm
Screw, shock absorber adjusting ring	M5	5 Nm
Screw, battery terminal	M5	2.5 Nm
Screw, frame protector	M5	3 Nm
Nut, throttle cable on throttle body	M6	3 Nm
Screw, fuel tank spoiler on radiator	M6	6 Nm
Screw, starter cable to starter relay	M6	6 Nm
Screw, chain guide on swingarm, rear	M6×16	10 Nm
Screw, hand lever	M6	5 Nm
Nut, cable on starter motor	M6	4 Nm
Remaining nuts on chassis	M6	10 Nm
Remaining screws on chassis	M6	10 Nm
Screw, service hour counter	M6	5 Nm
Screw, rear brake disc	M6	14 Nm Loctite® 243
Screw, front brake disc	M6	14 Nm Loctite® 243
Screw, push rod ball joint on the rear brake cylinder	M6	10 Nm Loctite® 243
Screw, throttle twist grip	M6	5 Nm
Screw, chain slider guard	M6	6 Nm Loctite® 243
Screw, fuel tank spoiler on radiator	M6	6 Nm
Screw, chain guide on swingarm, front	M6×45	10 Nm
Screw, ground wire on frame	M6	10 Nm
Screw, seat installation	M6	8 Nm

Brake line guide screw on swingarm	M6	4.5 Nm
Fender screw	M6	12 Nm
Screw, battery holding bracket	M6	6 Nm
Screw, chain guide on swingarm, rear	M6	10 Nm Loctite® 243
Screw, chain guide on swingarm, front	M6	10 Nm
Screw, seat installation	M6	8 Nm
Screw, front sprocket cover	M8	15 Nm
Brake pedal stop nut	M8	20 Nm
Nut, rear sprocket screw	M8	35 Nm Loctite® 2701
Nut, rim lock	M8	12 Nm
Remaining nuts on chassis	M8	25 Nm
Remaining screws on chassis	M8	25 Nm
Screw, front brake caliper	M8	25 Nm Loctite® 243
Screw, top triple clamp	M8	17 Nm
Screw, bottom triple clamp	M8	12 Nm
Screw, fork shoe	M8	15 Nm
Screw, upper steering stem	M8	20 Nm Loctite® 243
Handlebar clamp screw	M8	20 Nm
Screw, engine brace on engine	M8×20	25 Nm Loctite® 243
Subframe screw	M8	35 Nm Loctite® 243
Screw, chain slider	M8	15 Nm
(All FX models) Screw, side stand attachment	M8	45 Nm Loctite® 2701
Screw, manifold on engine brace	M8	15 Nm

Screw, engine brace on frame	M8×25	15 Nm Loctite® 2701
Screw, subframe, bottom	M8	30 Nm Loctite® 2701
Engine bracket screw	M10	60 Nm
Remaining nuts on chassis	M10	45 Nm
Remaining screws on chassis	M10	45 Nm
Top shock absorber screw	M10	60 Nm Loctite® 2701
Bottom shock absorber screw	M10	60 Nm Loctite® 2701
Screw, handlebar mount	M10	40 Nm Loctite® 243
Nut, frame on linkage lever	M16×1.5	80 Nm
Nut, swingarm pivot	M16×1.5	100 Nm
Nut, linkage lever on angle lever	M16×1.5	80 Nm
Nut, angle lever to link fork	M16×1.5	80 Nm
Screw, wheel spindle, front	M20×1.5	35 Nm
Screw, top steering head	M20×1.5	12 Nm
Nut, wheel spindle, rear	M22×1.5	80 Nm
Screw-in nozzle, cooling system	M24×1.5	7.5 Nm
Spoke nipple, rear wheel	M4,5	6 Nm
Spoke nipple, front wheel	M4,5	6 Nm
Combination switch screw	EJOT PT® – K50×18	2 Nm
Screw, intake air temperature sensor	EJOT DELTA PT® – K50×18	0.7 Nm
Fitting, stop button	EJOT PT® – K50×18	2 Nm
Fitting, start button	EJOT PT® – K50×18	2 Nm
Screw, air filter box cover	EJOT PT® – K60×20 – Z	5 Nm
Screw, seat installation	EJOT EJOFORM® – K60×23/18	2.5 Nm

Screw, fuel pump on fuel tank	EJOT PT® – K60×30 – Z	2.5 Nm
Screw, air filter box on frame	EJOT PT® – K60×20 – AL	5 Nm

21.6.2 engine tightening torques

Oil nozzle for main bearing lubrication	M4	2 Nm	Loctite® 243
Oil nozzle for clutch lubrication	M4	2 Nm	Loctite® 243
Screw, oil nozzle bent for piston cooling	M4	2.5 Nm	Loctite® 243
Jet, crank chamber ventilation	M4	2 Nm	Loctite® 243
Hose clip, intake flange	M4	3 Nm	
Detent arm screw	M5	6 Nm	Loctite® 243
Screw, gear position sensor	M5	5 Nm	Loctite® 243
Screw, clutch spring	M5	6 Nm	
Suction/pressure pump oil pump cover screw	M5	6 Nm	Loctite® 243
Oil pump idler gear fuse screw	M5	6 Nm	Loctite® 243
Oil nozzle for piston cooling	M5	2 Nm	Loctite® 243
Screw, bearing retainer	M5	6 Nm	Loctite® 243
Stator screw	M5	6 Nm	Loctite® 2701
Alternator cover grub screw	M5	2 Nm	Loctite® 243
Shift star screw	M6	10 Nm	Loctite® 243
Exhaust flange screw	M6	10 Nm	Loctite® 243
Screw, guide rail	M6	10 Nm	Loctite® 243
Screw, timing chain failure protection	M6	10 Nm	Loctite® 243
Screw, starter motor	M6	10 Nm	
Screw, outer clutch cover	M6	10 Nm	
Screw, inner clutch cover	M6	10 Nm	

21 Technical specifications

Screw, clutch slave cylinder	M6	10 Nm
Screw, engine case	M6	10 Nm
Screw, oil filter cover	M6	10 Nm
Screw, shift lever	M6	14 Nm Loctite® 243
Screw, starter motor - intermediate gear	M6	10 Nm Loctite® 243
Screw, valve cover	M6	8 Nm
Stud, cylinder head	M6	6 Nm Loctite® 243
Nut, cylinder head	M6	10 Nm
Screw, water pump cover	M6	10 Nm
Nut, water pump impeller	M6	6 Nm Loctite® 243
Screw, ignition cover	M6	10 Nm
Screw, auto decompression	M7×1	15 Nm Loctite® 243
Screw, camshaft bearing bridge M7×1 Engine oil	1.	5 Nm
	2.	14 Nm
Slide rail screw	M8	15 Nm Loctite® 243
Crankshaft clamp screw plug	M8	10 Nm
Crankshaft fixing screw	M8	8 Nm
Screw plug, cam lever shaft	M10×1	10 Nm
Front sprocket screw	M10	60 Nm Loctite® 243
Chain tension adjuster finger follower shaft plug	M10×1	8 Nm
Screw, rotor	M10×1	70 Nm Engine oil
Coolant temperature sensor	M10×1.25	12 Nm
Oil channel screw plug	M10×1	15 Nm Loctite® 243
Stud, cylinder head	M10×1.25	20 Nm Loctite® 243

Nut, cylinder head	M10×1.25 Engine oil	1.	10 Nm
		2.	30 Nm
		3.	180°
Spark plug	M10×1		12 Nm
Oil drain plug with magnet	M12×1.5		20 Nm
Pressure control valve plug	M12×1.5		20 Nm
Oil drain plug	M14×1.5		15 Nm
Nut, inner clutch hub	M18×1.5		100 Nm
Nut, primary gear wheel	M18LH×1.5		120 Nm Loctite® 243
Plug, oil screen	M20×1.5		15 Nm
Screw plug, timing chain tensioner	M24×1.5		40 Nm
Oil plug	M24×3		hand-tight
Screw plug, alternator cover	M24×1.5		18 Nm Loctite® 243

A Technical terms

	Launch control	Vehicles electronics functions for achieving the best possible acceleration from a standing position
	Quickshifter	Function of the engine electronics for shifting up without clutch actuation
OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics

B Fuels

Super unleaded

Standards

- ROZ 95 → DIN EN 228

Fuel additive

Recommended supplier

MOTOREX®

- FUEL STABILIZER

C Operating supplies

Off-road chain spray

Recommended supplier

MOTOREX®

- CHAINLUBE OFF ROAD

Fork oil

Order details

- 48601166S1

Standards

- SAE 4 → SAE

Universal oil spray

Recommended supplier

MOTOREX®

- JOKER 440 SYNTHETIC

Long-life grease

Recommended supplier

MOTOREX®

- 2000

Engine oil

Recommended supplier

MOTOREX®

- CROSS POWER 4T

Standards

→ JASO T903 MA2

- 10W/50 → SAE

Properties

- fully synthetic

Engine oil

Recommended supplier

MOTOREX®

- TOP SPEED 4T

Standards

→ JASO T903 MA2

- 15W/50 → SAE

Properties

- Partially synthetic

High viscosity grease

Recommended supplier

SKF®

- LGHB 2

Silicone spray

Recommended supplier

MOTOREX®

- SILICONE SPRAY

Special grease

Order details

- 00062010053

Recommended supplier

Klüber Lubrication®

- Klüberfood NH1 34-401

Shock absorber oil

Order details

- 50180751S1

Standards

- SAE 2.5 → SAE

Oil for foam air filter

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER OIL

Brake fluid DOT 4 / DOT 5.1

Recommended supplier

- Castrol
- REACT PERFORMANCE DOT 4
- MOTOREX®
- BRAKE FLUID DOT 5.1

Standards

→ DOT

Coolant

Recommended supplier

- MOTOREX®
- COOLANT M3.0

Properties

- Antifreeze protection to at least -25 °C

D Cleaning agents

Chain cleaner

Recommended supplier

MOTOREX®

- CHAIN CLEAN

Preserving materials

Recommended supplier

MOTOREX®

- MOTO PROTECT

Air filter cleaning agent

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER CLEANER

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors

Recommended supplier

MOTOREX®

- QUICK CLEANER

Environmentally neutral universal cleaning agent

Recommended supplier

MOTOREX®

- MOTO CLEAN UNIVERSAL

E Icons

E.1 Symbol colors

E.1.1 Yellow and orange symbols

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Failure indicator lamp lights up or flashes red
	TC indicator lamp lights up orange

E.1.2 Green and blue symbols

Green and blue symbols convey information.

	Indicator light B lights up green – ADVANCED mapping is activated.
	QS indicator lamp lights up blue

1		
12 V battery		
charging	111	
installation	110	
removing	109	
A		
Accessories	13	
Air filter		
cleaning	73	
installing	74	
removing	72	
Air filter box		
cleaning	73	
Air filter box cover		
installing	71	
removing	70	
securing	75	
Auxiliary substances	13	
B		
Brake discs		
checking	90	
Brake fluid		
adding front brake	92	
adding to rear brake	98	
Brake fluid level		
checking on front brake	91	
checking on rear brake	97	
Brake lining retainers		
checking on front brake	93	
checking on rear brake	99	
Brake pad		
checking on front brake	93	
Brake pads		
changing on the rear brake	99	
checking on rear brake	99	
of the front brake, changing	94	
Brake pedal		
adjusting the basic position	96	
checking the free travel	96	
C		
Chain		
checking	82	
cleaning	80	
Chain guide		
checking	82	
Chain tension		
adjusting	81	
		checking 81
Characteristic map of the throttle response		
adjusting	121	
Checking basic chassis setting with		
rider's weight	41	
Clutch		
changing fluid	88	
checking/correcting fluid level	87	
Clutch lever		
adjusting the basic position	87	
Compression damping		
adjusting the fork	49	
Coolant		
antifreeze and coolant level, checking	115	
draining	116	
level, checking	116	
refilling	117	
Customer service	13	
D		
Defined use	12	
Difficult operating conditions	28	
dry sand	28	
high temperatures	30	
low temperature	30	
muddy surfaces	29	
slow speed	30	
snow	30	
wet sand	29	
wet surfaces	29	
E		
Engine		
running in	27	
Engine number	16	
Engine oil		
adding	130	
changing	127	
Engine oil level		
checking	127	
Environment	12	
F		
Figures	13	
Fork legs		
adjusting the air pressure	48	
adjusting the rebound damping	50	
bleeding	55	
checking basic setting	48	
cleaning the dust boots	56	

compression damping, adjusting	49	Implied warranty	13
installing	59	Improper use	12
removing	59	Intended use	12
Fork protector		L	
installation	57	Launch control	
removing	56	activating	33
Frame		Lower triple clamp	
checking	85	installation	61
Frame protector		removing	60
installation	58	Low-speed compression damping	
removing	58	adjusting the shock absorber	42
Front fender		M	
installation	66	Main fuse	
removing	65	changing	112
Front sprocket		Manufacturer's warranty	13
checking	82	Mapping	
Front wheel		changing	123
installing	104	Motorcycle	
removing	103	cleaning	131
Frost protection		raising with lift stand	54
checking	115	removing from lift stand	54
Fuel screen		Muffler	
changing	126	changing the glass fiber filling	76
Fuel tank		installation	75
installation	78	removing	75
removing	76	N	
Fuel tank cap		Number plate	
closing	22	installation	65
opening	21	removing	65
Fuse		O	
changing the main fuse	112	Oil filter	
of the fuel pump, changing	113	changing	127
G		Oil screens	
Gear shift lever		cleaning	127
adjusting the basic position	125	Owner's manual	12
checking the basic position	125	P	
H		Preparing for use	
Handbrake lever		after storage	134
adjusting the basic position	90	checks and maintenance measures when	
checking the free travel	90	preparing for use	31
Handlebar position		notes on preparing for first use	26
adjusting	51	Protective clothing	11
High-speed compression damping		Q	
adjusting the shock absorber	43	Quickshifter	
I		activating	34
Idle speed		programming	87
adjusting	123		

R

Rear sprocket	
checking	82
Rear wheel	
installation	105
removing	104
Rebound damping	
adjusting the fork	50
adjusting the shock absorber	43
Refueling	
fuel	38
Resources	13
Rider sag	
adjusting	47
Rubber grips	
checking	86
S	
Safe use	10
Seat	
mounting	70
removing	69
Service	13
Shock absorber	
adjusting the high-speed compression damping	43
adjusting the low-speed compression damping	42
adjusting the rebound damping	43
adjusting the spring preload	46
checking static sag	45
checking the rider sag	45
installation	68
removing	66
Skid plate	
installation	58
removing	57
Spare parts	13
Spoke tension	
checking	108
Starting	31
Steering head bearing	
lubricating	64
Steering head bearing play	
adjusting	64
checking	63
Storage	133

Swingarm

checking	85
--------------------	----

T

Tampering	10
Throttle cable play	
adjusting	120
checking	120
Throttle cable routing	
checking	85
Throttle valve position	
programming	124
Tire condition	
checking	107
Tire pressure	
checking	108
Traction control	
activating	33
Transportation	37

W

Work rules	11
-----------------------------	----



3402804en

12/11/2024

