



Owner's manual 2027

MC 450F

Item no.: 3215291en



GASGAS

Congratulations on your decision to purchase a GASGAS motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with proper care, will bring you pleasure for a long time to come.

We hope you enjoy your bike and have a safe journey at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number  (p. 14)	Stamp of the contractual partner
Engine number  (p. 14)	

The owner's manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications are non-binding. GASGAS GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. GASGAS accepts no liability for delivery options, differences from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2026 GASGAS GmbH, Mattighofen Austria

All rights reserved. Figures: Visus Studios/INDG/GASGAS

Written permission from the copyright owner is required before any duplication or reproduction.

ISO 9001

GASGAS applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

12 100 6061



Issuing institution:

TÜV SÜD Management Service GmbH

GASGAS GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for:
MC 450F (F0301527)



Table of contents

1	Means of representation.....	7	7.3	Starting performance of lithium-ion batteries at low temperatures	22
1.1	Conventions.....	7	7.4	Preparing the vehicle for difficult operating conditions	23
1.1.1	Icons	7	7.5	Preparing the vehicle for rides on dry sand	23
1.1.2	Formatting.....	7	7.6	Preparing the vehicle for rides on wet sand	24
1.1.3	Abbreviations	7	7.7	Preparing for rides on wet and muddy surfaces	24
2	Safety	8	7.8	Preparing vehicle for rides at high temperature or slow speed	25
2.1	Safety instructions.....	8	7.9	Preparing the vehicle for low temperatures or snow	25
2.2	Ban on tampering	8	8	Riding instructions	26
2.3	Safe use	8	8.1	Checks and maintenance measures when preparing for use	26
2.4	Protective clothing	9	8.2	Starting the vehicle	26
2.5	Work rules	9	8.3	Starting off	27
2.6	Environment	10	8.4	Shifting, riding.	27
2.7	Owner's manual	10	8.5	Braking	28
2.8	Use definition – intended use	10	8.6	Stop, park	28
2.9	Improper use	10	8.7	Transportation	29
3	Important notes	11	8.8	Refueling	30
3.1	Manufacturer's warranty, implied warranty	11	9	Service schedule	31
3.2	Auxiliary material, operating material	11	9.1	Service schedule	31
3.3	Spare parts, accessories	11	10	Tuning the chassis	34
3.4	Service	11	10.1	Checking the basic chassis setting with the rider's weight	34
3.5	Figures	11	10.2	Air suspension XACT	34
3.6	Customer service	11	10.3	Compression damping of the shock absorber	35
4	View of the vehicle	12	10.4	Adjusting the low-speed compression damping of the shock absorber	35
4.1	View of vehicle, front left (example)	12	10.5	Adjusting the high-speed compression damping of the shock absorber	36
4.2	View of vehicle, rear right (example)	13	10.6	Adjusting the rebound damping of the shock absorber	36
5	Serial number	14	10.7	Measuring the dimension of the unloaded rear wheel	37
5.1	Vehicle identification number	14	10.8	Checking the static sag of the shock absorber	38
5.2	Frame label	14	10.9	Checking the rider sag of the shock absorber	38
5.3	Engine number	14	10.10	Adjusting the preload for the shock absorber 	39
5.4	Fork part number	14	10.11	Adjusting the rider sag 	40
5.5	Shock absorber part number	15	10.12	Checking the basic setting of the fork	41
6	Controls	16	10.13	Adjusting the fork air pressure	41
6.1	Clutch lever	16	10.14	Adjusting the compression damping of the fork	42
6.2	Handbrake lever	16			
6.3	Throttle grip	16			
6.4	Kill button	16			
6.5	Electric starter	17			
6.6	Overview of indicator lights	17			
6.7	Dashboard	17			
6.8	Opening the fuel tank cap	18			
6.9	Closing the fuel tank cap	18			
6.10	Cold start button	19			
6.11	Idle speed adjustment screw	19			
6.12	Gear shift lever	20			
6.13	Brake pedal	20			
6.14	Plug-in stand	20			
7	Preparing for use	21			
7.1	Notes on preparing for first use	21			
7.2	Running in the engine	22			

10.15	Adjusting the rebound damping of the fork	43	11.41	Checking the chain, rear sprocket, front sprocket, and chain guide	74
10.16	Handlebar position	43	11.42	Checking the frame 	77
10.17	Adjusting the handlebar position 	44	11.43	Checking the swingarm 	77
11	Service work on the chassis	46	11.44	Checking the throttle cable routing	77
11.1	Raising the motorcycle with a lift stand	46	11.45	Checking the rubber grips	78
11.2	Removing the motorcycle from the lift stand	46	11.46	Adjusting the basic position of the clutch lever	79
11.3	Bleeding the fork legs	46	11.47	Checking/correcting the fluid level of hydraulic clutch	79
11.4	Cleaning the dust boots of the fork legs	47	11.48	Changing the hydraulic clutch fluid 	80
11.5	Removing the fork protector	48	12	Brake system	82
11.6	Installing the fork protector	48	12.1	Checking the free travel on the hand brake lever	82
11.7	Removing the frame protector	48	12.2	Adjusting the basic position of the hand brake lever	82
11.8	Installing the frame protector	49	12.3	Checking the brake discs	82
11.9	Removing the fork legs 	49	12.4	Checking the brake fluid level for the front brake	83
11.10	Installing the fork legs 	50	12.5	Adding brake fluid for the front brake 	84
11.11	Removing the lower triple clamp 	50	12.6	Checking that the brake pads of the front brake are secured	85
11.12	Installing the lower triple clamp 	51	12.7	Changing the brake pads of the front brake 	85
11.13	Checking the steering head bearing play	53	12.8	Checking the free travel of the brake pedal	88
11.14	Adjusting the steering head bearing play 	54	12.9	Adjusting the basic position of the brake pedal 	88
11.15	Lubricating the steering head bearing 	55	12.10	Checking the brake fluid level for the rear brake	89
11.16	Removing the number plate	55	12.11	Adding brake fluid for the rear brake 	90
11.17	Mounting the number plate	55	12.12	Checking that the brake pads of the rear brake are secured	91
11.18	Removing the front top fender	55	12.13	Changing the rear brake pads 	91
11.19	Installing the front top fender	56	13	Wheels, tires	94
11.20	Removing the shock absorber 	57	13.1	Removing the front wheel 	94
11.21	Installing the shock absorber 	58	13.2	Installing the front wheel 	95
11.22	Removing the seat	59	13.3	Removing the rear wheel 	95
11.23	Mounting the seat	60	13.4	Installing the rear wheel 	96
11.24	Removing the right side panel	61	13.5	Checking the tire condition	97
11.25	Installing the right side panel	62	13.6	Checking the tire pressure	98
11.26	Removing air filter box cover	62	13.7	Checking the spoke tension	99
11.27	Installing air filter box cover	63	14	Electrics	100
11.28	Securing the air filter box cover 	64	14.1	Removing the 12 V battery 	100
11.29	Removing the air filter 	64	14.2	Installing the 12 V battery 	101
11.30	Installing the air filter 	65	14.3	Charging the 12 V battery 	102
11.31	Cleaning the air filter and air filter box 	66	14.4	Changing the main fuse	105
11.32	Removing the muffler	66	14.5	Changing the fuse of the fuel pump	106
11.33	Installing muffler	67	14.6	Diagnostic connector	107
11.34	Changing the damping material on the main silencer 	67			
11.35	Removing the fuel tank 	68			
11.36	Installing the fuel tank 	70			
11.37	Checking the chain for dirt	72			
11.38	Cleaning the chain	72			
11.39	Checking the chain tension	73			
11.40	Adjusting the chain tension	73			

Table of contents

15	Cooling system	108	22.4	Fork	137
15.1	Cooling system	108	22.4.1	Technical data - fork	137
15.2	Checking the frost protection and coolant level	108	22.4.2	Capacities - fork	137
15.3	Checking the coolant level	109	22.5	Shock absorber	137
15.4	Draining the coolant 	110	22.5.1	Technical data - shock absorber	137
15.5	Refilling the coolant 	110	22.5.2	Capacities - shock absorber	138
15.6	Changing the coolant	111	22.6	Tightening torque	138
16	Tuning the engine	113	22.6.1	Engine tightening torques	138
16.1	Checking the play in the throttle cable	113	22.6.2	Chassis tightening torques	141
16.2	Adjusting the throttle cable play 	113	23	Recycling	146
16.3	Adjusting the characteristic map of the throttle response 	114	23.1	Recycling	146
16.4	Adjusting the idle speed 	116	Notes.....		147
16.5	Programming the throttle valve position	116	A	Technical terms	147
16.6	Checking the basic position of the gear shift lever	117	B	Fuels	148
16.7	Adjusting the basic position of the gear shift lever 	117	C	Operating supplies.....	149
17	Service work on the engine	119	D	Cleaning agents	151
17.1	Changing the fuel screen 	119	E	Icons.....	152
17.2	Checking the engine oil level	120	E.1	Symbol colors	152
17.3	Changing the engine oil and oil filter, cleaning the oil screens 	121	E.1.1	Yellow and orange symbols	152
17.4	Adding engine oil	124	Index		153
18	Cleaning, care	125			
18.1	Cleaning the motorcycle	125			
19	Storage	127			
19.1	Storage	127			
19.2	Preparing for use after storage	128			
20	Troubleshooting	129			
20.1	Troubleshooting	129			
21	Flash code	131			
21.1	Flash codes	131			
22	Technical specifications	134			
22.1	Engine	134			
22.1.1	Technical data - engine	134			
22.1.2	Capacities - engine	135			
22.2	Chassis	135			
22.2.1	Technical data - chassis	135			
22.2.2	Technical data - tires	136			
22.2.3	Vehicle capacity	136			
22.3	Electrics	136			
22.3.1	Battery	136			
22.3.2	Fuses	136			
22.3.3	Lamps	136			

1.1 Conventions

1.1.1 Icons



Indicates a desired result (e.g. of a work step or a function).



Indicates an undesired result (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. Ensure that this work is carried out or supervised by trained personnel from an authorized contractual partner, and that any special tools required are used.



Indicates a page reference.



Indicates information with more details.



Indicates a tip, e.g. to simplify work.



Indicates the result from a test step.



Indicates the end of an activity, including any rework.

1.1.2 Formatting

Proprietary name	Indicates a proprietary name.
Name *	Indicates a protected name.
Brand TM	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

1.1.3 Abbreviations

2-pc.	two-part
Part no.	Part number
or	respectively
approx.	circa
etc.	et cetera
poss.	possibly/possible
if necessary	if necessary
compl.	complete
min.	at least
no.	number
no fig.	no figure
s.	see
among others	among others/not limited to
and the like	and the like
etc.	et cetera
cf.	compare
e.g.	for example

2.1 Safety instructions

Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



DANGER

Indicates an imminent danger that leads to serious injury or death.



WARNING

Indicates a potentially imminent danger that could lead to serious injury or death.



CAUTION

Indicates a potentially imminent danger that can lead to minor or slight injuries.



NOTE

Indicates a situation that can lead to damage to the product or the product environment.



NOTE

Indicates a situation that can lead to environmental damage.

2.2 Ban on tampering

No changes may be made to the noise control equipment and components.

Tampering that is prohibited

- Removing or disabling any devices or components used for noise control before the new vehicle is sold or delivered to the end customer.
- Removing or disabling any device or component used for noise control for purposes other than service, repair, or replacement during the service life of the vehicle.
- Use of the vehicle after a device or component used for noise control has been removed, disabled, or inadequately maintained.

Examples of prohibited tampering

- Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
- Removing or puncturing parts of the intake system.
- Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.3 Safe use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

The vehicle must only be used by trained persons.

Have any faults that impair safety immediately remedied by an authorized contractual partner.

Observe the information and warning stickers on the vehicle.

2.4 Protective clothing



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, GASGAS recommends operating the vehicle only with suitable protective clothing.

2.5 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key).

Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68.0 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ±5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite**®) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote**®) has already been applied to a new part, do not apply any additional thread lock.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

2.6 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, be environmentally aware, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. An authorized partner will be happy to help.

2.7 Owner's manual

Read this owner's manual carefully and completely before making your first trip. The owner's manual contains useful information and many tips on how to operate, handle, and service your vehicle. Only then will you find out how to best customize the vehicle for your own use and how you can protect yourself from injury.



Tip

Store the owner's manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions about the material, please contact an authorized partner.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized contractual partner and on the GASGAS website.

International GASGAS website: <https://www.gasgas.com/>

A printed copy can be ordered from the following address.

Website for printed copy: <https://print.ktm.com>

2.8 Use definition – intended use

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Note

Only use this vehicle on designated tracks away from public roads.

2.9 Improper use

The vehicle may only be used as intended.

Improper use can result in danger to people, property and the environment.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

3.1 Manufacturer's warranty, implied warranty

The work prescribed in the service schedule must only be carried out by an authorized contractual partner and then confirmed in the electronic proof of service, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by GASGAS and have them installed by an authorized contractual partner. GASGAS accepts no liability for other products and any resulting damage or loss.

The part numbers of some spare parts and accessories are given in brackets in the respective descriptions. Your authorized contractual partner will be happy to advise you.

The current accessories for your vehicle are available from your authorized contractual partner and on the GASGAS website. International GASGAS website: <https://www.gasgas.com/>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under arduous conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the powertrain, brake system, air filter, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

Please adhere to the prescribed run-in times and service intervals at all times. Strictly adhering to this will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

A list of services that have already been carried out on the vehicle can be found in the Service area on the international GASGAS website:

International GASGAS website: <https://www.gasgas.com/>

Authorized contractual partners will be happy to answer any questions regarding the services performed.

A list of authorized contractual partners can be found on the GASGAS website.

3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.

3.6 Customer service

Your authorized contractual partner will be happy to answer any questions you may have regarding your vehicle and GASGAS.

A list of authorized contractual partners can be found on the GASGAS website.

International GASGAS website: <https://www.gasgas.com/>

4 View of the vehicle

4.1 View of vehicle, front left (example)



- ❶ Handbrake lever 📖 (p. 16)
- ❷ Clutch lever 📖 (p. 16)
- ❸ Fuel tank cap
- ❹ Air filter box cover

- ❺ Cold start button 📖 (p. 19)
- ❻ Engine number 📖 (p. 14)
- ❼ Gear shift lever 📖 (p. 20)

4.2 View of vehicle, rear right (example)

 


A02366-10

- | | |
|---|---|
| ① Shock absorber compression adjustment | ⑤ Fork part number  (p. 14) |
| ② Kill button  (p. 16) | ⑥ Idle speed adjustment screw  (p. 19) |
| ② Electric starter  (p. 17) | ⑦ Brake pedal  (p. 20) |
| ③ Throttle grip  (p. 16) | ⑧ Level viewer, engine oil |
| ④ Vehicle identification number  (p. 14) | ⑨ Shock absorber rebound adjuster |
| ④ Frame label  (p. 14) | |


5 Serial number

5.1 Vehicle identification number




The vehicle identification number **1** is stamped on the right-hand side of the steering head.

 5.2 Frame label




Frame label **1** is attached to the front of the steering head.

 5.3 Engine number




The engine number **1** is stamped on the left side of the engine above the front sprocket.

 5.4 Fork part number




Fork part number **1** is stamped on the inside of the fork shoe.

5.5 Shock absorber part number

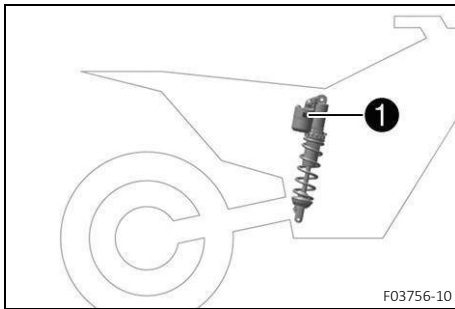


Shock absorber part number **1** is stamped on the top right of the shock absorber.

6.1 Clutch lever

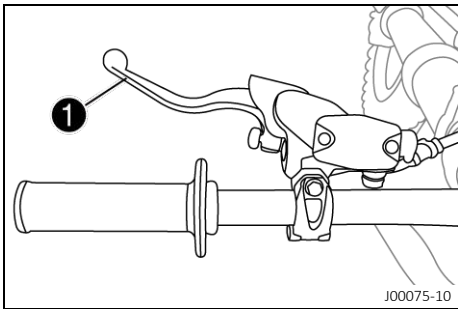


Clutch lever ❶ is fitted on the left side of the handlebar.
The clutch is activated hydraulically and adjusts itself automatically.

6.2 Handbrake lever

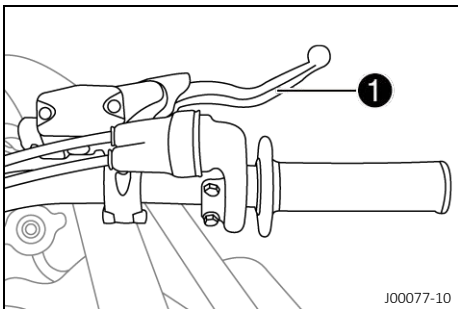


Hand brake lever ❶ is fitted on the right side of the handlebar.
The front brake is engaged using the hand brake lever.

6.3 Throttle grip

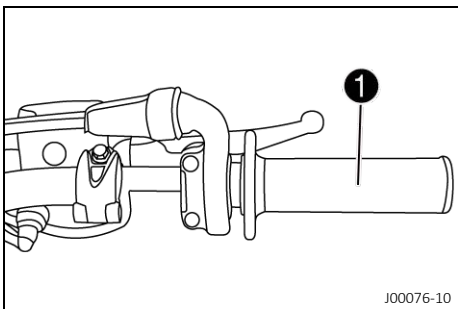

The throttle twist grip ❶ is fitted on the right side of the handlebar.


6.4 Kill button

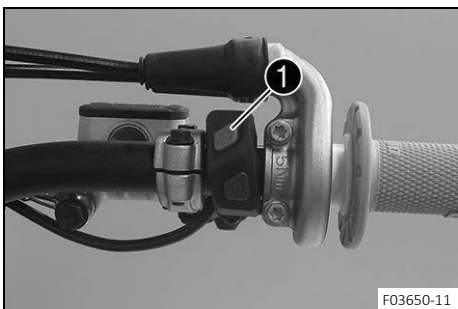

The stop button ❶ is located on the right side of the handlebar.

Condition	Meaning
Kill button  is not pressed.	In this position, the ignition circuit is closed, and the engine can be started.
The kill button  is pressed and held.	In this position, the ignition circuit is interrupted, a running engine stops, and an engine at a standstill will not start.

6.5 Electric starter

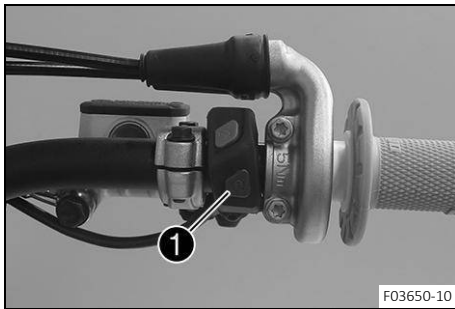

Electric starter ① is fitted on the right side of the handlebar.


Condition	Meaning
Electric starter (⚡) in the basic position	No function.
Electric starter (⚡) pressed	In this position, the starter motor is actuated.

6.6 Overview of indicator lights



Condition	Meaning
Fi	Failure indicator lamp lights up or flashes red
	The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized dealer.

6.7 Dashboard

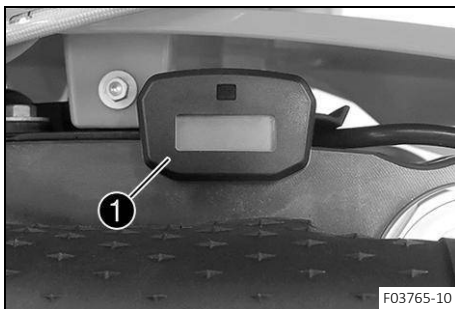

Dashboard ① is fitted in the front of the handlebar.

The dashboard shows the total operating hours of the engine.

The operating hours are counted when the engine is started and stopped when the engine is switched off.



Note

Nothing can be cleared or modified on the dashboard.

As soon as the diagnostics tool is connected, the hourmeter starts running.

Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

6.8 Opening the fuel tank cap



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE


Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

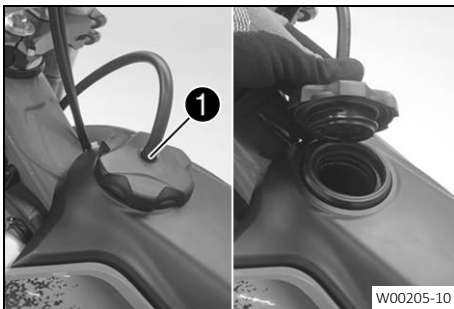

- Turn fuel tank cap **1** counterclockwise and lift it off.



6.9 Closing the fuel tank cap

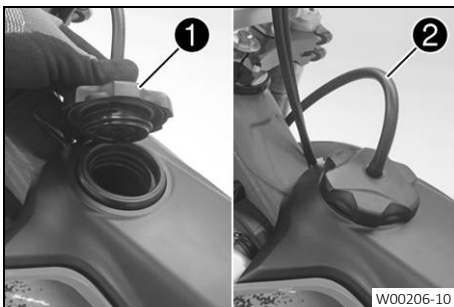

- Mount fuel tank cap **1** and turn it clockwise until the fuel tank is tightly closed.

Route hose of fuel tank vent **2** without kinks.

6.10Cold start button

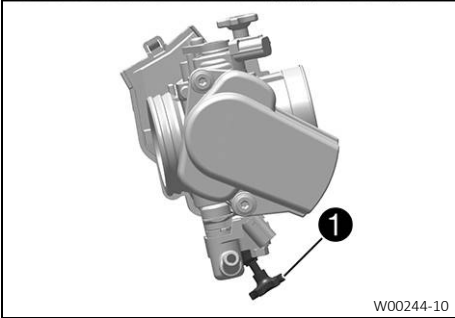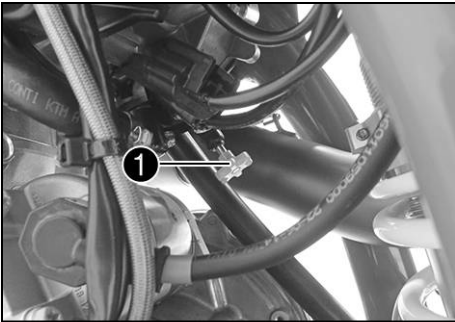

The electronic fuel injection extends the injection time when the engine is cold and the ambient temperature is low. To help the engine burn the increased amount of fuel, it must be supplied with additional oxygen by pushing the cold start button.

After briefly opening up the throttle and then releasing the throttle twist grip again, or turning the throttle twist grip towards the front, the cold start button returns to its original position.

i



Note

Check whether the cold start button has returned to its basic position.

The cold start button 1 is fitted to the bottom of the throttle valve body.

Condition	Meaning
The cold start button is pushed in all the way to the stop.	Cold start button activated
The cold start button is in the basic position.	Cold start button deactivated

6.11Idle speed adjustment screw

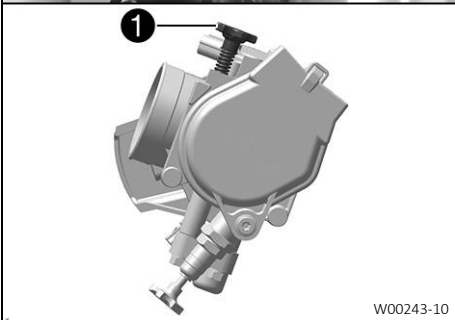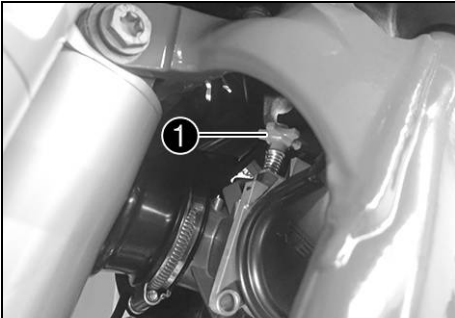

The idle setting of the throttle body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using idle speed adjusting screw 1.


Increase the idle speed by turning the idle speed adjustment screw clockwise.

Decrease the idle speed by turning the idle speed adjustment screw counterclockwise.

6.12 Gear shift lever

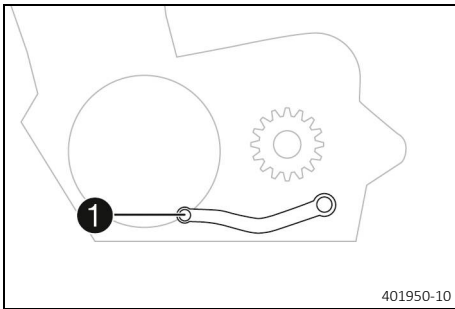


Gear shift lever **1** is mounted on the left of the engine.

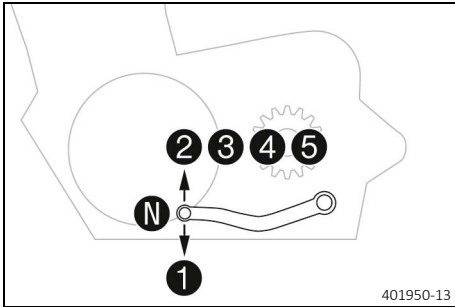

The gear positions can be seen in the figure.

The neutral or idle position is between the first and second gears.


6.13 Brake pedal

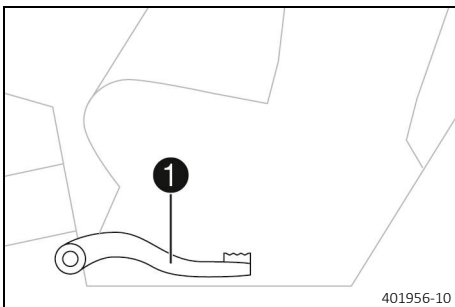

Brake pedal **1** is located in front of the right footpeg.

The rear brake is operated with the brake pedal.

6.14 Plug-in stand

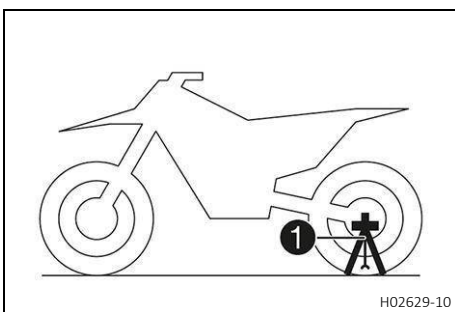

The support for plug-in stand **1** is the left side of the wheel spindle.

The plug-in stand is used for parking the motorcycle.

The plug-in stand is used as a fork support when transporting the motorcycle.



Note

The plug-in stand must be removed before riding.

The tool can be attached to the plug-in stand.

7.1 Notes on preparing for first use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



WARNING

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



WARNING

Danger of accidents The brake system fails in the event of overheating.

If the brake pedal is not released, the brake pads grind continuously.

- Take your foot off the brake pedal when you are not braking.



WARNING

Danger of accidents Not adapting the riding style constitutes a major risk.

- Adapt the vehicle speed to the road conditions and your riding ability.



WARNING

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible total weight or the axle loads.



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



WARNING

Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

- Make sure that only tires of the same tread type are mounted to the front and rear wheel.



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Note

When using the motorcycle, remember that others may be disturbed by excessive noise.

- Ensure that the pre-delivery inspection has been carried out by an authorized contractual partner.
 - ✓ The delivery certificate is transferred upon vehicle handover.
- Read the entire owner's manual before riding for the first time.
- Get to know the controls.
- Adjust the basic position of the clutch lever.  (p. 79)
- Adjust the basic position of the hand brake lever.  (p. 82)
- Adjust the basic position of the brake pedal.   (p. 88)
- Adjust the basic position of the gear shift lever.   (p. 117)
- Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride.



Note

This vehicle is not approved for use on public roads.

When off-road, it is recommended that you be accompanied by another person with another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.
- Do not take any luggage.

The maximum permissible total weight and the maximum permissible axle loads must not be exceeded.	
Maximum permissible total weight	335 kg (738.5 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)

- Check the spoke tension.  (p. 99)

The spoke tension must be checked after half an hour of operation.


- Run in the engine.  (p. 22)

7.2 Running in the engine

- Do not exceed the specified engine speed and load during the running-in time.

Maximum engine speed	
During the first operating hour	7,000 rpm (116.67 Hz)
Maximum engine power	
during the first 3 operating hours	≤ 75 %
Avoid fully opening the throttle.	

7.3 Starting performance of lithium-ion batteries at low temperatures

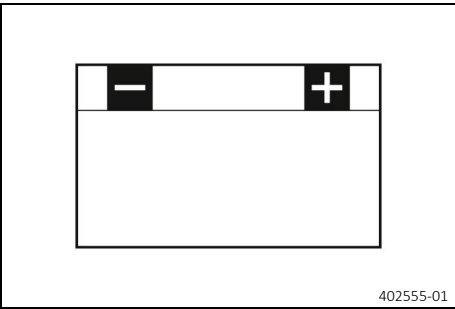

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 6 °C (43 °F).

Several attempts to start may be required. Press the start button for 5 seconds, and wait 15 seconds between attempts. At low temperatures, wait for 30 seconds. The pauses are necessary so that the heat created can be distributed through the lithium-ion battery without damaging the lithium-ion battery.

The starting power increases as the battery warms up.

Always make sure the lithium-ion battery is charged to that there is enough power to spare for starting at low temperatures.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

7.4Preparing the vehicle for difficult operating conditions

i

Note

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

- Clean the air filter and air filter box. (p. 66)

Check the air filter approx. every 30 minutes.

– Secure the air filter box cover. (p. 64)

– Check the electrical socket connector for humidity and corrosion and to ensure it is firmly seated.

» If moisture, corrosion, or damage is found:

– Clean and dry the socket connector, or change it if necessary.

Difficult operating conditions are:

- Riding on dry sand. (p. 23)

– Riding on wet sand. (p. 24)

– Rides on wet and muddy surfaces. (p. 24)

– Riding at high temperatures or slow speed. (p. 25)

– Riding at low temperatures and in snow. (p. 25)



7.5Preparing the vehicle for rides on dry sand



- Mount the air filter dust protection.

Read the accompanying mounting instructions.

Air filter dust protection cover (A46006920000)



- Mount the air filter sand protection.

Read the accompanying mounting instructions.

Air filter sand protection (A46006922000)

7 Preparing for use



- Clean the chain.

Chain cleaner  (p. 151)
- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 149)
- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

7.6 Preparing the vehicle for rides on wet sand



- Mount the air filter water protection.

Read the accompanying mounting instructions.

Air filter water protection (A46006921000)



- Clean the chain.

Chain cleaner  (p. 151)
- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 149)
- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

7.7 Preparing for rides on wet and muddy surfaces



- Mount the air filter water protection.

Read the accompanying mounting instructions.

Air filter water protection (A46006921000)



- Mount the steel sprocket.
- Clean the motorcycle. 📖 (p. 125)
- Straighten the bent radiator fins carefully.



7.8 Preparing vehicle for rides at high temperature or slow speed



- Adjust the secondary transmission to the road conditions.



Note

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

- Clean the chain.

Chain cleaner 📖 (p. 151)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.
- Check the coolant level. 📖 (p. 109)



7.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter water protection.

Read the accompanying mounting instructions.

Air filter water protection (A46006921000)




8.1 Checks and maintenance measures when preparing for use



Note

Before every trip, check the condition of the vehicle and ensure that it is safe to operate.
The vehicle must be in perfect technical condition when it is being operated.

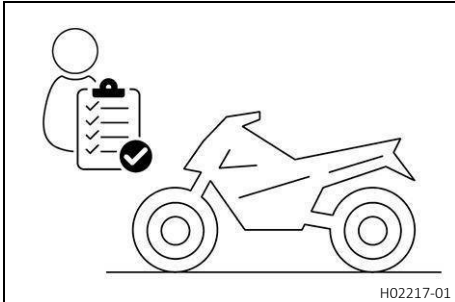

- Check that the electrical equipment is functioning properly.
 - Check the engine oil level. (p. 120)
 - Check the brake fluid level for the front brake. (p. 83)
 - Check the brake fluid level for the rear brake. (p. 89)
 - Check that the brake pads of the front brake are secured. (p. 85)
 - Check that the brake pads of the rear brake are secured. (p. 91)
 - Check the function, condition, and free travel of the brake system.
 - Check the coolant level. (p. 109)
 - Check the chain for dirt. (p. 72)
 - Check the chain, rear sprocket, engine sprocket, and chain guide. (p. 74)
 - Check the chain tension. (p. 73)
 - Check the tire condition. (p. 97)
 - Check the tire pressure. (p. 98)
 - Check the spoke tension. (p. 99)
- The spoke tension must be checked regularly as incorrect spoke tension will severely impair riding safety.
- Clean the dust boots of the fork legs. (p. 47)
 - Bleed the fork legs. (p. 46)
 - Check the air filter and clean if necessary.
 - Check the settings of all controls and ensure that they can be operated smoothly.
 - Check all screws, nuts, and hose clamps regularly for tightness.
 - Check the fuel level.

8.2 Starting the vehicle



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.




NOTE

Engine failure Running a cold engine at high engine speeds negatively impacts the service life of the engine.

- Always warm up the engine at low engine speeds.

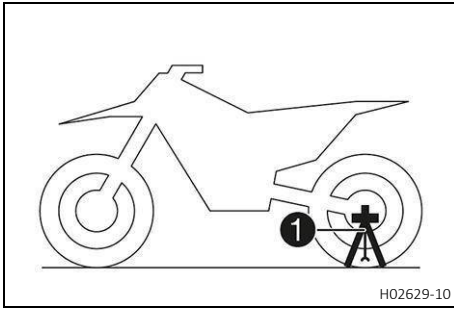

- Remove plug-in stand ①.

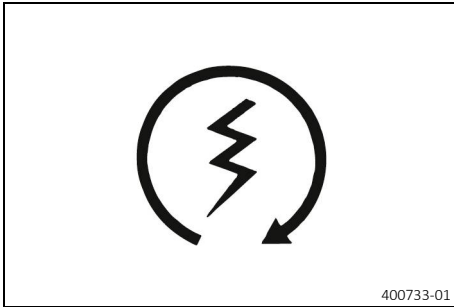

Condition: Ambient temperature: < 20 °C (< 68.0 °F)

- Press the cold start button in all the way to the stop.
- Press electric starter (⌘).

Press the electric starter for a maximum of 5 seconds. Wait for 15 seconds before a further attempt at starting.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.



Note

At low temperatures, wait for 30 seconds.

At temperatures below 6 °C (43 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

The malfunction indicator light lights up during the starting process.

8.3 Starting off



Note

The plug-in stand must be removed before riding.

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.

8.4 Shifting, riding.



WARNING

Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.

- Do not downshift to a lower gear at high engine speeds.



Note

If you hear unusual noises while riding, stop immediately, switch off the engine, and contact an authorized contractual partner.

First gear is used for starting off or for steep inclines.

- Shift into a higher gear when conditions allow (incline, riding situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
 - If you pushed the cold start button while starting, open the throttle briefly and release the throttle twist grip or turn the throttle twist grip forward.
- ✓ The cold start button goes to the basic position.

8 Riding instructions

- After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is $\frac{3}{4}$ open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle. Abruptly opening the throttle increases fuel consumption.
- To shift down, brake and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

≥ 1 min

- Avoid riding the clutch frequently or for too long. This causes the engine oil, engine and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed when riding the clutch.

8.5 Braking



WARNING

- Danger of accidents** A spongy pressure point on the front or rear brake reduces the brake action.
- Do not drive the vehicle if the brake system has a spongy pressure point.



WARNING

- Danger of accidents** Braking with excessive force locks the wheels.
- Adapt your braking to the riding situation and the road conditions.



WARNING

- Danger of accidents** Moisture and dirt impair the brake system.
- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- On sandy, wet, or slippery surfaces, use mostly the rear brake.
- Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
- Use the brake action of the engine on long downhill stretches. Shift down one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and means the brake system does not over-heat.

8.6 Stop, park



WARNING

- Danger of burns** Some vehicle components become hot when the vehicle is operated.
- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
 - Allow the vehicle parts to cool down before performing any work on the vehicle.



WARNING

- Risk of injury** People who act without authorization endanger themselves and others.
- Never leave the vehicle unattended while the engine is running.
 - Secure the vehicle against unauthorized access.



NOTE

- Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.
- Do not park the vehicle near materials which are highly flammable or explosive.
 - Allow the vehicle to cool down before covering it.



NOTE

- Material damage** The vehicle may be damaged if parked incorrectly.
- Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

- Brake the motorcycle.
- Shift the transmission into neutral
- Press kill button  when the engine is at idle speed until the engine stops.
- Park the motorcycle on firm ground.



8.7 Transportation



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.




NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

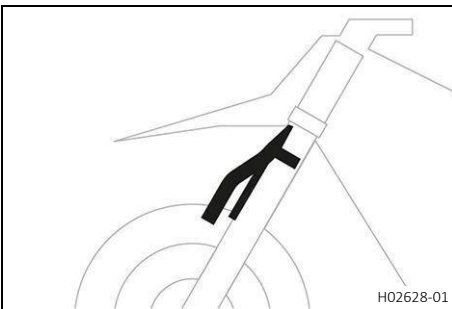

- Switch off the engine.
- Mount the plug-in stand on the fork legs.


Plug-in stand (A46029094000)



Note

The plug-in stand is included in the scope of supply.

Make sure the brake line runs in front of the plug-in stand and does not become wedged.

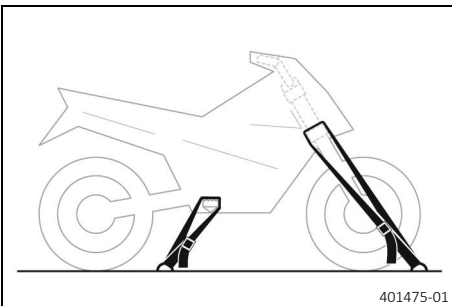

- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.



Note

Only tighten the tension belts to the point that the plug-in stand is firmly in contact with the fender and the tires.

Make sure that the plug-in stand is aligned with the underside of the fender.

8.8 Refueling



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE

Material damage Inadequate fuel quality can lead to losses in performance and consequential damage.


- Refuel only with clean fuel that meets the specified standards.



NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

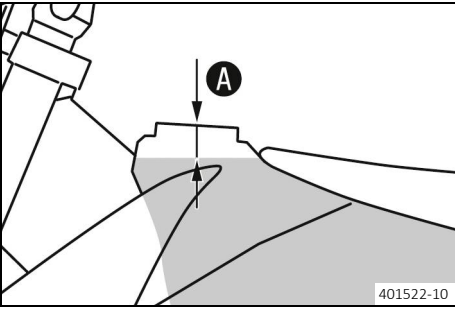

- Switch off the engine.
- Open the fuel tank cap.  (p. 18)
- Fill the fuel tank with fuel no higher than **A**.

Level A	35 mm (1.38 in)
Total fuel tank capacity, approx.	
Super unleaded (ROZ 95)  (p. 148)	7.9 l (2.09 liq. gal _{US})

- Close the fuel tank cap.  (p. 18)

9.1 Service schedule

Any further work that results from the service work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

If the vehicle is used in particularly harsh conditions such as heavy rain, mud, sand, snow, extreme temperatures, frequent full load etc., shorter service intervals than those in the table may be necessary.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized contractual partners for the electronic proof of service. Your authorized contractual partner will be happy to advise you.

	Every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	Every 15 operating hours				
	After one operating hour				
Read out the fault memory using the diagnostics tool. 	○	●	●	●	●
Program the gear position sensor. 		●	●	●	
Check that the electrical equipment is functioning properly. 	○	●	●	●	
Check and charge the 12 V battery. 	○	●	●	●	●
Check that the brake pads of the front brake are secured.  (p. 85)	○	●	●	●	●
Check that the brake pads of the rear brake are secured.  (p. 91)	○	●	●	●	●
Check the brake discs.  (p. 82)	○	●	●	●	●
Check the brake lines for damage and tightness.	○	●	●	●	●
Check the brake fluid level for the front brake.  (p. 83)	○	●	●		
Change the brake fluid for the front brake. 				●	●
Check the brake fluid level for the rear brake.  (p. 89)	○	●	●		
Change the brake fluid for the rear brake. 				●	●
Check/correct the fluid level of the hydraulic clutch.  (p. 79)			●		
Change the hydraulic clutch fluid.   (p. 80)				●	●
Check the free travel on the hand brake lever.  (p. 82)	○	●	●	●	●
Check the free travel of the brake pedal.  (p. 88)	○	●	●	●	●
Check the idle speed. 	○	●	●	●	●
Change the engine oil and the oil filter, clean the oil screens.   (p. 121)	○	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing. 	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 		●	●	●	●
Check that the clutch cables are undamaged, routed without kinks, and set correctly. 		●	●	●	●
Check the frame.   (p. 77)		●	●	●	
Check the swingarm.   (p. 77)		●	●	●	
Check the swingarm bearing for play. 			●	●	
Check the heim joint on the shock absorber for play. 			●	●	
Check the shock absorber linkage. 		●	●	●	
Check the tire condition.  (p. 97)		●	●	●	●

9 Service schedule


	Every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	Every 15 operating hours				
	After one operating hour				
Check the tire pressure.  (p. 98)		•	•	•	•
Check the wheel bearing for play. 		•	•	•	
Check the hubs. 		•	•	•	
Check the rim run-out. 	○	•	•	•	
Check the spoke tension.  (p. 99)	○	•	•	•	
Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 74)	○	•	•	•	
Check the chain tension.  (p. 73)	○	•	•	•	•
Grease all moving parts (e.g., hand lever, chain, etc.) and check for smooth operation. 	○	•	•	•	•
Change the spark plug and spark plug connector. 			•	•	
Check the valve clearance. 	○		•	•	
Change the fuel filter. 				•	•
Check the clutch. 		•	•	•	
Clean the air filter and air filter box.   (p. 66)		•	•	•	•
Change the damping material on the main silencer.   (p. 67)			•	•	
Carry out fork service. 			•	•	
Service the shock absorber. 			•	•	
Check all screws, nuts, and hose clamps for a tight fit. 	○	•	•	•	•
Change the fuel screen.   (p. 119)	○	•	•	•	•
Check the fuel pressure. 	○		•	•	•
Check the frost protection and coolant level.  (p. 108)			•	•	
Check the coolant level.  (p. 109)	○	•			
Change the coolant.  (p. 111)					•
Check the steering head bearing play.  (p. 53)	○	•			
Lubricate the steering head bearing.   (p. 55)			•	•	•
Perform minor engine service including removing and installing the engine. (Change the piston, check/measure the cylinder. Check the cylinder head. Check the camshaft and valve train components. Check the timing assembly. Change the radial shaft seal rings of the water pump. Change the crankshaft seal ring. Change the intake flange. Change inlet sleeve.) 			•	•	
Perform major engine service, engine is removed. (Change valves, valve springs, valve spring seats, and valve spring retainer. Change the connecting rod, conrod bearing and crank pin. Check the transmission and shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Change the timing chain. Change all engine bearings and all gaskets. Change the freewheel.) 				•	
Final check: check vehicle for operating safety. 	○	•	•	•	•
Take a test ride. 	○	•	•	•	•
Read out the fault memory after the test ride using the diagnostics tool. 	○	•	•	•	•

					Every 24 months
					Every 90 operating hours
					Every 45 operating hours
					Every 15 operating hours
					After one operating hour
Enter the electronic proof of service in the contractual partner portal. 					☐ ☒ ☒ ☒ ☒

- ☐ One-time interval
- ☒ Periodic interval

10.1 Checking the basic chassis setting with the rider's weight

Note When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

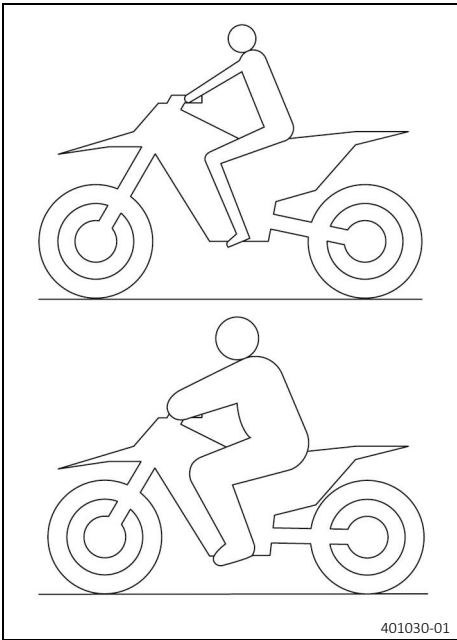


- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm, and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, GASGAS offroad motorcycles are adjusted for an average rider's weight (with full protective clothing).

Standard rider weight	75 kg ... 85 kg (165.3 lb ... 187.4 lb)
-----------------------	--

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring pretension of the shock absorber, but in the case of large weight differences, the springs must be replaced.

10.2 Air suspension XACT

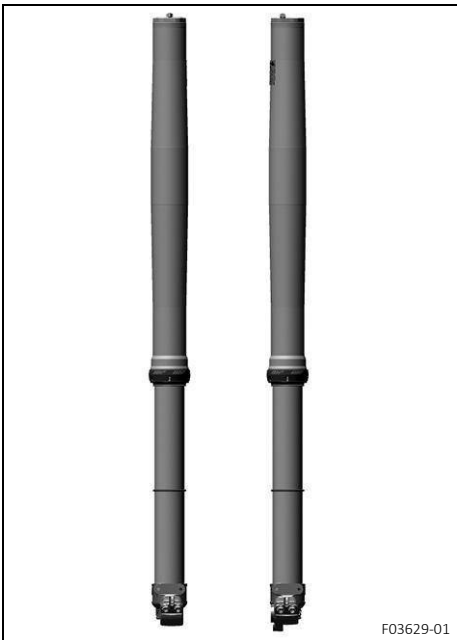

Air suspension **WP XACT** is used in the fork. In this system, the suspension is located in the left fork leg and damping in the right fork leg. As fork springs are no longer required, a significant weight advantage is achieved when compared to conventional forks. The response on slightly uneven surfaces is significantly improved. In normal driving mode, suspension is provided exclusively by an air cushion. A steel spring is located in the left fork leg as an end stop.

Note If the fork frequently bottoms out, then the fork air pressure must be increased to avoid damage to the fork and frame.

The air pressure in the fork can be quickly adjusted to the rider's weight, surface conditions, and the rider's preference using a fork air pump. The fork does not have to be dismantled. The time-consuming mounting of harder or softer fork springs is not required. If the air chamber loses air due to a damaged seal, the fork will still not sag. In this case the air is retained in the fork. The suspension travel is maintained as far as possible. The damping becomes harder, and the riding comfort is reduced. As with a conventional fork, the damping can be adjusted in rebound and compression stages. The rebound adjustment is located at the lower end of the right fork leg. The compression adjustment is located at the upper end of the right fork leg.

10.3 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed. The high-speed compression has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly. The low-speed compression has an effect, for example, when riding over long bumps: the rear wheel suspension compresses slowly. These two ranges can be adjusted separately, although the transition between high-speed and low-speed is floating. As a result, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.4 Adjusting the low-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.
— Please follow the description provided.



Note


The effect of the low-speed compression adjustment can be seen in slow to normal compression of the shock absorber.

Preparatory work

- Remove the frame protector. (p. 48)
- Remove the right side panel. (p. 61)

Main work

- Turn adjusters **1** clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

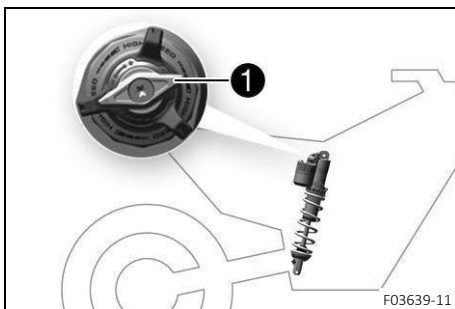

Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks



Note

Turning clockwise increases damping; turning anticlockwise reduces damping.

Reworking

- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)



10.5 Adjusting the high-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.


- Please follow the description provided.



Note

The effect of the high-speed compression adjustment can be seen in the fast compression of the shock absorber.

- Preparatory work**
- Remove the frame protector.  (p. 48)
 - Remove the right side panel.  (p. 61)

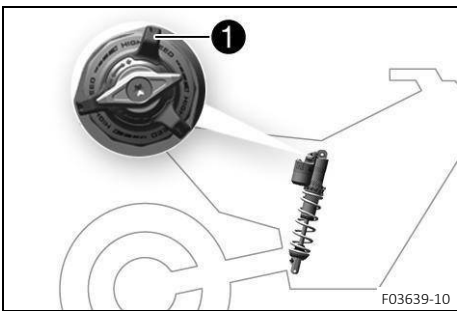

- Main work**
- Turn adjusters **1** clockwise all the way to the stop.
 - Turn counterclockwise by the number of turns corresponding to the shock absorber type.

High-speed compression damping	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)



Note

Turning clockwise increases damping; turning anticlockwise reduces damping.

- Reworking**
- Install the right side panel.  (p. 62)
 - Install the frame protector.  (p. 49)


10.6 Adjusting the rebound damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.

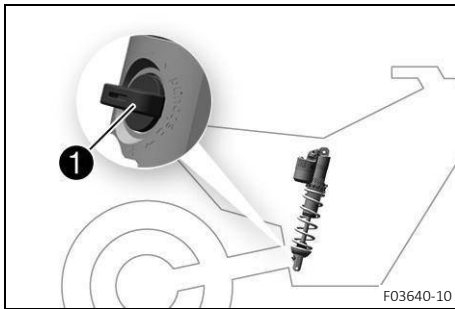

- Turn adjusters **1** clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

i Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.



10.7 Measuring the dimension of the unloaded rear wheel

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 46)

Main work

- Position the sag scale in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag scale (00029090200)

- Note the value as dimension **A**.

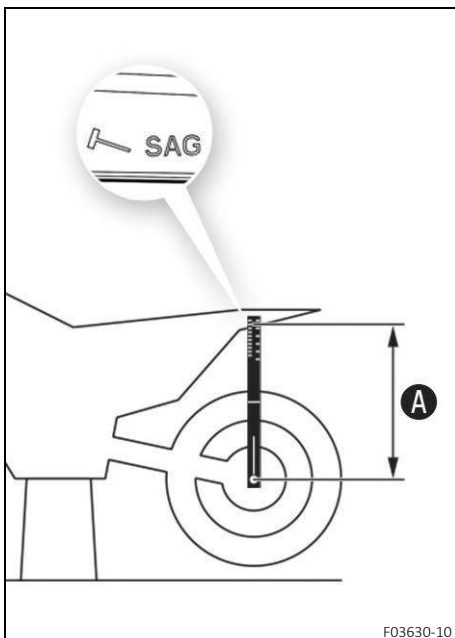


Reworking

- Remove the motorcycle from the lift stand.  (p. 46)



10.8 Checking the static sag of the shock absorber

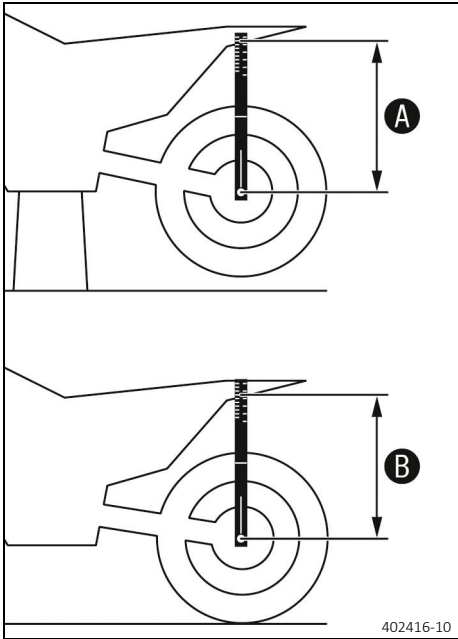

- Measure the dimension of the unloaded rear wheel. (p. 37)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **B**.


Note
The static sag is the difference between measurements **A** and **B**.

- Check the static sag.

Static sag	35 mm (1.38 in)
------------	--------------------

- » If the static sag is more or less than the specified value:
 - Adjust the preload for the shock absorber. (p. 39)

10.9 Checking the rider sag of the shock absorber

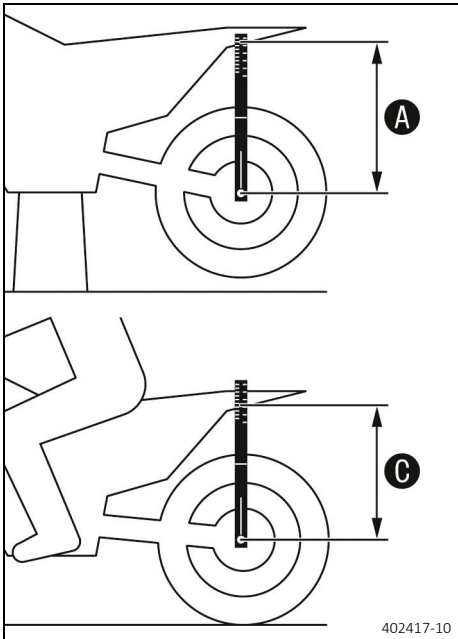

- Measure the dimension of the unloaded rear wheel. (p. 37)
- With another person holding the motorcycle, sit on the saddle with full protective clothing in a normal sitting position (feet on footrests) and bounce up and down a few times.
 - ✓ The rear wheel suspension levels out.
- With the help of another person, remeasure the distance between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **C**.

Note
The rider sag is the difference between measurements **A** and **C**.

- Check the rider sag.

Rider sag	105 mm (4.13 in)
-----------	---------------------

- » If the rider sag differs from the specified measurement:
 - Adjust the rider sag. (p. 40)

10.10 Adjusting the preload for the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

Note the current adjustment before changing the spring preload - e.g. measure the spring length.

Preparatory work

- Remove the frame protector.  (p. 48)
- Remove the right side panel.  (p. 61)
- Remove the muffler.  (p. 66)
- Raise the motorcycle with a lift stand.  (p. 46)
- Remove the shock absorber.   (p. 57)
- After removing the shock absorber, clean it thoroughly.

Main work

- Loosen screw **1**.
- Turn adjusting ring **2** until the spring is no longer under tension.

Hook wrench (90129051000)



Note

If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

- Measure the total spring length while the spring is not under tension.
- Tension the spring by turning adjusting ring **2** to the specified degree **A**.

Preload	8 mm (0.31 in)
---------	-------------------




Note

Depending on the static sag and/or the rider sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw **1**.

Screw, shock absorber adjusting ring	
M5	5 Nm (3.7 ft·lb _f)

Make sure that the adjusting ring does not touch any other components when installed.

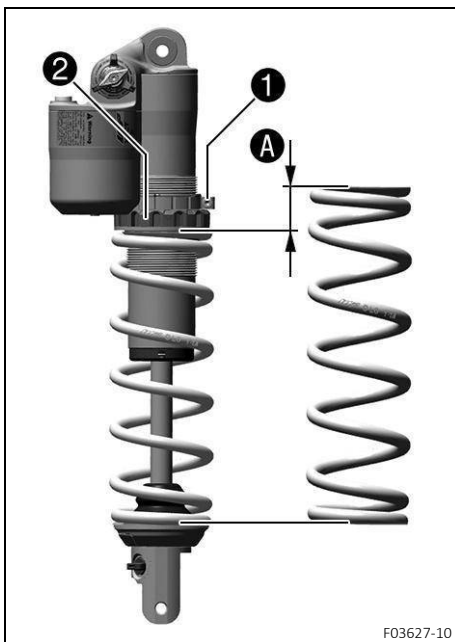

Reworking

- Install the shock absorber. (p. 58)
- Install the muffler. (p. 67)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Check the free travel of the brake pedal. (p. 88)
- Remove the motorcycle from the lift stand. (p. 46)


10.11 Adjusting the rider sag

Preparatory work

- Remove the frame protector. (p. 48)
- Remove the right side panel. (p. 61)
- Remove the muffler. (p. 66)
- Raise the motorcycle with a lift stand. (p. 46)
- Remove the shock absorber. (p. 57)
- After removing the shock absorber, clean it thoroughly.

Main work

- Select and mount a suitable spring.

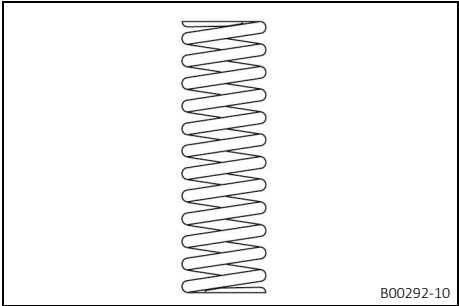

Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	42 N/mm (239.8 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	45 N/mm (257.0 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	48 N/mm (274.1 lb _f /in)

Note
The spring rate is shown on the outside of the spring.

Reworking


- Install the shock absorber. (p. 58)
- Install the muffler. (p. 67)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Check the free travel of the brake pedal. (p. 88)
- Remove the motorcycle from the lift stand. (p. 46)
- Check the static sag of the shock absorber. (p. 38)
- Check the rider sag of the shock absorber. (p. 38)
- Adjust the rebound damping of the shock absorber. (p. 36)
- Remove the motorcycle from the lift stand. (p. 46)

10.12 Checking the basic setting of the fork



Note

For various reasons, no exact rider sag can be determined for the fork.

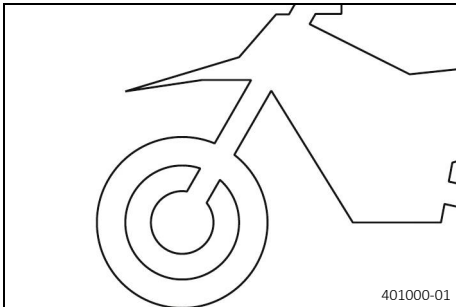

- Smaller differences in the rider's weight can be compensated for by the fork air pressure.
- However, if the fork frequently bottoms out (hard end stop on compression), the fork air pressure must be increased, within the specified values, to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.



10.13 Adjusting the fork air pressure



WARNING

Danger of accidents Modifications to the suspension settings that are not properly coordinated can impair the handling and overload components.

- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristics.



Note

Check or adjust the air pressure under the same conditions at the earliest 5 minutes after switching off the engine. The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)

Main work

- Remove protection cap ①.
- Fully put fork air pump ② together.

Fork air pump (79412966100)



Note

The fork air pump is included as part of the motorcycle's accessory pack.

- Connect the fork air pump to the left fork leg.

Read the accompanying instructions.

- ✓ The fork air pump indicator switches on automatically.
- ✓ A little air escapes from the fork leg when connecting.




Note

This is due to the volume of the hose and is not due to a defect in the fork air pump or the fork.

- Adjust the air pressure as specified.

Do not set the air pressure outside the specified range.

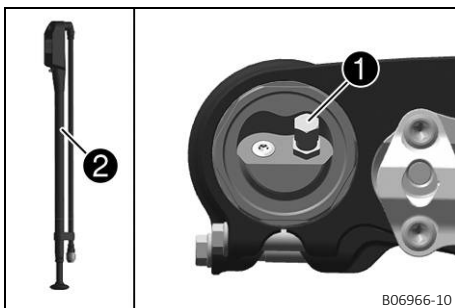

Air pressure	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	10.2 bar (147.9 psi)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	10.4 bar (150.8 psi)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	10.6 bar (153.7 psi)
Gradual change of the air pressure in steps by	0.2 bar (2.9 psi)
Minimum air pressure	7 bar (102 psi)
Maximum air pressure	12 bar (174 psi)


- Disconnect the fork air pump from the left fork leg.
 - ✓ When disconnecting, excess pressure will escape from the hose – the fork leg itself does not lose any air.
 - ✓ The fork air pump display switches off automatically after 80 seconds.
 - Mount the protection cap.
- Only mount the protection cap by hand.

Reworking

- Remove the motorcycle from the lift stand.  (p. 46)

10.14 Adjusting the compression damping of the fork

i Note
The hydraulic compression damping determines the fork suspension behavior.

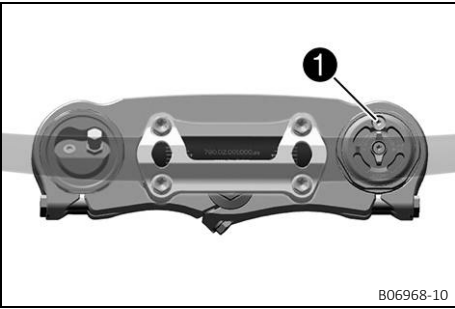

- Turn adjusters **1** clockwise all the way to the stop.

i Note
Adjusters **1** are located at the top end of the fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks


i Note
Turning clockwise increases damping; turning counterclockwise reduces damping during compression.

10.15 Adjusting the rebound damping of the fork



Note

The hydraulic rebound damping determines the fork suspension behavior.

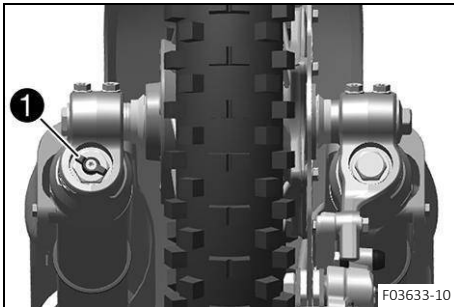

- Turn adjusters **1** clockwise all the way to the stop.



Note

Adjuster **1** is located at the lower end of the right fork leg.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks




Note

Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.



10.16 Handlebar position

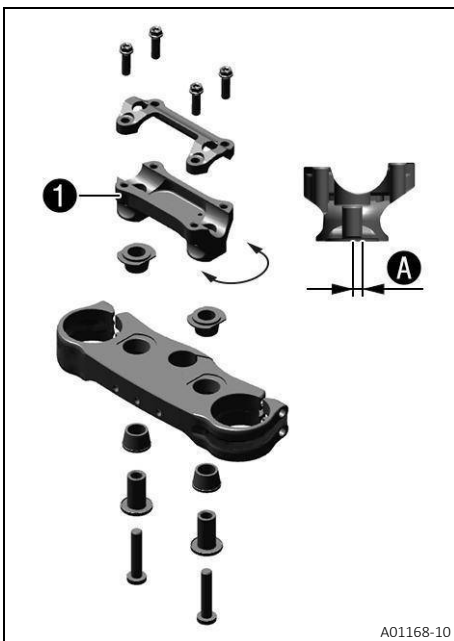

The holes on handlebar mount **1** are placed at a distance of **A** from the center.

Hole distance A	3.5 mm (0.138 in)
------------------------	----------------------

The handlebar can be mounted in 2 different positions. This allows the handlebar to be mounted in the most comfortable position for the rider.



Note

In addition, the handlebar can be mounted rigidly or on a rubber support.

10.17 Adjusting the handlebar position



WARNING

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.



Note


The handlebar can be mounted rigidly or on a rubber bearing.

- Preparatory work**
- Remove the handlebar pad.

- Main work**
- Remove screws **1**. Take off handlebar clamp **2**. Remove the handlebar and lay it to one side.

Protect the components against damage by covering them.
Do not kink the cables or lines.

- Remove screws **7** and bushings **6**. Take off handlebar support **3**.

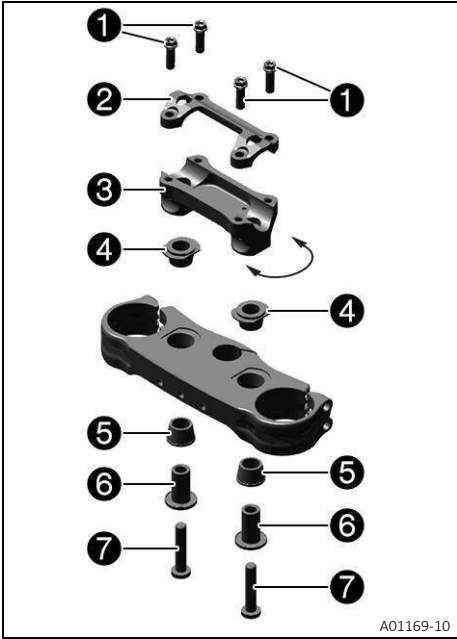

- Select one of the following alternatives.

Adjusting the handlebar position with handlebar clamp with rubber bushings

- Position the rubber bushings **4** and **5**.
- Place the handlebar mount in the required position.



Note

The handlebar mount is longer and higher on one side.

- Mount and tighten the screws **7** with the bushings **6**.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb _f) Loctite® 243

- Position the handlebar.

Make sure the cables and wiring are positioned correctly.

- Position handlebar clamp ②.
- Mount screws ①, but do not tighten yet.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)

- Tighten screws ① evenly.

First bolt the handlebar clamp with screws ① onto the longer, higher side of the handlebar supports so that both parts touch.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)

Adjusting the handlebar position with the rigid handlebar clamp

- Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

- Mount and tighten the screws ⑦ with the bushings ⑧.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb _f) Loctite® 243

Rigid handlebar clamp bushing (A46001038010)

- ✓ The conical side of the bushing faces downward.

- Position the handlebar.

Make sure the cables and wiring are positioned correctly.


- Position handlebar clamp ②.
- Mount screws ①, but do not tighten yet.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)

- Tighten screws ① evenly.

First bolt the handlebar clamp with screws ① onto the longer, higher side of the handlebar supports so that both parts touch.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)

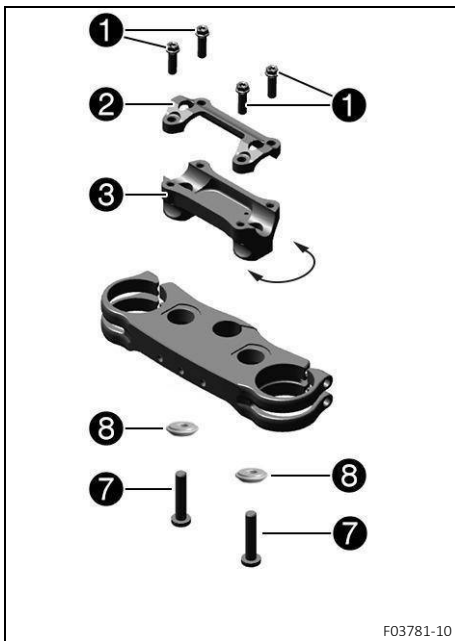

Reworking

- Mount the handlebar pad.

11.1 Raising the motorcycle with a lift stand




NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

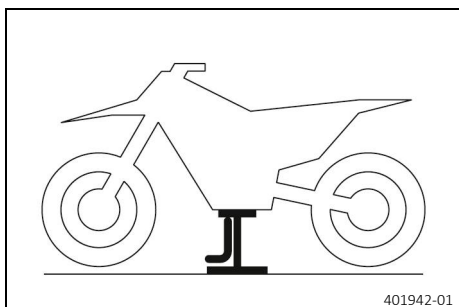

- Remove the plug-in stand and lift up the motorcycle by the frame underneath the engine.

Lift stand (81329955100)

- ✓ Neither wheel is in contact with the ground.

11.2 Removing the motorcycle from the lift stand




NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

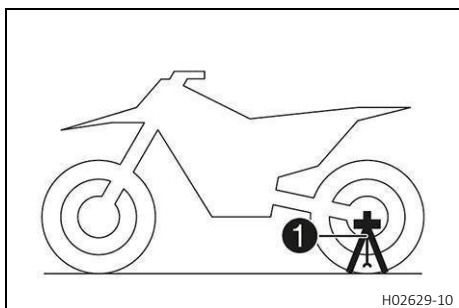

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, insert plug-in stand ❶ into the left side of the wheel spindle.

The plug-in stand must be removed before riding.

Plug-in stand (A46029094000)



Note

The plug-in stand is included in the scope of supply.


11.3 Bleeding the fork legs

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)

Main work

- Loosen bleeder screw ①.
- ✓ Any excess pressure escapes from the inner fork.
- Tighten the bleeder screw.

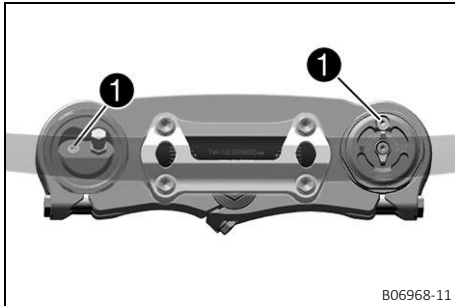

Reworking

- Remove the motorcycle from the lift stand. (p. 46)


11.4 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)
- Remove the fork protector. (p. 48)

Main work

- Push dust boot ① downward on both fork legs.

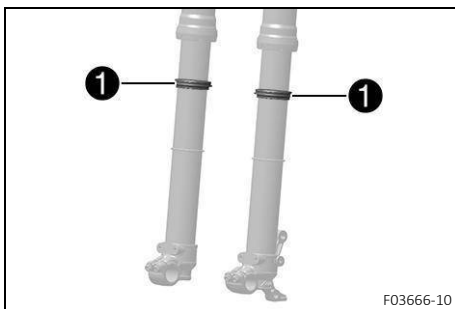

Note

The dust boots should remove dust and coarse dirt particles from the inner fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and the inner fork tube of both fork legs.


Universal oil spray (p. 149)

- Press the dust boots back into their installation position.
- Remove excess oil.

Reworking


- Install the fork protector. (p. 48)
- Remove the motorcycle from the lift stand. (p. 46)

11.5 Removing the fork protector

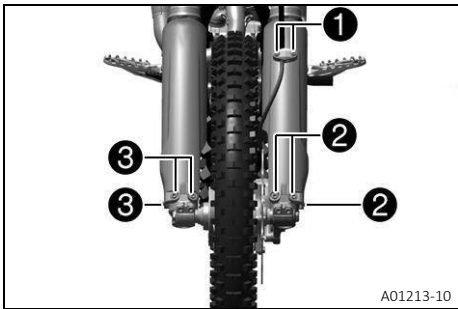

- Remove screw 1 and take off the clamp.
- Remove screws 2 and take off the left fork protector.
- Remove screws 3 and take off the right fork protector.

11.6 Installing the fork protector

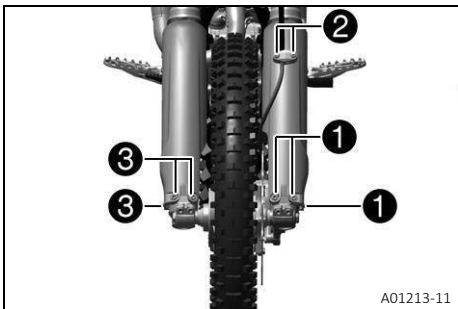

- Position the fork protector on the left fork leg. Mount and tighten screws 1.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)


- Position the brake line and the clamp. Mount and tighten screws 2.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

- Position the fork protector on the right fork leg. Mount and tighten screws 3.


Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

11.7 Removing the frame protector

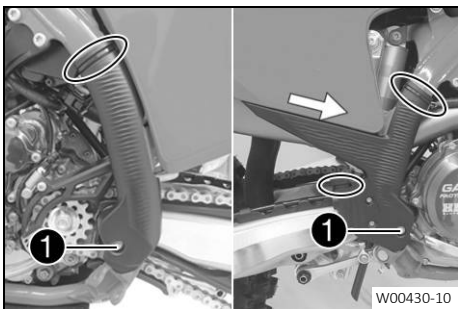

- Remove the cable ties.
- Remove screws 1 and bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

 11.8 Installing the frame protector



- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screw ① and bushing and tighten.

Screw, frame protector

M5

3 Nm
(2.2 ft·lb_f)

- Secure the frame protector with cable ties.

Turn the head of the cable tie so far back that it does not touch any other components.



11.9 Removing the fork legs

 
 
Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)
- Remove the front wheel.   (p. 94)

Main work

- Remove screw ① and take off the clamp.
- Remove screws ② and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.


Do not actuate the hand brake lever when the front wheel is removed.



- Loosen screws ③. Remove the left fork leg.
- Loosen screws ④. Remove the right fork leg.




11.10 Installing the fork legs

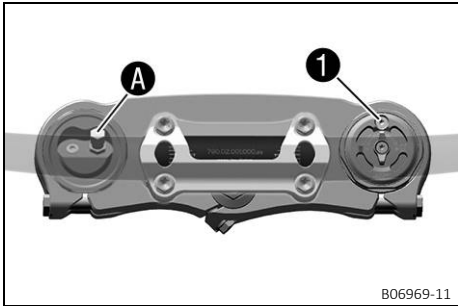

Main work

- Position the fork legs.
- ✓ Air bleeder screw 1 of the right fork leg is positioned to the front.
- ✓ Valve A of the left fork leg faces the front.

Note
Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.
The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

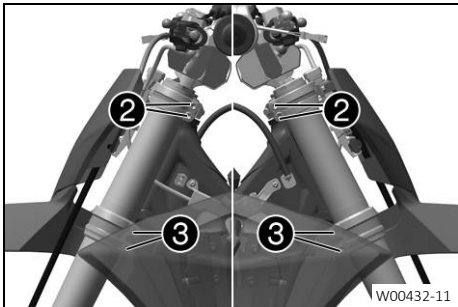


- Tighten screws 2.

Forged upper triple clamp screw	
M8	20 Nm (14.8 ft·lb _f)

- Tighten screws 3.

Forged lower triple clamp screw	
M8	15 Nm (11.1 ft·lb _f)

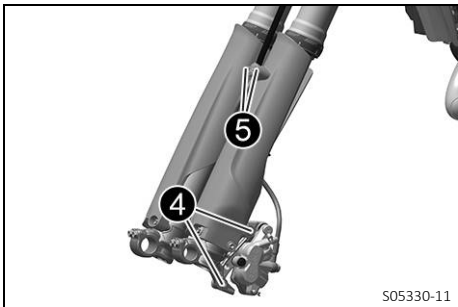

- Position the brake caliper. Mount and tighten screws 4.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Position the brake line and the clamp. Mount and tighten screws 5.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)


Reworking

- Install the front wheel. (p. 95)

11.11 Removing the lower triple clamp

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)
- Remove the front wheel. (p. 94)
- Remove the fork legs. (p. 49)
- Remove the number plate. (p. 55)
- Remove the front top fender. (p. 55)
- Remove the handlebar pad.

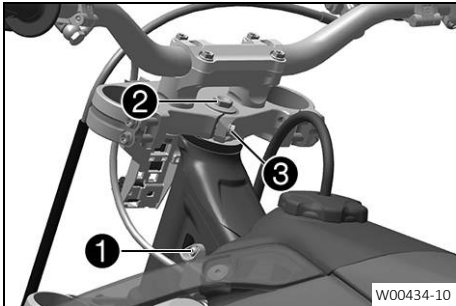


Main work

- Remove screw ①. Detach the wiring harness.
- Remove screw ②.
- Remove screw ③.
- Take off the upper triple clamp with the handlebar and place to one side.

Protect the components against damage by covering them.

Do not kink the cables or lines.

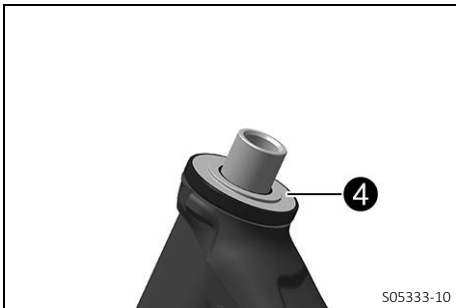

- Remove steering head seal ④.
- Remove the steering stem from the lower triple clamp.
- Remove the upper steering head bearing.


11.12 Installing the lower triple clamp

Main work


- Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease  (p. 149)

- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Push on steering head seal ①.

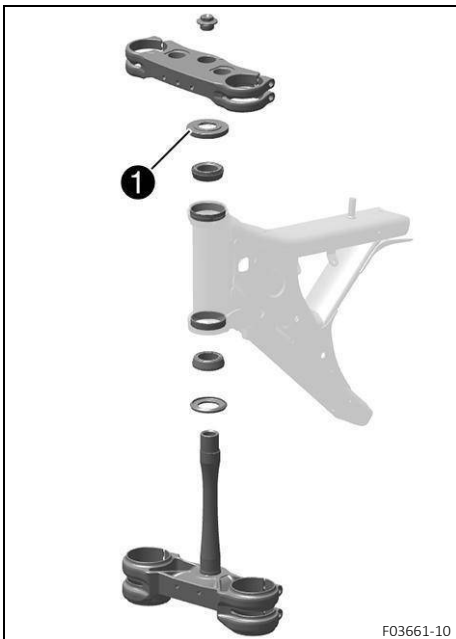


11 Service work on the chassis

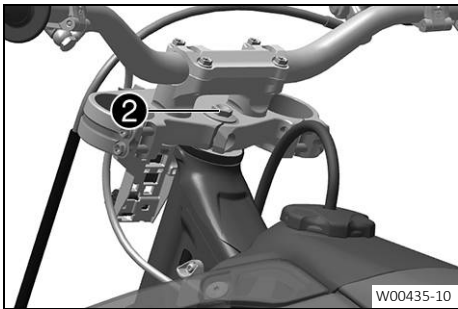

- Position the upper triple clamp and handlebar.
- Mount screw (2), but do not tighten yet.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

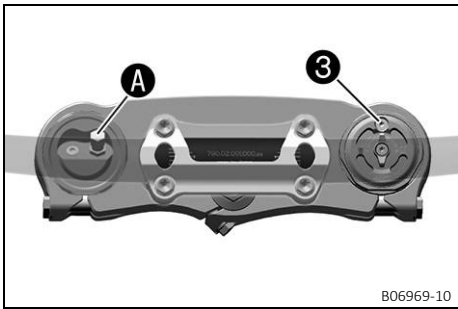


- Position the fork legs.
- ✓ Bleed screw (3) of the right fork leg is positioned to the front.
- ✓ Valve A of the left fork leg faces the front.

i

Note


Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

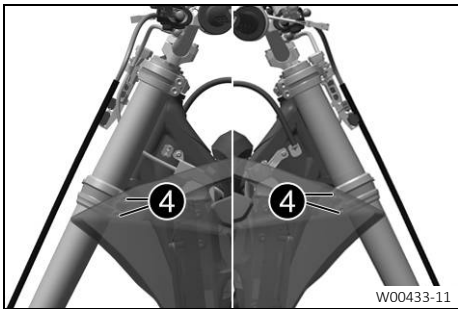


- Tighten screws (4).

Forged lower triple clamp screw	
M8	15 Nm (11.1 ft·lb _f)

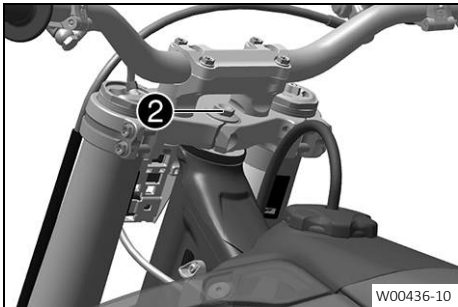


- Tighten screw (2).

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

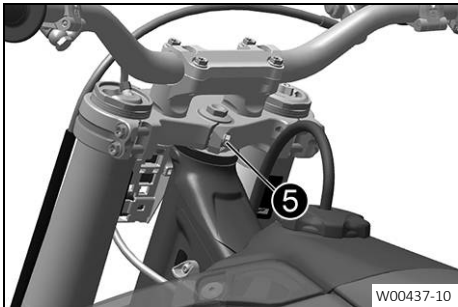

- Mount and tighten screw (5).

Screw, upper steering stem	
M8	20 Nm (14.8 ft·lb _f)
Loctite® 243	

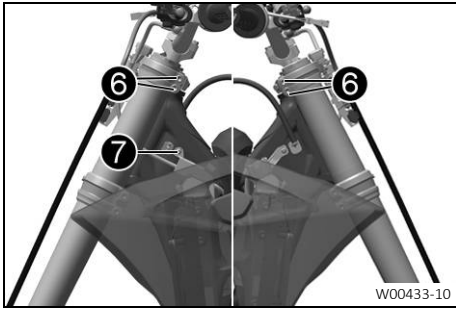


- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws ⑥.

Forged upper triple clamp screw	
M8	20 Nm (14.8 ft·lb _f)

- Secure the wiring harness with the left cable bracket.
- Mount and tighten screw ⑦.

Remaining screws on chassis	
M5	5 Nm (3.7 ft·lb _f)

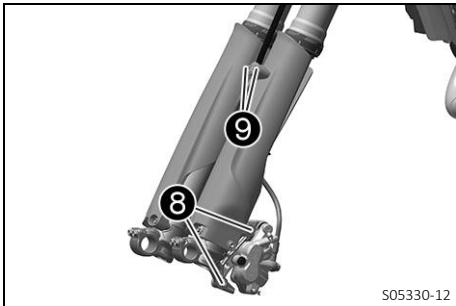

- Position the brake caliper.
- Mount and tighten screws ⑧.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Position the brake line and the clamp.
- Mount and tighten screws ⑨.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

Reworking

- Install the front top fender. 📖 (p. 56)
- Mount the handlebar pad.
- Mount the number plate. 📖 (p. 55)
- Install the front wheel. 🛞 📖 (p. 95)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check the steering head bearing play. 📖 (p. 53)
- Remove the motorcycle from the lift stand. 📖 (p. 46)

11.13 Checking the steering head bearing play



WARNING

Danger of accidents Incorrect steering head bearing play can impair the handling characteristic and damage components.

- Correct incorrect steering head bearing play immediately.



Note

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)

Main work

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- » If there is detectable play:
 - Adjust the steering head bearing play.   (p. 54)
- Move the handlebar back and forth over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- » If detent positions are detected:
 - Adjust the steering head bearing play.   (p. 54)
 - Check the steering head bearing and adjust if necessary.

Reworking

- Remove the motorcycle from the lift stand.  (p. 46)

11.14 Adjusting the steering head bearing play

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)
- Remove the handlebar pad.

Main work

- Loosen screws .
- Remove screw .
- Loosen and retighten screw .

Screw, top steering head

M20×1.5	12 Nm (8.9 ft·lb _f)
---------	------------------------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Mount and tighten screw .

Screw, upper steering stem


M8	20 Nm (14.8 ft·lb _f)
----	-------------------------------------

Loctite® 243

- Tighten screws .

Forged upper triple clamp screw

M8	20 Nm (14.8 ft·lb _f)
----	-------------------------------------

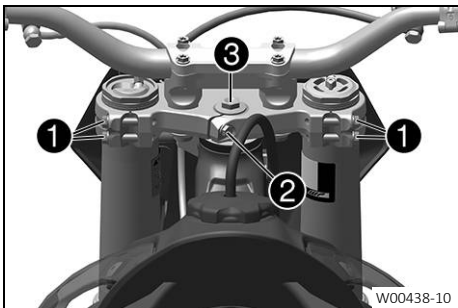


Reworking

- Check the steering head bearing play.  (p. 53)
- Mount the handlebar pad.
- Remove the motorcycle from the lift stand.  (p. 46)



11.15 Lubricating the steering head bearing

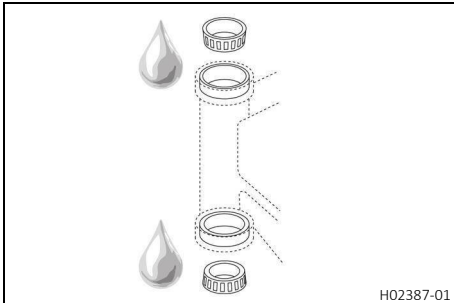

- Remove the lower triple clamp.   (p. 50)
- Install the lower triple clamp.   (p. 51)



Note

The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.




11.16 Removing the number plate



- Remove screw **1**.
- Unhook the number plate from the brake line and remove it.



11.17 Mounting the number plate

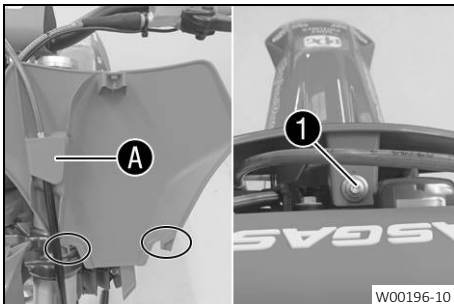

- Position the brake line in bracket **A** on the number plate.
- Position the number plate. Mount and tighten screw **1**.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)


- ✓ The holding lugs engage in the fender.



11.18 Removing the front top fender

Preparatory work


- Remove the number plate.  (p. 55)

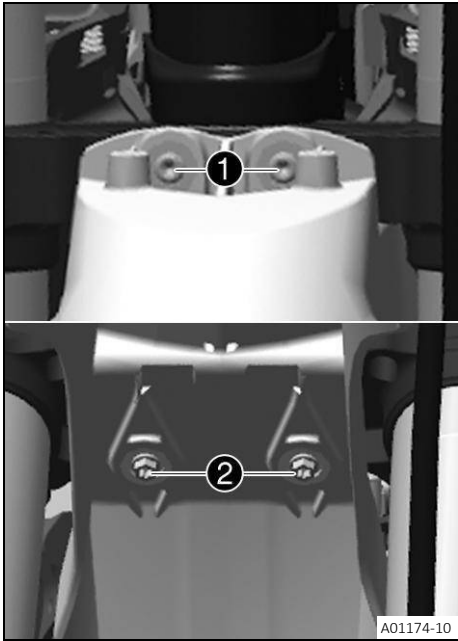

Main work

- Remove screws 1 and 2. Remove the front fender.

11.19 Installing the front top fender

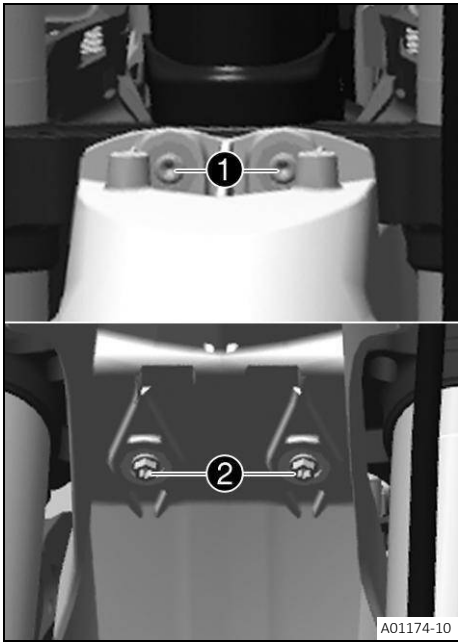

Main work

- Position the front fender. Mount and tighten screws 1 and 2.

Screw, fender on triple clamp	
M6	12 Nm (8.9 ft·lb _f)

Reworking

- Mount the number plate.  (p. 55)

11.20 Removing the shock absorber

Preparatory work

- Remove the frame protector.  (p. 48)
- Remove the right side panel.  (p. 61)
- Remove the muffler.  (p. 66)
- Raise the motorcycle with a lift stand.  (p. 46)


Main work

- Remove screw **1**.
- Remove screw connection **2**.




Tip

Raise the swingarm slightly to be able to remove the screws more easily.

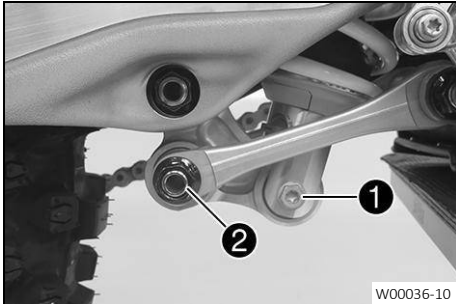

- Remove **3** screws.
- Pull rear brake cylinder off of the push rod.

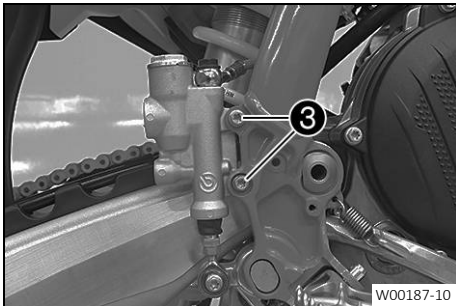


- Remove the connecting link on the chain.
- Take off the chain.


Protect the components against damage by covering them.



- Remove nut **4** and the swingarm pivot.
- Push the swingarm back and secure it against falling over.

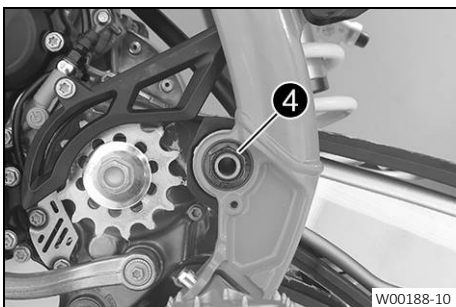


11 Service work on the chassis

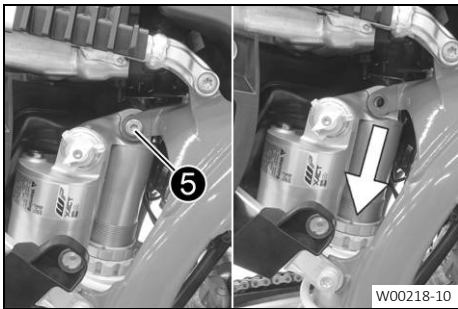

- Hold the shock absorber and remove screw 5.
- Remove the shock absorber carefully at the bottom.


11.21 Installing the shock absorber

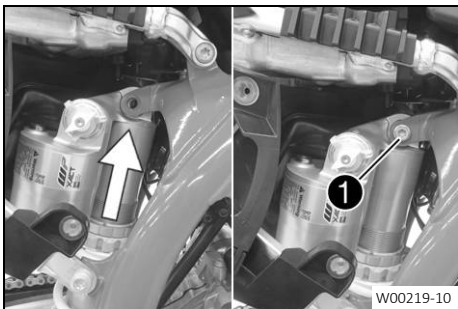

Main work

- Carefully position the shock absorber into the vehicle from the bottom.
- Mount and tighten screw 1.

Top shock absorber screw	
M10	60 Nm (44.3 ft·lb _f) Loctite® 2701

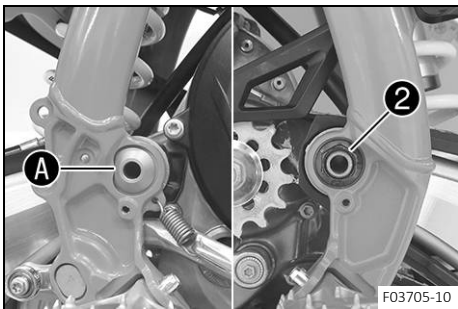


- Position the swingarm and fit the swingarm pivot.

Pay attention to flat area A.


- Mount and tighten nut 2.

Nut, swingarm pivot	
M16×1.5	100 Nm (73.8 ft·lb _f)

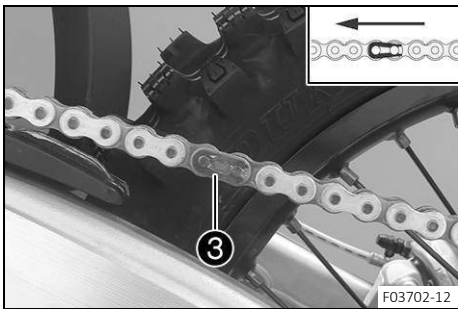

- Mount the chain.
- Connect the chain with connecting link 3.

The closed side of the master link clip must face in the direction of travel.

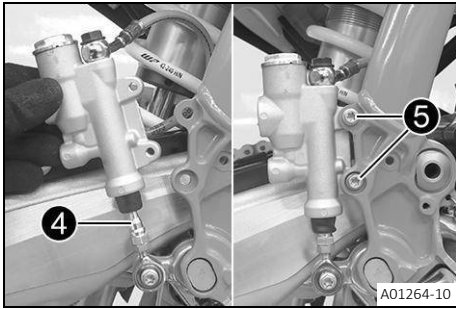

- Position the rear brake cylinder.


Ensure that the dust boot is properly seated.

- ✓ Push rod 4 engages in the rear brake cylinder.

- Mount and tighten screws 5.

Remaining screws on chassis

M6	10 Nm (7.4 ft·lb _f)
----	------------------------------------

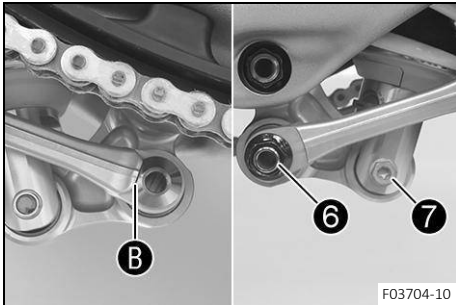

- Position the power valve control lever and linkage lever.

- Mount and tighten screw connection 6.

Nut, linkage lever on angle lever

M14×1.5	60 Nm (44.3 ft·lb _f)
---------	-------------------------------------

Pay attention to flat area B.

- Mount and tighten screw 7.

Bottom shock absorber screw

M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
-----	---



Tip

Raise the swingarm slightly to be able to mount the screw more easily.

Reworking

- Install the muffler. (p. 67)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Check the free travel of the brake pedal. (p. 88)
- Remove the motorcycle from the lift stand. (p. 46)



11.22 Removing the seat



CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

- Allow the regulator rectifier to cool down before performing any work.

Preparatory work

- Remove air filter box cover. (p. 62)


11 Service work on the chassis

Main work

- Take off screw and lock washer ❶.




- Slide the seat toward the rear and lift it off.

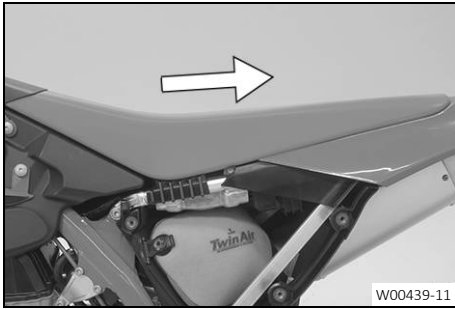


11.23 Mounting the seat

Main work

- Attach the seat to the collar bushings and simultaneously slide it forward.
 - ✓ The holding lugs engage in the recesses.
- Make sure the seat is latched in place correctly.

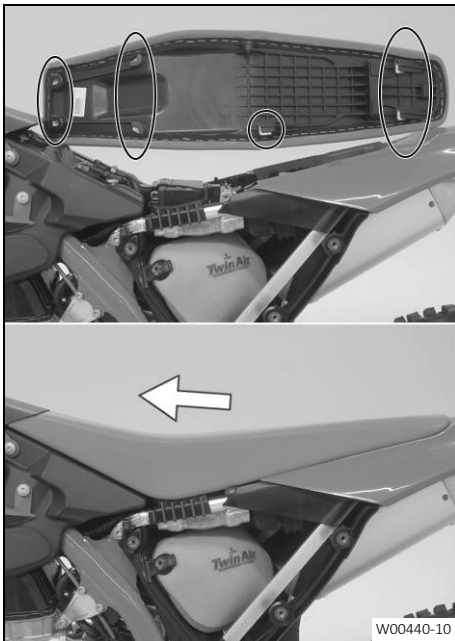

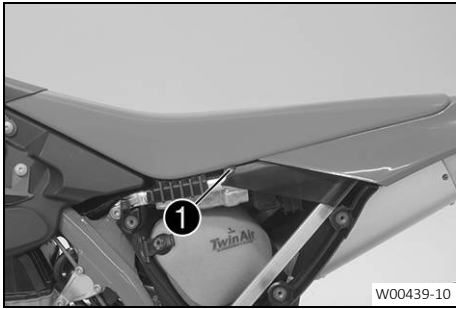

- Fit and tighten screw and lock washer **1**.

Screw, seat installation	
M6	8 Nm (5.9 ft·lb _f)

Reworking

- Install the air filter box cover.  (p. 63)




11.24 Removing the right side panel

Preparatory work


- Remove the frame protector.  (p. 48)

Main work

- Detach right side panel **1** in areas **A** and slide it forward in areas **B**.
- Take the right side panel off.

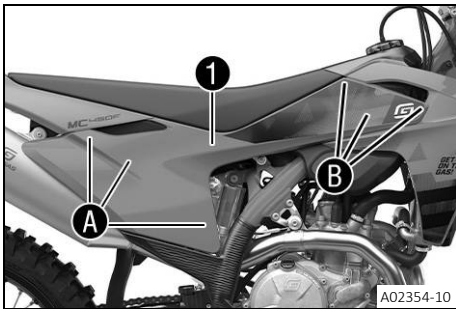

11.25 Installing the right side panel

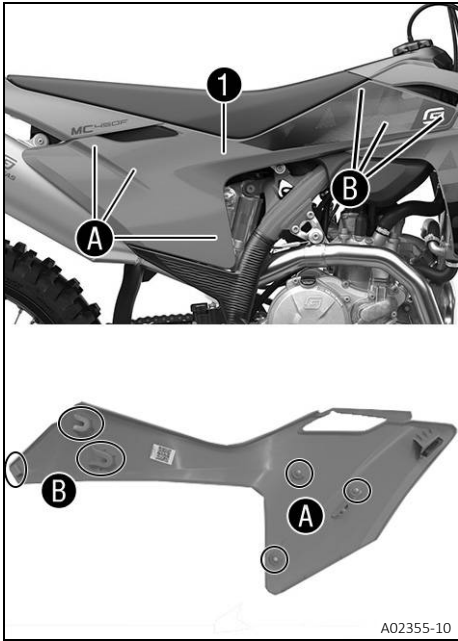

Main work

- Position right side panel 1.
- Position the side panel in areas B and slide it forward.
- Press the side panel in areas A into the rubber bushings.

Ensure that the side panel is correctly hooked in to areas A and B.

Reworking


- Install the frame protector.  (p. 49)

11.26 Removing air filter box cover

Condition: Air filter box cover secured




- Remove screw 1.

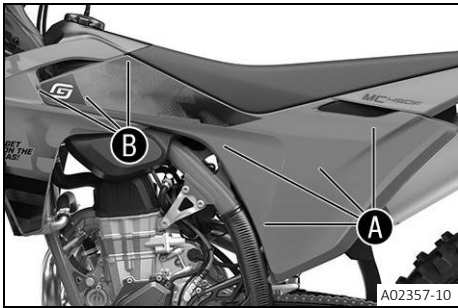

- Detach the air filter box cover in area A and slide it in area B to the rear.
- Remove air filter box cover.

Condition: Air filter box cover not secured

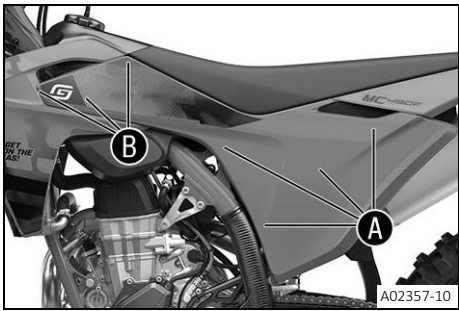


- Detach the air filter box cover in area **A** and slide it in area **B** to the rear.
- Remove air filter box cover.

11.27

Installing air filter box cover

Condition: Air filter box cover secured

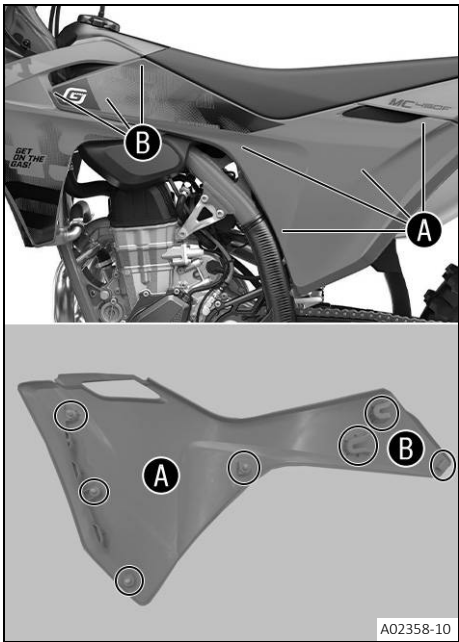


- Position the air filter box cover in area **B** and slide it forward.
- Press the air filter box cover in area **A** into the rubber bushings.



- Mount and tighten screw **1**.

Screw, air filter box cover	
EJOT PT® – K60×20 – Z	5 Nm (3.7 ft·lb _f)

Condition: Air filter box cover not secured

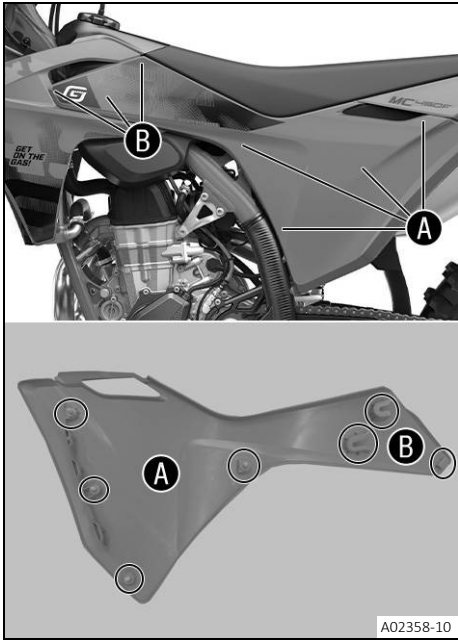

- Position the air filter box cover in area **B** and slide it forward.
- Press the air filter box cover in area **A** into the rubber bushings.

11.28 Securing the air filter box cover


Preparatory work

- Remove air filter box cover. (p. 62)

Main work

- Drill a hole at marking **A**.

Diameter	6 mm (0.24 in)
----------	-------------------

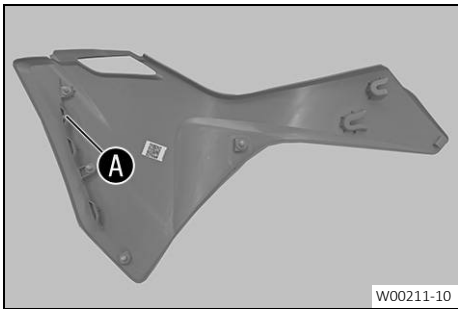

Reworking

- Install the air filter box cover. (p. 63)

11.29 Removing the air filter



NOTE

Engine failure Unfiltered intake air has a negative effect on the service life of the engine. Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.

- Only operate the vehicle if an air filter is correctly fitted.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Preparatory work

- Remove air filter box cover.  (p. 62)

Main work

- Detach tab **1**.
- Remove air filter with air filter support.
- Remove the air filter with the air filter support.



11.30 Installing the air filter




Main work

- Mount the clean air filter on the air filter support.

The marking on the air filter support must face upwards.

- Grease the air filter in area **A**.

Long-life grease  (p. 149)

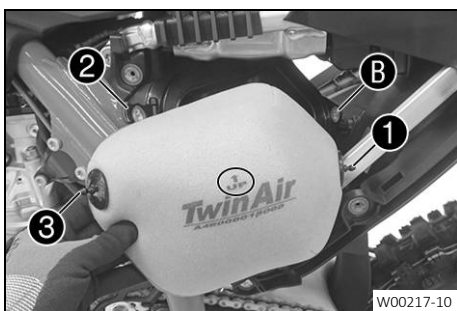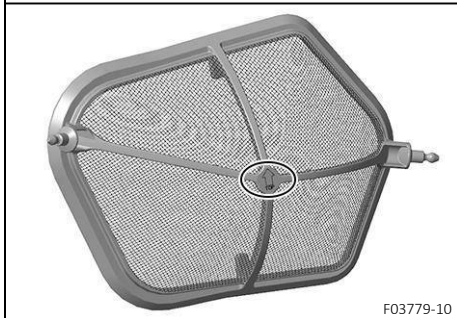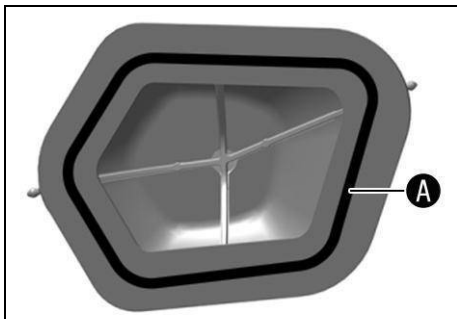

- Insert air filter and position retaining pin **1** in bushing **B**.

The marking on the air filter must face upwards.

✓ The air filter is correctly positioned.

- Attach tab **2**.

✓ Retaining pin **3** is secured by tab **2**.



Note

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Reworking

- Install the air filter box cover. 📖 (p. 63)

11.31 Cleaning the air filter and air filter box 🔧



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Do not clean the air filter with fuel or petroleum as these substances will damage the foam rubber.

Preparatory work

- Remove air filter box cover. 📖 (p. 62)
- Remove the air filter. 🔧 📖 (p. 64)

Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Only press the air filter to dry it, never wring it out.

Air filter cleaning agent 📖 (p. 151)

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter 📖 (p. 150)

- Clean the air filter box.
- Clean the intake flange and check it for damage and that it is firmly seated.

Reworking

- Install the air filter. 🔧 📖 (p. 65)
- Install the air filter box cover. 📖 (p. 63)



11.32 Removing the muffler




WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.


- Allow the exhaust system to cool down before performing any work on the vehicle.

Preparatory work

- Remove the frame protector. 📖 (p. 48)
- Remove the right side panel. 📖 (p. 61)

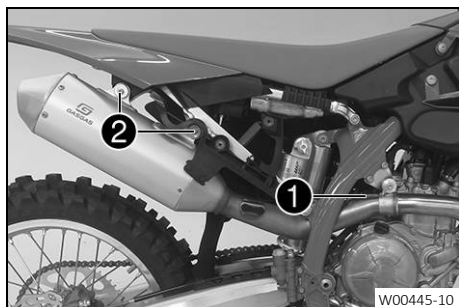**Main work**

- Detach spring ①.
- | |
|-----------------------------|
| Spring hook (50305017000C1) |
|-----------------------------|
- Remove screws ② with the washers and take off the main silencer.

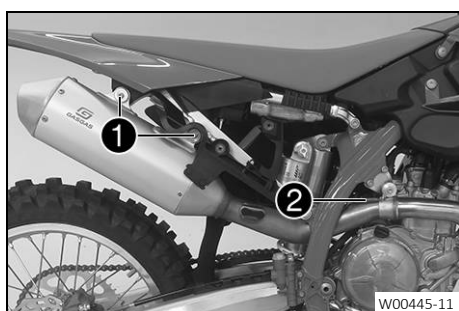**11.33 Installing muffler****Main work**

- Position the main silencer.
- Mount screws ① with washers, but do not tighten yet.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Attach spring ②.

Spring hook (50305017000C1)

- Tighten screws ①.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

Reworking

- Install the right side panel. 📖 (p. 62)
- Install the frame protector. 📖 (p. 49)

**11.34 Changing the damping material on the main silencer 🔧****WARNING**

Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.


**Note**

Over time, the fibers of the rock wool dissipate and the main silencer “burns out”.

Not only does this make the noise level higher, but the performance characteristics also change.

Preparatory work

- Remove the frame protector. 📖 (p. 48)
- Remove the right side panel. 📖 (p. 61)
- Remove the muffler. 📖 (p. 66)

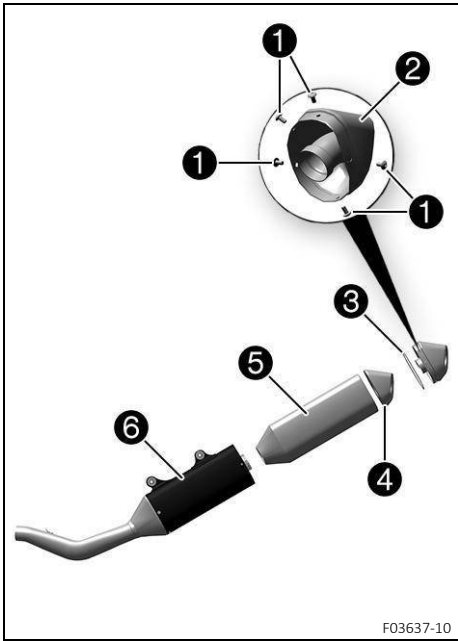

Main work

- Remove the screws 1 on the main silencer.
- Take off silencer cap 2 and O-ring 3.
- Pull damping material 4 out of the silencer cap.
- Pull damping material 5 off the inner tube.
- Clean the parts that need to be reinstalled and check for damage.
- Mount new damping material 5 on the inner tube.
- Position new damping material 4 in the silencer cap.
- Slide outer tube 6 over the inner tube with the new damping material.
- Place silencer cap with O-ring onto the outer tube.
- Mount and tighten screws 1.

Screws on muffler	
M5	7 Nm (5.2 ft·lb _r)

Reworking

- Install the muffler. (p. 67)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)

11.35 Removing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Preparatory work

- Remove air filter box cover.  (p. 62)
- Remove the seat.  (p. 59)
- Remove the frame protector.  (p. 48)
- Remove the right side panel.  (p. 61)


Main work

- Remove protection cap **1** of the fuel line.

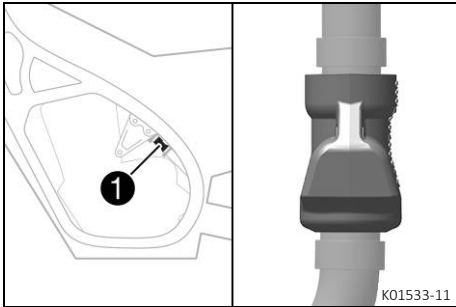

- Unplug socket connector **2** of the fuel pump.
- Clean quick-lock coupling **3** thoroughly with compressed air.

Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

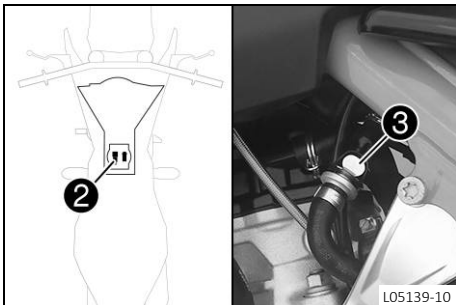

- Disconnect the quick-lock coupling.




Note

Remaining fuel may flow out of the fuel hose.


- Mount wash cap set **4**.

Wash cap set (81212016100)


- Pull the fuel tank vent hose off the fuel tank cap.

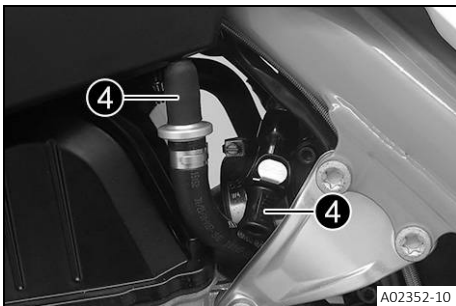


- Remove screw **5** with the rubber bushing.

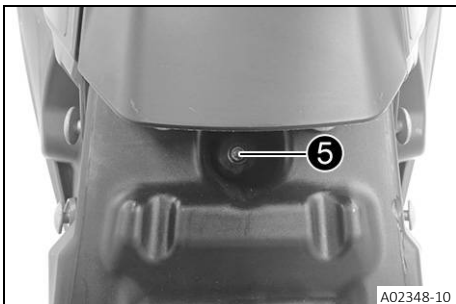

11 Service work on the chassis

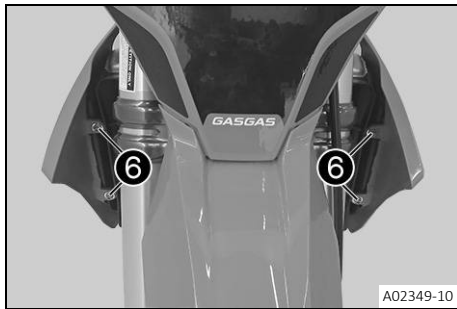

- Remove screws 6 with collar bushings.

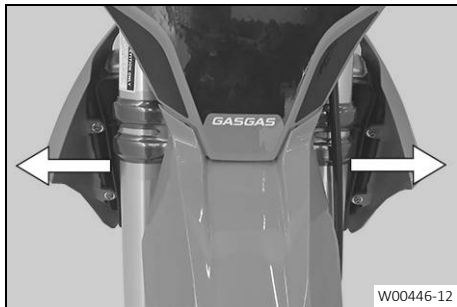

- Pull both spoilers laterally off the radiator and lift off the fuel tank.

11.36 Installing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



 
WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Main work


- Check the throttle cable routing.  (p. 77)



- Position the fuel tank and fit both spoilers to the side of the radiator.
- Make sure that no wires or cables are trapped or damaged.
- Attach the fuel tank vent hose to the fuel tank cap.
- Mount and tighten screws **1** with the collar bushings.

Screw, fuel tank spoiler on radiator


M6	6 Nm (4.4 ft·lb _f)
----	-----------------------------------

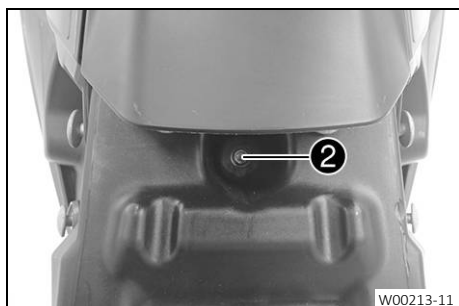

- Mount and tighten screw **2** with the rubber bushing.

Remaining screws on chassis

M6	10 Nm (7.4 ft·lb _f)
----	------------------------------------

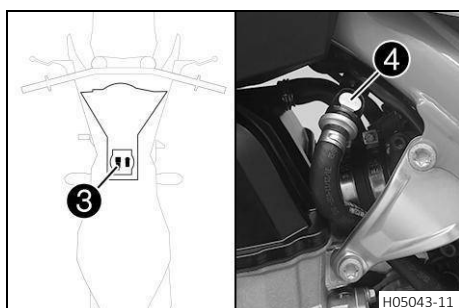

- Plug in fuel pump socket connector **3**.
- Remove the wash cap set and thoroughly clean the quick-lock coupling using compressed air.

 
Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 150)

- Join quick-lock coupling **4** of the fuel line.

Route the wire and fuel line at a safe distance from the exhaust system.




- Mount protection cap **5** of the fuel line.

Reworking

- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Mount the seat. (p. 60)
- Install the air filter box cover. (p. 63)



11.37 Checking the chain for dirt

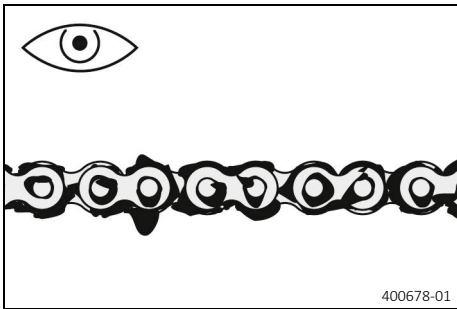

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain.  (p. 72)

11.38 Cleaning the chain



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)


Main work

- Rinse off the loose dirt with a gentle jet of water.
- Remove old grease residues with a chain cleaner.

Chain cleaner  (p. 151)

- After drying, apply chain spray.

Off-road chain spray  (p. 149)

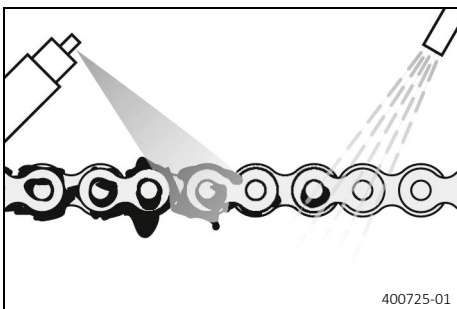

Reworking

- Remove the motorcycle from the lift stand.  (p. 46)

11.39 Checking the chain tension


WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain is too tight, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.


- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)

Main work

- Pull the chain at the end of the chain slider upward to measure chain tension **A**.

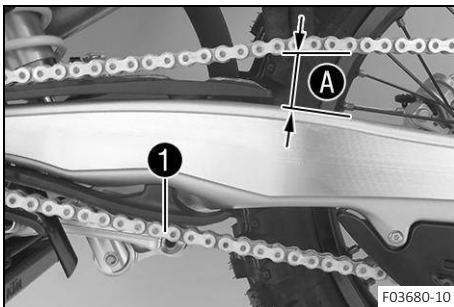

Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
Lower chain section 1 must be taut.	
Repeat this measurement at different chain positions.	


Note

Chains do not always wear evenly.

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (p. 73)

Reworking

- Remove the motorcycle from the lift stand. (p. 46)



11.40 Adjusting the chain tension


WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.


If the chain is too tight, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)
- Check the chain tension. (p. 73)

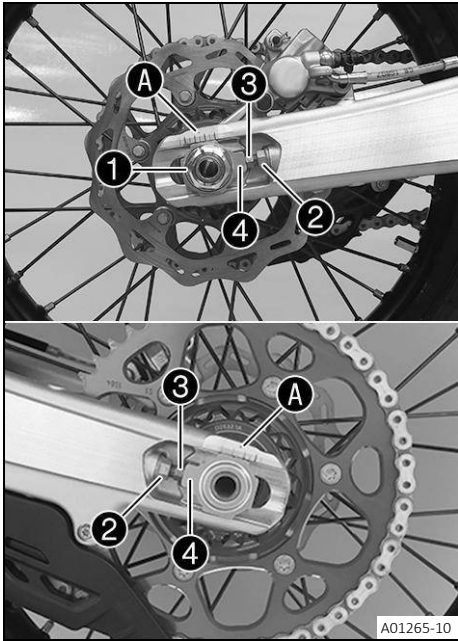

Main work

- Loosen nut 1.
- Loosen nuts 2.
- Adjust the chain tension by turning adjusting screws 3 on the left and right.

Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
Turn adjusting screws 3 on the left and right so that the markings on the left and right chain tension adjusters are in the same position relative to reference marks A. The rear wheel is then correctly aligned.	

- Tighten nuts 2.
- Make sure that chain tension adjusters 4 are fitted correctly on adjusting screws 3.
- Tighten nut 1.

Nut, wheel spindle, rear	
M22×1.5	80 Nm (59.0 ft·lb _r)

**Note**

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.
Chain tension adjusters 4 can be turned by 180°.

Reworking

- Remove the motorcycle from the lift stand.  (p. 46)

11.41 Checking the chain, rear sprocket, front sprocket, and chain guide


Preparatory work


- Raise the motorcycle with a lift stand.  (p. 46)

Main work

- Shift the transmission into the neutral position.
- Check the chain, rear sprocket, and front sprocket for wear.
 - » If the chain, rear sprocket, or front sprocket is worn:
 - Change the drivetrain kit. 

Always replace the front sprocket, rear sprocket, and chain together.

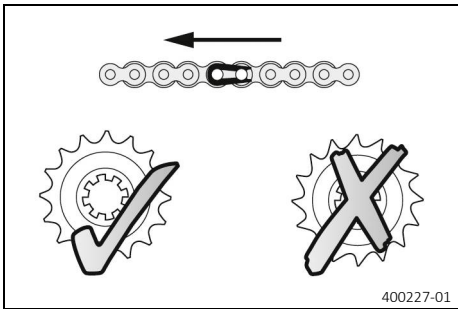

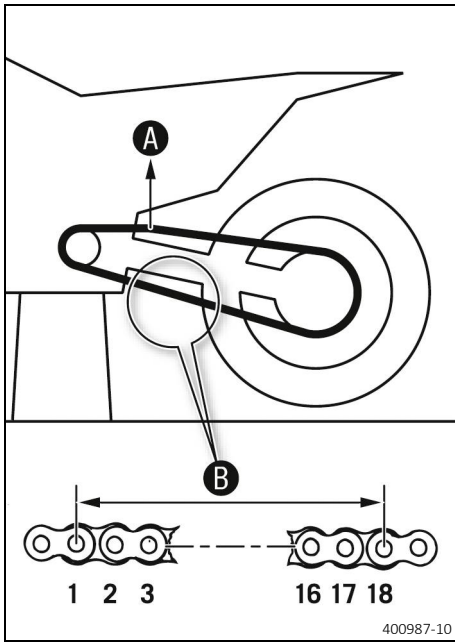

- Pull on the top section of the chain with the specified weight **A**.

Weight, chain wear measurement	10 kg ... 15 kg (22.0 lb ... 33.1 lb)
--------------------------------	--

- Measure distance **B** of chain rollers in the lower chain section.

Maximum distance B of chain rollers at the longest chain section	272 mm (10.71 in)
Repeat this measurement at different chain positions.	


Note
Chains do not always wear evenly.

- » If distance **B** is greater than the specified measurement:

- Change the drivetrain kit.


When installing a new chain, also replace the rear sprocket and front sprocket.

Note
New chains wear out faster on old, worn front or rear sprockets.

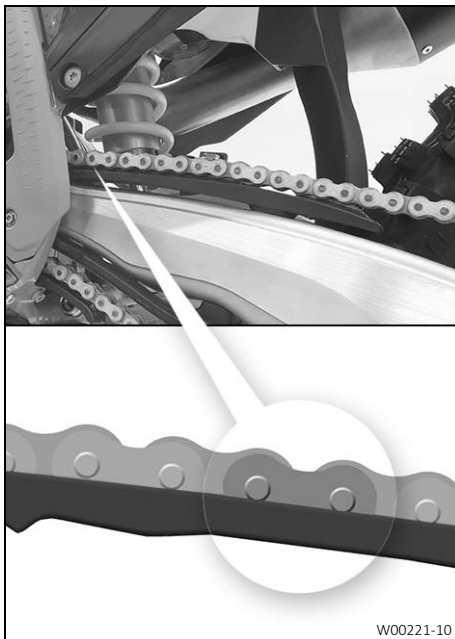


- Check the chain slider at the top for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain slider:
 - Change the chain slider.
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain sliding guard on link fork	
M6	6 Nm (4.4 ft·lb _f) Loctite® 243

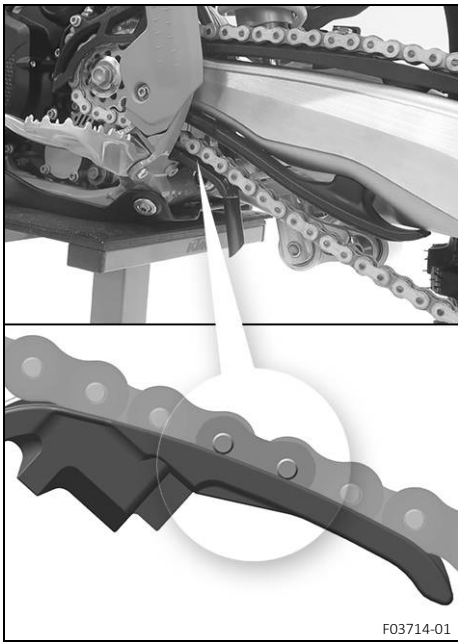

- Check the chain slider for wear.
 - » If the lower edge of the chain pins is in line with or below the chain slider:
 - Change the chain slider.
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain slider	
M8	15 Nm (11.1 ft·lb _r)

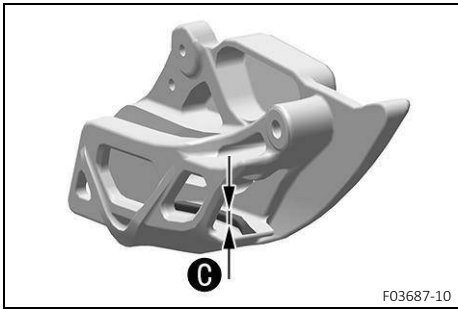

- Check the chain guide with a slide gage for dimension **C**.

Minimum thickness C of the chain guide	6 mm (0.24 in)
---	-------------------

 - » If the specifications have not been met:
 - Change the chain guide.

Minimum thickness C of the chain guide	6 mm (0.24 in)
---	-------------------



- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.

Screw, chain guide on swingarm, front	
M6×45	10 Nm (7.4 ft·lb _r)
Screw, chain guide on swingarm, rear	
M6×16	10 Nm (7.4 ft·lb _r)
Loctite® 243	

Reworking

- Remove the motorcycle from the lift stand. (p. 46)

11.42 Checking the frame



- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
 - Change the frame. 

Repairs on the frame are not permitted.

11.43 Checking the swingarm



- Check the swingarm for damage, cracks, and deformation.
 - » If the swingarm shows signs of damage, cracks, or deformation:
 - Change the swingarm. 

Repairs on the swingarm are not permitted.

11.44 Checking the throttle cable routing



WARNING

Danger of accidents The throttle cable can become kinked, jammed, or blocked if it has been routed incorrectly. If the throttle cable is kinked, jammed or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in the throttle cable complies with the specification.

Preparatory work

- Remove air filter box cover.  (p. 62)
- Remove the seat.  (p. 59)
- Remove the frame protector.  (p. 48)
- Remove the right side panel.  (p. 61)
- Remove the fuel tank.   (p. 68)

11 Service work on the chassis



Main work

- Check the throttle cable routing.


Both throttle cables must be routed to the throttle valve body side by side on the back of the handlebars and above the fuel tank roller. Both throttle cables must be secured behind the rubber strap of the fuel tank support.

- » If the throttle cable routing is not as specified:
 - Correct the throttle cable routing.

Reworking

- Install the fuel tank.   (p. 70)
- Install the right side panel.  (p. 62)
- Install the frame protector.  (p. 49)
- Mount the seat.  (p. 60)
- Install the air filter box cover.  (p. 63)

11.45 Checking the rubber grips

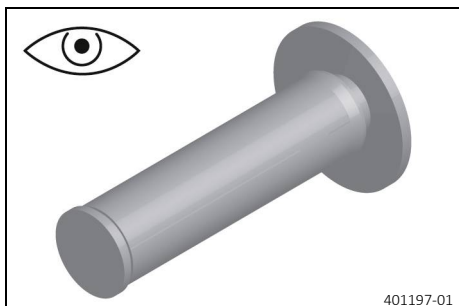

- Check the hand grips on the handlebar for damage, wear, and that they are firmly seated.




Note

The hand grips are vulcanized onto a sleeve on the left and onto the grip tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar.

The hand grip can only be replaced with the sleeve or the gas pipe.

- » If a hand grip is damaged or worn:
 - Replace the hand grip.

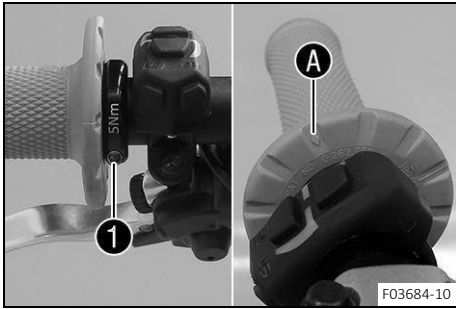


- Check that screw **1** is firmly seated.

Screw, fixed grip	
M4	5 Nm (3.7 ft·lb _f)
Loctite® 243	

Diamond **A** must be positioned visibly as shown in the figure.

11.46 Adjusting the basic position of the clutch lever

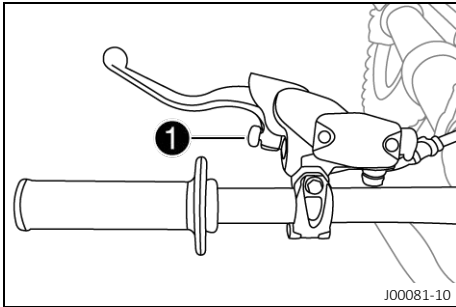

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw **1**.

Only turn the adjusting screw by hand, and do not use force. Do not make any adjustments while riding.



Note

When the adjusting screw is turned counterclockwise, the clutch lever moves closer to the handlebar.

When the adjusting screw is turned clockwise, the clutch lever moves away from the handlebar.

The range of adjustment is limited.

11.47 Checking/correcting the fluid level of hydraulic clutch



WARNING

Health hazard Brake fluid is a harmful substance.


- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Note

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

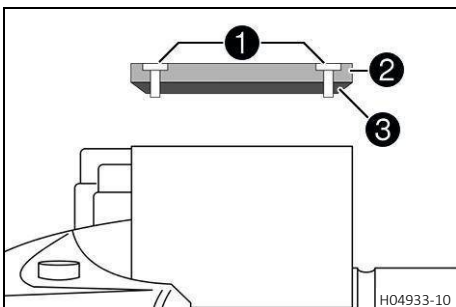

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove **1** screws.
- Take off cover **2** with diaphragm **3**.
- Check the fluid level.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------

- » If the fluid level does not meet the specifications:
 - Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 5.1  (p. 150)
- Position the cover with diaphragm. Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.

11.48 Changing the hydraulic clutch fluid



WARNING
Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.




NOTE
Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note
The fluid level rises with increasing wear of the friction plates.
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

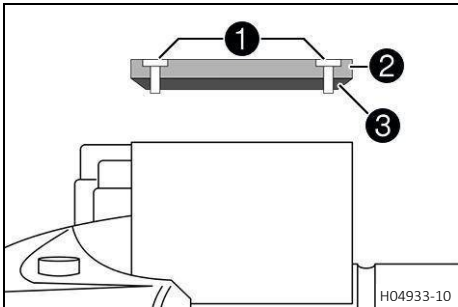

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.

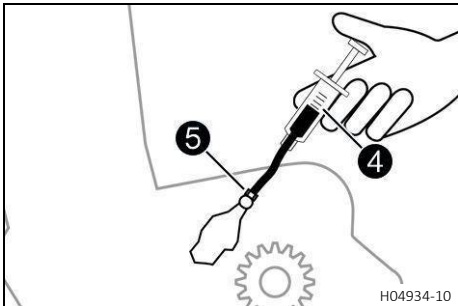

- Fill bleeding syringe 4.
- Syringe (50329050000)
Brake fluid DOT 5.1  (p. 150)
- On the clutch slave cylinder, remove the protection cap and mount bleeding syringe 4 with an appropriate hose piece on bleeder screw 5.
 - Only loosen bleeder screw 5 on the clutch slave cylinder until filling is possible.

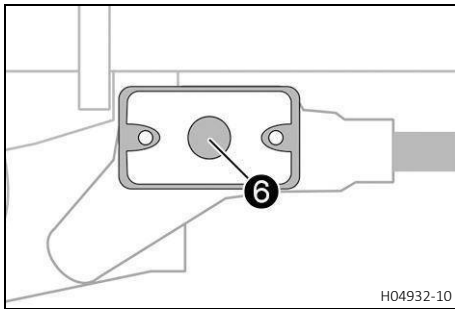

- Inject the liquid into the system until it escapes from bore ⑥ of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Tighten the bleed screw and remove the bleeding syringe with the hose. Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------

- Position the cover with diaphragm.
- Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.



12.1 Checking the free travel on the hand brake lever




WARNING

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

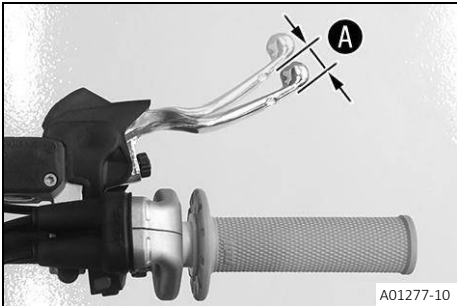


- Push the hand brake lever forward and check free travel **A**.

Free travel of hand brake lever	$\geq 3\text{ mm}$ ($\geq 0.12\text{ in}$)
---------------------------------	---

- » If the free travel does not meet the specifications:
 - Adjust the basic position of the hand brake lever.
 (p. 82)

12.2 Adjusting the basic position of the hand brake lever

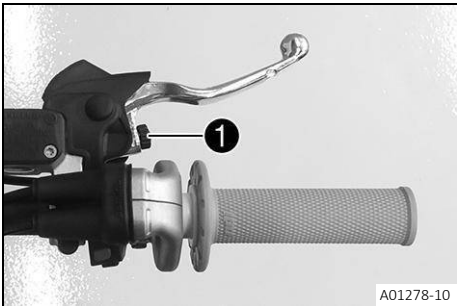

- Adjust the basic position of the hand brake lever to your hand size by turning adjusting screw **1**.

Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.



Note

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.

The range of adjustment is limited.


12.3 Checking the brake discs



WARNING

Danger of accidents Worn-out brake discs reduce the braking action.

- Make sure that worn-out brake discs are replaced immediately.

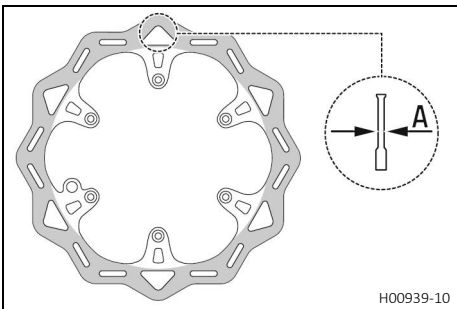

- Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement **A**.

Brake disc wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)



Note

Wear reduces the thickness of the brake discs at the contact surface of the brake pads.

- » If the brake disc thickness is less than the specification:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.
- Check the front and rear brake discs for damage, cracks, and deformation.
 - » If the brake disc shows signs of damage, cracks, or deformation:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.



12.4 Checking the brake fluid level for the front brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.


- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

Preparatory work

- Check that the brake pads of the front brake are secured.
 (p. 85)

Main work

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in sight glass **1**.
 - » If the brake fluid level has fallen below marking **A**:
 - Add brake fluid for the front brake. (p. 84)

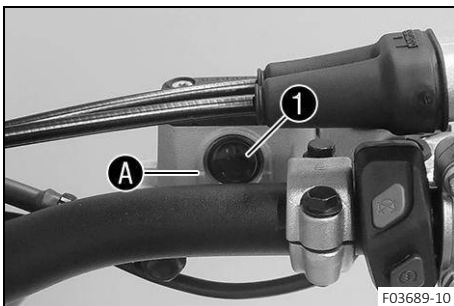

12.5 Adding brake fluid for the front brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the front brake are secured.

 (p. 85)

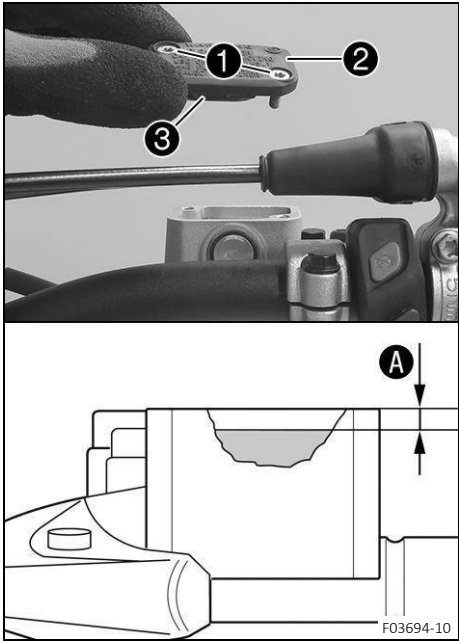

Main work

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove ① screws.
- Take off cover ② with diaphragm ③.
- Add brake fluid up to level A.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
---	-------------------

Brake fluid DOT 5.1  (p. 150)
--

- Position cover ② with diaphragm ③. Mount and tighten screws ①.

Immediately clean up any brake fluid that has overflowed or spilled with water.


12.6 Checking that the brake pads of the front brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

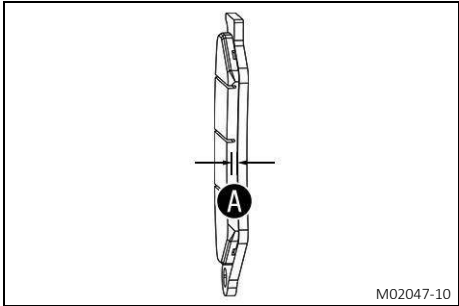

- Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)
-------------------------	-----------------------

- » If it is less than the minimum thickness:
 - Change the front brake pads.   (p. 85)
- Check the brake pads for damage and cracking.
 - » If there is damage or cracking:
 - Change the front brake pads.   (p. 85)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.

12.7 Changing the brake pads of the front brake



WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.

12 Brake system



WARNING

- Danger of accidents** Incorrect servicing will cause the brake system to fail.
- Ensure that service work and repairs are performed professionally.



WARNING

- Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.
- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
 - Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

- Danger of accidents** Oil, grease or wax on the brake discs reduces the brake action.
- Always keep the brake discs free of oil, fat and wax.
 - Clean the brake discs with brake cleaner when necessary.



WARNING

- Health hazard** Brake fluid is a harmful substance.
- Keep brake fluid out of the reach of children.
 - Wear suitable protective clothing and safety glasses.
 - Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
 - Consult a doctor immediately if brake fluid has been ingested.
 - Rinse the affected area with plenty of water in the event of contact with the skin.
 - Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
 - If brake fluid spills on to your clothing, change the clothing.




NOTE

- Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

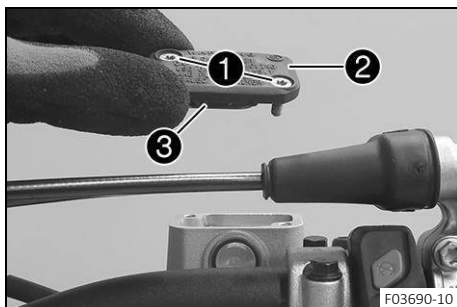


- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove ① screws.
- Take off cover ② with diaphragm ③.




- Remove ④ screws.
- Press the brake pads back by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper up and off the brake disc.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake reservoir, extract some brake fluid if necessary.


Do not operate the hand brake lever if the brake caliper has been removed.

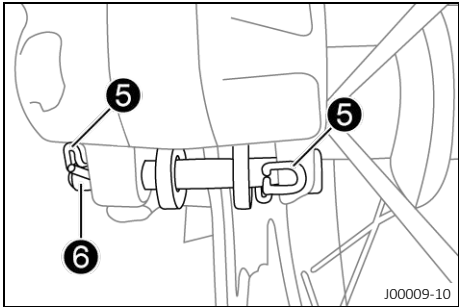

- Remove cotter pin 5, pull out stud 6, and remove the brake pads.
- Clean brake caliper and brake caliper support.

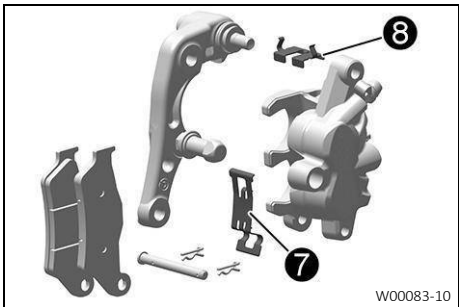

- Check that spring steel clip 7 in the brake caliper and brake pad guide plate 8 in the brake caliper support are properly seated.

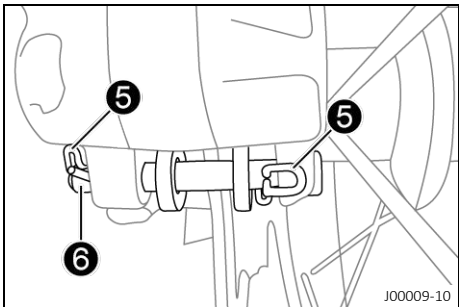


- Insert the new brake pads, mount stud 6 and cotter pins 5.

Mount the outer cotter pins from the front to the rear.
Mount the inner cotter pins from the rear to the front.
Replace brake pads in sets.
Make sure the brake pads and retaining spring are properly seated.




Tip
To make it easier to mount the stud, push the brake pads upward against the retaining spring.

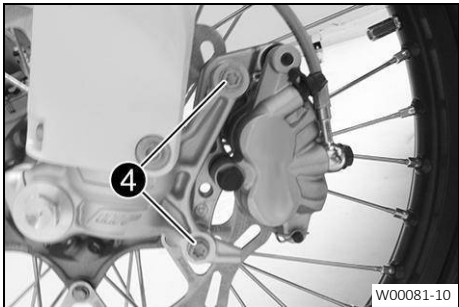

- Position the brake caliper.
- Mount and tighten screws 4.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is reached.

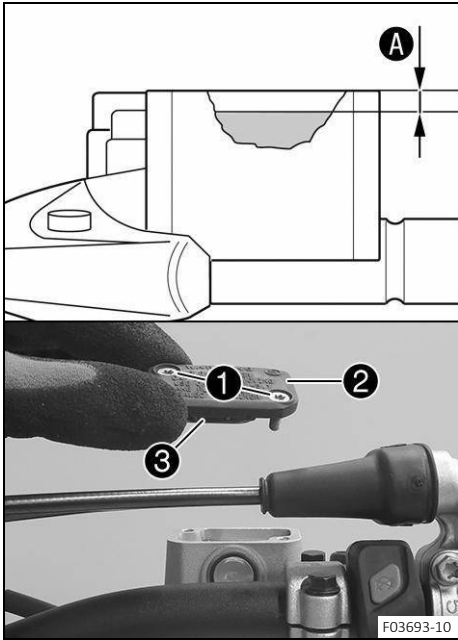

- Add brake fluid to level **A**.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
--	-------------------

Brake fluid DOT 5.1  (p. 150)
--

- Position cover **2** with diaphragm **3**.
- Mount and tighten screws **1**.

Immediately clean up any brake fluid that has overflowed or spilled with water.

12.8 Checking the free travel of the brake pedal




WARNING

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

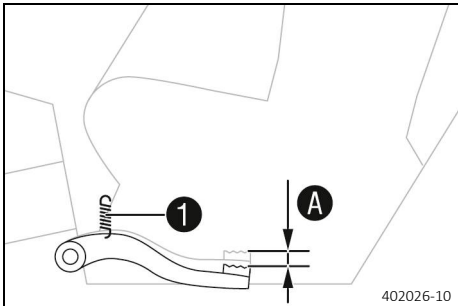

- Detach spring **1**.
- Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston actuation and check free travel **A**.

Free travel of brake pedal	3 mm ... 5 mm (0.12 in ... 0.20 in)
----------------------------	--

- » If the free travel does not meet the specifications:
 - Adjust the basic position of the brake pedal.   (p. 88)
- Attach spring **1**.

12.9 Adjusting the basic position of the brake pedal




WARNING

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

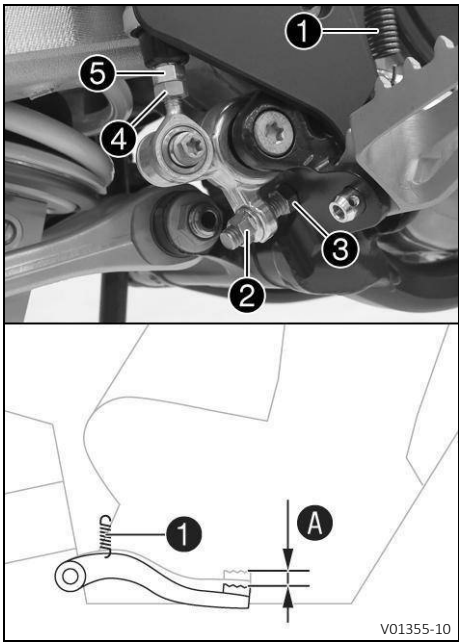

- Detach spring 1.
- Loosen nut 4 and unscrew it with push rod 5 until you have maximum free travel.
- To adjust the basic position of the brake pedal to individual requirements, loosen nut 2 and turn screw 3 accordingly.

i **Note**

The range of adjustment is limited.

- Turn push rod 5 accordingly until you have free travel A. If necessary, adjust the basic position of the brake pedal.

Free travel of brake pedal	3 mm ... 5 mm (0.12 in ... 0.20 in)
----------------------------	--

- Hold push rod 5 and tighten nut 4.

Remaining nuts on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Hold screw 3 and tighten nut 2.

Brake pedal stop nut	
M8	20 Nm (14.8 ft·lb _f)

- Attach spring 1.



12.10 Checking the brake fluid level for the rear brake

WARNING
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.


- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

WARNING
Danger of accidents An insufficient brake fluid level will cause the brake system to fail.
If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

Preparatory work

- Check that the brake pads of the rear brake are secured. (p. 91)

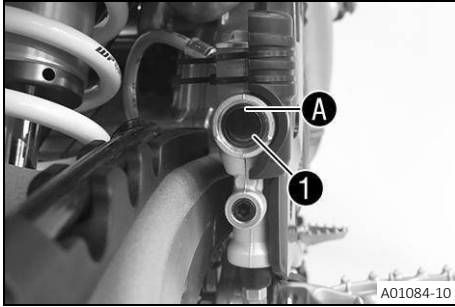

Main work

- Stand the vehicle upright.
- Check the brake fluid level in sight glass **1**.
 - » If the brake fluid level has fallen below marking **A**:
 - Add brake fluid for the rear brake. (p. 90)

12.11 Adding brake fluid for the rear brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the rear brake are secured. (p. 91)
- Remove the frame protector. (p. 48)

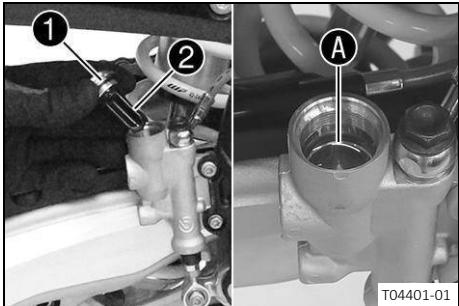

Main work

- Stand the vehicle upright.
- Remove screw cap 1 with diaphragm 2 and the O-ring.
- Add brake fluid to mark A.

Brake fluid DOT 5.1 (p. 150)

- Mount and tighten the screw cap with the membrane and O-ring.

Immediately clean up any brake fluid that has overflowed or spilled using water.

Reworking

- Install the frame protector. (p. 49)

 
12.12 Checking that the brake pads of the rear brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.



- Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)
-------------------------	-----------------------

- » If it is less than the minimum thickness:
 - Change the rear brake pads. (p. 91)
- Check the brake pads for damage and cracking.
 - » If there is damage or cracking:
 - Change the rear brake pads. (p. 91)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.

12.13 Changing the rear brake pads



WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note



Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work


- Remove the frame protector.  (p. 48)

Main work


- Stand the vehicle upright.
- Remove screw cap ❶ with diaphragm ❷ and the O-ring.

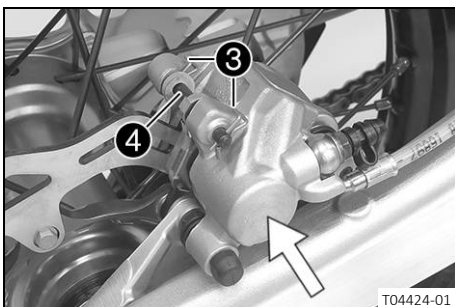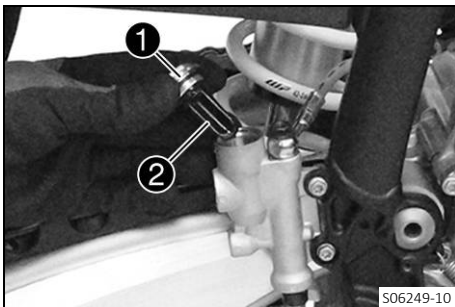

- Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake reservoir, and siphon off excess if required.
- Remove cotter pins ❸, pull out pin ❹, and remove the brake linings.
- Clean brake caliper and brake caliper support.

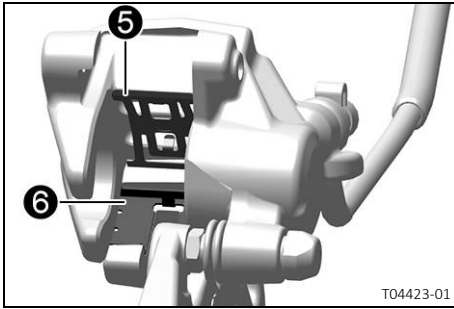

- Check that spring steel clip **5** in the brake caliper and brake pad guide plate **6** in the brake caliper support are properly seated.
- ✓ The arrow on the spring steel clip points in the rotation direction of the brake disc.

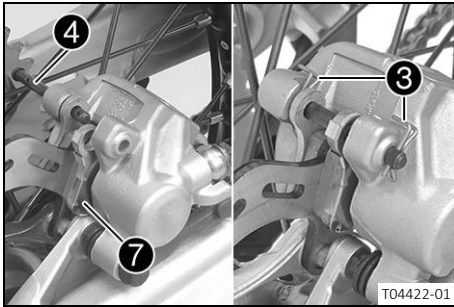


- Insert the new brake linings, insert pin **4**, and mount cotter pins **3**.

Always replace brake pads in sets.

Make sure that decoupling plate **7** is mounted on the piston side brake lining.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

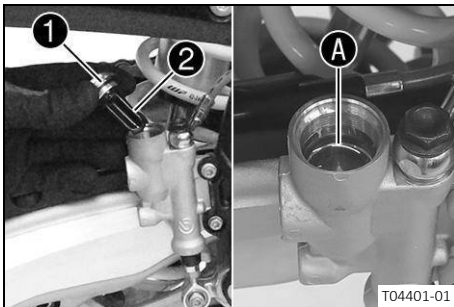

- Correct brake fluid level to marking **A**.

Brake fluid DOT 5.1 (p. 150)

- Mount and tighten screw cap **1** with membrane **2** and the O-ring.

Immediately clean up any brake fluid that has overflowed or spilled with water.

Reworking

- Install the frame protector. (p. 49)



13.1 Removing the front wheel

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 46)

Main work

- Manually press the brake caliper toward the brake disc to push back the brake pistons.

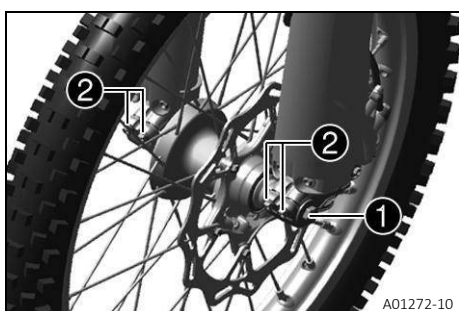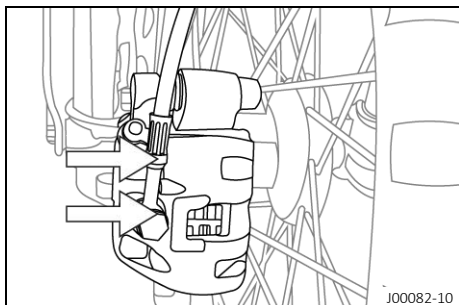

 - Loosen screw **1** by four turns.
- Loosen screws **2**.
- Press on screw **1** to push the wheel spindle out of the fork shoe.
- Remove screw **1**.




WARNING

Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

Do not actuate the hand brake lever when the front wheel is removed.

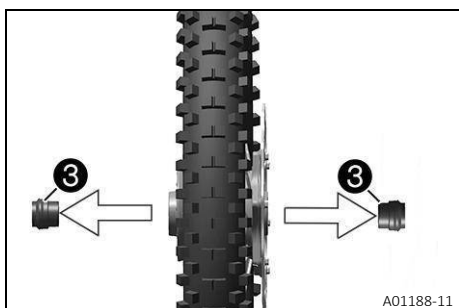


- Remove spacers **3**.

13.2 Installing the front wheel


WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

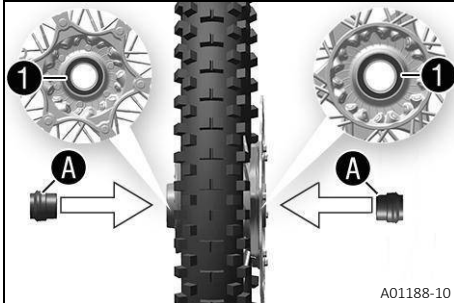

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing.
- Clean and grease radial shaft seal (1) and contact surfaces (A) on the spacers.

Long-life grease (p. 149)

- Insert spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 149)

- Position the front wheel and insert the wheel spindle.
 - ✓ The brake pads are positioned correctly.

- Mount and tighten screw (2).

Screw, wheel spindle, front

M20×1.5


35 Nm
(25.8 ft·lb_f)

- Operate the hand brake lever several times until the brake pads are in contact with the brake disc.
- Remove the motorcycle from the lift stand. (p. 46)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws (3).

Screw, fork shoe

M8

15 Nm
(11.1 ft·lb_f)


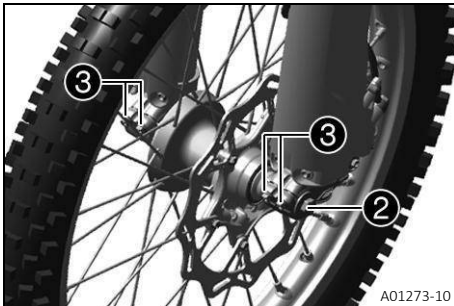


13.3 Removing the rear wheel

Preparatory work

- Raise the motorcycle with a lift stand. (p. 46)

 13 Wheels, tires

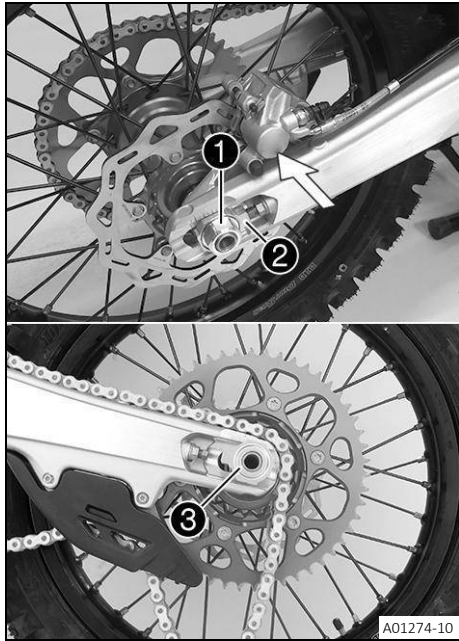

Main work

- Manually press the brake caliper toward the brake disc to push back the brake pistons.
- Remove nut ①.
- Remove chain tension adjuster ②. Pull out wheel spindle ③ far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.

Protect the components against damage by covering them.



WARNING

Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold the rear wheel and remove wheel spindle. Take the rear wheel out of the swingarm.

Do not actuate the brake pedal when the rear wheel is removed.

- Remove spacers ④.

 
13.4 Installing the rear wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.




Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease (p. 149)


- Insert spacers.

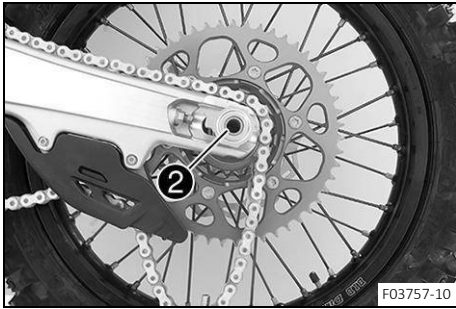

- Clean and lightly grease the wheel spindle.

Long-life grease  (p. 149)

- Position the rear wheel and insert wheel spindle **2**.
✓ The brake pads are positioned correctly.
- Attach the chain.

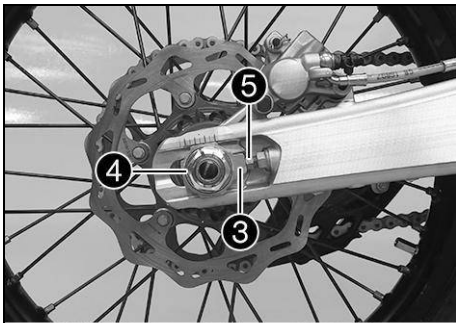

- Position chain tension adjuster **3**.
- Mount nut **4** but do not tighten yet.
- Make sure that chain tension adjusters **3** are fitted correctly on adjusting screws **5**.
- Check the chain tension.  (p. 73)
- Tighten nut **4**.

Nut, wheel spindle, rear

M22×1.5

80 Nm
(59.0 ft·lb.)



Note

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters **3** can be turned by 180°.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

Reworking

- Remove the motorcycle from the lift stand.  (p. 46)



13.5 Checking the tire condition



Note

Only fit tires approved and/or recommended by GASGAS.

Other tires could have a negative effect on handling characteristics.



The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle.

The tires mounted on the front and rear wheels must have a similar profile.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 46)

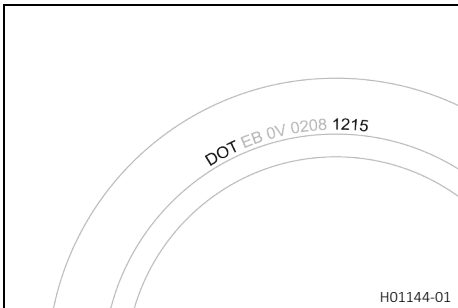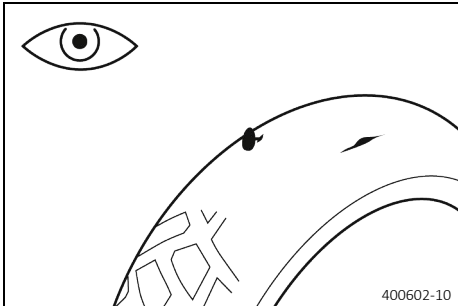

Main work

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires. 
- Check the tire age.



Note

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture. GASGAS recommends that the tires be changed after five years at the latest, regardless of the actual wear.

- » If the tires are older than five years:
 - Change the tires. 

Reworking


- Remove the motorcycle from the lift stand.  (p. 46)

13.6 Checking the tire pressure



Note

Low tire pressure leads to abnormal wear and the tire overheating. Correct tire pressure ensures optimal riding comfort and maximum tire service life.

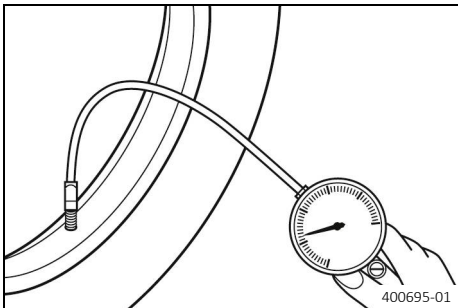

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Off-road tire pressure	
front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

- » If the tire pressure does not meet specifications:
 - Correct tire pressure.
- Mount the protection cap.

13.7Checking the spoke tension




WARNING

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.

Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

- Check the spoke tension regularly, especially on a new vehicle.

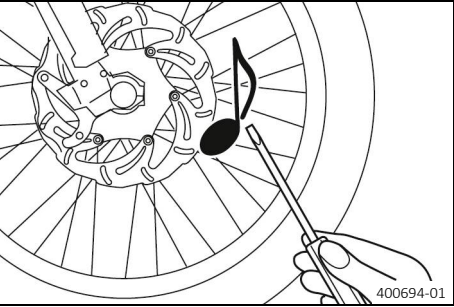

- Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.



Note

The frequency of the sound depends on the spoke length and spoke diameter.

If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

- » If the spoke tension differs:
 - Correct the spoke tension. 
- Check the spoke torque.

Spoke nipple, front wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Spoke nipple, rear wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Torque wrench kit (58429094000)	



14.1 Removing the 12 V battery



WARNING

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------

- Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.



CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

- Allow the regulator rectifier to cool down before performing any work.



NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.



NOTE

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.


Preparatory work

- Remove air filter box cover.  (p. 62)
- Remove the seat.  (p. 59)


Main work

- Disconnect negative cable **1** from the 12 V battery.
- Pull back positive terminal cover **2** and disconnect positive cable **3** from the 12-V battery.

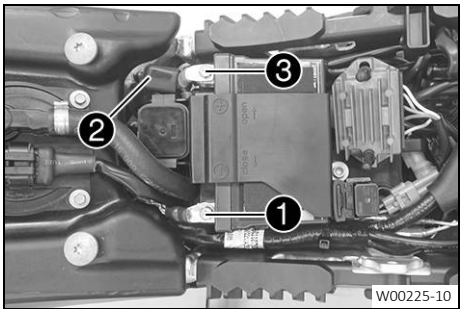

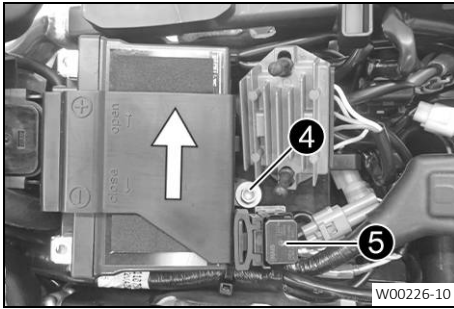

- Remove screw ④.
- Remove relay ⑤ from the holder and hang it to the side.
- Slide the battery holding bracket to the side out of the attachment.

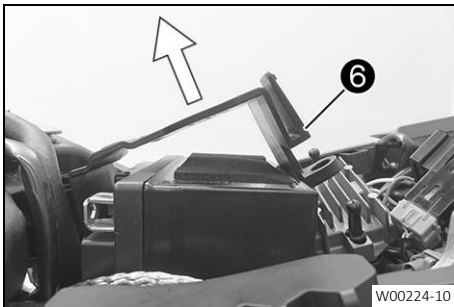


- Pull up battery holding bracket ⑥ and remove the 12-V battery to the rear.

Pay attention to the wiring harness.


14.2 Installing the 12 V battery

Main work

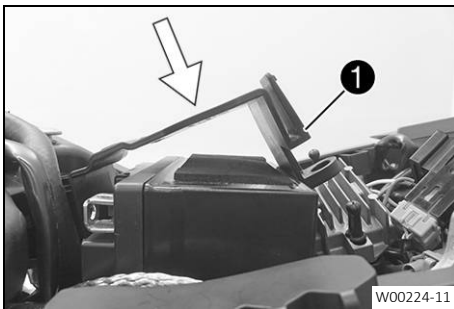

- Pull up battery holding bracket ①, insert the 12-V battery into the battery compartment with the terminals facing upwards and secure with battery holding bracket ①.

Ensure that the cable is routed correctly.

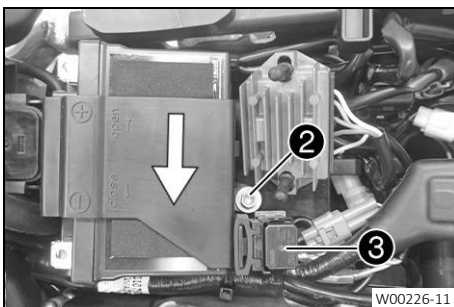


- Slide the battery holding bracket into the attachment.
- Mount and tighten screw ②.

Screw, battery holding bracket

M6

6 Nm
(4.4 ft·lb_f)

- Attach relay ③ in the holder.

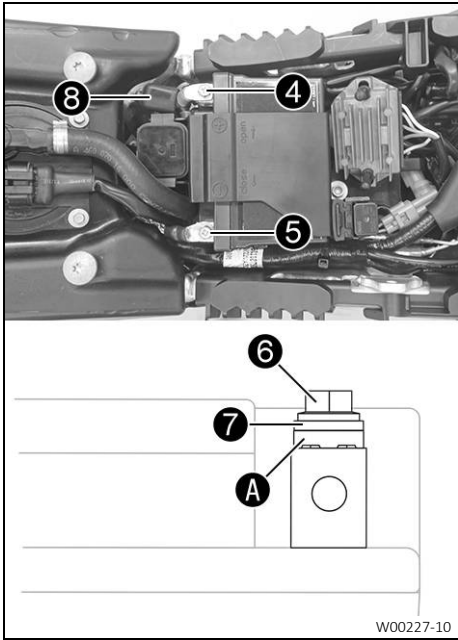

- Connect positive cable 4 to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

- Connect negative cable 5 to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

Contact disks A must be mounted under screws 6 and cable lug 7 with the claws toward the battery terminal.

- Slide positive terminal cover 8 over the positive terminal.

Reworking

- Mount the seat. (p. 60)
- Install the air filter box cover. (p. 63)

14.3 Charging the 12 V battery



WARNING

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------

- Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.



NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

Even when there is no load on the 12 V battery, it discharges steadily each day.

The state of charge and the method of charging are very important for the service life of the 12 V battery.

Rapid recharging with a high charging current shortens the service life of the battery.


If the charging current, charging voltage, or charging time is exceeded, the 12 V battery will be destroyed.

If the 12 V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.

The 12 V battery is maintenance-free.

Preparatory work

- Remove air filter box cover.  (p. 62)
- Remove the seat.  (p. 59)
- Remove the 12 V battery.   (p. 100)

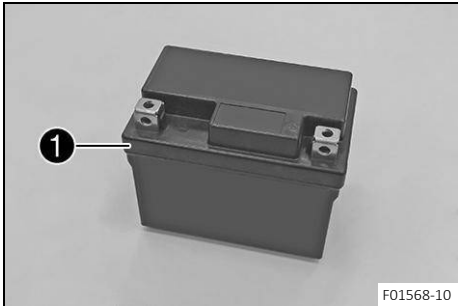

Main work

- Do not remove cover 1.
- Check the battery voltage.
 - » Battery voltage:
 - < 9 V
 - Do not charge the 12 V battery.
 - Replace the 12 V battery and dispose of the old 12 V battery properly.
 - » If the specifications have been met:
 - Battery voltage:
 - ≥ 9 V
 - Connect a charger to the 12 V battery. Switch the charger on.

Read the accompanying instructions.	
Maximum charging voltage	14.4 V
Minimum charging voltage	3.0 A
Maximum charging time	12 h
The charging current, charging voltage, and charging time must not be exceeded.	
Recharge the 12 V battery regularly when the motorcycle is not being used.	3 months
If the 12 V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.	

Work material (Alternative 1 / 2)
Battery charger (26529974000)
Work material (Alternative 2 / 2)
(US) battery charger (26529974500)

**Note**

This charger tests whether the 12 V battery retains its voltage. It is also impossible to overcharge the 12 V battery with this charger. The charging time may be longer at low temperatures.
These chargers are only suitable for lithium iron phosphate batteries.

- Switch off the charger after charging and disconnect from the 12 V battery.

Reworking

- Install the 12 V battery.   (p. 101)
- Mount the seat.  (p. 60)
- Install the air filter box cover.  (p. 63)

14.4 Changing the main fuse



WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

- Allow the regulator rectifier to cool down before performing any work.



Note


The main fuse protects all electrical power loads of the vehicle. The main fuse is located in the starter relay housing under the seat.


Preparatory work

- Remove air filter box cover. (p. 62)
- Remove the seat. (p. 59)
- Remove the frame protector. (p. 48)
- Remove the right side panel. (p. 61)
- Remove the fuel tank. (p. 68)

Main work

- Pull starter relay **1** off of the bracket.

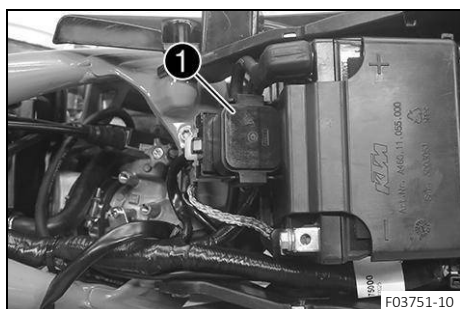

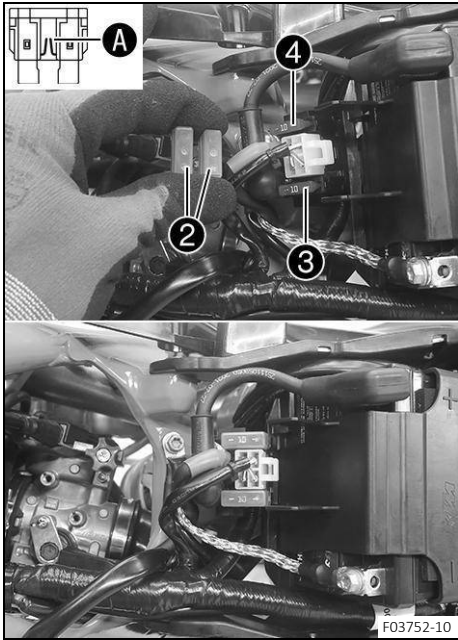

- Remove protection caps ②.
- Remove faulty main fuse ③.

Note
A faulty fuse has a burned-out fuse wire ①.
A spare fuse ④ is located in the starter relay.

- Insert the main fuse.
Fuse (58011109110)
- Check that the electrical equipment is functioning properly.

Tip
Insert a new spare fuse so that it is available if needed.

- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

Reworking

- Install the fuel tank. (p. 70)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Mount the seat. (p. 60)
- Install the air filter box cover. (p. 63)


14.5 Changing the fuse of the fuel pump

WARNING
Fire hazard Incorrect fuses overload the electrical system.
– Use only fuses with the prescribed amperage.
– Do not bypass or repair fuses.

CAUTION
Danger of burns The regulator rectifier gets very hot when the vehicle is operated.
– Allow the regulator rectifier to cool down before performing any work.

Note
The fuel pump is protected by the fuel pump fuse. This is located under the seat.

- Preparatory work**
- Remove air filter box cover. (p. 62)
 - Remove the seat. (p. 59)

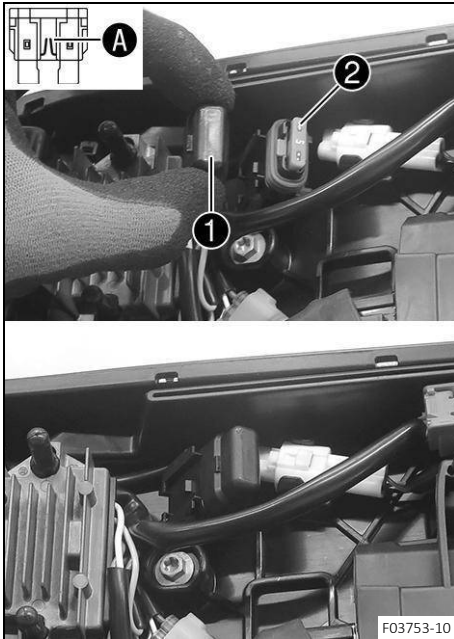**Main work**

- Remove protection cap ①.
- Remove faulty main fuse ②.

**Note**

A faulty fuse has a burned-out fuse wire ①.


- Put in the new fuse for the fuel pump.

Fuse (58011109105)

- Check that the electrical equipment is functioning properly.
- Attach the protection cap.

Reworking

- Mount the seat. (p. 60)
- Install the air filter box cover. (p. 63)

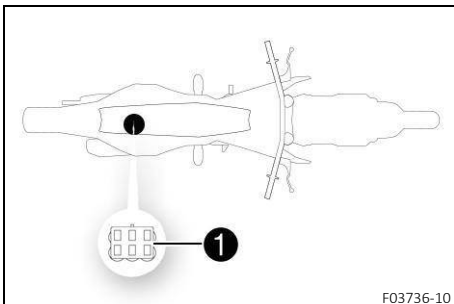**14.6 Diagnostic connector**


Diagnostics connector ① is located under the seat.

**Note**

As soon as the diagnostics tool is connected, the hourmeter starts running.

Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

15.1 Cooling system

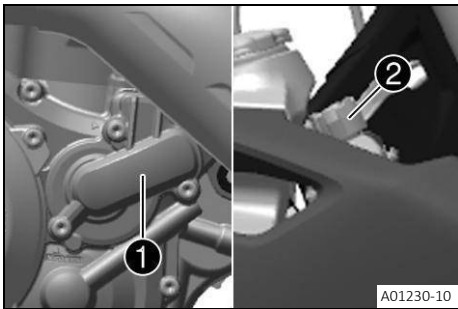

Water pump 1 in the engine circulates the coolant.
The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap 2.
The coolant is cooled by the air stream.
The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the frost protection and coolant level

WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

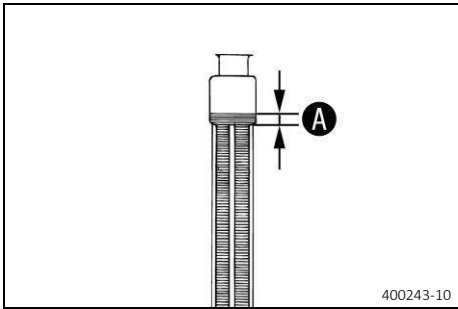

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the frost protection in the coolant.

–45 °C ... –25 °C
(–49.0 °F ... –13.0 °F)

» If the frost protection in the coolant does not match the specified value:
 - Correct the frost protection in the coolant.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
---	--------------------

- » If the coolant level does not meet the specifications:
- Correct the coolant level.

coolant	
Coolant  (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.



15.3

Checking the coolant level



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.




WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

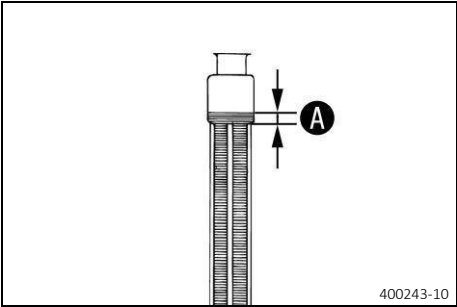

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the coolant level in the radiator.

Coolant level  above the radiator fins	10 mm (0.39 in)
---	--------------------

- » If the coolant level does not meet the specifications:
- Correct the coolant level.

coolant	
Coolant  (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.



15.4 Draining the coolant



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.




WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

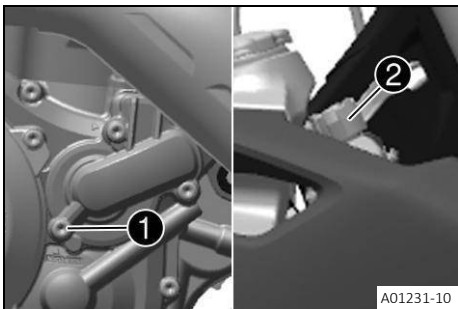

Main work

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw **1**. Take off radiator cap **2**.
- Completely drain the coolant.
- Mount screw **1** with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _r)


15.5 Refilling the coolant



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

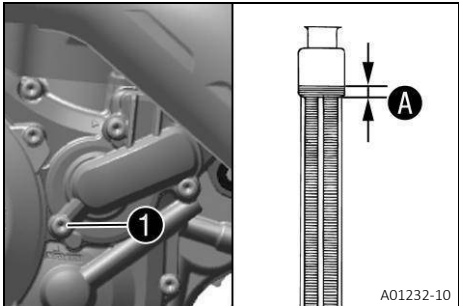

Main work

- Make sure that screw 1 is tightened.
- Stand the motorcycle upright.
- Pour coolant in up to level A above the radiator fins.

Distance A above the radiator fins	10 mm (0.39 in)
coolant	
Coolant (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.
- Go for a short test ride.
- Check the coolant level. (p. 109)



15.6 Changing the coolant

WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.


- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

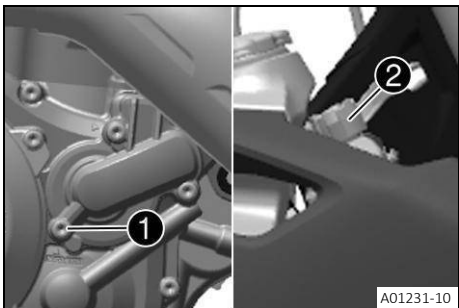

Main work

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw 1. Take off radiator cap 2.
- Completely drain the coolant.

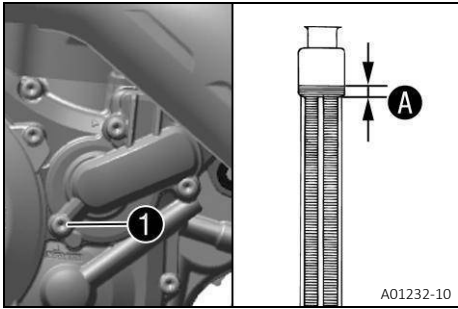

- Mount screw 1 with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _f)


- Pour coolant in up to level A above the radiator fins.

Distance A above the radiator fins	10 mm (0.39 in)
------------------------------------	--------------------

coolant	
Coolant (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

- Mount the radiator cap.
- Go for a short test ride.
- Check the coolant level. (p. 109)

16.1 Checking the play in the throttle cable

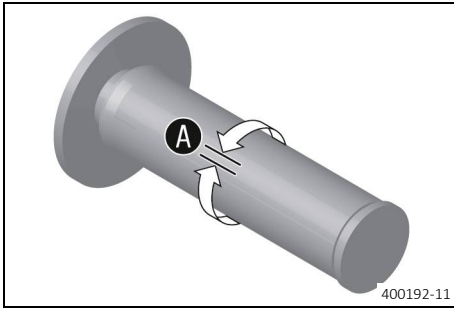

- Check the throttle for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- » If the throttle cable play does not meet the specified value:
 - Adjust the throttle cable play. (p. 113)
- Press the cold start button in all the way to the stop.
 - ✓ When the throttle twist grip is turned forward, the cold start button jumps back to the start position.
 - » If the cold start button does not return to its original position:
 - Adjust the throttle cable play. (p. 113)



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar back and forth over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the throttle cable play. (p. 113)



16.2 Adjusting the throttle cable play




Note

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

Preparatory work

- Remove air filter box cover. (p. 62)
- Remove the seat. (p. 59)
- Remove the frame protector. (p. 48)
- Remove the right side panel. (p. 61)
- Remove the fuel tank. (p. 68)
- Check the throttle cable routing. (p. 77)

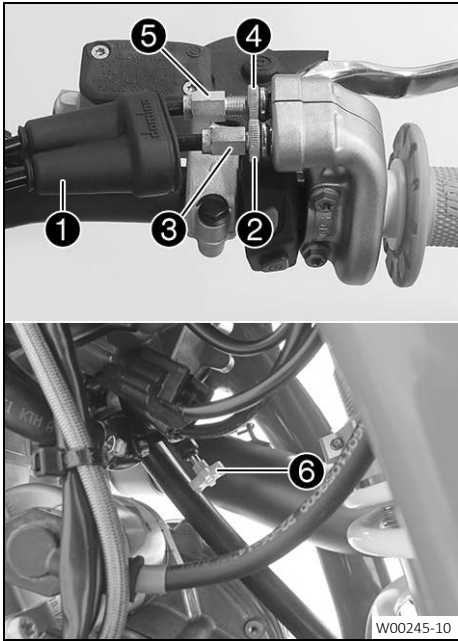

Main work

- Move the handlebar to the straight-ahead position.
- Push back boot 1.
- Loosen nut 2.
- Screw adjusting screw 3 in as far as possible.
- Loosen nut 4.
- Press cold start button 6 all the way to the stop.
- Turn adjusting screw 5 so that the cold start button moves to the basic position when the throttle twist grip is turned forward.
- Tighten nut 4.
- Turn adjusting screw 3 so that there is play in the throttle cable at the throttle twist grip.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- Tighten nut 2.
- Slide on boot 1.
- Check the throttle grip for smooth operation.

Reworking

- Check the play in the throttle cable. (p. 113)
- Install the fuel tank. (p. 70)
- Install the right side panel. (p. 62)
- Install the frame protector. (p. 49)
- Mount the seat. (p. 60)
- Install the air filter box cover. (p. 63)


16.3 Adjusting the characteristic map of the throttle response


Note

On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate. A guide plate with a different characteristic map is supplied.

Main work

- Push back boot 1.
- Remove screws 2 and half-shells 3.
- Detach the throttle cables and take off the grip tube.

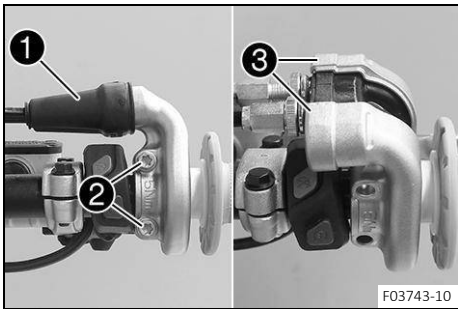

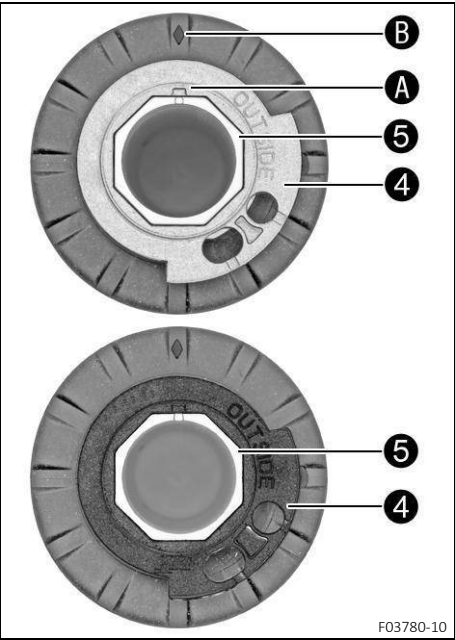

- Remove guide plate 4 from handle tube 5.
- Position the required guide plate on the grip tube.


The **OUTSIDE** label must be visible. Marking **A** must be positioned at marking **B**.

Gray guide plate (A48002014000)

Work material (Alternative 1 / 1)

Black guide plate (A46002014000)

Note
The gray guide plate opens the throttle valve more slowly.
The black guide plate opens the throttle valve more quickly.
The gray guide plate is mounted upon delivery.

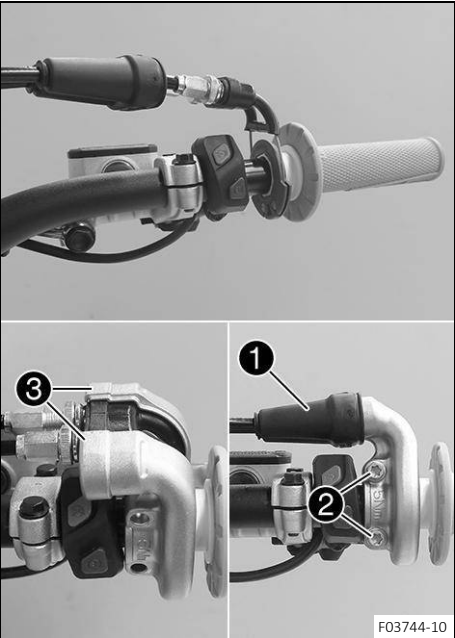

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.
- Position half-shells 3, mount and tighten screws 2.

Screw, throttle twist grip

M6	5 Nm (3.7 ft·lb _f)
----	-----------------------------------

- Slide on sleeve 1 and check the throttle grip for ease of movement.

Reworking

- Check the play in the throttle cable. (p. 113)



16.4 Adjusting the idle speed



WARNING

Danger of accidents The engine may suddenly come to a halt if the idle speed is set too low.

- Set the idle speed to the specified value.

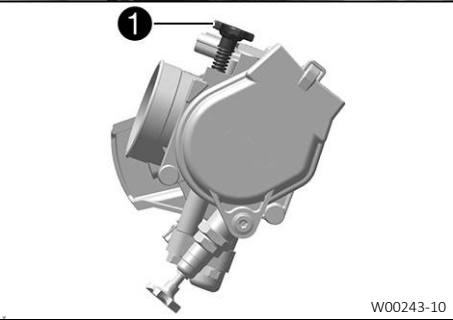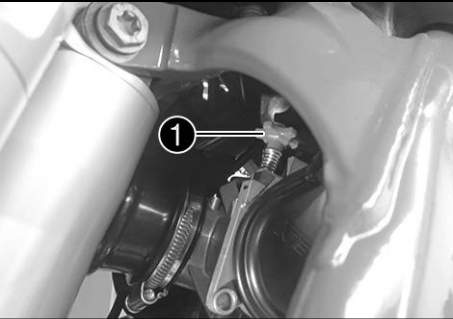

- Run the engine until warm.
- ✓ The cold start button is in the basic position.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjustment screw  using a suitable rpm gage.

Idle speed	2,100 rpm ... 2,200 rpm (35.00 Hz ... 36.67 Hz)
------------	--



Note


Turning counterclockwise lowers the idle speed.
Turning clockwise increases the idle speed.

16.5 Programming the throttle valve position



Note

If the control unit detects that the throttle valve position at idle speed needs to be reprogrammed, then the malfunction indicator lamp flashes 2x per second.

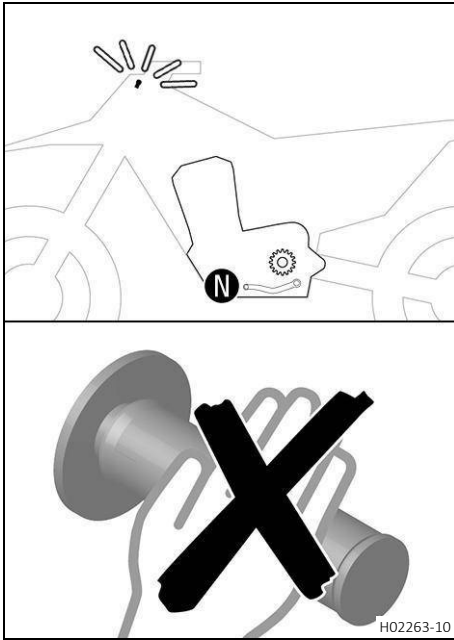
DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Allow the vehicle to run at idle speed.
- ✓ The malfunction indicator lamp stops flashing once programming is completed.


Note

If the engine becomes too warm, perform a cool-down ride at medium speed.

After this, do not switch off the engine, but leave it running at idle speed until the programming is finished.




16.6 Checking the basic position of the gear shift lever


Note

When driving, the gear shift lever must not touch the rider's boot when in the basic position.

When the gear shift lever keeps touching the boot, the transmission will be subject to an excessive load.

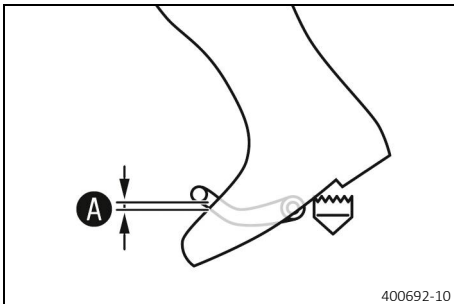

- Sit on the vehicle in the riding position and measure the distance **A** between the upper edge of your boot and the shift lever.

Distance between the gear shift lever and upper edge of boot	10 mm ... 20 mm (0.39 in ... 0.79 in)
--	--


» If the distance does not meet the specifications:

- Adjust the basic position of the gear shift lever. 


 (p. 117)



16.7 Adjusting the basic position of the gear shift lever

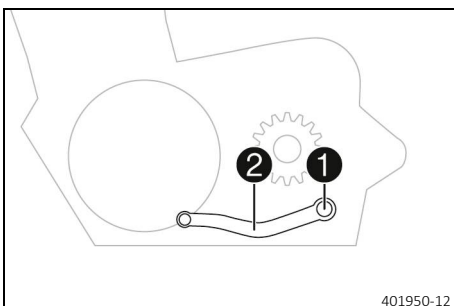

- Remove screw **1** with the washers and take off shift lever **2**.

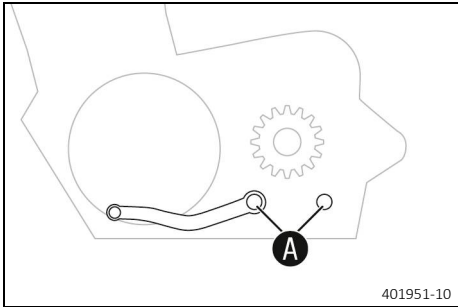

- Clean gear teeth **A** of the shift lever and shift shaft.
- Mount the gear shift lever on the shift shaft in the desired position and engage the tothing.

The gear shift lever must not come into contact with any other vehicle components during the shift procedure.



Note

The range of adjustment is limited.

- Mount and tighten screw **1** with washers.

Screw, shift lever	
M6×16	14 Nm (10.3 ft·lb _f)
Loctite® 243	

17.1 Changing the fuel screen **DANGER****Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.


- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.

**WARNING****Danger of poisoning** Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.


**NOTE****Environmental hazard** Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

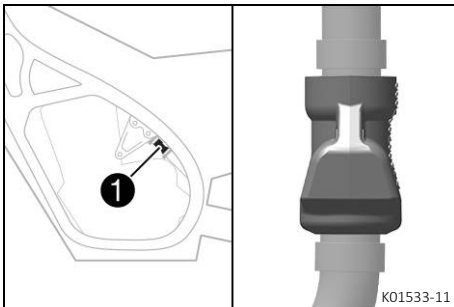

- Remove protection cap **1** of the fuel line.

17 Service work on the engine

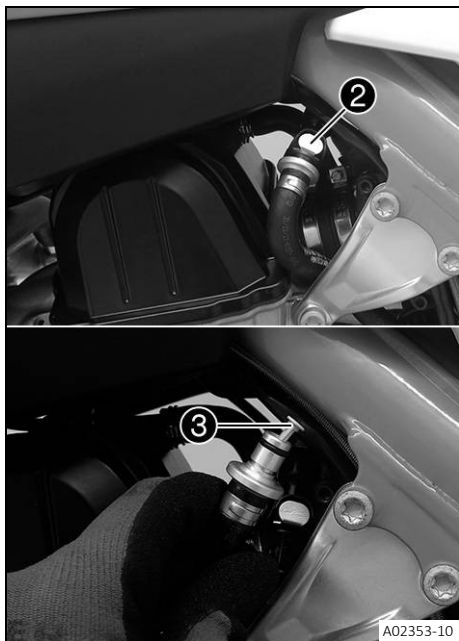

- Clean quick-lock coupling ② thoroughly with compressed air.

Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Disconnect the quick-lock coupling.



Note

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen ③ out of the connecting piece.
- Slide the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray 📖 (p. 150)


- Join quick-lock couplings.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

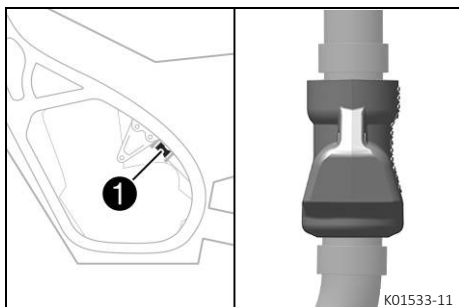

- Start the engine and check the response.
- Mount protection cap ① of the fuel line.

17.2 Checking the engine oil level



Note

The engine oil level can be checked when the engine is cold or warm.


Preparatory work

- Stand the motorcycle upright on a level surface.

Main work

- Select one of the following alternatives.

Condition: The engine is cold

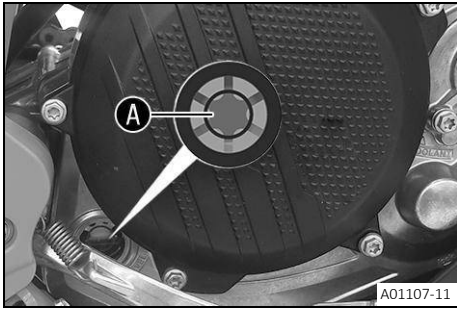


- Check the engine oil level.

The engine oil reaches the middle of level viewer **A**.

- » If the engine oil does not reach the middle of level viewer **A**:
 - Add engine oil. (p. 124)

Condition: The engine is at operating temperature

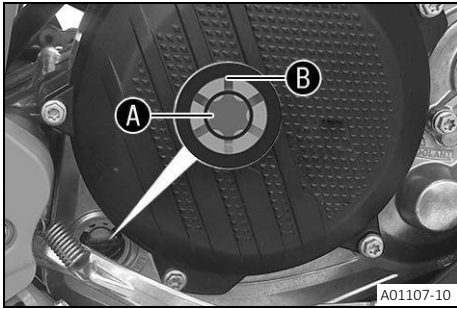

- Check the engine oil level.

The engine oil level is between the middle of the level viewer **A** and the upper edge of the level viewer **B**.

After switching off the engine, wait one minute before checking the level.

- » If the engine oil does not reach the middle of level viewer **A**:
 - Add engine oil. (p. 124)

17.3 Changing the engine oil and oil filter, cleaning the oil screens



WARNING

Danger of scalding Engine and gear oil heat up when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.


Condition: The engine is at operating temperature

Preparatory work


- Park the motorcycle on a level surface.

Main work

- Position an appropriate container under the engine.
- Remove oil drain plug **1** with the magnet and seal ring.

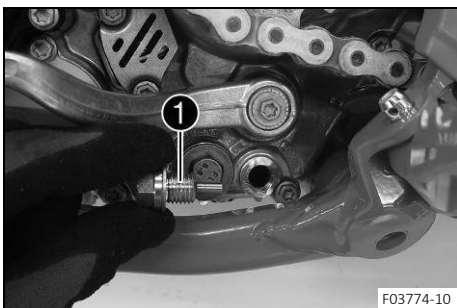


17 Service work on the engine

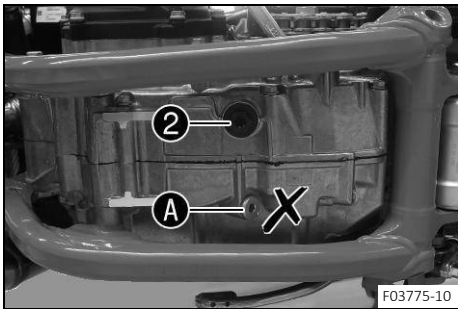


- Remove screw plug 2 with O-ring.

Do not remove screw A.

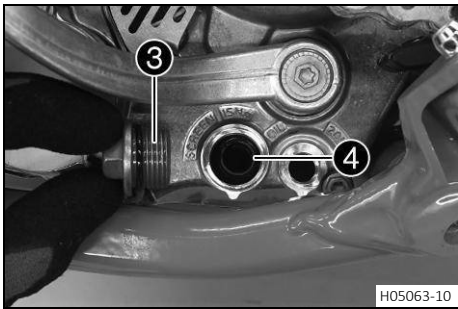

- Remove screw plug 3 with long oil screen 4 and the O-rings.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.

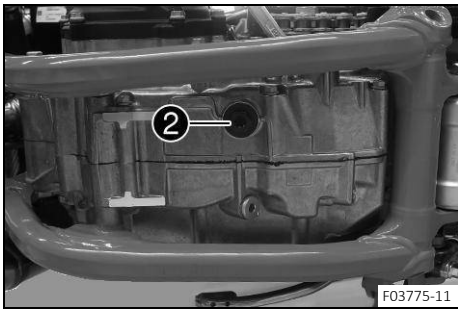


- Mount and tighten screw plug 2 with O-ring.


Screw plug, crankcase

M16×1.5

15 Nm
(11.1 ft·lb_f)

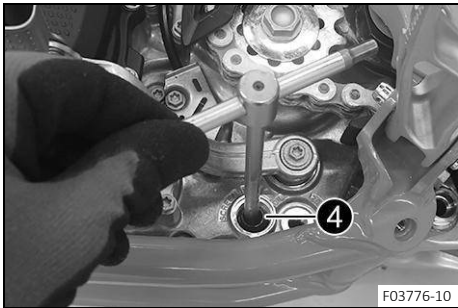

- Position long oil screen 4 with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

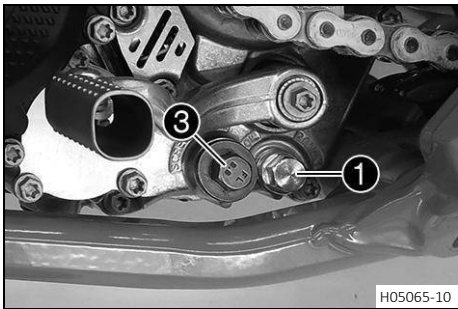

- Mount and tighten screw plug 3 with O-ring.

Plug, oil screen

M20×1.5


15 Nm
(11.1 ft·lb_f)

- Mount and tighten oil drain plug 1 with the magnet and a new seal ring.


Oil drain plug with magnet

M12×1.5

20 Nm
(14.8 ft·lb_f)

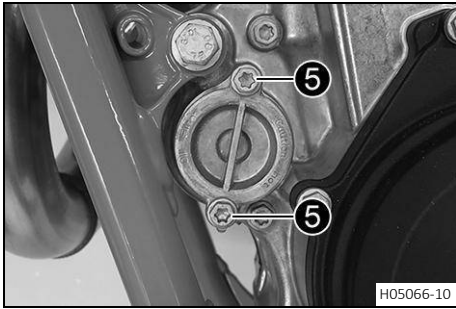


- Remove screws **5**. Take off the oil filter cover with the O-ring.

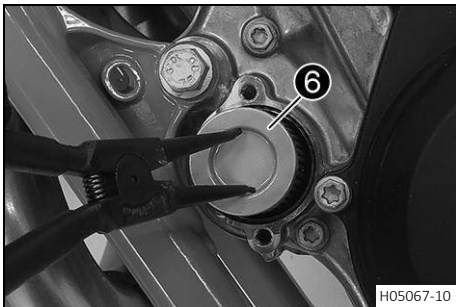

- Pull oil filter **6** out of the oil filter housing.

Lock ring plier (51012011000)

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.

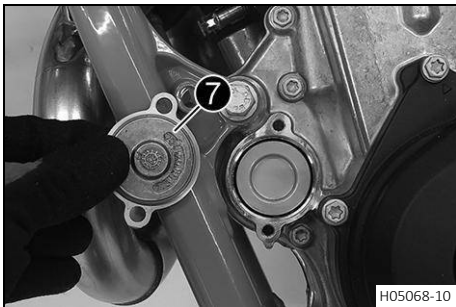

- Lay the motorcycle on its side and fill the oil filter housing to about $\frac{1}{3}$ full with engine oil.
- Place the oil filter into the oil filter housing.
- Lubricate the O-ring of the oil filter cover and mount it with oil filter cover **7**.
- Mount and tighten the screws.

Screw, oil filter cover	
-------------------------	--

M6×16	10 Nm (7.4 ft·lb _f)
-------	------------------------------------

- Stand the motorcycle upright.
- Remove filler plug **8** with the O-ring, and fill up with engine oil.

engine oil	
------------	--

Engine oil (10W/50)	1.20 l
---------------------	--------

(p. 149)	(0.317 liq. gal _{US})
----------	---------------------------------

fully synthetic	
-----------------	--



Note

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

- Mount and tighten the oil plug together with the O-ring.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.


- Start the engine and check it for leaks.

Reworking

- Check the engine oil level.  (p. 120)

17.4 Adding engine oil

Note
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

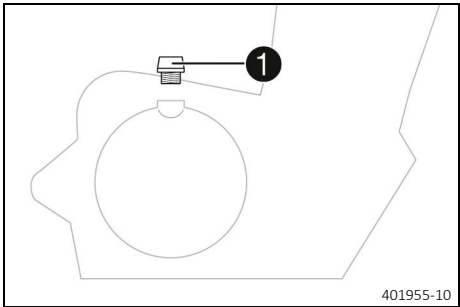

Main work

- Remove oil plug **1** with O-ring.
- Add the same engine oil used when the last oil change was carried out.

engine oil	
Engine oil (10W/50)  (p. 149) fully synthetic	1.20 l (0.317 liq. gal _{US})

Note
For optimal performance of the engine oil, do not mix different types of engine oil.
GASGAS recommends changing the engine oil, if necessary.

- Mount and tighten the oil plug together with the O-ring.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

- Check the engine oil level.  (p. 120)

18.1Cleaning the motorcycle

**NOTE**

Material damage Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly. The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc. Too high a pressure can cause malfunctions and destroy components.

- Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
- Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm (23.6 in)
------------------	--------------------


**NOTE**

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

To maintain the value and appearance of the motorcycle over a long period, clean it regularly.
Avoid direct sunshine when cleaning the motorcycle.

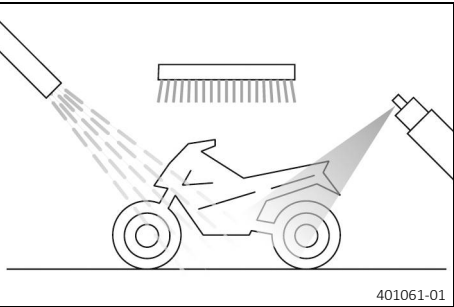

- Seal the exhaust system to prevent water from entering into it.
 - Remove loose dirt first with a soft jet of water.
 - Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.
- Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.
- Environmentally neutral universal cleaning agent  (p. 151)

**Note**

Use warm water containing standard motorcycle cleaner and a soft sponge.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the cover from the exhaust system.

**WARNING**

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.

**Note**

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

- Push back the protection caps of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, lubricate all moving parts and pivot points.
- Clean the chain.  (p. 72)



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials  (p. 151)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors  (p. 151)

19.1 Storage



WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



Note

If the vehicle will not be ridden for an extended period, additional steps are recommended.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less overload of the authorized partner). This allows you to avoid long waiting periods when the next season starts.

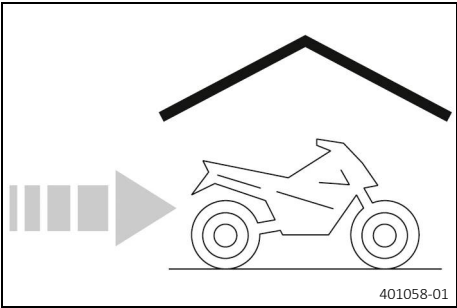

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.
- | | |
|---------------|--|
| Fuel additive |  (p. 148) |
|---------------|--|
- Refuel.  (p. 30)
- 

Tip

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.
- Clean the motorcycle.  (p. 125)
 - Change the engine oil and the oil filter, clean the oil screens.   (p. 121)
 - Check the frost protection and coolant level.  (p. 108)
 - Check the tire pressure.  (p. 98)
 - Remove the 12 V battery.   (p. 100)
 - Charge the 12 V battery.   (p. 102)
- | | |
|---|--|
| Ideal charging and storage temperature of the lithium-ion battery | 10 °C ... 20 °C
(50.0 °F ... 68.0 °F) |
|---|--|
- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.
- 

Note

GASGAS recommends jacking up the motorcycle.
- Raise the motorcycle with a lift stand.  (p. 46)

- Cover the vehicle with a tarpaulin or similar cover that is permeable to air.

 


Note

Do not use non-porous materials because they prevent humidity from escaping and thus cause corrosion.

Avoid running the engine of a motorcycle in storage for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

19.2 Preparing for use after storage



- Install the 12 V battery. (p. 101)
- Remove the motorcycle from the lift stand. (p. 46)
- Perform checks and maintenance measures when preparing for use. (p. 26)
- Take a test ride.

20.1 Troubleshooting

Cause	Finding	Remedy		
The engine does not turn over when the start button is actuated	Operating error 12 V battery discharged Plug-in connector of the start button disconnected or oxidized Cable connection on starter motor disconnected, loose or oxidized Main fuse blown Starter relay defective Starter motor defective	– Carry out the starting procedure.  (p. 26) – Charge the 12 V battery.   (p. 102) – Check the charging voltage.  – Check the open-circuit current.  – Check the stator winding of the alternator.  – Check the plug-in connector of the start button. – Check the cable connection on the starter motor. – Change the main fuse.  (p. 105) – Check the starter relay.  – Check the starter motor. 		
The engine turns but does not start	Quick-lock coupling not joined Lack of fuel Fuel screen in the quick-lock coupling is clogged Idle speed is not set correctly Spark plug sooty or wet Crankshaft speed sensor disconnected Ground connection of the ignition coil loose or oxidized Plug gap of spark plug too wide Short-circuit cable in wiring harness frayed, kill switch faulty Malfunction in the electronic fuel injection	– Join quick-lock couplings. – Refuel.  (p. 30) – Change the fuel screen.   (p. 119) – Adjust the idle speed.   (p. 116) – Clean and dry the spark plug and spark plug connector, or change if necessary. – Check plug-in connector of the crankshaft speed sensor. – Check the ground connection of the ignition coil. – Adjust plug gap.<table border="1" data-bbox="900 1151 1313 1218"><tr><td>Plug gap of spark plug</td><td>1.0 mm (0.039 in)</td></tr></table> – Check the wiring harness. (Visual check). – Check the electrical system. – Read out the fault memory using the diagnostics tool. 	Plug gap of spark plug	1.0 mm (0.039 in)
Plug gap of spark plug	1.0 mm (0.039 in)			
Engine does not speed up	Malfunction in the electronic fuel injection	– Read out the fault memory using the diagnostics tool. 		
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Malfunction in the electronic fuel injection Exhaust system leaks, deformed or too little glass fiber filling in the silencer Valve clearance too little	– Clean the air filter and air filter box.   (p. 66) – Change the fuel filter.  – Read out the fault memory using the diagnostics tool.  – Check exhaust system for damage. – Change the damping material on the main silencer.   (p. 67) – Adjust the valve clearance.		
The engine dies during the trip	Lack of fuel Faulty contacts in ignition coil or stator	– Refuel.  (p. 30) – Check ignition coil and stator cables.		

Cause	Finding	Remedy
Engine overheats	Too little coolant in cooling system Too little air stream Radiator fins very dirty Foam formation in the cooling system Bent radiator hose	– Check the transmission and cooling system for leaks. – Check the coolant level.  (p. 109) – Switch off the engine when standing. – Clean the radiator fins. – Drain the coolant.   (p. 110) – Refill the coolant.   (p. 110) – Change the radiator hose. 
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	– Check the wiring for damage and the electrical plug-in connections for corrosion and damage. – Read out the fault memory using the diagnostics tool. 
High oil consumption	Engine vent hose bent The engine oil level is too high The engine oil is too thin (low viscosity) Piston or cylinder worn Engine case is leaking	– Route the vent hose without bends or change it if necessary. – Check the engine oil level.  (p. 120) – Change the engine oil and the oil filter, clean the oil screens.   (p. 121) – Measure the piston/cylinder mounting clearance. – Check the engine case for loss of oil.
12 V battery discharged	12 V battery is not charging unwanted electrical load	– Check the charging voltage.  – Check the stator winding of the alternator.  – Check the open-circuit current. 

21.1 Flash codes

Blink code for malfunction indicator light	 02: Malfunction indicator light flashes 2x short
Error level condition	Crankshaft speed sensor – circuit fault The induction manifold pressure sensor delivers a normal signal (engine running), while the crankshaft speed sensor does not generate any signal at all. Time: ≥ 2.0 s
Blink code for malfunction indicator light	 06: Malfunction indicator light flashes 6x short
Error level condition	Throttle valve position sensor circuit A – input signal too low Voltage: ≤ 0.352 V Time: ≥ 3 s Throttle valve position sensor circuit A – input signal too high Voltage: ≥ 4.785 V Time: ≥ 3 s
Blink code for malfunction indicator light	 09: Malfunction indicator light flashes 9x short
Error level condition	Induction manifold pressure sensor – input signal too high Voltage: ≥ 4.121 V Time: ≥ 3 s Induction manifold pressure sensor – input signal too low Voltage: ≤ 0.215 V Time: ≥ 3 s
Blink code for malfunction indicator light	 12: Malfunction indicator light flashes 1x long, 2x short
Error level condition	Coolant temperature sensor – input signal too high Voltage: ≥ 4.785 V Time: ≥ 3 s Coolant temperature sensor – input signal too low Voltage: ≤ 0.137 V Time: ≥ 3 s
Blink code for malfunction indicator light	 13: Malfunction indicator light flashes 1x long, 3x short
Error level condition	Intake air temperature sensor – input signal too high Voltage: ≥ 4.824 V Time: ≥ 3 s Intake air temperature sensor – input signal too low Voltage: ≤ 0.195 V Time: ≥ 3 s

Blink code for malfunction indicator light	 15: Failure indicator light flashes 1x long, 5x short
Error level condition	Tilt sensor – input signal too low Voltage: ≤ 0.176 V Time: ≥ 25.5 s Tilt sensor – open / input signal too high Voltage: ≥ 4.57 V Time: ≥ 25.5 s
Blink code for malfunction indicator light	 21: Malfunction indicator light flashes 2x long, 1x short
Error level condition	Battery voltage – input voltage too high Engine control unit power supply: ≥ 15.98 V Time: ≥ 2 s
Blink code for malfunction indicator light	 22: Failure indicator light flashes 2x long, 2x short
Error level condition	Gear position sensor – input signal too low Time: ≥ 0.1 s Gear position sensor – input signal too high Time: ≥ 0.1 s Gear position sensor malfunction
Blink code for malfunction indicator light	 33: Malfunction indicator lamp flashes 3x long, 3x short
Error level condition	Injection valve cylinder 1 – circuit fault Time: ≥ 2.0 s
Blink code for malfunction indicator light	 37: Malfunction indicator light flashes 3x long, 7x short
Error level condition	Ignition coil – circuit fault Time: ≥ 2.0 s
Blink code for malfunction indicator light	 41: Malfunction indicator light flashes 4x long, 1x short
Error level condition	Fuel pump controller – short circuit to ground/open circuit The engine is switched off: ≥ 3 s Fuel pump controller - short circuit to plus The engine is switched off: ≥ 3 s

Blink code for malfunction indicator light	 65: Failure indicator light flashes 6x long, 5x short
Error level condition	EEPROM – malfunction Read data and write data are different.

Blink code for malfunction indicator light	 91: Failure indicator light flashes 9x long, 1x short
Error level condition	CAN bus communication – faulty CAN bus communication – faulty

Blink code for malfunction indicator light	 Malfunction indicator lamp flashes continuously
Error level condition	THREF – internal malfunction of the engine control unit

22.1 Engine

22.1.1 Technical data - engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	449.9 cm ³ (27.455 in ³)
Stroke	63.4 mm (2.496 in)
Bore	95 mm (3.74 in)
Compression ratio	13.6:1
Control	OHC, 4 valves controlled via rocker arm
Valve clearance	
Intake at: 20 °C (68.0 °F)	0.10 mm ... 0.15 mm (0.0039 in ... 0.0059 in)
Exhaust at: 20 °C (68.0 °F)	0.12 mm ... 0.17 mm (0.0047 in ... 0.0067 in)
Valve diameter, intake	40 mm (1.57 in)
Valve diameter, exhaust	33 mm (1.30 in)
Idle speed	2,200 rpm ... 2,300 rpm (36.67 Hz ... 38.33 Hz)
Crankshaft bearing	2-cylinder roller bearing
Big (bottom) end bearing	Plain bearing
Wrist pin bearing	Bearing bush
Piston	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with 2 trochoidal pumps
Primary transmission	29:72
Alternator	14 V 77 W (0.103 hp)
Clutch	Multidisc clutch in oil bath, hydraulically activated
Transmission	5 speed transmission, claw shifted
Gear ratios	
1st gear	2:28 PM
2nd Gear	16:26
3rd Gear	18:24
4th Gear	21:24
5th Gear	22:21
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment
Spark plug	NGK LMAR9AI-10
Plug gap of spark plug	1.0 mm (0.039 in)

Cooling	Liquid cooling, permanent circulation of coolant by water pump
Starting aid	Starter motor

22.1.2 Capacities - engine

engine oil	
Engine oil (10W/50)  (p. 149) fully synthetic	1.20 l (0.317 liq. gal _{US})
coolant	
Coolant  (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	0.95 l (0.251 liq. gal _{US})

22.2 Chassis

22.2.1 Technical data - chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Suspension travel:	
front	310 mm (12.20 in)
rear	300 mm (11.81 in)
Triple clamp offset	22 mm (0.87 in)
Brake system	Disc brakes, floating brake calipers
Brake discs - diameter	
front	260 mm (10.24 in)
rear	220 mm (8.66 in)
Brake disc wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)
Final drive	13:51
Chain	520
Rear sprockets available	51 teeth
Steering head angle	63.9° (1.115 rad)
Wheelbase	1,493 ±10 mm (58.78 ±0.39 in)
Ground clearance unloaded	343 mm (13.50 in)
Seat Height unloaded	956 mm (37.64 in)

22 Technical specifications

Weight without fuel approx.	103.6 kg (228.40 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)
Maximum permissible total weight	335 kg (738.5 lb)

22.2.2 Technical data - tires

Off-road tire pressure	
front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

Tire front	Rear tire
80/100 - 21 M/C 51M TT MAXXIS MAXXCROSS MX-ST+	100/90 - 19 M/C 57M TT MAXXIS MAXXCROSS MX-ST+
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized manufacturer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.	

22.2.3 Vehicle capacity

Total fuel tank capacity, approx.	
Super unleaded (ROZ 95)  (p. 148)	7.9 l (2.09 liq. gal _{US})

22.3 Electrics

22.3.1 Battery

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
--------------	-------------	--

22.3.2 Fuses

Fuse	58011109105	5 A
Fuse	58011109110	10 A

22.3.3 Lamps

Dashboard illumination and indicator lights	LED
---	-----

22.4 Fork

22.4.1 Technical data - fork

Fork part number	A460C109Y406000
Fork	WP XACT AER
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Air pressure	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	10.2 bar (147.9 psi)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	10.4 bar (150.8 psi)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	10.6 bar (153.7 psi)
Fork length	950 mm (37.40 in)

22.4.2 Capacities - fork

Oil capacity, right outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 149)	240 ml (8.12 fl. oz _{US})
Oil capacity, left outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 149)	240 ml (8.12 fl. oz _{US})
Oil capacity, right cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 149)	380 ml (12.85 fl. oz _{US})
Grease capacity, left cartridge	
Special grease (00062010053)  (p. 150)	5 g (0.18 oz)

22.5 Shock absorber

22.5.1 Technical data - shock absorber

Shock absorber part number	A460C409Y408000
Shock absorber	WP XACT LDS
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks

Sport	13 clicks
High-speed compression damping	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Preload	8 mm (0.31 in)
Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	42 N/mm (239.8 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	45 N/mm (257.0 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	48 N/mm (274.1 lb _f /in)
Spring length	240 mm (9.45 in)
Gas assisted	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Rider sag	105 mm (4.13 in)
Installation position	456.3 mm (17.965 in)

22.5.2 Capacities - shock absorber

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)  (p. 150)	Fill to the maximum mark

22.6 Tightening torque

22.6.1 Engine tightening torques

Screw, oil nozzle bent for piston cooling	M4	2 Nm (1.5 ft·lb _f)	Loctite® 243
Oil nozzle for the clutch lubrication (alternator cover sealing surface)	M4	0.8 Nm (0.59 ft·lb _f)	
Screw, gear position sensor	M5×14	5 Nm (3.7 ft·lb _f)	Loctite® 243

Oil nozzle for piston cooling	M5	2 Nm (1.5 ft·lb _f) Loctite® 243
Detent arm screw	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, pressure pump cover	M5×14	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, bearing retainer	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, suction pump cover	M5×14	6 Nm (4.4 ft·lb _f) Loctite® 243
Stator screw	M5	6 Nm (4.4 ft·lb _f) Loctite® 2701
Crankshaft speed sensor screw and cable retainer	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Oil nozzle for timing chain lubrication	M5	2 Nm (1.5 ft·lb _f) Loctite® 243
Screw, lock washer, oil pump idler gear	M5×10	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, clutch adjusting ring	M5×16	6 Nm (4.4 ft·lb _f)
Screws, main bearing lock washer, transmission bearings	M5×12	6 Nm (4.4 ft·lb _f)
Nut, water pump impeller	M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Exhaust flange screw	M6×16	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, torque governor	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, starter motor	M6×25	10 Nm (7.4 ft·lb _f)
Screw, clutch cover	M6	10 Nm (7.4 ft·lb _f)
Screw, engine case	M6	10 Nm (7.4 ft·lb _f)
Screw, oil filter cover	M6×16	10 Nm (7.4 ft·lb _f)

Shift star screw	M6×30	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, shift lever	M6×16	14 Nm (10.3 ft·lb _f) Loctite® 243
Timing chain-securing guide screw	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, timing chain tensioner	M6	10 Nm (7.4 ft·lb _f)
Slide rail screw	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, valve cover	M6	10 Nm (7.4 ft·lb _f)
Screw, clutch slave cylinder	M6	10 Nm (7.4 ft·lb _f)
Screw, water pump cover	M6×25	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, water pump cover	M6×45	10 Nm (7.4 ft·lb _f)
Screw, balancer shaft fastening to water pump cover	M6	10 Nm (7.4 ft·lb _f) Loctite® 222
Screw, ignition cover	M6	10 Nm (7.4 ft·lb _f)
Screw, cylinder head	M6×75	10 Nm (7.4 ft·lb _f)
Remaining screws, alternator cover	M6	10 Nm (7.4 ft·lb _f)
Screw, rocker arm bearing	M7×1	15 Nm (11.1 ft·lb _f)
Oil channel screw plug	M7	9 Nm (6.6 ft·lb _f) Loctite® 243
Crankshaft clamp screw plug	M8	10 Nm (7.4 ft·lb _f)
Screw plug, timing chain tensioner	M8	8 Nm (5.9 ft·lb _f)
Coolant temperature sensor	M10×1.25	12 Nm (8.9 ft·lb _f)
Front sprocket screw	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Oil channel screw plug	M10	15 Nm (11.1 ft·lb _f) Loctite® 243

Screw, cylinder head M10×1.25 Engine oil	1.	Apply oil to collar and thread
	2.	10 Nm (7.4 ft·lb _f)
	3.	30 Nm (22.1 ft·lb _f)
	4.	50 Nm (36.9 ft·lb _f)
Spark plug	M10×1	10 Nm ... 12 Nm (7.4 ft·lb _f ... 8.9 ft·lb _f)
Screw, rotor	M10×1	70 Nm (51.6 ft·lb _f)
Oil drain plug with magnet	M12×1.5	20 Nm (14.8 ft·lb _f)
Screw plug, oil pressure control valve	M12×1.5	20 Nm (14.8 ft·lb _f)
Screw plug, crankcase	M16×1.5	15 Nm (11.1 ft·lb _f)
Nut, inner clutch hub	M18×1.5	100 Nm (73.8 ft·lb _f)
Nut, primary gear wheel	M18LH×1.5	120 Nm (88.5 ft·lb _f)
Plug, oil screen	M20×1.5	15 Nm (11.1 ft·lb _f)
Screw plug, alternator cover	M24×1.5	18 Nm (13.3 ft·lb _f)

22.6.2 Chassis tightening torques

Screw, air boot on throttle body		2.8 Nm (2.07 ft·lb _f)
Radiator hose clamp		2.4 Nm (1.77 ft·lb _f)
Screw, fixed grip	M4	5 Nm (3.7 ft·lb _f) Loctite® 243
Screw, hose clamp to throttle body	M4	5 Nm (3.7 ft·lb _f)
Screw, throttle body cover	M5	2.6 Nm (1.92 ft·lb _f)
Remaining nuts on chassis	M5	5 Nm (3.7 ft·lb _f)
Remaining screws on chassis	M5	5 Nm (3.7 ft·lb _f)
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 ft·lb _f)
Screw, battery terminal	M5	2.5 Nm (1.84 ft·lb _f)
Screw, frame protector	M5	3 Nm (2.2 ft·lb _f)

Screws on muffler	M5	7 Nm (5.2 ft·lb _f)
Screw, brake pedal stub	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Nut, throttle cable on throttle body	M6	3 Nm (2.2 ft·lb _f)
Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 ft·lb _f)
Screw, battery holding bracket	M6	6 Nm (4.4 ft·lb _f)
Screw, starter cable to starter relay	M6	6 Nm (4.4 ft·lb _f)
Screw, chain guide on swingarm, rear	M6×16	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, hand lever	M6	5 Nm (3.7 ft·lb _f)
Nut, starter cable on starter motor	M6	4 Nm (3.0 ft·lb _f)
Remaining nuts on chassis	M6	10 Nm (7.4 ft·lb _f)
Remaining screws on chassis	M6	10 Nm (7.4 ft·lb _f)
Screw, rear brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, front brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, push rod ball joint on the rear brake cylinder	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, throttle twist grip	M6	5 Nm (3.7 ft·lb _f)
Screw, chain sliding guard on link fork	M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 ft·lb _f)
Screw, chain guide on swingarm, front	M6×45	10 Nm (7.4 ft·lb _f)
Screw, ground wire on frame	M6	10 Nm (7.4 ft·lb _f)
Screw, seat installation	M6	8 Nm (5.9 ft·lb _f)
Brake line guide screw on swingarm	M6	4.5 Nm (3.32 ft·lb _f)

Screw, connector support incl. dashboard	M6	5 Nm (3.7 ft·lb _f)
Screw, fender on triple clamp	M6	12 Nm (8.9 ft·lb _f)
Screw, front sprocket cover	M8	15 Nm (11.1 ft·lb _f)
Brake pedal stop nut	M8	20 Nm (14.8 ft·lb _f)
Nut, rear sprocket screw	M8	35 Nm (25.8 ft·lb _f) Loctite® 2701
Nut, rim lock	M8	12 Nm (8.9 ft·lb _f)
Remaining nuts on chassis	M8	25 Nm (18.4 ft·lb _f)
Remaining screws on chassis	M8	25 Nm (18.4 ft·lb _f)
Screw, front brake caliper	M8	25 Nm (18.4 ft·lb _f) Loctite® 243
Screw, fork shoe	M8	15 Nm (11.1 ft·lb _f)
Screw, upper steering stem	M8	20 Nm (14.8 ft·lb _f) Loctite® 243
Handlebar clamp screw	M8	20 Nm (14.8 ft·lb _f)
Screw, subframe, top	M8	40 Nm (29.5 ft·lb _f) Loctite® 2701
Screw, chain slider	M8	15 Nm (11.1 ft·lb _f)
Screw, manifold on engine brace	M8	15 Nm (11.1 ft·lb _f)
Screw, subframe, bottom	M8	35 Nm (25.8 ft·lb _f) Loctite® 243
Forged upper triple clamp screw	M8	20 Nm (14.8 ft·lb _f)
Forged lower triple clamp screw	M8	15 Nm (11.1 ft·lb _f)
Engine bracket screw	M10	60 Nm (44.3 ft·lb _f)
Remaining nuts on chassis	M10	45 Nm (33.2 ft·lb _f)
Remaining screws on chassis	M10	45 Nm (33.2 ft·lb _f)

Top shock absorber screw	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Bottom shock absorber screw	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Screw, handlebar mount	M10	40 Nm (29.5 ft·lb _f) Loctite® 243
Screw, sprocket	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Nut, frame on linkage lever	M14×1.5	60 Nm (44.3 ft·lb _f)
Nut, linkage lever on angle lever	M14×1.5	60 Nm (44.3 ft·lb _f)
Nut, swingarm pivot	M16×1.5	100 Nm (73.8 ft·lb _f)
Nut, angle lever to link fork	M16×1.5	80 Nm (59.0 ft·lb _f)
Screw, wheel spindle, front	M20×1.5	35 Nm (25.8 ft·lb _f)
Screw, top steering head	M20×1.5	12 Nm (8.9 ft·lb _f)
Nut, wheel spindle, rear	M22×1.5	80 Nm (59.0 ft·lb _f)
Screw-in nozzle, cooling system	M24×1.5	7.5 Nm (5.53 ft·lb _f)
Spoke nipple, rear wheel	M4,5	6 Nm (4.4 ft·lb _f)
Spoke nipple, front wheel	M4,5	6 Nm (4.4 ft·lb _f)
Combination switch screw	EJOT PT® – K50×18	2 Nm (1.5 ft·lb _f)
Screw, intake air temperature sensor	EJOT PT® – K50×18	0.7 Nm (0.52 ft·lb _f)
Screw, start button/kill switch	EJOT PT® – K50×18	2 Nm (1.5 ft·lb _f)
Screw, air filter box cover	EJOT PT® – K60×20 – Z	5 Nm (3.7 ft·lb _f)
Screw, fuel pump on fuel tank	EJOT PT® – K60×30 – Z	2.5 Nm (1.84 ft·lb _f)
Screw, air filter box, on subframe	EJOT PT® – K60×20 – AL	5 Nm (3.7 ft·lb _f)
Remaining screws on chassis	EJOT PT® – K60×25	2 Nm (1.5 ft·lb _f)
Screw, seat installation	EJOT EJOFORM® – K60×23/18	2.5 Nm (1.84 ft·lb _f)

Remaining screws on chassis	EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)
-----------------------------	------------------------------	-----------------------------------

23.1 Recycling



102045-10

Further information is available at the following website.

Recycling information website: <https://www.quefairedemesdechets.fr>

A Technical terms

OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-----	--------------------	--

B Fuels

Super unleaded

Standards

- ROZ 95 → DIN EN 228

Fuel additive

Recommended supplier

MOTOREX®

- FUEL STABILIZER

C Operating supplies

Off-road chain spray

Recommended supplier

MOTOREX®

- CHAINLUBE OFF ROAD

Fork oil

Order details

- 48601166S1

Standards

- SAE 4 → SAE

Universal oil spray

Recommended supplier

MOTOREX®

- JOKER 440 SYNTHETIC

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Engine oil

Recommended supplier

MOTOREX®

- CROSS POWER 4T

Standards

→ JASO T903 MA2

- 10W/50 → SAE

Properties

- fully synthetic

High viscosity grease

Recommended supplier

SKF®

- LGHB 2

Silicone spray

Recommended supplier

MOTOREX®

- SILICONE SPRAY

Special grease

Order details

- 00062010053

Recommended supplier

Klüber Lubrication®

- Klüberfood NH1 34-401

Shock absorber oil

Order details

- 50180751S1

Standards

- SAE 2.5 → SAE

Oil for foam air filter

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER OIL

Brake fluid DOT 5.1

Recommended supplier

MOTOREX®

- BRAKE FLUID DOT 5.1

Standards

→ DOT

Coolant

Recommended supplier

MOTOREX®

- COOLANT M3.0

Properties

- Antifreeze protection to at least -25 °C
(-13.0 °F)

D Cleaning agents**Chain cleaner**

Recommended supplier

MOTOREX®

- CHAIN CLEAN

Preserving materials

Recommended supplier

MOTOREX®

- MOTO PROTECT

Air filter cleaning agent

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER CLEANER

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors

Recommended supplier

MOTOREX®

- QUICK CLEANER

Environmentally neutral universal cleaning agent

Recommended supplier

MOTOREX®

- MOTO CLEAN UNIVERSAL

E Icons

E.1 Symbol colors

E.1.1 Yellow and orange symbols

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Failure indicator lamp lights up or flashes red
---	---

1		
12 V battery		
charging	102	
removing	100	
12 V battery		
installation	101	
A		
Accessories	11	
Air filter		
cleaning	66	
installing	65	
removing	64	
Air filter box		
cleaning	66	
Air filter box cover		
installing	63	
removing	62	
securing	64	
Auxiliary substances	11	
B		
Brake discs		
checking	82	
Brake fluid		
adding front brake	84	
adding to rear brake	90	
Brake fluid level		
checking on front brake	83	
checking on rear brake	89	
Brake lining retainers		
checking on front brake	85	
checking on rear brake	91	
Brake linings (brake pads)		
changing on the rear brake	91	
Brake pad		
checking on front brake	85	
Brake pads		
checking on rear brake	91	
of the front brake, changing	85	
Brake pedal		
adjusting the basic position	88	
checking the free travel	88	
C		
Chain		
checking	74	
cleaning	72	
Chain guide		
checking	74	
Chain tension		
adjusting	73	
checking	73	
Characteristic map of the throttle response		
adjusting	114	
Checking basic chassis setting with		
rider's weight	34	
Clutch		
changing fluid	80	
checking/correcting fluid level	79	
Clutch lever		
adjusting the basic position	79	
Compression damping		
adjusting the fork	42	
Coolant		
antifreeze and coolant level, checking	108	
draining	110	
level, checking	109	
refilling	110	
Customer service	11	
D		
Defined use	10	
Difficult operating conditions	23	
dry sand	23	
high temperatures	25	
low temperature	25	
muddy surfaces	24	
slow speed	25	
snow	25	
wet sand	24	
wet surfaces	24	
E		
Engine		
running in	22	
Engine number	14	
Engine oil		
adding	124	
changing	121	
Engine oil level		
checking	120	
Engine sprocket		
checking	74	
Environment	10	
F		
Figures	11	
Fork legs		
adjusting the air pressure	41	
adjusting the rebound damping	43	
bleeding	46	
checking basic setting	41	
cleaning the dust boots	47	
compression damping, adjusting	42	

installation	50
removing	49
Fork protector	
installation	48
removing	48
Frame	
checking	77
Frame label	14
Frame protector	
installation	49
removing	48
Front fender	
installation	56
removing	55
Front wheel	
installing	95
removing	94
Frost protection	
checking	108
Fuel screen	
changing	119
Fuel tank	
installation	70
removing	68
Fuel tank cap	
closing	18
opening	18
Fuse	
changing the main fuse	105
of the fuel pump, changing	106
G	
Gear shift lever	
adjusting the basic position	117
checking the basic position	117
H	
Handbrake lever	
adjusting the basic position	82
checking the free travel	82
Handlebar position	
adjusting	44
High-speed compression damping	
adjusting the shock absorber	36
I	
Idle speed	
adjusting	116
Implied warranty	11
Improper use	10
Intended use	10
L	
Lower triple clamp	
installation	51
removing	50
Low-speed compression damping	
adjusting the shock absorber	35
M	
Main fuse	
changing	105
Main silencer	
installation	67
Manufacturer's warranty	11
Motorcycle	
cleaning	125
raising with lift stand	46
removing from lift stand	46
Muffler	
changing damping material	67
removing	66
N	
Number plate	
removing	55
O	
Oil filter	
changing	121
Oil screens	
cleaning	121
Owner's manual	10
P	
Preparing for use	
after storage	128
checks and maintenance measures when preparing for use	26
Notes on preparing for first use	21
Protective clothing	9
R	
Rear sprocket	
checking	74
Rear wheel	
installation	96
removing	95
Rebound damping	
adjusting the fork	43
adjusting the shock absorber	36
Recycling	146
Refueling	
fuel	30
Resources	11

Rider sag		
adjusting	40	
Rubber grips		
checking	78	
S		
Safe use	8	
Seat		
mounting	60	
removing	59	
Service	11	
Shock absorber		
adjusting the high-speed compression damp-		
ing	36	
adjusting the low-speed compression damp-		
ing	35	
adjusting the rebound damping	36	
adjusting the spring preload	39	
checking static sag	38	
checking the rider sag	38	
installation	58	
removing	57	
Side panel right		
installation	62	
removing	61	
spare parts	11	
Spoke tension		
checking	99	
Start number plate		
installation	55	
Starting	26	
Steering head bearing		
lubricating	55	
Steering head bearing play		
adjusting	54	
checking	53	
Storage	127	
Swingarm		
checking	77	
T		
Tampering	8	
Throttle cable play		
adjusting	113	
checking	113	
Throttle cable routing		
checking	77	
Throttle valve position		
programming	116	
Tire condition		
checking	97	
Tire pressure		
checking	98	
Transportation	29	
V		
Vehicle identification number	14	
VIN	14	
W		
Work rules	9	



3215291en

06/08/2026



Stallhofnerstraße 3 / 5230 Mattighofen / Austria / <https://www.gasgas.com/>

