

Owner's manual 2027



TE 250

TE 300

TE 300 PRO

Item no.: 3402951en

FOR | PIONEERS

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with proper care, will bring you pleasure for a long time to come.

We hope you enjoy your bike and have a safe journey at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number  (p. 18)	Stamp of the contractual partner
Engine number  (p. 19)	

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications are non-binding. Husqvarna Mobility GmbH specifically reserve the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc. without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna Mobility assumes no liability for delivery options, deviations from figures and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2026 Husqvarna Mobility GmbH, Mattighofen Austria

All rights reserved. Figures: Visus Studios/INDG/Husqvarna Mobility

Written permission from the copyright owner is required before any duplication or reproduction.

ISO 9001

Husqvarna Mobility GmbH applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.



12 100 6061

Issuing institution:

TÜV SÜD Management Service GmbH

Husqvarna Mobility GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for:

TE 250 EU (F2303727)

TE 250 US (F2375727)

TE 300 EU (F2403727)

TE 300 US (F2475727)

TE 300 AR (F2442727)

TE 300 PRO EU (F2403827)

TE 300 PRO BR (F2440827)

TE 300 PRO US (F2475827)



Table of contents

1	Means of representation	9	6.6	Light switch (All US models and 300 PRO BR)	21
1.1	Conventions.....	9	6.7	Turn signal switch (All 300 EU models and AR)	21
1.1.1	Icons.....	9	6.8	Electric starter	21
1.1.2	Formatting.....	9	6.9	Kill switch	22
1.1.3	Abbreviations	9	6.10	Combination switch	22
2	Safety	10	6.11	Overview of indicator lights (All EU and AR models)	22
2.1	Safety instructions	10	6.12	Overview of indicator lights (All US models and 300 PRO BR)	23
2.2	Ban on tampering	10	6.13	Opening the fuel tank cap	23
2.3	Safe use	11	6.14	Closing the fuel tank cap	24
2.4	Protective clothing	11	6.15	Opening 2-stroke oil tank cap	24
2.5	Work rules	11	6.16	Closing 2-stroke oil tank cap	25
2.6	Environment	12	6.17	Cold start button	25
2.7	Owner's manual	12	6.18	Idle speed adjustment screw	26
2.8	Use definition – intended use	12	6.19	Gear shift lever	26
2.9	Improper use	13	6.20	Brake pedal	27
3	Important notes	14	6.21	Side stand	27
3.1	Manufacturer's warranty, implied warranty	14	6.22	Steering lock (All 300 EU models and AR)	27
3.2	Auxiliary material, operating material	14	6.23	Locking the steering (All 300 EU models and AR)	28
3.3	Spare parts, accessories	14	6.24	Unlocking the steering (All 300 EU models and AR)	28
3.4	Service	14	7	Combination instrument	29
3.5	Figures	14	7.1	Combination instrument overview	29
3.6	Customer service	15	7.2	activation and testing	29
4	View of the vehicle	16	7.2.1	Activating combination instrument	29
4.1	View of vehicle, left side (example)	16	7.2.2	Display test.....	29
4.2	View of vehicle, right side (example)	16	7.2.3	WS (wheel size)	30
5	Serial number	18	7.3	Setting kilometers or miles	30
5.1	Vehicle identification number	18	7.4	Setting the combination instrument	31
5.2	Type approval label (All 300 EU models and AR)	18	7.5	Setting the clock	31
5.3	Frame label (All US, BR models and 250 EU)	18	7.6	Viewing the lap time	32
5.4	Key number (All 300 EU models and AR)	18	7.7	Display mode SPEED (speed)	32
5.5	Engine number	19	7.8	Display mode SPEED/H (operating hours)	32
5.6	Fork part number	19	7.9	Setup menu	33
5.7	Shock absorber part number	19	7.10	Adjusting the unit of measurement	34
6	Controls	20	7.11	Display mode SPEED/CLK (time)	34
6.1	Clutch lever	20	7.12	Setting the clock	35
6.2	Handbrake lever	20	7.13	Display mode SPEED/LAP (lap time)	35
6.3	Throttle grip	20	7.14	Viewing the lap time	36
6.4	Horn button (All 300 EU models and AR)	20	7.15	Display mode SPEED/ODO (odometer)	36
6.5	Light switch (All EU and AR models)	21	7.16	Display mode SPEED/TR1 (trip master 1)	37

7.17	Display mode SPEED/TR2 (trip master 2)	37	11.3	Adjusting the low-speed compression damping of the shock absorber	57
7.18	Adjusting TR2 (trip master 2)	38	11.4	Adjusting the high-speed compression damping of the shock absorber	58
7.19	Display mode SPEED/A1 (average speed 1)	38	11.5	Adjusting the rebound damping of the shock absorber	59
7.20	Display mode SPEED/A2 (average speed 2)	39	11.6	Measuring the dimension of the unloaded rear wheel	60
7.21	Display mode SPEED/S1 (stop watch 1)	39	11.7	Checking the static sag of the shock absorber	61
7.22	Display mode SPEED/S2 (stop watch 2)	40	11.8	Checking the rider sag of the shock absorber	61
7.23	Table of functions	40	11.9	Adjusting the preload for the shock absorber 	62
7.24	Table of conditions and menu activation.....	42	11.10	Adjusting the rider sag 	63
8	Preparing for use	43	11.11	Checking the basic setting of the fork	64
8.1	Notes on preparing for first use	43	11.12	Adjusting the compression damping of the fork	64
8.2	Running in the engine	44	11.13	Adjusting the spring preload of the fork (All special models).....	65
8.3	Starting performance of lithium-ion batteries at low temperatures	45	11.14	Adjusting the rebound damping of the fork	66
8.4	Preparing the vehicle for difficult operating conditions	45	11.15	Handlebar position	67
8.5	Preparing the vehicle for rides on dry sand	45	11.16	Adjusting the handlebar position 	67
8.6	Preparing the vehicle for rides on wet sand	46	12	Service work on the chassis	69
8.7	Preparing for rides on wet and muddy surfaces	47	12.1	Raising the motorcycle with a lift stand	69
8.8	Preparing vehicle for rides at high temperature or slow speed	47	12.2	Removing the motorcycle from the lift stand	69
8.9	Preparing the vehicle for low temperatures or snow	47	12.3	Bleeding the fork legs	69
9	Riding instructions	48	12.4	Cleaning the dust boots of the fork legs	70
9.1	checks and maintenance measures when preparing for use	48	12.5	Removing the fork protector	71
9.2	Starting the vehicle	48	12.6	Installing the fork protector	71
9.3	Starting off	49	12.7	Removing the fork legs 	72
9.4	Shifting, riding	49	12.8	Installing the fork legs 	72
9.5	Braking	50	12.9	Removing the lower triple clamp 	73
9.6	Stop, park	51	12.10	Installing the lower triple clamp 	74
9.7	Transportation	51	12.11	Checking the steering head bearing play	77
9.8	Refueling	52	12.12	Adjusting the steering head bearing play 	77
9.9	Adding 2-stroke oil	53	12.13	Lubricating the steering head bearing 	78
10	Service schedule	54	12.14	Removing the front top fender	78
10.1	Service schedule	54	12.15	Installing the front top fender	79
11	Tuning the chassis	57	12.16	Removing the shock absorber 	80
11.1	Checking the basic chassis setting with the rider's weight	57			
11.2	Compression damping of the shock absorber	57			

12.17	Installing the shock absorber 	81	13.5	Adding brake fluid for the front brake 	108
12.18	Removing the seat	83	13.6	Checking that the brake pads of the front brake are secured	109
12.19	Mounting the seat	83	13.7	Changing the brake pads of the front brake 	110
12.20	Removing the frame protector	84	13.8	Checking the free travel of the brake pedal	112
12.21	Installing the frame protector	84	13.9	Adjusting the basic position of the brake pedal 	112
12.22	Removing air filter box cover	85	13.10	Checking the brake fluid level for the rear brake	113
12.23	Installing air filter box cover	85	13.11	Adding brake fluid for the rear brake 	113
12.24	Removing the air filter 	86	13.12	Checking that the brake pads of the rear brake are secured	115
12.25	Installing the air filter 	86	13.13	Changing the rear brake pads 	115
12.26	Cleaning the air filter and air filter box 	87	14	Wheels, tires	117
12.27	Preparing the air filter box cover for securing 	87	14.1	Removing the front wheel 	117
12.28	Removing the right side fairing	88	14.2	Installing the front wheel 	118
12.29	Installing the right side cover	89	14.3	Removing the rear wheel 	119
12.30	Removing the muffler	89	14.4	Installing the rear wheel 	120
12.31	Installing muffler	90	14.5	Checking the tire condition	121
12.32	Changing the damping material on the main silencer 	90	14.6	Checking the tire pressure	122
12.33	Removing the fuel tank 	91	14.7	Checking the spoke tension	122
12.34	Installing the fuel tank 	93	15	Electrics	124
12.35	Checking the chain for contaminant	95	15.1	Removing the 12 V battery 	124
12.36	Cleaning the chain	95	15.2	Installing the 12 V battery 	125
12.37	Checking the chain tension	96	15.3	Charging the 12 V battery 	126
12.38	Adjusting the chain tension	97	15.4	Changing the main fuse	129
12.39	Checking the chain, rear sprocket, front sprocket, and chain guide	98	15.5	Removing the headlight mask with the headlight	129
12.40	Checking the frame 	100	15.6	Installing the headlight mask with the headlight	130
12.41	Checking the swingarm 	100	15.7	Changing the headlight bulb	131
12.42	Checking the throttle cable routing	101	15.8	Changing the turn signal bulb (All 300 EU models and AR)	132
12.43	Checking the hand grip	102	15.9	Checking the headlight setting	132
12.44	Adjusting the basic position of the clutch lever	102	15.10	Adjusting the headlight range	133
12.45	Checking/correcting the fluid level of hydraulic clutch	102	15.11	Combination instrument battery, changing	133
12.46	Changing the hydraulic clutch fluid 	103	15.12	Diagnostic connector	134
12.47	Removing the skid plate	105	15.13	OCU	134
12.48	Installing the skid plate	105	16	Cooling system	136
13	Brake system	106	16.1	Cooling system	136
13.1	Checking the free travel on the hand brake lever	106	16.2	Checking the frost protection and coolant level	136
13.2	Adjusting the free travel of the handbrake lever	106	16.3	Checking the coolant level	137
13.3	Checking the brake discs	106			
13.4	Checking the brake fluid level for the front brake	107			

16.4	Draining the coolant 	138	24	Technical specifications	172
16.5	Refilling the coolant 	138	24.1	Engine	172
16.6	Changing the coolant 	140	24.1.1	Technical data - engine	172
17	Tuning the engine	142	24.1.2	Capacities - engine	173
17.1	Checking the play in the throttle cable	142	24.2	Chassis	173
17.2	Adjusting the throttle cable play 	142	24.2.1	Technical data - chassis	173
17.3	Adjusting the characteristic map of the throttle response 	143	24.2.2	Technical data - tires	174
17.4	Adjusting the idle speed 	145	24.2.3	Capacities - vehicle	175
17.5	Programming ambient air pressure	145	24.3	Electrics	175
17.6	Checking the basic position of the gear shift lever	146	24.3.1	Battery	175
17.7	Adjusting the basic position of the gear shift lever 	146	24.3.2	Fuses	175
18	Exhaust control	148	24.3.3	Lamps	175
18.1	Programming the end positions of the exhaust control 	148	24.4	Fork	176
19	Service work on the engine	150	24.4.1	Technical data - fork (All standard models except 250 US)	176
19.1	Changing the fuel screen 	150	24.4.2	Capacities - fork (All standard models except 250 US)	176
19.2	Checking 2-stroke oil level	151	24.4.3	Technical data - fork (TE 250 US)	176
19.3	Priming oil pump 	152	24.4.4	Capacities - fork (TE 250 US)	177
19.4	Cleaning the oil screen in the oil tank 	154	24.4.5	Technical data - fork (All special models)	177
19.5	Checking the gear oil level	157	24.4.6	Capacities - fork (All special models)	178
19.6	Changing the gear oil 	157	24.5	Shock absorber	178
19.7	Adding gear oil 	158	24.5.1	Technical data - shock absorber	178
20	Cleaning, care	160	24.5.2	Capacities - shock absorber	179
20.1	Cleaning the motorcycle	160	24.6	Tightening torque	179
20.2	Checks and maintenance steps for winter operation	161	24.6.1	Engine tightening torques	179
21	Storage	163	24.6.2	Chassis tightening torques	181
21.1	Storage	163	25	Recycling	186
21.2	Preparing for use after storage	164	25.1	Recycling	186
22	Troubleshooting	165	Notes		187
22.1	troubleshooting	165	A	Technical terms	187
23	Flash codes	168	B	Fuels	188
23.1	Engine control trouble code	168	C	Operating material	189
			D	Electrics	192
			E	Cleaning agents	194
			F	Icons	195
			F.1	Symbol colors	195
			F.1.1	Red symbols	195
			F.1.2	Yellow and orange symbols	195
			F.1.3	Green and blue symbols	195
			Index		196

1.1 Conventions

1.1.1 Icons

-  Indicates a desired result (e.g. of a work step or a function).
-  Indicates an undesired result (e.g. of a work step or a function).
-  All work marked with this symbol requires specialist knowledge and technical understanding. Ensure that this work is carried out or supervised by trained personnel from an authorized contractual partner, and that any special tools required are used.
-  Indicates a page reference.
-  Indicates information with more details.
-  Indicates a tip, e.g. to simplify work.
-  Indicates the result from a test step.
-  Indicates the end of an activity, including any rework.

1.1.2 Formatting

Proprietary name	Indicates a proprietary name.
Name[®]	Indicates a protected name.
Brand[™]	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

1.1.3 Abbreviations

2-pc.	two-part
Part no.	Part number
or	respectively
approx.	circa
etc.	et cetera
poss.	possibly/possible
if necessary	if necessary
compl.	complete
min.	at least
no.	number
no fig.	no figure
s.	see
among others	among others/not limited to
and the like	and the like
etc.	et cetera
cf.	compare
e.g.	for example

2.1 Safety instructions

Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



DANGER

Indicates an imminent danger that leads to serious injury or death.



WARNING

Indicates a potentially imminent danger that could lead to serious injury or death.



CAUTION

Indicates a potentially imminent danger that can lead to minor or slight injuries.



NOTE

Indicates a situation that can lead to damage to the product or the product environment.



NOTE

Indicates a situation that can lead to environmental damage.

2.2 Ban on tampering

No changes may be made to the noise control equipment and components.

Tampering that is prohibited

- Removing or disabling any devices or components used for noise control before the new vehicle is sold or delivered to the end customer.
- Removing or disabling any device or component used for noise control for purposes other than service, repair, or replacement during the service life of the vehicle.
- Use of the vehicle after a device or component used for noise control has been removed, disabled, or inadequately maintained.

Examples of prohibited tampering

- Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
- Removing or puncturing parts of the intake system.
- Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.3 Safe use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

The vehicle must only be used by trained persons. An appropriate driver's license is needed to drive the vehicle on public roads.

Have any faults that impair safety immediately remedied by an authorized contractual partner.

Adhere to the information and warning labels on the vehicle.

2.4 Protective clothing



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

2.5 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key).

Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68.0 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ±5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite®**) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread lock.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

2.6 Environment

Handling the vehicle responsibly reduces the risk of conflict with other road users and the surrounding area. The future of motorcycling also depends on using motorcycles legally, being environmentally conscious and respecting the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, the laws and regulations of the respective country must be observed.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. More information is available from the authorized contractual partner.

2.7 Owner's manual

Read this owner's manual carefully and in full before riding off for the first time. The owner's manual contains information and tips on how to operate, handle, and service your vehicle, as well as advice on optimum tuning and how to avoid injuries.



Tip

Save this owner's manual on your smartphone, for example, so that you can access it at any time.

An authorized contractual partner will be happy to assist you if you are unsure.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized contractual partner and on the Husqvarna Mobility website.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

A printed copy can be ordered from the following address.

Website for printed copy: <https://print.ktm.com>

2.8 Use definition – intended use

(All 300 EU models and AR)

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Note

This vehicle is only authorized for operation on public roads in the homologated (restricted) version. The derestricted version of this vehicle must only be operated in closed off areas away from public highway traffic.

This vehicle is designed for use in offroad endurance competition, and not primarily for use in motocross.

(All US, BR models and 250 EU)

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.

**Note**

This vehicle is not approved for use on public roads.

This vehicle is designed for use in offroad endurance competition, and not primarily for use in motocross.

2.9 Improper use

The vehicle may only be used as intended.

Improper use can result in danger to people, property and the environment.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

3 Important notes

3.1 Manufacturer's warranty, implied warranty

The work prescribed in the service schedule must only be carried out by an authorized contractual partner and confirmed in the electronic proof of service, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

3.3 Spare parts, accessories

For safety reasons, only spare parts and accessory products approved by Husqvarna Mobility may be used. They may only be installed by an authorized contractual partner. Husqvarna Mobility accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Authorized contractual partners will be happy to help.

The current accessories for your vehicle can be found on the Husqvarna Mobility website.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under arduous conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the powertrain, brake system, air filter, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

Please adhere to the prescribed run-in times and service intervals at all times. Strictly adhering to this will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

A list of services that have already been carried out on the vehicle can be found in the Service area on the international Husqvarna Mobility website:

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

Authorized contractual partners will be happy to answer any questions regarding the services performed.

The list of authorized contractual partners is available on the Husqvarna Mobility website.

3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.

3.6 Customer service

Your authorized partner will be happy to answer any questions you may have regarding your vehicle or about Husqvarna Mobility.


You can find the list of authorized contractual partners on the Husqvarna Mobility website.

International Husqvarna Mobility website: <https://www.husqvarna-motorcycles.com>

4 View of the vehicle

4.1 View of vehicle, left side (example)


i **Note**
Arrow faces in the direction of travel

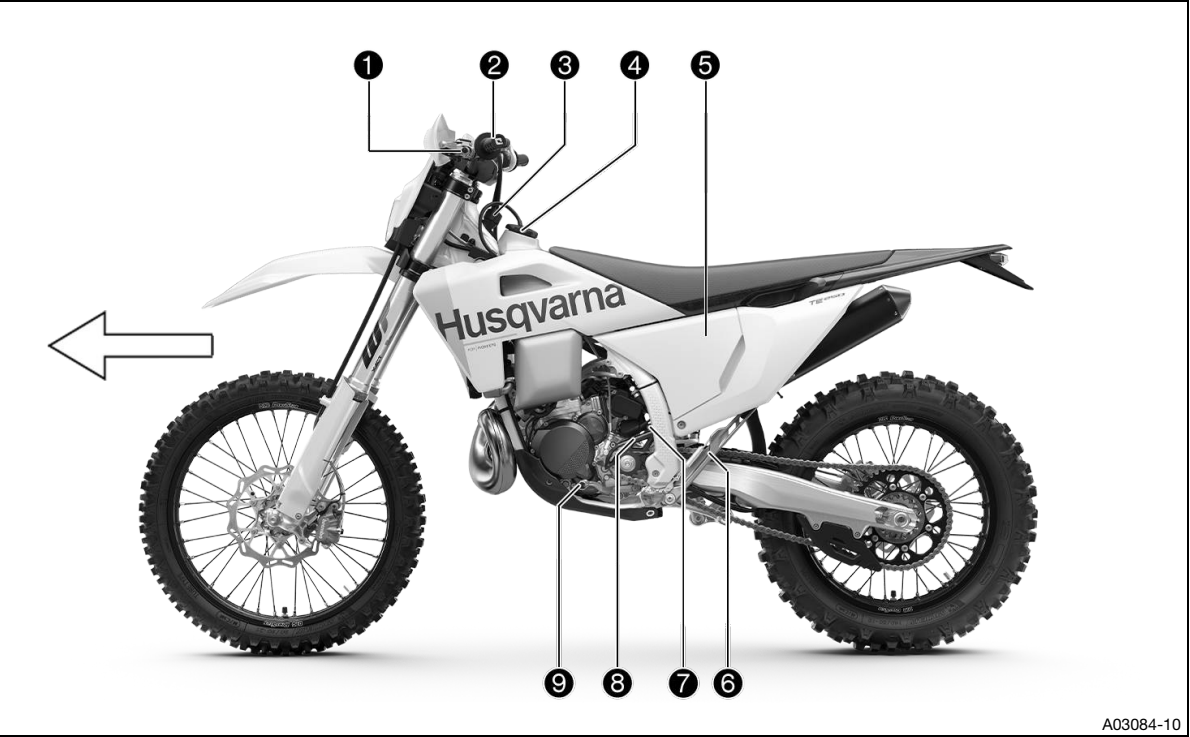

- | | |
|-------------------------------------|-------------------------------------|
| 1 Clutch lever (p. 20) | 3 2-stroke oil tank cap |
| 2 (All 300 EU models and AR) | 4 Fuel tank cap |
| Horn button (p. 20) | 5 Air filter box cover |
| 2 (All EU and AR models) | 6 Side stand (p. 27) |
| Light switch (p. 21) | 7 Cold start button (p. 25) |
| 2 (All 300 EU models and AR) | 8 Engine number (p. 19) |
| Turn signal switch (p. 21) | 9 Gear shift lever (p. 26) |

4.2 View of vehicle, right side (example)

i **Note**
Arrow faces in the direction of travel

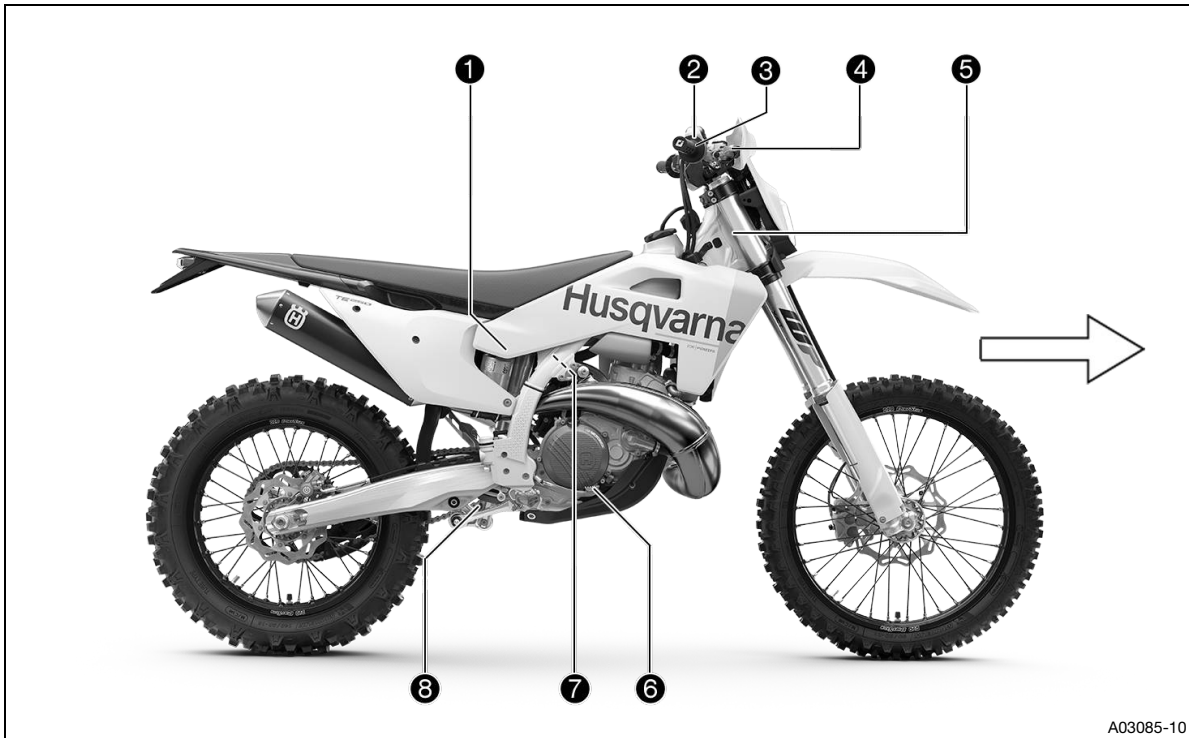


A03085-10

- | | |
|---|---|
| ① Shock absorber compression adjustment | ⑤ Vehicle identification number |
| ② Electric starter  (p. 21) | ⑥ Brake pedal  (p. 27) |
| ③ Throttle grip  (p. 20) | ⑦ Idle speed adjustment screw  (p. 26) |
| ④ Handbrake lever  (p. 20) | ⑧ Shock absorber rebound adjustment |


5 Serial number

5.1 Vehicle identification number

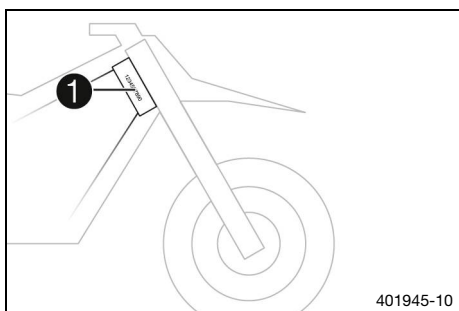


The vehicle identification number ❶ is stamped on the right-hand side of the steering head.

 5.2 Type approval label (All 300 EU models and AR)




The type label ❶ is located on the front steering head.

5.3 Frame label (All US, BR models and 250 EU)

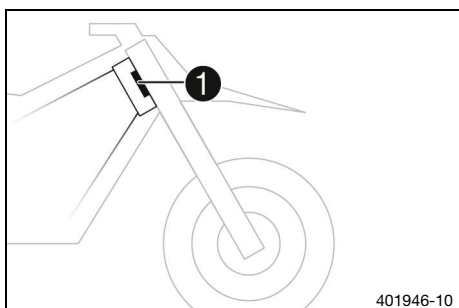


Frame label ❶ is attached to the front of the steering head.

5.4 Key number (All 300 EU models and AR)

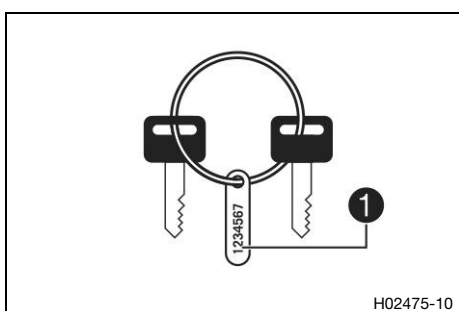


The key number ❶ for the steering lock is stamped onto the key connector.

5.5 Engine number

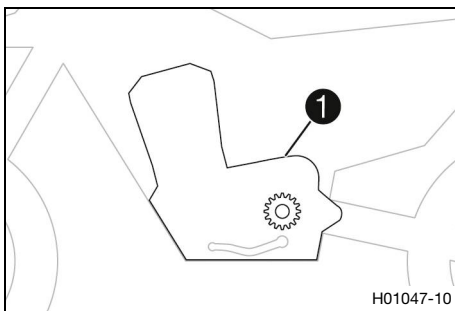


The engine number ❶ is stamped on the left side of the engine above the front sprocket.

5.6 Fork part number

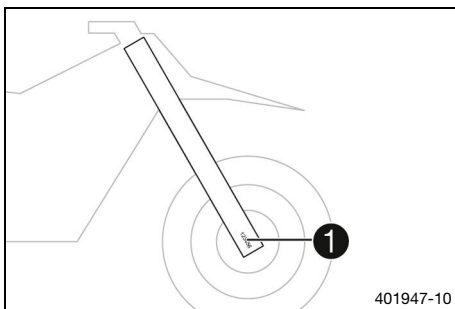


Fork part number ❶ is stamped on the inside of the fork shoe.

5.7 Shock absorber part number

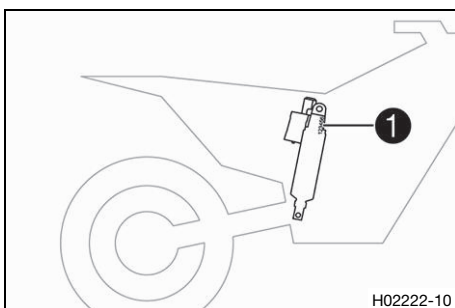


Shock absorber part number ❶ is stamped on the top right of the shock absorber.

6.1 Clutch lever

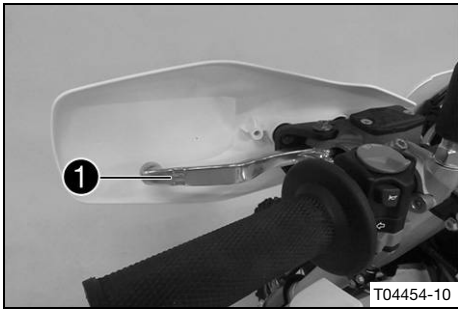


Clutch lever ❶ is fitted on the left side of the handlebar. The clutch is activated hydraulically and adjusts itself automatically.

6.2 Handbrake lever

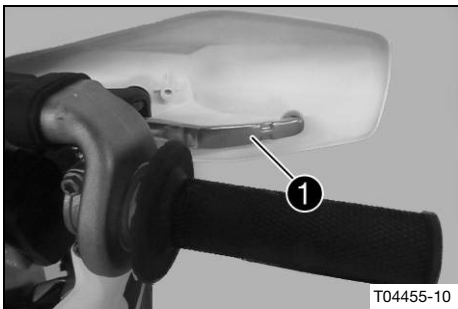


Hand brake lever ❶ is fitted on the right side of the handlebar. The front brake is engaged using the hand brake lever.

6.3 Throttle grip

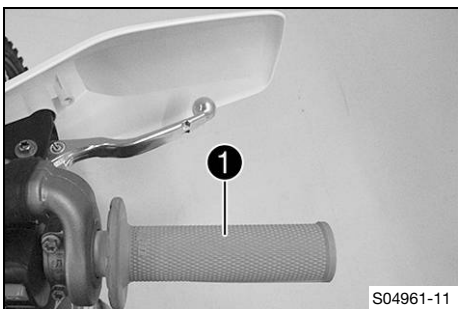

The throttle twist grip ❶ is fitted on the right side of the handlebar.


6.4 Horn button (All 300 EU models and AR)

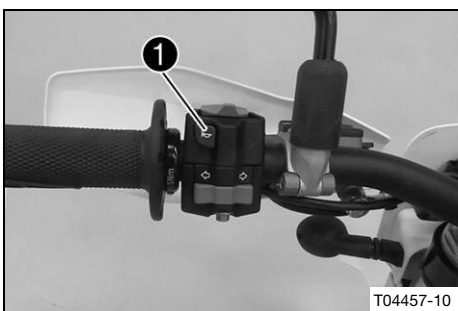

Horn button ❶ is fitted on the left side of the handlebar.

Condition	Meaning
Horn buttons  in the basic position	No function
Horn buttons  pressed	The horn is operated in this position.

 
6.5 Light switch (All EU and AR models)



Light switch ① is fitted on the left side of the handlebar.

Condition		Meaning
	Light switch is in the central position.	In this position, the low beam and tail light are switched on.
	The light switch is turned counter-clockwise.	In this position, the high beam and the tail light are switched on.


6.6 Light switch (All US models and 300 PRO BR)

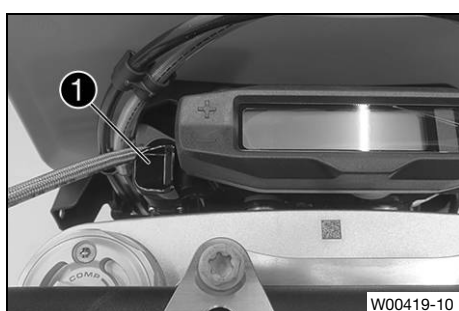

The light switch ① is located to the left of the combination instrument.

Condition		Meaning
	Light switch is pulled out to the stop.	In this position, the light is switched off.
	Light switch is pressed in up to the stop.	In this position, the low beam and tail light are switched on.

6.7 Turn signal switch (All 300 EU models and AR)

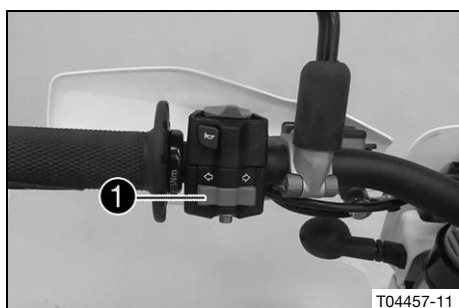

Turn signal switch ① is fitted on the left side of the handlebar.

Condition		Meaning
	Turn signal switch pressed to the left	Left turn signal on.
	Turn signal switch pressed to the right	Right turn signal on.

6.8 Electric starter



Electric starter ① is fitted on the right side of the handlebar.

Condition		Meaning
	Electric starter (⌘) in the basic position	No function
	Electric starter (⌘) pressed	In this position, the starter motor is actuated.


6.9 Kill switch



Kill switch 1 is fitted on the right side of the handlebar.

Condition	Meaning
Kill button  is not pressed.	In this position, the ignition circuit is closed, and the engine can be started.
The kill button  is pressed and held.	In this position, the ignition circuit is interrupted, a running engine stops, and an engine at standstill will not start.

6.10 Combination switch

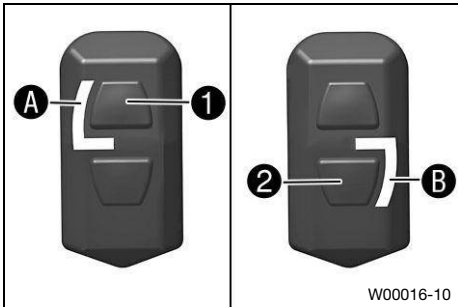

i Note
If the combination switch is mounted, the vehicle's road permit, if any, expires.
The vehicle may only be operated in closed-off areas away from public road traffic if the combination switch is installed.

If the combination switch is mounted, the vehicle's road permit, if any, expires.
The combination switch is fitted on the left side of the handlebar.
The engine characteristic can be changed using button 1 and button 2 on the combination switch.

Condition	Meaning
STANDARD 1	STANDARD mapping is activated when the indicator lamp A lights up.
ADVANCED 2	ADVANCED mapping is activated when the indicator lamp B lights up.

i Note
If no combination switch is installed, the last selected mapping is activated.
If a combination switch has never been mounted, the **STANDARD** mapping is activated.

6.11 Overview of indicator lights (All EU and AR models)



Condition		Meaning
	Turn signal indicator lamp flashes green	The turn signal is switched on.
	The high beam indicator lamp lights up blue	The high beam is switched on.
	Malfunction indicator lamp lights up/flashes yellow	The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized dealer.
	The fuel level warning lamp lights up yellow	The fuel level has reached the reserve mark.
	The oil level warning lamp lights up red	Oil level has reached the MIN marking. Ride for no more than until the remaining fuel in the tank is depleted and at the next opportunity refuel with 2-stroke oil.

6.12 Overview of indicator lights (All US models and 300 PRO BR)



Condition		Meaning
	Malfunction indicator lamp lights up/flashes yellow	The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized dealer.
	The fuel level warning lamp lights up yellow	The fuel level has reached the reserve mark.
	The oil level warning lamp lights up red	Oil level has reached the MIN marking. Ride for no more than until the remaining fuel in the tank is depleted and at the next opportunity refuel with 2-stroke oil.

6.13 Opening the fuel tank cap



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

 
- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE


Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Press release button **1**, turn the fuel tank cap counterclockwise, and lift it off.

 6.14 Closing the fuel tank cap



- Mount the fuel tank filler cap and turn it clockwise until release button **1** engages.

 
Route hose of fuel tank vent **2** without kinks.

6.15 Opening 2-stroke oil tank cap



- Fold loop **1** upward.
- Turn the 2-stroke oil tank cap counterclockwise and pull it up.

6.16 Closing 2-stroke oil tank cap



- Put the 2-stroke oil tank cap on and turn it clockwise.
- ✓ The 2-stroke oil tank cap engages.
- Fold loop ① down.



6.17 Cold start button


The electronic fuel injection extends the injection time when the engine is cold and the ambient temperature is low. To help the engine burn the increased fuel quantity, it must be supplied with additional oxygen by pulling the cold start button.



Note

If the engine is warm, the cold start button must be deactivated.


(All 300 EU models and AR)

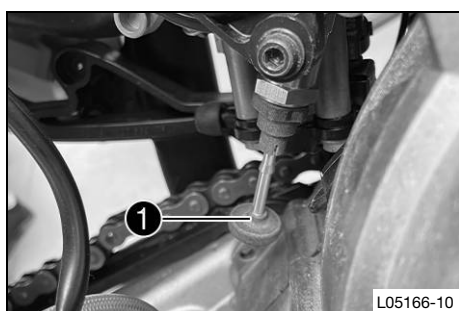

The cold start button ① is fitted on the side of the throttle valve body.

Condition	Meaning
Cold start button is pressed in as far as it will go and turned a quarter turn.	Cold start button activated
The cold start button has returned to its basic position after another quarter turn.	Cold start button deactivated


(All US, BR models and 250 EU)

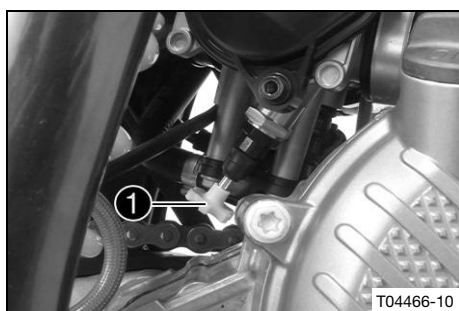

The cold start button ① is fitted on the side of the throttle valve body.

Condition	Meaning
Cold start button is pressed in as far as it will go and turned a quarter turn.	Cold start button activated
The cold start button has returned to its basic position after another quarter turn.	Cold start button deactivated

6.18 Idle speed adjustment screw

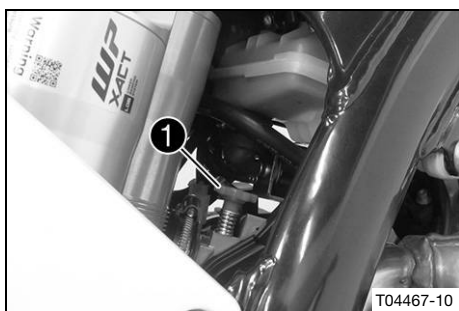

The idle setting of the throttle body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.

An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using idle speed adjustment screw ①.


i Note

If the idle speed is high, the engine is slow to run, the engine brake is low and the throttle response is aggressive, the adjusting screw must be turned counterclockwise.


If the idle speed is low, the engine is running fast, the engine brake is high and the throttle response is not clean, the adjusting screw must be turned clockwise.

For optimum performance, it is recommended to adjust the idle speed using the dedicated functions in the diagnostics tool.

6.19 Gear shift lever

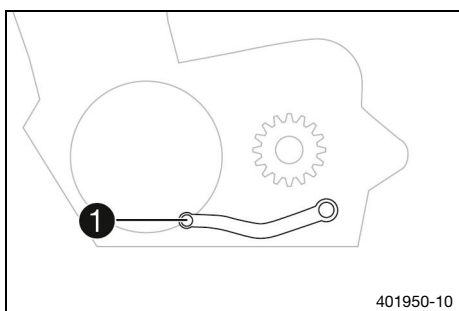

 
Gear shift lever ① is mounted on the left of the engine.



The gear positions can be seen in the figure.


The neutral or idle position is between the first and second gears.

6.20 Brake pedal

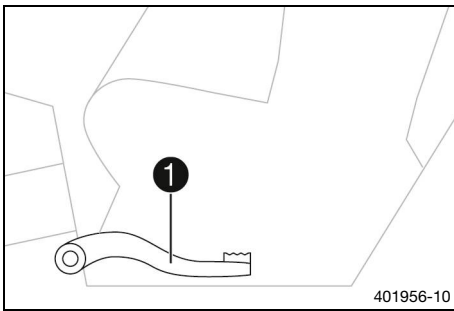


Brake pedal ❶ is located in front of the right footpeg. The rear brake is operated with the brake pedal.

6.21 Side stand

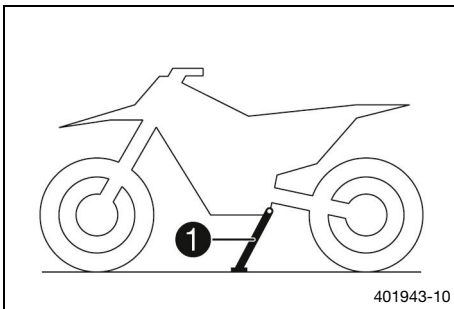


The side stand ❶ is located on the left of the vehicle. The side stand is used for parking the motorcycle.

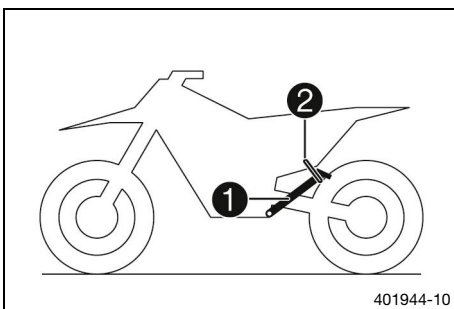

Note

When you are riding, side stand ❶ must be folded up and secured with rubber band ❷.

6.22 Steering lock (All 300 EU models and AR)

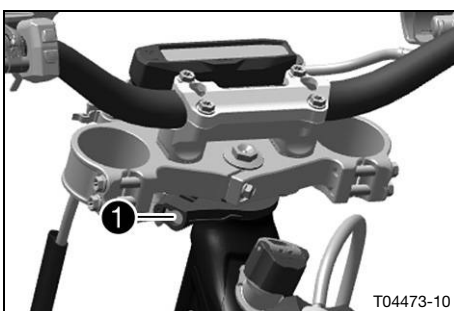

Steering lock ❶ is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering and riding is then no longer possible.

6.23 Locking the steering (All 300 EU models and AR)



NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.




- Park the vehicle.
 - Turn handlebar as far as possible to the right.
 - Insert the key for the steering lock into the steering lock, turn it to the left, press it in, and turn it to the right. Pull out the key for the steering lock.
- ✓ Steering is no longer possible.



Note

Never leave the key for the steering lock in the steering lock.

6.24 Unlocking the steering (All 300 EU models and AR)

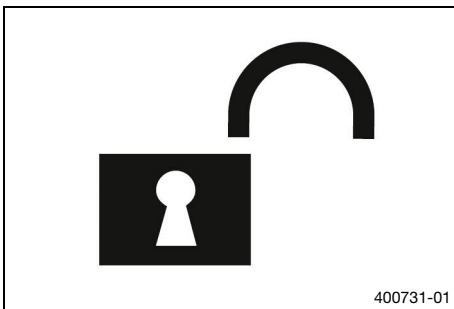


- Insert the key for the steering lock into the steering lock, turn it to the left, pull it out, and turn it to the right. Pull out the key for the steering lock.

Never leave the key for the steering lock in the steering lock.

- ✓ The handlebar can now be moved again.

7.1 Combination instrument overview

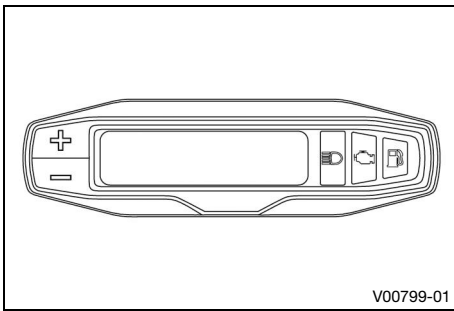


- The **+** button is used to select menus and make settings.
- The **-** button is used to select menus and make settings.

i Note

When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.


7.2 activation and testing

7.2.1 Activating combination instrument

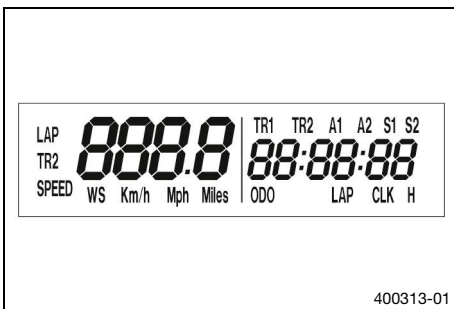

The combination instrument is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

7.2.2 Display test

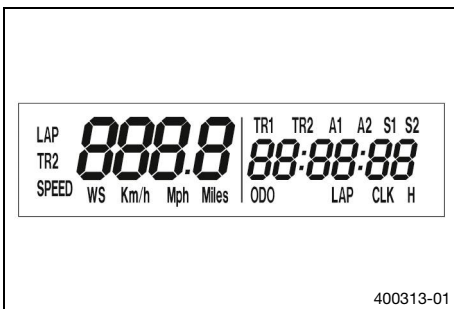

To enable you to check that the display is functioning properly, all display segments light up briefly.

7.2.3 WS (wheel size)



After the display function check, the wheel circumference **WS** is displayed briefly.



Note

The number 2205 equals the circumference of the 21" front wheel with standard tires.

The indicator then changes to the last selected mode.

7.3 Setting kilometers or miles




Note

If the unit is changed, value **ODO** is retained and converted accordingly.

The values **TR1**, **TR2**, **A1**, **A2** and **S1** are cleared when the unit of measure is changed.

Condition: Motorcycle is stationary

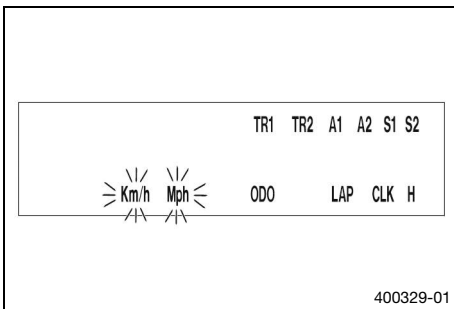

- Briefly and repeatedly press button until indicator **H** appears in the bottom right of the display.
- Press button for 2–3 seconds.
 - ✓ The Setup menu is displayed and the active functions are shown.
- Press button briefly until indicator **Km/h / Mph** flashes.

- Select one of the following alternatives.

Adjusting the Km/h

- Press button .

Adjusting the Mph

- Press button .
- Wait 3 - 5 seconds.
 - ✓ The settings are stored.




Note

If no button is pressed for 10–12 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

7.4 Setting the combination instrument

Note
When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

Condition: Motorcycle is stationary

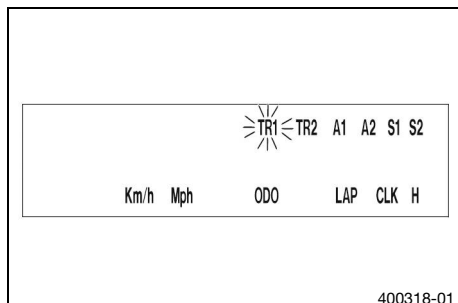

- Briefly and repeatedly press button **+** until indicator **H** appears in the bottom right of the display.
- Press button **+** for 2–3 seconds.
 - ✓ The Setup menu is displayed and the active functions are shown.

Note
If no button is pressed for 10–12 seconds, the settings are automatically saved.
If no button is pressed for 20 seconds, or if an impulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.

- Press button **+** briefly until the desired function flashes.
 - ✓ The selected function flashes.
- Select one of the following alternatives.

Activating the function

- Press button **+**.
 - ✓ The symbol continues to appear in the display and the indicator switches to the next function.


Deactivating a function

- Press button **–**.
 - ✓ The symbol disappears in the display and the indicator switches to the next function.



7.5 Setting the clock

Condition: Motorcycle is stationary

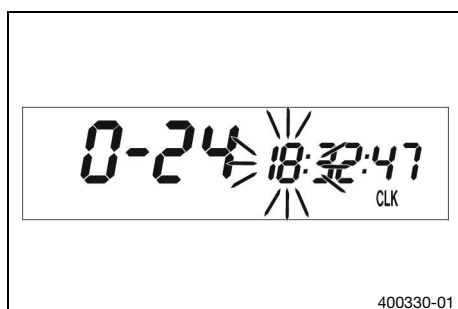

- Briefly and repeatedly press button **+** until indicator **CLK** appears in the bottom right of the display.
- Press button **+** for 2–3 seconds.
 - ✓ The hour display flashes.
- Adjust the hour display with the **button +** or **button –**.
- Wait 3 - 5 seconds.
 - ✓ The next segment of the display flashes and can be set.
- You can set the following segments in the same way as the hours by pressing the **button +** and **button –**.

Note
The seconds can only be set to zero.
If no button is pressed for 15–20 seconds, or if a pulse comes from the wheel speed sensor, the settings are automatically saved and the setup menu is closed.




7.6 Viewing the lap time



Note

This function can only be opened if lap times have actually been timed.

Condition: Motorcycle is stationary

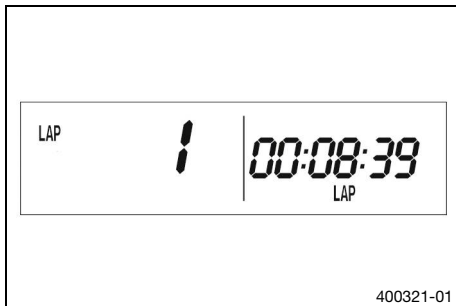


- Briefly and repeatedly press button **+** until indicator **LAP** appears in the bottom right of the display.
- Press button **+** briefly.
 - ✓ **LAP 1** appears on the left side of the display.
- The laps 1–10 can be viewed with button **—**.
- Press and hold button **+** for 3–5 seconds.
 - ✓ The lap times are deleted.
- Press button **+** briefly.
 - ✓ Next display mode



Note

When an impulse is received from the wheel speed sensor, the left side of the display changes back to the **SPEED** mode.

7.7 Display mode SPEED (speed)

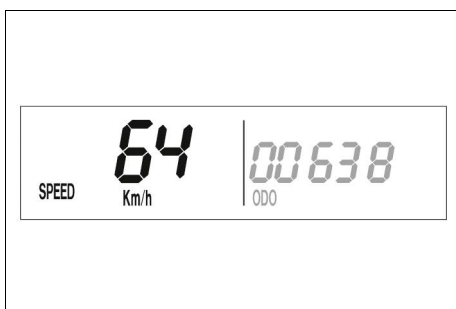

- Briefly and repeatedly press button **+** until indicator **SPEED** appears in the left of the display.

The current speed is displayed in the **SPEED** display mode.

The current speed can be displayed in **Km/h** or **Mph**.




Note

Make the setting according to the country.

When an impulse comes from the front wheel, the left side of the display changes to the **SPEED** mode and the current speed is shown.

7.8 Display mode SPEED/H (operating hours)

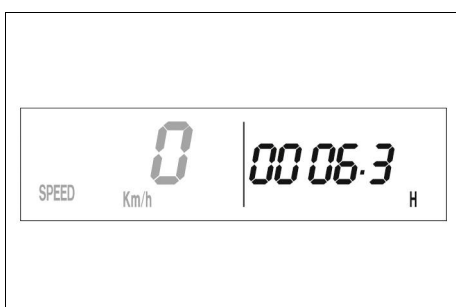

Condition: Motorcycle is stationary

- Briefly and repeatedly press button **+** until indicator **H** appears in the bottom right of the display.

In display mode **H**, the operating hours of the engine are displayed.

The operating hour counter stores the total traveling time.



Note


The operating hour counter is necessary for ensuring that service work is carried out at the right intervals.

If the combination instrument is in **H** display mode when starting off, it automatically changes to the **ODO** display mode.

The **H** display mode is suppressed during the journey.

– Press button  for 2–3 seconds.	The display changes to the setup menu for the combination instrument functions.
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.9 Setup menu

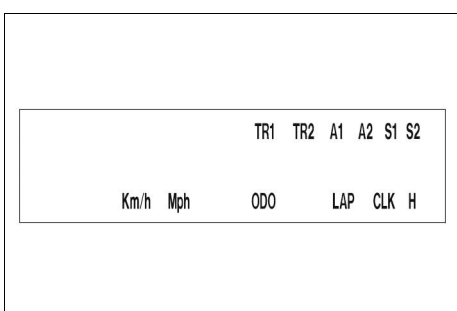

Condition: Motorcycle is stationary

- Briefly and repeatedly press button  until indicator **H** appears in the bottom right of the display.
- Press button  for 2–3 seconds.

The Setup menu displays the active functions.


Note

Repeatedly press the button  briefly until the desired function is reached.

If no button is pressed for 20 seconds, the settings are automatically saved.

– Press button  briefly.	Activates the flashing display and changes to the next display
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Deactivates the flashing display and changes to the next display
– Press button  for 2–3 seconds.	No function
– Wait 3 - 5 seconds.	Changes to the next display without changes
– Wait 10–12 seconds.	Setup menu starts, stores the settings, and changes to H or ODO .

7.10 Adjusting the unit of measurement

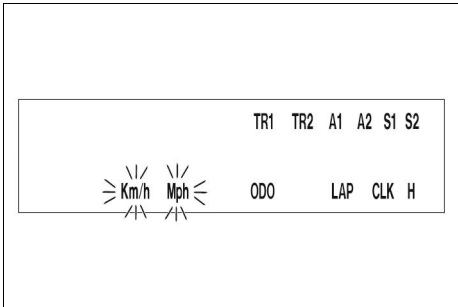

- Condition: Motorcycle is stationary
- Press button **+** for 2–3 seconds.
 - Briefly and repeatedly press button **+** until indicator **H** appears in the bottom right of the display.
 - Press button **+** briefly until indicator **Km/h / Mph** flashes.
- In measurement unit mode, you can change the unit of measurement.

i Note
If no button is pressed for 5 seconds, the settings are automatically saved.

– Press button + briefly.	Starts selection, activates Km/h display
– Press button + for 2–3 seconds.	No function
– Press button – briefly.	Activates Mph display
– Press button – for 2–3 seconds.	No function
– Wait 3 - 5 seconds.	Changes to the next display, changes from selection to the Setup menu
– Wait 10–12 seconds.	Stores and closes the Setup menu

7.11 Display mode SPEED/CLK (time)




- Briefly and repeatedly press button **+** until indicator **CLK** appears in the bottom right of the display.
- The time is shown in display mode **CLK**.

– Press button + for 2–3 seconds.	The display changes to the Setup menu of the clock.
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	No function

– Press button  briefly.	No function
---	-------------

7.12 Setting the clock

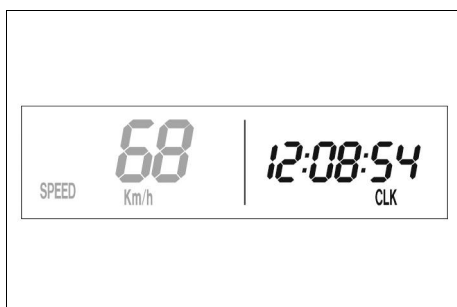

Condition: Motorcycle is stationary

- Briefly and repeatedly press button  until indicator **CLK** appears in the bottom right of the display.
- Press button  for 2–3 seconds.

– Press button  for 2–3 seconds.	Increases the value
– Press button  briefly.	Increases the value
– Press button  for 2–3 seconds.	Reduces the value
– Press button  briefly.	Reduces the value
– Wait 3 - 5 seconds.	Changes to the next value
– Wait 10–12 seconds.	Exit the Setup menu

7.13 Display mode SPEED/LAP (lap time)



- Briefly and repeatedly press button  until indicator **LAP** appears in the bottom right of the display.

In the **LAP** display mode, up to 10 lap times can be timed with the stop watch.

Note
If the lap time continues running after the button  is pressed, 9 memory locations are filled.
Lap 10 must be timed with the button .


– Press button  for 2–3 seconds.	Stop watch and lap time are reset.
– Press button  briefly.	Next display mode

7 Combination instrument



– Press button  for 2–3 seconds.	Stops the stop watch
– Press button  briefly.	Starts the stop watch or stops the current lap time measurement, stores it and the stop watch starts the next lap.

7.14 Viewing the lap time

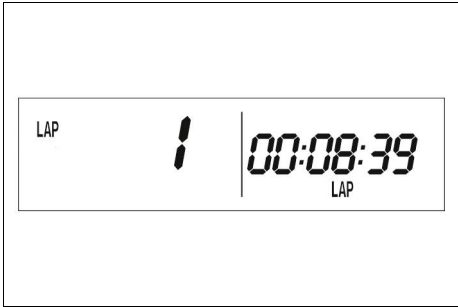

Condition: Motorcycle is stationary

– Briefly and repeatedly press button  until indicator LAP appears in the bottom right of the display.	
– Press button  briefly.	
– Press button  for 2–3 seconds.	Stop watch and lap time are reset.
– Press button  briefly.	Select a lap from 1–10
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	View next lap time

7.15 Display mode SPEED/ODO (odometer)



– Briefly and repeatedly press button  until indicator ODO appears in the bottom right of the display.	
The total traveled distance is shown in display mode ODO .	
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.16 Display mode SPEED/TR1 (trip master 1)



- Briefly and repeatedly press button **+** until indicator **TR1** appears in the top right of the display.

TR1 (trip master 1) runs constantly and counts up to 999.9.

You can use it to measure trips or the distance between refueling stops.


TR1 is coupled with **A1** (average speed 1) and **S1** (stop watch 1).

i Note

If 999.9 is exceeded, the values of **TR1**, **A1** and **S1** are automatically reset to 0.0.

– Press button + for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	No function
– Press button – briefly.	No function

7.17 Display mode SPEED/TR2 (trip master 2)

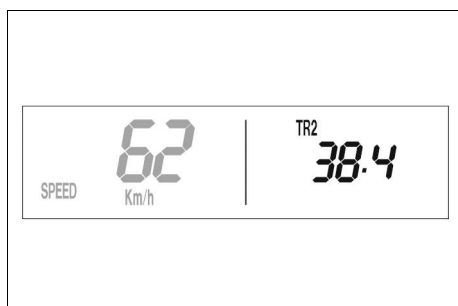


- Briefly and repeatedly press button **+** until indicator **TR2** appears in the top right of the display.

It **TR2** (trip master 2) runs constantly and counts up to 999.9.

– Press button + for 2–3 seconds.	Clears values TR2 and A2
– Press button + briefly.	Next display mode
– Press button – for 2–3 seconds.	Reduces value TR2
– Press button – briefly.	Reduces value TR2

7.18 Adjusting TR2 (trip master 2)

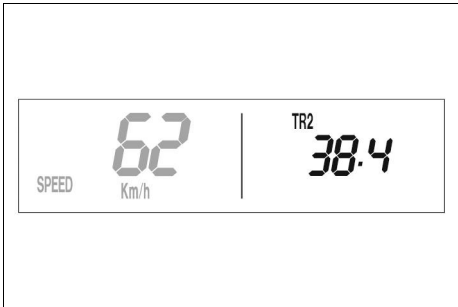

Condition: Motorcycle is stationary


- Briefly and repeatedly press button **+** until indicator **TR2** appears in the top right of the display.
- Press the **button -** for 2–3 seconds until **TR2** flashes.

The displayed value can be set manually with the **button +** and **button -**. This is a very practical function when riding using the road book.

Note
The value of **TR2** can also be corrected manually during the journey with **button +** and **button -**.
If 999.9 is exceeded, the value of **TR2** is automatically reset to 0.0.

- Press button + for 2–3 seconds.	Increases value TR2
- Press button + briefly.	Increases value TR2
- Press button - for 2–3 seconds.	Reduces value TR2
- Press button - briefly.	Reduces value TR2
- Wait 10–12 seconds.	Stores and closes the Setup menu

7.19 Display mode SPEED/A1 (average speed 1)

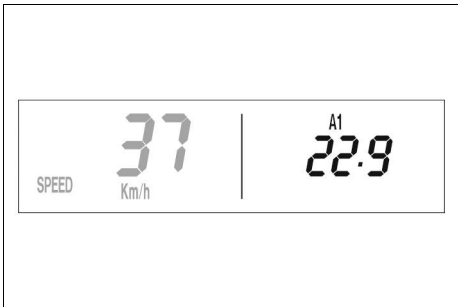

- Briefly and repeatedly press button **+** until indicator **A1** appears in the top right of the display.

A1 (average speed 1) shows the average speed calculated using **TR1** (trip master 1) and **S1** (stop watch 1).
The calculation of this value is activated by the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

- Press button + for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
- Press button + briefly.	Next display mode

– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.20 Display mode SPEED/A2 (average speed 2)



- Briefly and repeatedly press button  until indicator **A2** appears in the top right of the display.

A2 (average speed 2) shows the average speed on the basis of the current speed if the stop watch **S2** (stop watch 2) is running.




Note

The displayed value can differ from the actual average speed if **S2** was not stopped after the ride.

– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.21 Display mode SPEED/S1 (stop watch 1)

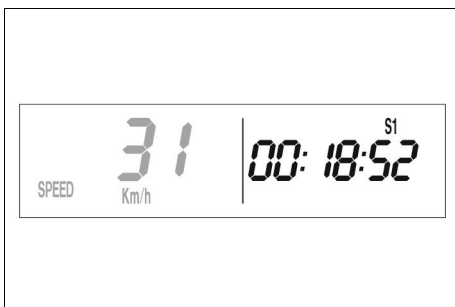


- Briefly and repeatedly press button  until indicator **S1** appears in the top right of the display.

S1 (Stop watch 1) shows the riding time based on **TR1** and continues running as soon as an impulse arrives from the wheel speed sensor.

The calculation of this value starts with the first impulse from the wheel speed sensor and ends 3 seconds after the last impulse.


– Press button  for 2–3 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
– Press button  briefly.	Next display mode

7 Combination instrument

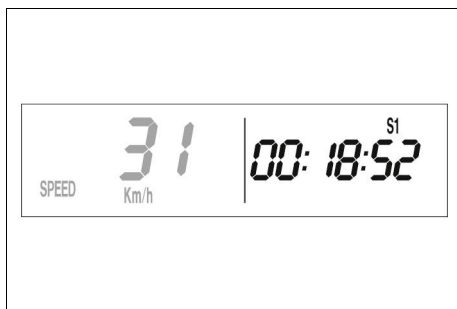

– Press button  for 2–3 seconds.	No function
– Press button  briefly.	No function

7.22 Display mode SPEED/S2 (stop watch 2)

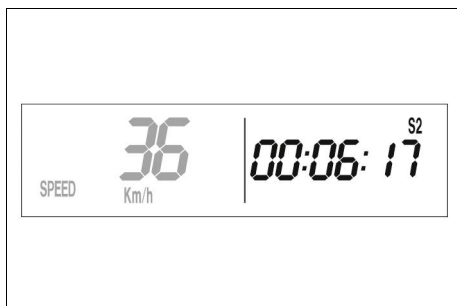

- Briefly and repeatedly press button  until indicator **S2** appears in the top right of the display.

S2 (Stop watch 2) is a manual stop watch.

If **S2** is running in the background, indicator **S2** in the display flashes.

– Press button  for 2–3 seconds.	The displays of S2 and A2 are set to 0,0.
– Press button  briefly.	Next display mode
– Press button  for 2–3 seconds.	No function
– Press button  briefly.	Starts or stops S2

7.23 Table of functions

Display	Press button  for 2–3 seconds.	Press button  briefly.	Press button  for 2–3 seconds.	Press button  briefly.	Wait 3 - 5 seconds.	Wait 10–12 seconds.
Display mode SPEED/S2 (stop watch 2)	The displays of S2 and A2 are set to 0,0.	Next display mode	No function	Starts or stops S2		
Display mode SPEED/S1 (stop watch 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/A2 (average speed 2)	No function	Next display mode	No function	No function		
Display mode SPEED/A1 (average speed 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		

Display	Press button  for 2–3 seconds.	Press button  briefly.	Press button  for 2–3 seconds.	Press button  briefly.	Wait 3 - 5 seconds.	Wait 10–12 seconds.
Adjusting TR2 (trip master 2)	Increases value TR2	Increases value TR2	Reduces value TR2	Reduces value TR2		Stores and closes the Setup menu
Display mode SPEED/TR2 (trip master 2)	Clears values TR2 and A2	Next display mode	Reduces value TR2	Reduces value TR2		
Display mode SPEED/TR1 (trip master 1)	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode	No function	No function		
Display mode SPEED/ODO (odometer)	No function	Next display mode	No function	No function		
Viewing the lap time	Stop watch and lap time are reset.	Select a lap from 1–10	No function	View next lap time		
Display mode SPEED/LAP (lap time)	Stop watch and lap time are reset.	Next display mode	Stops the stop watch	Starts the stop watch or stops the current lap time measurement, stores it and the stop watch starts the next lap.		
Setting the clock	Increases the value	Increases the value	Reduces the value	Reduces the value	Changes to the next value	Exit the Setup menu
Display mode SPEED/CLK (time)	The display changes to the Setup menu of the clock.	Next display mode	No function	No function		
Adjusting the unit of measurement	No function	Starts selection, activates Km/h display	No function	Activates Mph display	Changes to the next display, changes from selection to the Setup menu	Stores and closes the Setup menu
Setup menu	No function	Activates the flashing display and changes to the next display	No function	Deactivates the flashing display and changes to the next display	Changes to the next display without changes	Setup menu starts, stores the settings, and changes to H or ODO .

7 Combination instrument

Display	Press button  for 2–3 seconds.	Press button  briefly.	Press button  for 2–3 seconds.	Press button  briefly.	Wait 3 - 5 seconds.	Wait 10–12 seconds.
Display mode SPEED/H (operating hours)	The display changes to the setup menu for the combination instrument functions.	Next display mode	No function	No function		

7.24 Table of conditions and menu activation

Display	Motorcycle is stationary	Menu can be activated
Display mode SPEED/S2 (stop watch 2)		•
Display mode SPEED/S1 (stop watch 1)		•
Display mode SPEED/A2 (average speed 2)		•
Display mode SPEED/A1 (average speed 1)		•
Adjusting TR2 (trip master 2)	•	
Display mode SPEED/TR2 (trip master 2)		•
Display mode SPEED/TR1 (trip master 1)		•
Display mode SPEED/ODO (odometer)		
Viewing the lap time	•	
Display mode SPEED/LAP (lap time)		•
Setting the clock	•	
Display mode SPEED/CLK (time)		
Adjusting the unit of measurement	•	
Setup menu	•	
Display mode SPEED/H (operating hours)	•	
Display mode SPEED (speed)		

8.1 Notes on preparing for first use



DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themselves and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



WARNING

Danger of accidents The vehicle is not designed to carry passengers.

- Do not ride with a passenger.



WARNING

Danger of accidents The brake system fails in the event of overheating.

If the brake pedal is not released, the brake pads grind continuously.

- Take your foot off the brake pedal when you are not braking.



WARNING

Danger of accidents Not adapting the riding style constitutes a major risk.

- Adapt the vehicle speed to the road conditions and your riding ability.



WARNING

Danger of accidents Total weight and axle loads influence the handling characteristic.

- Do not exceed the maximum permissible total weight or the axle loads.



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



WARNING

Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

- Make sure that only tires of the same tread type are mounted to the front and rear wheel.



WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Note

When using the vehicle, remember that others may feel disturbed by excessive noise.

- Ensure that the pre-delivery inspection has been carried out by an authorized contractual partner.
 - ✓ The delivery certificate is transferred upon vehicle handover.
- Read the entire owner's manual before riding for the first time.
- Get to know the controls.
- Adjust the basic position of the clutch lever.  (p. 102)
- Adjust the free travel of the handbrake lever.  (p. 106)
- Adjust the basic position of the brake pedal.   (p. 112)
- Adjust the basic position of the gear shift lever.   (p. 146)

8 Preparing for use

- Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride.



Note

When off-road, it is recommended that you be accompanied by another person with another vehicle so that you can help each other.

- Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
- Do not make any off-road trips that exceed your ability and experience.
- Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.
- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.



Note

Motorcycles react sensitively to any changes of weight distribution.

- The maximum permissible overall weight and the maximum permissible axle loads must not be exceeded.

Maximum permissible total weight	335 kg (738.5 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)

- Check the spoke tension. (p. 122)

The spoke tension must be checked after half an hour of operation.

- Run in the engine. (p. 44)

8.2 Running in the engine

- During the running-in phase, do not exceed the specified engine performance.

Maximum engine power	
during the first 3 operating hours	< 70 %
during the first 5 operating hours	< 100 %

Avoid fully opening the throttle.

- Check the idle speed regularly.

Idle speed	1,400 rpm ... 1,500 rpm (23.33 Hz ... 25.00 Hz)
------------	--




Note

The idle speed may change during the run-in time.

- » If the idle speed changes:
 - Adjust the idle speed. (p. 145)

8.3 Starting performance of lithium-ion batteries at low temperatures

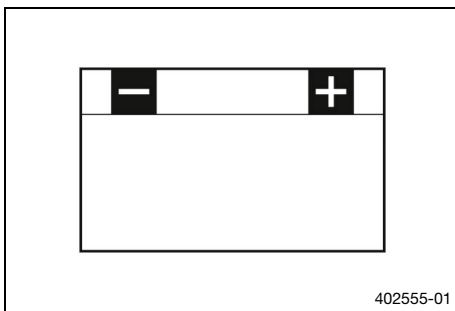

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 15 °C (60 °F). At low temperatures, however, the starting power of lithium-ion batteries drops to below that of lead batteries.

Several attempts to start may be required. Press the start button for 5 seconds, and wait 30 seconds between attempts. The pauses are necessary so that the heat created can distribute through the lithium-ion battery and the 12 V battery is not damaged.

If the charged lithium-ion battery is unable to actuate the starter motor or does so only weakly at temperatures below 15 °C (60 °F), the battery is not faulty but needs to be warmed up internally to increase its starting power (current output).

The starting power increases as the battery warms up.

8.4 Preparing the vehicle for difficult operating conditions



Note

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

- Clean the air filter and air filter box. (p. 87)

Check the air filter approx. every 30 minutes.

- Check the electrical socket connector for humidity and corrosion and to ensure it is firmly seated.
 - » If moisture, corrosion, or damage is found:
 - Clean and dry the connector, or change it if necessary.
- Rides on dry sand. (p. 45)
- Rides on wet sand. (p. 46)
- Rides on wet and muddy surfaces. (p. 47)
- Riding at high temperatures or slow speed. (p. 47)
- Riding at low temperatures and in snow. (p. 47)



8.5 Preparing the vehicle for rides on dry sand



- Mount the air filter dust protection.

Read the accompanying mounting instructions.

Air filter dust protection cover (79006920000)

8 Preparing for use



- Mount the air filter sand protection.

Read the accompanying mounting instructions.

Air filter sand protection (79006922000)



- Clean the chain.

Chain cleaner  (p. 194)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 189)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Change the piston every 10 operating hours.

8.6 Preparing the vehicle for rides on wet sand



- Mount the air filter water protection.

Read the accompanying mounting instructions.

Air filter water protection (79006921000)



- Clean the chain.

Chain cleaner  (p. 194)

- Mount the steel sprocket.
- Grease the chain.

Universal oil spray  (p. 189)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.

Change the piston every 10 operating hours.

8.7 Preparing for rides on wet and muddy surfaces



- Mount the air filter water protection.

Read the accompanying mounting instructions.

Air filter water protection (79006921000)



- Mount the steel sprocket.
- Clean the motorcycle. 📖 (p. 160)
- Straighten the bent radiator fins carefully.

8.8 Preparing vehicle for rides at high temperature or slow speed



- Adjust the secondary transmission to the road conditions.



Note

The engine oil quickly gets hot if the clutch has to be operated very often due to an excessively high secondary transmission.

- Clean the chain.

Chain cleaner 📖 (p. 194)

- Clean the radiator fins.
- Straighten the bent radiator fins carefully.
- Check the coolant level. 📖 (p. 137)

8.9 Preparing the vehicle for low temperatures or snow



- Mount the air filter water protection.


Read the accompanying mounting instructions.

Air filter water protection (79006921000)

9.1 checks and maintenance measures when preparing for use

Note

Before every trip, check the condition of the vehicle and ensure that it is safe to operate.
The vehicle must be in perfect technical condition when it is being operated.

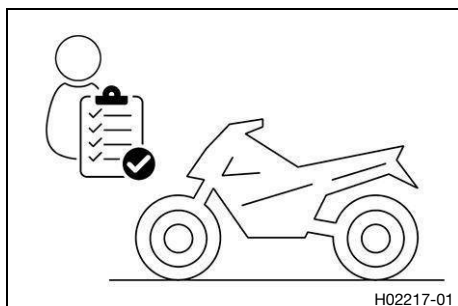

- Check the gear oil level.  (p. 157)
- Check the electrical system.
- Check the brake fluid level for the front brake.  (p. 107)
- Check the brake fluid level for the rear brake.  (p. 113)
- Check that the brake pads of the front brake are secured.  (p. 109)
- Check that the brake pads of the rear brake are secured.  (p. 115)
- Check that the brake system is functioning properly.
- Check the coolant level.  (p. 137)
- Check the chain for contaminant.  (p. 95)
- Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 98)
- Check the chain tension.  (p. 96)
- Check the tire condition.  (p. 121)
- Check the tire pressure.  (p. 122)
- Make sure that the rim locks are installed.
- Check the spoke tension.  (p. 122)

The spoke tension must be checked regularly as incorrect spoke tension will severely impair riding safety.

- Clean the dust boots of the fork legs.  (p. 70)
- Bleed the fork legs.  (p. 69)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.
- Check 2-stroke oil level.  (p. 151)

9.2 Starting the vehicle



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

 
- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



NOTE


Engine failure Running a cold engine at high engine speeds negatively impacts the service life of the engine.

- Always warm up the engine at low engine speeds.



- Take the motorcycle off side stand ① and secure the side stand with rubber band ②.
- Shift the transmission into the neutral position.
- Press the cold start button in as far as it will go and turn it a quarter turn.
- Deactivate the cold start button after approx. 10 seconds at high idle speed.

If the engine is warm, the cold start button must be deactivated.

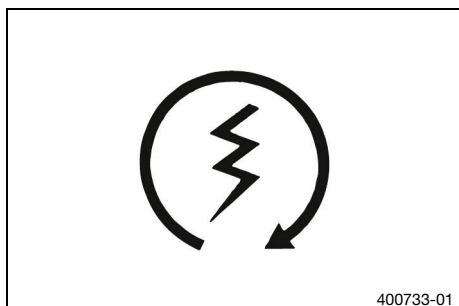

- Press the electric starter.

Press the electric starter for a maximum of 5 seconds.

Wait for 30 seconds before a further attempt at starting.

Do not open the throttle.



Note

At temperatures below 15 °C (60 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

The malfunction indicator light lights up during the starting process.

9.3 Starting off



Note

Switch on the light before riding so that you are easily visible to other road users.

When you are riding, the side stand must be folded up and secured with the rubber band.

- Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.

9.4 Shifting, riding



WARNING

Engine failure The engine will not be lubricated unless there is 2-stroke oil in the oil tank.

If the oil level warning light lights up, the 2-stroke oil is sufficient for the remaining tank of fuel.

- As soon as the oil level warning light lights up, ride for no longer than until the remaining fuel in the tank is depleted.
- At the next opportunity add 2-stroke oil before you refuel.
- Time the oil pump if the 2-stroke oil hose has been removed or the 2-stroke oil tank has been fully depleted in error.



WARNING

Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.

- Do not downshift to a lower gear at high engine speeds.

Note

If you hear unusual noises while riding, stop immediately, switch off the engine, and contact an authorized contractual partner.

First gear is used for starting off or for steep inclines.

- Shift into a higher gear when conditions allow (incline, riding situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
- If the cold start function was activated, deactivate the cold start button after the engine has warmed up.
- After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is $\frac{3}{4}$ open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
- Only open the throttle as much as the engine can handle. Abruptly opening the throttle increases fuel consumption.
- To shift down, brake and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

≥ 2 min
- Avoid frequent and lengthy slipping of the clutch. This causes the gear oil, engine, and cooling system to heat up.
- Ride at a low engine speed instead of at a high engine speed when riding the clutch.

9.5 Braking



WARNING

Danger of accidents A spongy pressure point on the front or rear brake reduces the brake action.

- Do not drive the vehicle if the brake system has a spongy pressure point.



WARNING

Danger of accidents Braking with excessive force locks the wheels.

- Adapt your braking to the riding situation and the road conditions.



WARNING

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- On sandy, wet, or slippery surfaces, use the rear brake.
- Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
- Use the brake action of the engine on long downhill stretches. To do so, shift back one or two gears, but do not overrev the engine. This means that significantly less braking is required and means the brake system does not overheat.

9.6 Stop, park



WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.



WARNING

Risk of injury People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Secure the vehicle against unauthorized access.



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.



NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

- Brake the motorcycle.
- Shift the transmission into the neutral position.
- Press kill switch  when the engine is at idle speed until the engine stops.
- Park the motorcycle on firm ground.



9.7 Transportation



NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.



NOTE


Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

9 Riding instructions

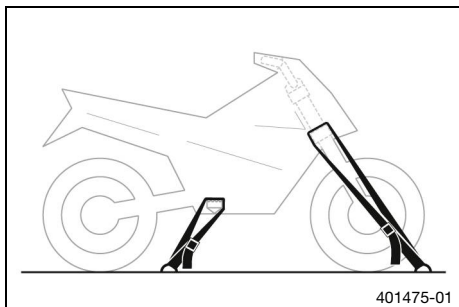

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

9.8 Refueling



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



NOTE

Material damage Inadequate fuel quality can lead to losses in performance and consequential damage.

- Refuel only with clean fuel that meets the specified standards.




NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

-
- Open the fuel tank cap.  (p. 23)

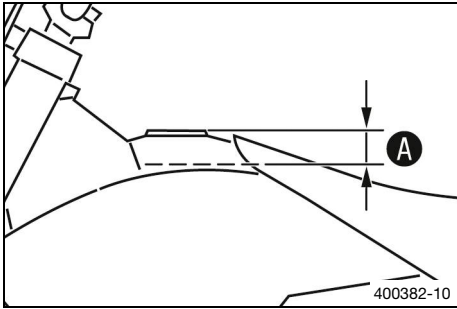

- Fill the fuel tank with fuel no higher than **A**.

Level A	35 mm (1.38 in)
Do not refuel using pre-mixed fuel.	
Total fuel tank capacity, approx.	
(All except BR models) Super unleaded (ROZ 95) (p. 188)	8.5 l (2.25 liq. gal _{US})
(TE 300 PRO BR) Super unleaded, type C (ROZ 95/RON 95/PON 91) (p. 188)	

- Close the fuel tank cap. (p. 24)



9.9 Adding 2-stroke oil




WARNING

Engine failure The engine will not be lubricated unless there is 2-stroke oil in the oil tank.

If the oil level warning light lights up, the 2-stroke oil is sufficient for the remaining tank of fuel.

- As soon as the oil level warning light lights up, ride for no longer than until the remaining fuel in the tank is depleted.
- At the next opportunity add 2-stroke oil before you refuel.
- Time the oil pump if the 2-stroke oil hose has been removed or the 2-stroke oil tank has been fully depleted in error.

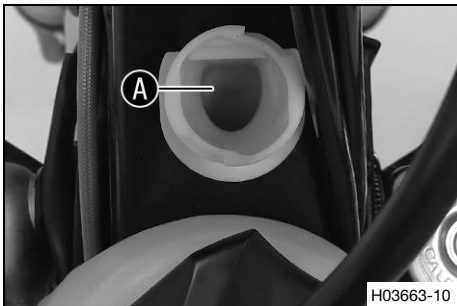

- Open 2-stroke oil tank cap. (p. 24)
- Fill the 2-stroke oil tank up to the lower edge **A** of the filler neck.

Only use 2-stroke oil which is appropriate for separate lubrication.

2-stroke oil tank content approx.

2-stroke engine oil (p. 189) fully synthetic	0.8 l (0.21 liq. gal _{US})
--	---

- Close 2-stroke oil tank cap. (p. 25)



10.1 Service schedule

Any further work that results from the service work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized contractual partners for the electronic proof of service. Your authorized contractual partner will be happy to advise you.

	Every 24 months				
	Every 90 operating hours				
	Every 45 operating hours				
	After 15 operating hours / Every 15 operating hours				
	After one operating hour				
Read out the fault memory using the diagnostics tool. 	○	●	●	●	●
Check that the electrical equipment is functioning properly. 	○	●	●	●	●
Check and charge the 12 V battery. 	○	●	●	●	●
Check that the brake pads of the front brake are secured.  (p. 109)		●	●	●	●
Check that the brake pads of the rear brake are secured.  (p. 115)		●	●	●	●
Check the brake discs.  (p. 106)		●	●	●	●
Check the brake lines for damage and tightness.		●	●	●	●
Check the brake fluid level for the front brake.  (p. 107)		●	●		
Change the brake fluid for the front brake. 				●	●
Check the brake fluid level for the rear brake.  (p. 113)		●	●		
Change the brake fluid for the rear brake. 				●	●
Check/correct the fluid level of the hydraulic clutch.  (p. 102)			●		
Change the hydraulic clutch fluid.   (p. 103)				●	●
Check the free travel on the hand brake lever.  (p. 106)	○	●	●	●	●
Check the free travel of the brake pedal.  (p. 112)		●	●	●	●
Check the idle speed. 	○	●	●	●	●
Change the gear oil.   (p. 157)	○		●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing. 	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing. 		●	●	●	●
Check that the clutch cables are undamaged, routed without kinks, and set correctly.		●	●	●	●
Check the frame.   (p. 100)		●	●	●	
Check the swingarm.   (p. 100)		●	●	●	
Check the swingarm bearing for play. 			●	●	
Check the heim joint on the shock absorber for play. 			●	●	
Check the shock absorber linkage. 		●	●	●	
Check the tire condition.  (p. 121)		●	●	●	●
Check the tire pressure.  (p. 122)		●	●	●	●
Check the wheel bearing for play. 		●	●	●	
Check the hubs. 		●	●	●	

Every 24 months					
Every 90 operating hours					
Every 45 operating hours					
After 15 operating hours / Every 15 operating hours					
After one operating hour					
Check the rim run-out. 	○	●	●	●	
Check the spoke tension.  (p. 122)	○	●	●	●	
Check the chain, rear sprocket, engine sprocket, and chain guide.  (p. 98)	○	●	●	●	
Check the chain tension.  (p. 96)	○	●	●	●	●
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 	○	●	●	●	●
Perform the basic setting of the throttle valve with the diagnostics tool. 		○	●	●	●
Change the spark plug and spark plug connector. 			●	●	
Change the fuel filter. 				●	●
Check the clutch. 			●	●	
Clean the air filter and air filter box.   (p. 87)			●	●	●
Change the damping material on the main silencer.   (p. 90)				●	
Carry out fork service. 			●	●	
Service the shock absorber. 			●	●	
Check all screws, nuts, and hose clamps for a tight fit. 	○	●	●	●	●
Change the fuel screen.   (p. 150)	○	●	●	●	●
Check the fuel pressure. 	○	●	●	●	●
Check the frost protection and coolant level.  (p. 136)			●	●	
Check the coolant level.  (p. 137)	○	●			
Change the coolant.   (p. 140)					●
(All 300 EU, 300 AR and 300 PRO models)	○	●	●	●	
Check that the radiator fan is functioning properly. 					
Check the headlight setting.  (p. 132)	○	●	●	●	
Check the steering head bearing play.  (p. 77)	○	●			
Lubricate the steering head bearing.   (p. 78)			●	●	●
Check the reed valve housing, diaphragm, and intake manifold. 			●	●	
Check the starter drive. 			●	●	●
Change the oil pump; clean the oil screen. 				●	
Clean the oil screen in the oil tank.   (p. 154)				●	
Perform minor engine service. (Change the piston. Check the cylinder head. Change the O-rings, header and the cylinder head. Check the cylinder and Z-dimension. Check the exhaust control for function and smooth operation. Check the pressure sensor flange for cracks and damage. Remove combustion residues from the exhaust port.) 			●	●	
Perform major engine service including removing and installing the engine. (Change the connecting rod, big (bottom) end bearing and crankshaft pin. Check the transmission and shift mechanism. Replace all engine bearings, radial shaft seals and gaskets.) 				●	
Final check: check the operating safety of the vehicle and take for a test ride. 	○	●	●	●	●

10 Service schedule

Every 24 months				
Every 90 operating hours				
Every 45 operating hours				
After 15 operating hours / Every 15 operating hours				
After one operating hour				
Read out the fault memory after the test ride using the diagnostics tool. 	☐	☒	☒	☒
Enter the electronic proof of service in the contractual partner portal. 	☐	☒	☒	☒


- ☐ One-time interval
- ☒ Periodic interval

11.1 Checking the basic chassis setting with the rider's weight



Note

When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

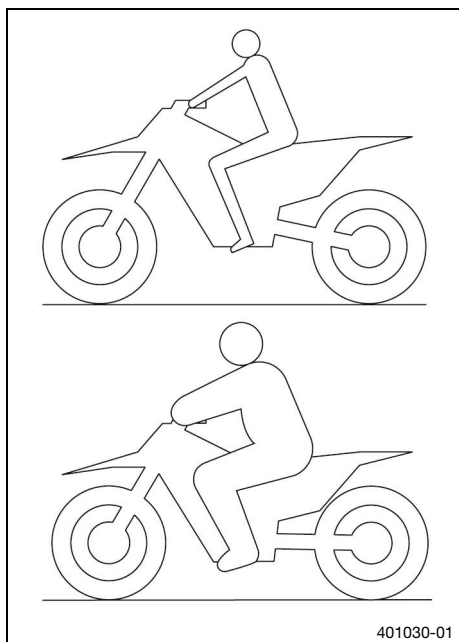

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm, and frame, the basic settings of the suspension components must match the rider's weight.
- On delivery, Husqvarna off-road motorcycles are adjusted for an average rider's weight (with full protective clothing).

Standard rider's weight	75 kg ... 85 kg (165.3 lb ... 187.4 lb)
-------------------------	--

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated for by adjusting the preload, but in the case of large weight differences, the springs must be replaced.



11.2 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression has an effect, for example, when riding over long bumps: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is floating. As a result, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

11.3 Adjusting the low-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

The effect of the low-speed compression adjustment can be seen in slow to normal compression of the shock absorber.

Preparatory work

- Remove the seat.  (p. 83)
- Remove the right side fairing.  (p. 88)



Main work

- Turn adjusters ① clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Low-speed compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

 **Note**
Turning clockwise increases damping; turning anti-clockwise reduces damping.

Reworking

- Install the right side cover.  (p. 89)
- Mount the seat.  (p. 83)

11.4 Adjusting the high-speed compression damping of the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.

 **Note**
The effect of the high-speed compression adjustment can be seen in the fast compression of the shock absorber.

Preparatory work

- Remove the seat.  (p. 83)
- Remove the right side fairing.  (p. 88)



Main work

- Turn adjusters ❶ clockwise all the way to the stop.
- Turn counterclockwise by the number of turns corresponding to the shock absorber type.

High-speed compression damping	
Comfort	2.5 turns (900°)
Standard	2 turns (720°)
Sport	1.5 turns (540°)

 **Note**

Turning clockwise increases damping; turning anti-clockwise reduces damping.

Reworking

- Install the right side cover.  (p. 89)
- Mount the seat.  (p. 83)




11.5

Adjusting the rebound damping of the shock absorber

 **CAUTION**

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.
The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.

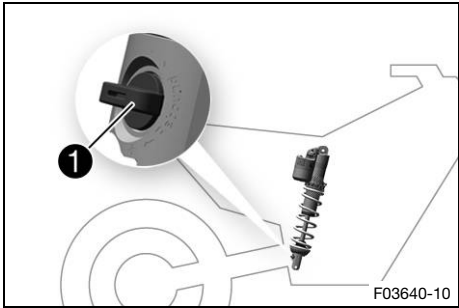

- Turn adjusters ❶ clockwise up to the last perceptible click.
- Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks

 **Note**

Turning clockwise increases damping; turning anti-clockwise reduces damping on rebound.



11.6 Measuring the dimension of the unloaded rear wheel

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)


Main work

- Position the sag gage in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag scale (00029090100)

Pin, sag scale (00029990010)


- Note the value as dimension **A**.

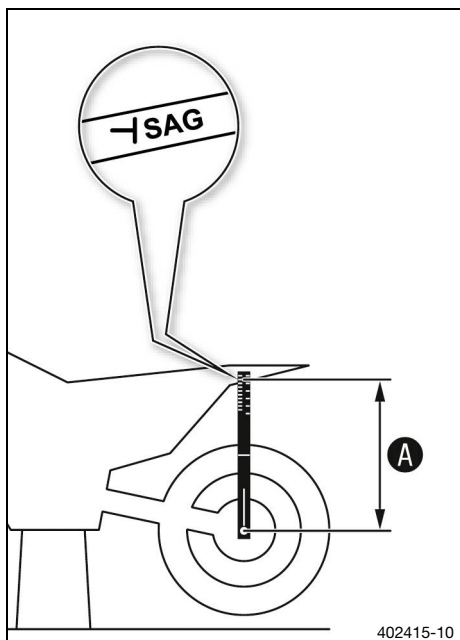

Reworking

- Remove the motorcycle from the lift stand.  (p. 69)

11.7 Checking the static sag of the shock absorber

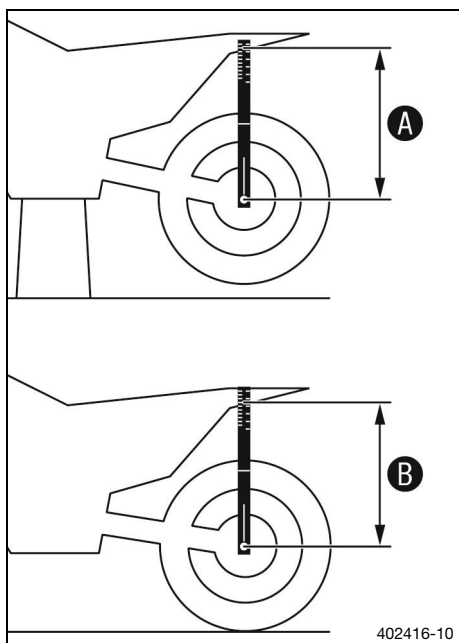

- Determine rear wheel dimension **A**. (p. 60)
- Hold the motorcycle upright with aid of an assistant.
- Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **B**.



Note

The static sag is the difference between measurements **A** and **B**.


- Check the static sag.

Static sag	40 mm (1.57 in)
------------	--------------------

- » If the static sag is more or less than the specified value:
 - Adjust the preload for the shock absorber. (p. 62)



11.8 Checking the rider sag of the shock absorber

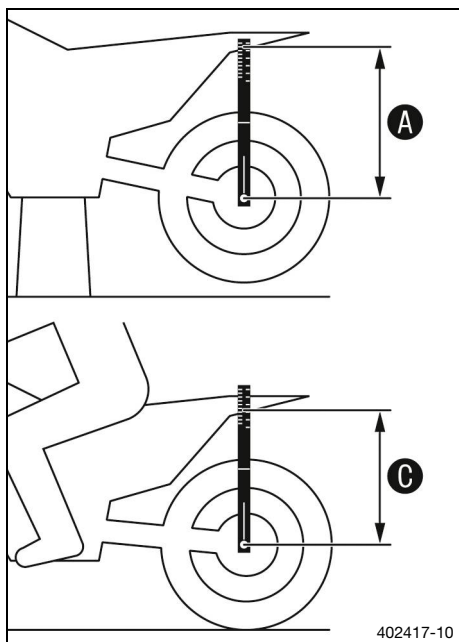

- Determine rear wheel dimension **A**. (p. 60)
- With another person holding the motorcycle, sit on the saddle with full protective clothing in a normal sitting position (feet on footrests) and bounce up and down a few times.
 - ✓ The rear wheel suspension levels out.
- With the help of another person, remeasure the distance between the rear axle and marking **SAG** on the rear fender using the sag scale.
- Note the value as dimension **C**.



Note

The rider sag is the difference between measurements **A** and **C**.

- Check the rider sag.

Rider sag	110 mm (4.33 in)
-----------	---------------------

- » If the rider sag differs from the specified measurement:
 - Adjust the rider sag. (p. 63)



11.9 Adjusting the preload for the shock absorber



CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

- Please follow the description provided.



Note

Note the current adjustment before changing the spring preload - e.g. measure the spring length.

- Preparatory work**
- Raise the motorcycle with a lift stand.  (p. 69)
 - Remove the seat.  (p. 83)
 - Remove air filter box cover.  (p. 85)
 - Remove the frame protector.  (p. 84)
 - Remove the right side fairing.  (p. 88)
 - Remove the muffler.  (p. 89)
 - Remove the shock absorber.   (p. 80)
 - After removing the shock absorber, clean it thoroughly.

- Main work**
- Loosen screw **1**.
 - Turn adjusting ring **2** until the spring is no longer under tension.
- Hook wrench (90129051000)
- 

Note

If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.
- Measure the total spring length while the spring is not under tension.
 - Tension the spring by turning adjusting ring **2** to the specified degree **A**.

Preload	7 mm (0.28 in)
---------	-------------------




Note

Depending on the static sag and/or the rider sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw **1**.
- Screw, shock absorber adjusting ring

M5	5 Nm (3.7 ft·lb _t)
----	-----------------------------------

Make sure that the adjusting ring does not touch any other components when installed.

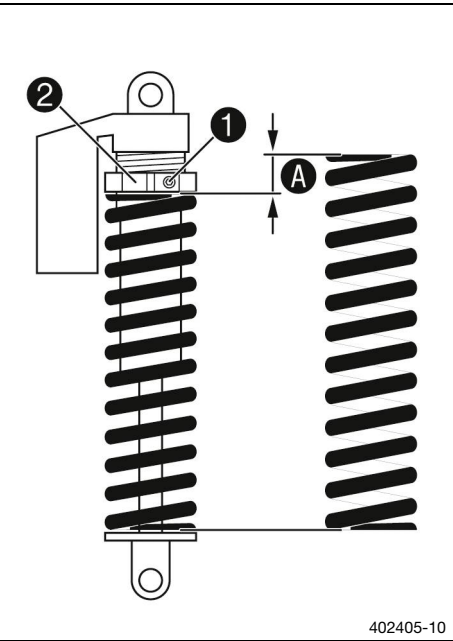

Reworking

- Install the shock absorber.   (p. 81)
- Install the muffler.  (p. 90)
- Install the right side cover.  (p. 89)
- Mount the seat.  (p. 83)
- Install the frame protector.  (p. 84)
- Install the air filter box cover.  (p. 85)
- Check the free travel of the brake pedal.  (p. 112)
- Remove the motorcycle from the lift stand.  (p. 69)



 
11.10 Adjusting the rider sag

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)
- Remove the seat.  (p. 83)
- Remove air filter box cover.  (p. 85)
- Remove the frame protector.  (p. 84)
- Remove the right side fairing.  (p. 88)
- Remove the muffler.  (p. 89)
- Remove the shock absorber.   (p. 80)
- After removing the shock absorber, clean it thoroughly.

Main work

- Select and mount a suitable spring.



Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	42 N/mm (239.8 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	45 N/mm (257.0 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	48 N/mm (274.1 lb _f /in)



Note

The spring rate is shown on the outside of the spring.


Reworking

- Install the shock absorber.   (p. 81)
- Install the muffler.  (p. 90)
- Install the right side cover.  (p. 89)
- Mount the seat.  (p. 83)
- Install the frame protector.  (p. 84)
- Install the air filter box cover.  (p. 85)
- Check the free travel of the brake pedal.  (p. 112)
- Remove the motorcycle from the lift stand.  (p. 69)
- Check the static sag of the shock absorber.  (p. 61)

- Check the rider sag of the shock absorber.  (p. 61)
- Adjust the rebound damping of the shock absorber.  (p. 59)

11.11 Checking the basic setting of the fork


 **Note**
For various reasons, no exact rider sag can be determined for the fork.

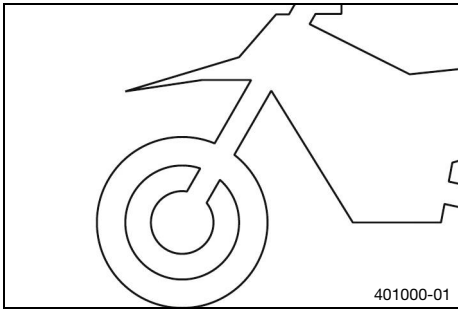

- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork frequently bottoms out (hard end stop on compression), harder springs must be fitted to avoid damage to the fork and frame.
- If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

11.12 Adjusting the compression damping of the fork

 **Note**
The hydraulic compression damping determines the fork suspension behavior.

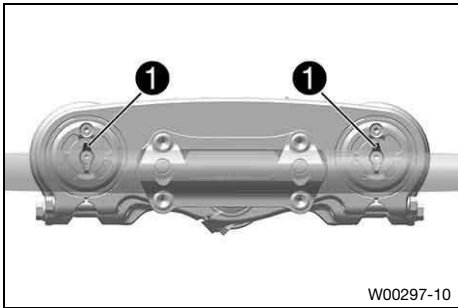

- Turn white adjuster **1** clockwise as far as it will go.

 **Note**
Adjusters **1 COMP** are located at the top end of the fork legs.


- Turn counterclockwise by the number of clicks corresponding to the fork type.

Compression damping (All standard models except 250 US)	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks

Compression damping (TE 250 US)	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks

 **Note**
Turning clockwise increases damping; turning counterclockwise reduces damping during compression.

(All special models)

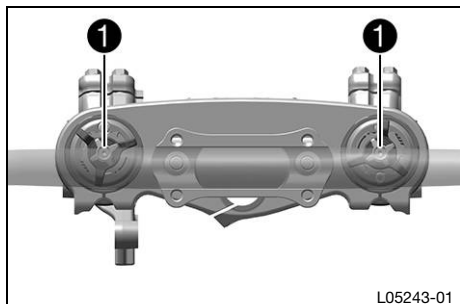

- Turn white adjuster ① clockwise as far as it will go.



Note

Adjusters ① **COMP** are located at the top end of the fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.

Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks



Note

Turning clockwise increases damping; turning counterclockwise reduces damping during compression.



11.13 Adjusting the spring preload of the fork (All special models)

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)

Main work

- Turn preload adjuster ① all the way counterclockwise.

Make the adjustment by hand only. Do not use a tool.

Make the same adjustment on both fork legs.

- Turn the preload adjuster clockwise.

Spring preload – preload adjuster	0 turns (0°)
-----------------------------------	-----------------

- ✓ The preload adjuster engages noticeably with each turn.



Note


The default setting is 0 revolutions. Adjust the spring preload individually as required.

Only adjust the spring preload in full turns, otherwise the preload will not engage.

Turn clockwise to increase the spring preload; turn counterclockwise to reduce the spring preload.

Adjusting the spring preload has no influence on the absorption setting of the rebound.

Basically, however, you should set the rebound damping higher with a higher spring preload.

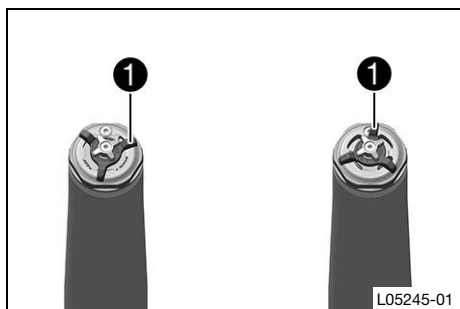


Reworking

- Remove the motorcycle from the lift stand. (p. 69)

11.14 Adjusting the rebound damping of the fork

i Note
The hydraulic rebound damping determines the fork suspension behavior.

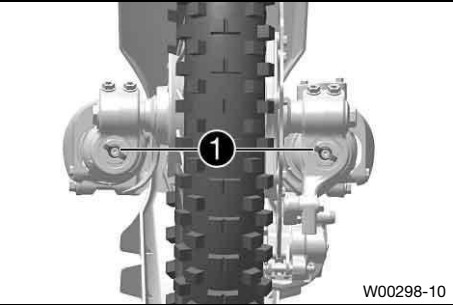

- Turn red adjuster ❶ clockwise as far as it will go.

i Note
Adjusters ❶ **REB** are located at the bottom end of the fork legs.

- Turn counterclockwise by the number of clicks corresponding to the fork type.


Rebound damping (All standard models except 250 US)	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks

Rebound damping (TE 250 US)	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks

Rebound damping (All special models)	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks

i Note
Turning clockwise increases damping; turning anti-clockwise reduces damping on rebound.

11.15 Handlebar position

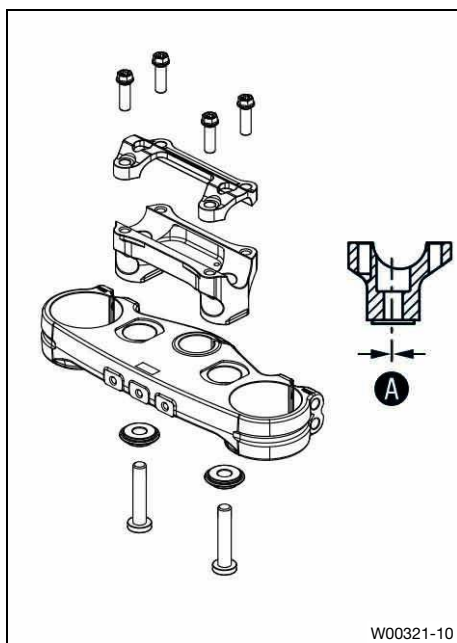

The holes on the handlebar support are placed at a distance of **A** from the center.

Hole distance A	3.5 mm (0.138 in)
------------------------	----------------------

The handlebar support can be mounted in two different positions.

11.16 Adjusting the handlebar position




WARNING

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

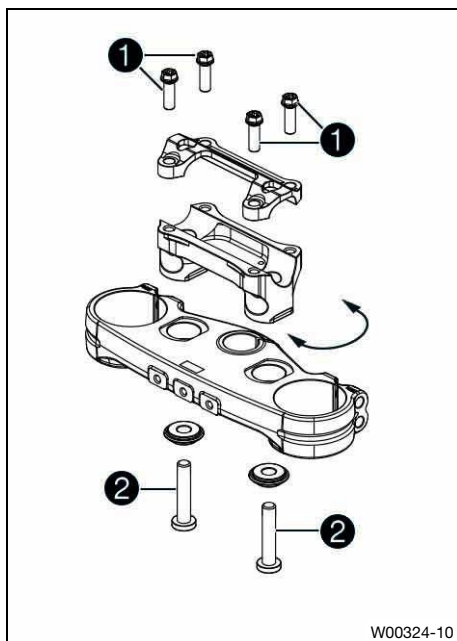

- Remove screws **1**.
- Take off the handlebar clamp. Remove the handlebar and lay it to one side.

Protect the components against damage by covering them.

Do not kink the cables or lines.

- Remove screws **2**.
- Take off the handlebar mount.
- Place the handlebar mount in the required position.

Position the handlebar support so that it is even.

- Mount and tighten screws **2**.

Screw, handlebar mount

M10	40 Nm (29.5 ft·lb) Loctite® 243
-----	--

- Position the handlebar.

Make sure the cables and wiring are positioned correctly.


- Position the handlebar clamp.
- Mount screws **1** and tighten evenly.

11 Tuning the chassis

Make sure the installed gap widths are even.	
Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb _f)



12.1 Raising the motorcycle with a lift stand

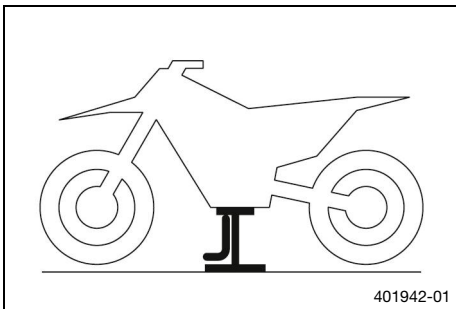

NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

- Raise the motorcycle at the frame underneath the engine.

Lift stand (78129955100)

- ✓ Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.



12.2 Removing the motorcycle from the lift stand




NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

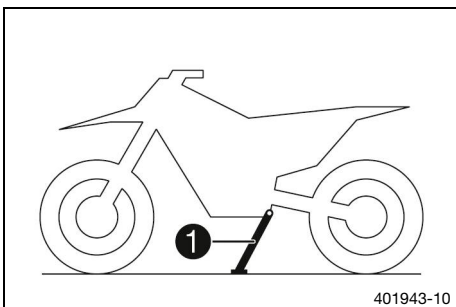

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press side stand ① to the ground with your foot and lean the motorcycle on it.

When you are riding, the side stand must be folded up and secured with the rubber band.



12.3 Bleeding the fork legs

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 69)

12 Service work on the chassis

Main work


(All standard models)

- Loosen bleeder screw ❶.
- ✓ Any excess pressure escapes from the inner fork.
- Tighten the bleeder screw.

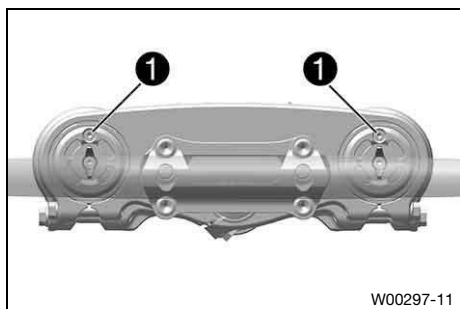

(All special models)

- Loosen bleeder screw ❶.
- ✓ Any excess pressure escapes from the inner fork.
- Tighten the bleeder screw.

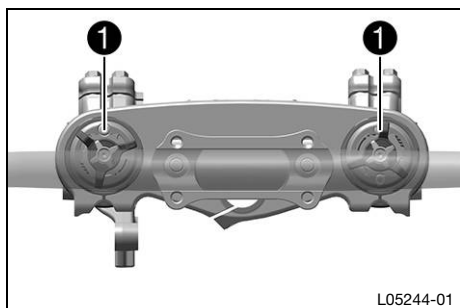

Reworking

- Remove the motorcycle from the lift stand. 📖 (p. 69)


12.4 Cleaning the dust boots of the fork legs

Preparatory work

- Raise the motorcycle with a lift stand. 📖 (p. 69)
- Remove the fork protector. 📖 (p. 71)

Main work

- Push dust boot ❶ downward on both fork legs.

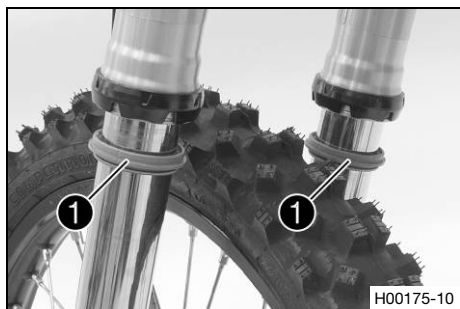

i Note

The dust boots should remove dust and coarse dirt particles from the inner fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and the inner fork tube of both fork legs.

Universal oil spray  (p. 189)


- Press the dust boots back into their installation position.
- Remove excess oil.

Reworking

- Install the fork protector.  (p. 71)
- Remove the motorcycle from the lift stand.  (p. 69)




12.5 Removing the fork protector

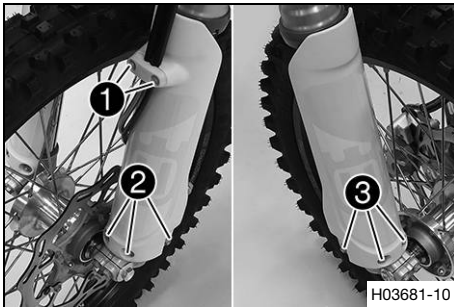

- Remove screw ① and take off the clamp.
- Remove screws ② and take off the left fork protector.
- Remove screws ③ and take off the right fork protector.



12.6 Installing the fork protector

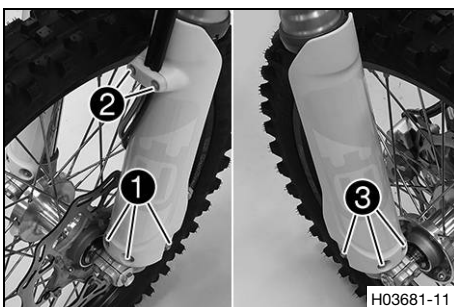

- Position the fork protector on the left fork leg.
- Mount and tighten screws ①.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Position the brake line, the wiring harness, and the clamp.
- Mount and tighten screws ②.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

- Position the fork protector on the right fork leg.
- Mount and tighten screws ③.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)



12.7 Removing the fork legs



Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)
- Remove the front wheel.   (p. 117)

Main work

- Remove screw **1** and take off the clamp.
- Remove the cable tie.
- Remove screws **2** and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.

Do not actuate the hand brake lever when the front wheel is removed.

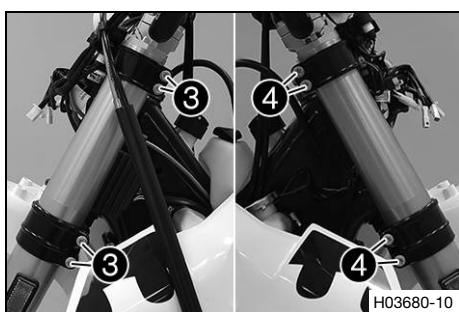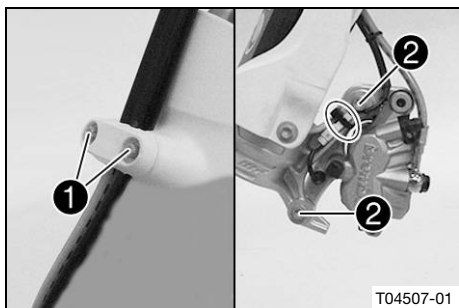

- Loosen screws **3**.
- Remove the left fork leg.
- Loosen screws **4**.
- Remove the right fork leg.

12.8 Installing the fork legs

Main work

(All standard models)

 
- Position the fork legs.
- ✓ Bleeder screws **1** are positioned toward the front.



Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The pressure and rebound damping is located in the left and right fork leg.



(All special models)

 
- Position the fork legs.
- ✓ Bleeder screws **1** are positioned toward the front.




Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The pressure and rebound damping is located in the left and right fork leg.



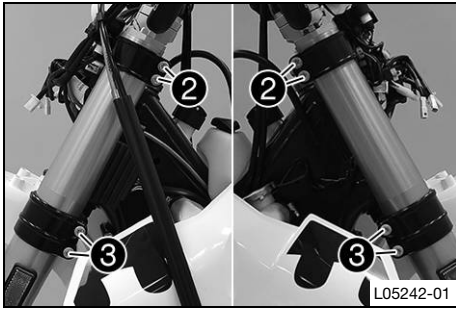


- Tighten screws ②.

Screw, top triple clamp	
M8	17 Nm (12.5 ft·lb _f)

- Tighten screws ③.

Screw, bottom triple clamp	
M8	12 Nm (8.9 ft·lb _f)

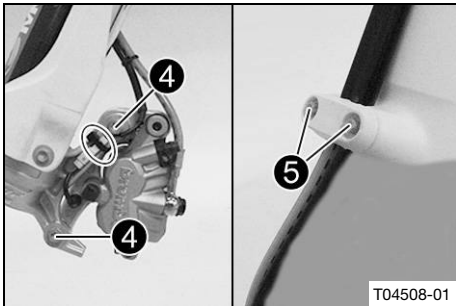

- Position the brake caliper, and mount and tighten screws ④.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Mount the cable tie.
- Position the brake line, the wiring harness, and the clamp.
- Mount and tighten screws ⑤.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

Reworking

- Install the front wheel. 🛠️ 📖 (p. 118)


12.9 Removing the lower triple clamp 🛠️

Preparatory work

- Raise the motorcycle with a lift stand. 📖 (p. 69)
- Remove the front wheel. 🛠️ 📖 (p. 117)
- Remove the fork legs. 🛠️ 📖 (p. 72)
- Remove the headlight mask with the headlight. 📖 (p. 129)
- Remove the front top fender. 📖 (p. 78)
- Remove the seat. 📖 (p. 83)
- Remove the fuel tank. 🛠️ 📖 (p. 91)
- Remove the handlebar pad.

Main work

- Loosen screw ①.
- Remove screw ②.
- Take off the upper triple clamp with the handlebar and hang them to the side.

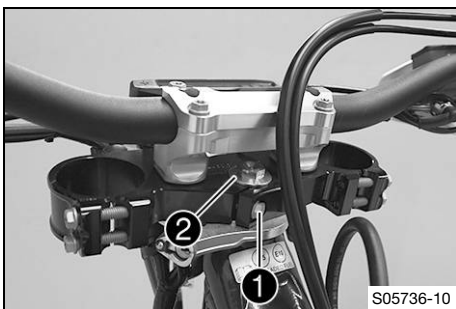

Do not kink the cables or lines.


Protect the components against damage by covering them.

12 Service work on the chassis



- Remove protective ring ③.
- Take off the lower triple clamp with the steering stem.
- Remove the upper steering head bearing.

12.10 Installing the lower triple clamp

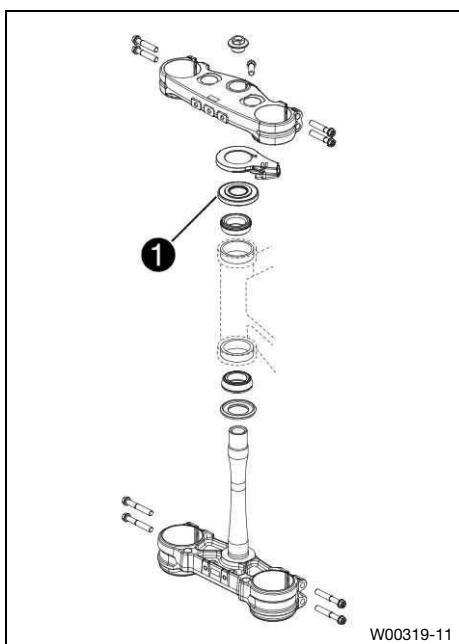


Main work

- Clean the bearing and sealing elements, check for damage, and grease.


High viscosity grease (p. 190)

 - Insert the lower triple clamp with the steering stem.
- Mount the upper steering head bearing.
- Push on protective ring ①.



(All 300 EU models and AR)

- Make sure the steering lock in area A is positioned correctly.
 - ✓ The catch on the steering lock engages in the notch on the triple clamp.

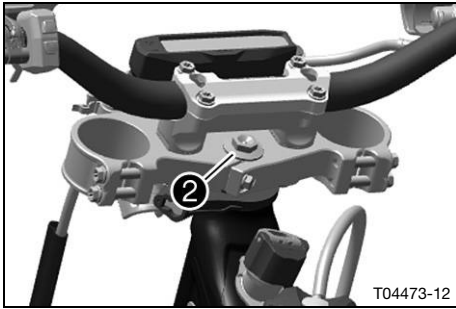

- Position the upper triple clamp and handlebar.
- Mount screw **2**, but do not tighten it yet.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

(All standard models)


- Position the fork legs.
- ✓ Bleeder screws **3** are positioned toward the front.



Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The pressure and rebound damping is located in the left and right fork leg.

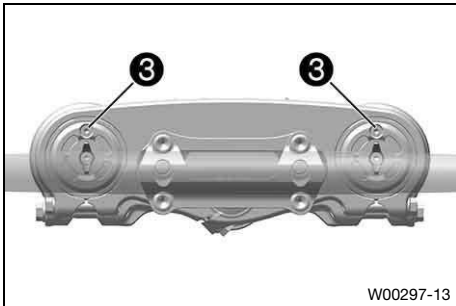

(All special models)



- Position the fork legs.
- ✓ Bleeder screws **3** are positioned toward the front.



Note


Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The pressure and rebound damping is located in the left and right fork leg.

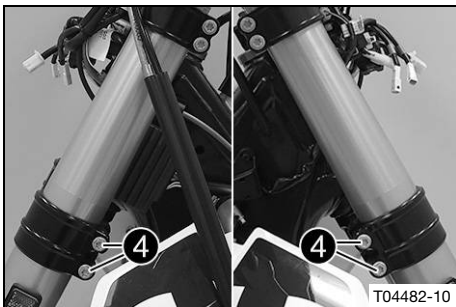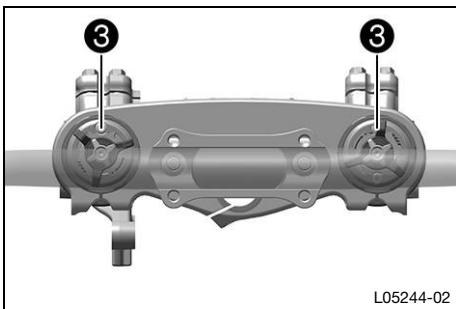



- Tighten screws **4**.

Screw, bottom triple clamp	
M8	12 Nm (8.9 ft·lb _f)

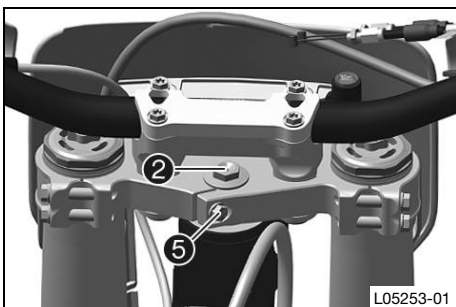

- Tighten screw **2**.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

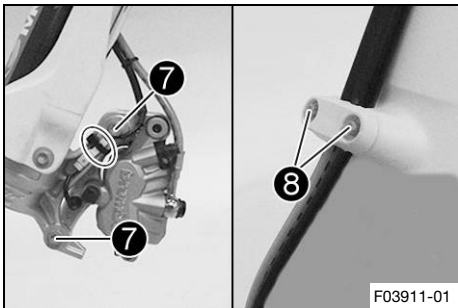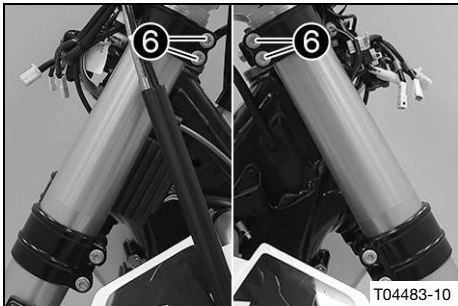

- Remove screw 5.
- Mount and tighten screw 5.

Screw, upper steering stem	
M8	20 Nm (14.8 ft·lb _f) Loctite® 243

- Tighten screws 6.

Screw, top triple clamp	
M8	17 Nm (12.5 ft·lb _f)

- Position the brake caliper, and mount and tighten screws 7.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb _f) Loctite® 243

- Mount the cable tie.
- Position the brake line, the wiring harness, and the clamp.
- Mount and tighten screws 8.

Remaining screws on chassis	
EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _f)

Reworking

- Mount the handlebar pad.
- Install the front top fender. 📖 (p. 79)
- Install the front wheel. 🛠️ 📖 (p. 118)
- Install the headlight mask with the headlight. 📖 (p. 130)
- Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
- Check the steering head bearing play. 📖 (p. 77)
- Remove the motorcycle from the lift stand. 📖 (p. 69)
- Install the fuel tank. 🛠️ 📖 (p. 93)
- Mount the seat. 📖 (p. 83)
- Check the headlight setting. 📖 (p. 132)

12.11 Checking the steering head bearing play



WARNING

Danger of accidents Incorrect steering head bearing play can impair the handling characteristic and damage components.

- Correct incorrect steering head bearing play immediately.



Note

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)

Main work

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

» If there is detectable play:

- Adjust the steering head bearing play. (p. 77)

- Move the handlebar back and forth over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.


» If detent positions are detected:

- Adjust the steering head bearing play. (p. 77)
- Check the steering head bearing and adjust if necessary.

- Check the steering stop bolts for correct adjustment and locking.

Reworking


- Remove the motorcycle from the lift stand. (p. 69)

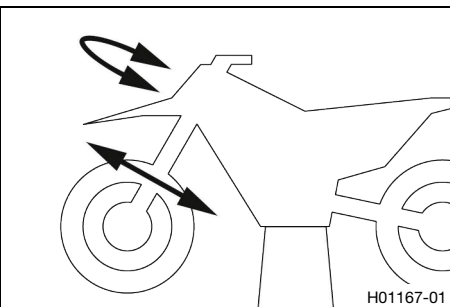

12.12 Adjusting the steering head bearing play

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)

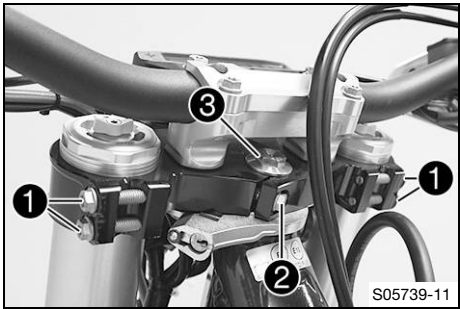

Main work

- Loosen screws ❶.
- Remove screw ❷.
- Loosen and retighten screw ❸.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb _f)

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Mount and tighten screw ❷.

Screw, upper steering stem	
M8	17 Nm (12.5 ft·lb _f) Loctite® 243


- Tighten screws ❶.

Screw, top triple clamp	
M8	17 Nm (12.5 ft·lb _f)

Reworking

- Check the steering head bearing play. 📖 (p. 77)
- Remove the motorcycle from the lift stand. 📖 (p. 69)

12.13 Lubricating the steering head bearing 🛠️

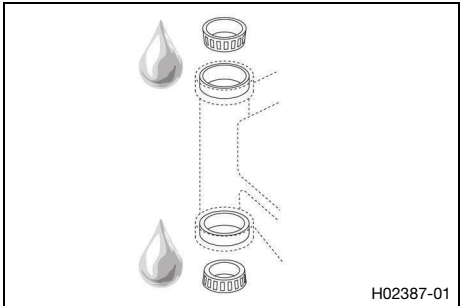

- Remove the lower triple clamp. 🛠️ 📖 (p. 73)
- Install the lower triple clamp. 🛠️ 📖 (p. 74)

**Note**

The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.


12.14 Removing the front top fender

Preparatory work

- Remove the headlight mask with the headlight. 📖 (p. 129)

Main work

- Remove ❶ screws.
- Remove ❷ screws. Remove the front fender.

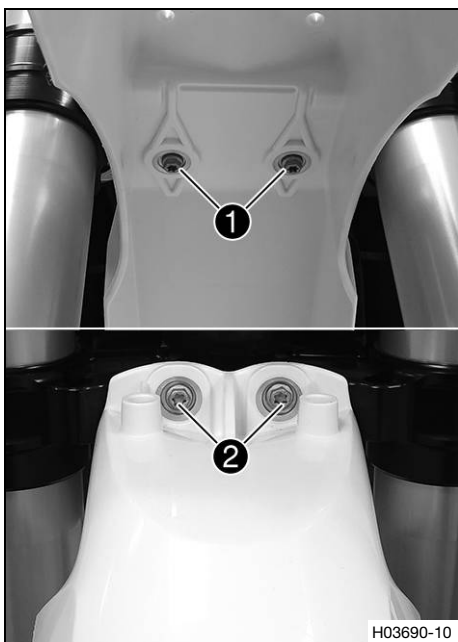


12.15 Installing the front top fender

Main work

- Position the front fender.
- Mount and tighten screws ❶ and ❷.

Screw, fender to triple clamp	
M6	12 Nm (8.9 ft·lb _f)

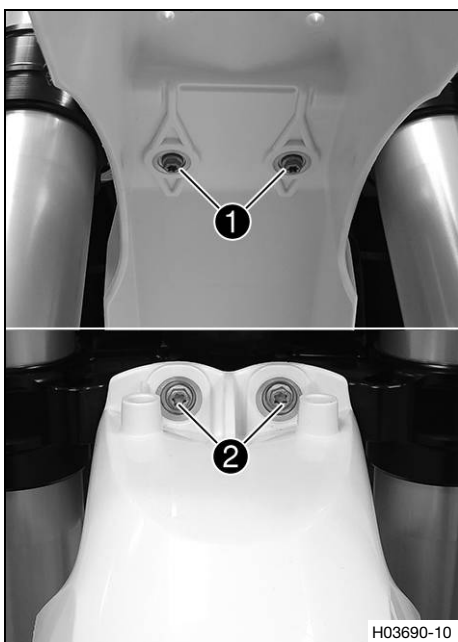

Reworking

- Install the headlight mask with the headlight. 📖 (p. 130)
- Check the headlight setting. 📖 (p. 132)

12.16 Removing the shock absorber

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)
- Remove the seat.  (p. 83)
- Remove air filter box cover.  (p. 85)
- Remove the frame protector.  (p. 84)
- Remove the right side fairing.  (p. 88)
- Remove the muffler.  (p. 89)


 
Main work

- Remove screw **1**.
- Remove screw connection **2**.
- Take off the license plate holder with tail light toward the rear.




Tip

Raise the swingarm slightly to be able to remove the screws more easily.

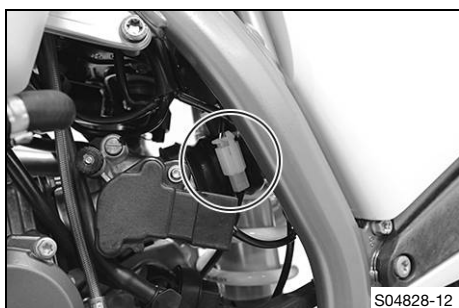

- Disconnect the plug-in connector of the brake light switch.

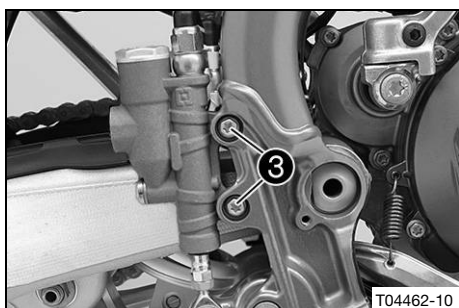


- Remove screws **3**.
- Pull rear brake cylinder off of the push rod.




- Disconnect the tail light and turn signal plug-in connections.
- Remove the connecting link on the chain.

Protect the components against damage by covering them.

- Take off the chain.

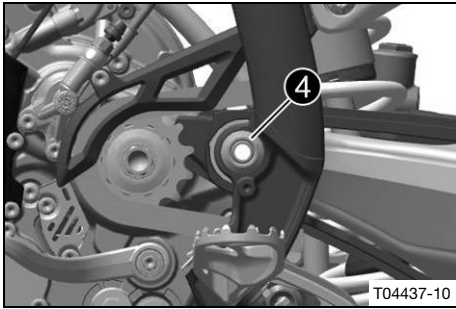

- Remove nut ④ and pull out the swingarm pivot.
- Push the swingarm back and secure it against falling over.

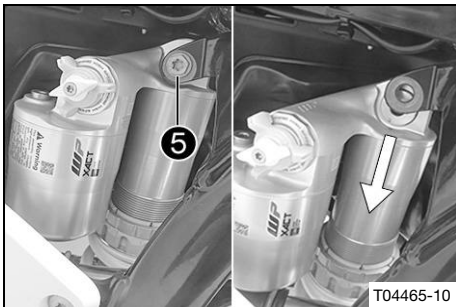


- Hold the shock absorber and remove screw ⑤.
- Remove the shock absorber carefully at the bottom.

12.17 Installing the shock absorber

Main work

- Carefully position the shock absorber into the vehicle from the bottom.
- Mount and tighten screw ①.

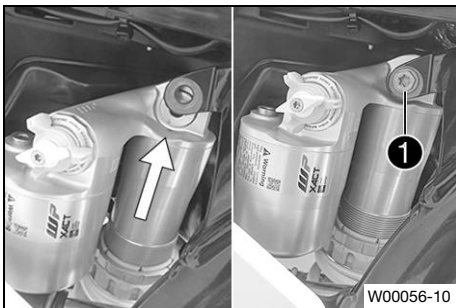


Top shock absorber screw	
M10	60 Nm (44.3 ft·lb _f) Loctite® 2701

- Position the swingarm and fit the swingarm pivot.


Pay attention to flat area ①.

- Mount and tighten nut ②.

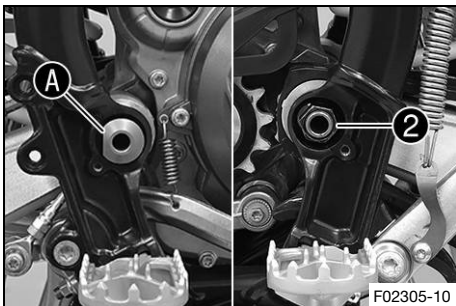


Nut, swingarm pivot	
M16×1.5	100 Nm (73.8 ft·lb _f)

12 Service work on the chassis

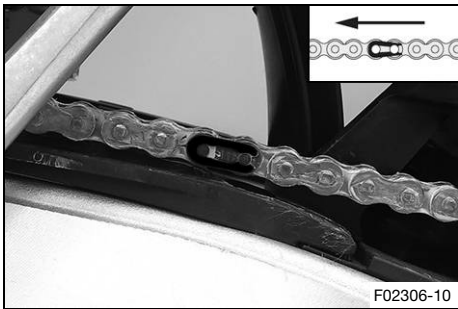


- Mount the chain.
- Connect the chain with the connecting link.
- Connect the plug-in connections for the tail light and turn signals and secure and stow them well.

The closed side of the master link clip must face in the direction of travel.

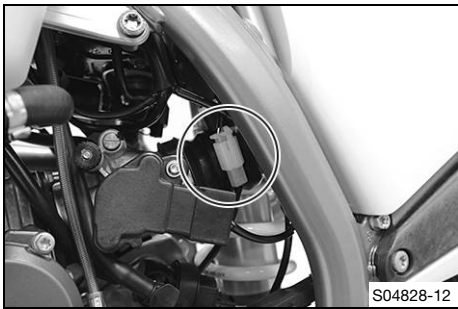


- Join plug-in connector of the brake light switch.

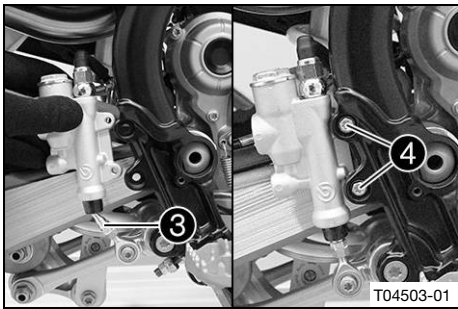

- Position the rear brake cylinder.
 - ✓ Push rod 3 engages in the brake cylinder in the rear brake system.
 - ✓ The dust boot is correctly positioned.
- Mount and tighten screws 4.

Remaining screws on chassis

M6	10 Nm (7.4 ft·lb _f)
----	------------------------------------

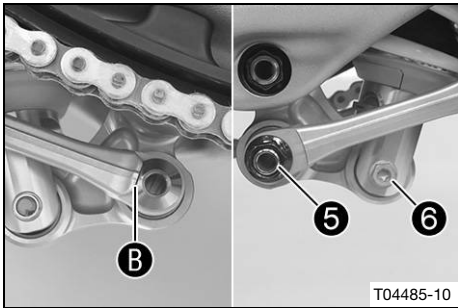

- Position the power valve control lever and linkage lever.
- Mount and tighten screw connection 5.

Pay attention to flat area B.

Nut, linkage lever on angle lever

M14×1.5	80 Nm (59.0 ft·lb _f)
---------	-------------------------------------

- Mount and tighten screw 6.

Bottom shock absorber screw

M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
-----	---



Tip


Raise the swingarm slightly to be able to mount the screw more easily.

Reworking


- Install the muffler.  (p. 90)
- Install the right side cover.  (p. 89)
- Mount the seat.  (p. 83)
- Install the frame protector.  (p. 84)
- Install the air filter box cover.  (p. 85)
- Check the free travel of the brake pedal.  (p. 112)
- Remove the motorcycle from the lift stand.  (p. 69)



12.18 Removing the seat

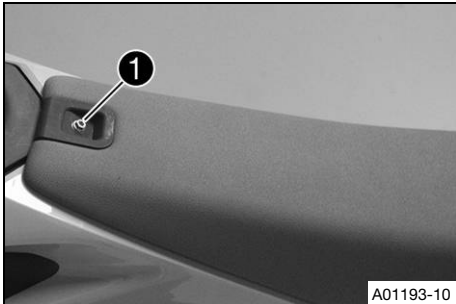


- Remove screw .

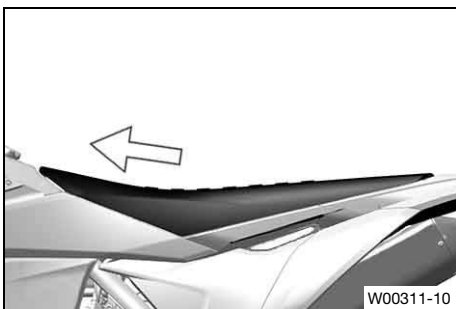


- Raise seat, pull it toward the fuel tank and take it off.



12.19 Mounting the seat

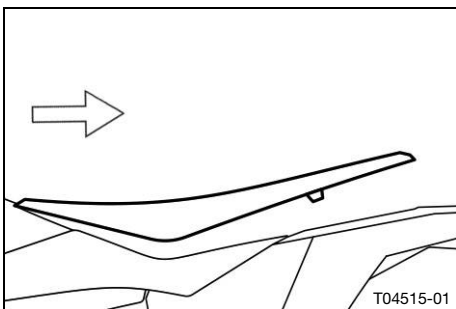

- Hook the front of the seat onto the two collar bushings of the fuel tank, lower it at the rear and push it back.
✓ The holding lugs engage in the recesses at the back.
- Make sure the seat is latched in place correctly.

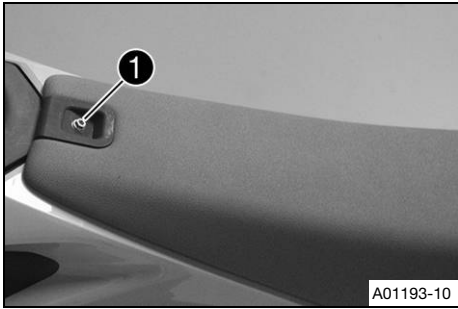

- Mount and tighten screw 1.

Screw, seat installation	
M6	8 Nm (5.9 ft·lb _f)


12.20 Removing the frame protector

Preparatory work

- Remove air filter box cover. (p. 85)

Main work

- Remove the cable ties.
- Remove screws 1 with the bushings.
- Take off the left frame protector.
- Push the right frame protector to the front and take off at the bottom.

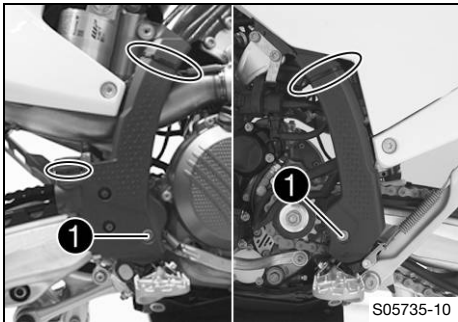

12.21 Installing the frame protector

Main work

- Position the left frame protector.
- Insert the right frame protector from below and push it to the rear.
- Mount screws 1 with the bushings and tighten.

Screw, frame protector	
M5	3 Nm (2.2 ft·lb _f)

- Secure the frame protector with cable ties.

Turn the head of the cable tie so far back that it does not touch any other components.


Reworking

- Install the air filter box cover. (p. 85)

12.22 Removing air filter box cover


Condition: Air filter box cover secured

- Remove screw ①.

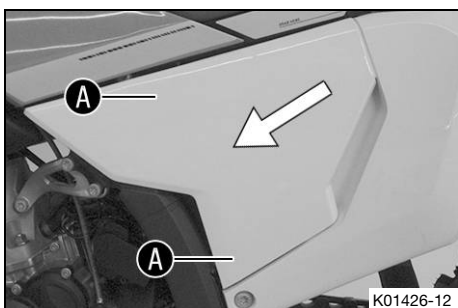


- Pull off the air filter box cover in areas ① and push it sideways and forward.
- Take off the air filter box cover.

12.23 Installing air filter box cover

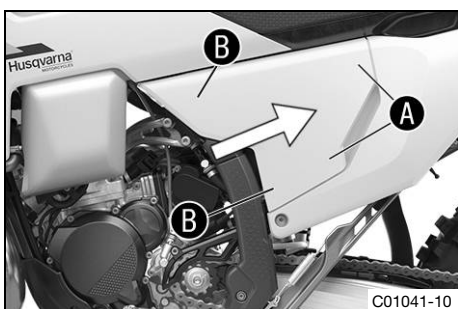

- Attach the air filter box cover in areas ① and clip in areas ②.

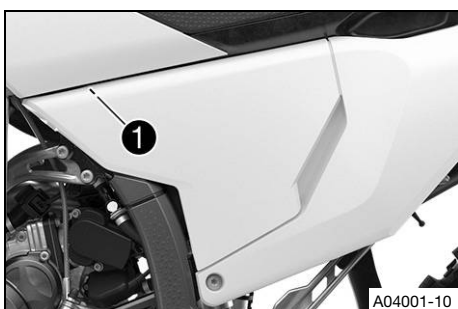

Condition: Air filter box cover secured

- Mount and tighten screw ①.

Screw, air filter box cover	
EJOT PT® – K60×20 – Z	3 Nm (2.2 ft·lb _f)

12.24 Removing the air filter



NOTE

- Engine failure** Unfiltered intake air has a negative effect on the service life of the engine. Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.
- Only operate the vehicle if an air filter is correctly fitted.



NOTE


- Environmental hazard** Hazardous substances cause environmental damage.
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Preparatory work

- Remove air filter box cover.  (p. 85)

Main work

- Detach tab **1**.
- Remove air filter with air filter support.
- Remove the air filter with the air filter support.


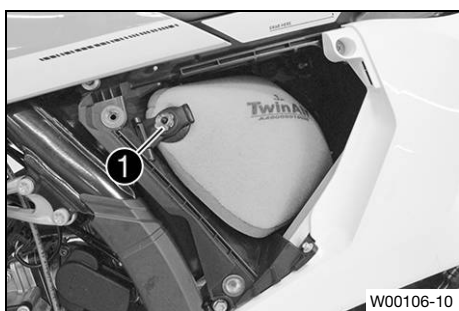


12.25 Installing the air filter

Main work

- Mount the clean air filter on the air filter support.
- Grease the air filter in area **A**.

Long-life grease  (p. 189)

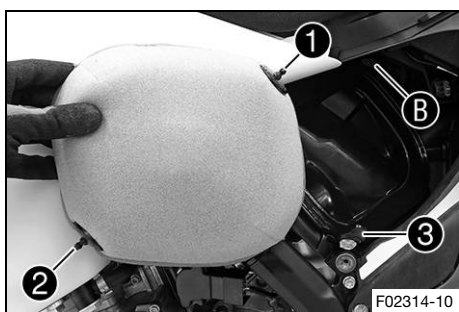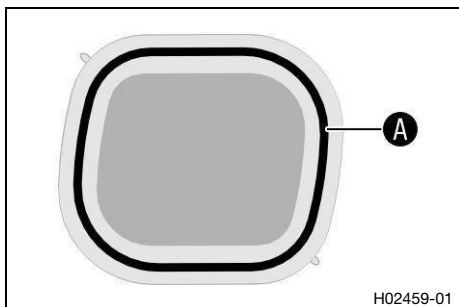

- Insert air filter and position retaining pin **1** in bushing **B**.
✓ The air filter is correctly positioned.
- Insert retaining tab **3**.
✓ Retaining pin **2** is secured with retaining tab **3**.



Note

If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.

Reworking

- Install the air filter box cover.  (p. 85)



12.26 Cleaning the air filter and air filter box



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Preparatory work

- Remove air filter box cover.  (p. 85)
- Remove the air filter.   (p. 86)

Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Do not clean the air filter with fuel or petroleum as these substances will damage the foam rubber.

Only press the air filter to dry it, do not wring it out.

Air filter cleaning agent  (p. 194)

- Oil the dry air filter with a high-grade air filter oil.

Oil for foam air filter  (p. 190)

- Clean the air filter box.
- Clean the intake flange and check it for damage and that it is firmly seated.

Reworking

- Install the air filter.   (p. 86)
- Install the air filter box cover.  (p. 85)



 
12.27 Preparing the air filter box cover for securing

Preparatory work

- Remove air filter box cover.  (p. 85)

Main work

- Drill a hole at marking **A**.



Diameter	6 mm (0.24 in)
----------	-------------------

Reworking

- Install the air filter box cover.  (p. 85)


12.28 Removing the right side fairing

Preparatory work


- Remove the seat.  (p. 83)

Main work


- Remove screws **1**.

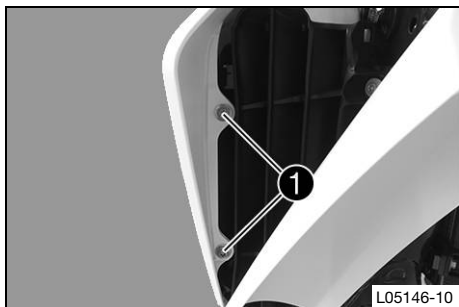

 - Remove screw **2**.
- Remove screw **3**.



- Detach the side fairing in area **A** and remove it toward the rear.


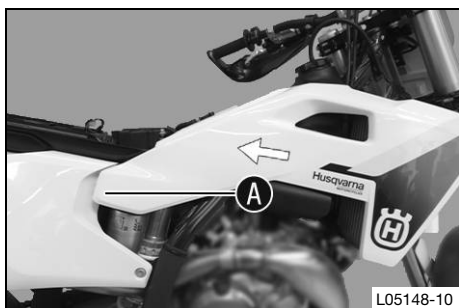


12.29 Installing the right side cover

Main work

- Position the right side fairing and press it forward to lock it into place.
- Press the side fairing into the rubber bushing in area **A**.


Make sure the side fairing is correctly hooked into area **A**.

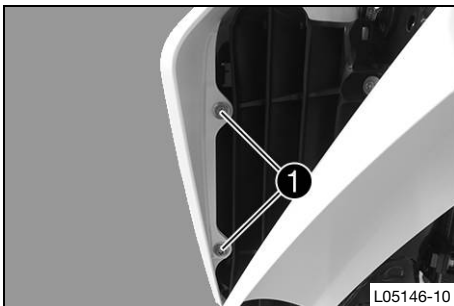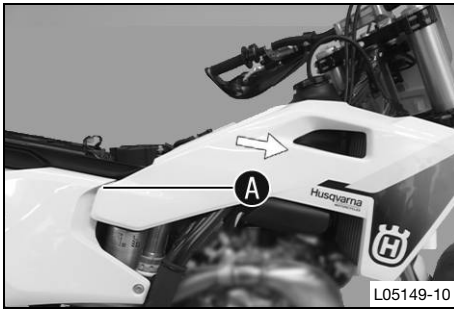

- Mount and tighten screws **1**.

Screw, fuel tank spoiler on radiator

M6	6 Nm (4.4 ft·lb _f)
----	-----------------------------------

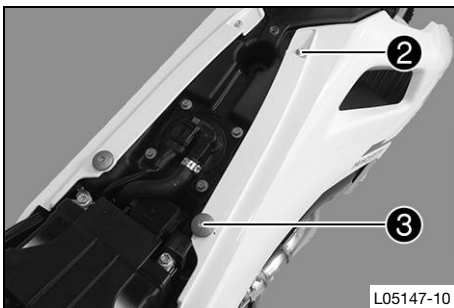

- Mount and tighten screw **2**.

Screw, seat installation

M6	8 Nm (5.9 ft·lb _f)
----	-----------------------------------

- Mount and tighten screw **3**.

Screw, seat installation

M6	8 Nm (5.9 ft·lb _f)
----	-----------------------------------

Reworking

- Mount the seat. (p. 83)




12.30 Removing the muffler



WARNING


Danger of burns The exhaust system gets hot when the vehicle is driven.

- Allow the exhaust system to cool down before performing any work on the vehicle.

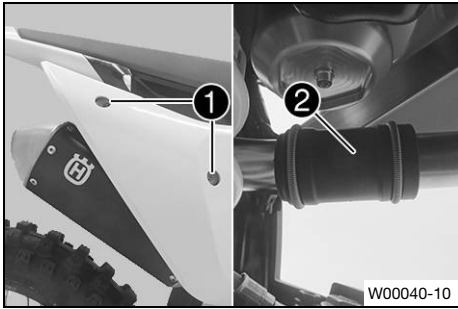

- Remove screws ①.
- Pull off the silencer with exhaust sleeve ② and the spring rings from the header.

12.31 Installing muffler

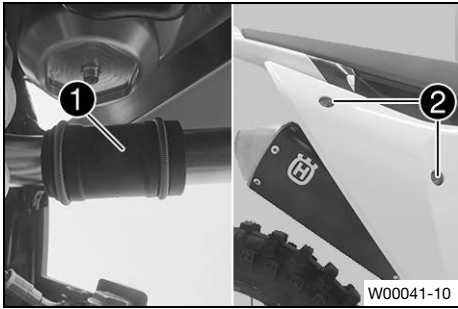

- Mount the silencer with exhaust sleeve ① and the spring rings.
- Mount and tighten screws ②.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

12.32 Changing the damping material on the main silencer



WARNING

Danger of burns The exhaust system gets hot when the vehicle is driven.


- Allow the exhaust system to cool down before performing any work on the vehicle.



Note

Over time, the damping material fibers disappear, and the main silencer “burns out”. Not only does this make the noise level higher, but the performance characteristics also change.

- Preparatory work**
- Remove the muffler.  (p. 89)

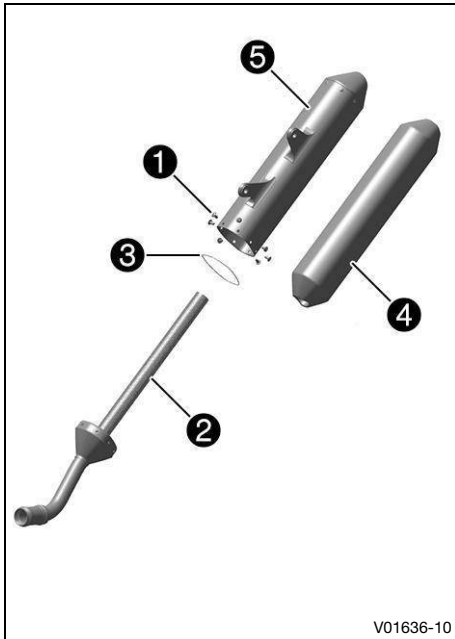

Main work

- Remove screws ①. Pull out inner tube ② with O-ring ③.
- Pull damping material ④ off the inner tube.
- Clean the parts that need to be reinstalled and check for damage.
- Mount new damping material ④ on the inner tube.
- Slide outer tube ⑤ over the inner tube with the new damping material and the O-ring.
- Mount and tighten all screws ①.

Screws on muffler

M5	7 Nm (5.2 ft·lb _f)
----	-----------------------------------

Reworking

- Install the muffler. 📖 (p. 90)

12.33 Removing the fuel tank 🔧



⚠ DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



⚠ WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

 

12 Service work on the chassis

Preparatory work

- Remove the seat.  (p. 83)

Main work

- Remove protection cap **1** of the fuel line.

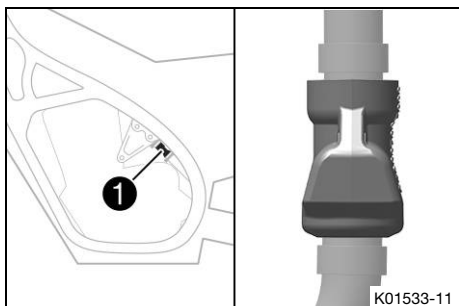

- Unplug socket connector **2** of the fuel pump.
- Disconnect quick release coupling **3**.



Note


Remaining fuel may flow out of the fuel hose.

- Remove the hose from the fuel tank breather.
- Clean the quick release coupling thoroughly with compressed air.

Dust must not enter the fuel line. Dirt in the fuel line clogs the injector!

- Mount wash cap set **4**.


Wash cap set (81212016100)

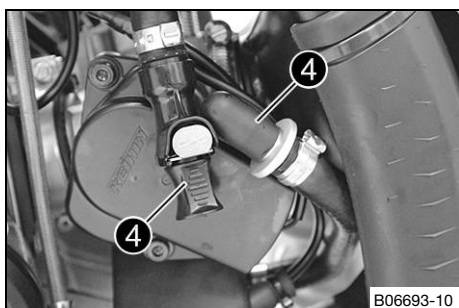


- Remove screws **5** with the collar bushings.

(All 300 EU models and AR)

- Hang the horn and horn bracket to one side.

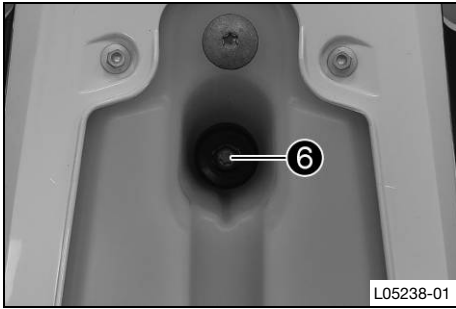

- Remove screw ⑥ with the rubber bushing.

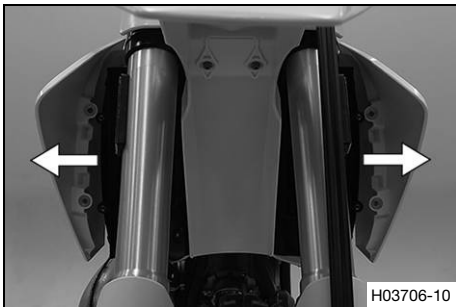

- Pull both spoilers off laterally from the radiator bracket and lift off the fuel tank.

12.34 Installing the fuel tank



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.



- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

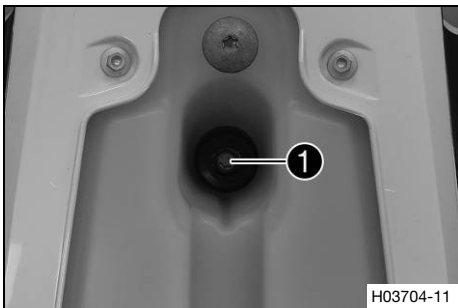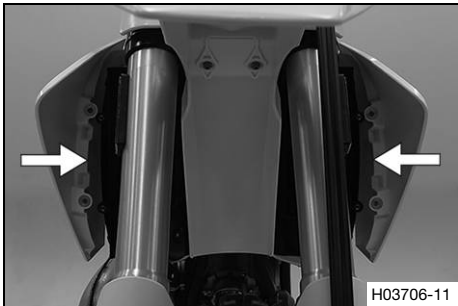

Main work

- Position the fuel tank and fit the two spoilers to the sides in front of the radiator bracket.


Make sure that no wires or cables are trapped or damaged.

- Mount and tighten screw 1 with the rubber bushing.


Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

(All 300 EU and special models except US)

- Position the horn with the horn bracket.
- Mount and tighten screws 2 with the collar bushings.

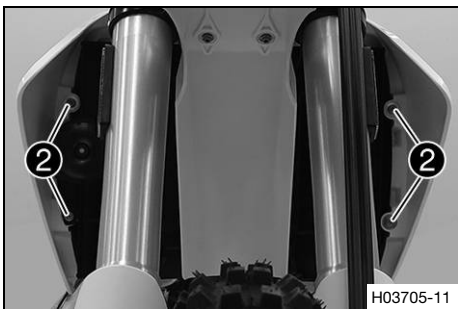

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

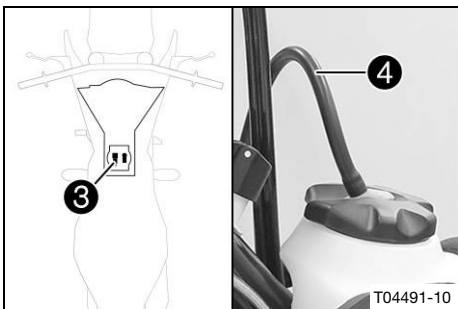

- Plug in fuel pump socket connector 3.
- Attach fuel tank breather hose 4.
- Remove the wash cap set.
- Clean the quick release coupling thoroughly with compressed air.


Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 190)

- Join quick-lock couplings.

Route the wire and fuel line at a safe distance from the exhaust system.

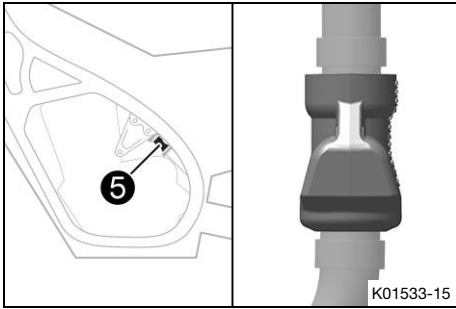


- Mount protection cap **5** of the fuel line.

Reworking

- Mount the seat. (p. 83)



12.35 Checking the chain for contaminant

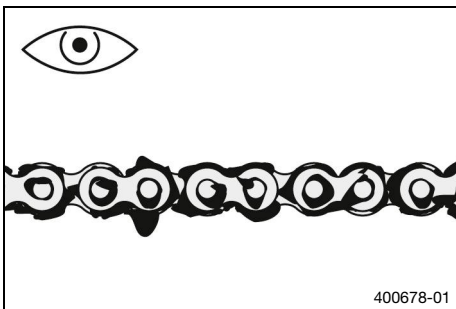

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (p. 95)



12.36 Cleaning the chain



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

The service life of the chain depends largely on its maintenance.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)

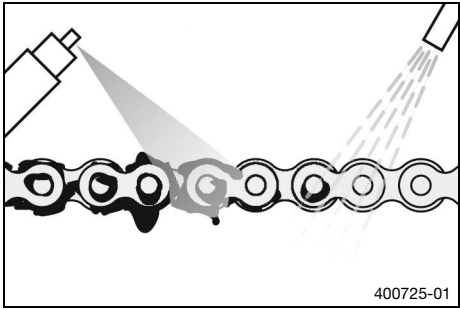

Main work

- Rinse off the loose dirt with a gentle jet of water.
- Remove old grease residues with a chain cleaner.

Chain cleaner (p. 194)

- After drying, apply chain spray.

Off-road chain spray (p. 189)

Reworking

- Remove the motorcycle from the lift stand. (p. 69)

12.37 Checking the chain tension

WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.


If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)

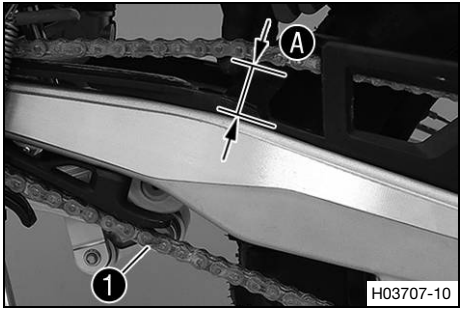

Main work

- Pull the chain at the end of the chain slider upward to measure chain tension **A**.

Lower chain section 1 must be taut.	
Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
When the chain guard is mounted, it must be possible to pull the chain up at least to the point where it makes contact with the chain guard.	
Chain wear is not always even, so repeat this measurement at different positions on the chain.	

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (p. 97)

Reworking

- Remove the motorcycle from the lift stand. (p. 69)

12.38 Adjusting the chain tension

**WARNING**

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 69)
- Check the chain tension. (p. 96)

Main work

- Loosen nut **1**.
- Loosen nuts **2**.
- Adjust the chain tension by turning adjusting screws **3** on the left and right.

Chain tension	58 mm ... 61 mm (2.28 in ... 2.40 in)
In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings A .	


- Tighten nuts **2** hand-tight.
- Make sure that chain tension adjusters **4** are fitted correctly on adjusting screws **3**.
- Tighten nut **1**.

Nut, wheel spindle, rear	
M22×1.5	80 Nm (59.0 ft·lb _f)

**Note**

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters **4** can be turned by 180°.

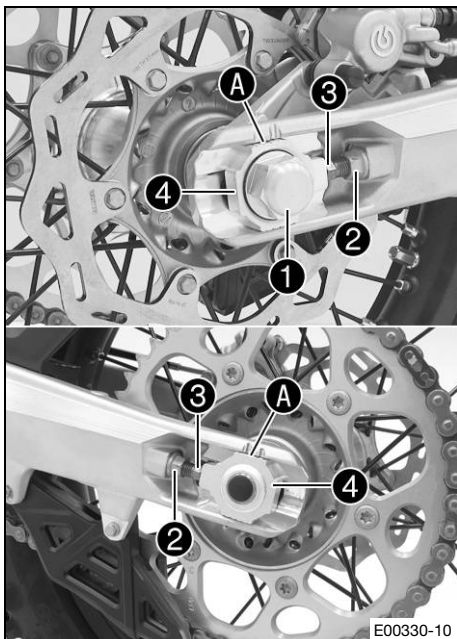**Reworking**

- Remove the motorcycle from the lift stand. (p. 69)

12.39 Checking the chain, rear sprocket, front sprocket, and chain guide



Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)

Main work

- Shift the transmission into the neutral position.
- Check the chain, rear sprocket, and front sprocket for wear.
 - » If the chain, rear sprocket, or front sprocket is worn:
 - Change the drivetrain kit. 

Always replace the front sprocket, rear sprocket, and chain together.

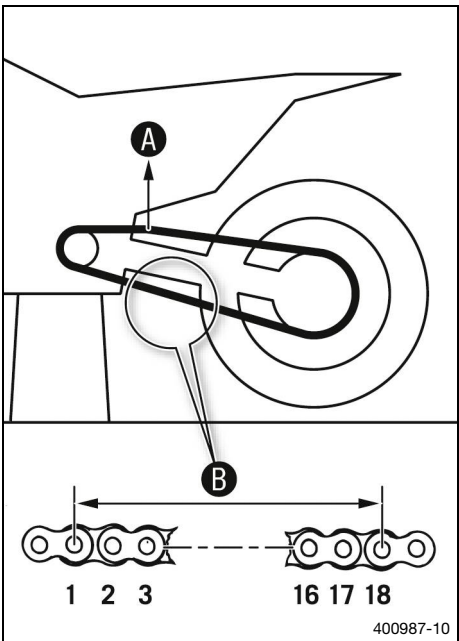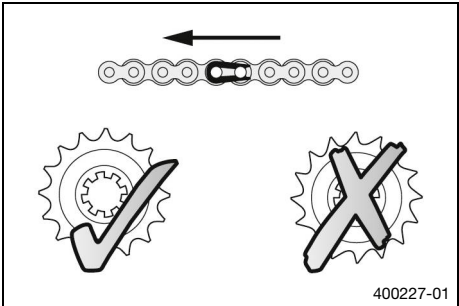

- Pull on the top section of the chain with the specified weight **A**.

Weight, chain wear measurement	10 kg ... 15 kg (22.0 lb ... 33.1 lb)
--------------------------------	--

- Measure distance **B** of chain rollers in the lower chain section.


Maximum distance B of chain rollers at the longest chain section	272 mm (10.71 in)
---	----------------------

Chain wear is not always even, so repeat this measurement at different positions on the chain.

- » If distance **B** is greater than the specified measurement:
 - Change the drivetrain kit. 

When installing a new chain, also replace the rear sprocket and front sprocket.

i Note
New chains wear out faster on old, worn sprockets.

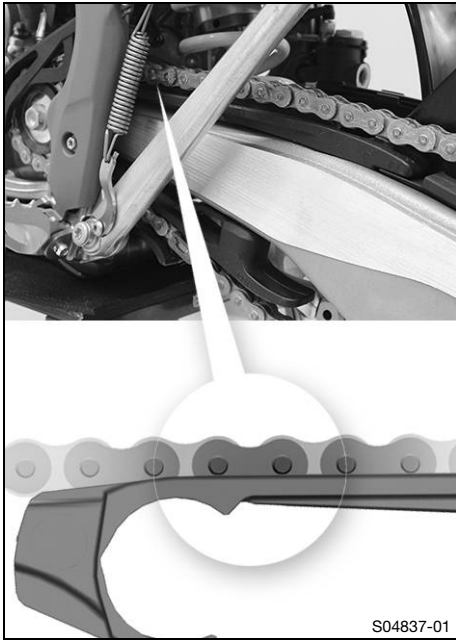


- Check the chain slider at the top for wear.
 - » If the lower edge of the chain pins is in line with, or below, the chain slider:
 - Change the chain slider. 🛠️
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain slider guard	
M6	6 Nm (4.4 ft·lb) Loctite® 243



- Check the chain slider for wear.
 - » If the lower edge of the chain pins is in line with or below the chain slider:
 - Change the chain slider. 🛠️
- Check that the chain slider is firmly seated.
 - » If the chain slider is loose:
 - Tighten the screws of the chain slider.

Screw, chain slider	
M8	15 Nm (11.1 ft·lb)

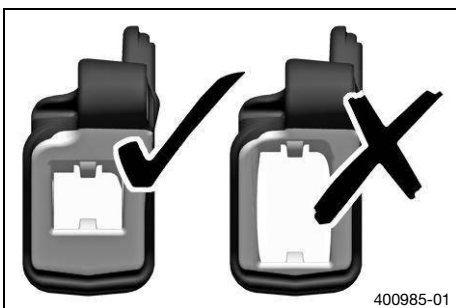

- Check the chain guide for wear.

i Note
Wear can be seen on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🛠️

12 Service work on the chassis




- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the screws on the chain guide.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _r)

Reworking

- Remove the motorcycle from the lift stand. (p. 69)

12.40 Checking the frame

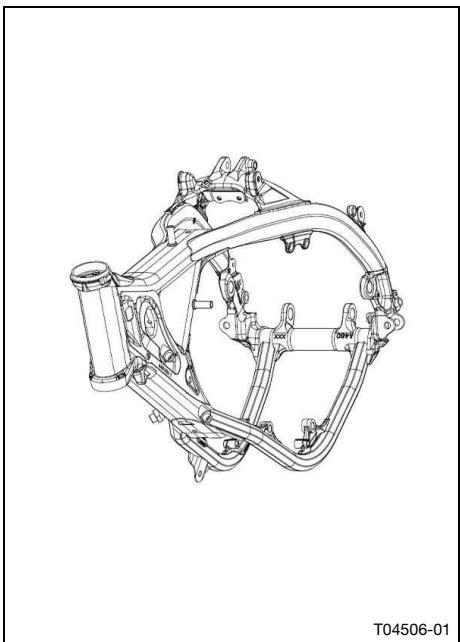

- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
 - Change the frame.

Repairs on the frame are not permitted.

12.41 Checking the swingarm



- Check the swingarm for damage, cracks, and deformation.
 - » If the swingarm shows signs of damage, cracks, or deformation:
 - Change the swingarm.

Repairs on the swingarm are not permitted.

12.42 Checking the throttle cable routing

**WARNING**

Danger of accidents The throttle cable can become kinked, jammed, or blocked if it has been routed incorrectly.

If the throttle cable is kinked, jammed or blocked, the speed can no longer be controlled.

- Make sure that the throttle cable routing and the play in the throttle cable complies with the specification.

Preparatory work

- Remove the seat. (p. 83)
- Remove the fuel tank. (p. 91)

Main work

- Check the throttle cable routing.

Both throttle cables must be routed, side by side, on the back of the handlebars, above the fuel tank roller on the right of the frame to the throttle valve body. Both throttle cables must be secured behind the rubber strap of the fuel tank support.


- » If the throttle cable routing is not as specified:
 - Correct the throttle cable routing.

**Reworking**

- Install the fuel tank. (p. 93)
- Mount the seat. (p. 83)



12.43 Checking the hand grip

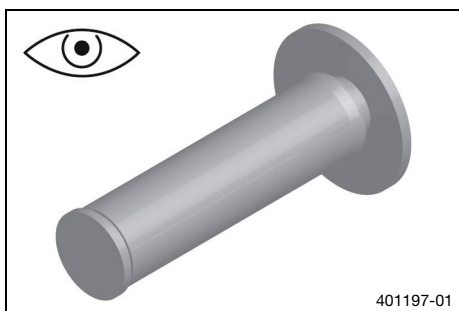

- Check the hand grips on the handlebar for damage, wear, and that they are firmly seated.




Note

The hand grips are vulcanized onto a sleeve on the left and onto the grip tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The hand grip can only be replaced with the sleeve or the gas pipe.

- » If a hand grip is damaged or worn:
 - Replace the hand grip.

- Check that screw ① is firmly seated.

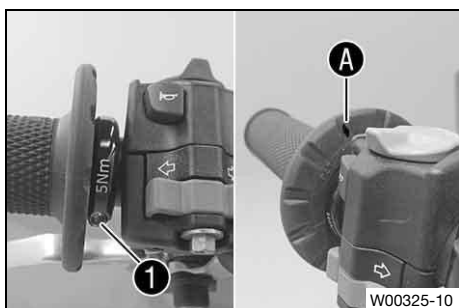

Screw, fixed grip

M4


5 Nm

(3.7 ft·lb_f)

Loctite® 243

Diamond ① must be positioned visibly as shown in the figure.

12.44 Adjusting the basic position of the clutch lever

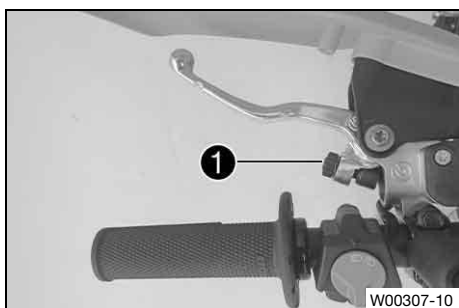

- Adjust the basic position of the clutch lever to your hand size by turning adjusting screw ①.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.



Note

When the adjusting screw is turned clockwise, the clutch lever moves away from the handlebar. When the adjusting screw is turned counterclockwise, the clutch lever moves closer to the handlebar. The range of adjustment is limited.

12.45 Checking/correcting the fluid level of hydraulic clutch



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

**NOTE**


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

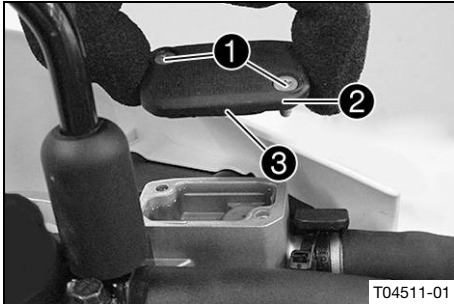

- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws **1**.
- Take off cover **2** with diaphragm **3**.
- Check the fluid level.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------

» If the fluid level does not meet the specifications:

- Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 5.1  (p. 190)

- Position the cover with diaphragm.
- Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.



12.46 Changing the hydraulic clutch fluid

**WARNING**

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.


**NOTE**

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

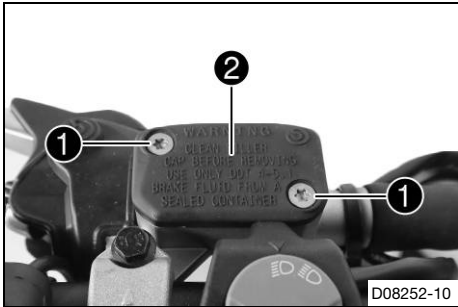


- Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.

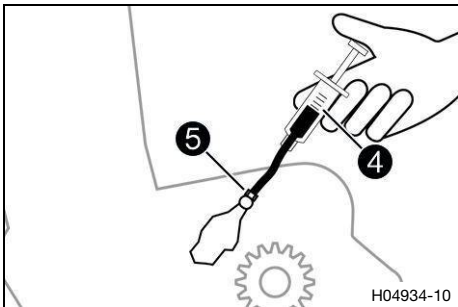

- Fill bleeding syringe 4 with the appropriate hydraulic fluid.

Syringe (50329050000)
Brake fluid DOT 5.1 (p. 190)

- On the clutch slave cylinder, remove bleeder protection cap, release the bleeder screw 5 and mount bleeding syringe 4.

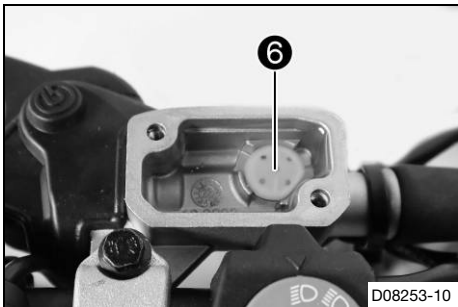


- Inject the liquid into the system until it escapes from bore 6 of the master cylinder without bubbles.
- Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
- Remove the bleeding syringe.
- Tighten the bleeder screw.
- Mount the protection cap.
- Correct the fluid level of the hydraulic clutch.

Fluid level below reservoir rim	4 mm (0.16 in)
---------------------------------	-------------------

- Position cover 2 with membrane 3.
- Mount and tighten screws 1.


Immediately clean up any brake fluid that has overflowed or spilled using water.
--

12.47 Removing the skid plate

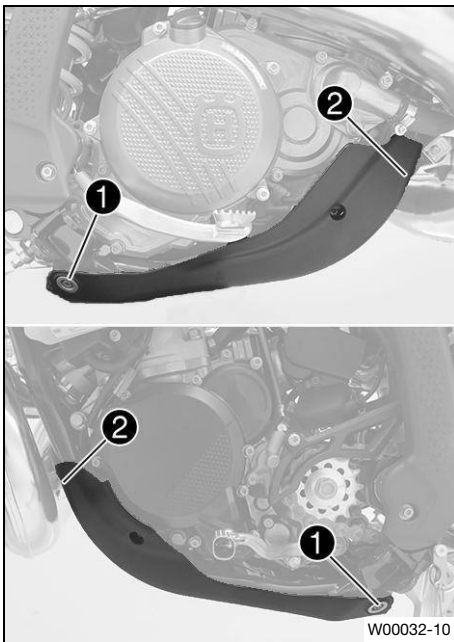

- Remove screws **1** with the bushings.
- Remove screws **2**.
- Take off the skid plate.

12.48 Installing the skid plate

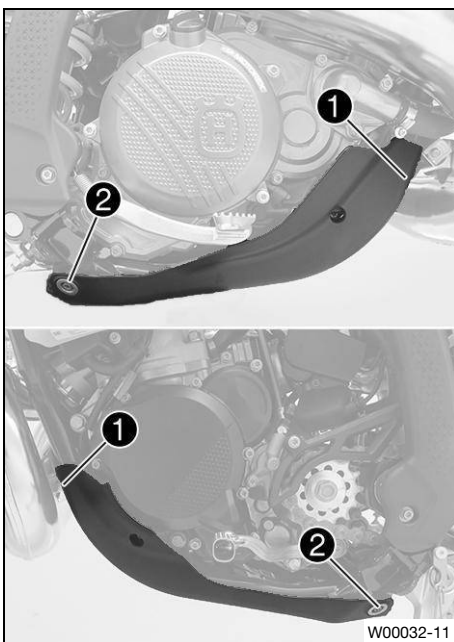

- Position the skid plate on the frame.
- Mount screws **1**, but do not tighten yet.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Mount screws **2** with bushings, but do not tighten yet.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

- ✓ The skid plate is directed evenly toward the front.
- Tighten all the screws of the skid plate.

13.1 Checking the free travel on the hand brake lever




WARNING

Danger of accidents The brake system fails in the event of overheating.


If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

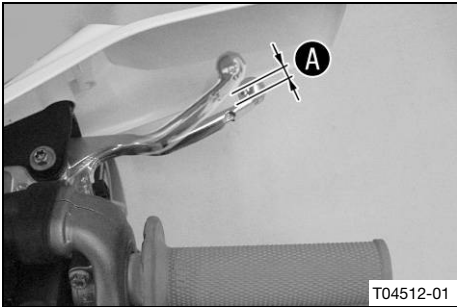

- Push the hand brake lever to the handlebar and check free travel **A**.
- | | |
|---------------------------------|---|
| Free travel of hand brake lever | $\geq 3\text{ mm}$
($\geq 0.12\text{ in}$) |
|---------------------------------|---|
- » If the free travel does not meet the specifications:
 - Adjust the free travel of the handbrake lever.
 (p. 106)

13.2 Adjusting the free travel of the handbrake lever

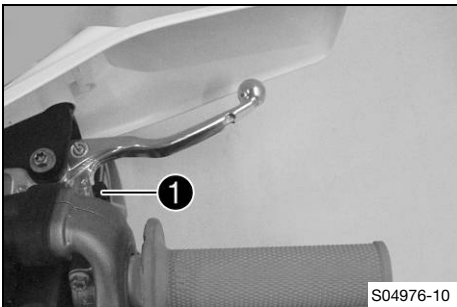

- Check the free travel on the hand brake lever.  (p. 106)
 - Adjust the free travel of the hand brake lever with adjusting screw **1**.
- | |
|--|
| Only turn the adjusting screw by hand, and do not use force. |
| Do not make any adjustments while riding. |



Note

Turn the adjusting screw clockwise to reduce free travel. The pressure point moves away from the handlebar.

Turn the adjusting screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.

The range of adjustment is limited.


13.3 Checking the brake discs



WARNING

Danger of accidents Worn-out brake discs reduce the braking action.

- Make sure that worn-out brake discs are replaced immediately.

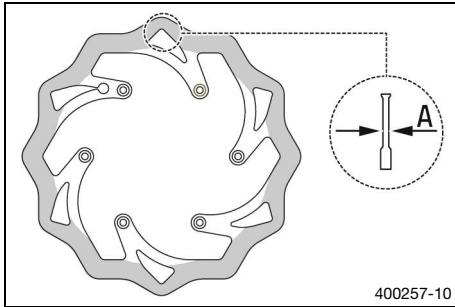

- Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement **A**.

Brake disc wear limit (All standard models)	
front	3 mm (0.12 in)
rear	4 mm (0.16 in)

Note
Wear reduces the thickness of the brake discs at the contact surface of the brake pads.

- » If the brake disc thickness is less than the specified value:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.
- Check the front and rear brake discs for damage, cracks, and deformation.
 - » If the brake disc shows signs of damage, cracks, or deformation:
 - Change the brake discs of the front brake.
 - Change the brake discs on the rear brake.



13.4 Checking the brake fluid level for the front brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.




WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

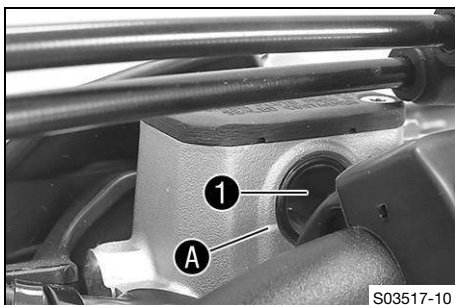

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in sight glass **1**.
 - » If the brake fluid level has dropped below marking **A** in the level viewer:
 - Add brake fluid for the front brake. (p. 108)



13.5 Adding brake fluid for the front brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the front brake are secured.

 (p. 109)

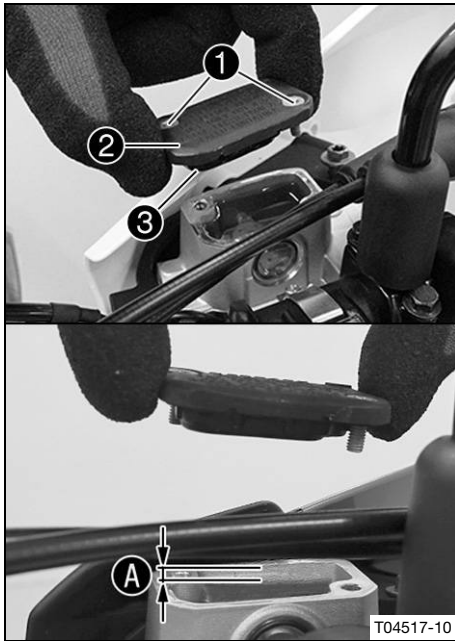

Main work

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove ① screws.
- Take off cover ② with diaphragm ③.
- Add brake fluid up to level A.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
---	-------------------

Brake fluid DOT 5.1 (p. 190)

- Position the cover with diaphragm. Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.




13.6 Checking that the brake pads of the front brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

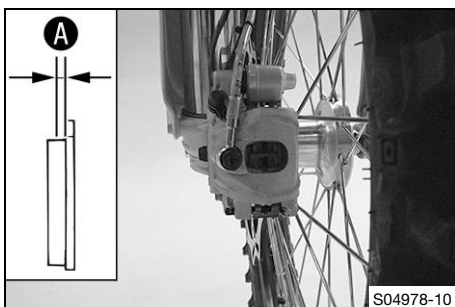

- Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)
-------------------------	-----------------------

- » If it is less than the minimum thickness:
 - Change the front brake pads. (p. 110)
- Check the brake pads for damage and cracking.
 - » If there is damage or cracking:
 - Change the front brake pads. (p. 110)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.



13.7 Changing the brake pads of the front brake



WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note


Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.




- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Take off cover ② with diaphragm ③.

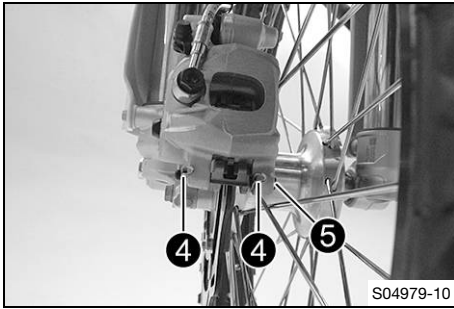

- Manually press the brake caliper toward the brake disc to push back the brake pistons. Ensure that brake fluid does not flow out of the brake fluid reservoir, extract some if necessary.
- Remove cotter pin ④, pull out pin ⑤, and remove the brake linings.
- Clean brake caliper and brake caliper support.

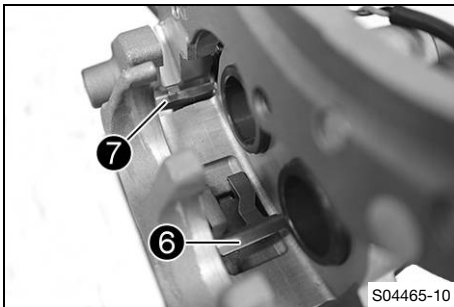

- Check that spring steel clip ⑥ in the brake caliper and brake pad guide plate ⑦ in the brake caliper support are properly seated.

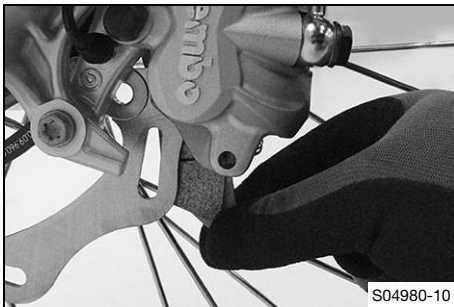

- Insert the new brake linings.

Always replace brake pads in sets.

- Mount bolt ⑤.
- ✓ Spring plate ⑥ engages in the groove on the pin.
- Mount cotter pins ④.
- Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is reached.



- Correct the brake fluid level to level A.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)
---	-------------------

Brake fluid DOT 5.1 (p. 190)

- Position cover ② with membrane ③.
- Mount and tighten screws ①.


Immediately clean up any brake fluid that has overflowed or spilled with water.

13.8 Checking the free travel of the brake pedal

**WARNING**

Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

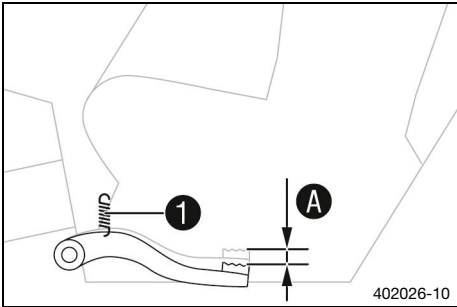


- Detach spring 1.
 - Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston actuation and check free travel A.
- | | |
|----------------------------|--|
| Free travel of brake pedal | 3 mm ... 5 mm
(0.12 in ... 0.20 in) |
|----------------------------|--|
- » If the free travel does not meet the specifications:
- Adjust the basic position of the brake pedal. 
-  (p. 112)
- Attach spring 1.

13.9 Adjusting the basic position of the brake pedal

**WARNING**

Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.

- Set the free travel on the brake lever as specified.

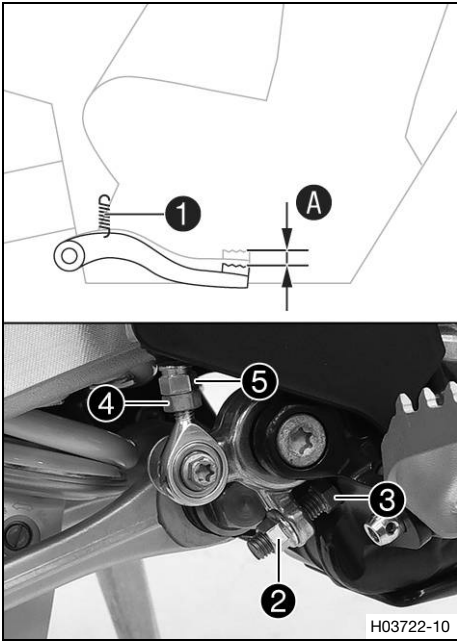

- Detach spring 1.
- Loosen nut 4 and unscrew it with push rod 5 until you have maximum free travel.
- To adjust the basic position of the brake pedal to individual requirements, loosen nut 2 and turn screw 3 accordingly.

 **Note**
The range of adjustment is limited.

- Turn push rod 5 accordingly until you have free travel A. If necessary, adjust the basic position of the brake pedal.

Free travel of brake pedal	3 mm ... 5 mm (0.12 in ... 0.20 in)
----------------------------	--

- Hold screw 3 and tighten nut 2.

Brake pedal stop nut	
M8	20 Nm (14.8 ft·lb _r)

- Hold push rod 5 and tighten nut 4.

Remaining nuts on chassis	
M6	10 Nm (7.4 ft·lb _f)

- Attach spring ①.



13.10 Checking the brake fluid level for the rear brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.




WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

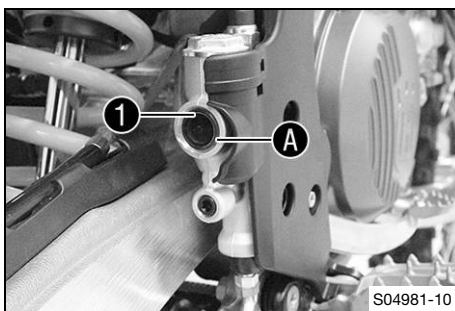

S04981-10

- Stand the vehicle upright.
- Check the brake fluid level in sight glass ①.
 - » If the fluid has dropped below marking A in the level viewer:
 - Add brake fluid for the rear brake. (p. 113)



13.11 Adding brake fluid for the rear brake



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

- Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

- Check that the brake pads of the rear brake are secured.  (p. 115)
- Remove air filter box cover.  (p. 85)
- Remove the frame protector.  (p. 84)


Main work

- Stand the vehicle upright.
- Remove screw cap ❶ with diaphragm ❷ and the O-ring.
- Add brake fluid to mark A.

Brake fluid DOT 5.1  (p. 190)

- Mount and tighten screw cap ❶ with diaphragm ❷ and the O-ring.

Immediately clean up any brake fluid that has overflowed or spilled using water.

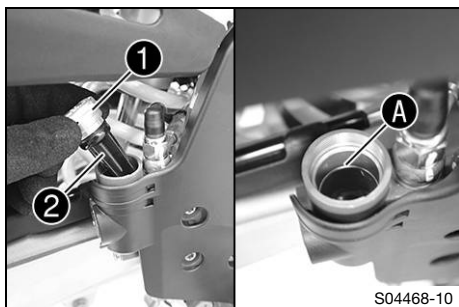

Reworking

- Install the frame protector.  (p. 84)
- Install the air filter box cover.  (p. 85)


13.12 Checking that the brake pads of the rear brake are secured



WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.

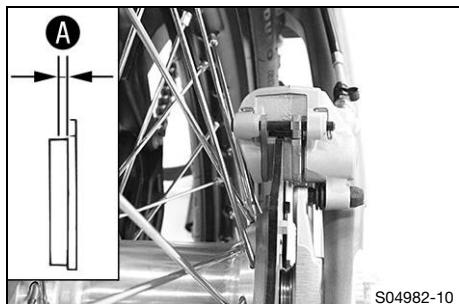

- Check all brake pads on both brake calipers for their lining thickness **A**.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)
--------------------------------	-----------------------

- » If it is less than the minimum thickness:
 - Change the rear brake pads. (p. 115)
- Check the brake pads for damage and cracking.
 - » If there is damage or cracking:
 - Change the rear brake pads. (p. 115)
- Check that the brake pads are secured.
 - » If the brake pads are not secured correctly:
 - Secure brake pads, replace with new parts if necessary.



13.13 Changing the rear brake pads



WARNING

Danger of accidents Brake pads which have not been approved alter the braking action.

- Only use brake pads approved and recommended by the vehicle manufacturer.



WARNING

Danger of accidents Incorrect servicing will cause the brake system to fail.

- Ensure that service work and repairs are performed professionally.



WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



WARNING

Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.

13 Brake system

- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



NOTE


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

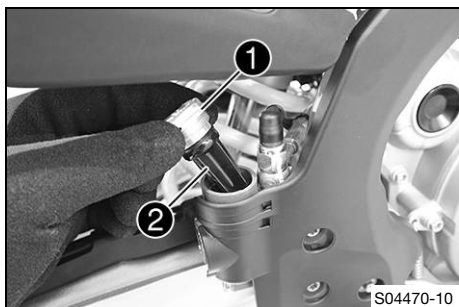

- Stand the vehicle upright.
- Remove the cable tie on the frame protector.
- Remove screw cap ① with diaphragm ② and the O-ring.
- Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake reservoir, and siphon off excess if required.
- Remove cotter pin ③.
- Pull out pin ④.
- Remove the brake pads.
- Clean brake caliper and brake caliper support.
- Check that spring plate in the brake caliper and brake pad sliding plate in the brake caliper bracket are fitted correctly.

 


- Insert the new brake linings.
- Mount bolt ④.

Always replace brake pads in sets.

✓ The spring plate engages in the groove on the pin.

 - Mount cotter pins ③.
- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.



- Correct the brake fluid level to mark A.

Brake fluid DOT 5.1 (p. 190)

- Mount and tighten screw cap ① with diaphragm ② and the O-ring.

Immediately clean up any brake fluid that has overflowed or spilled using water.

- Mount new cable ties on the frame protector.

14.1 Removing the front wheel


Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)

Main work

(All standard models)

- Manually press the brake caliper toward the brake disc to push back the brake pistons.

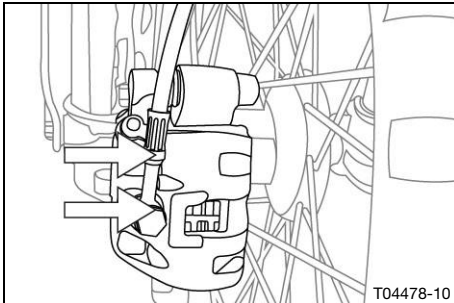


(All special models)

- Manually press the brake caliper toward the brake disc to push back the brake pistons.



- Loosen screw ① by four turns.
- Loosen screws ②.
- Press on screw ① to push the wheel spindle out of the fork shoe.
- Remove screw ①.

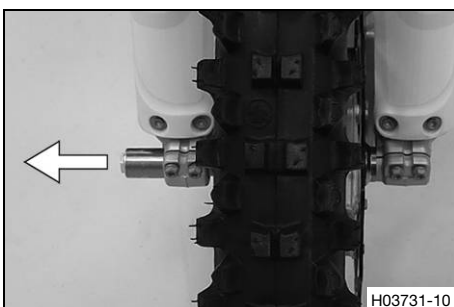

WARNING

Danger of accidents Damaged brake discs reduce the braking action.


- Always lay the wheel down in such a way that the brake disc is not damaged.

- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

Do not actuate the hand brake lever when the front wheel is removed.


(All standard models)

- Remove spacers ③.

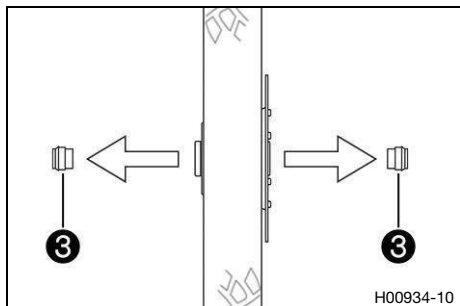

(All special models)

- Remove spacer ③ and brake disc guard ④.

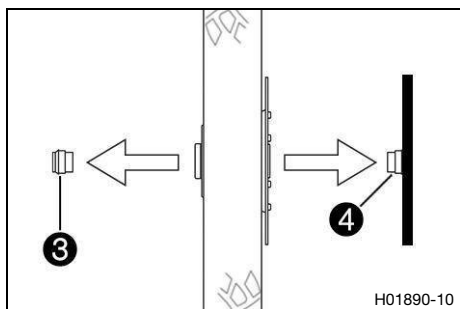

14.2 Installing the front wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.


- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

(All standard models)

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease (p. 189)


- Insert spacers.

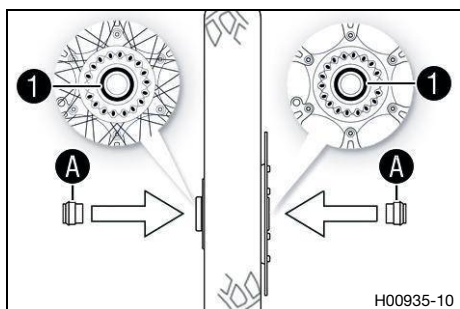

(All special models)

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.

Long-life grease (p. 189)

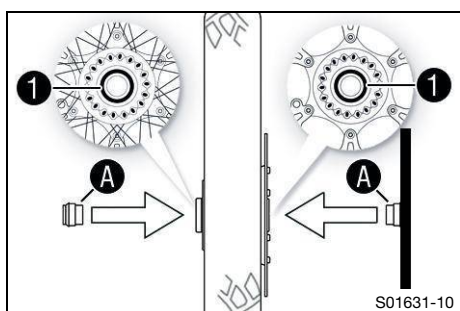



- Insert spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease  (p. 189)

- Jack up the front wheel into the fork, position it, and insert the wheel spindle.
- ✓ The brake pads are positioned correctly.
- Mount and tighten screw **2**.

Screw, wheel spindle, front

M20×1.5	35 Nm (25.8 ft·lb _f)
---------	-------------------------------------

- Operate the hand brake lever several times until the brake pads are in contact with the brake disc.
- Remove the motorcycle from the lift stand.  (p. 69)
- Operate the front brake and compress the fork a few times firmly.
- ✓ The fork legs straighten.
- Tighten screws **3**.

Screw, fork shoe

M8	15 Nm (11.1 ft·lb _f)
----	-------------------------------------



14.3 Removing the rear wheel

Preparatory work

- Raise the motorcycle with a lift stand.  (p. 69)

Main work

- Manually press the brake caliper toward the brake disc to push back the brake pistons.
- Remove nut **1**.
- Remove chain tension adjuster **2**.
- Pull out wheel spindle **3** far enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible.
- Remove the chain from the rear sprocket.


Protect the components against damage by covering them.



WARNING


Danger of accidents Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.

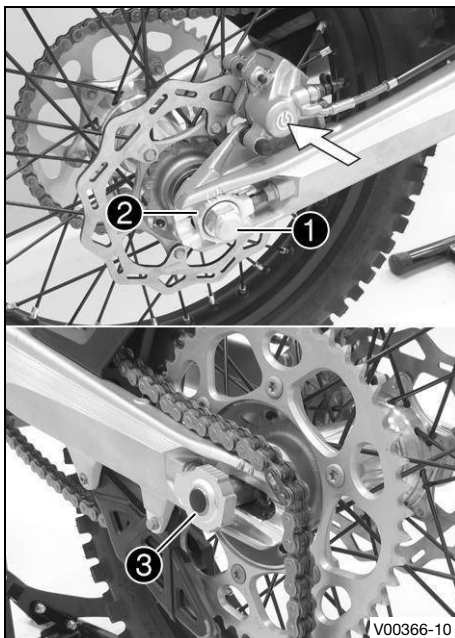

- Hold the rear wheel and remove wheel spindle.
- Take the rear wheel out of the swingarm.

Do not actuate the brake pedal when the rear wheel is removed.

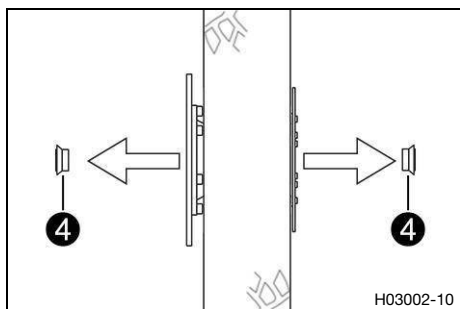

- Remove spacers ④.


14.4 Installing the rear wheel



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

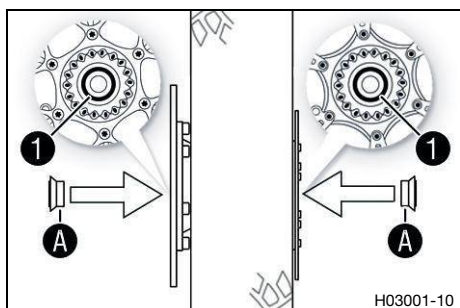

Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing.
- Clean and grease radial shaft seal ① and contact surfaces A on the spacers.


Long-life grease (p. 189)

- Insert spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 189)



- Position the rear wheel and insert wheel spindle ②.
 - ✓ The brake pads are positioned correctly.
- Attach the chain.

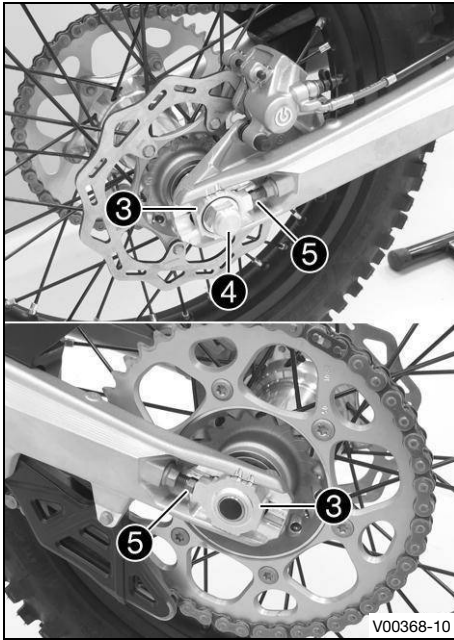

- Position chain tension adjuster **3**. Mount nut **4** but do not tighten yet.
- Make sure that chain tension adjusters **3** are fitted correctly on adjusting screws **5**.
- Check the chain tension. (p. 96)
- Tighten nut **4**.

Nut, wheel spindle, rear	
M22×1.5	80 Nm (59.0 ft·lb _f)



Note

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters **3** can be turned by 180°.

- Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

Reworking

- Remove the motorcycle from the lift stand. (p. 69)

14.5 Checking the tire condition




Note

Only mount tires approved and/or recommended by Husqvarna Mobility.

Other tires could have a negative effect on handling characteristics.

The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

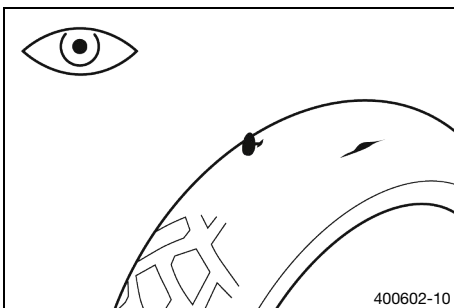

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires.
- Check the tread depth.


Minimum tread depth	≥ 2 mm (≥ 0.08 in)
---------------------	-----------------------



Note

Observe the minimum tread depth required by national law.

 - » If the tread depth is less than the minimum tread depth:
 - Change the tires.



- Check the tire age.

i Note

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

Husqvarna Mobility recommends changing the tires, regardless of the actual wear, after 5 years at the latest.

 
- » If the tires are older than five years:
 - Change the tires.

14.6 Checking the tire pressure

i Note

Low tire pressure leads to abnormal wear and the tire overheating.

Correct tire pressure ensures optimal riding comfort and maximum tire service life.



- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Street tire pressure (All 300 EU models and AR)

front	2.0 bar (29.0 psi)
rear	2.0 bar (29.0 psi)

Off-road tire pressure

front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire air pressure.
- Mount the protection cap.

14.7 Checking the spoke tension



 
WARNING

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.

Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

- Check the spoke tension regularly, especially on a new vehicle.



- Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.

i Note
The frequency of the sound depends on the spoke length and spoke diameter.
If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

- » If the spoke tension differs:
 - Correct the spoke tension. 
- Check the spoke torque.

Spoke nipple, front wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Spoke nipple, rear wheel	
M4,5	6 Nm (4.4 ft·lb _f)
Torque wrench kit (58429094000)	

15.1 Removing the 12 V battery

**WARNING**

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------

- Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.

**NOTE**

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.


**NOTE**

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

- Preparatory work**
- Remove the seat.  (p. 83)
 - Remove the fuel tank.   (p. 91)

- Main work**
- Disconnect negative cable **1** from the 12 V battery.
 - Pull back positive terminal cover **2** and disconnect positive cable **3** from the 12-V battery.

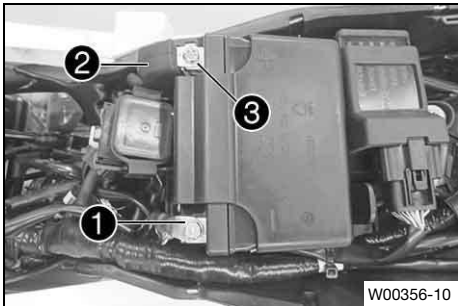

- Remove screw **4**.

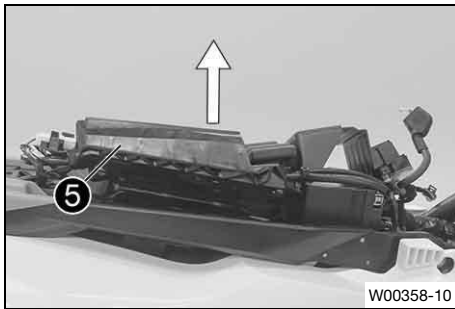


- Pull up battery holding bracket **5** and remove the 12-V battery to the rear.

Pay attention to the wiring harness.

15.2 Installing the 12 V battery

Main work

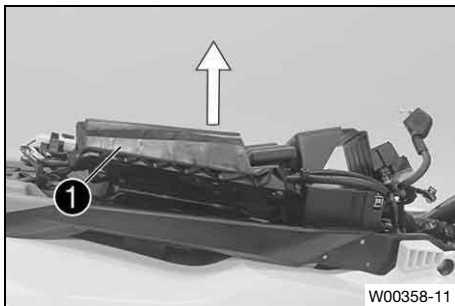

- Pull up battery holding bracket **1**, insert the 12-V battery into the battery compartment with the terminals facing upwards and secure with battery holding bracket **1**.

Ensure that the cable is routed correctly.

12-V battery (HJTZ5S-FP-C) (p. 192)




- Mount and tighten screw **2**.

Screw, battery holding bracket

M6

6 Nm
(4.4 ft·lb_f)

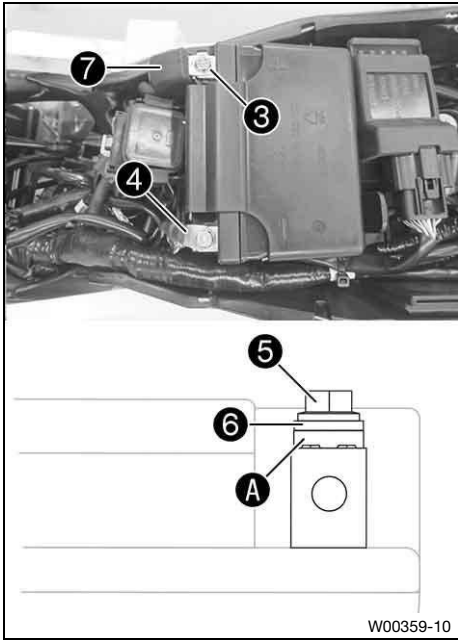

- Connect positive cable 3 to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

- Connect negative cable 4 to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb _f)

Contact disks A must be mounted under screws 5 and cable lug 6 with the claws toward the battery terminal.

- Slide positive terminal cover 7 over the positive terminal.

Reworking

- Install the fuel tank. (p. 93)
- Mount the seat. (p. 83)

15.3 Charging the 12 V battery

WARNING

Risk of injury 12-V batteries contain harmful substances.

- Keep 12-V batteries out of the reach of children.
- Keep the battery away from sparks or open flames.
- Only charge batteries in well-ventilated rooms.
- Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)
------------------	----------------------

- Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V
--	-----

- Dispose of 12 V batteries correctly if they have less than the minimum voltage.

NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.

NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

**Note**

Even when there is no load on the 12 V battery, it discharges steadily each day.

The state of charge and the method of charging are very important for the service life of the 12 V battery.

Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current or charging voltage are exceeded, the 12-V battery will be irreparably damaged.

If the 12 V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.


The 12 V battery is maintenance-free.

Preparatory work

- Remove the seat. (p. 83)
- Remove the fuel tank. (p. 91)
- Remove the 12 V battery. (p. 124)

Main work

- Do not remove cover **1**.
- Check the battery voltage.

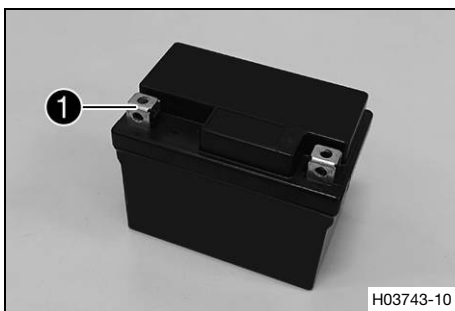

- » Battery voltage:
 - < 9 V
 - Do not charge the 12 V battery.
 - Replace the 12 V battery and dispose of the old 12 V battery properly.
- » If the specifications have been met:

Battery voltage:

 - ≥ 9 V
 - Charge the 12 V battery.

Read the accompanying instructions.	
Maximum charging voltage	14.4 V
Minimum charging voltage	3.0 A
Maximum charging time	12 h
The charging current, charging voltage, and charging time must not be exceeded.	
Recharge the 12 V battery regularly when the motorcycle is not being used.	3 months
If the 12 V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.	
Ideal charging and storage temperature of the lithium-ion battery	10 °C ... 20 °C (50.0 °F ... 68.0 °F)
Battery charger (79629974000)	
(US) battery charger (79629974500)	



Note

This battery charger tests whether the 12 V battery retains its voltage. It is also impossible to overcharge the 12 V battery with this battery charger. The charging time may be longer at low temperatures.

This battery charger is only suitable for lithium iron phosphate batteries.

- Switch off the charger after charging and disconnect from the 12 V battery.

Reworking

- Install the 12 V battery. (p. 125)
- Install the fuel tank. (p. 93)
- Mount the seat. (p. 83)



15.4 Changing the main fuse



WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



Note

The main fuse protects all electrical power loads of the vehicle.

Preparatory work

- Remove the seat. (p. 83)

Main work

- Pull the starter relay off the holder and hang to the side.
- Remove protection caps **1**.
- Remove faulty main fuse **2**.



Note

A faulty fuse has a burned-out fuse wire **A**.

A spare fuse **3** is located in the starter relay.

- Insert the main fuse.

Fuse (58011109120) (p. 193)


- Check that the electrical equipment is functioning properly.



Tip

Insert a new spare fuse so that it is available if needed.

- Mount the protection caps.
- Mount the starter relay onto the holder and route the cable.

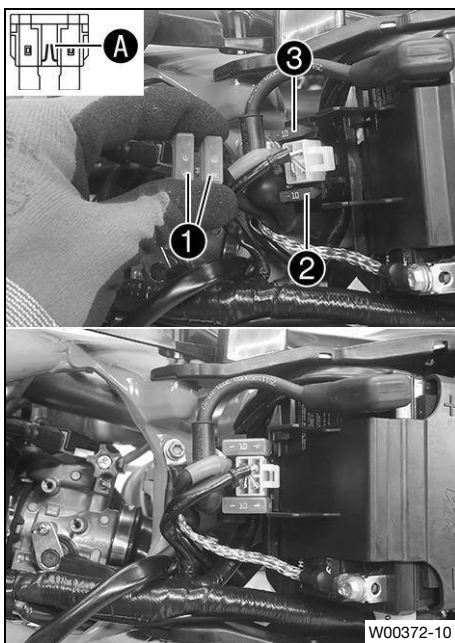

Reworking

- Mount the seat. (p. 83)





15.5 Removing the headlight mask with the headlight



- Release screws **1**.
- Slide the headlight mask up and swing it forward.
- Disconnect the brake line at the headlight mask.

(All 300 EU models and AR)

- Detach plug-in connectors ② and take off the headlight mask with the headlight.

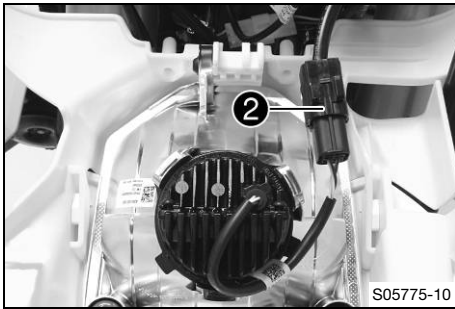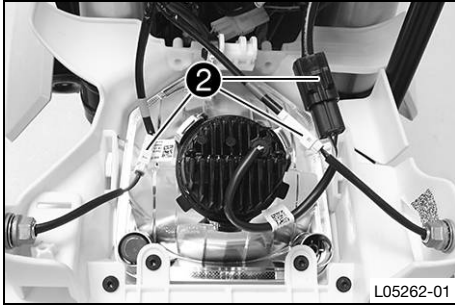



- Disconnect plug-in connector ② and take off the headlight mask together with the headlight.

15.6 Installing the headlight mask with the headlight


Main work

(All US, BR models and 250 EU)

- Join plug-in connector ①.

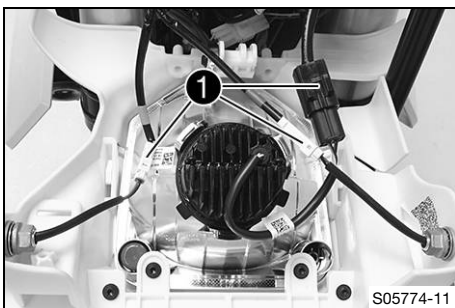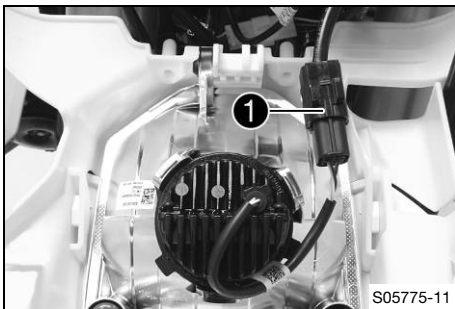

- Join plug-in connectors ①.

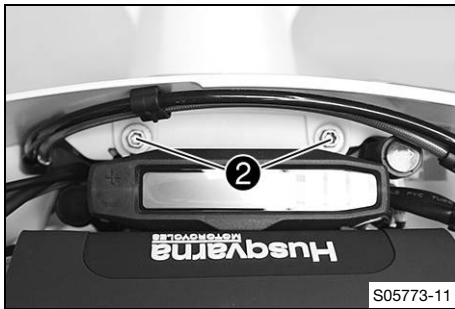

- Position the brake line in the brake line guide.
- Position the headlight mask.
- ✓ The holding lugs engage in the fender.
- Tighten screws ②.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb _f)

Reworking

- Check the headlight setting. (p. 132)



15.7 Changing the headlight bulb



Preparatory work

- Remove the headlight mask with the headlight. (p. 129)

Main work

- Turn LED unit ① counterclockwise all the way and take it out of the reflector.

Only touch the LED unit on the cooling element.

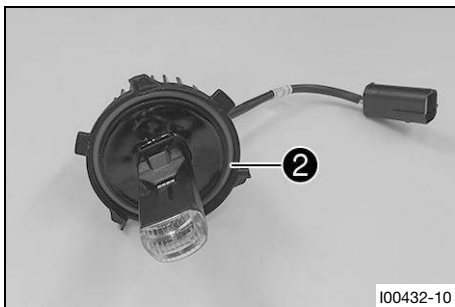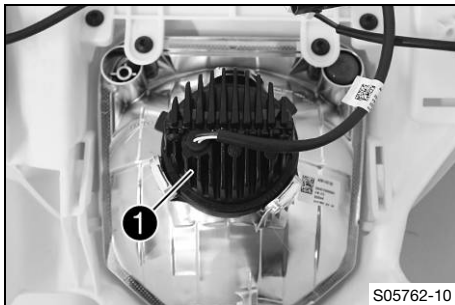

- Insert the LED unit into the reflector and turn it clockwise all the way.

Ensure that O-ring ② is seated properly.

Low beam (LED) (p. 192)

Reworking

- Install the headlight mask with the headlight. (p. 130)
- Check the headlight setting. (p. 132)




15.8 Changing the turn signal bulb (All 300 EU models and AR)



NOTE
Impairments to reflectors and lamps Grease on the reflector reduces the emitted light. Grease on the bulb will evaporate due to the heat and be deposited on the reflector. Grease residue on the bulb reduces heat dissipation and increases the heat of the bulb, thus reducing its service life.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

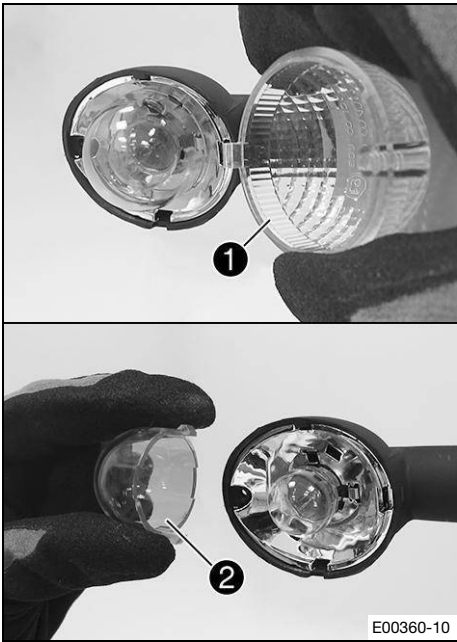

Main work

- Remove the screw on the rear of the turn signal housing.
- Carefully remove turn signal glass ①.
- Lightly squeeze orange cap ② in the area of the holding lugs and take it off.
- Press the turn signal bulb lightly into the socket, turn it counterclockwise by about 30°, and pull it out of the socket.
- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.


Turn signal (R10W / Socket BA15s) (p. 192)

- Mount the orange cap.
- Position the turn signal glass.
- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk.
- Tighten the screw lightly.

Reworking

- Check that the turn signal system is functioning properly.

15.9 Checking the headlight setting

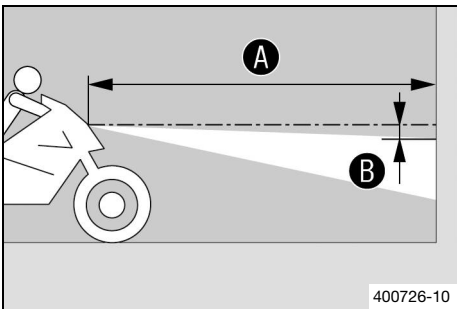

- Park the vehicle on a horizontal surface in front of a light-colored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance ② under the first marking.

Distance ②	5 cm (2.0 in)
------------	------------------

- Position the vehicle vertically at a distance ① away from the wall.

Distance ①	5 m (16 ft – 5 in)
------------	-----------------------

- Sit on the motorcycle.
- Switch on the low beam.
- Check the headlight setting.

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider.

- » If the boundary between light and dark does not meet specifications:
 - Adjust headlight range.  (p. 133)



15.10 Adjusting the headlight range

Preparatory work

- Check the headlight setting.  (p. 132)

Main work

- Loosen screw ①.
- Adjust the headlight range by pivoting the headlight.

The boundary between light and dark must be exactly on the lower mark for a motorcycle with rider (instructions on how to apply the mark: Checking the headlight setting).



Note

A change in weight may require a correction of the headlight range.

- Tighten screw ①.



H03755-10

 
15.11 Combination instrument battery, changing

Preparatory work


- Remove the headlight mask with the headlight.  (p. 129)

Main work

- Remove screws ① with the washers.
- Pull the combination instrument upward out of the holder.



L05246-01

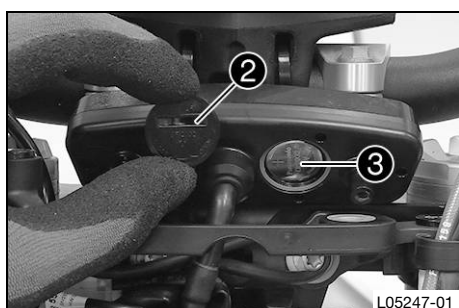


L05247-01

- Using a coin, turn protection cap ② all the way counter-clockwise and take it off.
- Remove combination instrument battery ③.
- Insert the combination instrument battery with the label facing outward.

Button cell (CR 2430)  (p. 192)

- Check the O-ring of the protection cap for correct seating.

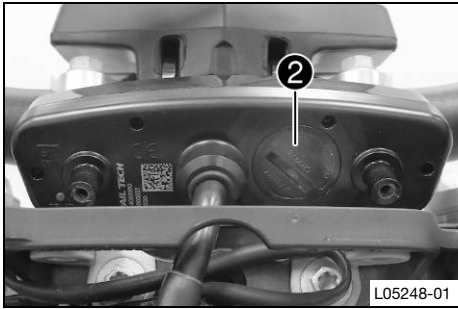


- Position protection cap **2** and turn all the way clockwise using a coin.
- Press any button on the combination instrument.
✓ The combination instrument is activated.
- Position the combination instrument in the holder.
- Mount and tighten the screws with washers.

Reworking


- Install the headlight mask with the headlight. (p. 130)
- Check the headlight setting. (p. 132)
- Set to kilometers or miles. (p. 30)
- Set the combination instrument. (p. 31)
- Set the clock. (p. 31)

15.12 Diagnostic connector

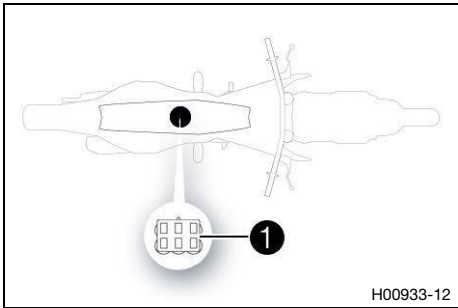

Diagnostics connector **1** is located under the seat.

15.13 OCU

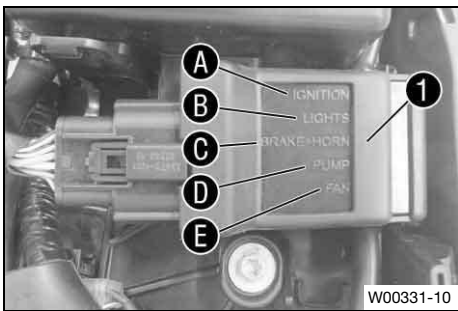

OCU **1** is located under the seat.
The OCU replaces the electronic fuses and relays.
All outputs are switched independently of the signals of the voltage regulator and ECU.
The outputs are deactivated individually in the event of overcurrent.
This enables easy error detection because the status of each output is indicated via LED lights.
The OCU monitors the electronics system completely independently.
As soon as an indicated error is rectified, the status light of the OCU changes from red to green.

overview

A	Ignition
B	Light
C	Brake light + horn
D	Fuel pump

E	Radiator fan
---	--------------

16.1 Cooling system



Water pump ❶ in the engine circulates the coolant. The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ❷. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248.0 °F)

The coolant is cooled by the air stream. The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.

(All 300 EU, 300 AR and 300 PRO models)

Additional cooling is provided by the radiator fan, which is activated on a temperature-dependent basis.

16.2 Checking the frost protection and coolant level

WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

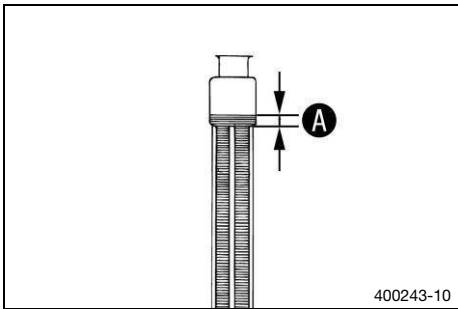

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the frost protection in the coolant.

-45 °C ... -25 °C (-49.0 °F ... -13.0 °F)	
--	--

» If the frost protection in the coolant does not match the specified value:

- Correct the frost protection in the coolant.

- Check the coolant level in the radiator.

Coolant level ❸ above the radiator fins	10 mm (0.39 in)
---	--------------------

- » If the coolant level does not meet the specifications:
 - Correct the coolant level.

coolant	
Coolant  (p. 190) Antifreeze protection to at least: -25 °C (-13.0 °F)	1.2 l (0.32 liq. gal _{US})

- Mount the radiator cap.



16.3 Checking the coolant level



WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.




WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

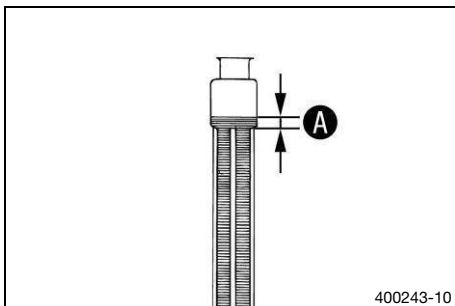

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)
--	--------------------

- » If the coolant level does not meet the specifications:
 - Correct the coolant level.

coolant	
Coolant  (p. 190) Antifreeze protection to at least: -25 °C (-13.0 °F)	1.2 l (0.32 liq. gal _{US})

- Mount the radiator cap.



16.4 Draining the coolant

WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

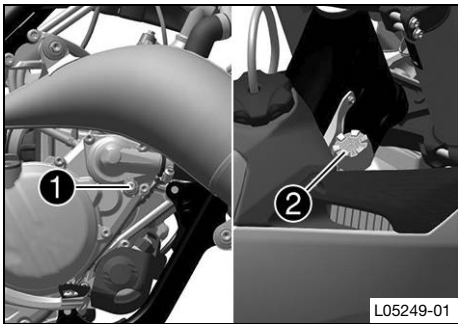

- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ①.
- Take off radiator cap ②.
- Completely drain the coolant.
- Mount screw ① with the new sealing ring and tighten.


Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _f)

16.5 Refilling the coolant

WARNING


Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

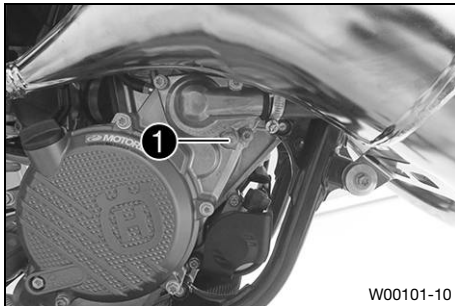

Main work

- Make sure that screw ① is tightened.
- Stand the motorcycle upright.

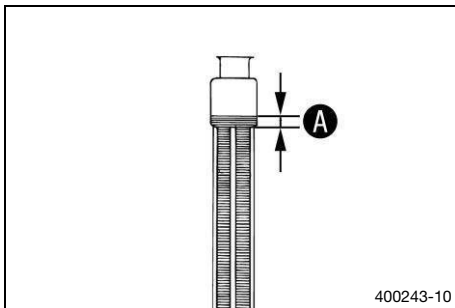

- Pour coolant in up to level A above the radiator fins.

10 mm
(0.39 in)


coolant

Coolant (p. 190)

Antifreeze protection to at least: -25 °C (-13.0 °F)

1.2 l

(0.32 liq. gal_{US})

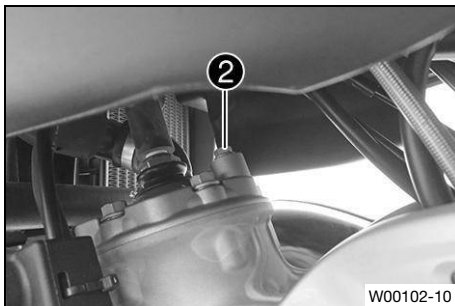


- Remove screw ② and wait until coolant emerges without bubbles.
- Mount and tighten screw ②.

Cylinder head bleed screw

M6

8 Nm

(5.9 ft·lb_f)

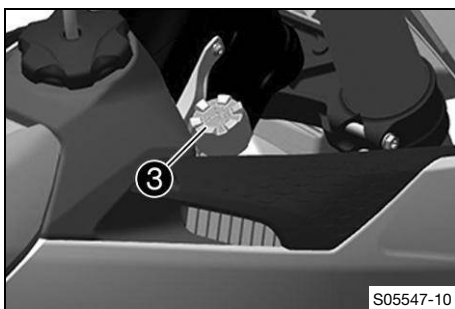

- Mount radiator cap ③.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Allow the engine to warm up and cool down again.

Reworking

- Check the coolant level. (p. 137)



16.6 Changing the coolant

WARNING

Health hazard Coolant is harmful to health.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.


- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Condition: The engine is cold

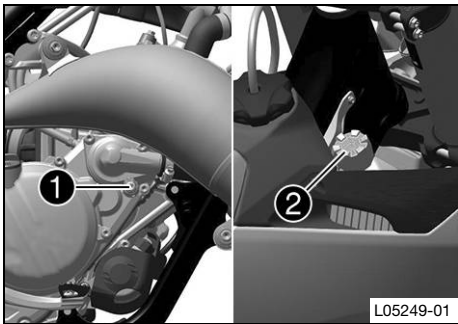

- Stand the motorcycle upright.
- Remove screw ❶ and take off radiator cap ❷.
- Place an appropriate container under the water pump cover.
- Completely drain the coolant.
- Mount screw ❶ with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb _f)

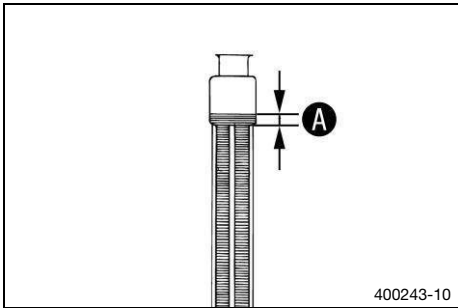


- Pour coolant in up to level A above the radiator fins.

10 mm (0.39 in)	
coolant	
Coolant (p. 190) Antifreeze protection to at least: -25 °C (-13.0 °F)	1.2 l (0.32 liq. gal _{US})



- Remove screw ③ and wait until coolant emerges without bubbles.
- Mount and tighten screw ③.

Cylinder head bleed screw	
M6	8 Nm (5.9 ft·lb.)

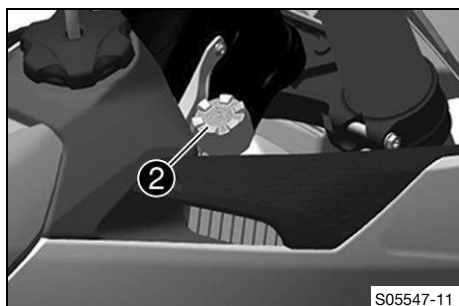

- Mount radiator cap ②.

**DANGER**


Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Allow the engine to warm up and cool down again.
- Check the transmission and cooling system for leaks.
- Check the coolant level. 📖 (p. 137)



17.1 Checking the play in the throttle cable

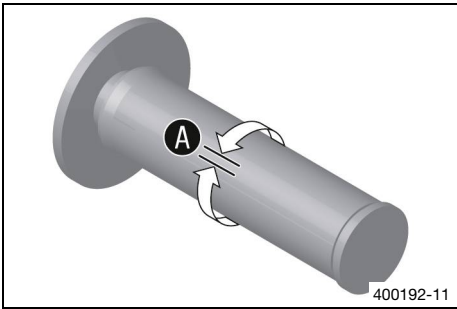

- Check the throttle grip for smooth operation.
- Turn handlebar as far as possible to the right. Turn the throttle twist grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- » If the throttle cable play does not meet the specified value:
 - Adjust the throttle cable play. (p. 142)

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and let it run at idle speed. Move the handlebar back and forth over the entire steering range.

The idle speed must not change.


- » If the idle speed changes:
 - Adjust the throttle cable play. (p. 142)

17.2 Adjusting the throttle cable play

Note

If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

- Preparatory work**
- Remove the seat. (p. 83)
 - Remove the fuel tank. (p. 91)
 - Check the throttle cable routing. (p. 101)

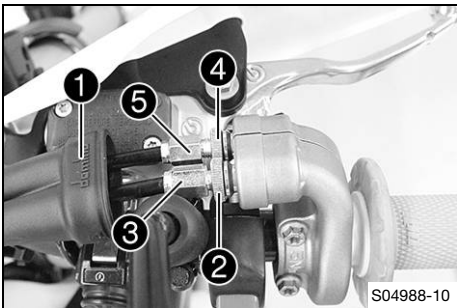

- Main work**
- Move the handlebar to the straight-ahead position.
 - Push back sleeve **1**.
 - Loosen nut **2**.
 - Turn adjusting screw **3** in as far as possible.
 - Loosen nut **4**.
 - Turn adjusting screw **5** in as far as possible.
 - Turn adjusting screw **3** so that there is play in the throttle cable at the throttle grip.

Throttle cable play	3 mm ... 5 mm (0.12 in ... 0.20 in)
---------------------	--

- Unscrew the adjusting screw ⑤ until the smooth operation or play in throttle cable is worsened.
- Turn adjusting screw ⑤ approx. two turns further.
- Tighten nut ④.
- Tighten nut ②.
- Slide on sleeve ①.
- Check the throttle for smooth operation.

Reworking

- Check the play in the throttle cable. 📖 (p. 142)
- Install the fuel tank. 🛠️ 📖 (p. 93)
- Mount the seat. 📖 (p. 83)




17.3 Adjusting the characteristic map of the throttle response 🛠️



Note


On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate.

A guide plate with a different characteristic map is supplied.

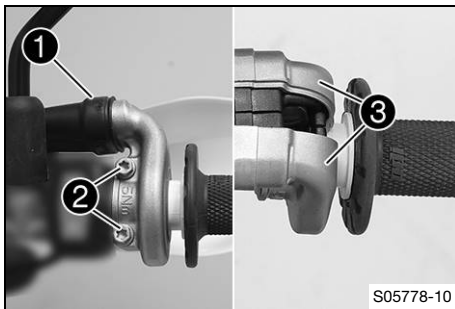

Main work

- Push back boot ①.
- Remove screws ② and half-shells ③.
- Detach the throttle cables and take off the grip tube.

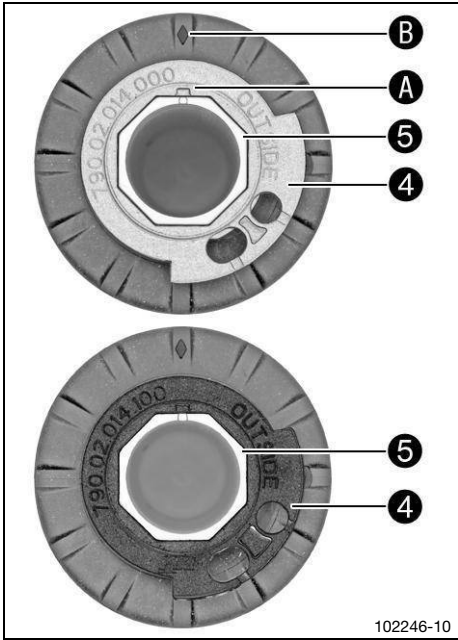


- Remove guide plate ④ from handle tube ⑤.
- Position the required guide plate on the grip tube.

The label **OUTSIDE** must be visible. Marking **A** must be positioned at marking **B**.

Work material (Alternative 1 / 2)
Gray guide plate (79002014000)
Work material (Alternative 2 / 2)
Black guide plate (79002014100)

Note
The gray guide plate opens the throttle valve more slowly.
The black guide plate opens the throttle valve more quickly.
The gray guide plate is mounted upon delivery.

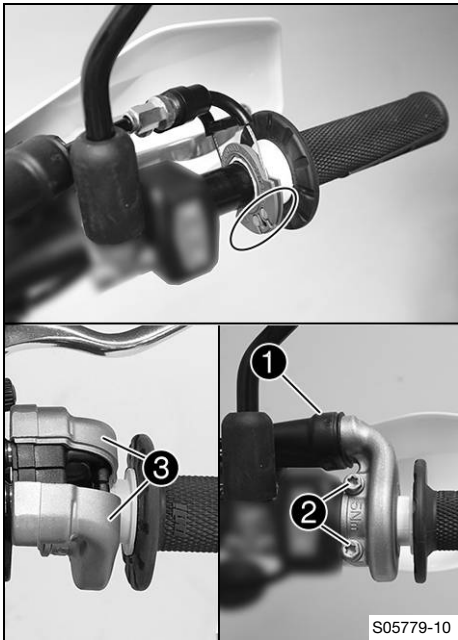

- Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
- Attach the throttle cables to the guide plate and route correctly.
- Position half-shells ③, mount and tighten screws ②.

Screw, throttle twist grip	
M6	5 Nm (3.7 ft·lb _f)

- Slide on sleeve ① and check the throttle grip for ease of movement.

Reworking

- Check the play in the throttle cable. (p. 142)

17.4 Adjusting the idle speed



WARNING

Danger of accidents The engine may suddenly come to a halt if the idle speed is set too low.

- Set the idle speed to the specified value.



- Run the engine until warm.
- Check whether the cold start button has returned to its basic position.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Adjust the idle speed by turning idle speed adjusting screw **1**.

Make the adjustment in small steps.

Idle speed	1,400 rpm ...
	1,500 rpm
	(23.33 Hz ...
	25.00 Hz)

Service hour counter with revolution counter
(A54012920100)



Note

Turning clockwise increases the idle speed.
Turning counterclockwise lowers the idle speed.
An incorrect idle speed can have a negative impact on overall engine running.



17.5 Programming ambient air pressure



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.


- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



Note

If the vehicle is ridden with the engine running at various heights above sea level, the ambient pressure is programmed on an ongoing basis.

If the vehicle is transported over great height differences, the ambient pressure must be reprogrammed.

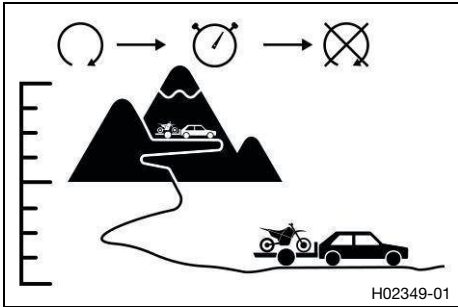


- Start the vehicle at the new height above sea level and switch off the engine again.

Wait for at least five seconds.
- Start the vehicle again and check the response of the vehicle.
 - » If the response has not improved:
 - Repeat the procedure.

17.6 Checking the basic position of the gear shift lever


Note
When driving, the gear shift lever must not touch the rider's boot when in the basic position.
When the gear shift lever keeps touching the boot, the transmission will be subject to an excessive load.

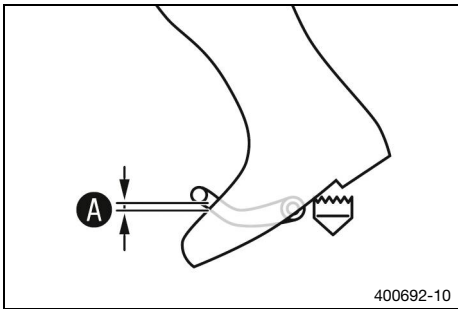


- Sit on the vehicle in the riding position and measure the distance **A** between the upper edge of your boot and the shift lever.

Distance between the gear shift lever and upper edge of boot	10 mm ... 20 mm (0.39 in ... 0.79 in)
--	--
- » If the distance does not meet the specifications:
 - Adjust the basic position of the gear shift lever. 

17.7 Adjusting the basic position of the gear shift lever

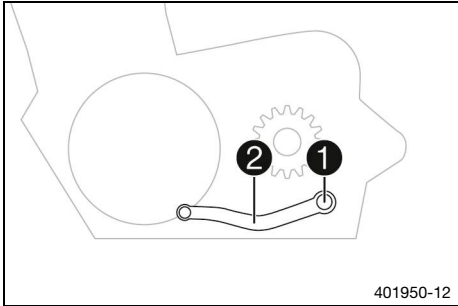

- Remove screw **1** with the washers and take off shift lever **2**.

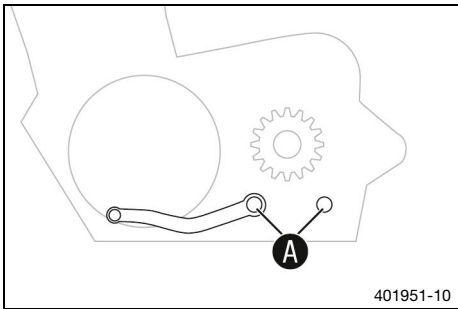

- Clean gear teeth **A** of the shift lever and shift shaft.
- Mount the gear shift lever on the shift shaft in the desired position and engage the tothing.

The gear shift lever must not come into contact with any other vehicle components during the shift procedure.

Note
The range of adjustment is limited.

- Mount and tighten screw ❶ with washers.

Screw, shift lever	
M6	14 Nm (10.3 ft·lb) Loctite® 243



18.1 Programming the end positions of the exhaust control

Note

If work has been carried out on the exhaust control, the end positions must be reprogrammed.


Condition: Engine is off

Preparatory work


- Remove the seat.  (p. 83)

Main work

- Pull diagnostics connector **1** off the holder.

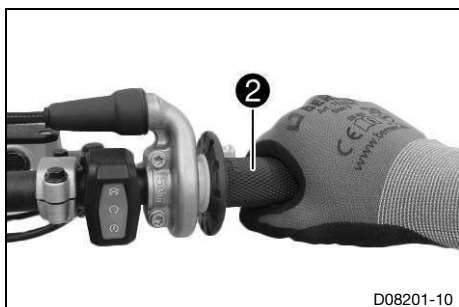

 - Move throttle twist grip **2** to where it is half open and hold in position.




- Plug wake-up connector **A** into diagnostics connector **1**.

Note

Wake-up connector **A** is in the motorcycle's accessory pack.

- Wait for at least five seconds.
 - ✓ The end positions of the exhaust control are read. The procedure is clearly audible.
 - ✓ The dashboard illumination is activated, the combination switch lights up green.
- Release the fixing from the throttle grip.
 - ✓ The end positions of the exhaust control are programmed.
- Wait until you can no longer hear the exhaust control engine operating.
- Disconnect wake-up connector **A** from diagnostic connector **1**.

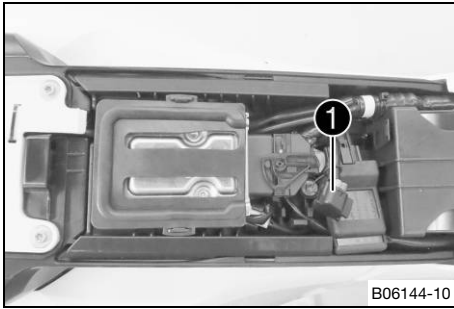

- Mount diagnostics connector ❶ on the holder.

Reworking

- Mount the seat.  (p. 83)



19.1 Changing the fuel screen



DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



WARNING

Danger of poisoning Fuel is harmful to health.

 
- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.




NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Remove protection cap **1** of the fuel line.

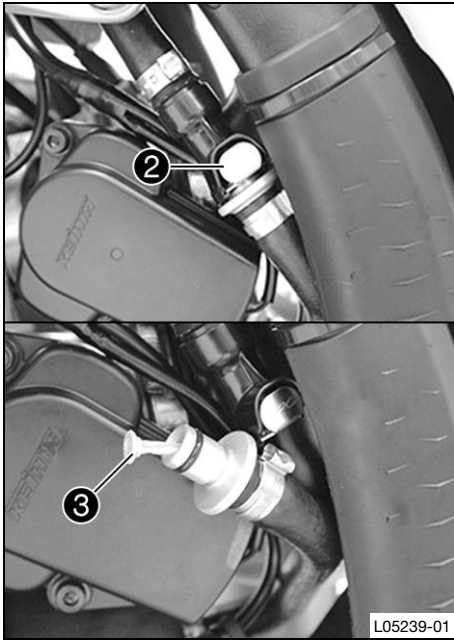

- Clean quick-lock coupling **2** thoroughly with compressed air.

Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Disconnect the quick-lock coupling.




Note

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen **3** out of the connecting piece.
- Slide the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 190)

- Join quick-lock couplings.

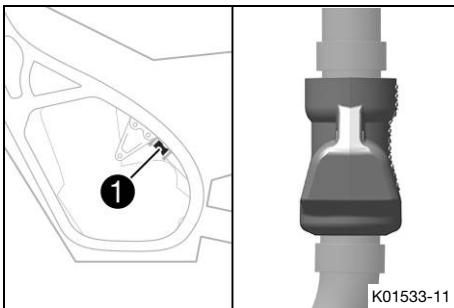

- Mount protection cap **1** of the fuel line.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check the response.



19.2 Checking 2-stroke oil level



WARNING

Engine failure The engine will not be lubricated unless there is 2-stroke oil in the oil tank.

If the oil level warning light lights up, the 2-stroke oil is sufficient for the remaining tank of fuel.

- As soon as the oil level warning light lights up, ride for no longer than until the remaining fuel in the tank is depleted.
- At the next opportunity add 2-stroke oil before you refuel.
- Time the oil pump if the 2-stroke oil hose has been removed or the 2-stroke oil tank has been fully depleted in error.

Preparatory work

- Stand the motorcycle upright on a level surface.



Main work

- Check the 2-stroke oil level in the oil tank.

For a full tank of fuel, the 2-stroke oil tank must be filled up to at least the upper abutting edge **A**.

- ✓ The 2-stroke oil tank must be completely filled if possible.
- » If the 2-stroke oil level is too low:
 - Add 2-stroke oil. (p. 53)

19.3 Priming oil pump



WARNING

Engine failure The engine will not be lubricated unless there is 2-stroke oil in the oil tank.

If the oil level warning light lights up, the 2-stroke oil is sufficient for the remaining tank of fuel.

- As soon as the oil level warning light lights up, ride for no longer than until the remaining fuel in the tank is depleted.
- At the next opportunity add 2-stroke oil before you refuel.
- Time the oil pump if the 2-stroke oil hose has been removed or the 2-stroke oil tank has been fully depleted in error.


Condition: Engine is off


Preparatory work

- Remove the seat. (p. 83)
- Stand the motorcycle upright on a level surface.
- Check 2-stroke oil level. (p. 151)


Main work

- Pull engine control unit **1** upward and off rubber lugs **2** and hang to the side.
- Remove protection cap **3** of the diagnostics connector.

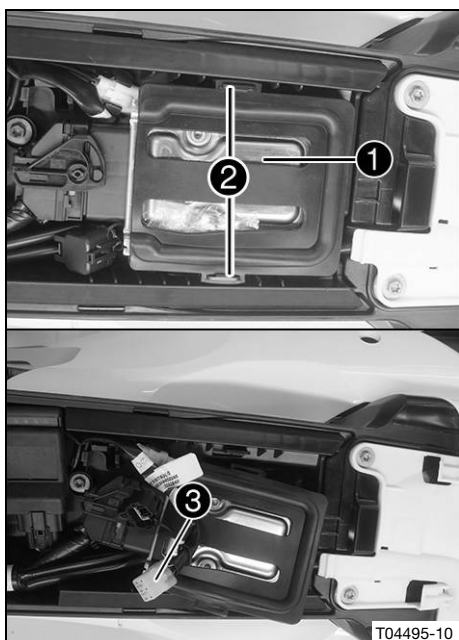

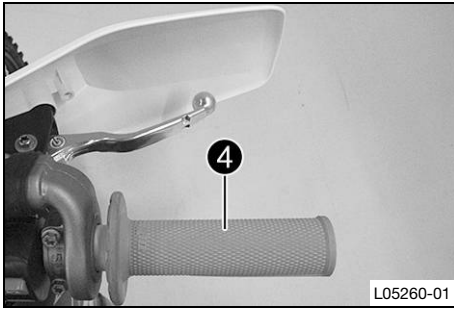

- Put throttle grip ④ into full throttle position and secure.

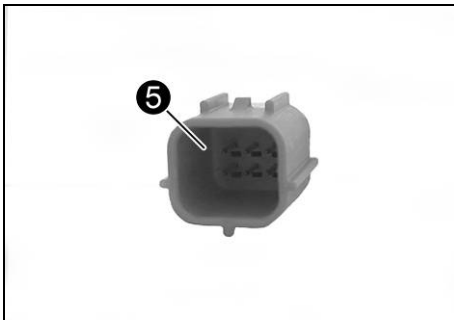

- Plug in wake-up connector ⑤ for priming the oil pump to the diagnostics connector ⑥.

✓ The combination instrument lighting is activated.

i Note

The connector is included as part of the motorcycle's separate enclosure.



- Wait for at least five seconds.
- Release the fixing from the throttle grip.

✓ The oil pump is timed.

i Note

The oil pump is actuated at various speeds.
The procedure is clearly audible.

- Wait until you can no longer hear the oil pump operating.
- Disconnect the wake-up connector from the diagnostics connector.

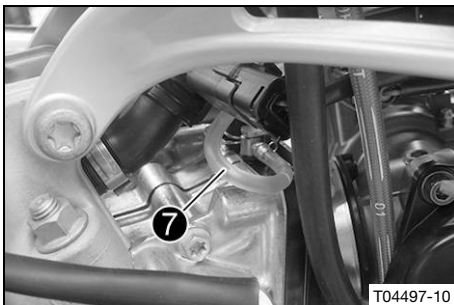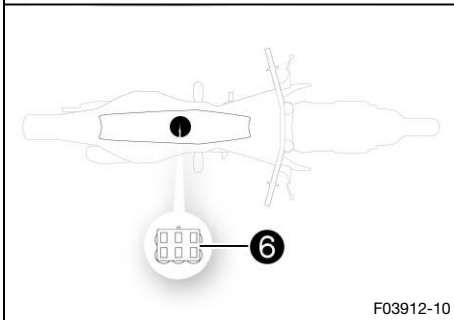

- Check whether air bubbles are visible in the hose ⑦.
 - » If air bubbles are visible:
 - Repeat the entire procedure until air bubbles are no longer visible.
- Mount protection cap on the diagnostics connector.
- Mount the engine control unit on the rubber lugs.

Reworking

- Mount the seat. (p. 83)

19.4 Cleaning the oil screen in the oil tank



NOTE

Environmental hazard Hazardous substances cause environmental damage.

 
- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Preparatory work


- Raise the motorcycle with a lift stand.  (p. 69)
- Remove the muffler.  (p. 89)
- Remove the seat.  (p. 83)
- Remove the fuel tank.   (p. 91)
- Remove air filter box cover.  (p. 85)

Main work


- Remove screws **1**.
- Loosen screws **2**.



- Remove fuel vapor valve **3** from the bracket and hang it to the side.

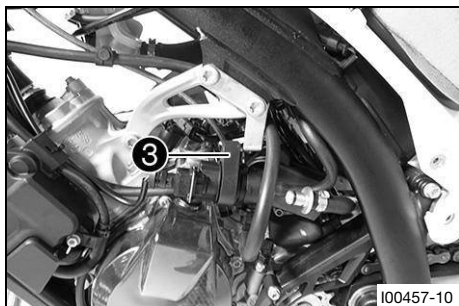


- Loosen clamps **4** of the throttle valve body.

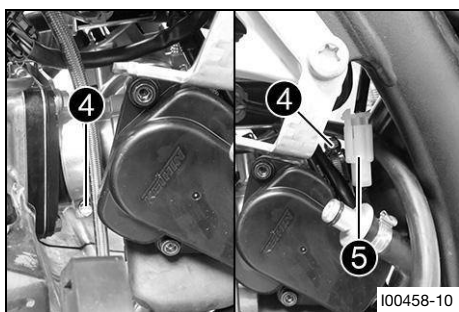

(All EU and AR models)


- Disconnect plug-in connector **5** of the rear brake light switch.

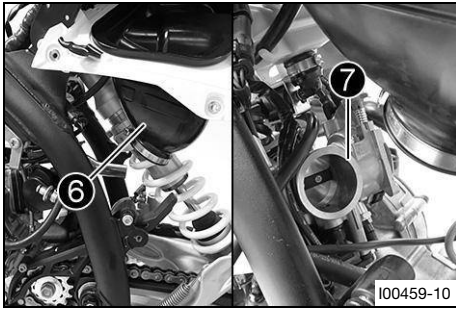


- Lift the subframe slightly and secure it.

Pay attention to intake flange ⑥.

- Pull throttle valve body ⑦ towards the rear, out of the intake flange, and hang it to the side.

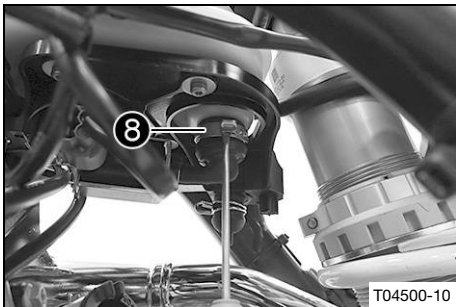

- Open hose clamp ⑧ using a screwdriver.
- Pull off the angle piece and collect the 2-stroke oil in a suitable container.

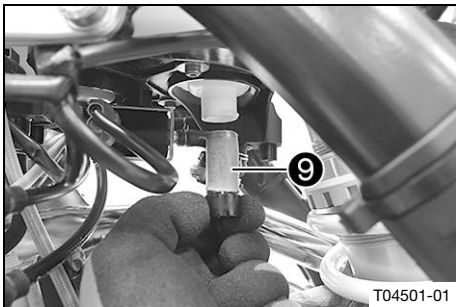


- Remove oil screen ⑨ and clean it.
- Check the oil screen for damage.
 - » If the oil screen is damaged:
 - Change the oil screen.




- Insert the oil screen and mount the angle piece with a new hose clamp.

Hose clamp pliers (60029057000)

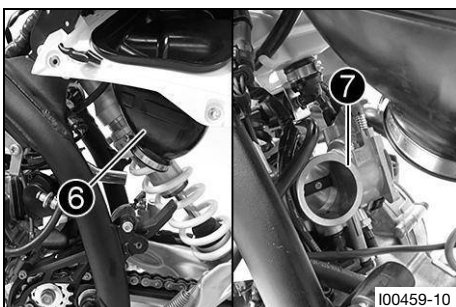

- Mount throttle valve body ⑦.
- Remove the locking piece and position the subframe.


Pay attention to intake flange ⑥.

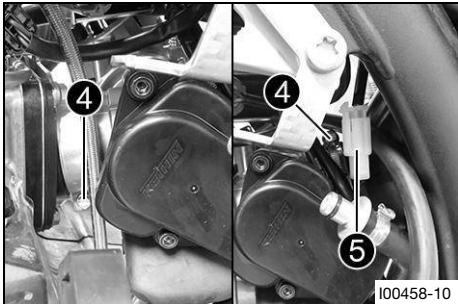


(All EU and AR models)

- Join plug-in connector 5 of the rear brake light switch.
- Position and tighten clamps 4 of the throttle valve body.

Screw, intake manifold / diaphragm housing	
M6	6 Nm (4.4 ft·lb _f)

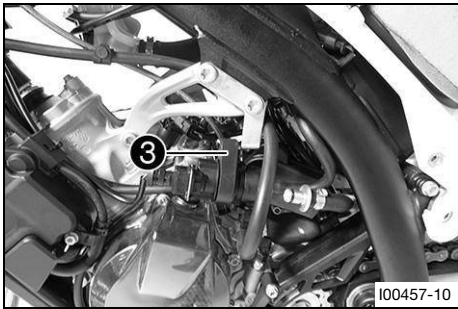

- Mount fuel vapor valve 3.

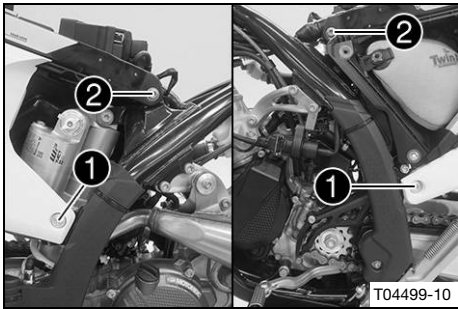

- Mount and tighten screws 1.

Screw, subframe, bottom	
M8	30 Nm (22.1 ft·lb _f) Loctite® 2701

- Remove screws 2.
- Mount and tighten screws 2.

Screw, subframe, top	
M8	35 Nm (25.8 ft·lb _f) Loctite® 243

Reworking

- Install the air filter box cover. (p. 85)
- Install the fuel tank. (p. 93)
- Add 2-stroke oil. (p. 53)
- Pre-fill the oil pump.
- Mount the seat. (p. 83)
- Install the muffler. (p. 90)
- Remove the motorcycle from the lift stand. (p. 69)

19.5 Checking the gear oil level

Condition: The engine is cold

Preparatory work

- Stand the motorcycle upright on a level surface.

Main work

- Remove gear oil level monitoring screw ❶.
- Check the gear oil level.

A small amount of gear oil should run out of the bore.


» If no gear oil runs out:

- Add gear oil. 🛠️ 📖 (p. 158)

- Mount and tighten the gear oil level check screw.

Screw, gear oil level check

M6	8 Nm (5.9 ft·lb _f)
----	-----------------------------------

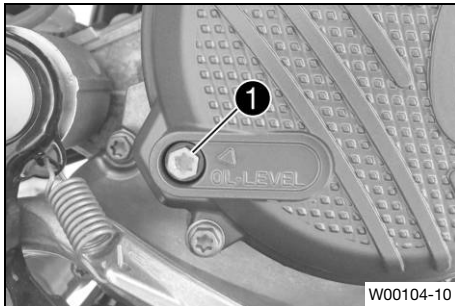

W00104-10

19.6 Changing the gear oil 🛠️



WARNING

Danger of scalding Engine and gear oil heat up when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



NOTE

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Condition: Engine is at operating temperature

Preparatory work


- Remove the skid plate. 📖 (p. 105)
- Park the motorcycle on a level surface.

Main work

- Position an appropriate container under the engine.
- Remove gear oil drain plug ❶ with magnet.
- Let the gear oil drain fully.
- Thoroughly clean the gear oil drain plug with a magnet.
- Clean the sealing area on the engine.
- Mount and tighten gear oil drain plug ❶ with the magnet and a new seal ring.


Transmission drain plug with magnet

M12×1.5	20 Nm (14.8 ft·lb _f)
---------	-------------------------------------

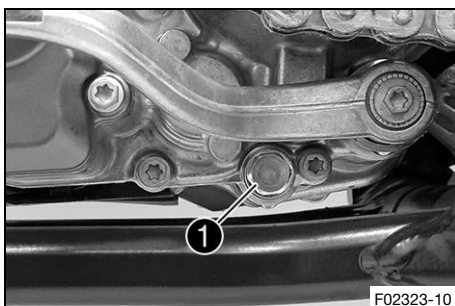

F02323-10

19 Service work on the engine

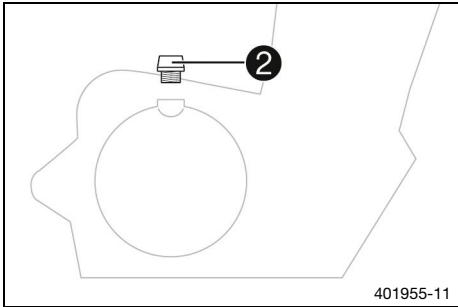

- Remove filler plug 2 with the O-ring, and fill up with gear oil.
- | | |
|--|---|
| gear oil | |
| Engine oil (15W/50)
📖 (p. 189)
Partially synthetic | 0.80 l
(0.211 liq. gal _{US}) |
- Mount and tighten the oil plug together with the O-ring.



DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

- Check the gear oil level. 📖 (p. 157)
- Install the skid plate. 📖 (p. 105)

19.7 Adding gear oil 🛠️

i Note
Too little gear oil or poor-quality oil results in premature wear to the transmission.


Condition: The engine is cold


Preparatory work

- Park the motorcycle on a level surface.

Main work

- Detach the brake pedal spring.
- Remove gear oil level monitoring screw 1.

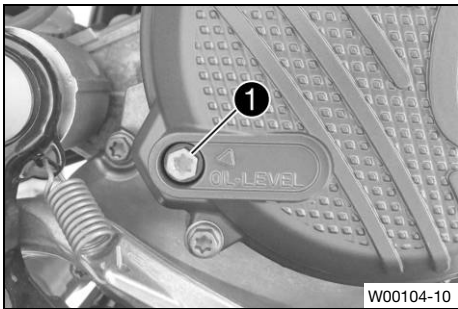

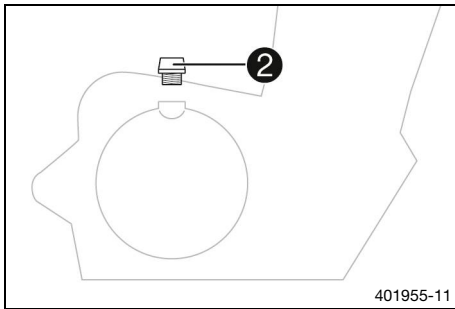

- Remove filler plug ② with the O-ring.
- Add gear oil until it emerges from the bore of the gear oil level check screw.

Engine oil (15W/50) (p. 189)
Partially synthetic

- Mount and tighten the gear oil level check screw.

Screw, gear oil level check	
M6	8 Nm (5.9 ft-lb _f)

- Mount and tighten filler plug ② with the O-ring.
- Attach the brake pedal spring.



DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.

- Start the engine and check it for leaks.

Reworking

- Check the gear oil level. (p. 157)



20.1 Cleaning the motorcycle



NOTE

Material damage Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc.

Too high a pressure can cause malfunctions and destroy components.

- Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
- Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm (23.6 in)
------------------	--------------------



NOTE

Environmental hazard Hazardous substances cause environmental damage.


- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



Note

Clean the motorcycle regularly to maintain its value and appearance over a long period.

Avoid direct sunshine when cleaning the motorcycle.

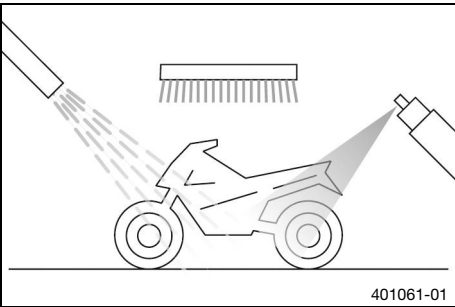

- Seal the exhaust system to prevent water from entering into it.
- Remove the coarse dirt particles with a gentle water jet.
- Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

Environmentally neutral universal cleaning agent
 (p. 194)



Note

Use warm water containing standard motorcycle cleaner and a soft sponge.

- Clean the motorcycle thoroughly with a soft water jet, then allow to dry.
- Remove the cover from the exhaust system.



WARNING

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

- After cleaning, ride the vehicle a short distance until the engine warms up.



Note

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

- After the motorcycle has cooled off, lubricate all moving parts and pivot points.
- Clean the chain. (p. 95)



WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

- Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials (p. 194)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors (p. 194)

(All 300 EU models and AR)

- Oil the steering lock.

Universal oil spray (p. 189)



20.2 Checks and maintenance steps for winter operation



WARNING

Danger of accidents Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



WARNING


Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



Note

If you use the motorcycle in winter, salt can be expected on the roads. You should therefore take precautions against aggressive road salt.

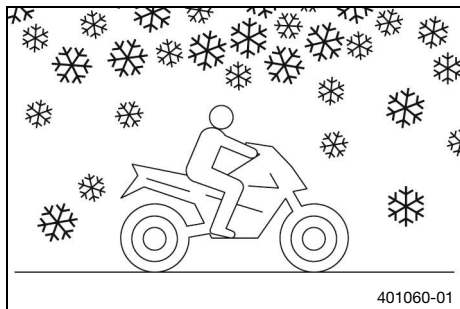

- Clean the motorcycle. 📖 (p. 160)
- Clean brake system.

After every trip on salted roads, thoroughly wash the brake calipers and brake pads with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.

After riding on salted roads, thoroughly clean the vehicle with cold water and dry it well.



Note

Warm water enhances the corrosive effects of salt.

- Treat the engine, swingarm, and all other bare or zinc-plated parts (except the brake discs) with a wax-based anticorrosive.

Corrosion inhibitor must not come into contact with the brake discs. This would severely lower the braking effect.

- Clean the chain. 📖 (p. 95)

21.1 Storage


**WARNING****Danger of poisoning** Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

**Note**

 If the vehicle will not be ridden for an extended period, additional steps are recommended.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less overload of the authorized partner). This allows you to avoid long waiting periods when the next season starts.



401058-01

- Clean the motorcycle. (p. 160)
- Change the gear oil. (p. 157)
- Check the frost protection and coolant level. (p. 136)
- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (p. 188)

- Refuel. (p. 52)

**Tip**

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Add 2-stroke oil. (p. 53)
- Check the tire pressure. (p. 122)
- Remove the 12 V battery. (p. 124)
- Charge the 12 V battery. (p. 126)

Ideal charging and storage temperature of the lithium-ion battery	10 °C ... 20 °C (50.0 °F ... 68.0 °F)
---	--

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

**Note**

Husqvarna Mobility recommends picking up the motorcycle.

- Raise the motorcycle with a lift stand. (p. 69)

Cover the vehicle with a tarpaulin or similar cover that is permeable to air.


Do not use non-porous materials because they prevent humidity from escaping and thus cause corrosion.



Note

Avoid running the engine of a motorcycle in storage for a short time only. Because the engine will not warm up sufficiently, the water vapor produced during combustion will condense, causing engine parts and the exhaust system to rust.

21.2 Preparing for use after storage

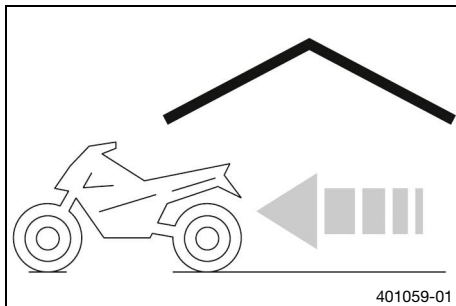

- Remove the motorcycle from the lift stand. (p. 69)
- Install the 12 V battery. (p. 125)
- Perform checks and maintenance measures when preparing for use. (p. 48)
- Take a test ride.

22.1 troubleshooting

Cause	Finding	Remedy		
The engine does not turn over (starter motor)	Operating error 12 V battery discharged Main fuse blown Starter relay defective Starter motor defective	– Carry out the starting procedure.  (p. 48) – Charge the 12 V battery.  –  (p. 126) – Check the charging voltage.  – Check the open-circuit current.  – Check the stator winding of the alternator.  – Change the main fuse.  (p. 129) – Check the starter relay.  – Check the starter motor. 		
The engine turns but does not start	Operating error Quick-lock coupling not joined Idle speed is not set correctly Fuel supply interrupted Spark plug sooty or wet Plug gap of spark plug too wide Faulty ignition Short-circuit cable in wiring harness frayed, stop button or emergency OFF switch faulty Connector or ignition coil loose or oxidized Malfunction in the electronic fuel injection	– Carry out the starting procedure.  (p. 48) – Join quick-lock couplings. – Adjust the idle speed.   (p. 145) – Check the fuel tank vent. – Clean and dry the spark plug and spark plug connector, or change if necessary. – Adjust plug gap.<table border="1" data-bbox="903 990 1313 1061"><tr><td>Plug gap of spark plug</td><td>0.6 mm (0.024 in)</td></tr></table> – Ignition coil - check the primary winding.  – Check the spark plug connector.  – Check the stator winding of the alternator.  – Check wiring harness (visual check). – Check the electrical system. – Clean the connector and treat with contact spray. – Check wiring for damage and electrical plug-in connectors for corrosion and damage. – Read out the fault memory using the diagnostics tool. 	Plug gap of spark plug	0.6 mm (0.024 in)
Plug gap of spark plug	0.6 mm (0.024 in)			
The engine has no idle speed	Faulty spark plug Faulty ignition Idle speed is not set correctly	– Change the spark plug. – Ignition coil - check the primary winding.  – Check the spark plug connector.  – Check the stator winding of the alternator.  – Adjust the idle speed.   (p. 145)		
Engine does not speed up	Malfunction in the electronic fuel injection Faulty ignition	– Check wiring for damage and electrical plug-in connectors for corrosion and damage.		

Cause	Finding	Remedy
	Ambient pressure is incorrectly stored	– Read out the fault memory using the diagnostics tool.  – Ignition coil - check the primary winding.  – Check the spark plug connector.  – Check the stator winding of the alternator.  – Program ambient air pressure.  (p. 145)
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Fuel screen is very dirty Malfunction in the electronic fuel injection Fuel supply interrupted Exhaust system leaks, deformed or too little damping material in the silencer Faulty ignition Damaged membrane or reed valve housing Ambient pressure is incorrectly stored	– Clean the air filter and air filter box.   (p. 87) – Change the fuel filter.  – Change the fuel screen.   (p. 150) – Check wiring for damage and electrical plug-in connectors for corrosion and damage. – Read out the fault memory using the diagnostics tool.  – Check the fuel tank vent. – Check exhaust system for damage. – Change the damping material on the main silencer.   (p. 90) – Ignition coil - check the primary winding.  – Check the spark plug connector.  – Check the stator winding of the alternator.  – Check the membrane and reed valve housing. – Program ambient air pressure.  (p. 145)
The engine dies during the trip	Lack of fuel The engine takes in false air Connector or ignition coil loose or oxidized Ambient pressure is incorrectly stored	– Refuel.  (p. 52) – Check that the intake manifold is firmly seated. – Clean the connector and treat with contact spray. – Program ambient air pressure.  (p. 145)
Engine overheats	Too little coolant in cooling system Too little air stream Radiator fins very dirty Foam formation in the cooling system Damaged cylinder head or cylinder head gasket Bent radiator hose Thermostat defective	– Check the transmission and cooling system for leaks. – Check the coolant level.  (p. 137) – Switch off the engine when standing. – Clean the radiator fins. – Drain the coolant.   (p. 138) – Refill the coolant.   (p. 138) – Check the cylinder head and cylinder head gasket. – Change the radiator hose. 

Cause	Finding	Remedy
		– Check the thermostat.  Opening tempera- ture 70 °C (158.0 °F)
White smoke development (steam in the exhaust gas)	Damaged cylinder head or cylinder head gasket	– Check the cylinder head and cylinder head gasket.
Gear oil emerges from the vent hose	Too much gear oil added	– Check the gear oil level.  (p. 157)
Water in the gear oil	Damaged radial shaft seal ring or water pump	– Check the radial shaft seal ring and the water pump.
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	– Check wiring for damage and electrical plug-in connectors for corrosion and damage. – Read out the fault memory using the diagnostics tool. 
12 V battery discharged	The 12-V battery is not being charged by the alternator unwanted electrical load	– Check the charging voltage.  – Check the stator winding of the alternator.  – Check the open-circuit current. 
Values in combination instrument deleted (time, stop watch, lap times)	The combination instrument battery is empty	– Change combination instrument battery.  (p. 133)

23.1 Engine control trouble code

Blink code for malfunction indicator light	 02: Malfunction indicator light flashes 2x short
Error level condition	Crankshaft position sensor - synchronization faulty Time: ≥ 1 s Crankshaft position sensor - too many impulses Time: ≥ 0.1 s Crankshaft speed sensor – signal implausible
Blink code for malfunction indicator light	 06: Malfunction indicator light flashes 6x short
Error level condition	Throttle valve position sensor circuit A – input signal too low Voltage: ≤ 0.2 V Time: ≥ 0.08 s Throttle valve position sensor circuit A – input signal too high Voltage: ≥ 4.7 V Time: ≥ 0.08 s
Blink code for malfunction indicator light	 09: Malfunction indicator light flashes 9x short
Error level condition	Crankcase pressure sensor - short circuit to ground Voltage: ≤ 0.4 V Time: ≥ 0.1 s Crankcase pressure sensor - open/short circuit to plus Voltage: ≥ 4.6 V Time: ≥ 0.1 s Ambient air pressure sensor - short circuit to ground Ambient air pressure sensor voltage: ≤ 0.4 V Time: ≥ 1 s Ambient air pressure sensor – open/short circuit to plus Ambient air pressure sensor voltage: ≥ 4.6 V Time: ≥ 0.1 s
Blink code for malfunction indicator light	 12: Malfunction indicator light flashes 1x long, 2x short
Error level condition	Coolant temperature sensor – input signal too low Voltage: ≤ 0.1 V Time: ≥ 3 s Coolant temperature sensor – input signal too high Voltage: ≥ 4.8 V Time: ≥ 3 s

Blink code for malfunction indicator light	 13: Malfunction indicator light flashes 1x long, 3x short
Error level condition	Intake air temperature sensor – input signal too low Voltage: ≤ 0.2 V Time: ≥ 3 s Intake air temperature sensor – input signal too high Voltage: ≥ 4.8 V Time: ≥ 3 s
Blink code for malfunction indicator light	 14: Malfunction indicator light flashes 1x long, 4x short
Error level condition	Crankcase pressure sensor – difference too high between sensor and engine control unit
Blink code for malfunction indicator light	 15: Failure indicator light flashes 1x long, 5x short
Error level condition	Tilt sensor – input signal too low Signal voltage: ≤ 0.2 V Signal voltage: 3.7 V ... 4.6 V Tilt sensor – input signal too high Voltage: ≥ 4.8 V
Blink code for malfunction indicator light	 17: Malfunction indicator light flashes 1x long, 7x short
Error level condition	Lambda sensor - input signal too low Time: ≥ 0.1 s Voltage: ≤ 0.05 V Lambda sensor – input signal too high Time: ≥ 0.1 s Voltage: ≥ 4 V
Blink code for malfunction indicator light	 21: Malfunction indicator light flashes 2x long, 1x short
Error level condition	Battery voltage - input voltage too low Engine control unit power supply: ≤ 9.9 V Time: ≥ 1 s Battery voltage – input voltage too high Engine control unit power supply: ≥ 16.10 V Time: ≥ 1 s

23 Flash codes

Blink code for malfunction indicator light	 33: Malfunction indicator lamp flashes 3x long, 3x short
Error level condition	Injector 1, cylinder 1 - input signal too low Time: ≥ 1 s Injector 1, cylinder 1 - input signal too high Time: ≥ 1 s
Blink code for malfunction indicator light	 34: Malfunction indicator lamp flashes 3x long, 4x short
Error level condition	Injector 2, cylinder 1 - input signal too low Time: ≥ 1 s Injector 2, cylinder 1 - input signal too high Time: ≥ 1 s
Blink code for malfunction indicator light	 37: Malfunction indicator light flashes 3x long, 7x short
Error level condition	Ignition coil - failure in circuit Time: ≥ 2.0 s
Blink code for malfunction indicator light	 41: Malfunction indicator light flashes 4x long, 1x short
Error level condition	Fuel pump - interruption/short circuit to ground The engine is switched off: ≥ 0.4 s Fuel pump - short circuit to plus The engine is switched off: ≥ 0.4 s
Blink code for malfunction indicator light	 42: Malfunction indicator light flashes 4x long, 2x short
Error level condition	Oil pump - input signal too low Time: ≥ 1 s Oil pump - input signal too high Oil level sensor – short circuit to ground Oil level sensor – short circuit to plus Oil lamp – malfunction in the circuit Oil lamp – short circuit to ground Oil lamp – short circuit to plus
Blink code for malfunction indicator light	 45: Malfunction indicator light flashes 4x long, 5x short
Error level condition	Oxygen sensor heater - short circuit to ground Time: ≥ 1 s Oxygen sensor heater - short circuit to plus Time: ≥ 1 s

Blink code for malfunction indicator light	 50: Malfunction indicator light flashes 5x long
Error level condition	Exhaust control actuator – no signal Exhaust control actuator – temperature too high Exhaust control actuator – incorrect setting Exhaust control actuator – setpoint value signal faulty Exhaust control actuator – input signal too low Exhaust control actuator – input signal too high Exhaust control actuator – mechanical error in the lower position Exhaust control actuator – mechanical error in the upper position Exhaust control actuator – mechanical error
Blink code for malfunction indicator light	 52: Malfunction indicator light flashes 5x long, 2x short
Error level condition	Fuel vapor valve – circuit fault Fuel vapor valve – voltage too low Fuel vapor valve – voltage too high
Blink code for malfunction indicator light	 53: Malfunction indicator light flashes 5x long, 3x short
Error level condition	Sensor voltage 1 – open circuit/short circuit to ground Sensor voltage 1 – short circuit to plus
Blink code for malfunction indicator light	 54: Malfunction indicator light flashes 5x long, 4x short
Error level condition	Sensor voltage 2 – open circuit/short circuit to ground Sensor voltage 2 – short circuit to plus

24.1 Engine

24.1.1 Technical data - engine

Design	Single-cylinder 2-stroke engine, liquid-cooled, with diaphragm intake and exhaust control
Displacement	
(TE 250)	249 cm ³ (15.19 in ³)
(All 300 models)	293.15 cm ³ (17.8891 in ³)
Stroke	72 mm (2.83 in)
Bore	
(TE 250)	66.4 mm (2.614 in)
(All 300 models)	72 mm (2.83 in)
idle speed	1,500 rpm ... 1,700 rpm (25.00 Hz ... 28.33 Hz)
Crankshaft bearing	1 grooved ball bearing, 1 roller bearing
Big (bottom) end bearing	Needle bearing
Wrist pin bearing	Needle bearing
Piston	Cast aluminum
Piston rings	
(TE 250)	2 half keystone rings
(All 300 models)	2 rectangular rings
X-dimension (upper edge of piston to upper edge of cylinder)	0 mm ... 0.10 mm (0 in ... 0.0039 in)
Z-dimension (height of control flap)	
(TE 250)	49.7 mm ... 50.0 mm (1.957 in ... 1.969 in)
(All 300 models)	50.2 mm ... 50.5 mm (1.976 in ... 1.988 in)
Primary transmission	26:72
Clutch	Multi-disc wet clutch / hydraulically activated
Transmission	6 speed transmission, claw shift
Gear ratios	
1st gear	13:33
2nd Gear	16:30
3rd Gear	18:26
4th Gear	22:26
5th Gear	23:23
6th Gear	26:22
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment

Spark plug	NGK BR 7 ES
Plug gap of spark plug	0.6 mm (0.024 in)
Starting aid	Electric starter

24.1.2 Capacities - engine

gear oil	
Engine oil (15W/50)  (p. 189) Partially synthetic	0.80 l (0.211 liq. gal _{US})
coolant	
Coolant  (p. 190) Antifreeze protection to at least: -25 °C (-13.0 °F)	1.2 l (0.32 liq. gal _{US})

24.2 Chassis

24.2.1 Technical data - chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Suspension travel:	
front	300 mm (11.81 in)
rear	300 mm (11.81 in)
Triple clamp offset	22 mm (0.87 in)
Brake system	Disc brakes, floating brake calipers
Brake discs diameter	
front	260 mm (10.24 in)
rear	220 mm (8.66 in)
Brake disc wear limit (All standard models)	
front	3 mm (0.12 in)
rear	4 mm (0.16 in)
Brake disc wear limit (All special models)	
front	3 mm (0.12 in)
rear	4.3 mm (0.169 in)
Final drive (TE 250 EU)	13:50
Final drive (TE 250 US)	13:45
Final drive (TE 300 EU)	14:42 (14:50)
Final drive (TE 300 PRO EU)	14:42 (14:49)

Final drive (TE 300 PRO BR)	14:48
Final drive (All 300 US and AR models)	14:45
Chain	520
Rear sprockets available	• 42 teeth • 49 teeth • 50 teeth
Steering head angle	63.9° (1.115 rad)
Wheelbase	1,489 ±10 mm (58.62 ±0.39 in)
Seat Height unloaded	952 mm (37.48 in)
Ground clearance unloaded	354 mm (13.94 in)
Weight without fuel approx. (All EU models)	108.4 kg (238.98 lb)
Weight without fuel approx. (All AR and US models except TE PRO 300)	106.8 kg (235.45 lb)
Weight without fuel approx. (TE 300 PRO BR)	109.9 kg (242.29 lb)
Weight without fuel approx. (TE 300 PRO US)	108.3 kg (238.76 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)
Maximum permissible total weight	335 kg (738.5 lb)

24.2.2 Technical data - tires

Street tire pressure (All 300 EU models and AR)	
front	2.0 bar (29.0 psi)
rear	2.0 bar (29.0 psi)
Off-road tire pressure	
front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

Validity	Tire front	Rear tire
(All EU and AR models)	90/90 - 21 M/C 54R M+S TT Michelin Enduro Medium	140/80 - 18 M/C 70R M+S TT Michelin Enduro Medium
(TE 300 PRO BR)	90/90 - 21 M/C 54M M+S TT Metzeler MCE 6 DAYS EX- TREME	140/80 - 18 M/C 70M M+S TT Metzeler MCE 6 DAYS EXTREME

Validity	Tire front	Rear tire
(All US models)	80/100 - 21 M/C 51M M+S TT Dunlop GEOMAX AT82F	110/100 - 18 M/C 64M M+S TT Dunlop GEOMAX AT82
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized manufacturer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.		

24.2.3 Capacities - vehicle

Total fuel tank capacity, approx.	
(All except BR models) Super unleaded (ROZ 95)  (p. 188)	8.5 l (2.25 liq. gal _{US})
(TE 300 PRO BR) Super unleaded, type C (ROZ 95/RON 95/PON 91)  (p. 188)	
gear oil	
Engine oil (15W/50)  (p. 189) Partially synthetic	0.80 l (0.211 liq. gal _{US})

24.3 Electrics

24.3.1 Battery

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free
Button cell	CR 2430	Battery voltage: 3 V

24.3.2 Fuses

Fuse	58011109120	20 A
------	-------------	------

24.3.3 Lamps

Low beam/high beam	LED	
Parking light	LED	
Indicator lamps	W2,3W / Socket W2x4,6d	12 V 2.3 W (0.0031 hp)
(All 300 EU models and AR) Turn signal	R10W / Socket BA15s	12 V 10 W (0.013 hp)
Brake/tail light	LED	

24.4 Fork

24.4.1 Technical data - fork (All standard models except 250 US)

Fork part number	A390C163Z402000
Fork	WP XACT CC
Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks
Rebound damping	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks
Spring length with preload spacer(s)	457 mm (17.99 in)
Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	4.4 N/mm (25.12 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	4.6 N/mm (26.27 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	4.8 N/mm (27.41 lb _f /in)
Fork length	940 mm (37.01 in)

24.4.2 Capacities - fork (All standard models except 250 US)

Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 189)	175 ml (5.92 fl. oz _{US})
Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 189)	350 ml (11.83 fl. oz _{US})

24.4.3 Technical data - fork (TE 250 US)

Fork part number	A390C167Z402000
Fork	WP XPLOR CC
Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks
Rebound damping	
Comfort	19 clicks
Standard	17 clicks

Sport	9 clicks
Spring length with preload spacer(s)	457 mm (17.99 in)
Spring rate	
Rider's weight: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	4.6 N/mm (26.27 lb _f /in)
Rider's weight: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	4.8 N/mm (27.41 lb _f /in)
Rider's weight: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	5.0 N/mm (28.55 lb _f /in)
Fork length	940 mm (37.01 in)

24.4.4 Capacities - fork (TE 250 US)

Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 189)	175 ml (5.92 fl. oz _{US})
Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 189)	350 ml (11.83 fl. oz _{US})

24.4.5 Technical data - fork (All special models)

Fork part number	A390C183Z402000
Fork	WP XPLOR CC
Compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	7 clicks
Rebound damping	
Comfort	19 clicks
Standard	17 clicks
Sport	9 clicks
Spring preload – preload adjuster	0 turns (0°)
Spring length with preload spacer(s)	457 mm (17.99 in)
Spring rate	
Rider's weight: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	4.4 N/mm (25.12 lb _f /in)
Rider's weight: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	4.6 N/mm (26.27 lb _f /in)
Rider's weight: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	4.8 N/mm (27.41 lb _f /in)
Fork length	940 mm (37.01 in)

24.4.6 Capacities - fork (All special models)

Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4)  (p. 189)	175 ml (5.92 fl. oz _{US})
Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4)  (p. 189)	350 ml (11.83 fl. oz _{US})

24.5 Shock absorber

24.5.1 Technical data - shock absorber

Shock absorber part number	A390C463Z408000
Low-speed compression damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
High-speed compression damping	
Comfort	2.5 turns (900°)
Standard	2 turns (720°)
Sport	1.5 turns (540°)
Rebound damping	
Comfort	18 clicks
Standard	15 clicks
Sport	12 clicks
Preload	7 mm (0.28 in)
Spring rate	
Weight of rider: 65 kg ... 75 kg (143.3 lb ... 165.3 lb)	42 N/mm (239.8 lb _f /in)
Weight of rider: 75 kg ... 85 kg (165.3 lb ... 187.4 lb)	45 N/mm (257.0 lb _f /in)
Weight of rider: 85 kg ... 95 kg (187.4 lb ... 209.4 lb)	48 N/mm (274.1 lb _f /in)
Spring length	240 mm (9.45 in)
Gas assisted	10 bar (145 psi)
Static sag	40 mm (1.57 in)
Rider sag	110 mm (4.33 in)

Installation position	456.3 mm (17.965 in)
-----------------------	-------------------------

24.5.2 Capacities - shock absorber

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5)  (p. 190)	Fill to the maximum mark

24.6 Tightening torque

24.6.1 Engine tightening torques

Detent arm screw	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Actuator screw	M5	5 Nm (3.7 ft·lb _f) Loctite® 243
Actuator cover screw	M5	5 Nm (3.7 ft·lb _f) Loctite® 243
Exhaust control flap screw	M5	8 Nm (5.9 ft·lb _f) Loctite® 243
Screw, bearing retainer	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, retaining bracket of exhaust control	M5	6 Nm (4.4 ft·lb _f) Loctite® 2701
Control unit cover screw	M5	6 Nm (4.4 ft·lb _f)
Screw, clutch spring retainer	M5	6 Nm (4.4 ft·lb _f)
Screw, crankshaft position sensor	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, main shaft of exhaust control	M5	8 Nm (5.9 ft·lb _f) Loctite® 243
Nut, axle for control flap	M5	5 Nm (3.7 ft·lb _f)
Stator screw	M5	6 Nm (4.4 ft·lb _f) Loctite® 2701
(All except US models) Exhaust port adapter screw cap	M5	6 Nm (4.4 ft·lb _f) Loctite® 243

(All except US models) Injector holder screw cap	M5	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, intake manifold / diaphragm housing	M6	6 Nm (4.4 ft·lb _f)
Screw, gear oil level check	M6	8 Nm (5.9 ft·lb _f)
Shift star screw	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, shift lever	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, water pump cover	M6	10 Nm (7.4 ft·lb _f)
Screw, ignition cover	M6	8 Nm (5.9 ft·lb _f)
Cap nut, water pump impeller	M6	5 Nm (3.7 ft·lb _f) Loctite® 243
Screw, outer clutch cover	M6	8 Nm (5.9 ft·lb _f)
Screw, inner clutch cover	M6	10 Nm (7.4 ft·lb _f)
Screw, starter motor	M6	10 Nm (7.4 ft·lb _f)
Screw, starter motor cover	M6	8 Nm (5.9 ft·lb _f)
Screw, engine case	M6	10 Nm (7.4 ft·lb _f)
Screw, intermediate flange	M6	10 Nm (7.4 ft·lb _f)
Cylinder head bleed screw	M6	8 Nm (5.9 ft·lb _f)
(All except US models) Stud, exhaust flange	M6	6 Nm (4.4 ft·lb _f)
Screw, balancer shaft	M8	30 Nm (22.1 ft·lb _f) Loctite® 243
Screw, cylinder head	M8	27 Nm (19.9 ft·lb _f)
Nut, cylinder base	M10	35 Nm (25.8 ft·lb _f)
Screw, drive chain front sprocket	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701

Stud, cylinder base	M10	12 Nm (8.9 ft·lb _i)
Nut, crankshaft	M12LH×1	60 Nm (44.3 ft·lb _i)
Transmission drain plug with magnet	M12×1.5	20 Nm (14.8 ft·lb _i)
Spark plug	M14×1.25	25 Nm (18.4 ft·lb _i)
Nut, inner clutch hub	M18×1.5	100 Nm (73.8 ft·lb _i) Loctite® 243
Nut, primary gear	M18LH×1.5	150 Nm (110.6 ft·lb _i) Loctite® 243
Screw, reed valve support plate	EJOT DELTA PT® – 30×12	1 Nm (0.7 ft·lb _i)
Screw, outer membrane sheets	EJOT DELTA PT® – 30×6	1 Nm (0.7 ft·lb _i)
Screw, inner membrane sheets	EJOT DELTA PT® – 35×25	1 Nm (0.7 ft·lb _i)
Screw, pressure sensor	EJOT PT® – K60×20 – AL	2.5 Nm (1.84 ft·lb _i)

24.6.2 Chassis tightening torques

Screw, radiator hoses clip		2.4 Nm (1.77 ft·lb _i)
Screw, hose clip, inlet sleeve		2.8 Nm (2.07 ft·lb _i)
Mushroom head screw for spoiler and seat		2.5 Nm (1.84 ft·lb _i)
Hose connector, active carbon filter		3.8 Nm (2.80 ft·lb _i)
Screw, fixed grip	M4	5 Nm (3.7 ft·lb _i) Loctite® 243
Intake sleeve screw on throttle body	M4	5 Nm (3.7 ft·lb _i)
Screw, throttle body cover	M5	2.6 Nm (1.92 ft·lb _i)
Remaining nuts on chassis	M5	5 Nm (3.7 ft·lb _i)
Remaining screws on chassis	M5	5 Nm (3.7 ft·lb _i)
Screw, battery terminal	M5	2.5 Nm (1.84 ft·lb _i)
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 ft·lb _i)

(All 300 EU models and AR) Screw, turn signal switch	M5	1 Nm (0.7 ft·lb _f)
Screw, frame protector	M5	3 Nm (2.2 ft·lb _f)
Screw, oil tank on frame	M6	6 Nm (4.4 ft·lb _f)
Screw, oil pump	M6	6 Nm (4.4 ft·lb _f)
Screw, fuel tank spoiler on radiator	M6	6 Nm (4.4 ft·lb _f)
Nut, throttle cable wire on throttle valve body	M6	3 Nm (2.2 ft·lb _f)
Screw, throttle twist grip	M6	5 Nm (3.7 ft·lb _f)
Nut, cable on starter motor	M6	4 Nm (3.0 ft·lb _f)
Remaining nuts on chassis	M6	10 Nm (7.4 ft·lb _f)
Remaining screws on chassis	M6	10 Nm (7.4 ft·lb _f)
Screw, rear brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, front brake disc	M6	14 Nm (10.3 ft·lb _f) Loctite® 243
Screw, ball joint of push rod on rear brake cylinder	M6	10 Nm (7.4 ft·lb _f) Loctite® 243
Screw, chain slider guard	M6	6 Nm (4.4 ft·lb _f) Loctite® 243
Screw, battery holding bracket	M6	6 Nm (4.4 ft·lb _f)
Screw, cable on starter relay	M6	6 Nm (4.4 ft·lb _f)
Screw, brake line guide for link fork	M6	4.5 Nm (3.32 ft·lb _f) Loctite® 243
Screw, chain guide	M6	10 Nm (7.4 ft·lb _f)
Screw, brake lever	M6	5 Nm (3.7 ft·lb _f)
Screw, clutch lever	M6	5 Nm (3.7 ft·lb _f)

Screw, seat installation	M6	8 Nm (5.9 ft·lb _f)
Screw, oil pump holder on oil tank	M6	6 Nm (4.4 ft·lb _f)
Screw, starter cable to starter relay	M6	6 Nm (4.4 ft·lb _f)
Screw, ground wire in tail section	M6	10 Nm (7.4 ft·lb _f)
Screw, fender to triple clamp	M6	12 Nm (8.9 ft·lb _f)
Screw, connector board incl. combination instrument	M6	5 Nm (3.7 ft·lb _f)
Screw, oil tank cap	M6	6 Nm (4.4 ft·lb _f)
Screw, wheel speed sensor on axle clamp	M8	4.5 Nm (3.32 ft·lb _f)
Nut, rear sprocket screw	M8	35 Nm (25.8 ft·lb _f) Loctite® 2701
Nut, rim lock	M8	12 Nm (8.9 ft·lb _f)
Remaining nuts on chassis	M8	25 Nm (18.4 ft·lb _f)
Remaining screws on chassis	M8	25 Nm (18.4 ft·lb _f)
Screw, front brake caliper	M8	25 Nm (18.4 ft·lb _f) Loctite® 243
Screw, upper steering stem	M8	20 Nm (14.8 ft·lb _f) Loctite® 243
Screw, top triple clamp	M8	17 Nm (12.5 ft·lb _f)
Screw, bottom triple clamp	M8	12 Nm (8.9 ft·lb _f)
Screw, chain slider	M8	15 Nm (11.1 ft·lb _f)
Screw, engine brace	M8×20	25 Nm (18.4 ft·lb _f) Loctite® 243
Screw, subframe, bottom	M8	30 Nm (22.1 ft·lb _f) Loctite® 2701
Screw, subframe, top	M8	35 Nm (25.8 ft·lb _f) Loctite® 243

Screw, side stand attachment	M8×26	33 Nm (24.3 ft·lb _f) Loctite® 2701
Screw, manifold	M8	15 Nm (11.1 ft·lb _f)
Screw, front sprocket cover	M8	15 Nm (11.1 ft·lb _f)
Handlebar clamp screw	M8	20 Nm (14.8 ft·lb _f)
Screw, fork shoe	M8	15 Nm (11.1 ft·lb _f)
Brake pedal stop nut	M8	20 Nm (14.8 ft·lb _f)
Fuel connection on the fuel pump	M8	15 Nm (11.1 ft·lb _f)
Screw, bottom triple clamp	M8	12 Nm (8.9 ft·lb _f)
Engine bracket screw	M10	60 Nm (44.3 ft·lb _f)
Remaining nuts on chassis	M10	45 Nm (33.2 ft·lb _f)
Remaining screws on chassis	M10	45 Nm (33.2 ft·lb _f)
Screw, handlebar mount	M10	40 Nm (29.5 ft·lb _f) Loctite® 243
Top shock absorber screw	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Bottom shock absorber screw	M10	60 Nm (44.3 ft·lb _f) Loctite® 2701
Bushing, foot brake lever	M10	45 Nm (33.2 ft·lb _f)
Temperature sensor water to t-plate	M10	10 Nm (7.4 ft·lb _f)
Screw connection, pull rod on frame	M14	60 Nm (44.3 ft·lb _f)
Nut, swingarm pivot	M16×1.5	100 Nm (73.8 ft·lb _f)
Nut, angle lever to link fork	M16×1.5	80 Nm (59.0 ft·lb _f)
Screw, top steering head	M20×1.5	12 Nm (8.9 ft·lb _f)
Screw, wheel spindle, front	M20×1.5	35 Nm (25.8 ft·lb _f)

Nut, wheel spindle, rear	M22×1.5	80 Nm (59.0 ft·lb _i)
Screw-in nozzle, cooling system	M24×1.5	7.5 Nm (5.53 ft·lb _i) Loctite® 243
T-junction incl. thermostat	M24×1.5	7.5 Nm (5.53 ft·lb _i)
Spoke nipple, front wheel	M4,5	6 Nm (4.4 ft·lb _i)
Spoke nipple, rear wheel	M4,5	6 Nm (4.4 ft·lb _i)
Screw, intake air temperature sensor	EJOT DELTA PT® – K50×18	0.7 Nm (0.52 ft·lb _i)
Screw, oil fill level sensor	EJOT PT® – 50×18	2.5 Nm (1.84 ft·lb _i)
Screw, MAP switch	EJOT PT® – K50×18	2 Nm (1.5 ft·lb _i)
Screw, start button/kill switch	EJOT PT® – K50×18	2 Nm (1.5 ft·lb _i)
Screw, fuel pump	EJOT PT® – K60×30 – Z	2.5 Nm (1.84 ft·lb _i)
Remaining screws on chassis	EJOT PT® – K60×25 – Z	2 Nm (1.5 ft·lb _i)
Screw, subframe with filter box	EJOT PT® – K60×20 – AL	5 Nm (3.7 ft·lb _i)

25.1 Recycling



I02045-10

Further information is available at the following website.

Recycling information website: <https://www.quefairedemesdechets.fr>

A Technical terms

OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-----	--------------------	--

B Fuels

Super unleaded

Standards

- ROZ 95 → DIN EN 228

Super unleaded, type C

Standards

- ROZ 95/RON 95/PON 91 → ANP (Agência Nacional do Petróleo) #57

Fuel additive

Recommended supplier

MOTOREX®

- FUEL STABILIZER

C Operating material

Off-road chain spray

Recommended supplier

MOTOREX®

- CHAINLUBE OFF ROAD

Fork oil

Order details

- 48601166S1

Standards

- SAE 4 → SAE

Universal oil spray

Recommended supplier

MOTOREX®

- JOKER 440 SYNTHETIC

Long-life grease

Recommended supplier

MOTOREX®

- Bike Grease 2000

Engine oil

Recommended supplier

MOTOREX®

- TOP SPEED 4T

Standards

→ JASO T903 MA2

- 15W/50 → SAE

Properties

- Partially synthetic

2-stroke engine oil

Recommended supplier

MOTOREX®

- CROSS POWER 2T

Standards

→ JASO FD

Properties

- fully synthetic

High viscosity grease

Recommended supplier

SKF®

- LGHB 2

Silicone spray

Recommended supplier

MOTOREX®

- SILICONE SPRAY

Shock absorber oil

Order details

- 50180751S1

Standards

- SAE 2.5 → SAE

Oil for foam air filter

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER OIL

Brake fluid DOT 5.1

Recommended supplier

MOTOREX®

- BRAKE FLUID DOT 5.1

Standards

→ DOT

Coolant

Recommended supplier

MOTOREX®

- COOLANT M3.0

Properties

-
- Antifreeze protection to at least -25 °C
(-13.0 °F)
-

D Electrics

Low beam/high beam (LED)

Product code

- LED

Low beam (LED)

Product code

- LED

Button cell (CR 2430)

Product code

- CR 2430

Properties

- Battery voltage 3 V

12-V battery (HJTZ5S-FP-C)

Product code

- HJTZ5S-FP-C

Properties

- Lithium-ion battery
- Battery voltage 12 V
- Nominal capacity 2.0 Ah
- Maintenance-free

Turn signal (R10W / Sockel BA15s)

Product code

- R10W / Sockel BA15s

Properties

- 12 V
- 10 W
(0.013 hp)

Brake/tail light (LED)

Product code

- LED

Indicator lamps (W2,3W / Sockel W2x4,6d)**Product code**

- W2,3W / Sockel W2x4,6d

Properties

- 12 V
- 2.3 W
(0.0031 hp)

Parking light (LED)**Product code**

- LED

Fuse (58011109120)**Product code**

- 58011109120

Properties

- 20 A

E Cleaning agents

Chain cleaner

Recommended supplier

MOTOREX®

- CHAIN CLEAN

Preserving materials

Recommended supplier

MOTOREX®

- MOTO PROTECT

Air filter cleaning agent

Recommended supplier

MOTOREX®

- RACING BIO AIR FILTER CLEANER

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors

Recommended supplier

MOTOREX®

- QUICK CLEANER

Environmentally neutral universal cleaning agent

Recommended supplier

MOTOREX®

- MOTO CLEAN UNIVERSAL

F Icons

F.1 Symbol colors

F.1.1 Red symbols

Red symbols indicate a fault status that requires immediate intervention.

	The oil level warning lamp lights up red
---	--

F.1.2 Yellow and orange symbols

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Malfunction indicator lamp lights up/flashes yellow
	The fuel level warning lamp lights up yellow

F.1.3 Green and blue symbols

Green and blue symbols convey information.

	Turn signal indicator lamp flashes green
	The high beam indicator lamp lights up blue

1	
12 V battery	
charging	126
12 V battery	
installation	125
removing	124
starting power	45
2	
2-stroke oil level	
checking	151
2-stroke oil tank cap	
closing	25
opening	24
A	
Accessories	14
Air filter	
cleaning	87
installation	86
removing	86
Air filter box	
cleaning	87
Air filter box cover	
installing	85
preparing for securing	87
removing	85
Ambient pressure	
programming	145
Auxiliary substances	14
B	
Battery	175
Brake discs	
checking	106
Brake fluid	
adding front brake	108
adding to rear brake	113
Brake fluid level	
checking on front brake	107
checking on rear brake	113
Brake lining retainers	
checking on front brake	109
checking on rear brake	115
Brake pad	
checking on front brake	109
Brake pads	
changing on the rear brake	115
	checking on rear brake 115
	of the front brake, changing 110
Brake pedal	
adjusting the basic position	112
checking the free travel	112
C	
Capacities	
Engine	173
vehicle	175
Chain	
checking	98
cleaning	95
Chain guide	
checking	98
Chain tension	
adjusting	97
checking	96
Characteristic map of the throttle response	
adjusting	143
Checking basic chassis setting with	
rider's weight	57
Clothing	11
Clutch	
changing fluid	103
checking/correcting fluid level	102
Clutch lever	
adjusting the basic position	102
Combination instrument	
adjusting	31
Setting kilometers or miles	30
Setting the clock	31
Compression damping	
adjusting the fork	64
Coolant	
changing	140
draining	138
refilling	138
Coolant level	
checking	136...137
Customer service	15
D	
Dashboard	
combination instrument battery, changing	133
Defined use	12
Diagnostic connector	134

Difficult operating conditions	45	Fuel tank	
dry sand	45	installation	93
high temperatures	47	removing	91
low temperature	47	Fuel tank cap	
muddy surfaces	47	closing	24
slow speed	47	opening	23
snow	47	Fuse	
wet sand	46	changing the main fuse	129
wet surfaces	47	Fuses	175
E		G	
Engine		Gear oil	
running in	44	adding	158
Engine number	19	changing	157
Environment	12	Gear oil level	
Exhaust control		checking	157
end positions, programming	148	Gear shift lever	
F		adjusting the basic position	146
Figures	14	checking the basic position	146
Fork		H	
checking basic setting	64	Hand grip	
Fork legs		checking	102
bleeding	69	Handbrake lever	
cleaning the dust boots	70	checking the free travel	106
installing	72	free travel, adjusting	106
removing	72	Handlebar position	
Fork protector		adjusting	67
installation	71	Headlight	
removing	71	adjusting headlight range	133
Frame		Headlight bulb	
checking	100	changing	131
Frame protector		Headlight mask with headlight	
installation	84	installation	130
removing	84	removing	129
Front fender		Headlight setting	
installation	79	checking	132
removing	78	High-speed compression damping	
Front sprocket		adjusting the shock absorber	58
checking	98	I	
Front wheel		Idle speed	
installing	118	adjusting	145
removing	117	Idle speed adjustment screw	26
Frost protection		Implied warranty	14
checking	136	Improper use	13
Fuel screen		Intended use	12
changing	150		

L	
Lamps	175
Lower triple clamp	
installation	74
removing	73
Low-speed compression damping	
adjusting the shock absorber	57
M	
Main fuse	
changing	129
Manufacturer's warranty	14
Motorcycle	
cleaning	160
raising with lift stand	69
removing from lift stand	69
Muffler	
changing damping material	90
installation	90
removing	89
O	
Oil pump	
priming	152
Owner's manual	12
P	
Preload	
adjusting the fork	65
Preparing for use	
after storage	164
checks and maintenance measures when	
preparing for use	48
notes on preparing for first use	43
Protective clothing	11
R	
Rear sprocket	
checking	98
Rear wheel	
installation	120
removing	119
Rebound damping	
adjusting the fork	66
adjusting the shock absorber	59
Recycling	186
Refueling	
2-stroke oil	53
fuel	52

Resources	14
Rider sag	
adjusting	63
S	
Safe use	11
Seat	
mounting	83
removing	83
Service	14
Shock absorber	
adjusting the spring preload	62
checking static sag	61
checking the rider sag	61
installation	81
removing	80
Side fairing right	
installation	89
removing	88
Skid plate	
installation	105
removing	105
Spare parts	14
Spoke tension	
checking	122
Starting	48
Starting performance of lithium-ion batteries	
at low temperatures	45
Steering	
locking	28
unlocking	28
Steering head bearing	
lubricating	78
Steering head bearing play	
adjusting	77
checking	77
Storage	163
Swingarm	
checking	100
T	
Tampering	10
Technical specifications	
tires	174
Throttle cable play	
adjusting	142
checking	142

Throttle cable routing
 checking 101

Tire condition
 checking 121

Tire pressure
 checking 122

Transportation 51

Turn signal bulb
 changing 132

V

Vehicle identification number 18

VIN 18

W

Winter operation
 checks and maintenance steps 161

Work rules 11



3402951en

10/09/2026

