OWNER'S MANUAL 2024

READY TO RACE

1390 SUPER DUKE R

ART. NO. 3214944EN



DEAR KTM CUSTOMER

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy riding this vehicle!

Enter the serial numbers of your vehicle below.

Vehicle identification number (📖 p. 14)	Dealer's stamp
Engine number (📖 p. 14)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2024 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved
Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

ISO 9001(12 100 6061)
KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.
Issued by: TÜV Management Service

REG.NO. 12 100 6061

KTM Sportmotorcycle GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

1390 SUPER DUKE R EU (F9903X9, F9903X2)

1390 SUPER DUKE R CN (F9987X9)

3214944en

08.02.2024

TABLE OF CONTENTS

1 MEANS OF REPRESENTATION 6
1.1 Symbols used 6
1.2 Formats used 6
2 SAFETY ADVICE 7
2.1 Use definition – intended use 7
2.2 Misuse 7
2.3 Safety advice 7
2.4 Degrees of risk and symbols 7
2.5 Tampering warning 8
2.6 Safe operation 8
2.7 Protective clothing 9
2.8 Work rules 9
2.9 Environment 9
2.10 Owner's Manual 10
3 IMPORTANT NOTES 11
3.1 Manufacturer warranty, implied warranty 11
3.2 Fuel, auxiliary substances 11
3.3 Spare parts, technical accessories 11
3.4 Service 11
3.5 Figures 11
3.6 Customer service 11
4 VIEW OF VEHICLE 12
4.1 View of vehicle, front left (example) 12
4.2 View of vehicle, rear right (example) 13
5 SERIAL NUMBERS 14
5.1 Vehicle identification number 14
5.2 Type label 14
5.3 Engine number 14
5.4 Fork part number 14
5.5 Shock absorber article number 15
5.6 Steering damper article number 15
6 CONTROLS 16
6.1 Clutch lever 16
6.2 Hand brake lever 16
6.3 Throttle grip 16
6.4 Combination switch, left side 16
6.5 Light switch 17
6.6 Menu buttons 17
6.7 Turn signal switch 17
6.8 Horn button 18
6.9 Cruise control buttons 18
6.10 +RES/-SET button 19
6.11 Combination switch, right 19
6.12 Hazard warning flasher switch 20
6.13 Start button/emergency OFF switch 20
6.14 Unlock button 21
6.15 C1 and C2 switch 21
6.16 Steering lock (antenna) 21
6.17 immobilizer 22
6.18 RACE ON key 22
6.19 Anti-relay attack (ARA) 22
6.20 Opening fuel tank filler cap 23
6.21 Closing the fuel tank filler cap 24
6.22 Passenger seat unlocking 25
6.23 Passenger seat emergency release 25
6.24 Tool set 25
6.25 Supporting strap 25
6.26 Passenger foot pegs 26
6.27 Shift lever 26
6.28 Foot brake lever 26
6.29 Side stand 27
7 COMBINATION INSTRUMENT 28
7.1 Combination instrument 28
7.2 Demo mode 28
7.3 Activation and test 29
7.4 Warnings 30
7.5 Indicator lamps 30
7.6 Display 32
7.7 Performance display (optional) 33
7.8 Track display (optional) 34
7.9 Telemetry display (optional) 35
7.10 Engine speed 36
7.11 Shift warning light 36
7.12 Speedometer 37
7.13 Cruise control indicator (optional) 37
7.14 Time 37
7.15 Ambient air temperature indicator 37
7.16 Ride-Mode display 38
7.17 ABS display 38
7.18 MTC display 38
7.19 Coolant temperature indicator 38
7.20 Fuel level display 39
7.21 Heated grip (optional) 39
7.22 Favorites display 39
7.23 Custom Switch display 40
7.24 Navigation display (optional) 40
7.25 Call display 40
7.26 Menu 41
7.26.1 Lap Timer 41
7.26.2 Lap Timer Settings 41
7.26.3 Set Reference Lap 41
7.26.4 Set Target Lap Time 42
7.26.5 Session 42
7.26.6 Motorcycle 42
7.26.7 Ride Mode 42
7.26.8 Slip Adjuster (optional) 43
7.26.9 Throttle Response (optional) 44
7.26.10 Engine Brake Control (optional) 45
7.26.11 Anti Wheelie Mode (Optional) 45
7.26.12 Launch Control (optional) 46

7.26.13 ABS ... 46
7.26.14 MTC ... 47
7.26.15 MTC+MSR (optional) ... 47
7.26.16 QUICKSHIFTER+ (optional) ... 48
7.26.17 Grip Heating (optional) ... 48
7.26.18 Bike Info ... 48
7.26.19 Bike Info ... 48
7.26.20 Warning ... 49
7.26.21 Trip Info ... 49
7.26.22 Trip 1 ... 50
7.26.23 Trip 2 ... 50
7.26.24 Navigation (Optional) ... 51
7.26.25 Skip Waypoint (optional) ... 51
7.26.26 Last search (optional) ... 51
7.26.27 Favorites (optional) ... 52
7.26.28 Volume (optional) ... 52
7.26.29 Stop Navigation (optional) ... 53
7.26.30 Audio ... 53
7.26.31 Call ... 54
7.26.32 Last Calls ... 54
7.26.33 Favorites ... 55
7.26.34 Settings ... 55
7.26.35 Favorites ... 55
7.26.36 Favorites-Anzeige 1-4 ... 56
7.26.37 Custom Switch ... 56
7.26.38 Konnektivität ... 56
7.26.39 Bluetooth ... 57
7.26.40 Pairing a cellphone ... 57
7.26.41 Pairing a headset ... 58
7.26.42 Headset Type ... 59
7.26.43 Shift Light ... 59
7.26.44 Shift Light State ... 60
7.26.45 RPM1 ... 60
7.26.46 RPM2 ... 60
7.26.47 Button Illumination ... 61
7.26.48 Coming Home Light ... 61
7.26.49 Light Diagnostic ... 61
7.26.50 Daytime Running Light ... 62
7.26.51 TPMS Settings (optional) ... 62
7.26.52 Anti Relay Attack ... 62
7.26.53 Setting the time and date ... 62
7.26.54 Clock Format ... 63
7.26.55 Date Format ... 63
7.26.56 Units ... 64
7.26.57 Distance ... 64
7.26.58 Temperature ... 64
7.26.59 Pressure ... 65
7.26.60 Consumption ... 65
7.26.61 Beschleunigung ... 65
7.26.62 Language ... 66
7.26.63 Heating (optional) ... 66
7.26.64 Extra Functions ... 66
7.26.65 Demo Mode ... 67

8 ERGONOMICS ... 68
8.1 Handlebar position ... 68
8.2 Adjusting the handlebar position 🔧 ... 68
8.3 Adjusting the basic position of the clutch lever ... 69
8.4 Adjusting the basic position of the hand brake lever ... 69
8.5 Adjusting the response of the hand brake lever ... 69
8.6 Setting the step plate of the foot brake lever ... 70
8.7 Checking the basic position of the shift lever ... 70
8.8 Adjusting the basic position of the shift lever 🔧 ... 70
8.9 Setting the shift lever stub ... 71
8.10 Adjusting the footrest support 🔧 ... 71

9 PREPARING FOR USE ... 74
9.1 Advice on preparing for first use ... 74
9.2 Running in the engine ... 75
9.3 Loading the vehicle ... 75

10 RIDING INSTRUCTIONS ... 77
10.1 Checks and maintenance measures when preparing for use ... 77
10.2 Starting the vehicle ... 77
10.3 Launch control (optional) ... 79
10.4 Starting off ... 79
10.5 Starting off with launch control (optional) ... 79
10.6 QUICKSHIFTER+ (optional) ... 80
10.7 Shifting, riding ... 80
10.8 MSR (optional) ... 83
10.9 Braking ... 83
10.10 Stopping, parking ... 85
10.11 Transporting ... 86
10.12 Towing in the event of a breakdown ... 86
10.13 Refueling ... 87

11 SERVICE SCHEDULE ... 88
11.1 Additional information ... 88
11.2 Service work ... 88

12 SUSPENSION SETTING ... 90
12.1 Fork/shock absorber ... 90
12.2 Adjusting the compression damping of the fork ... 90
12.3 Adjusting the rebound damping of the fork ... 90
12.4 Adjusting the spring preload of the fork ... 91
12.5 Compression damping of the shock absorber ... 92

TABLE OF CONTENTS

12.6 Adjusting the spring preload of the shock absorber 92
12.7 Adjusting the low-speed compression damping of the shock absorber 92
12.8 Adjusting the high-speed compression damping of the shock absorber 93
12.9 Adjusting the rebound damping of the shock absorber 94

13 SERVICE WORK ON THE CHASSIS 95

13.1 Lifting the motorcycle with the rear lifting gear 95
13.2 Removing the rear of motorcycle from the lifting gear 95
13.3 Lifting the motorcycle with the front lifting gear 95
13.4 Taking the motorcycle off the front lifting gear 96
13.5 Cleaning the dust boots of the fork legs 96
13.6 Removing the passenger seat 97
13.7 Mounting the passenger seat 97
13.8 Removing the front rider's seat 97
13.9 Mounting the front rider's seat 98
13.10 Removing the left fuel tank spoiler 98
13.11 Installing the left fuel tank spoiler 100
13.12 Removing the main silencer 101
13.13 Installing the main silencer 102
13.14 Checking the chain for dirt 103
13.15 Cleaning the chain 103
13.16 Checking the chain tension 104
13.17 Adjusting the chain tension 105
13.18 Checking the chain, rear sprocket, engine sprocket, and chain guide 105
13.19 Checking/correcting the fluid level of hydraulic clutch 107

14 BRAKE SYSTEM 109

14.1 Anti-lock braking system (ABS) 109
14.2 Checking the brake discs 110
14.3 Checking the front brake fluid level 111
14.4 Adding front brake fluid 111
14.5 Checking that the brake linings of the front brake are secured 112
14.6 Checking the rear brake fluid level 113
14.7 Adding rear brake fluid 114
14.8 Checking that the brake linings of the rear brake are secured 115

15 WHEELS, TIRES 116

15.1 Removing the front wheel 116
15.2 Installing the front wheel 116
15.3 Removing the rear wheel 118
15.4 Installing the rear wheel 118
15.5 Checking the tire condition 119
15.6 Checking tire pressure 120
15.7 Using tire repair spray 121

16 ELECTRICAL SYSTEM 122

16.1 Daytime running light (**DRL**) 122
16.2 Removing the 12-V battery 122
16.3 Installing the 12-V battery 123
16.4 Charging the 12-V battery 124
16.5 Changing the RACE ON key battery 126
16.6 Changing the main fuse 127
16.7 Changing the fuses in the fuse box 128
16.8 Changing the ABS fuses 129
16.9 Checking the headlight setting 130
16.10 Adjusting the headlight range 131
16.11 Connecting the USB cable 131
16.12 Disconnecting the USB cable 132
16.13 Diagnostics connector 132
16.14 Front ACC1 and ACC2 132
16.15 ACC1 and ACC2 rear 132

17 COOLING SYSTEM 133

17.1 Checking the coolant level in the compensating tank 133
17.2 Correcting the coolant level in the compensating tank 134

18 ENGINE TUNING 135

18.1 Ride Mode 135
18.2 Motorcycle traction control (optional) (Cornering MTC) 135
18.3 Anti-wheelie mode (optional) 136
18.4 Slip adjustment (optional) 136
18.5 Throttle Response (optional) 136

19 SERVICE WORK ON THE ENGINE 137

19.1 Checking the engine oil level 137
19.2 Changing the engine oil and oil filter, cleaning the oil screens 137
19.3 Adding engine oil 140

20 CLEANING, CARE 142

20.1 Cleaning the motorcycle 142
20.2 Checks and maintenance steps for winter operation 143

21 STORAGE 144

21.1 Storage 144
21.2 Preparing for use after storage 145

22 TROUBLESHOOTING 146

23 TECHNICAL SPECIFICATIONS 148

23.1 Engine 148
23.2 Engine tightening torques 149
23.3 Capacities 151
23.3.1 Engine oil 151
23.3.2 Coolant 151
23.3.3 Fuel 152
23.4 Chassis 152
23.5 Electrical system 153
23.6 Tires 153
23.7 Fork 153
23.8 Shock absorber 154
23.9 Chassis tightening torques 155

24 DECLARATIONS OF CONFORMITY 159

24.1 Declarations of conformity 159
24.2 Country-specific declarations of conformity (KTM RACE ON) 159
24.3 Country-specific declarations of conformity (KTM RACE ON) 160
24.4 Country-specific declarations of conformity (CCU-2) 160

25 SUBSTANCES 161

26 AUXILIARY SUBSTANCES 163

27 STANDARDS 164

28 INDEX OF SPECIAL TERMS 165

29 LIST OF ABBREVIATIONS 166

30 LIST OF SYMBOLS 167

30.1 Red symbols 167
30.2 Yellow and orange symbols 167
30.3 Green and blue symbols 167

INDEX 168

1 MEANS OF REPRESENTATION

1.1 Symbols used

The meaning of specific symbols is described below.

✓	Indicates an expected reaction (e.g., of a work step or a function).
✗	Indicates an unexpected reaction (e.g., of a work step or a function).
	Indicates work that requires expert knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop! Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required.
	Indicates a page reference (more information is provided on the specified page).
	Indicates information with more details or tips.
»	Indicates the result of a testing step.
	Indicates the end of an activity, including potential reworking.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Indicates a proprietary name.
Name®	Indicates a protected name.
Brand™	Indicates a brand available on the open market.
Underlined terms	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Use definition – intended use

The vehicle is designed and constructed to withstand the usual demands of regular traffic and use on race courses. This vehicle is not suitable for offroad use.

Info
This vehicle is only authorized for operation on public roads in its homologated version.

2.2 Misuse

The vehicle must only be used as intended.
Dangers can arise for people, property and the environment through use not as intended.
Any use of the vehicle beyond the intended and defined use constitutes misuse.
Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

Info
Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols

Danger
Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

Warning
Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

Caution
Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note
Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

Note
Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or

2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

1 Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.

2 Removal or puncturing of parts of the intake system.

3 Lack of proper maintenance.

4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.6 Safe operation

Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

– Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.

– Do not operate the vehicle if you are physically or mentally impaired.

Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always make sure there is sufficient ventilation when running the engine.

– Use effective exhaust extraction when starting or running the engine in an enclosed space.

Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

– Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.

– Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.
The vehicle should only be used by trained persons. An appropriate driver's license is needed to ride the vehicle on public roads.
Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.
Adhere to the information and warning labels on the vehicle.

2.7 Protective clothing

Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

– Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
– Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with transponder key) or the motor must be at a standstill (models without ignition lock or transponder key).

Special tools are necessary for certain tasks. If these special tools are not included in the scope of supply of the vehicle, the special tools can be ordered using the specified article number. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ± 5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screw connections, a thread locker (e.g., **Loctite®**) is required. Observe the manufacturer's instructions.

If a thread locker (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread locker.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

Ensure that the work area is clean and clean components before disassembly if necessary. Penetrating dirt can lead to increased wear and consequential damage.

After completing a repair or service work, check the operating safety of the vehicle.

2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.10 Owner's Manual

Read this owner's manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. This is the only way to find out how best to customize the vehicle for your own use and how you can protect yourself from injury.

Tip
Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.
The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.
The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate.

The Owner's Manual is also available for download from your authorized KTM dealer and on the KTM website. A printed copy can also be ordered from your authorized KTM dealer.
International KTM Website: KTM.COM

3.1 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must be carried out in an authorized KTM workshop only and confirmed in the electronic proof of service, since otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.2 Fuel, auxiliary substances

Note

Environmental hazard Improper handling of fuel is a danger to the environment.

– Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

3.3 Spare parts, technical accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss.
Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The latest news **KTM PowerParts** on your vehicle can be found on the KTM website.
International KTM Website: KTM.COM

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.
Use of the vehicle under difficult conditions, such as dusty environments, heavy rain, high heat or with a heavy load, can lead to considerably more rapid wear of components such as the air filter, drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.
It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.
The relevant mileage or time interval is whichever occurs first.

3.5 Figures

The figures contained in the manual may depict special equipment.
In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.


3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.
International KTM Website: KTM.COM


4 VIEW OF VEHICLE

4.1 View of vehicle, front left (example)

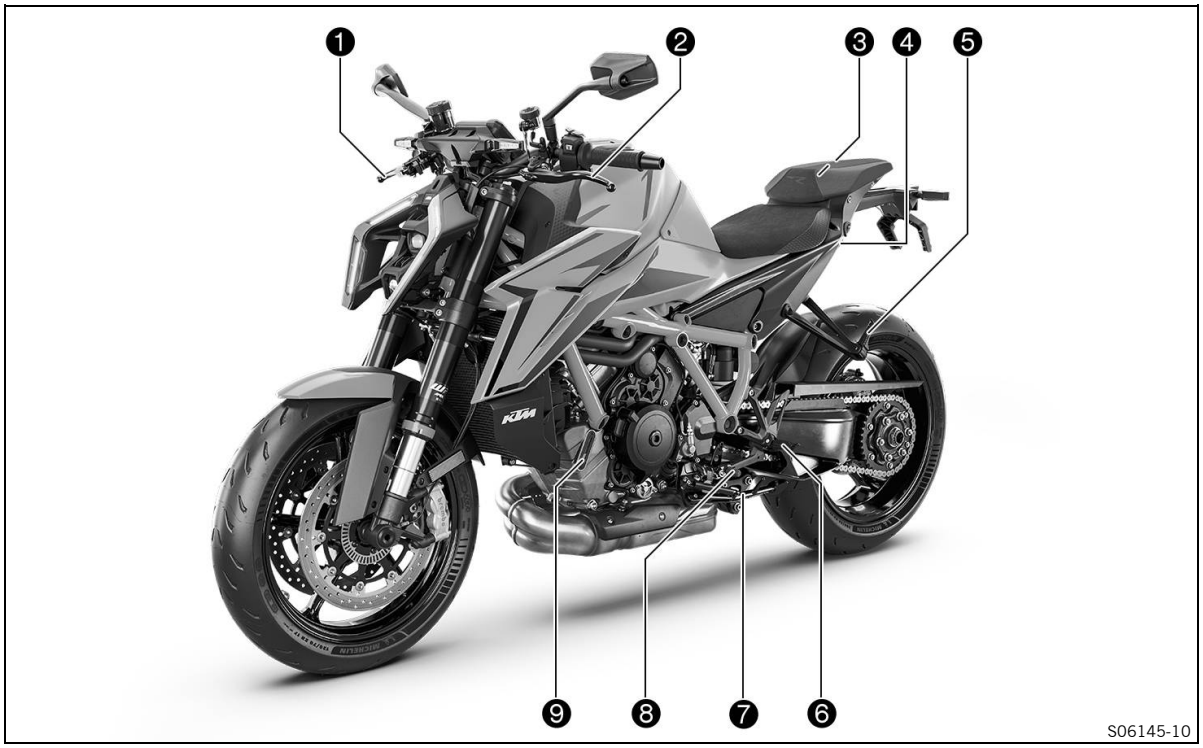

1. Hand brake lever (p. 16)
2. Clutch lever (p. 16)
3. Supporting strap (p. 25)
3. Tool set (p. 25)
4. Passenger seat unlocking (p. 25)
5. Passenger foot pegs (p. 26)
6. Rider footrests
7. Side stand (p. 27)
8. Shift lever (p. 26)
9. Engine oil level viewer


4.2 View of vehicle, rear right (example)

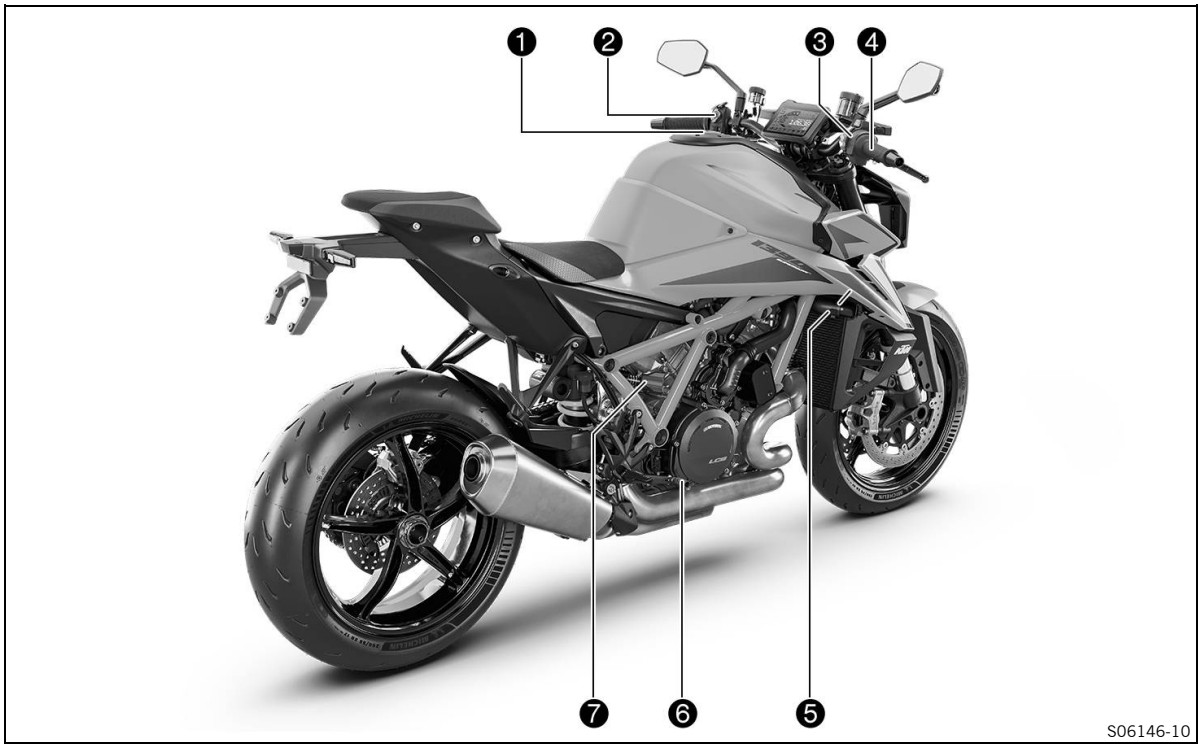

1. Fuel tank filler cap
2. Combination switch, left side (📖 p. 16)
3. Start button/emergency OFF switch (📖 p. 20)
3. Unlock button (📖 p. 21)
3. Hazard warning flasher switch (📖 p. 20)
3. C1 and C2 switch (📖 p. 21)
4. Throttle grip (📖 p. 16)
5. Cooling system compensating tank
6. Foot brake lever (📖 p. 26)
7. Preload adjuster


5 SERIAL NUMBERS

5.1 Vehicle identification number

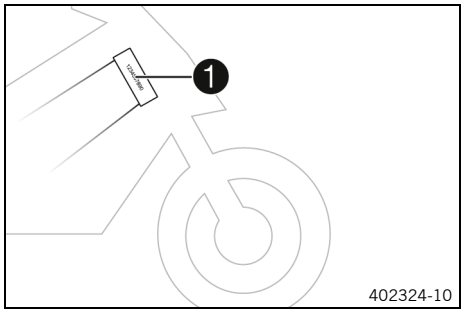


The vehicle identification number ❶ is stamped on the right side of the steering head.
The vehicle identification number is also shown on the type label.

5.2 Type label

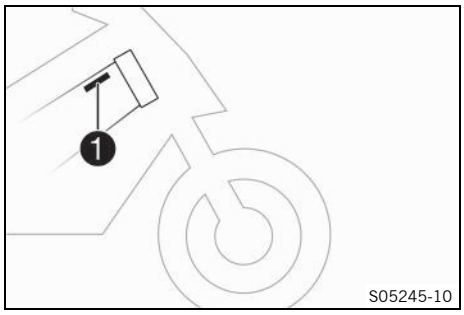


Type label ❶ is located on the frame on the right.

5.3 Engine number

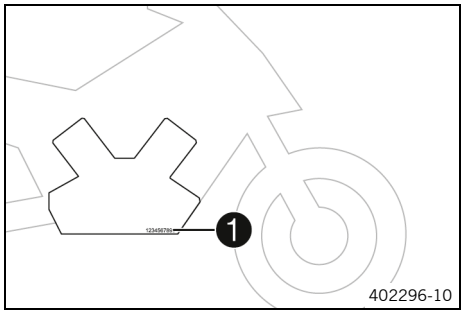


The engine number ❶ is stamped on the right side of the engine.

5.4 Fork part number

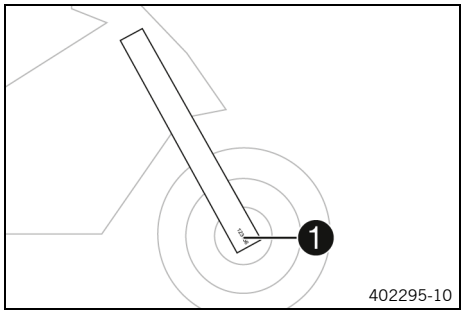


The fork part number ❶ is stamped on the inside of the axle clamp.

5.5 Shock absorber article number

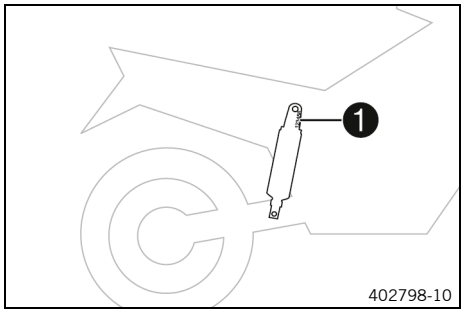


The shock absorber article number ❶ is stamped on the top of the shock absorber above the adjusting ring towards the engine side.

5.6 Steering damper article number

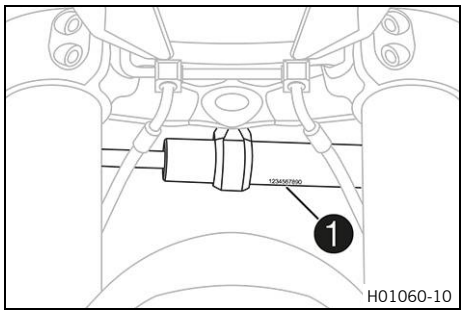


Steering damper item number ❶ is embossed on the underside of the steering damper.

6.1 Clutch lever

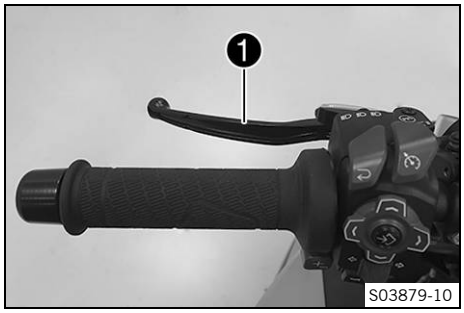


Clutch lever ❶ is fitted on the handlebar on the left.
The clutch is activated hydraulically and adjusts itself automatically.

6.2 Hand brake lever

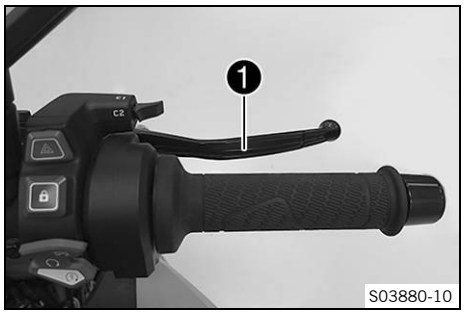

The hand brake lever ❶ is fitted on the right side of the handlebar.
The front brake is engaged using the hand brake lever.


6.3 Throttle grip

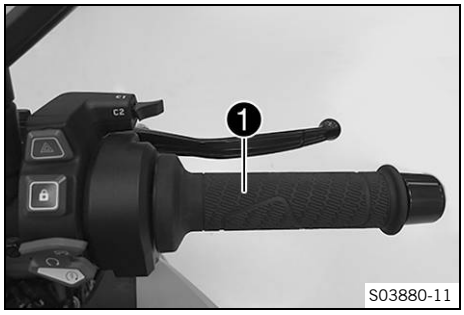

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Combination switch, left side


The left combination switch is fitted on the left side of the handlebar.

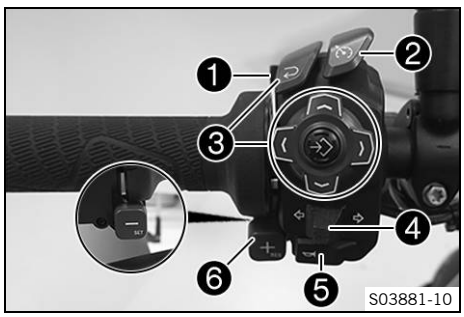

Overview of the left combination switch

❶ Light switch (📖 p. 17)
❷ Cruise control buttons (📖 p. 18)
❸ Menu buttons (📖 p. 17)
❹ Turn signal switch (📖 p. 17)
❺ Horn button (📖 p. 18)
❻ +RES/-SET button (📖 p. 19)

6.5 Light switch

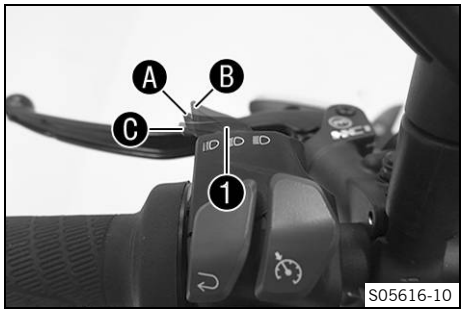


The light switch ❶ is fitted on the combination switch on the left.

Possible states

	Low beam on – Light switch in position Ⓐ. In this position, the low beam and the tail light are switched on.
	High beam on – Light switch in position Ⓑ. In this position, the high beam and the tail light are switched on.
	Headlight flasher – Light switch in position Ⓒ. The headlight flasher is operated in this position. The light switch returns automatically to the position Ⓐ after use.

6.6 Menu buttons

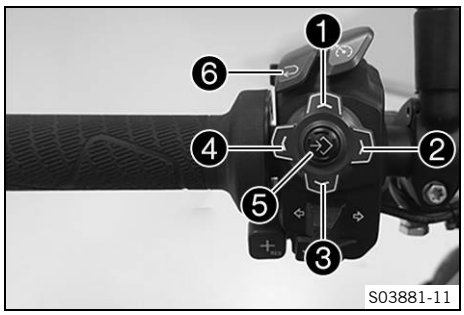

The menu buttons are fitted in the middle of the left combination switch.

The menu buttons are used to control the display on the combination instrument.

Button ❶ is the **UP** button.

Button ❷ is the **RIGHT** button.


Button ❸ is the **DOWN** button.

Button ❹ is the **LEFT** button.

Button ❺ is the **SET** button.

Button ❻ is the **BACK** button.

6.7 Turn signal switch

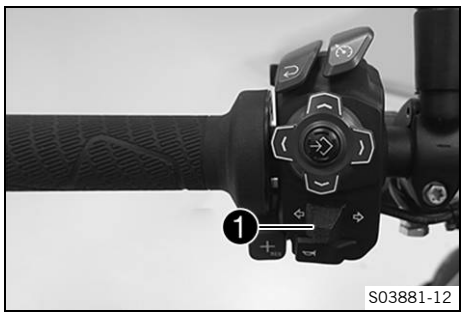

Turn signal switch ❶ is fitted on the combination switch on the left.

Possible states

	Turn signal off – Turn signal switch pushed toward the switch housing.
	Left turn signal, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use.
	Right turn signal, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use.

Info

An automatic turn signal switch-off function (**ATIR**) is available as a software feature.


The **ATIR** function uses a time and distance counter.

If the turn signal has been on for at least 10 seconds and 150 meters of riding distance, the turn signal is switched off.

If the vehicle is stationary, both counters are stopped.

If the turn signal switch is reactivated, both counters are reset.

6.8 Horn button

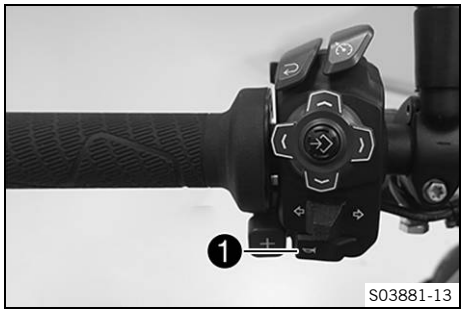


Horn button ❶ is fitted on the left side of the handlebar.

Possible states

- The horn button is in the basic position
- The horn button is pressed – The horn is operated in this position.

6.9 Cruise control buttons

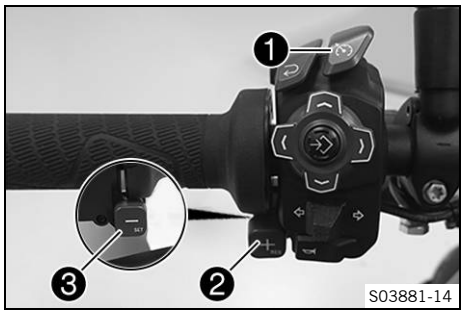

The cruise control buttons ❶, ❷ and ❸ of the are located on the left side of the combination switch.

Possible states

- Cruise control system button in the basic position.
- The **+RES** button is pressed briefly. – The last saved speed is reapplied. Every subsequent brief pressing increases the target speed by 1 km/h or 1 mph.
- Button **+RES** is pressed and held. – The target speed increases in increments of 5 km/h or 5 mph.
- Button **-SET** is pressed. – The cruise control function is activated and the current speed is maintained. Every subsequent brief press reduces the target speed by 1 km/h or 1 mph.
- Button **-SET** is pressed and held. – The target speed decreases in increments of 5 km/h or 5 mph.

Info

After activating the cruise control function, the throttle grip can be turned back to the basic position. The selected speed will be maintained.

If no target speed has yet been saved, this can be saved once using the **+RES** button.

If the cruise speed is exceeded for less than 30 seconds by turning the throttle grip, the cruise control remains activated.

To switch off the cruise control system function press the cruise control system button again.

In addition, the cruise control system function is deactivated when one of the following events occurs:

– Operating the hand brake lever
– Operating the foot brake lever
– Operating the clutch lever
– Gear change without QUICKSHIFTER+
– Turning the throttle grip beyond the basic position
– Control of the motorcycle traction control (**MTC**)
– Slip at the rear wheel or lifting front wheel
– A malfunction occurring, which impairs the cruise control system function

– Exceeding the target speed for more than 30 seconds when overtaking

Warning

Danger of accidents The cruise control system function is not suitable for all riding situations.


The selected target speed will not be reached, if the engine power is not sufficient for a gradient.

The selected target speed will be exceeded if the engine braking effect is not sufficient on an incline.

– Do not use the cruise control systems function on winding roads.
– Do not use the cruise control systems on slippery road surfaces (e.g. rain, ice or snow), where there is poor visibility or on unpaved surfaces (e.g. sand, stones or gravel).
– Do not use the cruise control systems function if the traffic does not permit a constant speed.

The cruise control system function is only available when motorcycle traction control (**MTC**) is activated.
When motorcycle traction control (**MTC**) is switched off, the cruise control system function is also switched off.
The cruise control system function cannot be activated during rapid acceleration.
The cruise control system function can only be activated in third, fourth, fifth and sixth-gear.
The control range is from 40 to 200 km/h or from 25 to 125 mph.

6.10 +RES/-SET button

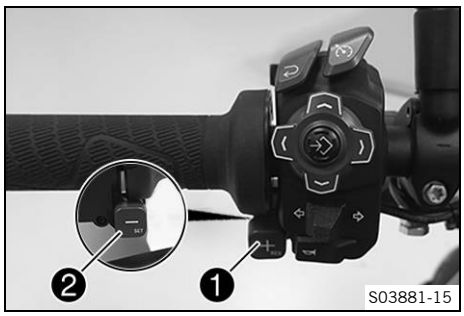


The **+RES** button ❶ is fitted on the handlebar, front left.
The **-SET** button ❷ is fitted on the handlebar, rear left.

Info

The **+RES** and **-SET** buttons are used to control the cruise control when the cruise control function is activated.
If the cruise control function is disabled and riding mode **Performance** or **Track** is set, the **+RES** and **-SET** buttons are used to adjust the **Slip Adjuster**.

6.11 Combination switch, right


The right combination switch is fitted on the right side of the handlebar.

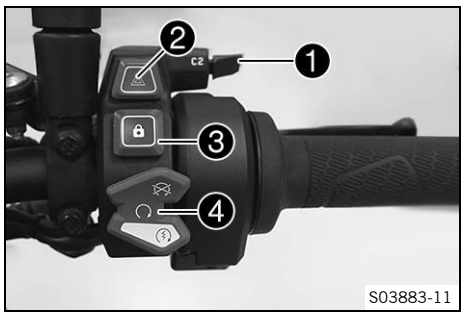

Overview of the right combination switch

1. C1 and C2 switch (📖 p. 21)
2. Hazard warning flasher switch (📖 p. 20)
3. Unlock button (📖 p. 21)
4. Start button/emergency OFF switch (📖 p. 20)

6.12 Hazard warning flasher switch

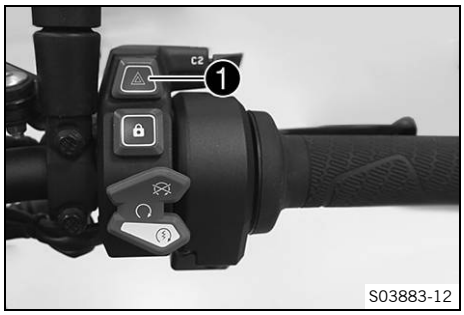


The hazard warning flasher switch 1 is fitted on the right side of the combination switch.
The hazard warning flasher is used to indicate emergency situations.

Info
The hazard warning flasher can be activated or deactivated while the ignition is switched on or up to 60 seconds after the ignition is switched off.
Only keep the hazard warning flasher activated as long as necessary as it depletes the 12-V battery.

Possible states

◀▶	Hazard warning flasher on – All four turn signals and the green turn signal indicator lights in the combination instrument flash.

6.13 Start button/emergency OFF switch

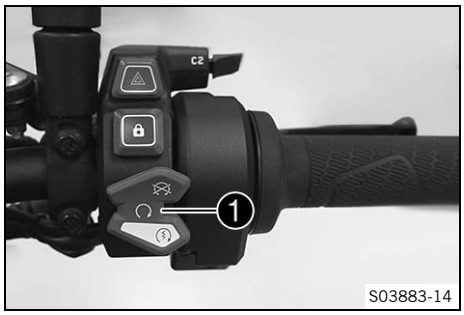


The start button/emergency OFF switch 1 is fitted on the right side of the combination switch.

Possible states

⊗	Start button/emergency OFF switch off (upper position) – In this position, the ignition circuit is interrupted, a running engine stops, and cannot be started. A message appears on the display.
↻	Start button/emergency OFF switch on (middle position) – This position is required for operation; the ignition circuit is closed.
↻ϟ	Starter motor on (lower position) – In this position, the starter motor is actuated.

6.14 Unlock button

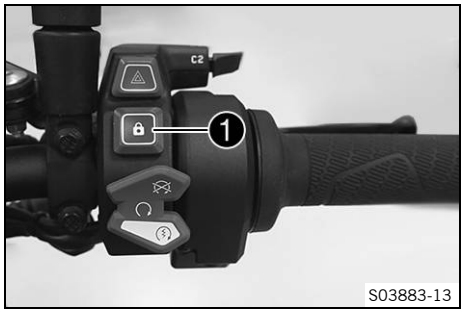


The Unlock button ❶ is fitted on the right side of the combination switch.

Info
The unlock button performs the ignition lock function on this vehicle.
The steering can only be locked if the handlebar is turned to the left.

Possible states

- Unlock button in basic position.
- Briefly pressing Unlock button – Pressing briefly switches the ignition on and unlocks the steering lock or switches the ignition off. The immobilizer indicator lamp lights up briefly once for confirmation.
- Pressing and holding Unlock button – Pressing and holding switches the ignition off and locks the steering lock.


6.15 C1 and C2 switch

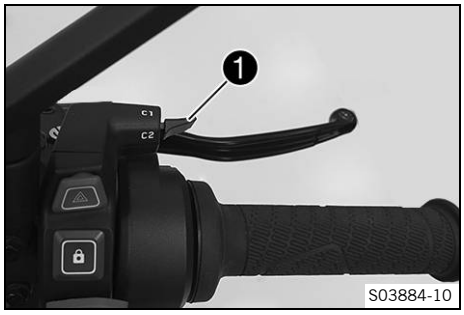

The C1 and C2 switch is fitted on the right of the combination switch.

Info
The C1 and C2 switch enables quick access to various menus.
The C1 and C2 switch can be freely configured.

6.16 Steering lock (antenna)

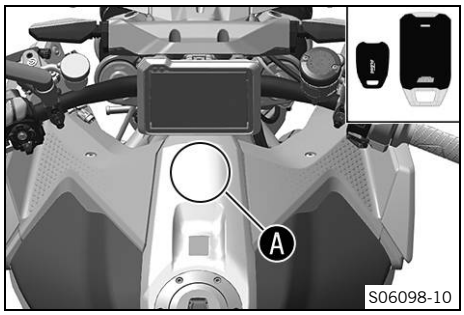

On this vehicle, the ignition and steering lock is replaced by a with transponder key (RACE ON key (p. 22)).
In order to activate the steering lock, the handlebar must be turned fully to the left.
The steering is locked and unlocked electromechanically via the RACE ON button (p. 21).
If the battery voltage of the RACE ON key is too low, hold the RACE ON key or the RACE ON chip in area Ⓐ on the motorcycle and repeat starting.

Info
As soon as the engine has been started, safely stow away the RACE ON key or the RACE ON chip again.

Possible states

- Ignition off, steering locked – In this operating mode, the ignition circuit is interrupted and the steering locked.
- Ignition off, steering unlocked – In this operating mode, the ignition circuit is interrupted and the steering unlocked.
- Ignition on, steering unlocked – In this operating mode, the ignition circuit is closed and the steering unlocked.

6.17 immobilizer




The electronic immobilizer secures the vehicle against unauthorized use.

The immobilizer is activated and the engine electronics are locked as soon as the ignition is switched off via the unlock button (p. 21).

The immobilizer indicator lamp ❶ can indicate malfunctions by flashing.

If the optional alarm system is installed, immobilizer indicator lamp ❶ flashes when the ignition is switched off and the alarm system is switched on.

6.18 RACE ON key

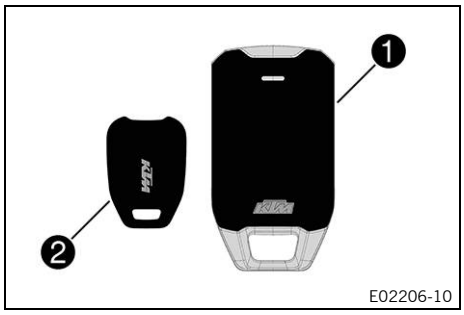

On this vehicle, the RACE ON key ❶ performs all the functions of the conventional ignition key.

If the battery voltage of the RACE ON key is too low, the vehicle can be started by holding the RACE ON key directly to the vehicle antenna (p. 21).

The RACE ON chip ❷ is only intended for situations in which the RACE ON key is not available.

Like the RACE ON key, the RACE ON chip can be used to start the vehicle by holding the chip directly to the vehicle antenna (p. 21).

Info


The ignition keys contain electronic components. Always maintain a distance of several centimeters to other devices with electronic components.

A lost ignition key must be deactivated by an authorized KTM workshop to prevent unauthorized persons from operating the vehicle.

The ignition keys supplied are activated when delivered.

Up to four ignition keys in total can be activated by an authorized KTM workshop.

6.19 Anti-relay attack (ARA)

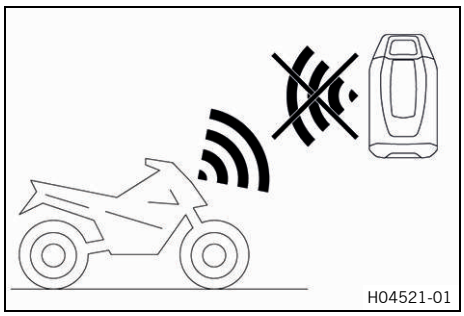


The RACE ON key has the **Anti Relay Attack** function that increases security against theft.

The **Anti Relay Attack**(**ARA**) function can be activated or deactivated on the combination instrument. If the function is activated, the remote response of the RACE ON key is deactivated five minutes after the ignition is switched off. The combination instrument displays whether anti-relay attack in the ignition key has been successfully activated when the ignition is switched off.

Even if the RACE ON key is within range, the vehicle cannot be contactlessly started with the RACE ON key after the period has expired. The same blink code on the combination instrument is displayed as if the RACE ON key were out of range.

This prevents another person from starting the vehicle at an extended range, although the owner and RACE ON key are not in the vicinity of the vehicle.

Info
If the RACE ON key battery has been replaced, anti-relay attack in the RACE ON key is also deactivated if the **Anti Relay Attack** function is activated in the combination instrument.
Anti-relay attack in the RACE ON key is not activated again until the next time the RACE ON key is in range when the ignition is switched off.

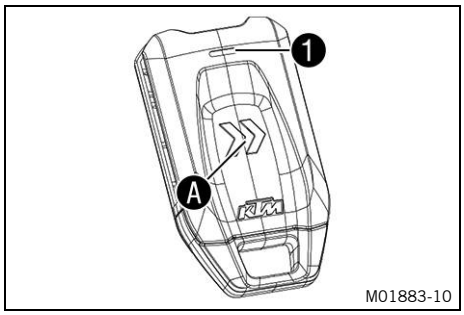

A button is located in the A area of the RACE ON key. When this button is pressed and the 1 LED flashes three times, the RACE ON key's anti-relay attack will be deactivated for 10 minutes, allowing the vehicle's contactless start.

Tip
This function can be used, for example, before the RACE ON key is placed in the rider's motorcycle clothing.

If no vehicle start occurs within this period, the RACE ON key's anti-relay attack is reactivated.
Regardless of anti-relay attack, the vehicle can always be started by holding the RACE ON key or the RACE ON chip directly to the vehicle antenna (p. 21).

Info
In this case, anti-relay attack will not be activated the next time the ignition is switched off.

The vehicle activates anti-relay attack when the ignition is switched off in only one RACE ON key each.
It is recommended to carry only one RACE ON key at a time, as it cannot be predicted in which RACE ON key anti-relay attack will be activated.

6.20 Opening fuel tank filler cap

Danger
Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.

Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.


Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.


Condition

The motorcycle is stationary.
The engine is switched off.
The ignition has been switched on or off for less than 1 minute.

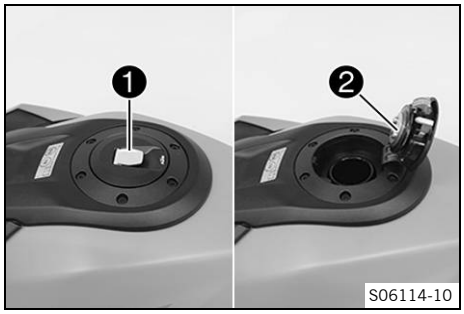

- Fold up cover ❶ slowly.
  ✔ The fuel tank filler cap is unlocked.
- Fold up fuel tank filler cap ❷.

6.21 Closing the fuel tank filler cap

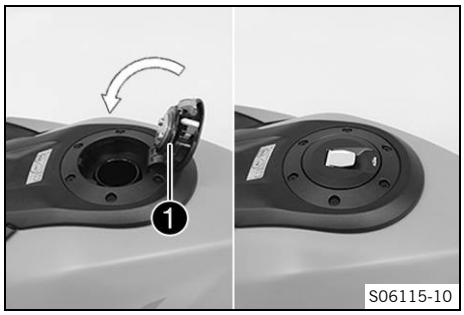


Warning

Fire hazard Fuel is highly flammable and a health hazard.

- Check that the fuel tank filler cap is locked correctly after closing.
- Change your clothing if fuel spills on them.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.


- Fold down fuel tank filler cap ❶ and push it down.
  ✔ The fuel tank filler cap locks audibly in place.

6.22 Passenger seat unlocking

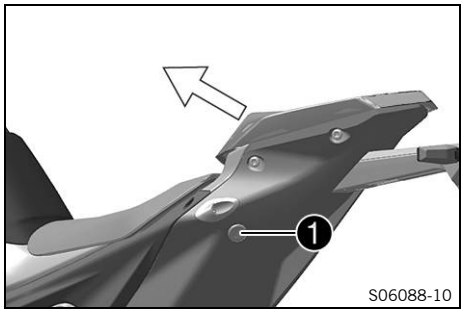


The ❶ tip switch of the passenger seat release is located on the left side of the vehicle below the passenger seat.
The passenger seat release tip switch only functions if the motorcycle is stationary, the engine is switched off and the ignition is switched on or switched off for less than 1 minute.
If the passenger seat release tip switch does not work, the passenger seat can be unlocked using the passenger seat emergency release (📖 p. 25).

6.23 Passenger seat emergency release

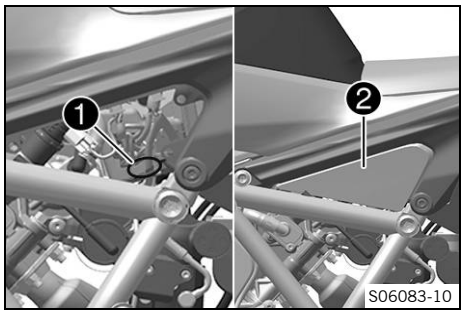


The passenger seat emergency release ❶ is located on the left side of the vehicle below the ❷ cover.
The emergency passenger seat release is used if the seat release tip switch does not work, e.g. because the 12 V battery is discharged.

6.24 Tool set

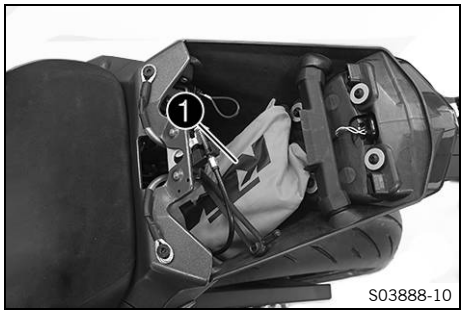

The tool set ❶ is located under the passenger seat.

6.25 Supporting strap

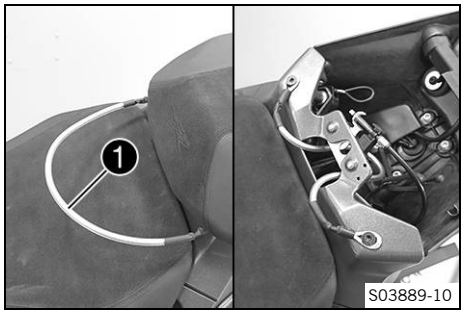


Supporting strap ❶ is attached underneath the passenger seat.

Info
If the supporting strap is not needed, it can be stowed underneath the pillion bench.

The passenger can hold onto the supporting strap ❶ during the trip.

6.26 Passenger foot pegs

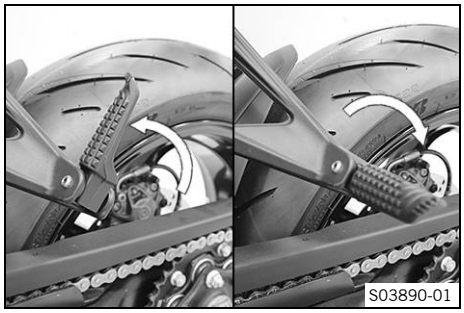


The passenger foot pegs can be folded up and down.


Possible states

- Passenger foot pegs folded up – For operation without a passenger.
- Passenger foot pegs folded down – For operation with a passenger.

6.27 Shift lever

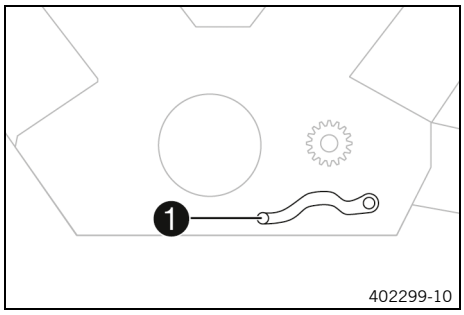


The shift lever ❶ is fitted on the left side of the engine.

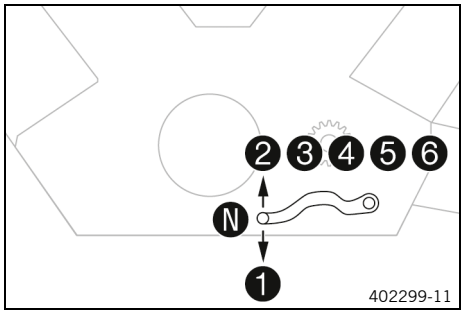


The gear positions can be seen in the figure.
The idle position is between first and second gears.

6.28 Foot brake lever

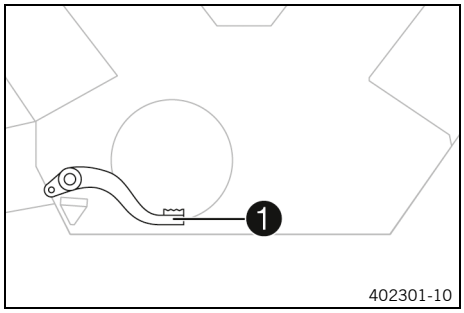

Foot brake lever ❶ is located in front of the right footrest.
The rear brake is engaged with the foot brake lever.

6.29 Side stand

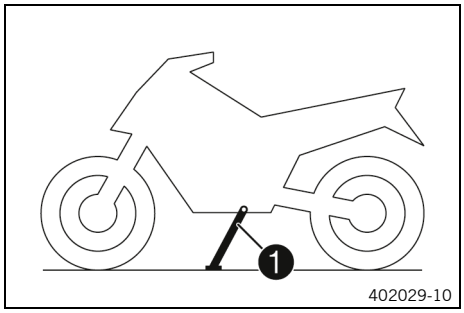

Side stand ❶ is located on the left of the vehicle.
The side stand is used for parking the motorcycle.

Info
The side stand must be folded up during motorcycle use.
The side stand is coupled with the safety starting system; see the instructions in the "Stopping, parking" chapter.

Possible states

- Side stand folded out – The vehicle can be supported on the side stand. The safety starting system is active.
- Side stand folded in – This position is mandatory when riding the motorcycle. The safety starting system is inactive.

7.1 Combination instrument



The combination instrument is attached in front of the handlebar.
The combination instrument is divided into two function areas.
❶ indicator lamps (📖 p. 30)
Display ❷

Caution

Danger of burns Parts of the combination instrument become hot in certain situations.

In particular, the display gets hot in ambient temperatures above 55 °C (131 °F), during extended stationary periods, for example, at a traffic light, or in direct sunlight.

- Do not touch the combination instrument with bare hands in the situations referred to.
- Where appropriate protective clothing.
- If you have been burned, hold the area affected under lukewarm water immediately.

7.2 Demo mode



Activation

Demo mode is activated in the factory and allows you to test optional software functions.

Once a distance has been covered, demo mode is automatically deactivated as soon as the ignition is turned off.

Distance until demo mode is deactivated	1,500 km (930 mi)

The demo modes are shown in area ❶ of the display.

Info

Notifications about the remaining distance until the demo mode is deactivated are displayed at regular intervals.
All optional software functions will be deactivated and no longer displayed when demo mode ends. The optional software functions are available from an authorized KTM dealer.

Functions included in demo mode

- **TECH PACK** including riding mode **TRACK**, MTC+MSR, deactivatable ABS on the rear wheel, adjustable characteristics of the throttle response, adjustable motorcycle traction control
- QUICKSHIFTER+
- MSR
- Cruise control system

7.3 Activation and test



Activation

The combination instrument is activated when the ignition is switched on.

Info

The brightness of the displays is controlled by an ambient light sensor in the combination instrument.


Test


The welcome text appears on the display and all indicator lamps are briefly activated for a function check.

Info

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.
The oil pressure warning lamp always lights up as long as the engine is not running. If the engine is running and the oil pressure warning lamp lights up, stop immediately (taking care not to endanger yourself or other road users in the process) and switch off the engine.
The ABS warning lamp and TC indicator lamp light up until a speed of approx. 6 km/h (approx. 4 mph) or faster has been reached.

7.4 Warnings

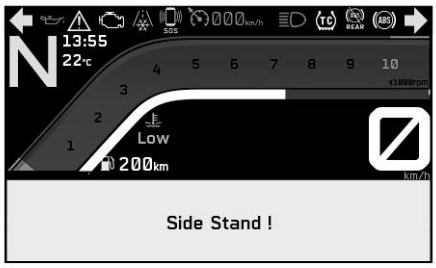

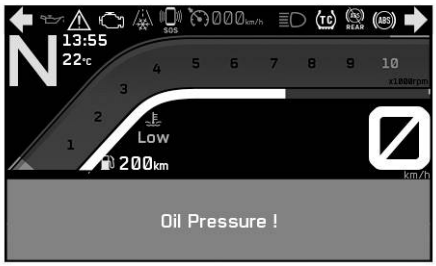


I00700-10

Warnings appear in the middle of the display; these are marked yellow or red depending on their relevance.
Yellow warnings indicate a malfunction or information which requires prompt intervention or an adjustment to the riding style.
Red warnings indicate a malfunction or information which requires immediate intervention.

Info
Warnings can be hidden by pressing any button.
All the existing warnings are displayed in the **Warning** sub-menu until they are no longer active.

7.5 Indicator lamps

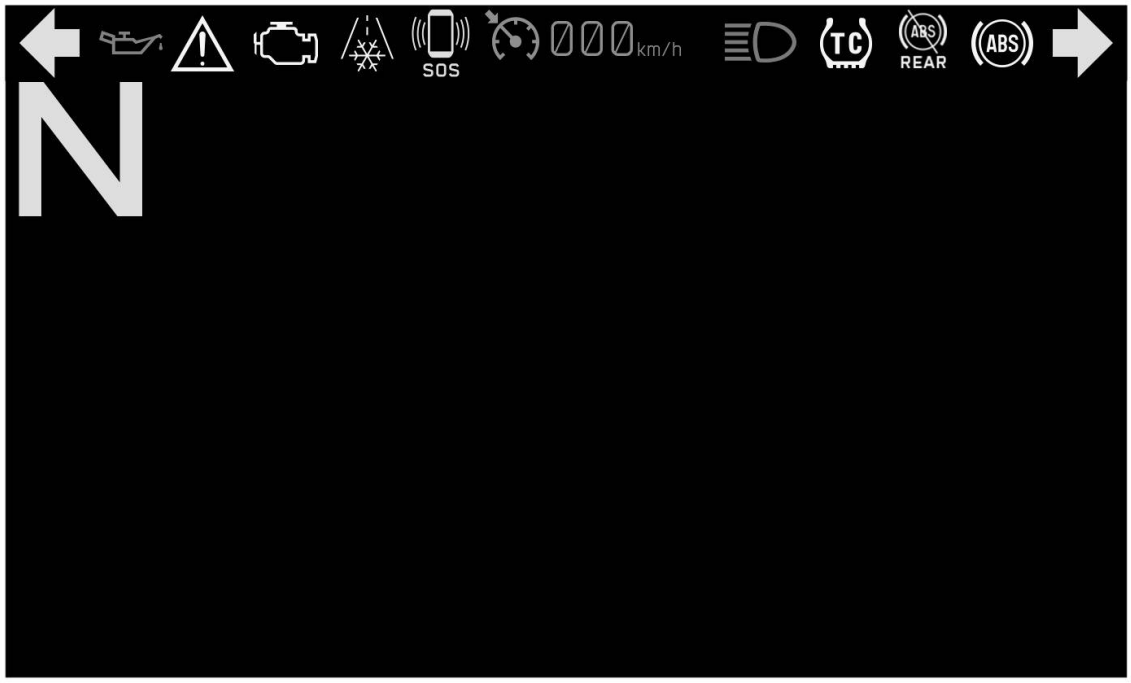

I00701-10

The indicator lamps offer additional information about the operating state of the motorcycle.
When the ignition is switched on, all indicator lamps light up briefly, except for the TC indicator lamp .

Info

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.


The oil pressure warning lamp always lights up as long as the engine is not running. If the engine is running and the oil pressure warning lamp lights up, stop immediately (taking care not to endanger yourself or other road users in the process) and switch off the engine.

The ABS warning lamp and TC indicator lamp light up until a speed of approx. 6 km/h (approx. 4 mph) or faster has been reached.

Possible states


	The turn signal indicator lamp flashes green with a steady rhythmic flash – The turn signal is switched on.
	The malfunction indicator lamp lights up yellow – The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop.
	ABS warning lamp lights up yellow – Status or error messages relating to ABS.
	The ABS rear warning lamp lights up yellow – ABS is deactivated on the rear wheel.
	The idle indicator lamp lights up green – The transmission is in neutral.
	TC indicator lamp lights up/flashes yellow – **MTC** (p. 135) is not enabled or is currently intervening. The TC indicator lamp also lights up if a malfunction is detected. Contact an authorized KTM workshop. The TC indicator lamp flashes if **MTC** makes an active intervention.
	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.
	The alarm system indicator lamp lights up or flashes red – Status or error message of the alarm system.
	The cruise control system indicator lamp (optional) lights up yellow – The cruise control system function is switched on, but cruise control is not activated.
	The cruise control system indicator lamp (optional) lights up green – The cruise control system function is switched on and cruise control is activated.
	The high beam indicator lamp lights up blue – The high beam is switched on.
	The general warning lamp lights up yellow – A note/warning note on operating safety has been detected. This is also shown in the display.

7.6 Display

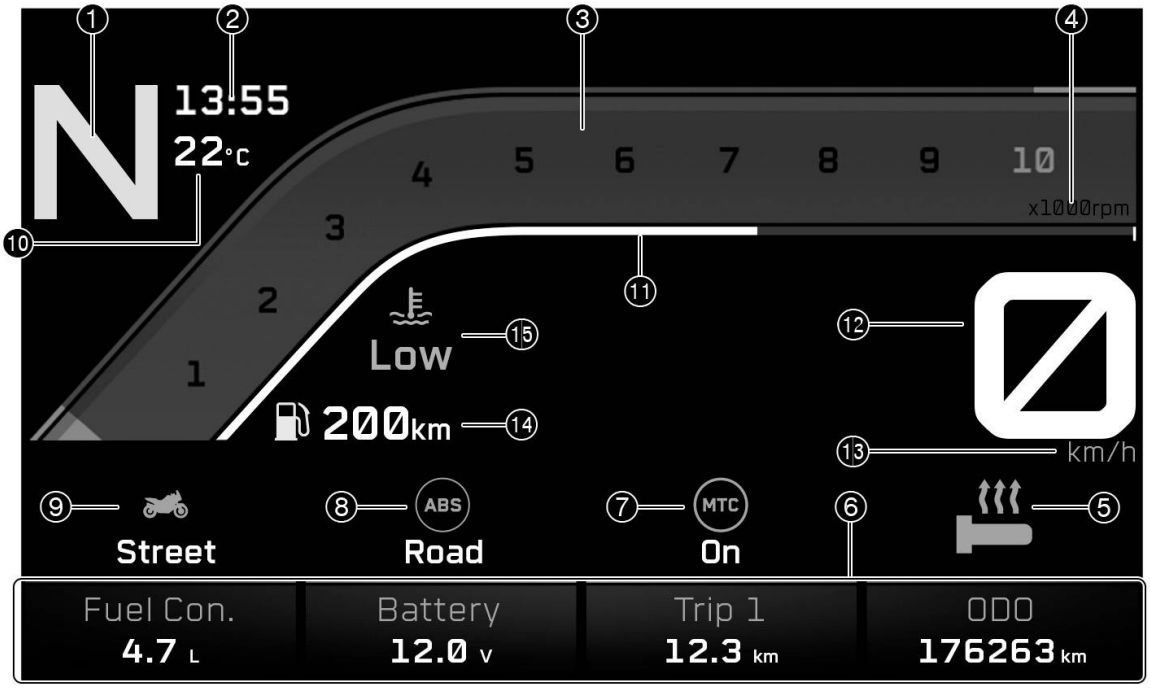

❶ Gear display
❷ Time (📖 p. 37)
❸ Engine speed (📖 p. 36)
❸ Shift warning light (📖 p. 36)
The shift warning light is integrated in the tachometer display.
❹ Unit for the engine speed display
❺ Heated grip (optional) (📖 p. 39)
❻ **Favorites** display (📖 p. 39)
❼ **MTC** display (📖 p. 38)
❽ **ABS** display (📖 p. 38)
❾ **Ride-Mode** display (📖 p. 38)
❿ Ambient air temperature indicator (📖 p. 37)
⓫ Fuel level display (📖 p. 39)
⓬ Speedometer (📖 p. 37)
⓭ Unit for the speedometer
⓮ Fuel range display
⓯ Coolant temperature indicator (📖 p. 38)


7.7 Performance display (optional)

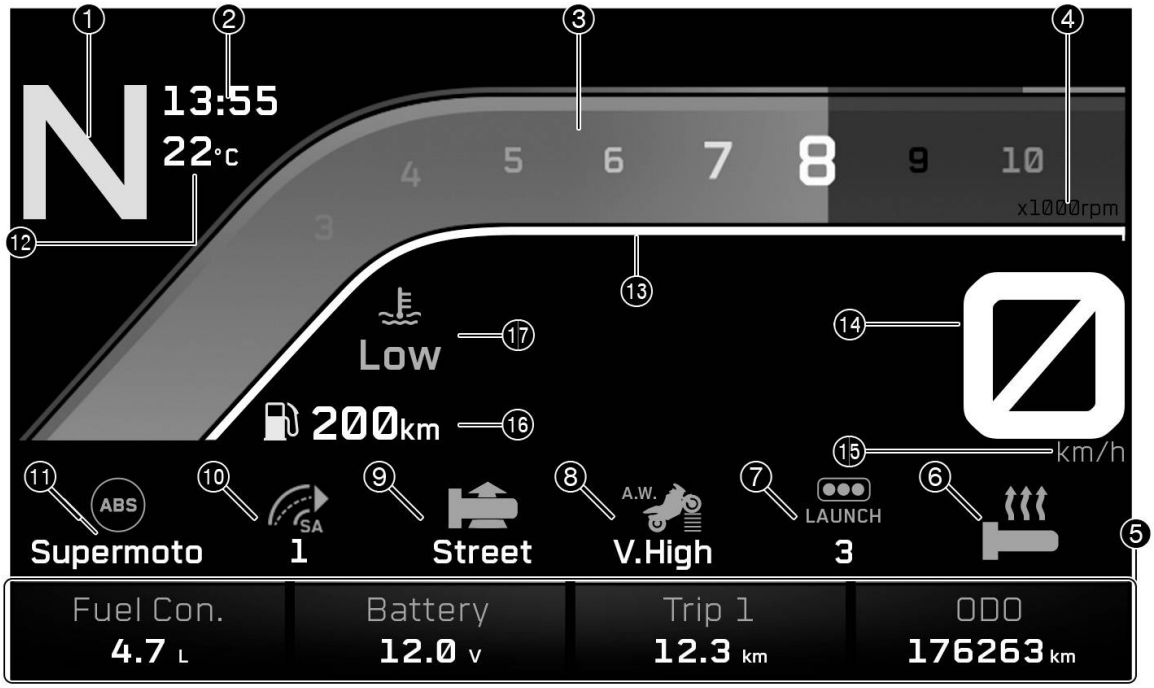

Info
The figure shows the start screen of the combination instrument when the **Performance** riding mode (optional) is active. If the menu is open, the speed and the selected gear are still displayed.

1. Gear display
2. Time (p. 37)
3. Engine speed (p. 36)
3. Shift warning light (p. 36)
   The shift warning light is integrated in the tachometer display.
4. Unit for the engine speed display
5. **Favorites** display (p. 39)
6. Heated grip (optional) (p. 39)
7. Launch control (optional)
8. Anti wheelie mode (optional)
9. Throttle response (optional)
10. Slip adjuster (optional)
11. **ABS** display (p. 38)
12. Ambient air temperature indicator (p. 37)
13. Fuel level display (p. 39)
14. Speedometer (p. 37)
15. Unit for the speedometer
16. Fuel range display
17. Coolant temperature indicator (p. 38)

7.8 Track display (optional)

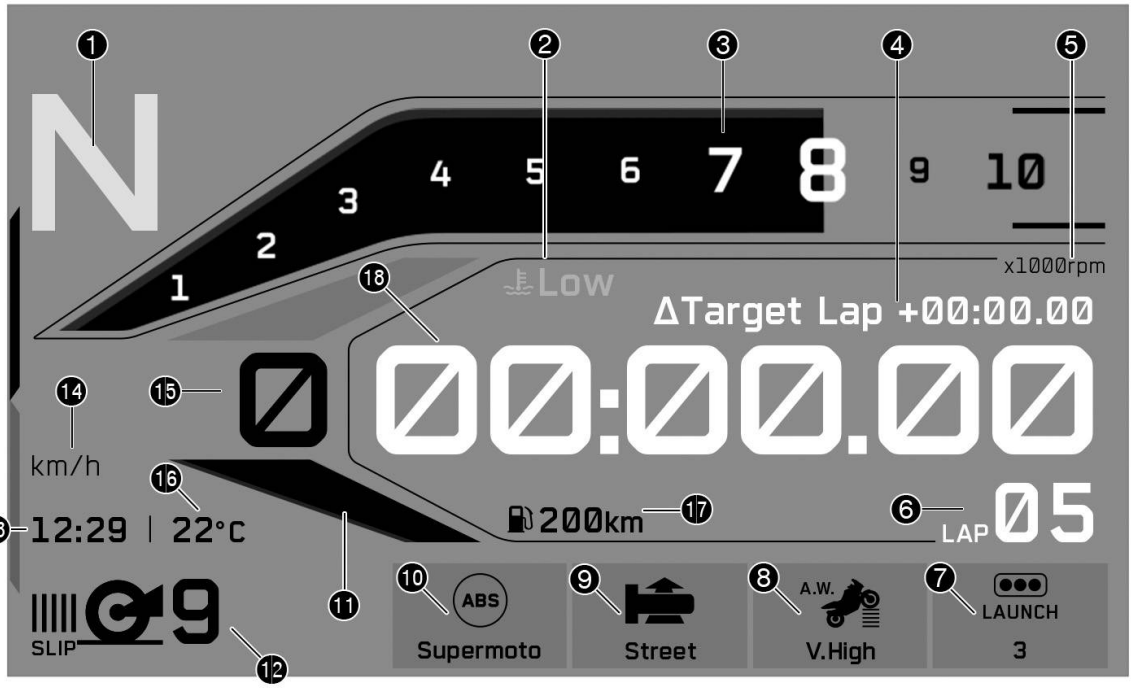


Info
The figure shows the start screen of the combination instrument when the **TRACK** riding mode (optional) is active. If the menu is open, the speed and the selected gear are still displayed.

1. Gear display
2. Coolant temperature indicator (📖 p. 38)
3. Engine speed (📖 p. 36)
3. Shift warning light (📖 p. 36)
   The shift warning light is integrated in the tachometer display.
4. Delta for target lap, best lap or last lap
5. Unit for the engine speed display
6. Lap indicator
7. Launch control (optional)
8. Anti wheelie mode (optional)
9. Throttle response (optional)
10. **ABS** display (📖 p. 38)
11. Fuel level display (📖 p. 39)
12. Slip adjuster (optional)
13. Time (📖 p. 37)
14. Unit for the speedometer
15. Speedometer (📖 p. 37)
16. Ambient air temperature indicator (📖 p. 37)
17. Fuel range display

⓲ Lap time (optional)


7.9 Telemetry display (optional)

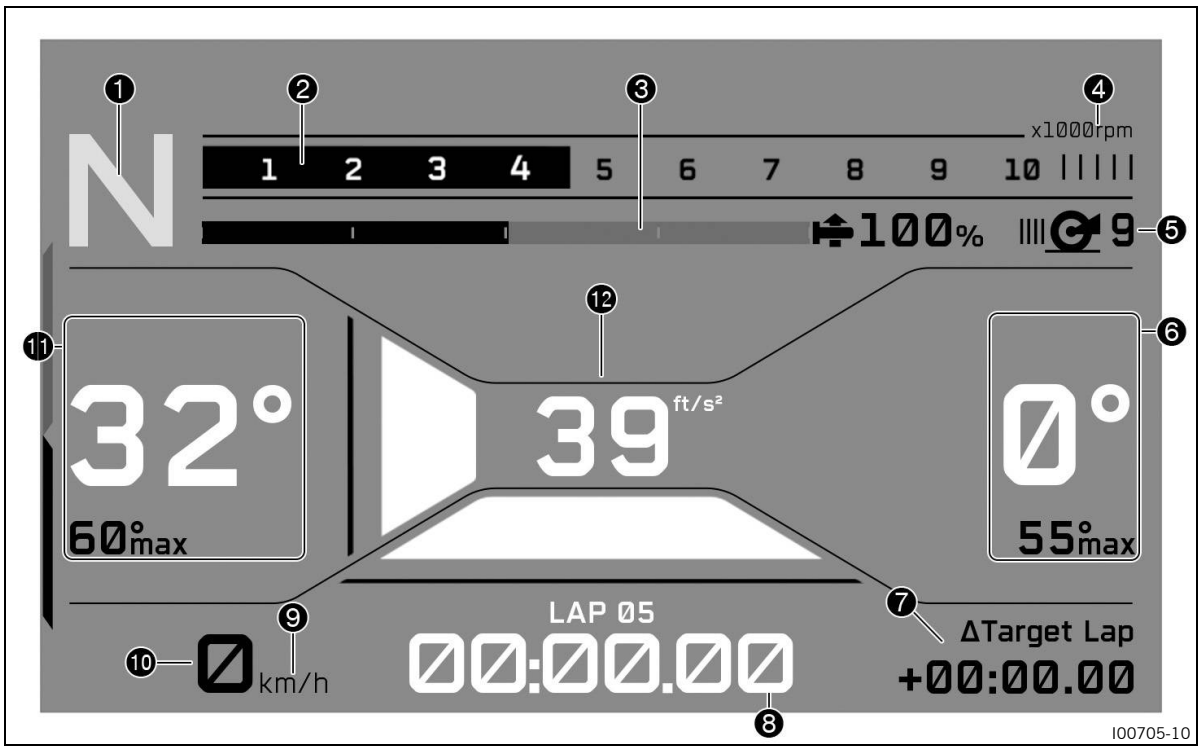

Info
The figure shows the start screen of the combination instrument when the **TRACK** riding mode (optional) is active. If the menu is open, the speed and the selected gear are still displayed.


❶ Gear display
❷ Engine speed (📖 p. 36)
❷ Shift warning light (📖 p. 36)
The shift warning light is integrated in the tachometer display.
❸ Throttle response (optional)
❹ Unit for the engine speed display
❺ Slip adjuster (optional)
❻ Lean angle right (optional)
❼ Delta for target lap, best lap or last lap
❽ Lap time (optional)
❾ Unit for the speedometer
❿ Speedometer (📖 p. 37)
⓫ Lean angle left (optional)
⓬ Acceleration indicator (optional)

7.10 Engine speed

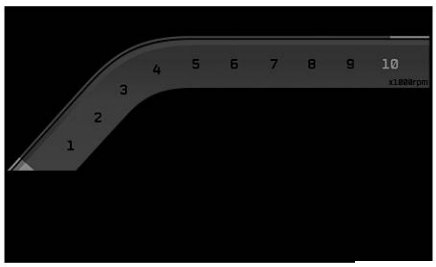

I00706-10


The engine speed is displayed in revolutions per minute.

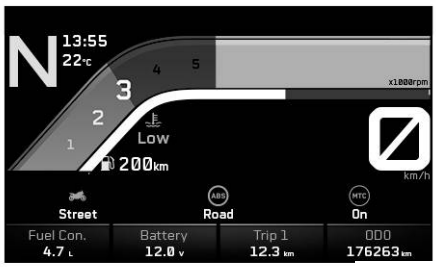


I00832-10

While the motorcycle is not at operating temperature, the maximum engine speed is limited to 6500 rpm. On the combination instrument, the speed range after 6500 rpm has a blue background.

7.11 Shift warning light

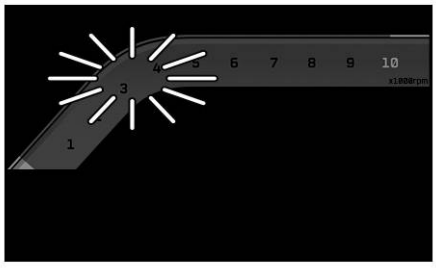

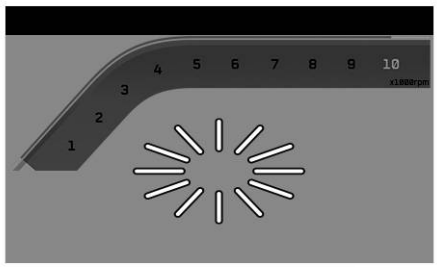

I00707-10


The shift warning light is integrated in the display.
In the **Shift Light** submenu, the engine speed for the shift warning light can be set. The shift warning light is always active during the running-in time (up to 1000 km / 621 mi). The shift warning light can only be deactivated, and the values for **RPM1** and **RPM2** can only be adjusted after this. At **RPM1**, the engine speed display flashes and at **RPM2**, the display flashes.

Info
After the first service, the shift warning light is deactivated when the engine is warm and in sixth-gear.

Coolant temperature	≤ 35 °C (≤ 95 °F)
ODO	< 1,000 km (< 620 mi)
The shift warning light always flashes at	6,500 rpm

Coolant temperature	> 35 °C (> 95 °F)
ODO	> 1,000 km (> 620 mi)
RPM1 shift warning light	the speed indicator flashes
RPM2 shift warning light	the display flashes


7.12 Speedometer

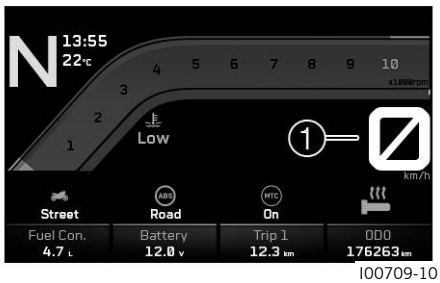

I00709-10

The speed is shown in area ❶ of the display.
Speed is shown in kilometers per hour **km/h** or in miles per hour **mph**.
The unit of speed can be configured in the **Distance** submenu.

7.13 Cruise control indicator (optional)

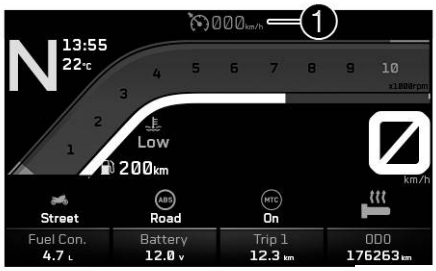


I00710-10

The operating state of the active cruise control is shown in the area ❶ of the display.
Cruise control is operated using the cruise control tip switch.

Info
If the cruise control system function is switched on but cruise control is not activated, the cruise control system indicator lamp lights up yellow.
If the cruise control system function is switched on and cruise control is activated, the cruise control system indicator lamp lights up green.

7.14 Time

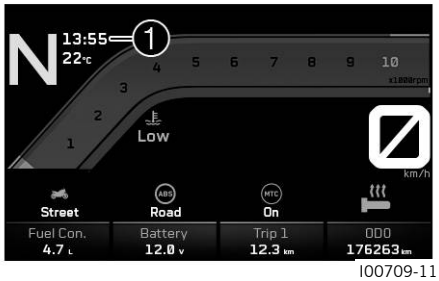


I00709-11

The time is shown in area ❶ of the display.
The time can be displayed in 24-hour format or 12-hour format in all languages.
The format of the time can be configured in the **Clock Format** menu.

Info
The time must be reset if the 12-V battery was disconnected from the vehicle or the fuse was removed.


7.15 Ambient air temperature indicator

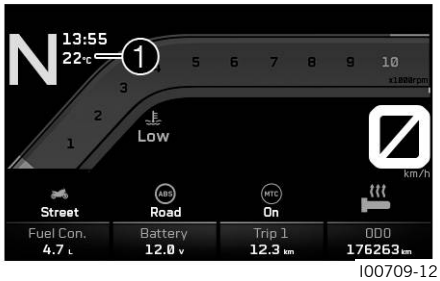

I00709-12

The ambient temperature is shown in area ❶ of the display.
The ambient air temperature is displayed in **°C** or **°F**.
The unit of the ambient air temperature can be configured in the **Temperature** submenu.


7.16 Ride-Mode display

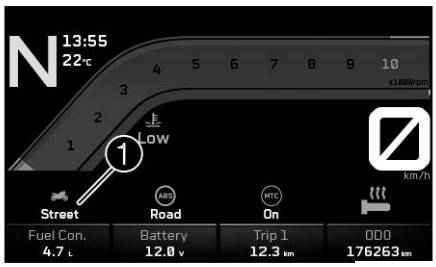

I00709-13

The **Ride Mode** (📖 p. 135) setting is shown in area ❶ of the display.
The drive mode can be configured in the **Ride Mode** submenu.

7.17 ABS display

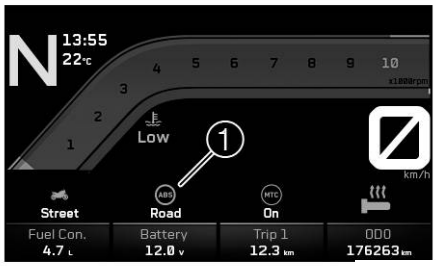


I00709-14

The ABS mode setting is shown in the ❶ area of the display.
ABS can be configured separately in the **ABS** submenu.

Info
When the ABS mode **Road** is active, ABS controls both wheels.
When the **Supermoto** ABS mode is active, ABS only controls the front wheel. The rear wheel is not controlled by ABS and may lock during braking maneuvers.


7.18 MTC display

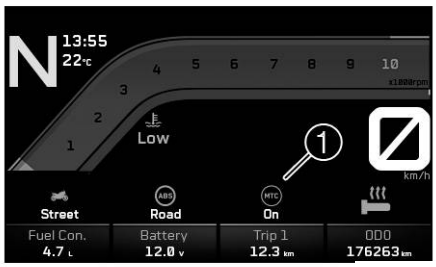

I00709-15

The ❶ area of the display indicates whether **MTC** (📖 p. 135) is switched on or off.
The motorcycle traction control can be switched on or off in the **MTC** submenu.

7.19 Coolant temperature indicator

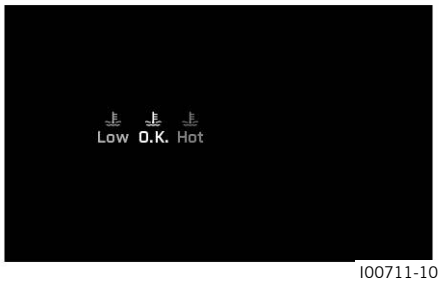

I00711-10

The coolant temperature is displayed by a symbol. The symbol changes between **LOW**, **OK** and **HOT** depending on the temperature.

Note

Engine failure Overheating damages the engine.

– If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
– Allow the engine and cooling system to cool down.
– Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.

Info


If the coolant temperature indicator shows **HOT**, the display also starts to flash and a warning is displayed.

If the cooling system overheats, the maximum engine speed is limited.

Possible states

- The engine is cold – The coolant temperature indicator shows **LOW**.
- Engine warm – The coolant temperature indicator shows **OK**.
- Engine hot – The coolant temperature indicator shows **HOT**.

7.20 Fuel level display

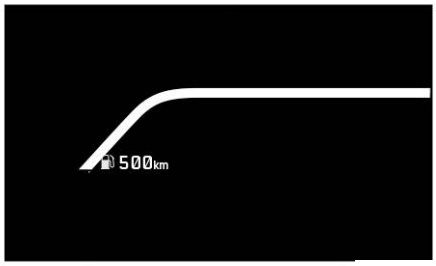

I00712-10

The fuel level display consists of the fuel range display and a bar. The higher the bar is filled, the more fuel is in the fuel tank

Info

If the fuel level is getting low, the last segment flashes red and the following warning **LOW FUEL** also appears.


The fuel level is displayed with a slight delay to prevent the indicator from constantly moving while riding.

The fuel level display is not updated while the side stand is folded out or the emergency OFF switch is switched off.

Once the side stand is folded up and the emergency OFF switch is switched on, the fuel level display is next updated after 2 minutes.

The fuel level display flashes if the combination instrument does not receive a signal from the fuel level sensor.


7.21 Heated grip (optional)

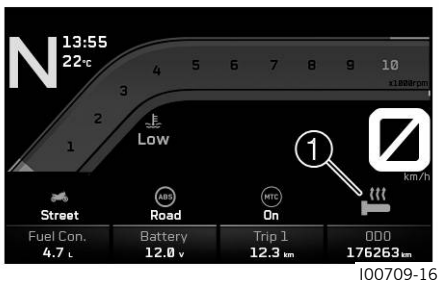

I00709-16

The status of the heated grip is shown in area ❶ of the display. The heated grip can be configured in the **Heated Grip** menu.

7.22 Favorites display

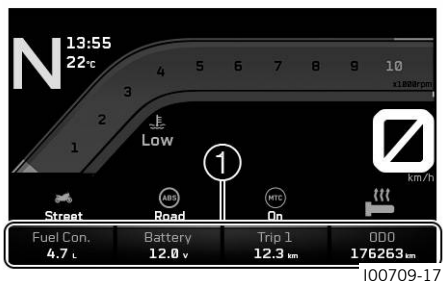

I00709-17

Up to four items of information are displayed in the **Favorites** display ❶.

The **Favorites** indicator can be freely configured in the **Favorites** submenu.

7.23 Custom Switch display




I00812-10

Pressing the **C1** or **C2** button calls up the configured menu.
Press the **BACK** button to close the **Custom Switch** display.

Info
The **Custom Switch** display can be configured in the **Settings** menu under **Custom Switch**. Any information can be selected.

7.24 Navigation display (optional)

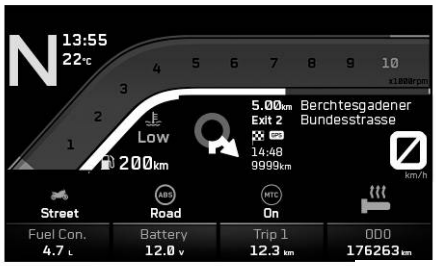


I00714-10

The **Navigation** display (optional) appears when the navigation function is activated.
In the **Navigation** display (optional), the direction arrow, the distance from the destination, the estimated arrival time of the cellphone, the distance to the next waypoint, and the street name are displayed.
The **Navigation** display (optional) can be switched on or off in the **Navigation** submenu (optional).

Conditions for use:
– The combination instrument is connected to a suitable phone.
– The **KTMconnect** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).

7.25 Call display

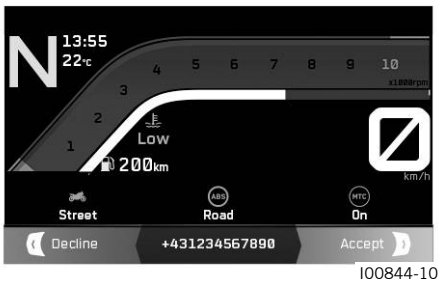

I00844-10

Warning
Danger of accidents Headphone volume which is too high distracts attention from traffic activity.
– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.


The **Call** indicator appears for incoming or active calls.
Press the **RIGHT** button to accept an incoming call.
Press the **LEFT** button to reject an incoming call.
Press the **UP** button to increase the audio volume.
Press the **DOWN** button to reduce the audio volume.

Info
It is not possible to change the audio volume using the combination switch with every cellphone.
The call duration and contact are displayed. Depending on the cellphone settings, the contact is shown by name.
You cannot navigate in the menu during an active phone conversation.

Conditions for use:

– The combination instrument is connected to a suitable phone.

7.26 Menu

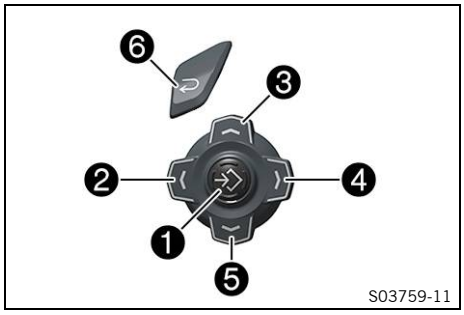

S03759-11


Info

Press the **SET** button ❶ in the start screen to open the menu.

Use the **LEFT** button ❷, the **UP** button ❸, the **RIGHT** button ❹ and the **DOWN** button ❺ to navigate in the menu.

Press the **BACK** button ❻ to close the current menu or the menu overview.

7.26.1 Lap Timer

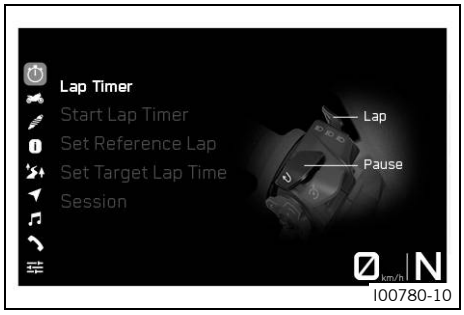

I00780-10

Condition


- Riding mode **TRACK** activated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Lap Timer** is highlighted. Press the **SET** button to open the menu.

The timed laps can be displayed and reference laps can be set in the **Lap Timer** menu.

7.26.2 Lap Timer Settings

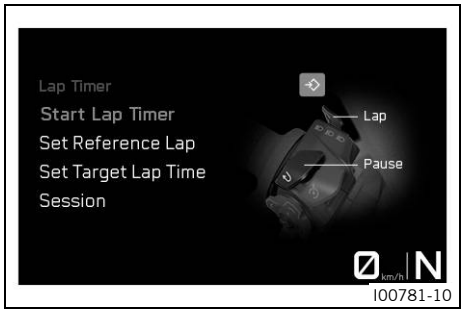

I00781-10

Condition


- Riding mode **TRACK** activated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Lap Timer** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Lap Timer Settings** is highlighted. Press the **RIGHT** or **LEFT** button to switch **Lap Timer** on and off.

7.26.3 Set Reference Lap

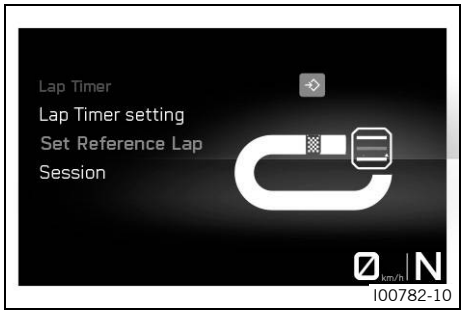

I00782-10

Condition


- Riding mode **TRACK** activated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Lap Timer** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Set Reference Lap** is highlighted. A reference lap can be set.

7.26.4 Set Target Lap Time

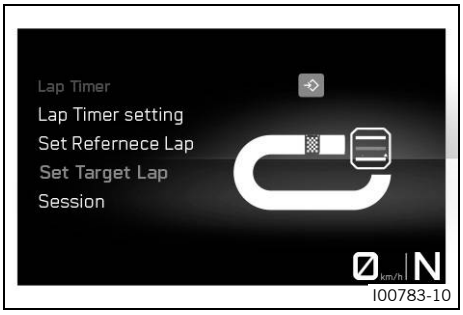

I00783-10

Condition


- Riding mode **TRACK** activated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Lap Timer** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Set Target Lap Time** is highlighted. A target lap can be set.

7.26.5 Session

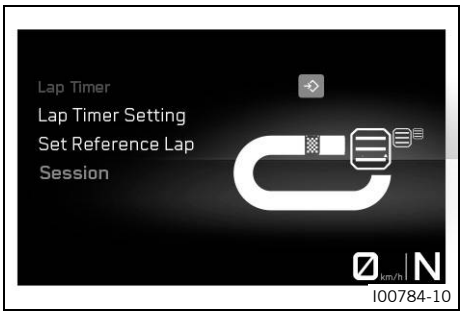

I00784-10

Condition


- Riding mode **TRACK** activated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Lap Timer** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Session** is highlighted. All lap times are displayed here.

7.26.6 Motorcycle

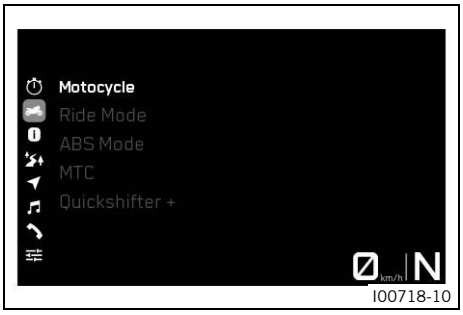

I00718-10

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

In **Motorcycle**, motorcycle-relevant settings can be made, such as the riding mode, ABS mode, slip adjustment and MTC.

7.26.7 Ride Mode



I00785-10

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

Warning

Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.

The riding modes are each only suitable for certain conditions.

– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.


– Press the **UP** or **DOWN** button until **Ride Mode** is marked. Press the **SET** button to open the menu.

– Activate the menu item using the **RIGHT** or **LEFT** button.

– Press the **SET** button to select the riding mode, which changes coordinated settings for the engine and motorcycle traction control.
  - ✓ **Street** - Homologated performance with balanced response; the motorcycle traction control allows normal slip on the rear wheel.
  - ✓ **Rain** - Reduced homologated performance for better ridability; the motorcycle traction control allows less slip on the rear wheel.
  - ✓ **Sport** - Homologated performance with very direct response; the motorcycle traction control allows greater slip on the rear wheel.
  - ✓ **Track** (optional) - Throttle response and motorcycle traction control can be adjusted individually.
  - ✓ **Performance** (optional) - Throttle response and motorcycle traction control can be adjusted individually.

The riding mode of the vehicle can be configured in the **Ride Mode** menu.

7.26.8 Slip Adjuster (optional)

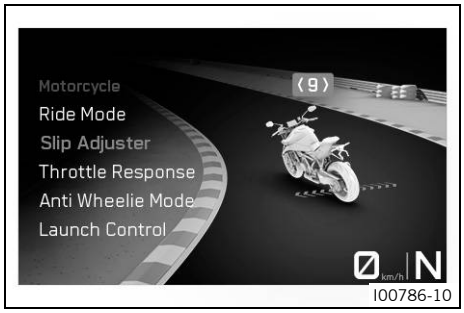

I00786-10

Condition

- The **Track** riding mode (optional) or **Performance** (optional) is activated.
- **MTC+MSR** is activated.

– Press the **SET** button when the menu is closed.

Warning
Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.

The riding modes are each only suitable for certain conditions.

– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

– Press the **UP** or **DOWN** button until **Motorcycle** is marked on the display. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Slip Adjuster** is highlighted. Press **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to set the maximum permitted slip of the motorcycle traction control.


Info
Do not open the throttle during the selection.

The spin adjuster is a motorcycle traction control function.
The slip adjustment allows the motorcycle traction control to be tuned through nine levels to the desired characteristic map.
Level 0 allows the maximum slip on the rear wheel, and level 9 the minimum.
If the cruise control function is deactivated, the **RIGHT** and **LEFT** buttons or the **+RES** and **-SET** buttons in the main display or in the **Slip Adjuster** menu can be used to set the **Slip Adjuster**.

Info
The slip adjustment is only available in **Track** riding mode (optional) or **Performance**(optional).
The slip adjustment is only available when motorcycle traction control is activated.

Press and hold the **LEFT** button or **-SET** button for approximately 2 seconds.	Slip adjustment level 0 is activated.

7.26.9 Throttle Response (optional)

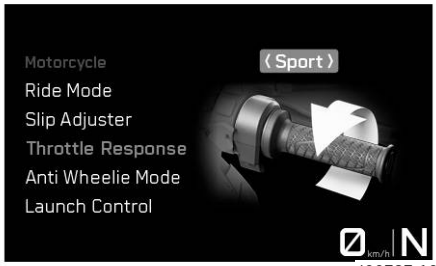

I00787-10

Condition

- The **Track** riding mode (optional) or **Performance** (optional) is activated.

– Press the **SET** button when the menu is closed.

Warning
Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.


The riding modes are each only suitable for certain conditions.

– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

– Press the **UP** or **DOWN** button until **Motorcycle** is marked on the display. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Throttle Response** is marked on the display. Press the **SET** button to open the submenu.
– The characteristic map of the throttle response can be adjusted by pressing the **RIGHT** or **LEFT** button.
  ✔ Street – balanced response.
  ✔ Sport – extremely direct response.
  ✔ Track – very direct response.

Info
Do not open the throttle when adjusting the throttle response.

7.26.10 Engine Brake Control (optional)

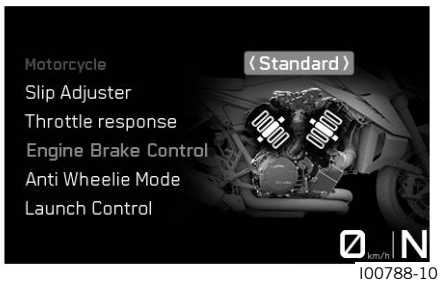

I00788-10

Condition

- The **Track** riding mode (optional) or **Performance** (optional) is activated.

– Press the **SET** button when the menu is closed.

Warning
Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.

The riding modes are each only suitable for certain conditions.


– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

– Press the **UP** or **DOWN** button until **Motorcycle** is marked on the display. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Engine Brake Control** is marked. Press the **SET** button to open the menu.

– The **Engine Brake Control** can be adjusted by pressing the **RIGHT** or **LEFT** button.

7.26.11 Anti Wheelie Mode (Optional)

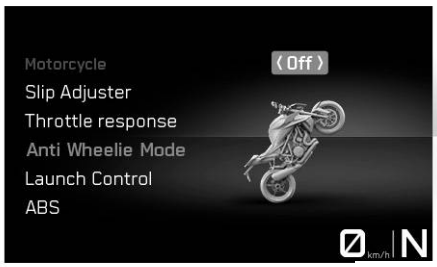

I00789-10

Condition

- The **Track** riding mode (optional) or **Performance** (optional) is activated.

– Press the **SET** button when the menu is closed.

Warning
Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.

The riding modes are each only suitable for certain conditions.

– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

– Press the **UP** or **DOWN** button until **Motorcycle** is marked on the display. Press the **SET** button to open the menu.


Warning
Danger of accidents When Anti Wheelie Mode is disabled, the motorcycle traction control no longer counteracts the raising of the front wheel.

– Only switch off the Anti Wheelie Mode if you have the appropriate experience.

– Press the **UP** or **DOWN** button until **Anti Wheelie Mode** is highlighted. Press the **SET** button to open the menu.

– The **Anti Wheelie Mode** can be adjusted by pressing the **RIGHT** or **LEFT** button.

7.26.12 Launch Control (optional)

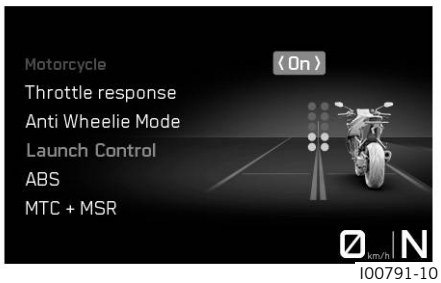

I00791-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Launch Control** is highlighted. Press the **SET** button to open the submenu.
– Use the **RIGHT** or **LEFT** button to switch **Launch Control** on or off.

7.26.13 ABS



I00792-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **ABS** is highlighted. Press the **SET** button to open the submenu.

Warning

Danger of accidents An incorrectly selected ABS mode makes control of the vehicle considerably more difficult.

The ABS modes are each only suitable for certain conditions.


– Always select an ABS mode that is compatible with the surface of the ground.

– Press the **RIGHT** or **LEFT** button to select the desired ABS mode.

Info

The ABS mode can be switched during the journey.
Do not open the throttle during the selection.
When the ABS mode **Road** is active, ABS controls both wheels.
When the **Supermoto** ABS mode is active, ABS only controls the front wheel. The rear wheel is no longer controlled by ABS and may lock during braking maneuvers. The indicator lamp **ABS REAR** lights up.

7.26.14 MTC

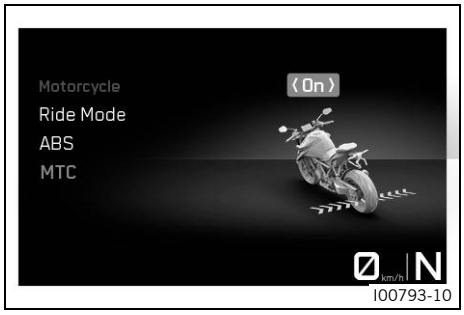

I00793-10

Condition

- Speed limiter function deactivated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **MTC** is highlighted. Press the **SET** button to open the submenu.

– Use the **RIGHT** or **LEFT** button to switch **MTC** on or off.

Info


Do not open the throttle when switching on or off.

Press the **SET** button briefly when activating the motorcycle traction control.

Hold down the **SET** button when switching off the motorcycle traction control.

After the ignition is switched on, motorcycle traction control is enabled again.

7.26.15 MTC+MSR (optional)

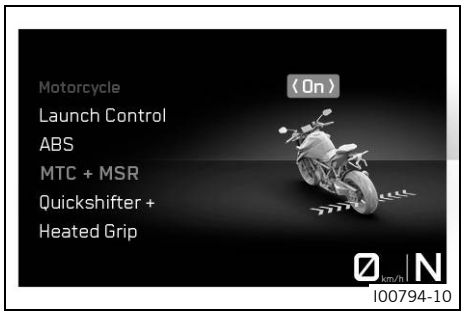

I00794-10

Condition

- Model with **MTC+MSR**.
- Cruise control system function (optional) deactivated.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **MTC+MSR** is highlighted. Press **SET** button to open the menu.

– Use the **RIGHT** or **LEFT** button to switch **MTC+MSR** on or off.

Info

Do not open the throttle when switching on or off.


Press the **SET** button briefly when activating the motorcycle traction control and the engine traction torque control.

Hold down the **SET** button when switching off the motorcycle traction control and engine traction torque control.

When ABS mode **Supermoto** is active, the **MSR** is not active.

After the ignition is switched on, the motorcycle traction control and engine traction torque control are enabled again.

7.26.16 QUICKSHIFTER+ (optional)

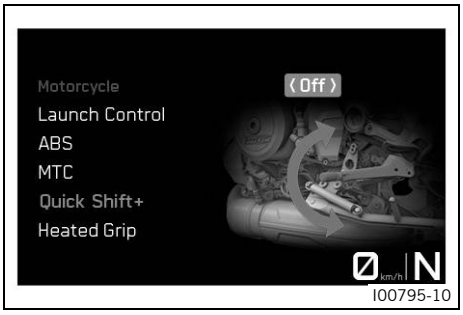

I00795-10

Condition

- Model with QUICKSHIFTER+.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **QUICKSHIFTER+** is highlighted. Press the **SET** button to open the submenu.

– Use the **RIGHT** or **LEFT** button to switch QUICKSHIFTER+ on or off.

7.26.17 Grip Heating (optional)



I00796-10

Condition

- Model with heated grip.
- **Heated Grip** menu (optional) activated in Settings.

– Press the **SET** button when the menu is closed.


– Press the **UP** or **DOWN** button until **Motorcycle** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Heating** is highlighted. Press **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Grip Heating** is highlighted. Press **SET** button to open the menu.

– Press the **RIGHT** or **LEFT** button to select the heating level or to switch the heated grip on or off.

7.26.18 Bike Info

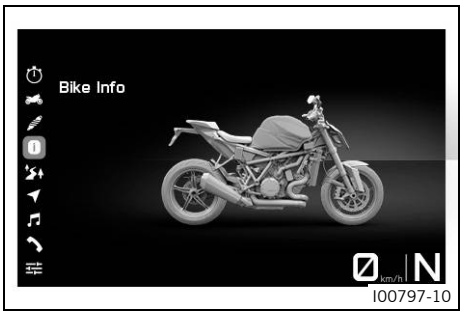


I00797-10

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press the **SET** button to open the menu.

General information and warnings that may be present can be called up in **Bike Info**.

7.26.19 Bike Info

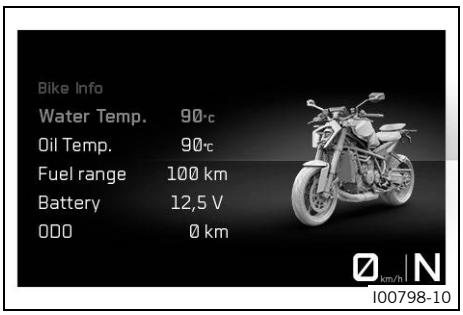

I00798-10

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press **SET** button to open the menu.

TPMS Front (optional) shows the current tire pressure of the front tire.

TPMS Rear (optional) shows the current tire pressure of the rear tire.


Info

The set reference value is displayed on the right of the current tire pressure in parentheses.

The tire pressure monitoring system display mode can be set in the **TPMS Mode** (optional) menu.

Water displays the coolant temperature.
Oil Temperature displays the engine oil temperature.
Fuel Range displays the possible distance you can cover with the fuel reserve.
Battery displays the battery voltage.
Odometer displays the total distance covered.
Service displays when the next service is due.
Warnings displays warnings that have occurred until they are no longer active.

7.26.20 Warning

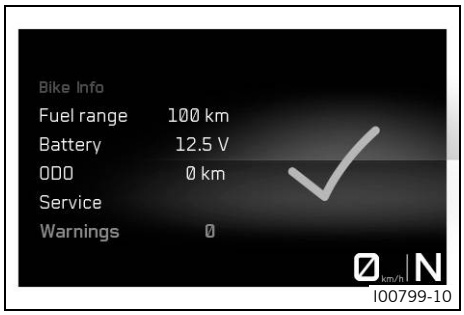

I00799-10

Condition

- Message or warning is present.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Bike Info** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Warning** is highlighted. Press the **SET** button to open the submenu.
– Use the **UP** or **DOWN** button to navigate through the warnings.

Info
The warnings that have occurred are saved in the display until they are no longer active.

7.26.21 Trip Info



I00801-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Trip** is highlighted. Press the **SET** button to open the menu.

General information on the odometer, riding time, average fuel consumption, and average speed can be accessed in the menu **Trip**.

7.26.22 Trip 1





I00802-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Trip** is highlighted. Press **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button until **Trip 1** is marked. Press the **SET** button to open the submenu.

Information on **Trip 1** can be viewed in the **Trip 1** submenu.

Info

Trip displays the distance since the last reset, e.g. between two refueling stops. **Trip** is running and counts up to **9999**.
Trip Time shows the riding time on the basis of **Trip** and runs as soon as a speed signal is received.
ØConsump. indicates the average fuel consumption based on **Trip**.
ØSpeed indicates the average speed based on **Trip** and **Trip Time**.
Press **Reset Trip** to reset all entries in the **Trip 1** menu.

7.26.23 Trip 2





I00803-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Trip** is highlighted. Press **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button until **Trip 2** is marked. Press the **SET** button to open the submenu.

Information on **Trip 2** can be viewed in the **Trip 2** submenu.

Info

Trip displays the distance since the last reset, e.g. between two refueling stops. **Trip** is running and counts up to **9999**.
Trip Time shows the riding time on the basis of **Trip** and runs as soon as a speed signal is received.
ØConsump. indicates the average fuel consumption based on **Trip**.
ØSpeed indicates the average speed based on **Trip** and **Trip Time**.
Press **Reset Trip** to reset all entries in the **Trip 2** menu.

7.26.24 Navigation (Optional)



I00804-10

Condition

- **Bluetooth®** function is activated.
- The **KTMconnect** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).
- The combination instrument is connected to a suitable phone.
- The GPS function is activated on the connected phone.
- For voice navigation: the combination instrument is connected to a suitable communication system and an appropriate language package has been downloaded in the **KTMconnect Navigation** app (optional).

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.

7.26.25 Skip Waypoint (optional)



I00759-10

Condition

- **Bluetooth®** function is activated.
- The **KTMconnect** app (optional) is installed and opened on a suitable cellphone.
- The combination instrument is connected to a suitable phone.
- The GPS function is activated on the connected phone.
- Navigation with at least one interim destination has been started in the **KTMconnect** app (optional).


– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.

– Press the **UP** or **DOWN** button until **Skip Waypoint** is marked. Press the **SET** button to select the waypoint.

– Press the **SET** button again to confirm the selection and the waypoint is removed.

7.26.26 Last search (optional)

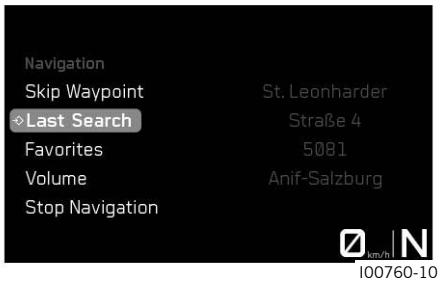

I00760-10

Condition

- **Bluetooth®** function is activated.
- The **KTMconnect** app (optional) is installed and opened on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 13 and higher).
- The combination instrument is connected to a suitable phone.
- The GPS function is activated on the connected phone.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.

– Press the **UP** or **DOWN** button until **Last Search** is marked. Press the **SET** button to open the submenu.

– Press **UP** or **DOWN** button to select an address.

– Press the **SET** button to confirm the selection and start navigation.

Info
The last 10 addresses searched for in the **KTMconnect** app (optional) are saved in **Last Search**.

7.26.27 Favorites (optional)




I00761-10

Condition
- **Bluetooth®** function is activated.
- The **KTMconnect** app (optional) is installed and opened on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 13 and higher).
- The combination instrument is connected to a suitable phone.
- The GPS function is activated on the connected phone.
- Favorites are saved in the **KTMconnect** app (optional).

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Favorites** is marked. Press the **SET** button to open the submenu.
– Press **UP** or **DOWN** button to select an address.
– Press the **SET** button to confirm the selection and start navigation.

Info
10 addresses in the **KTMconnect** app (optional) can be stored in **Favorites**.

7.26.28 Volume (optional)

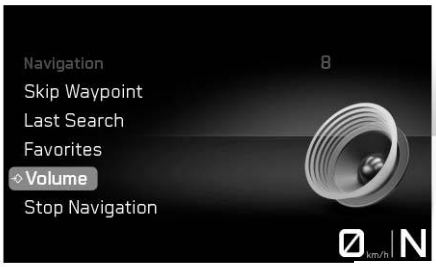

I00762-10

Condition
- The **KTMconnect** app (optional) is installed and connected on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 14 and higher).
- The combination instrument is connected to a suitable phone.
- For voice navigation: the combination instrument is connected to a suitable communication system and an appropriate language package has been downloaded in the **KTMconnect** app (optional).

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.

Warning
Danger of accidents Headphone volume which is too high distracts attention from traffic activity.
– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

– Press the **UP** or **DOWN** button until **Volume** is marked. Press the **SET** button to open the submenu.
– Press the **UP** button to increase the volume of the activated voice navigation.
– Press the **DOWN** button to reduce the volume of the activated voice navigation.

7.26.29 Stop Navigation (optional)



I00763-10

Condition

- **Bluetooth®** function is activated.
- The **KTMconnect** app (optional) is installed and opened on a suitable cellphone (Android devices Version 7.0 and higher, iOS devices Version 13 and higher).
- The combination instrument is connected to a suitable phone.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Navigation** is marked. Press the **SET** button to open the submenu.

– Press the **UP** or **DOWN** button until **Stop Navigation** is marked. Press the **SET** button to confirm the selection.

– Press the **SET** button again to confirm the selection and end navigation.

7.26.30 Audio



I00805-10

Condition

- **Bluetooth®** function is activated.
- The combination instrument is connected to a suitable phone.
- The combination instrument is connected to a suitable communication system or the **Headset Type Corded** is selected.

– Press the **SET** button when the menu is closed.

Warning

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

– Press the **UP** or **DOWN** button until **Audio** is highlighted. Press the **SET** button to open the submenu.

– Press the **UP** button to increase the audio volume.

– Press the **DOWN** button to reduce the audio volume.

– Press the **RIGHT** button change to the next audio track.

– Pressing the **LEFT** button changes to the previous audio track or plays the current audio track from the start, depending on the cellphone model.

– Press **SET** button to play or pause the audio track.

Info

With some cellphones, the audio player needs to be started before playback is possible.

The **Audio** function can be added to **C1** or **C2** for easier operation.

7.26.31 Call



I00806-10

Warning
Danger of accidents Headphone volume which is too high distracts attention from traffic activity.
– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.


– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Call** is highlighted. Press the **SET** button to open the menu.

Info
It is not possible to change the audio volume using the combination switch with every cellphone.
The call duration and contact are displayed. Depending on the cellphone settings, the contact is shown by name.
If necessary, accessing contacts must be enabled on the cellphone.
You cannot navigate in the menu during an active phone conversation.

– Press the **RIGHT** button to accept an incoming call.
– Press the **LEFT** button to reject an incoming call.
– Press and hold **UP** button to increase the audio volume.
– Press and hold **DOWN** button to reduce the audio volume.

The last calls and favorites can be called up in the **Call** menu.

7.26.32 Last Calls

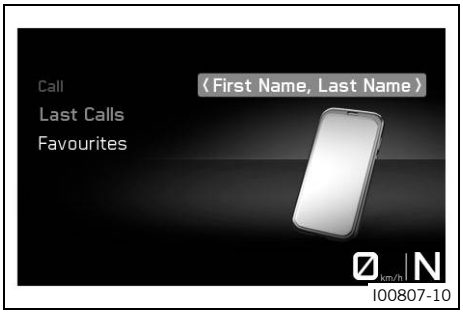

I00807-10

Warning
Danger of accidents Headphone volume which is too high distracts attention from traffic activity.
– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.


– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Call** is highlighted. Press the **SET** button to open the menu.

Info
It is not possible to change the audio volume using the combination switch with every cellphone.
The call duration and contact are displayed. Depending on the cellphone settings, the contact is shown by name.
If necessary, accessing contacts must be enabled on the cellphone.
You cannot navigate in the menu during an active phone conversation.

– Press the **UP** or **DOWN** button until **Last Calls** is highlighted. Press the **SET** button to open the menu.

– Press the **RIGHT** or **LEFT** button until the desired person is highlighted. This person can be called by pressing the **SET** button.

7.26.33 Favorites

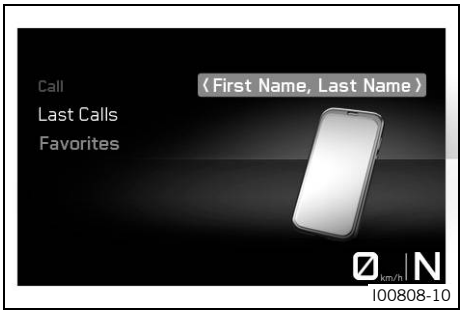

I00808-10

Warning
Danger of accidents Headphone volume which is too high distracts attention from traffic activity.
– Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Call** is highlighted. Press the **SET** button to open the menu.

Info
It is not possible to change the audio volume using the combination switch with every cellphone.
The call duration and contact are displayed. Depending on the cellphone settings, the contact is shown by name.
If necessary, accessing contacts must be enabled on the cellphone.
You cannot navigate in the menu during an active phone conversation.

– Press the **UP** or **DOWN** button until **Favorites** is highlighted. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button until the desired person is highlighted. This person can be called by pressing the **SET** button.

7.26.34 Settings




I00809-10

Condition
- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.

In the **Settings** menu, favorites, quick selections, **Connectivity** (optional), and the shift warning light can be configured. Settings can be made for units or various values. Several functions can be enabled or disabled.

7.26.35 Favorites

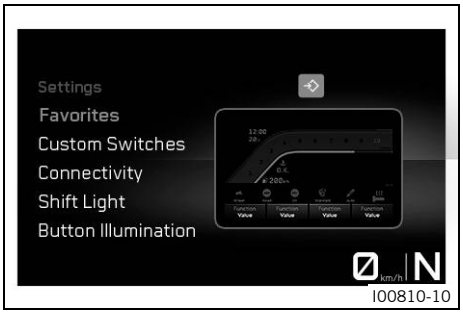


I00810-10

Condition
- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until “Favorites” is highlighted. Press the **SET** button to open the submenu.
– Access a menu item with the **RIGHT** or **LEFT** button, and add the selected information to the Favorites display using the **SET** button.

Up to four sets of information can be selected in the **Favorites** menu.

7.26.36 Favorites-Anzeige 1-4

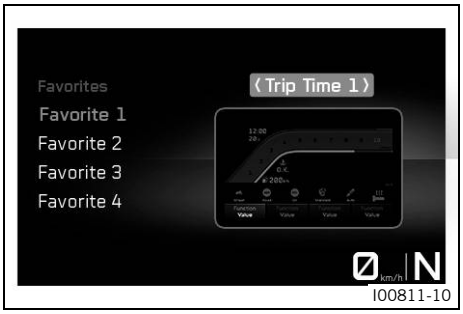

I00811-10

Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Favorites** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button to select **Favorite 1**, **Favorite 2**, **Favorite 3**, or **Favorite 4**. Press **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to select the desired information. Press the **SET** button to confirm the selection.

7.26.37 Custom Switch



I00812-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Custom Switch** is highlighted. Press **SET** button to open the menu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to set a direct selection submenu for **Custom Switch C1**or **C2**.

Info
When the menu is closed, the submenu defined in **Custom Switch** is opened by pressing the **C1** or **C2** button.

7.26.38 Konnektivität

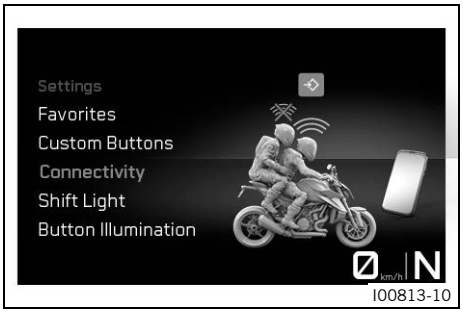

I00813-10

Condition


- The motorcycle is stationary.
- **Bluetooth®** function is activated.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.

In the **Connectivity** menu, a suitable cellphone or communication system can be paired with the combination instrument via **Bluetooth®** and the audio function and navigation function can be configured.

Info
Not every cellphone or communication system is suitable for pairing with the combination instrument.
The standard **Bluetooth®** 4.0 must be supported.

7.26.39 Bluetooth

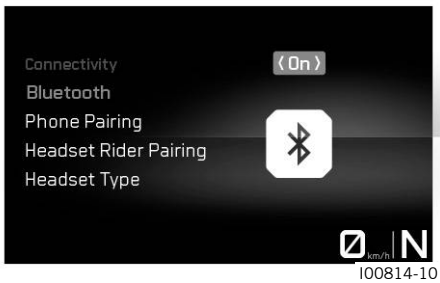

I00814-10

Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Bluetooth** is highlighted. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to switch the **Bluetooth®** function on or off.

Info

The **Bluetooth®** function must be activated to pair a suitable cellphone or communication system with the vehicle.
Not every cellphone or communication system is suitable for pairing with the vehicle.

7.26.40 Pairing a cellphone



I00815-10

Condition

- The motorcycle is stationary.
- **Bluetooth®** function is activated.
- The **Bluetooth®** function should also be activated in the device to be paired.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until “Pair phone” is highlighted. Press the **SET** button to open the submenu.

Info

Only one cellphone can be paired with the vehicle.

– Press the **UP** or **DOWN** button until **New Pairing** is marked. Press the **SET** button to open the menu.
– The vehicle starts searching for a suitable cellphone. If the search was successful, the name of the cell phone is displayed again in the Pairing menu. Press the **SET** button to start the pairing.

Info

The cellphone must be visible via **Bluetooth®** for the vehicle to find the cellphone.
Not every cellphone is suitable for pairing with the vehicle.

– A message appears on the combination instrument indicating that the vehicle is now ready for pairing. The pairing is completed successfully by confirming the **Passkey** on the cellphone and on the combination instrument.

Info
Follow the instructions in the app when connecting with **KTMconnect**. Confirmation may be required on the combination instrument.

– Press the **UP** or **DOWN** button until “Delete pairing” is highlighted. The paired device can be deleted by pressing the **SET** button.
– Move the previously paired device into the range of the vehicle while the **Bluetooth®** function is active.
  ✓ The device is automatically connected with the vehicle.
  ✗ If the device is not automatically connected with the vehicle after approx. 30 seconds:
    – Switch on the vehicle again or repeat the **New Pairing** procedure.

A suitable cellphone can be paired with the combination instrument in the **Phone Pairing** submenu via **Bluetooth®**.

Info
Not every cellphone or communication system is suitable for pairing with the combination instrument.
Make sure the end device is in the correct pairing mode for call management. If the end device is only paired for media playback, the call function may not work.

7.26.41 Pairing a headset



I00816-10

Condition
- The motorcycle is stationary.
- **Bluetooth®** function is activated.
- The **Bluetooth®** function should also be activated in the device to be paired.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Riders Headset** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **New Pairing** is marked. Press the **SET** button to open the menu.
– The vehicle starts searching for a suitable communication system. If the search was successful, the name of the rider's headset is displayed in the **New Pairing** submenu. Press the **SET** button to start the pairing.

Info

The communication system must be in pairing mode for the communication system to be found by the vehicle. Follow the instructions in the communication system owner's manual.

Press the **UP** or **DOWN** button until **Delete Pairing** is highlighted. The paired device can be deleted by pressing the **SET** button.

Not every communication system is suitable for pairing with the vehicle.

– Move the previously paired device into the range of the vehicle while the **Bluetooth®** function is active.

✓ The device is automatically connected with the vehicle.

✗ If the device is not automatically connected with the vehicle after approx. 30 seconds:

– Switch on the vehicle again or repeat the **New Pairing** procedure.

In the **Riders Headset** menu, a suitable rider communication system can be paired with the vehicle.

7.26.42 Headset Type



I00817-10

Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Connectivity** is highlighted. Press the **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Headset Type** is highlighted.

– Activate the menu item using the **RIGHT** or **LEFT** button.

– Press the **SET** button to change the rider headset type.

The connection mode for the rider headset can be selected in the **Headset Type** menu.
The communication system is connected to the vehicle wirelessly via **Bluetooth®** in **Bluetooth Headset** display mode.
The communication system is connected directly to the smartphone in display mode **Corded Headset**.

Info

The **Riders Headset** menu item is only available in **Headset Type Bluetooth**.

7.26.43 Shift Light



I00818-10

Condition

- The motorcycle is stationary.
- **ODO** > 1,000 km (621 mi).

– Press the **SET** button when the menu is closed.

– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.

– Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.

The shift warning light can be configured in the **Shift Light** submenu.

Info
The speed limiter is dependent on the coolant temperature.

7.26.44 Shift Light State



I00819-10

Condition
- The motorcycle is stationary.
- **ODO** > 1,000 km (621 mi).

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
– Use the **RIGHT** or **LEFT** button to switch the shift warning light on or off.

7.26.45 RPM1



I00820-10

Condition
- The motorcycle is stationary.
- **ODO** > 1,000 km (621 mi).

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **RPM1** is highlighted. Press the **SET** button to open the submenu.
– Press the **RIGHT** or **LEFT** button to set the value for **RPM1**.

Info
RPM1 can be set in intervals of 500 between 5,500 and 10,000 rpm.
RPM1 must not be larger than **RPM2**.
If the engine speed reaches the set value **RPM1**, the engine speed display flashes as a shift warning light.

7.26.46 RPM2



I00821-10

Condition
- The motorcycle is stationary.
- **ODO** > 1,000 km (621 mi).

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Shift Light** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **RPM2** is highlighted. Press the **SET** button to open the submenu.
– Press the **RIGHT** or **LEFT** button to set the value for **RPM2**.

Info
RPM2 can be set in intervals of 500 between 7,000 and 10,000 rpm.
RPM2 must not be smaller than **RPM1**.
If the engine speed reaches the set value **RPM2**, the screen flashes as a shift warning light.

7.26.47 Button Illumination



I00822-10

Condition
- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Button Illumination** is highlighted.
– Press the **RIGHT** or **LEFT** button to select the button illumination level or switch off the button illumination.

7.26.48 Coming Home Light



I00823-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Coming Home Light** is highlighted. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to adjust **Coming Home Light**. The setting options are off, short and long.


7.26.49 Light Diagnostic



I00824-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Light Diagnostic** is highlighted. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to activate or deactivate **Light Diagnostic**.

7.26.50 Daytime Running Light

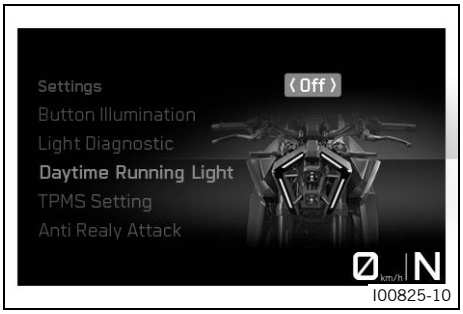

I00825-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Daytime Running Light** is marked. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to activate or deactivate **Daytime Running Light**.

7.26.51 TPMS Settings (optional)



I00826-10

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **TPMS Settings** (optional) is marked. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to activate or deactivate the warnings from **TPMS Settings** (optional).

7.26.52 Anti Relay Attack



I00827-10

Condition

• The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Anti Relay Attack** is highlighted.
– Use the **RIGHT** or **LEFT** button to switch the **Anti Relay Attack** on or off.

7.26.53 Setting the time and date

Condition

The motorcycle is stationary.



I00833-10


– Press the **SET** button when the menu is closed.
– Press **UP** or **DOWN** button until **Settings** appears. Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.



I00835-10

Setting the clock

– Press the **UP** or **DOWN** button until **Set Clock** is marked.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until the current hour is set. Press the **SET** button to select the hour.
– Press the **UP** or **DOWN** button until the current minute is set. Press the **SET** button to select the minute.
– Press the **BACK** button to exit the menu.

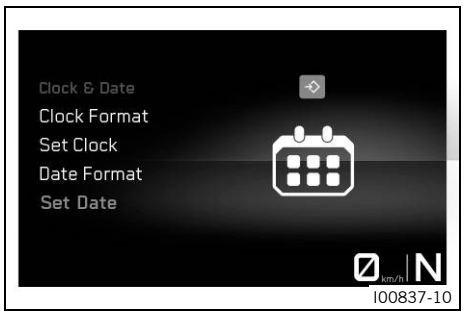


I00837-10

Setting the date

– Press the **UP** or **DOWN** button until **Set Date** is marked.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until the current day is set. Press the **SET** button to select the day.
– Press the **UP** or **DOWN** button until the current month is set. Press the **SET** button to select the month.
– Press the **UP** or **DOWN** button until the current year is set. Press the **SET** button to select the year.
– Press the **BACK** button to exit the menu.

7.26.54 Clock Format

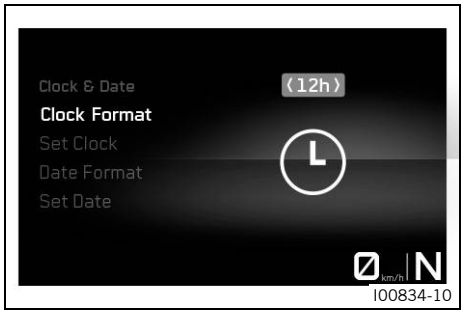

I00834-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Clock Format** is highlighted. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to select the time format.

Info
The setting options are 24h and 12h.

7.26.55 Date Format

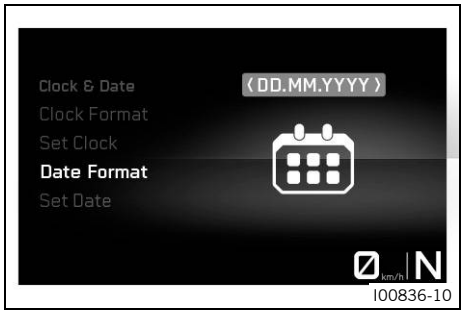

I00836-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Clock & Date** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Date Format** is highlighted. Press the **SET** button to open the menu.
– Press the **RIGHT** or **LEFT** button to select the date format.

Info
The setting options are DD.MM.YYYY, MM.DD.YYYY and YYYY.MM.DD.

7.26.56 Units

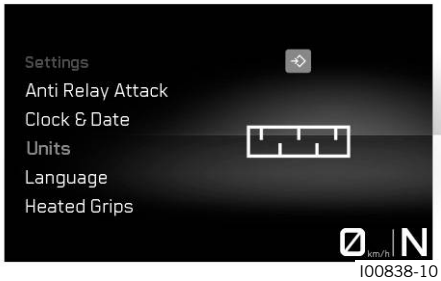

I00838-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.

The **Units** submenu allows settings to be made for units or various values.

7.26.57 Distance

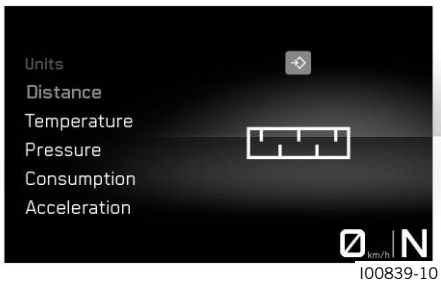

I00839-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Distance** is marked. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired unit.

Info
The setting options are kilometers or miles.

7.26.58 Temperature

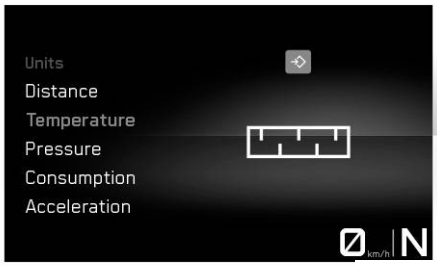

I00840-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Temperature** is marked. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired unit.

Info
The setting options are Celsius or Fahrenheit.

7.26.59 Pressure

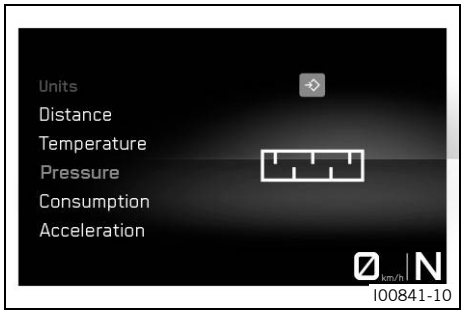


I00841-10

Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Pressure** is marked. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired unit.

7.26.60 Consumption

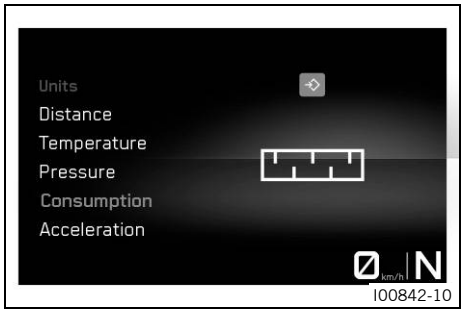

I00842-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until **Consumption** is marked. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired unit.

Info
The setting options are l/100km, km/l, USG/100mi, mi/USG, mi/l, l/100mi, UKG/100mi and mi/UKG.

7.26.61 Beschleunigung

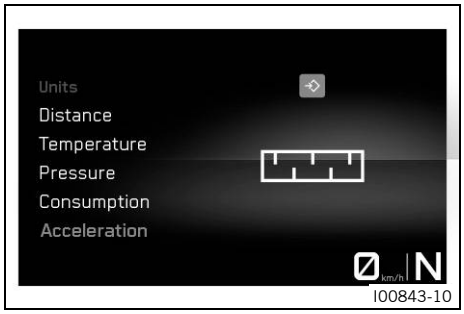

I00843-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Units** is highlighted. Press the **SET** button to open the submenu.
– Press the **UP** or **DOWN** button until acceleration is highlighted. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired unit.

Info
The setting options are m/s^2 and ft/s^2.

7.26.62 Language

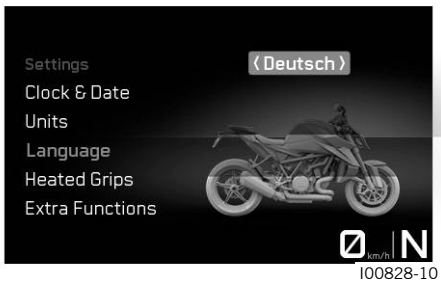

I00828-10


Condition

- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Language** is highlighted. Press the **SET** button to open the submenu.
– Activate the menu item using the **RIGHT** or **LEFT** button.
– Press the **SET** button to confirm the desired language.

Info
The menu languages are US English, UK English, German, Italian, French, and Spanish.

7.26.63 Heating (optional)

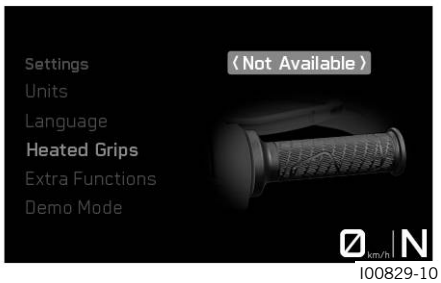

I00829-10

Condition


- The motorcycle is stationary.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted. Press **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Heating** is highlighted. Press the **SET** button to open the submenu.

The heated grip can be configured using **RIGHT** and **LEFT** in the **Heating** submenu.

Info
In the **Settings** menu, the **Heating** submenu only controls the visibility of **Heated Grips** in the menu.

7.26.64 Extra Functions

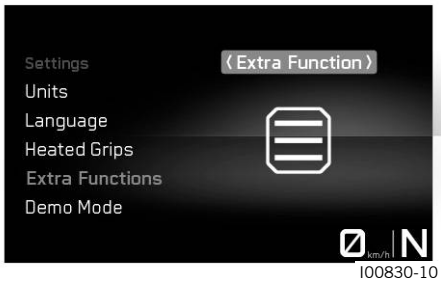

I00830-10


Condition

- The motorcycle is stationary.
- Motorcycle with optional supplementary function.

– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Extra Functions** is highlighted. Press the **SET** button to open the submenu.
– Use the **UP** or **DOWN** button to navigate through the extra functions.

Info
The optional extra functions are listed.
The current **KTM PowerParts** and available software are listed on the KTM website.

7.26.65 Demo Mode

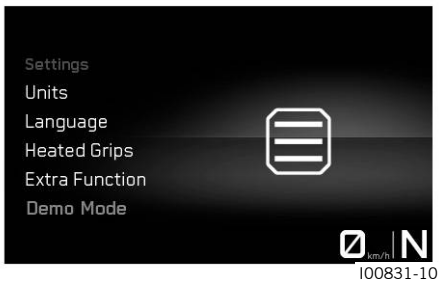

I00831-10

Condition

- The motorcycle is stationary.
- Motorcycle with demo mode.


– Press the **SET** button when the menu is closed.
– Press the **UP** or **DOWN** button until **Settings** is highlighted.
– Press the **SET** button to open the menu.
– Press the **UP** or **DOWN** button until **Demo Mode** is highlighted. Press the **SET** button to open the submenu.
– Use the **UP** or **DOWN** button to navigate through the demo mode functions.

Info

The activated demo mode functions (p. 28) are listed.

Once the demo mode expires, the optional software functions are available from an authorized KTM dealer.

8.1 Handlebar position

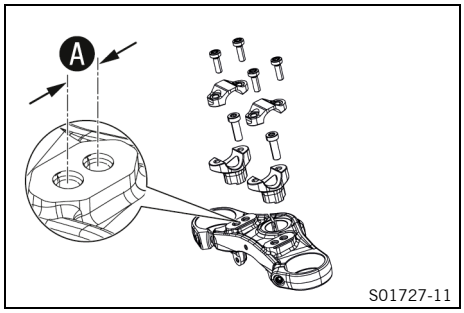

On the upper triple clamp there are two holes at a distance of Ⓐ apart.

Hole distance Ⓐ	15 mm (0.59 in)

The handlebar can be mounted in two different positions. In this way, the handlebar can be mounted in the most comfortable position for the rider.


Info
KTM recommends the front handlebar position when using the vehicle on a race track.

8.2 Adjusting the handlebar position

Warning
Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

– Change the handlebar if the handlebar is damaged or bent.

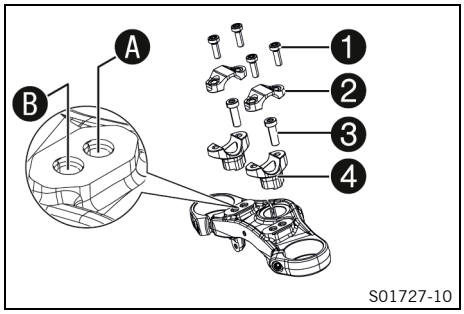

– Remove screws ❶. Take off the handlebar clamps ❷. Position the handlebar so that screws ❸ are accessible.

Info
Cover the components to protect them against damage. Do not kink the cables and lines.

– Remove screws ❸. Take off handlebar supports ❹.
– Move the handlebar supports into the desired position Ⓐ or Ⓑ. Mount and tighten screws ❸.

Guideline

Mount the left and right handlebar supports in the same position.

Screw, handlebar support	M10	40 Nm (29.5 lbf ft) **Loctite®243™**

– Position the handlebar.


Info
Make sure the cables and wiring are positioned correctly.

– Position the handlebar clamp. Mount screws ❶ and tighten evenly.

Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)


8.3 Adjusting the basic position of the clutch lever

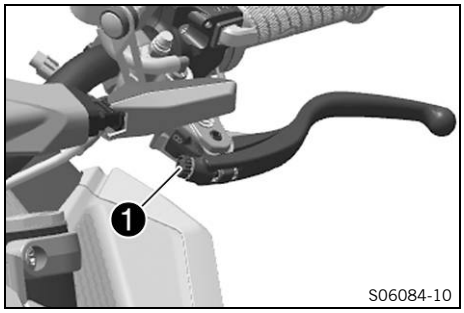

– Push clutch lever forward.
– Adjust the basic position of the clutch lever to your hand size by turning adjusting screw 1.

Info
Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.
Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.
The range of adjustment is limited.
Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.


8.4 Adjusting the basic position of the hand brake lever

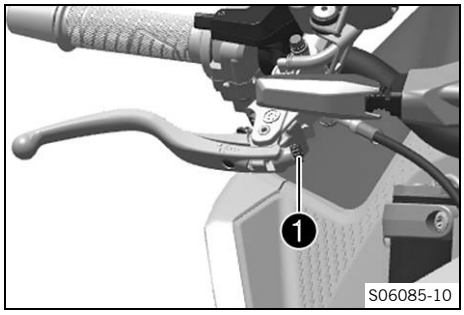

– Push hand brake lever forward.
– Adjust basic position of the hand brake lever to your hand size by turning adjusting screw 1.

Info
Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.
Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.
The range of adjustment is limited.
Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.


8.5 Adjusting the response of the hand brake lever

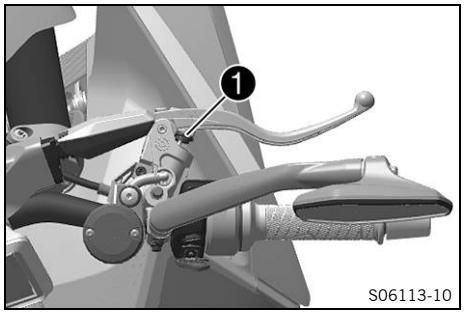

– Adjust the response of the hand brake lever with adjusting screw 1.
  ✓ 19 - Setting with large hand brake lever transmission ratio (soft response, more lever travel, less lever force).
  ✓ 20 - Setting with balanced hand brake lever response.
  ✓ 21 - Setting with small hand brake lever transmission ratio (hard response, less lever travel, more lever force).

Info
The transmission ratio and, therefore, the response of the hand brake lever can be changed.
Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.

8.6 Setting the step plate of the foot brake lever

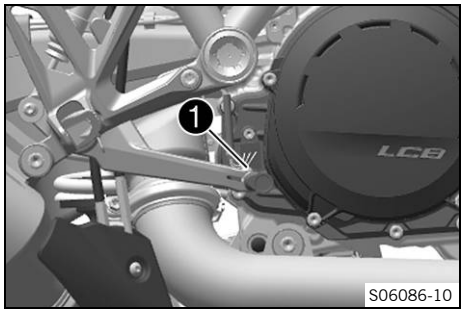

– Loosen screw ❶.
– Turn the step plate of the foot brake lever to the desired position.

Guideline

Standard	Step plate positioned to the front

Info
The step plate of the foot brake lever can be freely rotated through 360 °.
The basic position of the foot brake lever is set at the factory and does not need to be changed.


– Tighten screw ❶.

Guideline

Screw, step plate for foot brake lever	M6	10 Nm (7.4 lbf ft)

8.7 Checking the basic position of the shift lever

Info
When driving, the shift lever must not touch the rider's boot when in the basic position.
If the shift lever is permanently touching the boot, the transmission will be subject to excessive load; this can cause a malfunction of the quickshifter.

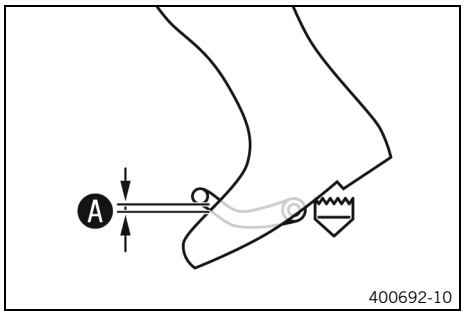


– Sit on the vehicle in the riding position and determine distance Ⓐ between the upper edge of your boot and the shift lever.

Distance between shift lever and upper edge of boot	10 … 20 mm (0.39 … 0.79 in)

» If the distance does not meet specifications:
– Adjust the basic position of the shift lever. (📖 p. 70)

8.8 Adjusting the basic position of the shift lever

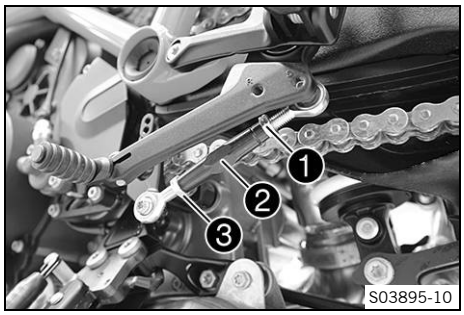

– Loosen nut ❶ while holding stud ❷.

Info
Nut ❶ has an LH thread.

– Loosen nut ❸ while holding stud ❷.
– Turn stud ❷ to adjust the shift lever.

Info
The range of adjustment is limited.
The shift lever must not come into contact with any other vehicle components during the shift procedure.
The shift linkage must be correctly adjusted in both footrest positions to ensure correct functioning of the shift mechanism.


– Tighten nut ❸ while holding stud ❷.
Guideline

Nut, shift rod	M8	12 Nm (8.9 lbf ft)

– Tighten nut ❶ while holding stud ❷.
Guideline

Nut, shift rod	M8LH	12 Nm (8.9 lbf ft)

8.9 Setting the shift lever stub

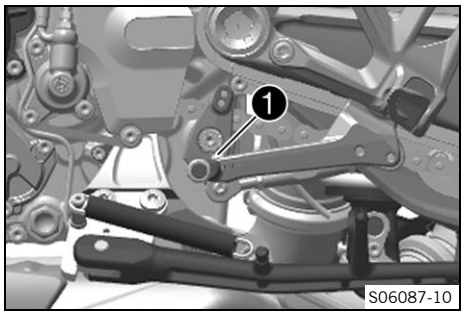

– Loosen screw ❶.
– Turn the shift lever stub to the desired position.
Guideline


Standard	Step plate positioned to the front

Info
The shift lever stub can be freely rotated through 360 °.
The shift lever stud is set at the factory and does not need to be changed.

– Tighten the screw.
Guideline

Screw, shift lever stub	M6	10 Nm (7.4 lbf ft)

8.10 Adjusting the footrest support

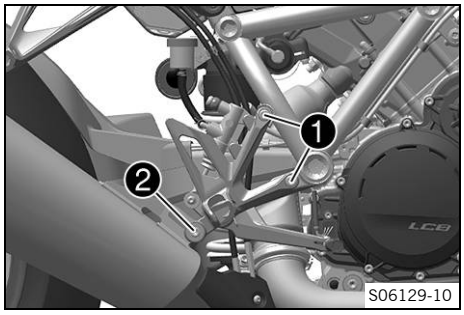


Main work
– Remove screws ❶ on the right footrest support.

Info
Pay attention to the nut when removing the lower footrest support bolt.

– Loosen screw ❷.

Info
The adjustable footrest support enables a more comfortable lower footrest position or a sporty upper footrest position.

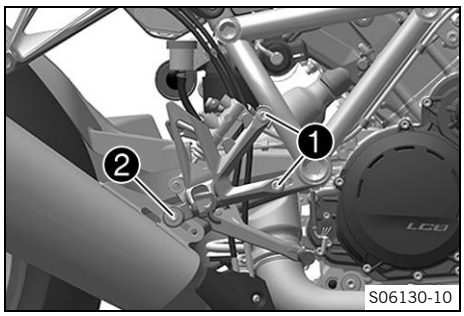

– Position the footrest support.
– Mount and tighten screws ❶.


Guideline

Screw, front rider footrest bracket	M8	25 Nm (18.4 lbf ft) **Loctite®243™**

– Tighten screw ❷.


Guideline

Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)

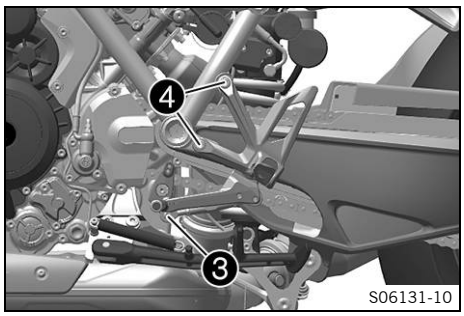

– Remove screw ❸ of the shift linkage.
– Remove screws ❹ on the left footrest support and take off the footrest support.

Info
Pay attention to the nut when removing the lower footrest support bolt.

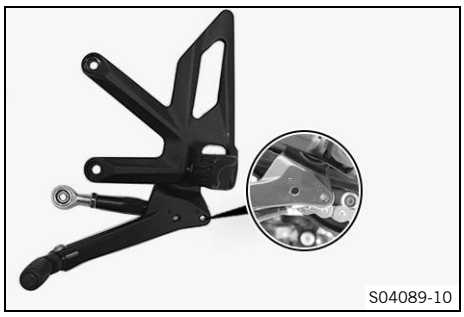


– Separate the shift linkage from the shift lever and mount in position **"R"**.

Guideline

Screw, shift rod	M6	5 Nm (3.7 lbf ft) **Loctite®243™**


Info
The adjustable footrest support allows a more comfortable lower footrest position (normal switching scheme) or a sporty upper footrest position (reverse switching scheme).
The footrest support position and switching scheme can only be changed together.
When the footrest support is returned to the standard position, the shift linkage on the shift lever must be mounted in position **"S"**.

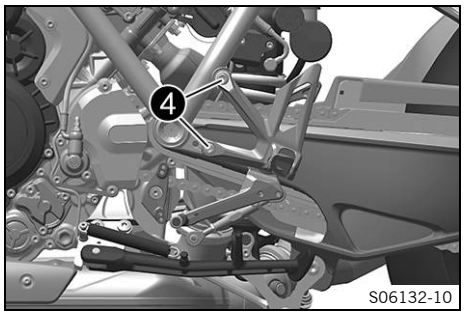

– Position the footrest support.
– Mount and tighten screws ❹.

Guideline

Screw, front rider footrest bracket	M8	25 Nm (18.4 lbf ft) **Loctite®243™**

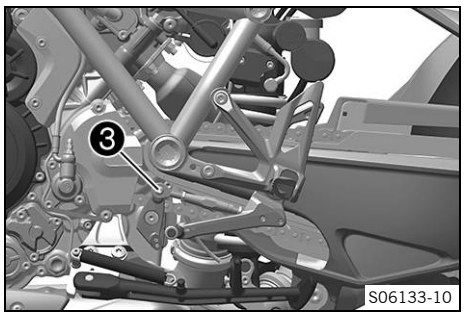

– Position the shift linkage at one of the upper positions of the shift shaft.

Guideline

Outer position	Shift power low, long shift path
Inner position	Shift power high, short shift path

Info
When the footrest support is returned to the standard position, one of the lower positions on the shift shaft must be used.

– Mount and tighten screw ❸.

Guideline

Screw, shift rod	M6	5 Nm (3.7 lbf ft) **Loctite®243™**

Info
The switching scheme is now reversed.

Finishing work

– Check basic position of the shift lever. (📖 p. 70)
– Adjust the basic position of the shift lever. 🔧 (📖 p. 70)

9.1 Advice on preparing for first use

Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

– Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
– Do not operate the vehicle if you are physically or mentally impaired.

Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

– Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
– Always wear protective clothing that is in good condition and meets the legal regulations.

Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

– Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.

Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

– Only use tires/wheels approved by KTM with the corresponding speed index.

Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

– Run in new tires with moderate riding and only gradually increase the lean angle.
  Run-in distance 200 km (124 mi)

Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

– Take your foot off the foot brake lever if you do not want to brake.

Info

When using your vehicle, remember that others may feel disturbed by excessive noise.

– Make sure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
  ✓ You will receive a delivery certificate when the vehicle is handed over.
– Before riding for the first time, read the entire Owner's Manual carefully.
– Get to know the controls.
– Adjust the motorcycle to your requirements, as described in the "Ergonomics" chapter.
– Get used to the handling characteristic of the motorcycle in a suitable area before making a longer trip. Try also to ride as slowly as possible to get a better feel for the motorcycle.
– Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
– Run the engine in.

9.2 Running in the engine

– During the running-in time, do not exceed the specified engine speed.

Guideline

Maximum engine speed	
During first: 1,000 km (620 mi)	6,500 rpm
After first: 1,000 km (620 mi)	10,250 rpm

– Avoid fully opening the throttle.

9.3 Loading the vehicle

Warning
Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational motorcycle with a full tank, rider and, if necessary, a passenger with protective clothing and helmet, and, if necessary, mounted luggage.

– Do not exceed the maximum permissible overall weight or the axle loads.

Warning
Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

– Mount and secure all luggage according to the manufacturer's instructions.
– Check that your luggage is fixed properly at regular intervals.

Warning
Danger of accidents Carrying luggage alters handling characteristics at high speed.

– Adapt your speed to your payload.
– Ride more slowly if your motorcycle is loaded with cases or other luggage.

Maximum speed with luggage 130 km/h (80.8 mph)

Warning
Danger of accidents Overloading will destroy the baggage system.

– Observe the manufacturer's instructions on the maximum payload if you have panniers mounted to your motorcycle.

Warning
Danger of accidents Luggage which has slipped impairs visibility.

If the tail light is covered, you are less visible to traffic behind you, especially when it is dark.

– Check that your luggage is fixed properly at regular intervals.

Warning
Danger of accidents A high payload alters the handling characteristic and increases the stopping distance.

– Adapt your speed to your payload.

Warning
Fire hazard The hot exhaust system may burn luggage.

– Fasten your luggage in such a way that it cannot be burned or singed by the hot exhaust system.


– If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
– Do not exceed the maximum permissible weight and maximum permissible axle loads.

Guideline

Maximum permissible overall weight	425 kg (937 lb.)
Maximum permissible front axle load	165 kg (364 lb.)
Maximum permissible rear axle load	260 kg (573 lb.)

10.1 Checks and maintenance measures when preparing for use

Info
Before every trip, check the condition of the vehicle and ensure that it is roadworthy.
The vehicle must be in perfect technical condition when it is being operated.

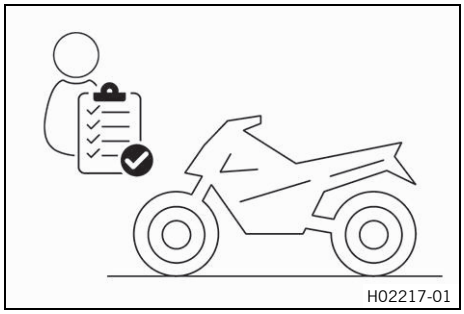
H02217-01

- Check the engine oil level. (p. 137)
- Check the front brake fluid level. (p. 111)
- Check the rear brake fluid level. (p. 113)
- Check that the brake linings of the front brake are secured. (p. 112)
- Check that the brake linings of the rear brake are secured. (p. 115)
- Check that the brake system is functioning properly.
- Check the coolant level in the compensating tank. (p. 133)
- Check the chain for dirt. (p. 103)
- Check the chain tension. (p. 104)
- Check tire condition. (p. 119)
- Check tire pressure. (p. 120)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical system is functioning properly.
- Check that luggage is properly secured.
- Check the setting of the rear mirror.
- Check the fuel level.

10.2 Starting the vehicle


Danger
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.

Caution
Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

- Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.

Note
Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.
- Always run the engine warm at a low speed.

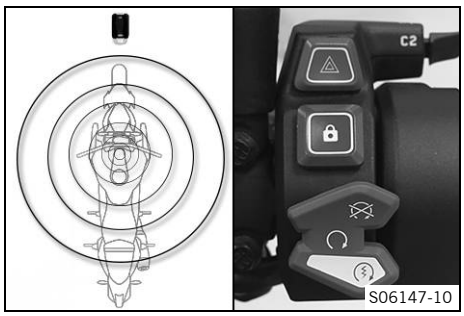

– Take the motorcycle off the side stand and sit on the motorcycle.
– Move the RACE ON button within the range of the steering lock.
– Ensure that the RACE ON key stays in range while riding.

Guideline

Maximum range of the RACE ON key around the steering lock	1.5 m (4.9 ft)

Info

The range may be reduced by decreases in RACE ON key battery voltage and by interfering radio waves.

If the battery voltage of the RACE ON key is too low, one of the ignition keys must be placed in the area of the steering lock (📖 p. 21) and must be safely stored again after starting.

– Make sure that the start button/emergency OFF switch is in the middle position ○.
– Switch on ignition; to do this, briefly press the Unlock button 🔓 (maximum of 1 second).

Guideline

To avoid malfunctions in the control unit communication, do not switch the ignition off and on in rapid succession.

✔ The steering is unlocked.
✔ The function check of the combination instrument is run.
✔ The ABS warning lamp goes out when starting off.

Info

If the steering does not unlock, move the handlebar slightly.

– Shift the transmission into neutral.

✔ Neutral position **N** is displayed.



– Briefly press the start button/emergency OFF switch into the lower position ⚷.

Info

Only press the start button/emergency OFF switch into the lower position ⚷ when the combination instrument function check has been completed.


Do not open the throttle to start.

If the starting attempt is unsuccessful, wait for 15 seconds before making another attempt at starting.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear, the engine stops.

10.3 Launch control (optional)

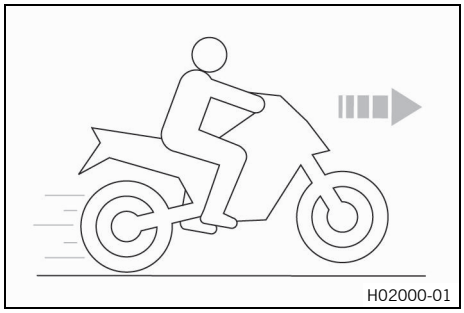


Launch control is an optional vehicle electronics function.
Launch control adjusts the engine speed in order to achieve the best possible acceleration.
Launch control can be used for starting off for a maximum of three times in succession. Launch control is temporarily deactivated after the third starting off in order to protect the engine, transmission and cooling system from overloading.
Launch control is also deactivated if all conditions for activation are no longer met.
Launch control is enabled again in the following cases: the engine runs for at least three minutes, the engine is switched off for 20 minutes or a distance of 1.5 km (0.93 mi) has been covered.

10.4 Starting off

– Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time open the throttle gently.

10.5 Starting off with launch control (optional)

Warning
Danger of accidents Launch control enables powerful acceleration which may overwhelm a novice rider.
– Only use the launch control if you have the necessary experience.
– Do not use launch control on public roads.

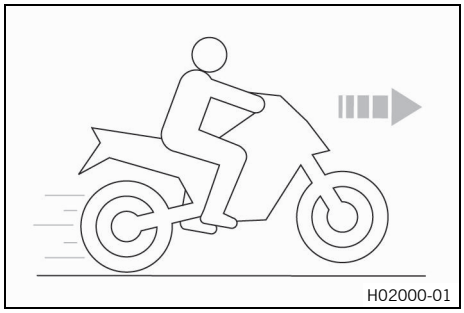


Condition
The **TRACK** riding mode (optional) is activated.
First gear is engaged.
The TC indicator lamp does not light up.
Coolant temperature: > 60 °C (> 140 °F)
Total riding distance covered: > 1,000 km (> 620 mi)

– Activate launch control in the combination instrument.
  ✔ The number of available starts is indicated on the start screen.
– Apply full throttle with the clutch lever pulled.
  ✔ The engine speed is adjusted.

6,500 rpm

  ✔ The TC indicator lamp flashes quickly.
– Release clutch lever quickly but in a controlled manner.

10.6 QUICKSHIFTER+ (optional)

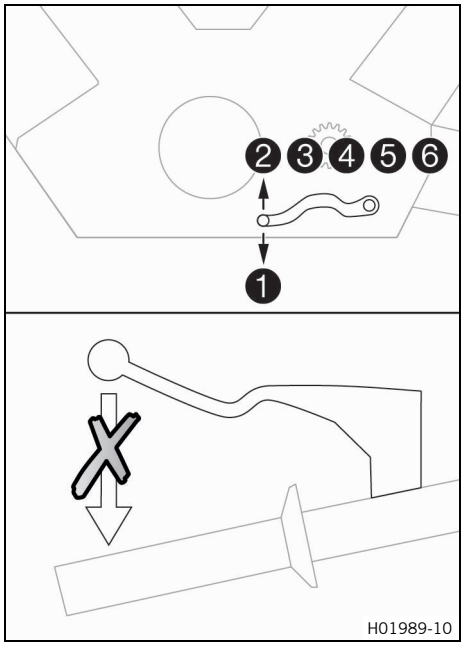

If the QUICKSHIFTER+ (optional) is activated, you can shift up and down without actuating the clutch.

Because there is no need to close the throttle grip, uninterrupted gear shifts are possible.

The QUICKSHIFTER+ uses the shift shaft position to check whether or not a shift should be initiated, and sends a corresponding signal to the engine control unit.

If the QUICKSHIFTER+ is disabled in the combination instrument, the clutch needs to be actuated in the normal way for each shift.

10.7 Shifting, riding

Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

– Avoid abrupt load alterations and sudden braking actions.
– Adapt your speed to the road conditions.

Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

– Do not change into a low gear at high engine speed.

Warning

Danger of accidents Adjustments to the vehicle distract attention from traffic activity.

– Make all adjustments when the vehicle is at a standstill.

Warning

Risk of injury The passenger may fall from the motorcycle if they conduct themselves incorrectly.

– Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot pegs and holds on to the rider or the grab handles.
– Note the regulations governing the minimum age of passengers in your country.

Warning

Danger of accidents A risky riding style constitutes a major risk.

– Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.

Warning

Danger of accidents Cold tires have reduced road grip.

– Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.

Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

– Run in new tires with moderate riding and only gradually increase the lean angle.

Run-in distance 200 km (124 mi)

Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational motorcycle with a full tank, rider and, if necessary, a passenger with protective clothing and helmet, and, if necessary, mounted luggage.

– Do not exceed the maximum permissible overall weight or the axle loads.

Warning

Danger of accidents Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

– Mount and secure all luggage according to the manufacturer's instructions.
– Check that your luggage is fixed properly at regular intervals.

Warning

Danger of accidents A fall can damage the vehicle more seriously than it may first appear.

– Check the vehicle after a fall as you do when preparing for use.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.

– Only operate the vehicle if it is equipped with an air filter.

Note

Engine failure Overheating damages the engine.

– If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
– Allow the engine and cooling system to cool down.
– Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.

Note

Transmission damage Incorrect use of the QUICKSHIFTER+ will damage the transmission.

The QUICKSHIFTER+ can only be used if the function is enabled in the combination instrument.


The QUICKSHIFTER+ is not active if you pull the clutch lever.

– Only use the QUICKSHIFTER+ in the permitted speed range shown.


Info

If you hear unusual noises while riding, stop immediately, switch off the engine, and contact an authorized KTM workshop.

All specifications regarding the switching direction refer to the standard switching scheme.

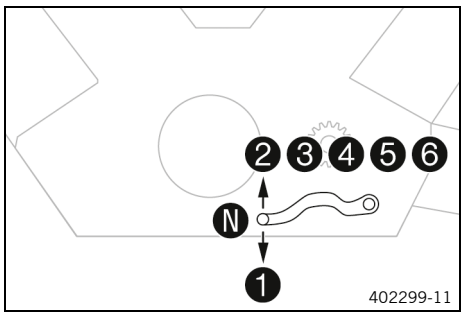

402299-11

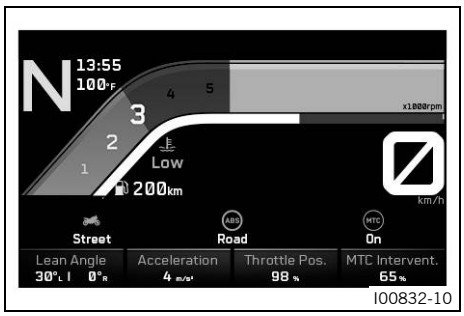

I00832-10

– Shift into a higher gear when conditions allow (incline, road situation, etc.).
– Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.

Info
The gear positions can be seen in the figure. The idle position is between the first and second gears. First gear is used for starting off or for steep inclines.


– Accelerate as gently as possible while the motorcycle is still **not** at operating temperature.

Info
While the motorcycle is **not** at operating temperature, the maximum engine speed is limited to 6500 rpm. On the combination instrument, the speed range after 6500 rpm has a blue background.

– After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is ¾ open. This will barely reduce the speed, but fuel consumption will be considerably lower.
– Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
– Brake if necessary and close the throttle at the same time in order to shift down.
– Pull clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
– If the engine stalls (e.g., at a crossroads), just pull clutch lever and press the start button/emergency OFF switch into the lower position Ⓢ. The transmission must not be shifted into neutral.
– Switch off the engine if you are likely to be running at idle speed or stationary for a long time.
– If the oil pressure warning lamp lights up during a trip, stop immediately and switch off the engine. Contact an authorized KTM workshop.
– If the malfunction indicator lamp lights up during a trip, please contact an authorized KTM workshop as soon as possible.
– If the general warning lamp ⚠ lights up during a trip, the display shows a message for 10 seconds.

Info
Very important messages are stored in the **Warning** menu.

– If the ice warning appears in the combination instrument, the roads may be icy. Adjust your speed to the road conditions.

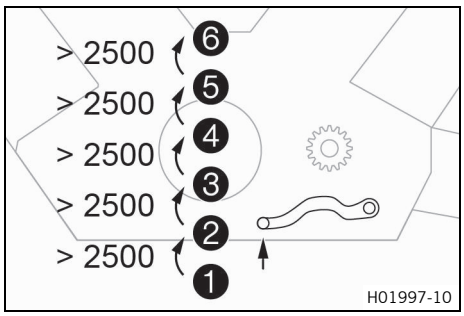


Condition

QUICKSHIFTER+ (optional) is enabled.

– If the QUICKSHIFTER+ is enabled in the combination instrument, one can shift up in the engine speed range shown without pulling the clutch lever.


Info
The minimum engine speed before shifting up is shown in the figure in revolutions per minute.
Pull the shift lever to the stop quickly without changing the throttle twist grip position.

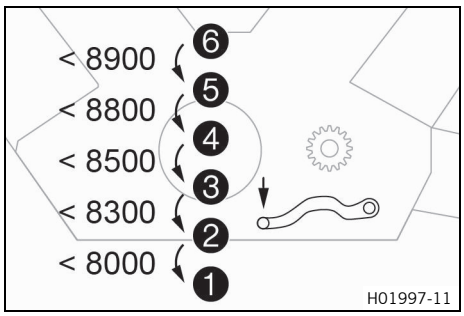

– If the QUICKSHIFTER+ is activated in the combination instrument, you can shift down in the engine speed range shown without pulling the clutch lever.

Info
The maximum engine speed before shifting down is shown in the figure in revolutions per minute.
Press the shift lever to the stop quickly without changing the throttle twist grip position.

10.8 MSR (optional)

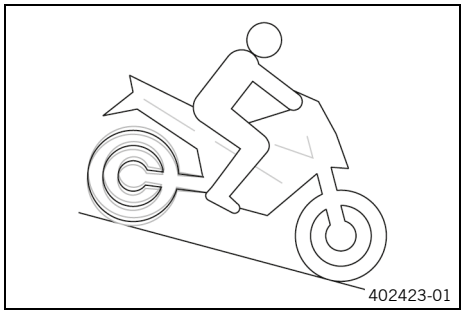

The **MSR** is an optional auxiliary function of the engine control.
If the engine braking effect is too great, the **MSR** prevents the rear wheel from locking or sliding away on a sloping position.
To avoid slip of the rear wheel, the **MSR** only opens the throttle valve as far as absolutely necessary.
The **MSR** is applied on surfaces, where the friction coefficient is to low to open the slipper clutch.
To further increase ride safety, the **MSR** is slope dependent.

Info
If ABS is disabled, the cornering MTC is disabled or ABS Mode **Supermoto** is enabled, the **MSR** is not active.

10.9 Braking

Warning
Danger of accidents Moisture and dirt impair the brake system.
– Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

Warning
Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.
– Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

– Take your foot off the foot brake lever if you do not want to brake.

Warning
Danger of accidents Higher total weight increases the stopping distance.
– Take the longer stopping distance into account when carrying a passenger or luggage with you.

Warning
Danger of accidents Salt on the roads impairs the brake system.
– Brake carefully several times to remove salt from the brake linings and the brake discs.

Warning
Danger of accidents ABS may increase the stopping distance in certain situations.
– Adjust application of the brakes to the respective riding situation and riding surface conditions.

Warning
Danger of accidents Excessively forceful application of the brakes blocks the wheels.

The ABS effectiveness is only ensured if it is switched on.

– Leave the ABS switched on in order to benefit from the protective effect.

Warning
Danger of accidents Driving aids can reduce the probability of a fall only within physical limits.

It is not always possible to compensate for certain riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

– Adapt your riding style to the road conditions and your driving ability.

– When braking, release the throttle and apply the front and rear brakes at the same time.

Info
When the ABS is enabled, you can achieve maximum braking power even on surfaces with low road grip, such as sandy, wet, or slippery terrain, without the danger of the wheels locking.

Warning
Danger of accidents The rear wheel can lock due to the engine braking effect.
– Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.

Warning
Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.
– If possible finish braking before going into a bend.

– Always finish braking before the going into a bend. Change down to a lower gear appropriate to your road speed.
– Use the braking effect of the engine on long downhill stretches. Change down one or two gears, but do not over-rev the engine. In this way, you have to brake far less and the brakes do not overheat.

10.10 Stopping, parking

Warning

Risk of injury People who act without authorization endanger themselves and others.

If a valid transponder is in range, the vehicle can be started.

- Do not leave the vehicle unattended if the engine is running.
- Never leave the vehicle unattended if the RACE ON key or the black ignition key are close to the vehicle.
- Protect the vehicle against access by unauthorized persons.
- Lock the steering if you leave the vehicle unattended.

Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

- Apply the brakes on the motorcycle.
- Shift the transmission into neutral.
- Switch off ignition – to do this, briefly press the RACE ON button ⎋ (maximum of 1 second) with the ignition switched on.

Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on using the unlock button, the power supply to most electrical power consumers remains uninterrupted. This discharges the 12-V battery. You should therefore always switch off the engine with the unlock button – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing side stand forward with your foot as far as it will go and lean the vehicle on it.
- Move handlebar fully to the left and press and hold the RACE ON button ⎋ (for at least 2 seconds).

✓ The steering is locked.

Info

If the steering lock does not engage, move the handlebar slightly.

◀

10.11 Transporting

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.


The components for parking the vehicle are designed only for the weight of the vehicle.

– Park the vehicle on a firm and level surface.
– Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

– Do not park the vehicle near to materials which are highly flammable or explosive.
– Allow the vehicle to cool down before covering it.

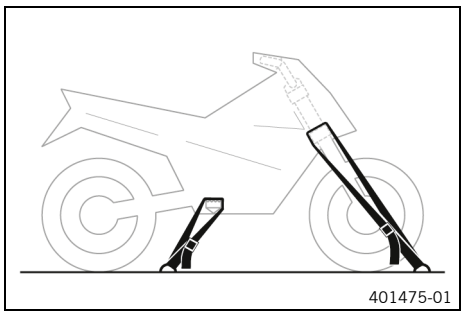

– Switch off the engine.
– Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.


10.12 Towing in the event of a breakdown

Note

Danger of damage Towing away using a towing vehicle is not an appropriate vehicle recovery method.

Damage to the drive train or transmission may occur during towing.

– Do not use towing equipment where the wheels of the broken down vehicle remain on the road and rotate as it is towed.
– Always transport a broken down vehicle on a trailer or on the loading area of a transport vehicle.

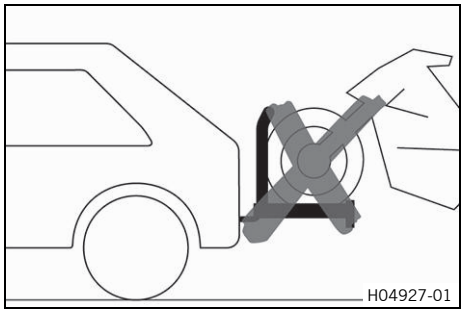

– Ensure that the broken down vehicle is properly secured on the trailer or transport vehicle.
– Observe local regulations for the recovery of broken down vehicles.

10.13 Refueling

Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not fuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.

Warning

Danger of poisoning Fuel is harmful to health.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing if fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.


In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.

- Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)

Note

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

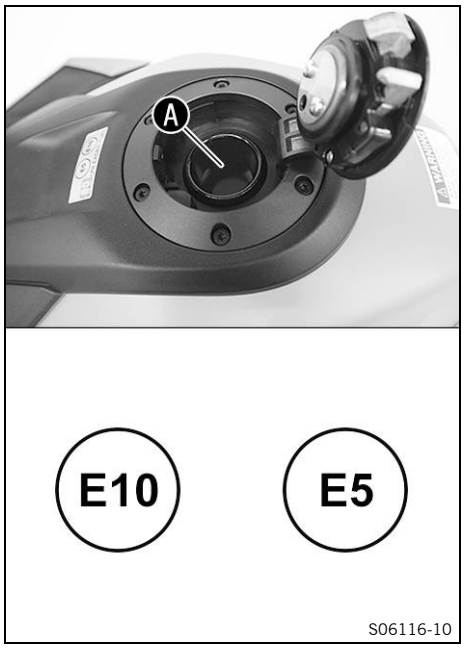

- Switch off the engine.
- Open fuel tank filler cap. (📖 p. 23)
- Fill the fuel tank with fuel up to the lower edge Ⓐ of the filler neck.

Total fuel tank capacity, approx.	17.5 l (4.62 US gal)	Super unleaded (ROZ 95) (📖 p. 162)

- Close the fuel tank filler cap. (📖 p. 24)

11.1 Additional information

Any further work that results from the service work must be ordered separately and invoiced separately.
Different service intervals may apply in your country, depending on the local operating conditions.
Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized KTM dealers for the electronic proof of service. Your authorized KTM dealer will be happy to advise you.

11.2 Service work

	after 1,000 km (620 mi)	every 15,000 km (9,300 mi)	every 30,000 km (18,600 mi)	every 60,000 km (37,200 mi)	every 12 months	every 24 months	every 48 months
Read out the fault memory using the KTM diagnostics tool. 🔧	○	●	●	●	●	●	●
Check the exhaust valve control unit with the KTM diagnostics tool. 🔧		●	●	●	●	●	●
Program the shift shaft sensor. 🔧	○	●	●	●	●	●	●
Check that the electrical system is functioning properly.	○	●	●	●	●	●	●
Check that the brake linings of the front brake are secured. (📖 p. 112)	○	●	●	●	●	●	●
Check that the brake linings of the rear brake are secured. (📖 p. 115)	○	●	●	●	●	●	●
Check the brake discs. (📖 p. 110)	○	●	●	●	●	●	●
Check the brake lines for damage and leakage.	○	●	●	●	●	●	●
Check the front brake fluid level. (📖 p. 111)	○	●	●	●	●		
Change the front brake fluid. 🔧						●	●
Check the rear brake fluid level. (📖 p. 113)	○	●	●	●	●		
Change the rear brake fluid. 🔧						●	●
Check/correct the fluid level of hydraulic clutch. (📖 p. 107)		●	●	●	●		
Change the hydraulic clutch fluid. 🔧						●	●
Change the engine oil and the oil filter, clean the oil screens. 🔧 (📖 p. 137)	○	●	●	●	●	●	●
Check/clean the oil nozzle for clutch lubrication. 🔧	○	●	●	●			
Check all hoses (e.g. fuel, cooling, bleeder, drainage hoses, etc.) and sleeves for cracking, tightness, and correct routing. 🔧		●	●	●	●	●	●
Empty the drainage hoses. 🔧	○	●	●	●	●	●	●
Check the cables for damage and routing without sharp bends (fuel tank removed). 🔧		●	●	●	●	●	●
Check the frame. 🔧			●	●			
Check the link fork. 🔧			●	●			
Check the fork bearing. 🔧		●	●	●			
Check the shock absorber linkage for play. 🔧		●	●	●			
Check the steering head bearing for play. 🔧	○	●	●	●			
Check the wheel bearings. 🔧		●					
Check the shock absorber and fork for leaks. Perform a fork service and shock absorber service as needed, when possible and depending on how the vehicle is used. 🔧	○	●	●	●	●	●	●
Check tire condition. (📖 p. 119)	○	●	●	●	●	●	●
Check tire pressure. (📖 p. 120)	○	●	●	●	●	●	●

	after 1,000 km (620 mi)	every 15,000 km (9,300 mi)	every 30,000 km (18,600 mi)	every 60,000 km (37,200 mi)	every 12 months	every 24 months	every 48 months
Check the chain, rear sprocket, engine sprocket, and chain guide. (📖 p. 105)		●	●	●	●	●	●
Check the chain tension. (📖 p. 104)	○	●	●	●	●	●	●
Measure the wheel bearing play and grease the rear hub. 🔧			●	●			
Check that the rear wheel nut (right side) is tightened to the specified torque. 🔧	○	●	●	●	●	●	●
Check the exhaust system for leaks. 🔧	○	●	●	●	●	●	●
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation. 🔧	○	●	●	●	●	●	●
Change the spark plugs. 🔧			●	●			
Check the valve clearance (air filter and spark plugs removed). 🔧				●			
Change the SAS diaphragm valves. 🔧				●			
Change the air filter, clean the air filter box. 🔧		●	●	●			
Check the fuel pressure. 🔧		●	●	●	●	●	●
Check the headlight setting. (📖 p. 130)	○	●	●	●			
Check the tightness of the safety-relevant screws and nuts which are easily accessible. 🔧	○	●	●	●	●	●	●
Clean dust boots of the fork legs. 🔧 (📖 p. 96)		●	●	●			
Check the coolant level in the compensating tank. (📖 p. 133)	○	●	●	●	●	●	
Check the antifreeze. 🔧	○	●	●	●	●	●	
Change the coolant. 🔧							●
Check that the radiator fan is functioning properly. 🔧	○	●	●	●	●	●	●
Final check: Check the vehicle is roadworthy and take a test ride. 🔧	○	●	●	●	●	●	●
Read out the error memory after the test ride using the KTM diagnostics tool. 🔧	○	●	●	●	●	●	●
Reset the service display using the KTM diagnostic tool. 🔧	○	●	●	●	●	●	●
Enter electronic proof of service. 🔧	○	●	●	●	●	●	●

○ One-time interval

● Periodic interval

12.1 Fork/shock absorber




The fork and the shock absorber offer many options of adapting the suspension to the riding style and the payload.

Info
The recommendations for the suspension setting are shown in table ❶. The table is located on the underside of the front rider's seat.
These adjustments are guidelines and should always be the basis for a suspension setting. If the guidelines are not adhered to, the riding characteristics could deteriorate, particularly at high speeds.

12.2 Adjusting the compression damping of the fork

Info
The hydraulic compression damping determines the fork suspension behavior.

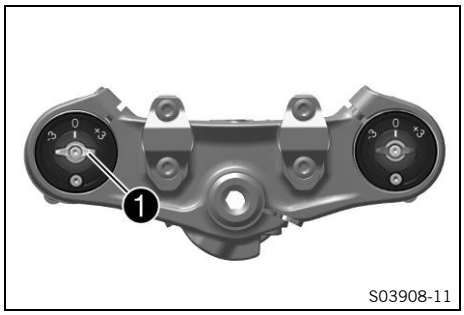

– Turn white adjusting screw ❶ clockwise as far as it will go.

Info
The adjusting screw ❶ is located at the upper end of the left fork leg.
The compression damping is located in left fork leg **COMP** (white adjusting screw). The rebound damping is located in right fork leg **REB** (red adjusting screw).

– Turn counterclockwise by the number of clicks corresponding to the fork type.


Guideline

Compression damping	
Comfort	20 clicks
Standard	12 clicks
Sport	5 clicks

Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping during compression.

12.3 Adjusting the rebound damping of the fork

Info
The hydraulic rebound damping determines the fork suspension behavior.

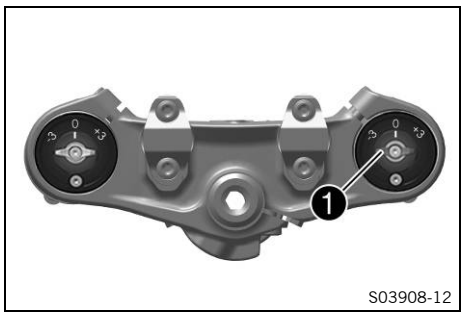

– Turn red adjusting screw ❶ clockwise as far as it will go.

Info
Adjusting screw ❶ is located at the upper end of the right fork leg.
The rebound damping is located in right fork leg **REB** (red adjusting screw). The compression damping is located in left fork leg **COMP** (white adjusting screw).


– Turn counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping	
Comfort	20 clicks
Standard	12 clicks
Sport	7 clicks

Info
Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.

12.4 Adjusting the spring preload of the fork

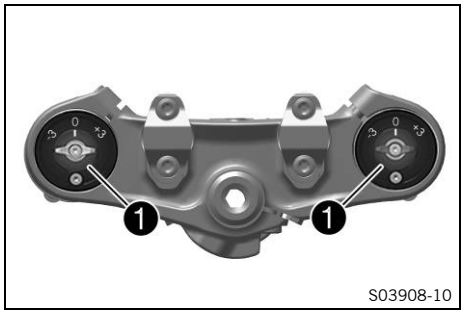

– Use the adjusting screws ❶ to set the desired spring preload.

Info
Make the same adjustment on both fork legs.


– Make the appropriate adjustment for the fork type.

Guideline

Spring preload – preload adjuster	
Comfort	**- 3**
Standard	**0**
Sport	**+3**
Full payload	**+3**

Info
Turn clockwise to increase the spring preload; turn counterclockwise to reduce the spring preload.
Adjusting the spring preload has no influence on the absorption setting of the rebound.
Basically, however, you should set the rebound damping higher with a higher spring preload.

12.5 Compression damping of the shock absorber

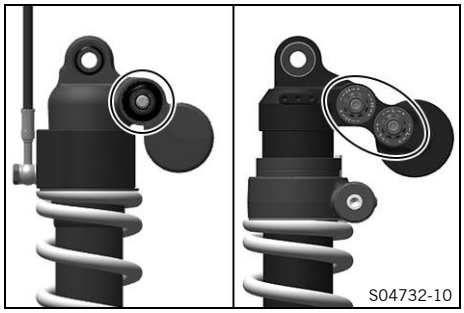

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed.


High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression adjuster, for example, has an effect when riding over an asphalt edge: the rear wheel suspension compresses quickly.

The low-speed compression adjuster has an effect, for example, when riding over long ground swells: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, modifications in the high-speed range affect the compression damping in the low-speed range and vice versa.

12.6 Adjusting the spring preload of the shock absorber

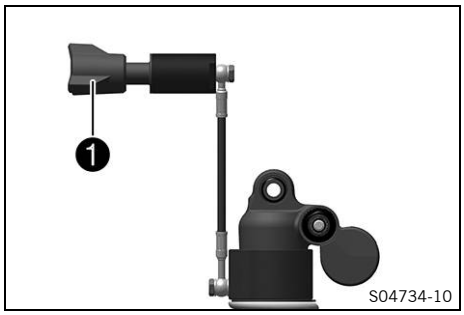

– To increase the spring preload, turn handwheel ❶ on the right side of the vehicle clockwise.
– To reduce the spring preload, turn handwheel ❶ on the right side of the vehicle counterclockwise.

Guideline

Spring preload	
Standard	0
Maximum	15
Minimum	−5

12.7 Adjusting the low-speed compression damping of the shock absorber

Caution


Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

– Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

Info

The low-speed compression adjuster takes effect during slow to normal compression of the shock absorber.

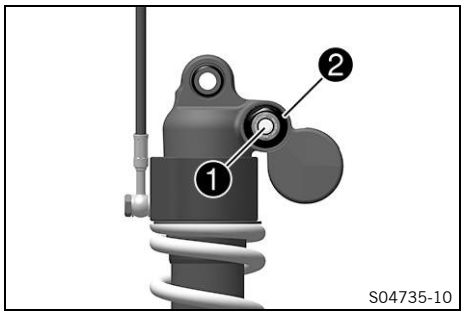

– Turn adjusting screw ❶ clockwise with a screwdriver as far as the last perceptible click.

Info

Do not loosen fitting ❷!

– Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Low-speed compression damping	
Comfort	20 clicks
Standard	15 clicks
Sport	12 clicks

Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.


12.8 Adjusting the high-speed compression damping of the shock absorber

Caution
Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

– Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

Info
The high-speed compression adjuster takes effect during fast compression of the shock absorber.

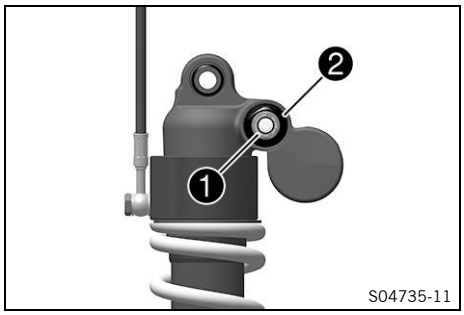

– Turn adjusting screw ❶ all the way clockwise with a socket wrench.

Info
Do not loosen fitting ❷!

– Turn counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

High-speed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1.5 turns

Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.


12.9 Adjusting the rebound damping of the shock absorber

Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

– Please follow the description provided. (Your authorized KTM workshop will be glad to help.)

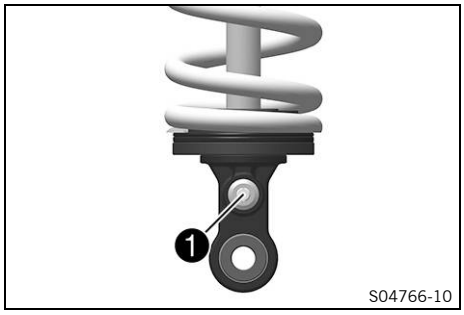

– Turn adjusting screw 1 clockwise up to the last perceptible click.
– Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Rebound damping	
Comfort	20 clicks
Standard	15 clicks
Sport	10 clicks

Info


Turn clockwise to increase the damping; turn counterclockwise to reduce damping when the shock absorber rebounds.

13.1 Lifting the motorcycle with the rear lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

– Park the vehicle on a firm and level surface.

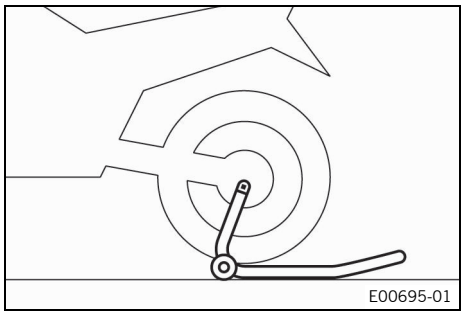
E00695-01

– Place the adapter into the rear lifting gear.

Rear wheel work stand for single-sided swing arm (61329955000)


– Position the motorcycle upright, place the lifting gear in the axle, and raise the motorcycle.

13.2 Removing the rear of motorcycle from the lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

– Park the vehicle on a firm and level surface.

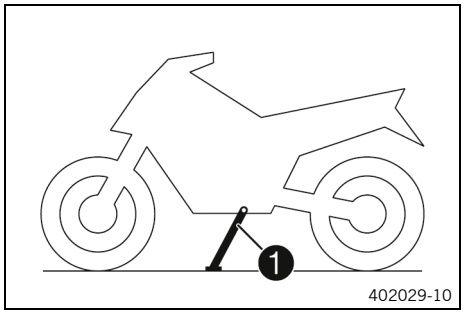

402029-10

– Secure the motorcycle against falling over.
– Remove the rear wheel stand and lean the vehicle on side stand ❶.

13.3 Lifting the motorcycle with the front lifting gear


Note

Danger of damage The parked vehicle can roll away or fall over.

– Park the vehicle on a firm and level surface.

Preparatory work

– Lift the motorcycle with the rear lifting gear. (📖 p. 95)

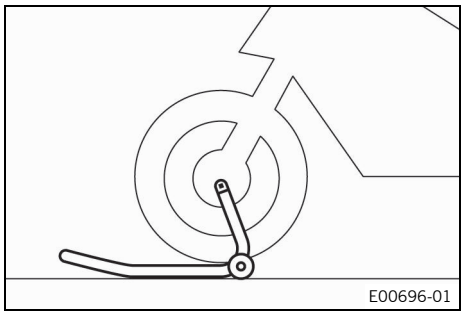
E00696-01

Main work

– Move the handlebar to the straight-ahead position. Align the front lifting gear with the fork legs.

Front wheel work stand, small (61129965100)

Info
Always raise the motorcycle at the rear first.


– Lift the motorcycle at the front.

13.4 Taking the motorcycle off the front lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

– Park the vehicle on a firm and level surface.

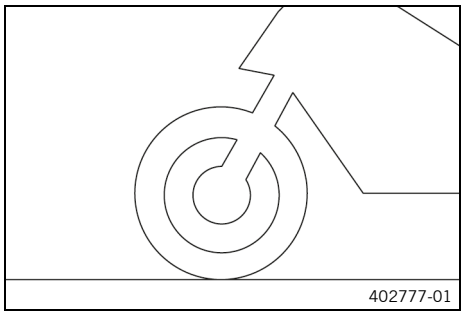


– Secure the motorcycle against falling over.
– Remove the front lifting gear.

13.5 Cleaning the dust boots of the fork legs

Preparatory work

– Lift the motorcycle with the rear lifting gear. (📖 p. 95)
– Lift the motorcycle with the front lifting gear. (📖 p. 95)

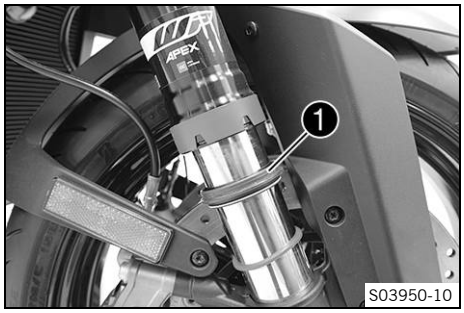

Main work

– Push dust boots ❶ of both fork legs downward.

Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.

Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

– Always keep the brake discs free of oil and grease.
– Clean the brake discs with brake cleaner when necessary.

– Clean and oil the dust boots and inner fork tubes of both fork legs.

Universal oil spray (📖 p. 163)

– Press dust boots back into the installation position.
– Remove excess oil.


Finishing work

– Take the motorcycle off the front lifting gear. (📖 p. 96)
– Remove the rear of the motorcycle from the lifting gear. (📖 p. 95)

13.6 Removing the passenger seat


Condition

The motorcycle is stationary.
The engine is switched off.
The ignition has been switched on or off for less than 1 minute.

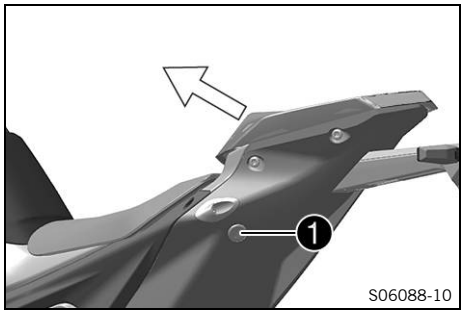

– Press seat release button ❶.
– Raise the front of the passenger seat, pull it toward the fuel tank and take off from above.

13.7 Mounting the passenger seat

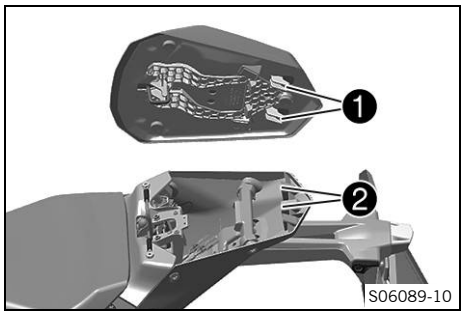

– Attach the hooks on the passenger seat ❶ to the hanger on the subframe.

Info
Ensure that the seat heating cable is correctly routed.


– Lower the front of the passenger seat and push it toward the rear at the same time.
– Position locking pin ❷ in the lock housing and press the passenger seat forward until the locking pin engages with an audible click.
– Check that the passenger seat is mounted correctly.

13.8 Removing the front rider's seat

Preparatory work


– Remove the passenger seat. (📖 p. 97)

Main work

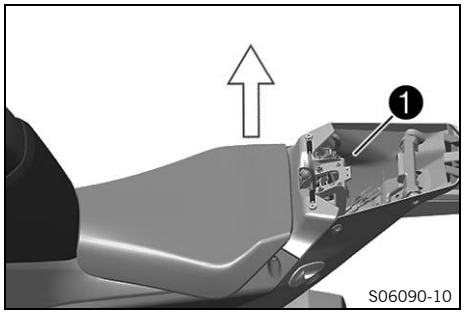

– Unlock the front rider's seat with loop ❶ underneath the passenger seat.
– Raise the front rider's seat at the rear and remove it.

13.9 Mounting the front rider's seat

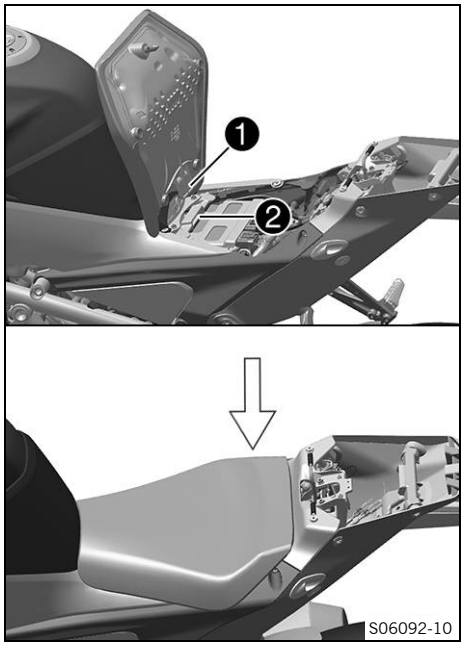


Main work

– Hook recess ❶ of the front rider's seat into guide ❷, lower it at the rear and push it forward.
– Position the locking pin in the lock housing and push down the front rider's seat at the rear.
  ✔ The locking pin engages with an audible click.
– Check that the front rider's seat is mounted correctly.


Finishing work

– Mount the passenger seat. (📖 p. 97)


13.10 Removing the left fuel tank spoiler

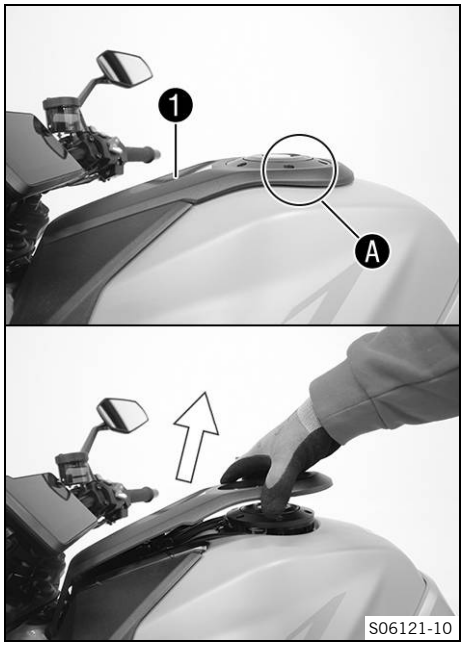


– Raise fuel tank cover ❶ in area Ⓐ and remove in the upward direction.

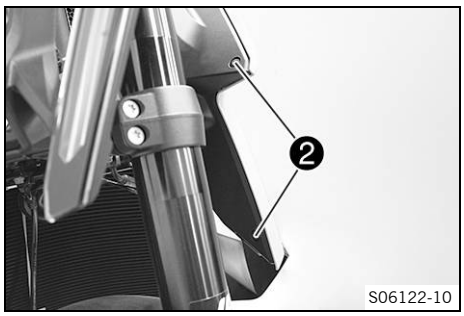


– Remove screws ❷.

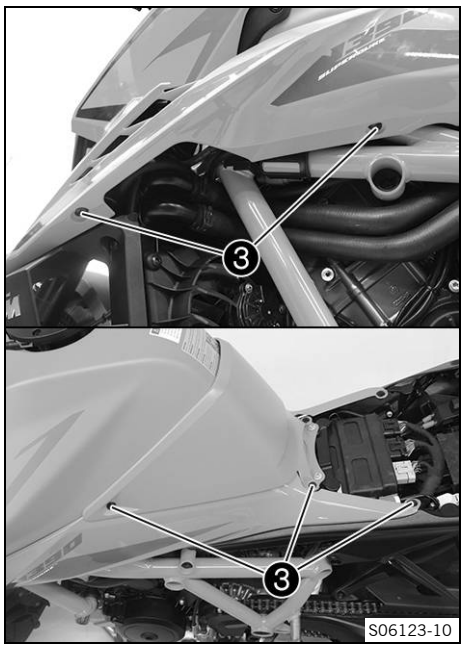

– Remove screws ❸.
– Detach the left outer fuel tank spoiler and remove it to the side.

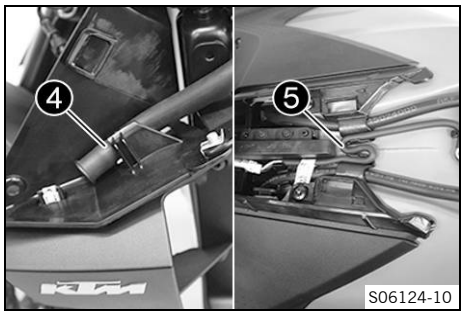


– Detach hose ❹ and cable ❺.

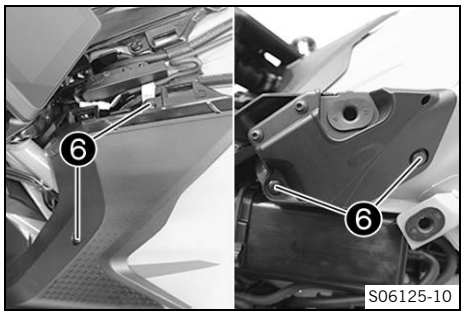

– Remove screws ❻ and take off the inner fuel tank spoiler.

◆

13.11 Installing the left fuel tank spoiler

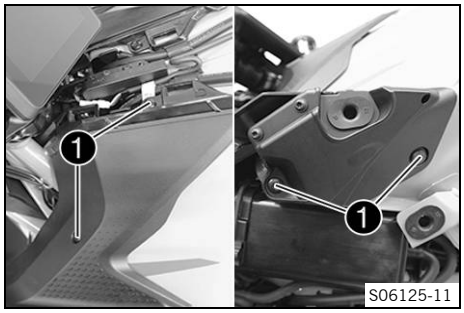


– Position the inner fuel tank spoiler.

Info
Make sure the cables and hoses are routed correctly.

– Mount and tighten screws ❶.


Guideline

Screw, trim	M5	3.5 Nm (2.58 lbf ft)

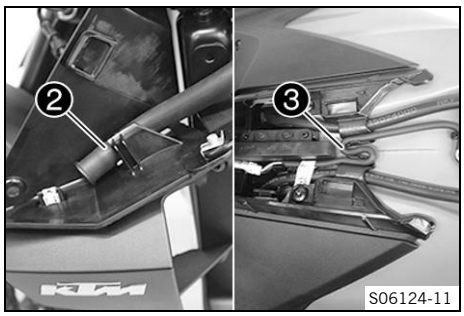

– Attach hose ❷ and cable ❸.


Info
Make sure the cables and hoses are routed correctly.

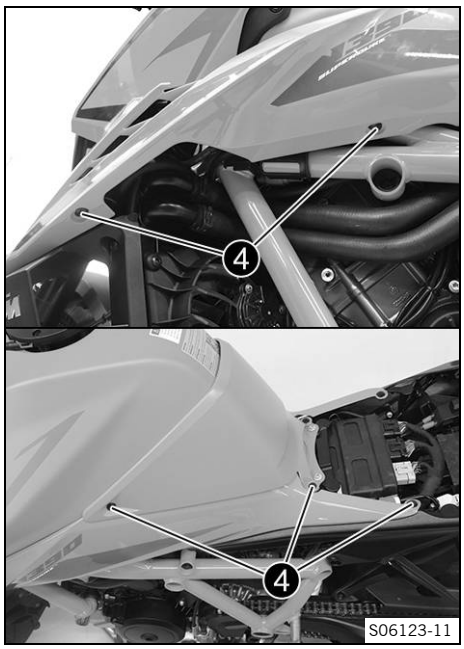

– Position and attach the outer fuel tank spoiler.
– Mount and tighten screws ❹.

Guideline


Screw, trim	M5	3.5 Nm (2.58 lbf ft)

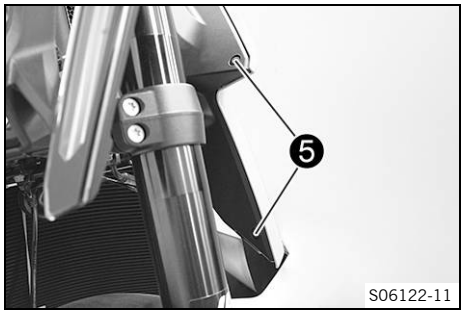

– Mount and tighten screws ❺.

Guideline


Screw, trim	M5	3.5 Nm (2.58 lbf ft)

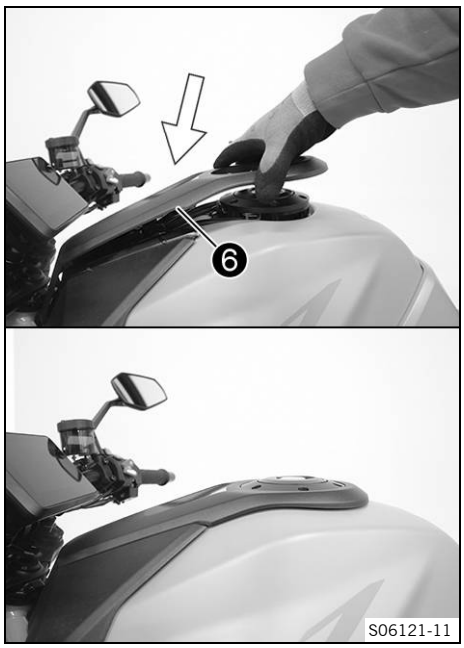


– Position fuel tank cover ❻ on the fuel tank cap and press it in from the front to the rear.

13.12 Removing the main silencer

Warning
Danger of burns The exhaust system gets hot when the vehicle is driven.
– Allow the exhaust system to cool down before performing any work on the vehicle.

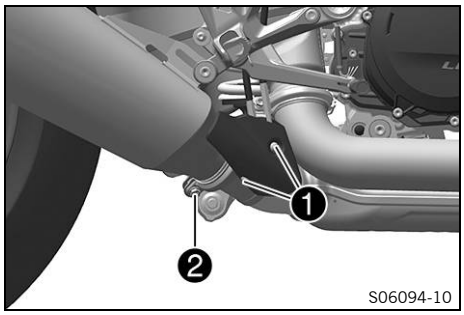


– Remove screws ❶ and take off the cover.
– Remove screw ❷ and take off exhaust clamp.

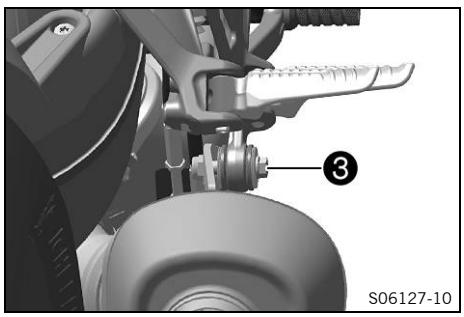

– Remove screw ❸ with washer.


Warning
Risk of injury Moving parts of the exhaust valve constitute a risk of injury.
– Do not touch the exhaust valve if the main silencer has been removed.
– Make sure that nobody gets caught when the exhaust valve is actuated.

– Take off the main silencer.

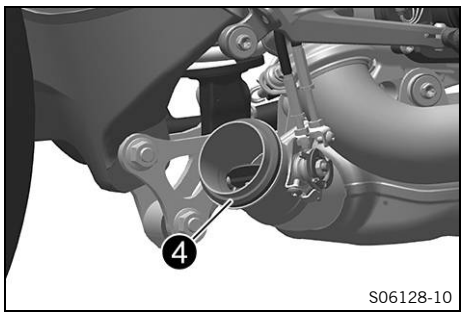


– Remove seal ring ❹.

13.13 Installing the main silencer

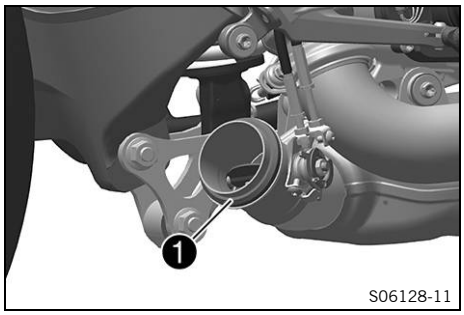


Warning
Risk of injury Moving parts of the exhaust valve constitute a risk of injury.
– Do not touch the exhaust valve if the main silencer has been removed.
– Make sure that nobody gets caught when the exhaust valve is actuated.

– Mount seal ring ❶.

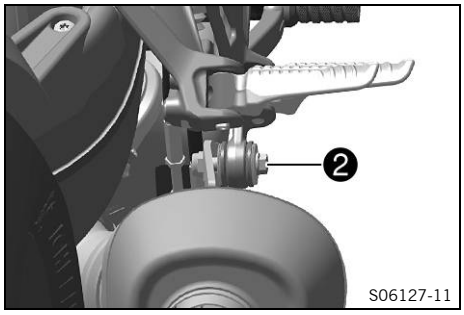

– Position the main silencer.
– Mount screw ❷ with washer, but do not tighten yet.

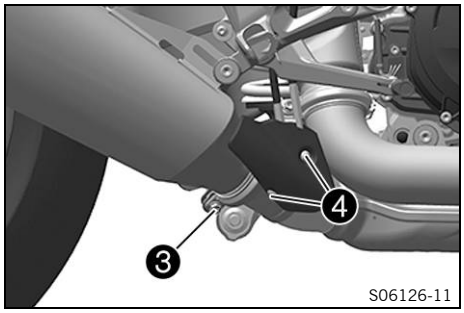

– Position the exhaust clamp.
– Mount and tighten screw ❸.

Guideline

Screw, exhaust clamp on main silencer	M8	12 Nm (8.9 lbf ft)

– Tighten screw ❷.

Guideline


Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)

– Position the heat protector.
– Mount and tighten screws ❹.

Guideline

Screw, heat protector on main silencer	M5	4 Nm (3 lbf ft)

13.14 Checking the chain for dirt

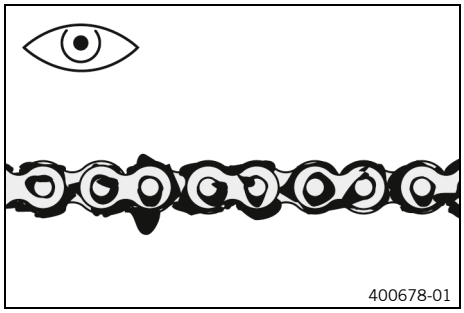

– Check the chain for coarse dirt accumulation.
  » If the chain is very dirty:
    – Clean the chain. (p. 103)


13.15 Cleaning the chain

Warning
Danger of accidents Lubricants on the tires reduces the road grip.
– Remove lubricants from the tires using a suitable cleaning agent.

Warning
Danger of accidents Oil or grease on the brake discs reduces the braking effect.
– Always keep the brake discs free of oil and grease.
– Clean the brake discs with brake cleaner when necessary.

Note
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info
The service life of the chain depends largely on its maintenance.
Regular cleaning increases the service life of the chain.

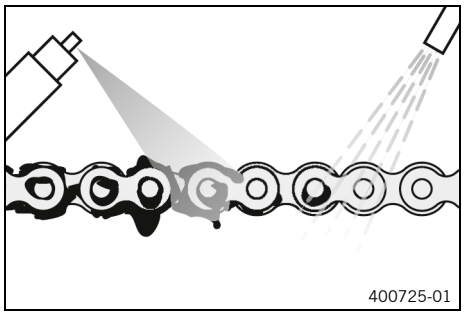

Preparatory work
– Lift the motorcycle with the rear lifting gear. (p. 95)

Main work
– Rinse off loose dirt with a soft jet of water.
– Remove old grease residue with chain cleaner.

Chain cleaner (p. 163)

– After drying, apply chain spray.

Street chain spray (p. 163)

Finishing work
– Remove the rear of the motorcycle from the lifting gear. (p. 95)

13.16 Checking the chain tension

Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

– Check the chain tension regularly.
– Set the chain tension in accordance with the specification.

Preparatory work

– Lift the motorcycle with the rear lifting gear. (p. 95)

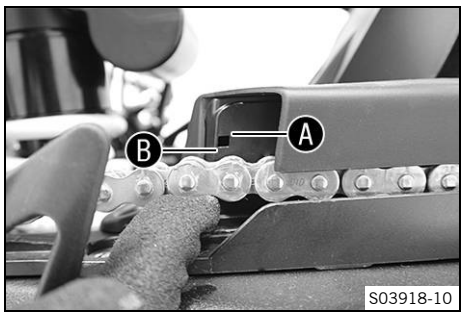

Main work


– Shift the transmission into neutral.
– At the chain sliding guard in the area of markings Ⓐ and Ⓑ, push the chain upward and determine the chain tension.

Info

The lower chain section must be taut.
Chain wear is not always even, so you should repeat this measurement at different chain positions.

The upper edge of the chain is located between markings Ⓐ and Ⓑ.

» If the chain tension does not meet the specification:
– Adjust the chain tension. (p. 105)

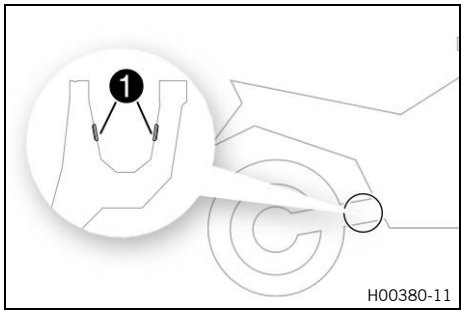

– Check protection caps ❶ for damage and tightness.
» If the protection caps are damaged or loose:
– Replace the protection caps.

Link fork protection cap (61304041100)

Finishing work

– Remove the rear of the motorcycle from the lifting gear. (p. 95)

13.17 Adjusting the chain tension

Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

– Check the chain tension regularly.
– Set the chain tension in accordance with the specification.

Preparatory work

– Lift the motorcycle with the rear lifting gear. (📖 p. 95)
– Check the chain tension. (📖 p. 104)

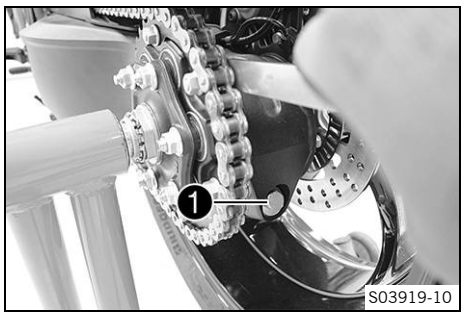

Main work

– Loosen screw 1.
– Set the chain tension by turning the hub housing.

Holding wrench (61329085000)
Handle for holding wrench (60012060000)

Info
Turn clockwise to increase the chain tension; turn counterclockwise to reduce the chain tension.
The tool required is in the tool set.

– Check the chain tension. (📖 p. 104)
✓ The chain tension matches the specified value.

Info
Chain wear is not always even, so you should repeat this measurement at different chain positions.

– Tighten screw 1.
Guideline


Screw, eccentric	M16	70 Nm (51.6 lbf ft)

– Remove the rear of the motorcycle from the lifting gear. (📖 p. 95)

13.18 Checking the chain, rear sprocket, engine sprocket, and chain guide

Preparatory work


– Lift the motorcycle with the rear lifting gear. (📖 p. 95)

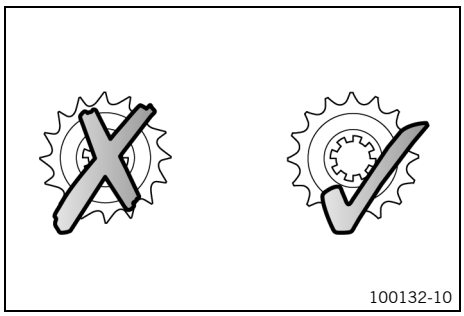
100132-10

Main work

– Check the chain, rear sprocket, and engine sprocket for wear.
  » If the chain, rear sprocket or motor sprocket is worn:
    – Change the drivetrain kit.

Info
The engine sprocket, the rear sprocket, and the chain should always be replaced together.

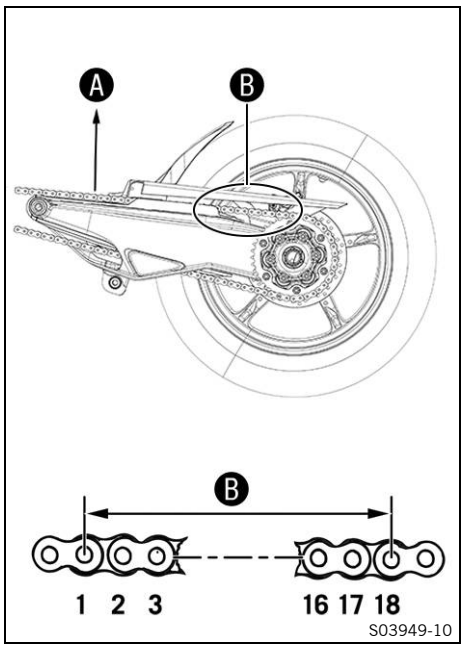

S03949-10

– Shift the transmission into neutral.
– Pull on the top section of the chain with the specified weight A.

Guideline

Weight, chain wear measurement	15 kg (33 lb.)

– Measure distance B of 18 chain rollers in the upper chain section.

Info
Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B from 18 chain rollers at the longest chain section	272 mm (10.71 in)

  » If distance B is greater than the specified measurement:
    – Change the drivetrain kit.


Info
When a new chain is mounted, the rear sprocket and the engine sprocket should also be changed.
New chains wear out faster on an old, worn rear sprocket or engine sprocket.
For safety reasons, the chain has no chain joint.


S04102-01

– Check the chain sliding guard for wear.
  » If the chain sliding guard shows a lot of wear:
    – Change the chain sliding guard.
– Check that the chain sliding guard is firmly seated.
  » If the chain sliding guard is loose:
    – Tighten screws on the chain sliding guard.

Guideline

Screw, chain sliding guard	M5	5 Nm (3.7 lbf ft)

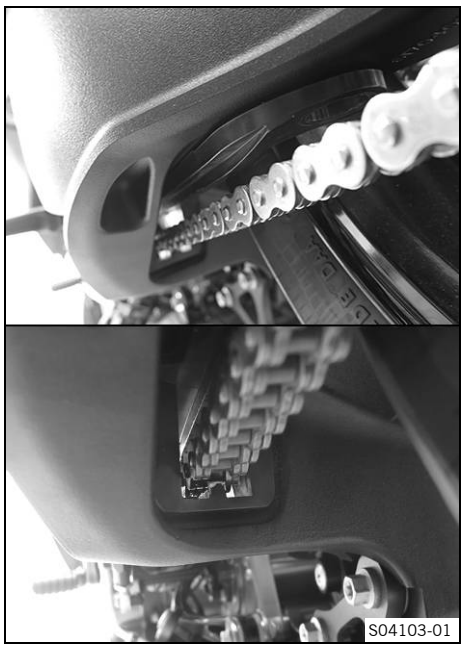

– Check the chain sliding piece for wear.
  » If the lower edge of the chain is in line with or below the chain sliding piece:
    – Change the chain sliding piece.
– Check that the chain sliding piece is firmly seated.
  » If the chain sliding piece is loose:
    – Tighten screw on the chain sliding piece.

    Guideline

Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)

Finishing work

– Remove the rear of the motorcycle from the lifting gear. (p. 95)

13.19 Checking/correcting the fluid level of hydraulic clutch

Warning

Skin irritation Brake fluid is a harmful substance.

– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
– Consult a doctor immediately if brake fluid has been swallowed.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.


Note

Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info

The fluid level rises with increasing wear of the clutch facing discs.
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

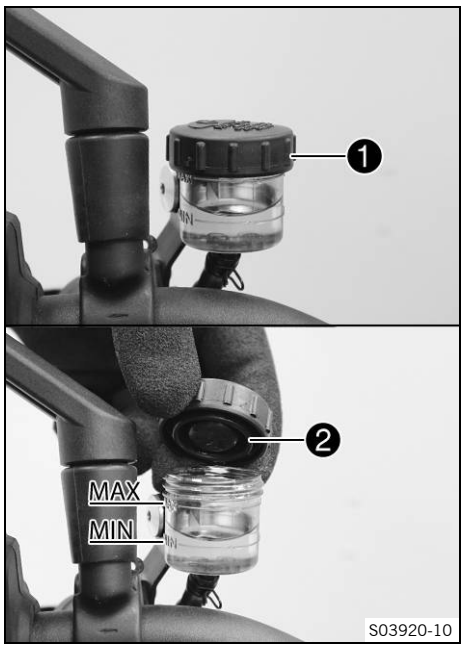

– Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
– Check the fluid level.

The fluid level must be between the **MIN** and **MAX** markings.


» If the fluid level does not meet specifications:
  – Remove screw cap ❶ with membrane ❷ and the shim.
  – Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (📖 p. 161)

  – Mount and tighten screw cap ❶ with membrane ❷ and the shim.

Info
Use water to immediately clean up any brake fluid that has overflowed or spilled.

14.1 Anti-lock braking system (ABS)

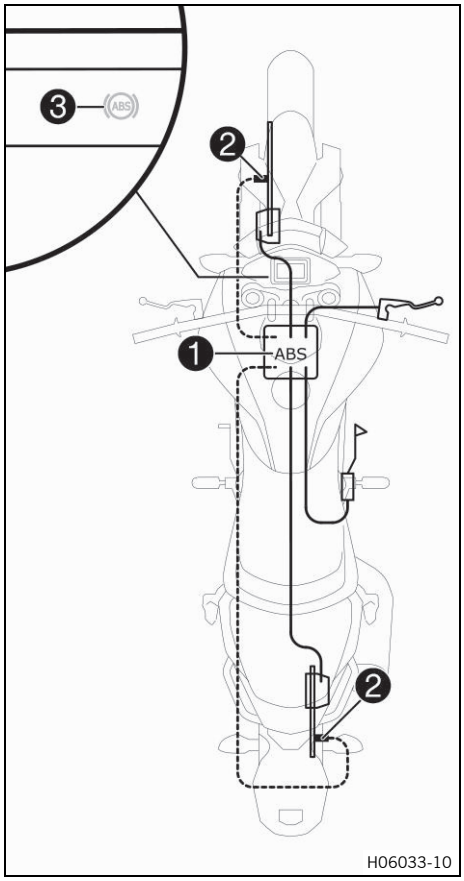

The ABS module ❶, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the fuel tank. One wheel speed sensor ❷ is located in each case on the front and the rear wheel.

Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by KTM.
- Only use tires/wheels approved by KTM with the corresponding speed index.
- Maintain the specified tire pressure.
- Ensure that service work and repairs are performed professionally. (Your authorized KTM workshop will be glad to help.)

The ABS is a safety system that prevents the wheels locking when driving straight ahead or when cornering (within the limits of physics).

Warning

Danger of accidents Driving aids can reduce the probability of a fall only within physical limits.

It is not always possible to compensate for certain riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

- Adapt your riding style to the road conditions and your driving ability.

Warning

Danger of accidents An incorrectly selected ABS mode makes control of the vehicle considerably more difficult.

The ABS modes are each only suitable for certain conditions.

- Always select an ABS mode that is compatible with the surface of the ground.

The ABS control is dependent on the riding mode. ABS has two operating modes: the **Road** and **Supermoto** ABS modes.
In ABS mode **Road**, ABS controls both wheels.
In ABS mode **Supermoto**, there is no ABS control on the rear wheel.

Info

The curve dependent control is only active in ABS mode **Road**.

The ABS operates with two independent brake circuits (front and rear brakes). When the ABS control unit detects a locking ten-

dency in a wheel, ABS begins regulating the brake pressure. The control function causes a slight pulsing of the hand and foot brake levers.

The ABS warning lamp ❸ must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it is lit while riding, this indicates a fault in the ABS. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making "wheelies" or if the rear wheel spins. This causes the ABS to switch off.


To reactivate the ABS, stop the vehicle and switch off the ignition. The ABS is reactivated when the vehicle is switched on again. The ABS warning lamp goes out after starting off.

14.2 Checking the brake discs

Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

– Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

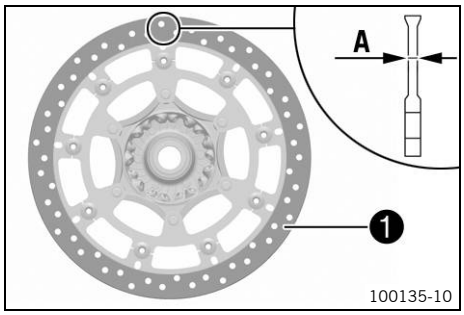

– Check the front and rear brake disc thickness at multiple points for the dimension Ⓐ.

Info

Wear will reduce the thickness of the brake disc at contact surface ❶ of the brake linings.

Brake discs - wear limit	
front	4.5 mm (0.177 in)
rear	4.5 mm (0.177 in)

» If the brake disc thickness is less than the specified value:
  – Change the front brake discs.
  – Change the rear brake disc.

– Check the front and rear brake discs for damage, cracking, and deformation.

» If the brake disc exhibits damage, cracking, or deformation:
  – Change the front brake discs.
  – Change the rear brake disc.

14.3 Checking the front brake fluid level

Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.


If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

– Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)
– Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized KTM workshop will be glad to help.)

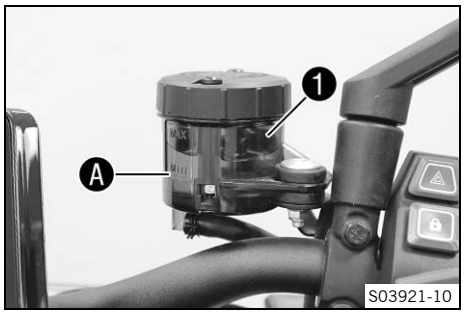

– Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
– Check brake fluid level in brake fluid reservoir 1.
  » If the brake fluid level has dropped below **MIN** marking A:
    – Add front brake fluid. (p. 111)

14.4 Adding front brake fluid

Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

– Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

Warning


Skin irritation Brake fluid is a harmful substance.

– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
– Consult a doctor immediately if brake fluid has been swallowed.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

Warning
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.
– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)
– Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized KTM workshop will be glad to help.)

Note
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

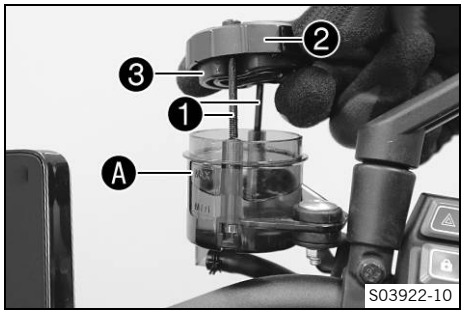

Preparatory work
– Check that the brake linings of the front brake are secured. (p. 112)

Main work
– Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
– Remove screws ❶.
– Take off cover ❷ with membrane ❸.
– Add brake fluid up to the **MAX** marking Ⓐ.

Brake fluid DOT 4 / DOT 5.1 (p. 161)

– Position cover ❷ with membrane ❸.
– Mount and tighten screws ❶.

Guideline

Brake fluid reservoir for front brake cover	-	1 Nm (0.7 lbf ft)

Info
Use water to immediately clean up any brake fluid that has overflowed or spilled.


14.5 Checking that the brake linings of the front brake are secured

Warning
Danger of accidents Worn-out brake linings reduce the braking effect.
– Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

– Check the brake linings regularly.

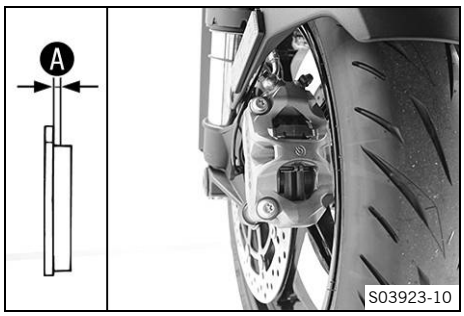

– Check all brake linings on both brake calipers for their lining thickness Ⓐ.

Minimum thickness Ⓐ	≥ 1 mm (≥ 0.04 in)

» If it is less than the minimum thickness:
– Change the brake linings of the front brake.
– Check all the brake linings on both the brake calipers for damage and cracking.
» If there is damage or cracking:
– Change the brake linings of the front brake.
– Check that the brake linings are secured.
» If the brake linings are not secured correctly:
– Secure brake linings, replace with new parts if necessary.

14.6 Checking the rear brake fluid level


Warning
Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

– Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)
– Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized KTM workshop will be glad to help.)

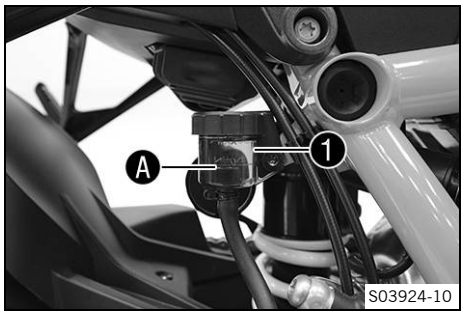

– Position the vehicle vertically.
– Check brake fluid level in brake fluid reservoir ❶.
» If the fluid level reaches the **MIN** marking Ⓐ:
– Add rear brake fluid. (📖 p. 114)

14.7 Adding rear brake fluid

Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

– Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

Warning

Skin irritation Brake fluid is a harmful substance.

– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
– Consult a doctor immediately if brake fluid has been swallowed.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)
– Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized KTM workshop will be glad to help.)

Note

Environmental hazard Hazardous substances cause environmental damage.


– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

– Check that the brake linings of the rear brake are secured. (📖 p. 115)

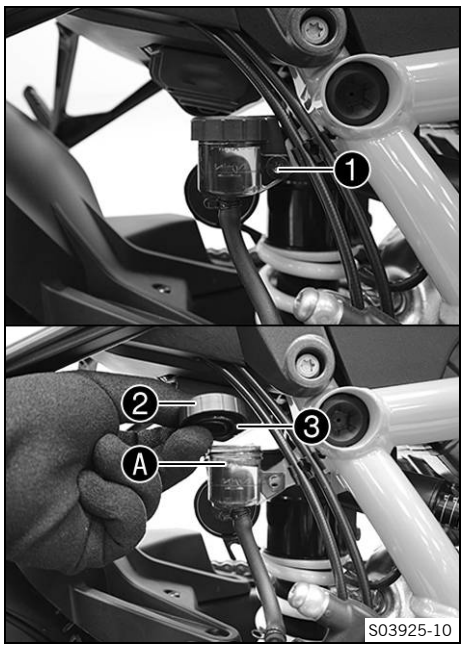

Main work

– Stand the vehicle upright.
– Remove screw ❶ with the screw cap lock.

Info
Make sure that the reservoir stays vertical and no brake fluid runs out.

– Remove screw cap ❷ with the washer and membrane ❸.
– Add brake fluid up to the **MAX** marking Ⓐ.

Brake fluid DOT 4 / DOT 5.1 (p. 161)

– Mount and tighten screw cap ❷ with the shim and membrane ❸.
– Position the screw cap lock and mount and tighten screw ❶.

Guideline

Screw, brake fluid reservoir, rear brake	M5	3.5 Nm (2.58 lbf ft) **Loctite®243™**

Info
Use water to immediately clean up any brake fluid that has overflowed or spilled.


14.8 Checking that the brake linings of the rear brake are secured

Warning
Danger of accidents Worn-out brake linings reduce the braking effect.
– Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

– Check the brake linings regularly.

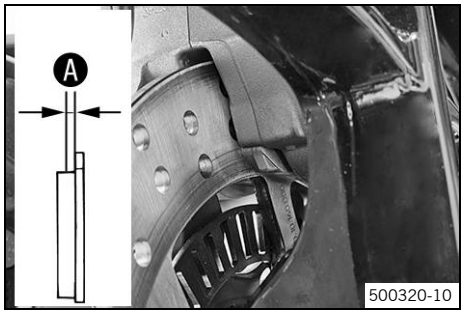

– Check the brake linings for lining thickness Ⓐ.


Minimum thickness Ⓐ	≥ 1 mm (≥ 0.04 in)

» If it is less than the minimum thickness:
– Change the rear brake linings.
– Check the brake linings for damage and cracking.
» If there is damage or cracking:
– Change the rear brake linings.
– Check that the brake linings are secured.
» If the brake linings are not secured correctly:
– Secure brake linings, replace with new parts if necessary.

15.1 Removing the front wheel

Preparatory work


– Lift the motorcycle with the rear lifting gear. (p. 95)
– Lift the motorcycle with the front lifting gear. (p. 95)

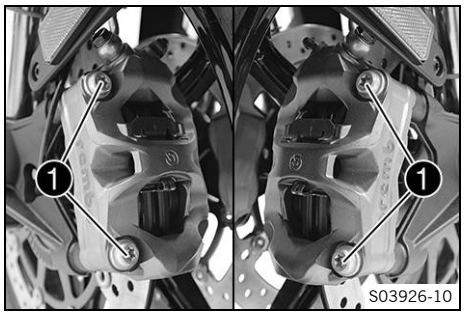

Main work

– Remove screws 1 from both brake calipers.
– Press back brake linings by slightly tilting the brake calipers laterally on the brake disc. Pull brake calipers carefully back from the brake discs and hang to the side.


Info
Do not operate the hand brake lever if the brake calipers have been removed.

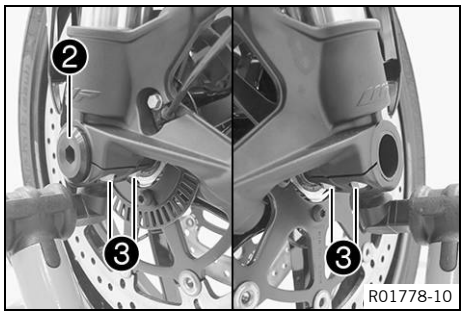

– Loosen screw 2 and screws 3.
– Using your hand, press on screw 2 to push the wheel spindle out of the axle clamp. Remove screw 2.


Warning
Danger of accidents Damaged brake discs reduce the braking effect.
– Always lay the wheel down in such a way that the brake discs are not damaged.

– Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

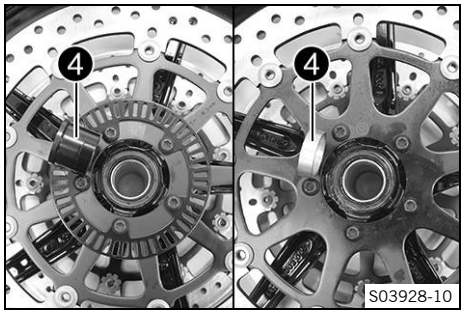


– Remove spacers 4.

15.2 Installing the front wheel

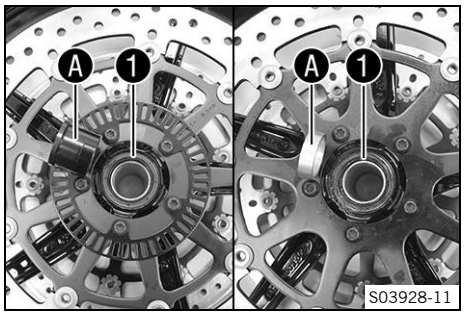

– Check the wheel bearing for damage and wear.
  » If the wheel bearing is damaged or worn:
    – Change front wheel bearing.
– Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.


Long-life grease (p. 163)

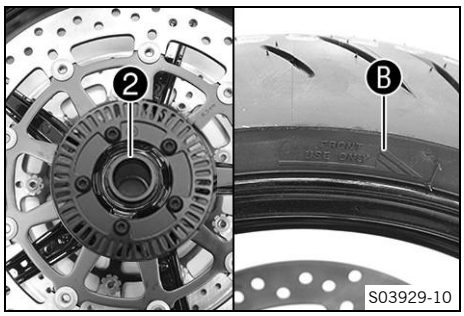

– Insert wide spacer ❷ on the left in the direction of travel.

Info
Arrow Ⓑ indicates the direction of travel of the front wheel.
The wheel speed sensor wheel is on the left viewed in the direction of travel.

– Insert the narrow spacer on the right in the direction of travel.

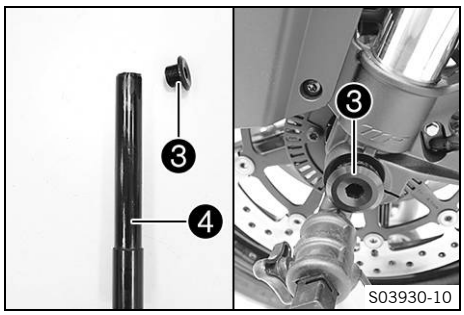

Warning
Danger of accidents Oil or grease on the brake discs reduces the braking effect.
– Always keep the brake discs free of oil and grease.
– Clean the brake discs with brake cleaner when necessary.

– Clean screw ❸ and wheel spindle ❹.
– Grease wheel spindle ❹ lightly.


Long-life grease (📖 p. 163)

– Jack up the front wheel into the fork, position it, and insert the wheel spindle.
– Mount and tighten screw ❸.

Guideline

Screw, front wheel spindle	M25x1.5	45 Nm (33.2 lbf ft) Thread greased

Tip
Temporarily tighten one of the axle clamp screws so that the axle does not rotate with it.
Loosen the axle clamp screw again before compression to allow the fork legs to align.

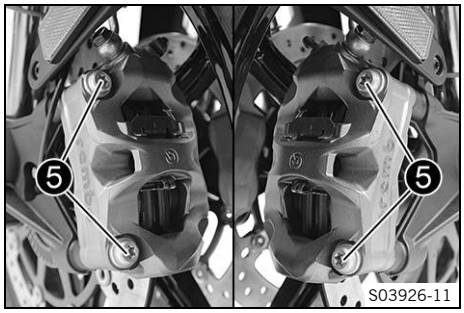


– Position brake calipers and check that the brake linings are seated correctly.
– Mount screws ❺ on both brake calipers, but do not tighten yet.
– Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point. Secure the hand brake lever in the activated position.
✔ The brake calipers straighten.
– Tighten screws ❺ on both brake calipers.

Guideline

Screw, front brake caliper	M10	45 Nm (33.2 lbf ft) **Loctite®243™**

– Remove the locking piece of the hand brake lever.
– Take the motorcycle off the front lifting gear. (📖 p. 96)
– Remove the rear of the motorcycle from the lifting gear. (📖 p. 95)

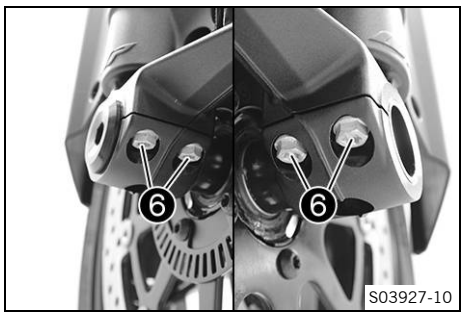

– Operate the front brake and compress the fork a few times firmly.
  ✔ The fork legs straighten.
– Tighten screws ❻.


Guideline

Screw, axle clamp	M8	15 Nm (11.1 lbf ft)

15.3 Removing the rear wheel


Preparatory work

– Lift the motorcycle with the rear lifting gear. (📖 p. 95)
– Remove main silencer. (📖 p. 101)

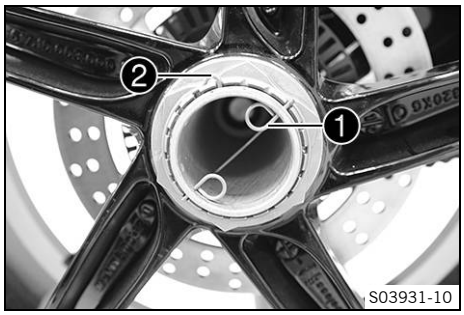

Main work

– Remove inside locking wire ❶.
– Remove outside locking wire ❷.

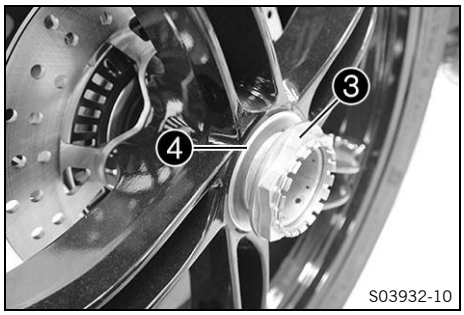


– Have an assistant operate the rear brake.
– Loosen nut ❸ and remove it with washer ❹.
– Take off the rear wheel.

15.4 Installing the rear wheel

Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

– Always keep the brake discs free of oil and grease.
– Clean the brake discs with brake cleaner when necessary.

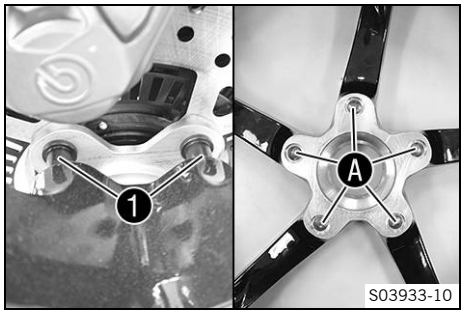


Main work

– Check the rear wheel bearing for damage and wear.
  » If the rear wheel bearing is damaged or worn:
    – Change the rear wheel bearing.
– Clean and grease the threads of the wheel axle and axle nut.


Long-life grease (📖 p. 163)

– Slide the rear wheel onto the axle.
  ✔ Driving pins ❶ engage in drilled holes Ⓐ of the rim.

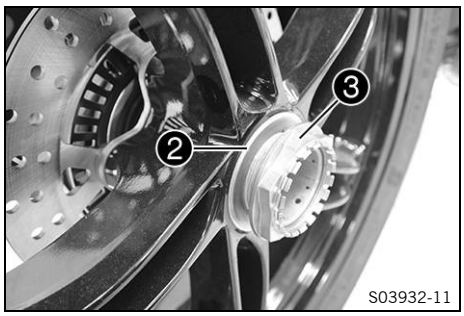

– Mount washer ❷ and nut ❸.
– Have an assistant operate the rear brake.
– Tighten nut ❸.
  Guideline

Nut, rear axle	M50x1.5	250 Nm (184.4 lbf ft) Thread greased/lock locking wire with locking varnish

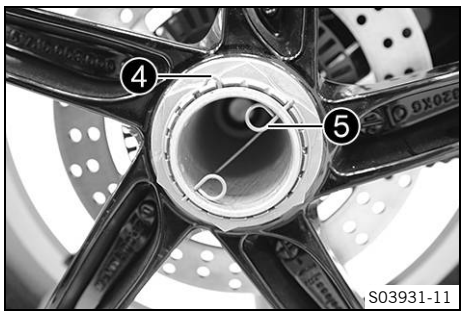

– Mount outside locking wire ❹.
– Mount inside locking wire ❺.
  ✔ The pins of the locking wires engage in the drilled holes of the wheel axle.

Finishing work

– Remove the rear of the motorcycle from the lifting gear. (📖 p. 95)
– Install the main silencer. 🔧 (📖 p. 102)

15.5 Checking the tire condition

Warning

Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

– Ensure that damaged or worn tires are replaced immediately. (Your authorized KTM workshop will be glad to help.)

Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

– Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.

Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

– Only use tires/wheels approved by KTM with the corresponding speed index.


Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

– Run in new tires with moderate riding and only gradually increase the lean angle.
  Run-in distance 200 km (124 mi)

Info
Tire type, tire condition, and tire pressure influence the braking and handling characteristics of the vehicle.
Worn tires are particularly unfavorable on wet surfaces.

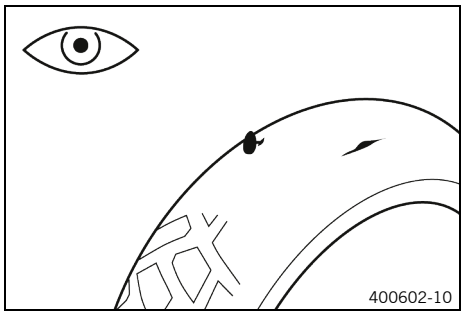


– Check front and rear tires for cuts, run-in objects, and other damage.
  » If the tires have cuts, run-in objects, or other damage:
    – Change the tires.
– Check tread depth.

Info
Observe the minimum profile depth required by national law.

Minimum tread depth	≥ 2 mm (≥ 0.08 in)

  » If the tread depth is less than the minimum tread depth:
    – Change the tires.

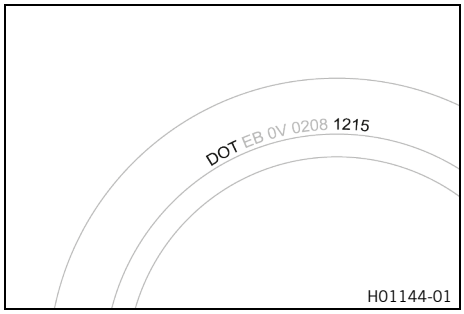


– Check tire age.

Info
The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

  » If the tires are more than 5 years old:
    – Change the tires.

15.6 Checking tire pressure

Info
Low tire pressure leads to abnormal wear and overheating of the tire.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

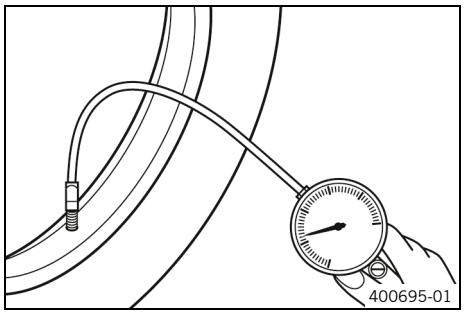


– Remove the protection cap.
– Check the tire pressure when the tires are cold.

Tire pressure when solo	
front: with cold tires	2.5 bar (36 psi)
rear: with cold tires	2.5 bar (36 psi)

Tire pressure with passenger / full payload	
front: with cold tires	2.5 bar (36 psi)
rear: with cold tires	2.9 bar (42 psi)

  » If the tire pressure does not meet specifications:
    – Correct the tire pressure.
– Mount the protection cap.

15.7 Using tire repair spray

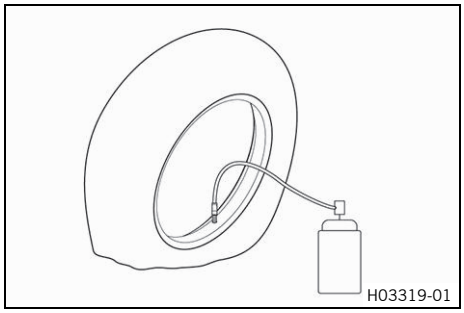

Warning

Danger of accidents Incorrect use of tire repair spray will result in the repaired tire losing pressure.

Tire repair spray cannot be used for all types of damage.

- Observe the instructions and specifications of the manufacturer of the tire repair spray.
- After repairing a tire with tire repair spray, ride slowly and carefully.
- Ride no further than to the nearest workshop and have the tire changed.


Tire repair spray should only be used in an emergency.
We recommend transporting the broken down vehicle to the nearest workshop instead of using tire repair spray.

Note

Material damage Tire repair spray damages the tire pressure sensor.

- Note that after using tire repair spray, the tire pressure sensor may need to be replaced.

16.1 Daytime running light (DRL)

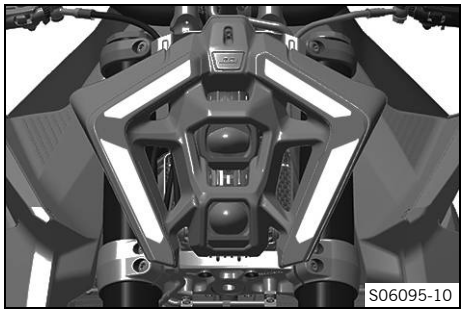

Warning

Danger of accidents When visibility is poor, the daytime running light is not a substitute for the low beam.

Automatic switching between the daytime running light and low beam may only be partially available when visibility is significantly impaired due to fog, snow or rain.

- Ensure that the appropriate type of lighting is always selected.
- If necessary switch off the daytime running lights using the menu before going on a ride or when stopped so that the low beam is switched on permanently.
- Make sure that the daytime running light is deactivated with the diagnostics tool when the menu item is not available, but the low beam is required. (Your authorized KTM workshop will be glad to help.)
- Note the legal regulations regarding the daytime running light.

The daytime running (DRL)/position light is integrated in the main headlight. The daytime running light is brighter than the position light.

The daytime running light must only be switched on when visibility conditions are good.

This is controlled by the ambient light sensor in the combination instrument. When visibility conditions are good, the low beam with position light is switched off and the daytime running light is switched on.

When the daytime running light is switched off, the low beam with position light lights up.

On high beam or headlight flasher, the daytime running light changes automatically to the position light.

16.2 Removing the 12-V battery

Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.

Caution


Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

– Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.


Preparatory work

– Remove the passenger seat. (p. 97)
– Remove the front rider's seat. (p. 97)

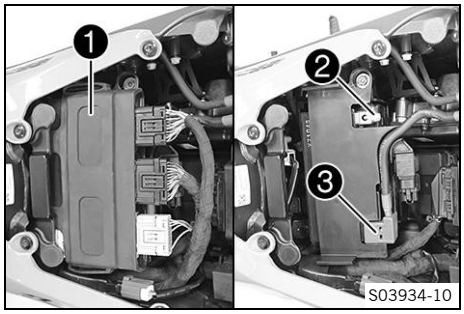

Main work

– Remove control unit ❶ and hang to the side.
– Disconnect negative cable ❷ from the 12-V battery.
– Remove positive terminal cover ❸ and disconnect the positive cable from the 12-V battery.

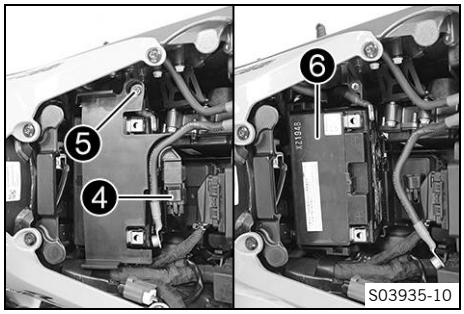

– Disconnect plug-in connector ❹.
– Remove screw ❺ and take off the battery cover.
– Take the 12-V battery ❻ out of the battery compartment.

16.3 Installing the 12-V battery

Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.


– Keep 12 V batteries out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Avoid contact with battery acid and battery gases.
– Keep sparks or open flames away from the 12 V battery.
– Only charge 12 V batteries in well-ventilated rooms.
– Rinse the affected area immediately with plenty of water in the event of contact with the skin.
– Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.


Caution

Danger of accidents Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

– Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.

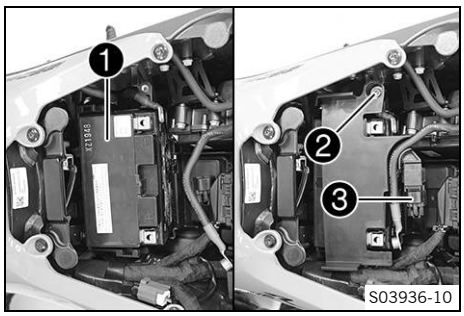

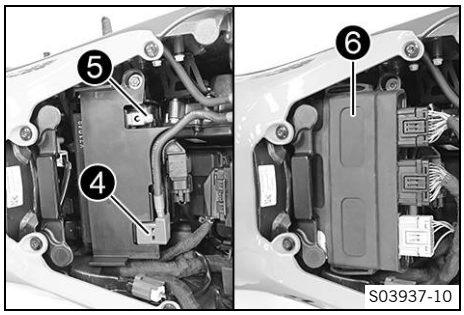

Main work

– Insert 12-V battery ❶ into the battery compartment.

12-V battery (YTZ14S) (📖 p. 153)

– Position the battery cover, mount screw ❷, and tighten.

Guideline

Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)

– Join plug-in connector ❸.

– Position the positive cable and mount and tighten the screw.

Guideline

Screw, battery terminal	M6	4.5 Nm (3.32 lbf ft)

– Mount positive terminal cover ❹.

– Position negative cable ❺ and mount and tighten the screw.

Guideline

Screw, battery terminal	M6	4.5 Nm (3.32 lbf ft)

– Position control unit ❻.

Finishing work

– Mount the front rider's seat. (📖 p. 98)
– Mount the passenger seat. (📖 p. 97)
– Set time and date.

16.4 Charging the 12-V battery

Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

– Keep 12 V batteries out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Avoid contact with battery acid and battery gases.
– Keep sparks or open flames away from the 12 V battery.
– Only charge 12 V batteries in well-ventilated rooms.
– Rinse the affected area immediately with plenty of water in the event of contact with the skin.
– Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.

Note

Environmental hazard 12 V batteries contain environmentally hazardous materials.

– Do not dispose of 12 V batteries as household waste.
– Dispose of 12 V batteries at a collection point for used batteries.

Note

Environmental hazard Hazardous substances cause environmental damage.


– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info

Even when there is no load on the 12-V battery, it discharges steadily each day.
The charging level and the method of charging are very important for the service life of the 12-V battery.
Rapid recharging with a high charging current shortens the service life of the battery.
If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery.
If the 12-V battery is discharged by repeated starting, charge the 12-V battery immediately.
If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, thus destroying the battery.
The 12-V battery is maintenance-free. The acid level does not have to be checked.
If the 12-V battery is not charged by the KTM battery charger, the 12-V battery must be removed for charging. Otherwise, overvoltage may damage electronic components. Charge the 12-V battery according to the instructions on the battery housing.

Preparatory work

– Remove the passenger seat. (📖 p. 97)
– Remove the front rider's seat. (📖 p. 97)

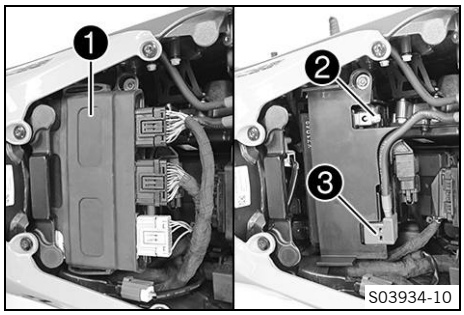

Main work

– Pull off engine control unit ❶ from the holder and hang to the side.
– Disconnect negative cable ❷ from the 12 V battery to avoid damaging the onboard electronics.
– Remove positive terminal cover ❸.



– Connect a battery charger to the 12-V battery. Connect the battery charger to the mains connection.

EU battery charger **TecMATE Optimate PRO** (A61029974044)

Alternative 1

USA/CA battery charger **TecMATE Optimate PRO** (A61029974144)

Alternative 2

UK battery charger **TecMATE Optimate PRO** (A61029974244)

It is impossible to overcharge the 12-V battery using this battery charger.


Info

After charging, the battery charger can remain on the vehicle, ensuring that the battery voltage is maintained during the maintenance charging cycle.

– Disconnect the battery charger from the power connection and the 12-V battery after charging.

Guideline

Recharge the 12-V battery regularly when the motorcycle is not being used	3 months

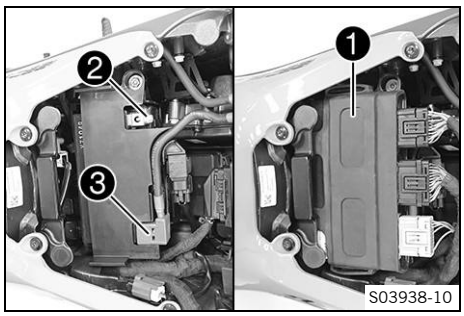

– Mount positive terminal cover ❸.
– Position negative cable ❷ and mount and tighten the screw.
  Guideline

Screw, battery terminal	M6	4.5 Nm (3.32 lbf ft)

– Position engine control unit ❶.


Finishing work
– Mount the front rider's seat. (📖 p. 98)
– Mount the passenger seat. (📖 p. 97)
– Set time and date. (📖 p. 62)

16.5 Changing the RACE ON key battery


Warning
Risk of injury Button cells may burst if misused.

Swallowing button cells leads to severe chemical burning and may result in death in under 2 hours.

– Keep button cells and the RACE ON key out of the reach of children.
– Make sure the button cells can never be swallowed or ingested.
– Seek medical attention immediately if button cells are swallowed or ingested.
– Do not expose button cells to extreme temperatures or mechanical loads.
  Permissible temperature −20 … 50 °C (−4 … 122 °F)
– Do not damage the RACE ON key by e.g. cutting or squashing it.
– Do not use the RACE ON key if the RACE ON key is damaged or the battery compartment cannot be closed.
– Replace the RACE ON key battery with the type specified only.

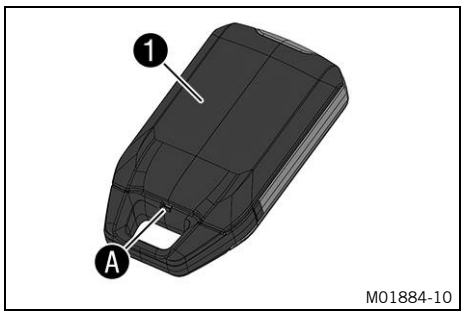


– To open cover ❶ of the RACE ON key, insert a small, blunt object into opening Ⓐ and carefully lift up the cover.

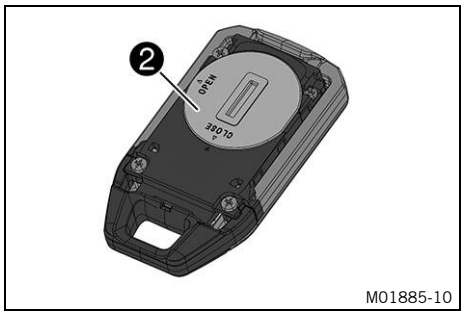

– Using a coin, turn battery cover ❷ counterclockwise and remove it.
  Guideline

Ensure that the O-ring remains in place.

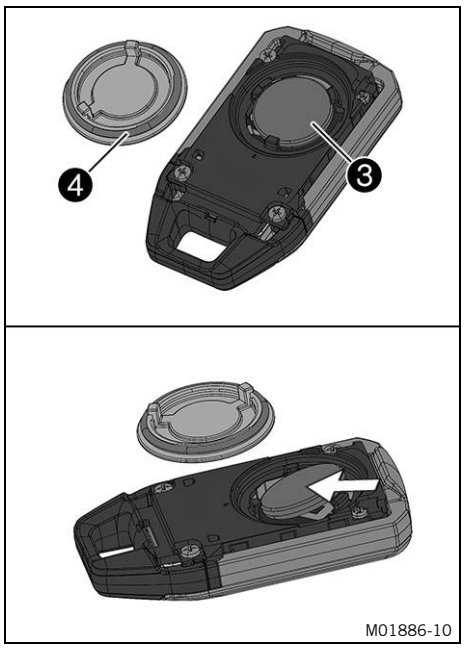

– Remove RACE ON key battery ❸.
– Insert the new RACE ON key battery with label facing upward.

Key battery (CR 2032) (📖 p. 153)

Info
The two smaller holding lugs are tapered so that the RACE ON key battery can be easily pushed into the bracket.


– Mount battery cover with O-ring ❹ and close it clockwise with a coin.
– Mount the cover of the RACE ON key and click into place.

16.6 Changing the main fuse


Warning
Fire hazard Incorrect fuses overload the electrical system.
– Only use fuses with the required ampere value.
– Do not bypass or repair fuses.

Preparatory work
– Remove the passenger seat. (📖 p. 97)
– Remove the front rider's seat. (📖 p. 97)

Main work

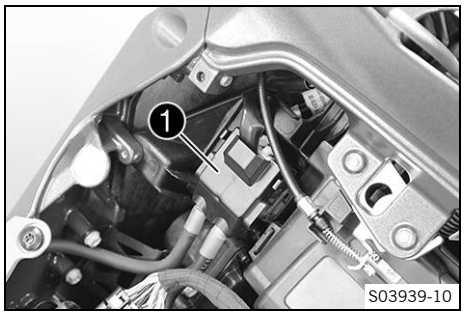

– Take off protection cap ❶.

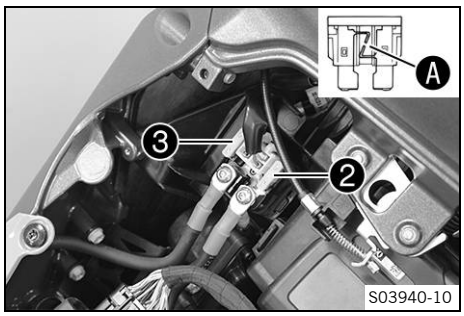

– Remove faulty main fuse ❷.

Info
A faulty fuse has a burned-out fuse wire Ⓐ.
A spare fuse ❸ is located in the starter relay.
The main fuse protects all electrical power consumers of the vehicle.

– Insert a new main fuse.

Fuse (58011109130) (📖 p. 153)

– Check that the electrical system is functioning properly.
– Mount protection caps ❶.

Tip
Insert a new spare fuse into the starter relay to have it available when needed.


Finishing work
- Mount the front rider's seat. (p. 98)
- Mount the passenger seat. (p. 97)
- Set time and date.

16.7 Changing the fuses in the fuse box


Warning
Fire hazard Incorrect fuses overload the electrical system.
- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

Info
The fuse box containing the fuses of individual electrical power consumers is located under the seat.

Preparatory work
- Remove the passenger seat. (p. 97)
- Remove the front rider's seat. (p. 97)

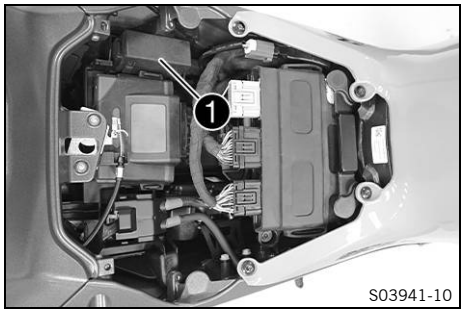

Main work
- Open fuse box cover 1.

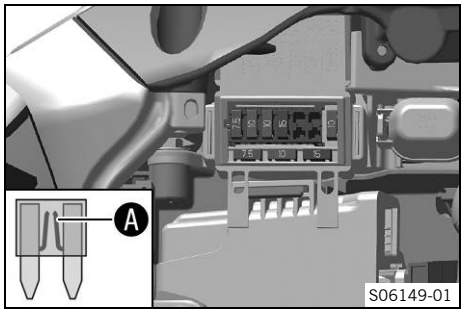

- Check the fuses.

Info
A faulty fuse has a burned-out fuse wire A.

- Remove the faulty fuse.

Guideline

Fuse **1** - 7.5 A - power supply for control units and components
Fuse **2** - 10 A - ACC1
Fuse **3** - 10 A - control unit, ignition, electronic fuel injection, lambda sensor
Fuse **4** - 15 A - ACC2, USB socket, HCU
Fuse **5** - not assigned
Fuse **6** - not assigned
Fuse **res** - 7.5 A – spare fuses
Fuse **res** - 10 A – spare fuses
Fuse **res** - 15 A - spare fuse

– Insert the spare fuse with the correct rating.

Fuse (75011088075) (p. 153)
Fuse (75011088010) (p. 153)
Fuse (75011088015) (p. 153)

Tip
Insert a spare fuse so that it is available if needed.

– Check the function of the electrical power consumers.
– Close the fuse box cover ❶.


Finishing work
– Mount the front rider's seat. (p. 98)
– Mount the passenger seat. (p. 97)

16.8 Changing the ABS fuses

Warning
Fire hazard Incorrect fuses overload the electrical system.
– Only use fuses with the required ampere value.
– Do not bypass or repair fuses.

Info
Two fuses for the ABS are located under the seat. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work
– Remove the passenger seat. (p. 97)
– Remove the front rider's seat. (p. 97)

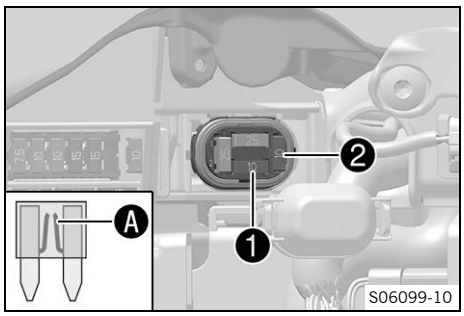

To change the fuse of the ABS hydraulic unit:

– Remove the protection cap and fuse ❶.


Info
A faulty fuse has a burned-out fuse wire Ⓐ.

– Insert the spare fuse with the correct rating.

Fuse (75011088010) (📖 p. 153)

Tip
Insert spare fuse ❷ in the fuse box so that it is available if needed.

– Mount the protection cap.

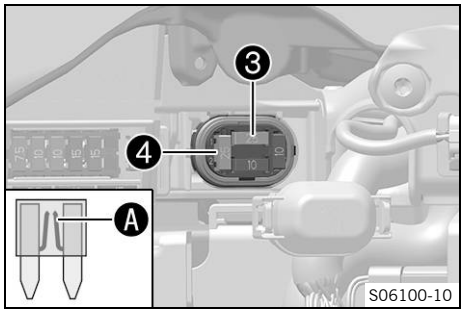

To change the fuse of the ABS return pump:

– Remove the protection cap and fuse ❸.

Info
A faulty fuse has a burned-out fuse wire Ⓐ.

– Insert the spare fuse with the correct rating.

Fuse (75011088025) (📖 p. 153)


Tip
Insert spare fuse ❹ in the fuse box so that it is available if needed.

– Mount the protection cap.

Finishing work

– Mount the front rider's seat. (📖 p. 98)
– Mount the passenger seat. (📖 p. 97)

16.9 Checking the headlight setting

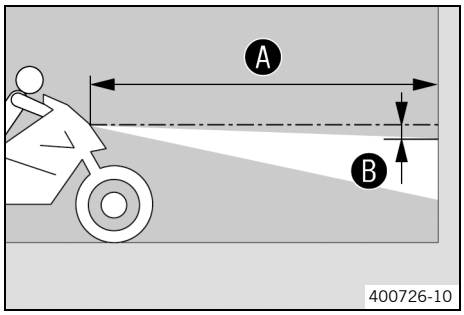

– Park the vehicle on a horizontal surface in front of a light-colored wall and make a mark at the height of the center of the low beam headlight.
– Make another mark at a distance Ⓑ under the first marking.

Guideline

Distance Ⓑ	5 cm (2 in)

– Position the vehicle perpendicular to the wall at a distance Ⓐ from the wall and switch on the low beam.

Guideline

Distance Ⓐ	5 m (16 ft)

– The rider now mounts the motorcycle with luggage and passenger if applicable.
– Check the headlight setting.


The light-dark boundary must be exactly on the lower marking when the motorcycle is ready to be operated with the rider mounted along with any luggage and a passenger if applicable.

» If the boundary between light and dark does not meet specifications:
  – Adjust the headlight range. (📖 p. 131)

16.10 Adjusting the headlight range

Preparatory work


– Check the headlight setting. (📖 p. 130)

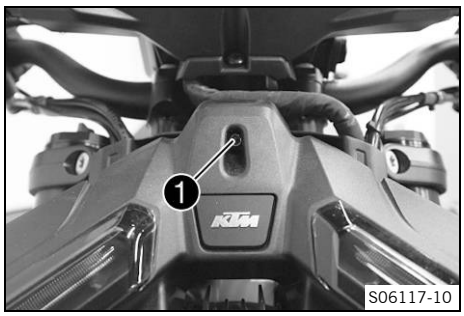

Main work

– Turn adjusting screw ❶ to adjust the headlight range.

Info
Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.
If you have a payload, you may have to correct the headlight range.
Screw ❶ also secures the headlight. Ensure the screw is always screwed in far enough.

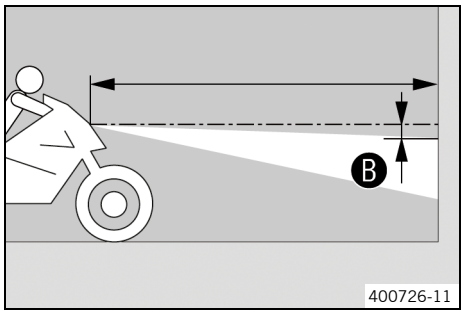


– Set the headlight to marking Ⓑ.

Guideline

The light-dark boundary must lie exactly on lower marking Ⓑ when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.

16.11 Connecting the USB cable

Info
The USB socket is located on the left of the combination instrument.

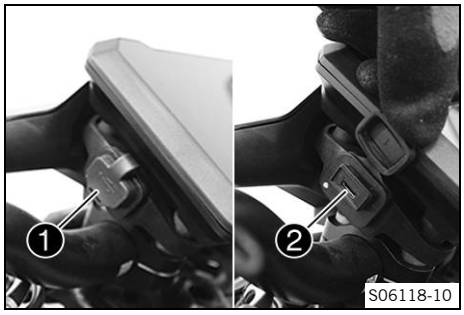


– Open USB socket cover ❶.
– Connect a suitable USB cable to the USB socket ❷.
– Connect the USB cable to the device.
– Route the cable on the handlebar and secure with the cable ties.

Guideline


Use the shortest possible USB cable.
Always ensure that connected devices are also protected against moisture.
Route and secure the cable in such a way that it cannot be damaged.

16.12 Disconnecting the USB cable

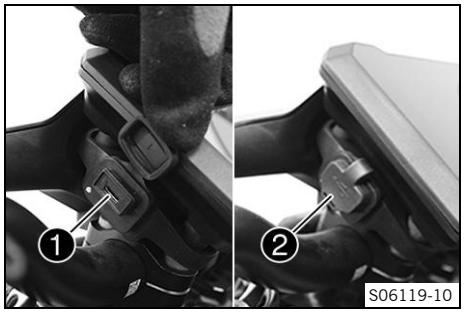


– Disconnect USB cable from the device.
– Disconnect USB cable from the USB socket ❶.
– Close USB socket cover ❷.

16.13 Diagnostics connector

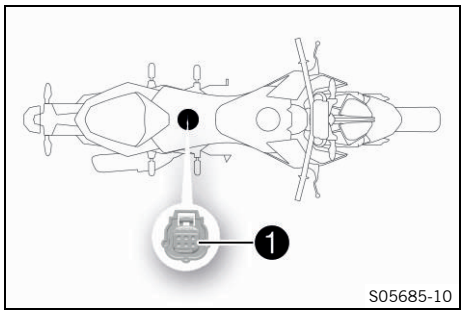

Diagnostics connector ❶ is located under the front rider's seat.


16.14 Front ACC1 and ACC2

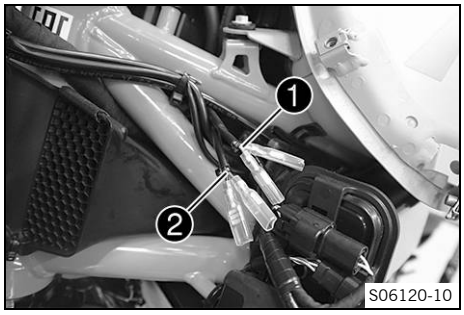

Installation location

– Front power supplies ACC1 ❶ and ACC2 ❷ are located behind the fuel tank spoiler on the left between the triple clamps.

16.15 ACC1 and ACC2 rear

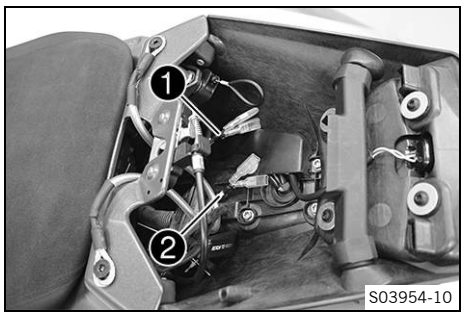

Power supplies ACC1 ❶ and ACC2 ❷ rear are located under the seat.

17.1 Checking the coolant level in the compensating tank

Warning


Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

– Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
– Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
– In the event of scalding, rinse the area affected immediately with lukewarm water.

Warning

Danger of poisoning Coolant is harmful to health.

– Keep coolant out of the reach of children.
– Do not allow coolant to come into contact with the skin, the eyes and clothing.
– Consult a doctor immediately if coolant is swallowed.
– Rinse the affected area immediately with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
– Change clothing if coolant spills onto your clothing.

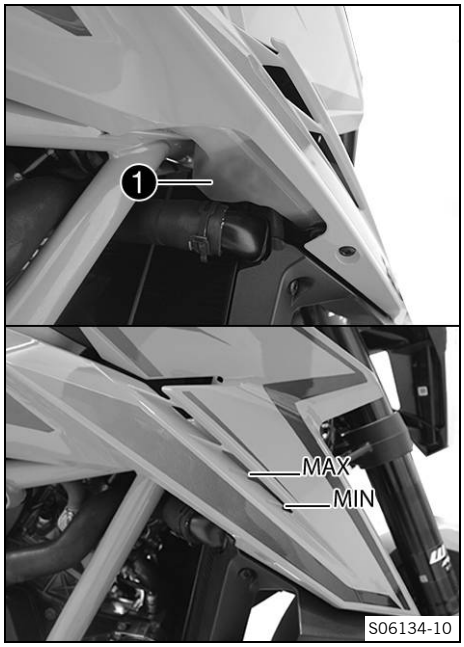

Condition

The engine is cold.
The radiator is completely full.

– Park the motorcycle on a horizontal surface.
– Check the coolant level in the compensating tank ❶.

The coolant level must be between **MIN** and **MAX**.

» If there is no coolant in the compensating tank:
– Check the cooling system for leaks.

Info
Do not start up the motorcycle!

– Add the coolant/bleed the cooling system.

» If the coolant in the compensating tank is not at the required level, but the tank is not empty:
– Correct the coolant level in the compensating tank. (p. 134)

17.2 Correcting the coolant level in the compensating tank

Warning

Danger of scalding During motorcycle operation, the coolant gets hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

Warning

Danger of poisoning Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.
The radiator is completely full.

Preparatory work

- Check the coolant level in the compensating tank. (p. 133)



Main work

- Remove cover 1 of the compensating tank.
- Add coolant to the **MAX** marking.

  Coolant (p. 161)

- Mount cover 1 of the compensating tank.

18.1 Ride Mode



I00785-10

Possible states

- **Street** – Homologated performance with balanced response; the motorcycle traction control allows normal slip on the rear wheel.
- **Rain** – Reduced homologated performance for better ridability; the motorcycle traction control allows less slip on the rear wheel.
- **Sport** – Homologated performance with very direct response; the motorcycle traction control allows greater slip on the rear wheel.
- **Track** (optional) – Throttle response and motorcycle traction control can be adjusted individually.
- **Performance** (optional) – Throttle response and motorcycle traction control can be adjusted individually.

Warning

Danger of accidents An incorrectly selected riding mode makes control of the vehicle considerably more difficult.

The riding modes are each only suitable for certain conditions.

– Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

Various vehicle tunings can be selected in the combination instrument in the **Ride Mode** submenu. There are **Street**, **Rain**, **Sport**, **Track** (optional) and **Performance** (optional).
The most recently selected riding mode appears in the display.
The riding mode can also be changed while riding with the throttle grip closed.

18.2 Motorcycle traction control (optional) (Cornering MTC)



I00793-10

The motorcycle traction control (MTC) (optional) lowers the engine torque in case of loss of traction in the rear wheel. Depending on the riding mode (p. 135), different amounts of slip are allowed when traction control is activated.

Info

When motorcycle traction control is switched off, the rear wheel may spin during strong acceleration and on surfaces with low grip, resulting in a risk of falling.
After the ignition is switched on, motorcycle traction control is enabled again.

In the combination instrument, the motorcycle traction control can be switched on or off via the **MTC** submenu (optional).

Info

When the motorcycle traction control is active, the TC indicator lamp flashes.
When motorcycle traction control is switched off, the TC indicator lamp lights up.


18.3 Anti-wheelie mode (optional)



I00789-10

The **Anti Wheelie Mode** is an optional vehicle electronics function. Anti-wheelie mode is intended to prevent the front wheel rising when accelerating.


18.4 Slip adjustment (optional)

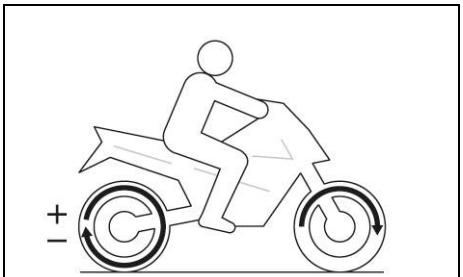
I00800-10

The slip adjustment is a motorcycle traction control function.
The slip adjustment allows the motorcycle traction control to be tuned through nine levels to the desired characteristic map.
Level 1 allows the maximum slip on the rear wheel, and level 9 the minimum.
The slip adjustment can be set while riding with a closed menu using the **UP** or **DOWN** button.

Info
The slip adjustment is only available in **TRACK** riding mode (optional).

18.5 Throttle Response (optional)

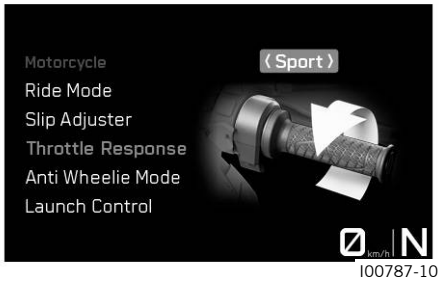

I00787-10

Possible states


- TRACK – Extremely direct response
- SPORT – Very direct response.
- STREET – Balanced response.

In the combination instrument the characteristics of the throttle response can be adjusted via the **Throttle Response** submenu.
The **Throttle Response** can also be set while riding with a closed throttle grip.

Info
Throttle Response is only available in riding mode **TRACK** (optional).

19.1 Checking the engine oil level

Info
Oil consumption depends on the riding style and the operating conditions.

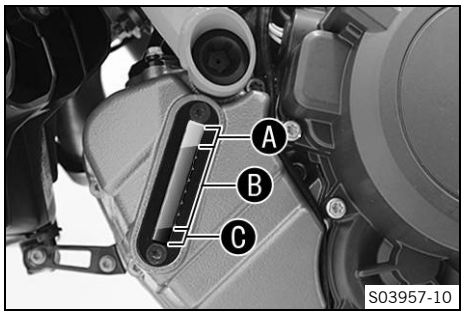

Condition
The engine is at operating temperature.

Preparatory work
– Stand the motorcycle upright on a horizontal surface.

Main work
– Check the engine oil level in the engine oil level viewer.

Info
After switching off the engine, wait one minute before checking the level.


The engine oil level should be in the upper area B of the engine oil level viewer.

» When the engine oil level is in area A of the engine oil level viewer:
  – Do not add engine oil.
» When the engine oil level is in area B of the engine oil level viewer:
  – Engine oil can be added.
» When the engine oil level is in area C of the engine oil level viewer:
  – Add engine oil. (p. 140)


19.2 Changing the engine oil and oil filter, cleaning the oil screens

Warning
Danger of scalding Engine and gear oil get hot when the motorcycle is operated.
– Wear suitable protective clothing and safety gloves.
– In the event of scalding, rinse the area affected immediately with lukewarm water.


Note
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

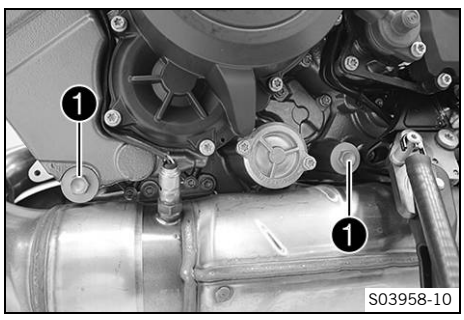

Main work
– Stand the motorcycle on a level surface using the side stand.
– Place an appropriate container under the engine.
– In order to prevent oil from running over the exhaust system, use a mouldable funnel if necessary.
– Remove oil drain plugs 1 along with the magnets, the O-rings, and the oil screens.

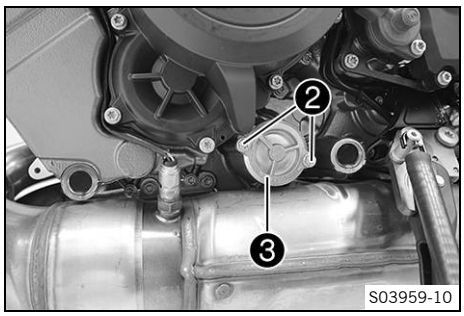


– Remove screws ❷. Take off oil filter cover ❸ with the O-ring.

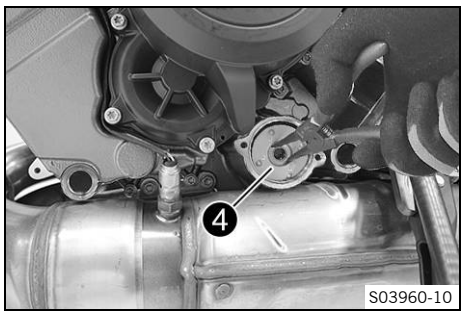

– Pull oil filter ❹ out of the oil filter housing.

Lock ring plier (51012011000)


– Allow the engine oil to drain completely.
– Thoroughly clean the parts and the sealing surfaces.

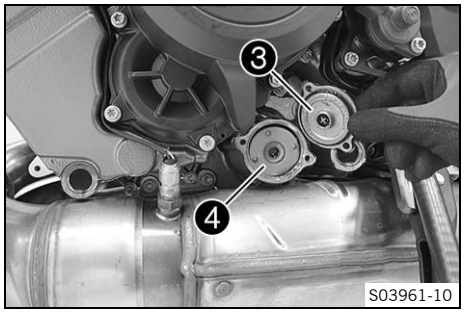

– Insert new oil filter ❹.

Info
Only insert the oil filter by hand.


– Oil the O-ring of the oil filter cover. Mount oil filter cover ❸.

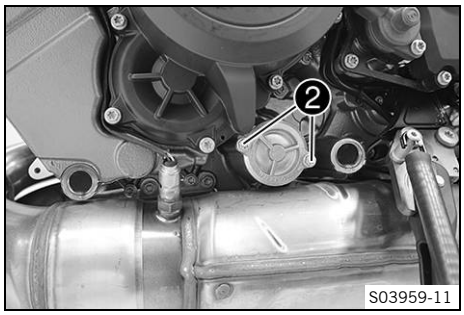


– Mount and tighten screws ❷.

Guideline

Remaining engine screws	M5	6 Nm (4.4 lbf ft)

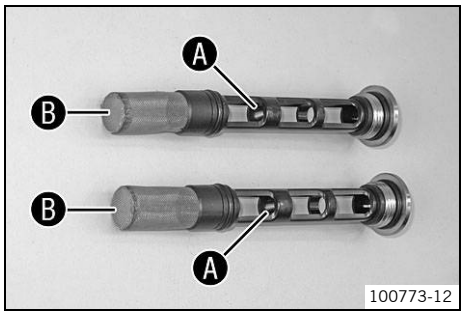


– Thoroughly clean magnets Ⓐ and oil screens Ⓑ of the oil drain plugs.

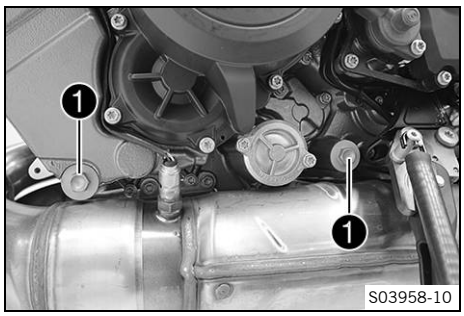

– Mount and tighten oil drain plugs ❶ with magnets, O-rings, and oil screens.

Guideline

Oil drain plug	M20x1.5	20 Nm (14.8 lbf ft)

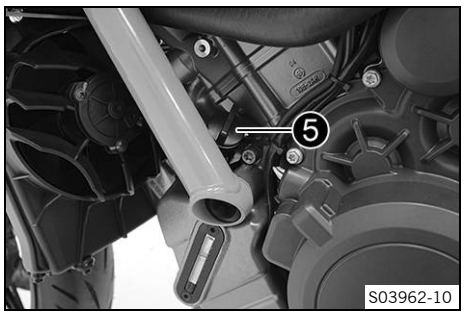

– Have the entire filling quantity available.

Engine oil Ambient temperature: ≥ 0 °C (≥ 32 °F)	3.50 l (3.7 qt.)	Engine oil (SAE 10W/50) (📖 p. 161)
Engine oil Ambient temperature: < 0 °C (< 32 °F)		Engine oil (SAE 5W/40) (📖 p. 162)

– Add the oil quantity in two steps.

– Remove filler plug ❺ with the O-ring, and fill up with the first partial quantity.

Engine oil (1st partial quantity) approx. Ambient temperature: ≥ 0 °C (≥ 32 °F)	3.0 l (3.2 qt.)	Engine oil (SAE 10W/50) (📖 p. 161)
Engine oil (1st partial quantity) approx. Ambient temperature: < 0 °C (< 32 °F)		Engine oil (SAE 5W/40) (📖 p. 162)


– Mount filler plug ❺ with the O-ring.

Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always make sure there is sufficient ventilation when running the engine.
– Use effective exhaust extraction when starting or running the engine in an enclosed space.

– Start the engine and check it for leaks.
– Switch off the engine.

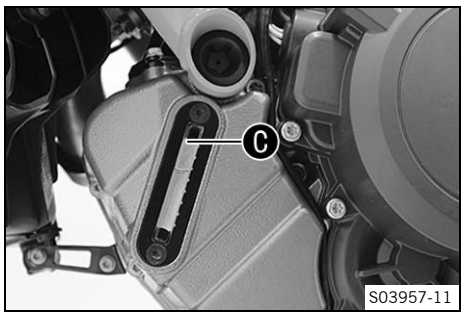

– Remove the filler plug with the O-ring and add the second partial quantity up to the upper marking C on the engine oil level viewer.

Engine oil (2nd partial quantity) approx. Ambient temperature: ≥ 0 °C (≥ 32 °F)	0.50 l (0.53 qt.)	Engine oil (SAE 10W/50) (📖 p. 161)
Engine oil (2nd partial quantity) approx. Ambient temperature: < 0 °C (< 32 °F)		Engine oil (SAE 5W/40) (📖 p. 162)

– Mount the filler plug with the O-ring.

Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always make sure there is sufficient ventilation when running the engine.
– Use effective exhaust extraction when starting or running the engine in an enclosed space.

– Start the engine and check it for leaks.

Finishing work

– Check the engine oil level. (📖 p. 137)

19.3 Adding engine oil

Info


Too little engine oil or poor-quality engine oil results in premature wear to the engine.
The engine may be damaged if the engine oil level is too high.

Condition

The engine is at operating temperature.


Preparatory work

– Stand the motorcycle upright on a horizontal surface.
– Check the engine oil level. (📖 p. 137)

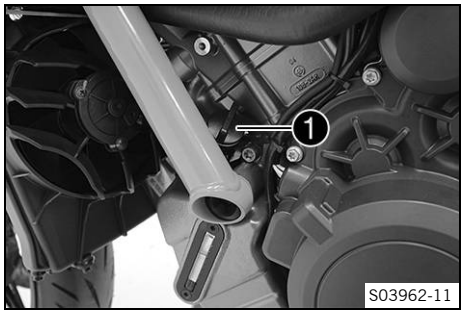

Main work

– Remove filler plug 1 with the O-ring.

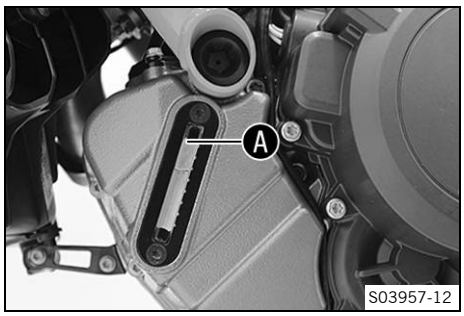

– Add the engine oil to upper marking Ⓐ on the engine oil level viewer.

Condition

Ambient temperature: ≥ 0 °C (≥ 32 °F)

Engine oil (SAE 10W/50) (📖 p. 161)

Condition

Ambient temperature: < 0 °C (< 32 °F)

Engine oil (SAE 5W/40) (📖 p. 162)

Info

In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils.

KTM recommends changing the engine oil where necessary.

– Mount the filler plug with the O-ring.

Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always make sure there is sufficient ventilation when running the engine.
– Use effective exhaust extraction when starting or running the engine in an enclosed space.

– Start the engine and check for leaks.

Finishing work

– Check the engine oil level. (📖 p. 137)

20.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc.

Pressure which is too high causes malfunctions and destroys components.

– Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
– Maintain a minimum distance between the nozzle of the pressure cleaner and the component.

Minimum clearance	60 cm (23.6 in)

Note


Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

Info

Clean the motorcycle regularly to maintain its value and appearance over a long period.

Avoid direct sunshine when cleaning the motorcycle.

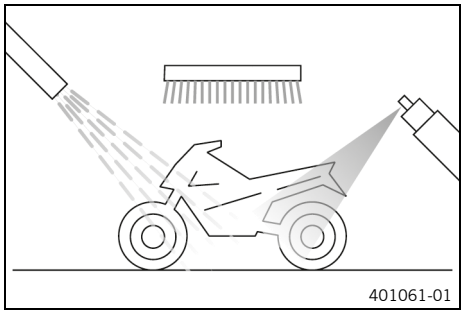

– Close off exhaust system to keep water from entering.
– Remove the coarse dirt particles with a gentle water jet.
– Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.

Motorcycle cleaner (📖 p. 163)

Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

If the vehicle has been used on salted roads, use cold water for cleaning after riding. Warm water enhances the corrosive effects of salt.

– After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
– Remove the closure of the exhaust system.

Warning

Danger of accidents Moisture and dirt impair the brake system.

– Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.

– After cleaning, ride the vehicle a short distance until the engine warms up.

Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

– After the motorcycle has cooled down, lubricate all moving parts and pivot points.
– Clean the chain. (📖 p. 103)
– Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber (📖 p. 163)

– Treat the painted parts with a mild paint polish.

Shine spray for paint, plastic and chromium (📖 p. 163)

Info
Do not polish parts that were matte when delivered as this would strongly impair the material quality.

– Treat the plastic parts and powder-coated parts with a mild cleaning agent and care product.


Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 163)

– Oil steering lock and seat lock.

Universal oil spray (📖 p. 163)

20.2 Checks and maintenance steps for winter operation

Info
If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.
If the vehicle has been used on salted roads, use cold water for cleaning after riding. Warm water enhances the corrosive effects of salt.

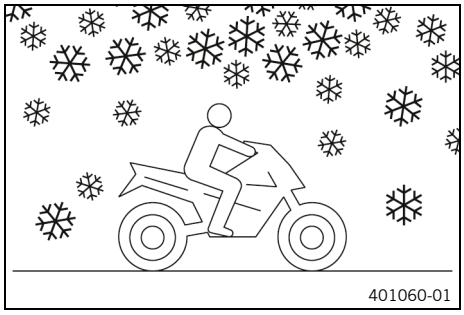
401060-01

– Clean the motorcycle. (📖 p. 142)
– Clean the brakes.

Info
After **EVERY** trip on salted roads, thoroughly clean the brake calipers and brake linings, after they have cooled down and without removing them, with cold water and dry them carefully.
After riding on salted roads, thoroughly clean the motorcycle with cold water and dry it well.


– Treat the engine, the link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.

Info
Corrosion inhibitor must not come into contact with the brake discs. This would severely lower the braking effect.

– Clean the chain. (📖 p. 103)

21.1 Storage

Info
If the motorcycle is not being used for an extended length of time, additional measures are recommended. Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). This allows you to avoid long waiting periods when the next season starts.

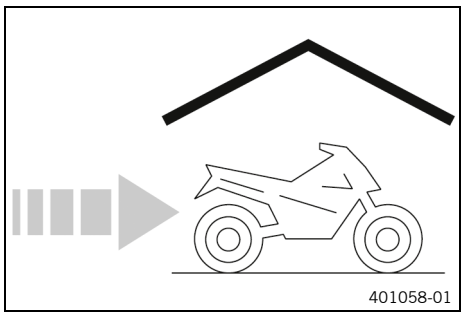

– When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (📖 p. 163)

– Refuel. (📖 p. 87)

Tip
Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

– Clean the motorcycle. (📖 p. 142)
– Change the engine oil and the oil filter, clean the oil screens. 🔧 (📖 p. 137)
– Check the coolant fill level and antifreeze. 🔧
– Check tire pressure. (📖 p. 120)
– Remove the 12-V battery. 🔧 (📖 p. 122)

Guideline

Storage temperature of the 12-V battery without direct sunlight	0 … 35 °C (32 … 95 °F)


– Charge the 12-V battery. 🔧 (📖 p. 124)
– Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

Info
KTM recommends jacking up the motorcycle.

– Lift the motorcycle with the rear lifting gear. (📖 p. 95)
– Lift the motorcycle with the front lifting gear. (📖 p. 95)
– Cover the motorcycle with a tarp or cover that is permeable to air.

Info
Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.
Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.


21.2 Preparing for use after storage

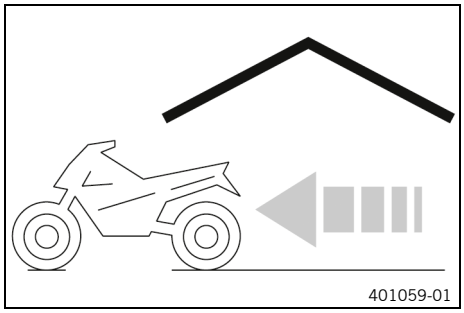

– Take the motorcycle off the front lifting gear. (📖 p. 96)
– Remove the rear of the motorcycle from the lifting gear. (📖 p. 95)
– Install the 12-V battery. 🔧 (📖 p. 123)

Info
If the 12-V battery was removed, the time and date must be set.

– Perform checks and maintenance measures when preparing for use. (📖 p. 77)
– Take a test ride.

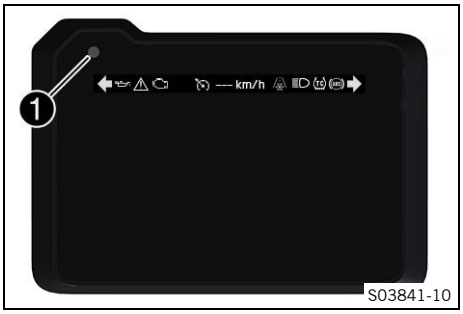

The immobilizer indicator lamp ❶ can indicate malfunctions by flashing. These are indicated up to five seconds after the unlock button is actuated.

Info
Blink codes referring to **KTM RACE ON** are only displayed once and are not repeated.

Faults	Possible cause	Action
No response if the unlock button is pressed	Unlock button faulty	– Check the unlock button for damage. – Check the cable and plug of the unlock button for damage.
Immobilizer indicator lamp flashes twice	No response signal from the RACE ON key	– Ensure that the RACE ON key is in range. – Remove other electronic devices from the vicinity of the RACE ON antenna. – Check the battery compartment in the RACE ON key for correct locking. – Check the battery compartment of the RACE ON key for corrosion. – Change the RACE ON key battery. (📖 p. 126) – Use black ignition key.
Immobilizer indicator lamp flashes three times	12-V battery discharged	– Charge the 12-V battery. 🔧 (📖 p. 124) – Check the open-circuit current. 🔧
Immobilizer indicator lamp flashes four times	Steering lock bolt locked or tense	– Move handlebar slightly.
Immobilizer indicator lamp flashes five times	RACE-ON antenna faulty	– Check the RACE-ON antenna for damage.
The combination instrument shows nothing on the display	Fuse **1** is blown	– Change the fuses in the fuse box. (📖 p. 128)
	The main fuse is blown	– Change the main fuse. (📖 p. 127)
	12-V battery discharged	– Charge the 12-V battery. 🔧 (📖 p. 124) – Check the open-circuit current. 🔧
Engine does not rotate if the start button/emergency OFF switch is pressed into the lower position	Operating error	– Carry out start procedure. (📖 p. 77)
	12-V battery discharged	– Charge the 12-V battery. 🔧 (📖 p. 124) – Check the open-circuit current. 🔧
	Faulty safety starting system	– Read out the fault memory using the KTM diagnostics tool. 🔧
	Electronic fault	– Read out the fault memory using the KTM diagnostics tool. 🔧
The engine only turns if the clutch lever is drawn	The vehicle is in gear	– Shift the transmission into neutral.
	Faulty safety starting system	– Read out the fault memory using the KTM diagnostics tool. 🔧
The engine turns although a gear is engaged	Faulty safety starting system	– Read out the fault memory using the KTM diagnostics tool. 🔧
The engine turns but does not start	Quick release coupling not joined	– Join the quick release coupling.

Faults	Possible cause	Action
The engine turns but does not start	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🔧
	The fuel quality is insufficient	– Add suitable fuel.
The engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 87)
	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🔧
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	– Read out the fault memory using the KTM diagnostics tool. 🔧
The ABS warning lamp lights up	ABS fuse blown	– Change the fuses in the fuse box. (📖 p. 128)
	Large difference in wheel speeds of the front and rear wheels	– Stop the vehicle, switch off the ignition, and start it again.
	Malfunction in ABS	– Read out the fault memory using the KTM diagnostics tool. 🔧
High oil consumption	The engine oil level is too high	– Check the engine oil level. (📖 p. 137)
	The engine oil is too thin (low viscosity)	– Change the engine oil and the oil filter, clean the oil screens. 🔧 (📖 p. 137)
12-V battery discharged	The hazard warning flasher is switched on	– Switch off the hazard warning flasher. – Charge the 12-V battery. 🔧 (📖 p. 124)
	The 12-V battery is not being charged by the alternator	– Check the charging voltage. 🔧
	Ignition was not switched off when vehicle was parked	– Charge the 12-V battery. 🔧 (📖 p. 124)

23.1 Engine

Design	2-cylinder 4-stroke Otto engine, 75° V arrangement, water-cooled
Displacement	1,349.47 cm³ (82.3501 cu in)
Stroke	71 mm (2.8 in)
Bore	110 mm (4.33 in)
Compression ratio	13.2:1
Idle speed	1,500 ... 1,600 rpm
Control	DOHC with cam lever, 4 valves per cylinder, chain-driven
Valve - valve plate diameter	
Intake	42 mm (1.65 in)
Exhaust	34 mm (1.34 in)
Valve clearance	
Intake at: 20 °C (68 °F)	0.10 ... 0.15 mm (0.0039 ... 0.0059 in)
Exhaust at: 20 °C (68 °F)	0.25 ... 0.30 mm (0.0098 ... 0.0118 in)
Crankshaft bearing	Sleeve bearing
Conrod bearing	Sleeve bearing
Piston pin bearing	Connecting rod bushing
Piston	Forged light alloy
Piston ring	1 upper compression (rectangular) ring, 1 lower compression ring, 1 oil scraper ring
Engine lubrication	Dry sump lubrication system with 3 trochoidal pumps
Primary transmission	40:76
Clutch	Multidisc clutch in oil bath/hydraulically operated
Transmission	6-gear transmission, claw shifted
Transmission ratio	
first-gear	12:35
second-gear	15:32
third-gear	18:30
fourth-gear	20:27
fifth-gear	23:27
sixth-gear	26:27
Mixture preparation	Electronic fuel injection, Keihin 60 mm
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment
Alternator	14 V, 504 W
Spark plug	
Inside spark plug	NGK LKAR9DI-10
Outside spark plug	NGK LMAR7DI-10
Electrode gap, spark plug	1 mm (0.04 in)
Cooling	Water cooling, permanent circulation of coolant by water pump
Cold start device	Starter motor

23.2 Engine tightening torques

Screw, air filter box cover	**EJOT Delta PT®** M6x14	2 Nm (1.5 lbf ft)
Screw, air filter box cover	**EJOT Delta PT®** M6x14	2.5 Nm (1.84 lbf ft)
Screw, damping plate	**EJOT ALtracs®** M6x14	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, intake air temperature sensor		2 Nm (1.5 lbf ft)
Screw, retaining bracket, valve cover, rear	**EJOT®** M6x12	8 Nm (5.9 lbf ft)
Screw, secondary air system, air box lower part	**EJOT Delta PT®** M6x14	2 Nm (1.5 lbf ft)
Hose clip, intake flange	M4	1.5 Nm (1.11 lbf ft)
Cam lever shaft, lock screw	M5	5 Nm (3.7 lbf ft)
Cam shift actuator	M5	5 Nm (3.7 lbf ft)
Oil nozzle	M5	2 Nm (1.5 lbf ft) **Loctite®243™**
Position sensor, valve cams	M5	6 Nm (4.4 lbf ft)
Remaining engine screws	M5	6 Nm (4.4 lbf ft)
Screw, bearing retainer	M5	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, bearing shells retaining bracket	M5	6 Nm (4.4 lbf ft) **Loctite®243™**
Screw, cable duct on the engine fixing arm	M5	5 Nm (3.7 lbf ft)
Screw, crankshaft speed sensor	M5	6 Nm (4.4 lbf ft) **Loctite®243™**
Screw, engine oil level viewer	M5	4 Nm (3 lbf ft) **Loctite®243™**
Screw, gear position sensor	M5	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, oil filter cover	M5	6 Nm (4.4 lbf ft)
Screw, resonator	M5	8 Nm (5.9 lbf ft) **Loctite®243™**
Screw, shift shaft sensor	M5	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, swingarm sensor	M5x12 – 8.8	5 Nm (3.7 lbf ft) **Loctite®243™**
Bleeder screw, cylinder head	M6	6 Nm (4.4 lbf ft)
Bleeder screw, water pump cover	M6	10 Nm (7.4 lbf ft)
Chain shaft screw	M6	10 Nm (7.4 lbf ft)
Coolant connection screw on the cylinder head	M6	8 Nm (5.9 lbf ft) **Loctite®243™**
Intake sleeve	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Nut, cylinder head	M6	8 Nm (5.9 lbf ft)
Nut, starter cable	M6	4 Nm (3 lbf ft)
Remaining engine screws	M6	10 Nm (7.4 lbf ft)
Screw, alternator cover	M6	10 Nm (7.4 lbf ft)

Screw, camshaft bearing support	M6 – 10.9	10 Nm (7.4 lbf ft)
Screw, clutch cover	M6	10 Nm (7.4 lbf ft)
Screw, clutch spring	M6	12 Nm (8.9 lbf ft)
Screw, engine case	M6x60	10 Nm (7.4 lbf ft)
Screw, engine case	M6x80	10 Nm (7.4 lbf ft)
Screw, engine case	M6x90	10 Nm (7.4 lbf ft)
Screw, freewheel ring	M6	15 Nm (11.1 lbf ft)
Screw, guide rail	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, ignition coil	M6	8 Nm (5.9 lbf ft)
Screw, kickstarter gear support	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, locking lever	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, oil filler hose	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, oil pump cover	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, oil/water heat exchanger	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, secondary air system, cylinder head	M6	10 Nm (7.4 lbf ft)
Screw, shift drum locating unit	M6 – 12.9	15 Nm (11.1 lbf ft) **Loctite®243™**
Screw, shift lever	M6	18 Nm (13.3 lbf ft)
Screw, starter motor	M6	10 Nm (7.4 lbf ft)
Screw, stator	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, tube for oil/water heat exchanger	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, valve cover	M6	10 Nm (7.4 lbf ft)
Screw, water pump cover	M6	10 Nm (7.4 lbf ft)
Screw, water pump wheel	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Stud, timing chain shaft	M6	3 Nm (2.2 lbf ft)
Vacuum connection	M6	2.5 Nm (1.84 lbf ft) **Loctite®243™**
Nozzle 100	M6x0.75	3 Nm (2.2 lbf ft) **Loctite®243™**
Screw, camshaft bearing support	M7x1	14 Nm (10.3 lbf ft)
Crankshaft fixing screw	M8	12 Nm (8.9 lbf ft)
Screw, engine case	M8	18 Nm (13.3 lbf ft)
Screw, guide rail	M8	15 Nm (11.1 lbf ft) **Loctite®243™**
Screw, tensioning rail	M8	15 Nm (11.1 lbf ft) **Loctite®243™**
Stud, exhaust flange	M8	10 Nm (7.4 lbf ft)
Engine bearer on the left and right	M10	45 Nm (33.2 lbf ft)

Screw, engine bearer	M10	45 Nm (33.2 lbf ft)
Oil pressure sensor	M10x1	15 Nm (11.1 lbf ft)
Screw plug, cam lever axis	M10x1	12 Nm (8.9 lbf ft)
Screw plug, clutch lubrication	M10x1	8 Nm (5.9 lbf ft)
Screw plug, spreading transmission lock	M10x1	12 Nm (8.9 lbf ft)
Screw, conrod bearing	M10x1	Step 1 25 Nm (18.4 lbf ft) Step 2 30 Nm (22.1 lbf ft) Step 3 90°
Screw, unlocking of timing chain tensioner	M10x1	8 Nm (5.9 lbf ft)
Spark plug outside	M10x1	11 Nm (8.1 lbf ft)
Coolant temperature sensor	M10x1.25	12 Nm (8.9 lbf ft)
Cylinder head screw	M11x1.5	Tightening sequence: Using a crisscross pattern Step 1 15 Nm (11.1 lbf ft) Step 2 30 Nm (22.1 lbf ft) Step 3 90° Step 4 90° Lubricated with engine oil
Screw, shock absorber bell crank	M12	80 Nm (59 lbf ft)
Spark plug inside	M12x1.25	15 Nm (11.1 lbf ft)
Rotor screw	M12x1.5	115 Nm (84.8 lbf ft)
Oil drain plug	M20x1.5	20 Nm (14.8 lbf ft)
Nut, inner clutch hub	M22x1.5	140 Nm (103.3 lbf ft)
Plug, timing-chain tensioner	M24x1.5	25 Nm (18.4 lbf ft)
Screw plug, alternator cover	M24x1.5	8 Nm (5.9 lbf ft)
Nut, primary gear wheel	M33LHx1.5	130 Nm (95.9 lbf ft) **Loctite®243™**

23.3 Capacities


23.3.1 Engine oil

Engine oil Ambient temperature: ≥ 0 °C (≥ 32 °F)	3.50 l (3.7 qt.)	Engine oil (SAE 10W/50) (📖 p. 161)
Engine oil Ambient temperature: < 0 °C (< 32 °F)		Engine oil (SAE 5W/40) (📖 p. 162)

23.3.2 Coolant

Coolant	3.20 l (3.38 qt.)	Coolant (📖 p. 161)

23.3.3 Fuel

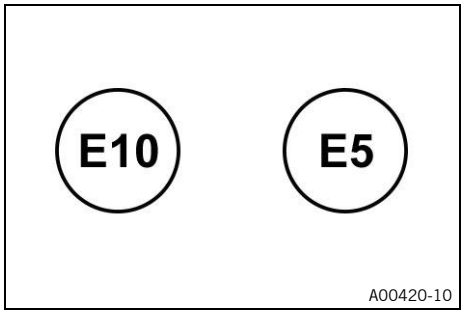

Please observe the labels on EU fuel pumps.

Total fuel tank capacity, approx.	17.5 l (4.62 US gal)	Super unleaded (ROZ 95) (📖 p. 162)

Fuel reserve, approx.	3.5 l (3.7 qt.)

23.4 Chassis

Frame	Lattice frame made of chrome molybdenum steel tubing, powder-coated
Fork	**WP Suspension APEX**
Shock absorber	**WP Suspension APEX**
Suspension travel	
front	125 mm (4.92 in)
rear	140 mm (5.51 in)
Brake system	
front	Double disc brake with radially mounted four-piston brake calipers, floating brake discs
rear	Single disc brake with dual-piston brake caliper, fixed brake disc
Brake discs - diameter	
front	320 mm (12.6 in)
rear	240 mm (9.45 in)
Brake discs - wear limit	
front	4.5 mm (0.177 in)
rear	4.5 mm (0.177 in)
Tire pressure when solo	
front: with cold tires	2.5 bar (36 psi)
rear: with cold tires	2.5 bar (36 psi)
Secondary drive ratio	17:38 **Info** Modifications to the transmission ratio are not permitted and can lead to malfunctions.
Chain	5/8 x 5/16” (525) X-ring
Steering head angle	65.3°
Wheelbase	1,491 mm (58.7 in)
Seat height unloaded	834 mm (32.83 in)
Ground clearance unloaded	149 mm (5.87 in)

Weight without fuel approx.	200 kg (441 lb.)
Maximum permissible front axle load	165 kg (364 lb.)
Maximum permissible rear axle load	260 kg (573 lb.)
Maximum permissible overall weight	425 kg (937 lb.)

23.5 Electrical system

12-V battery	YTZ14S	Battery voltage: 12 V Nominal capacity: 11.2 Ah Maintenance-free
Key battery	CR 2032	3 V
Fuse	75011088075	7.5 A
Fuse	75011088010	10 A
Fuse	75011088015	15 A
Fuse	75011088025	25 A
Fuse	58011109130	30 A

Low beam/high beam	LED
Daytime running light/position light	LED
Combination instrument lighting and indicator lamps	LED
Turn signal	LED
Tail light	LED
Brake light	LED
License plate lamp	LED

23.6 Tires

Validity	Front tire	Rear tire
(EU)	**120/70 ZR 17 M/C (58W) TL** Michelin Power GP	**200/55 ZR 17 M/C (78W) TL** Michelin Power GP
(CN)	**120/70 ZR 17 M/C (58W) TL** Michelin Power GP 2	**200/55 ZR 17 M/C (78W) TL** Michelin Power GP 2
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed. Additional information is available in the Service section under: KTM.COM		

23.7 Fork

Fork article number	A624C122X401000
Fork	**WP Suspension APEX**
Compression damping	
Comfort	20 clicks
Standard	12 clicks
Sport	5 clicks
Rebound damping	
Comfort	20 clicks
Standard	12 clicks

Sport	7 clicks
Spring preload – preload adjuster	
Comfort	**- 3**
Standard	**0**
Sport	**+3**
Full payload	**+3**
Spring length with preload spacer(s)	299 mm (11.77 in)
Spring rate	
Medium (standard)	9.5 N/mm (54.2 lb/in)
Hard	10 N/mm (57 lb/in)
Fork length	753 mm (29.65 in)

Fork oil per fork leg	600 ± 5 ml (20.29 ± 0.17 fl. oz.)	Fork oil (SAE 4) (48601166S1) (📖 p. 162)

23.8 Shock absorber

Shock absorber article number	A624C422X313000
Shock absorber	**WP Suspension APEX**
Low-speed compression damping	
Comfort	20 clicks
Standard	15 clicks
Sport	12 clicks
High-speed compression damping	
Comfort	2 turns
Standard	1.5 turns
Sport	1.5 turns
Rebound damping	
Comfort	20 clicks
Standard	15 clicks
Sport	10 clicks
Spring preload	
Standard	12 mm (0.47 in) **Info** Corresponds to position **0** on the preload adjuster.
Spring rate	
Weight of rider: 75 ... 85 kg (165 ... 187 lb.)	85 N/mm (485 lb/in)
Weight of rider: 85 ... 95 kg (187 ... 209 lb.)	95 N/mm (542 lb/in)
Spring length	202 mm (7.95 in)
Gas pressure	10 bar (145 psi)
Static sag	15 mm (0.59 in)
Rider sag	38 mm (1.5 in)
Fitted length	356 mm (14.02 in)
Shock absorber fluid (📖 p. 162)	SAE 2.5

23.9 Chassis tightening torques

Brake fluid reservoir for front brake cover	-	1 Nm (0.7 lbf ft)
Brake fluid reservoir for rear brake cover	-	3.5 Nm (2.58 lbf ft)
Remaining screws, chassis	**EJOT PT®** K50x12	1.2 Nm (0.89 lbf ft)
Remaining screws, chassis	**EJOT PT®** K50x14	1.5 Nm (1.11 lbf ft)
Remaining screws, chassis	**EJOT PT®** K50x16	2.2 Nm (1.62 lbf ft)
Remaining screws, chassis	**EJOT PT®** K50x18	2.2 Nm (1.62 lbf ft)
Remaining screws, chassis	**EJOT PT®** K45x12	1.2 Nm (0.89 lbf ft)
Screw, fan hood on radiator	K40x46	2.2 Nm (1.62 lbf ft)
Screw, tail light	**EJOT PT®** K50x14	1.5 Nm (1.11 lbf ft)
Screw, fixed grip, left	M4	3 Nm (2.2 lbf ft)
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)
Screw, 6D sensor holder	M5	2.7 Nm (1.99 lbf ft) **Loctite®243™**
screw, absorbing element, combination instrument	M5	2 Nm (1.5 lbf ft) **Loctite®243™**
Screw, cable channel	M5	5 Nm (3.7 lbf ft)
Screw, chain sliding guard	M5	5 Nm (3.7 lbf ft)
Screw, combination instrument	M5	1 Nm (0.7 lbf ft)
Screw, combination switch, left	M5	5 Nm (3.7 lbf ft)
Screw, combination switch, right	M5	5 Nm (3.7 lbf ft)
Screw, Denso throttle grip	M5	3.5 Nm (2.58 lbf ft)
Screw, fuel tank filler cap	M5	3 Nm (2.2 lbf ft)
Screw, fuel tank spoiler	M5	3.5 Nm (2.58 lbf ft)
Screw, heat protector on main silencer	M5	4 Nm (3 lbf ft)
Screw, injection valve	M5	4 Nm (3 lbf ft) **Loctite®243™**
Screw, preload adjuster	M5	5 Nm (3.7 lbf ft)
Screw, radiator fan cover	M5	3.2 Nm (2.36 lbf ft)
Screw, trim	M5	3.5 Nm (2.58 lbf ft)
Screw, turn signal on turn signal bracket	M5	2 Nm (1.5 lbf ft)
Screw, valve	M5	2 Nm (1.5 lbf ft) **Loctite®243™**
Screw, wiring harness holding bracket	M5	5 Nm (3.7 lbf ft)
Cable disk nut, exhaust valve control unit	M6	14 Nm (10.3 lbf ft)
Ground fitting on frame	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Screw, 6D sensor	M6	6 Nm (4.4 lbf ft)
Screw, ABS module fastening	M6	8 Nm (5.9 lbf ft)

Screw, ball joint of push rod on brake cylinder	M6	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, battery compartment	M6	6 Nm (4.4 lbf ft)
Screw, battery terminal	M6	4.5 Nm (3.32 lbf ft)
Screw, brake assembly	M6	5 Nm (3.7 lbf ft)
Screw, brake cylinder	M6	10 Nm (7.4 lbf ft) **Loctite®243™**
Screw, cable on starter relay	M6	6 Nm (4.4 lbf ft)
Screw, clutch assembly	M6	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, cooler retaining bracket	M6	7 Nm (5.2 lbf ft)
Screw, engine sprocket cover	M6	8 Nm (5.9 lbf ft)
Screw, front fuel tank	M6	8 Nm (5.9 lbf ft)
Screw, front wheel speed sensor	M6	4 Nm (3 lbf ft)
Screw, fuel tank bridge	M6	8 Nm (5.9 lbf ft)
Screw, fuel tank on tank bridge	M6	5 Nm (3.7 lbf ft)
Screw, fuse box support	M6	6 Nm (4.4 lbf ft)
Screw, horn	M6x15	5 Nm (3.7 lbf ft)
Screw, instrument support	M6	2 Nm (1.5 lbf ft)
Screw, license plate holder on lower rear panel	M6	8 Nm (5.9 lbf ft)
Screw, radiator bracket	M6	5 Nm (3.7 lbf ft)
Screw, rear wheel speed sensor	M6	4 Nm (3 lbf ft)
Screw, seat lock	M6	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, shift lever stub	M6	10 Nm (7.4 lbf ft)
Screw, shift rod	M6	5 Nm (3.7 lbf ft) **Loctite®243™**
Screw, shift shaft deflector on shift shaft	M6	18 Nm (13.3 lbf ft) **Loctite®243™**
Screw, side stand sensor	M6	8 Nm (5.9 lbf ft)
Screw, steering damper bracket on frame	M6	8 Nm (5.9 lbf ft) **Loctite®243™**
Screw, step plate for foot brake lever	M6	10 Nm (7.4 lbf ft)
Screw, trim	M6	5 Nm (3.7 lbf ft)
Screw, trim part	M6x14	5 Nm (3.7 lbf ft)
Screw, voltage regulator	M6	6 Nm (4.4 lbf ft)
Nut, exhaust valve throttle cable	M6x1	5 Nm (3.7 lbf ft)
Cable disk nut, exhaust valve	M8	7 Nm (5.2 lbf ft)
Nut, rear sprocket	M8	36 Nm (26.6 lbf ft) **Loctite®243™**
Nut, shift rod	M8	12 Nm (8.9 lbf ft)
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)
Screw, axle clamp	M8	15 Nm (11.1 lbf ft)
Screw, bottom triple clamp	M8	15 Nm (11.1 lbf ft)

Screw, cross connector on lower rear panel	M8	15 Nm (11.1 lbf ft) **Loctite®243™**
Screw, exhaust clamp on main silencer	M8	12 Nm (8.9 lbf ft)
Screw, foot brake lever	M8	20 Nm (14.8 lbf ft) **Loctite®243™**
Screw, front brake disc	M8	28 Nm (20.7 lbf ft) **Loctite®2701™**
Screw, front rider footrest bracket	M8	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
Screw, ignition lock (tamper-proof screw)	M8	25 Nm (18.4 lbf ft)
Screw, passenger footrest unit	M8x25	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, passenger footrest unit	M8x35	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, presilencer	M8	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, presilencer exhaust clamp	M8	17 Nm (12.5 lbf ft)
Screw, rear brake caliper	M8	25 Nm (18.4 lbf ft) **Loctite®2701™**
Screw, rear brake disc	M8	28 Nm (20.7 lbf ft) **Loctite®243™**
Screw, shift lever on footrest support	M8	20 Nm (14.8 lbf ft) **Loctite®243™**
Screw, side stand bracket	M8	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, side stand spring	M8	15 Nm (11.1 lbf ft) **Loctite®2701™**
Screw, steering damper on triple clamp	M8	8 Nm (5.9 lbf ft) **Loctite®243™**
Screw, steering stem clamp	M8	20 Nm (14.8 lbf ft) **Loctite®243™**
Screw, subframe brace	M8	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, subframe metal flange	M8	25 Nm (18.4 lbf ft) **Loctite®243™**
Screw, top triple clamp	M8	18 Nm (13.3 lbf ft)
Subframe screw	M8	35 Nm (25.8 lbf ft) **Loctite®243™**
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, engine bearer	M10	45 Nm (33.2 lbf ft) **Loctite®243™**
Screw, front brake caliper	M10	45 Nm (33.2 lbf ft) **Loctite®243™**
Screw, handlebar support	M10	40 Nm (29.5 lbf ft) **Loctite®243™**
Screw, headlight bracket at bottom	M10	5 Nm (3.7 lbf ft)

Screw, side stand	M10	40 Nm (29.5 lbf ft) **Loctite®243™**
Screw, side stand bracket	M10	55 Nm (40.6 lbf ft) **Loctite®243™**
Banjo bolt, brake line	M10x1	25 Nm (18.4 lbf ft)
Banjo bolt, brake line, connecting piece, rear	M10x1	25 Nm (18.4 lbf ft)
Nut, rear hub shock absorber carrier	M10x1.25	45 Nm (33.2 lbf ft) **Loctite®243™**
Screw, bottom shock absorber	M12	80 Nm (59 lbf ft) **Loctite®243™**
Screw, brake caliper support	M12	28 Nm (20.7 lbf ft)
Screw, side stand bracket	M12	80 Nm (59 lbf ft) **Loctite®243™**
Screw, top shock absorber	M12	80 Nm (59 lbf ft) **Loctite®243™**
Screw, triangular lever on link fork	M12	80 Nm (59 lbf ft) **Loctite®243™**
Lambda sensor	M12x1.25	24.5 Nm (18.07 lbf ft)
Screw, eccentric	M16	70 Nm (51.6 lbf ft)
Nut, fork pivot	M19x1.5	130 Nm (95.9 lbf ft) Thread greased
Bushing, shock absorber support	M20LHx1.5	10 Nm (7.4 lbf ft) Thread and fitting greased
Screw, shock absorber support	M20x1.5	10 Nm (7.4 lbf ft) Thread and fitting greased
Screw, steering head, top	M20x1.5	12 Nm (8.9 lbf ft)
Screw, front wheel spindle	M25x1.5	45 Nm (33.2 lbf ft) Thread greased
Nut, rear axle, shock absorber side	M35x1.5	200 Nm (147.5 lbf ft) **Loctite® 262™**/lock the locking wire with locking varnish
Nut, rear axle	M50x1.5	250 Nm (184.4 lbf ft) Thread greased/lock locking wire with locking varnish

24.1 Declarations of conformity

Info
The functional and equipment scope is model-dependent and may not include all wireless systems and application areas referred to.

Polaris hereby declares that the **Connectivity Control Unit "CCU-2"** wireless system conforms with the relevant guidelines. The full text of the Declaration of Conformity is available at the following Internet address.
Certification website: http://www.ktm.com/ccu-2

KTM AG hereby declares that the **KTM RACE ON system** wireless system conforms with the relevant guidelines. The full text of the Declaration of Conformity is available at the following Internet address.
Certification website: http://www.ktm.com/ktm-race-on


Schrader Electronics Ltd hereby declares that the **Tyre Pressure Monitoring System** wireless system conforms with the relevant guidelines. The full text of the Declaration of Conformity is available at the following Internet address.
Certification website: http://www.ktm.com/tpms


24.2 Country-specific declarations of conformity (KTM RACE ON)

KTM RACE ON system

















Equipment Name:	미약전계강도 무선기기
Registration No.	R-R-AD1-CL9
Equipment Name:	특정소출력 무선기기(데이터전송용 무선기기)
Registration No.	R-C-AD1-CL9-904

AGRÉÉ PAR L'ANRT MAROC
Numéro d'agrément: MR 22310 ANRT 2020

AGRÉÉ PAR L'ANRT MAROC
Numéro d'agrément: MR 22312 ANRT 2020



Product name	Steering lock	Smart key
IC	6505A-CL9	6505A-CL9904

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

A01554-10

24.3 Country-specific declarations of conformity (KTM RACE ON)

KTM RACE ON system

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Product name	Steering lock	Smart key
Model	CL9	CL9-904
Certification No.	IFETEL: RLVASCL20-0474	IFETEL: RLVASCL20-0473

This product contains radio equipment (134 kHz transmitter) which is conform with the regulations for communications equipment (extremely low-power radio station) specified in article 6, paragraph 1 of the Radio Law Enforcement Regulations.

TP BY

R-NZ E6729

不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率（包括额外加装射频功率放大器），不得擅自更改发射天线；

不得对其他合法的无线电台（站）产生有害干扰，也不得提出免受有害干扰保护；

应当承受辐射射频能量的工业、科学及医疗（ISM）应用设备的干扰或其他合法的无线电台（站）干扰；

如对其他合法的无线电台（站）产生有害干扰时，应立即停止使用，并采取措施消除干扰后方可继续使用；

在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站（含测控、测距、接收、导航站）等军民用无线电台（站）、机场等的电磁环境保护区域内使用微功率设备，应当遵守电磁环境保护及相关行业主管部门的规定；

禁止在以机场跑道中心点为圆心、半径 5000 米的区域内使用各类模型遥控器；|

低功率電波輻射性電機管理辦法 第十條

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Product name	Steering lock	Smart key
FCC ID	T8VCL9	T8VCL9-904

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

S06163-01

24.4 Country-specific declarations of conformity (CCU-2)

CONTAINS FCC ID: 2A0W7-K001
CONTAINS IC: 5966A-K001
CMIIT ID: XXXXXXXXX

TRAIL TECH

Polaris Industries Inc.
Connectivity Control Unit
Model: CCU-2
Country of Origin: USA
Input: 14V⎓1.1A

ANATEL 04624-20-12908

R-C-1PR-CCU

R-NZ

CCAJ20LP09A0T1

CNC ID: C-24749

R 209-J00406

NOM
Polaris Industries
Unidad de control de comunicaciones
Trail Tech
CCU-2
INPUT: 14Vcc 1.1A
USA

IFT #: RCPTRCC20-0716

UA.032.CT.0103-20

AGREE PAR L'ANRT MAROC
Numéro d'agrément: MR22163 ANRT 2020
Date d'agrément: 25/02/2020

MCMC RFCP/17A/0520/S(20-1955)

TP BY

Complies with IMDA Standards DA107035

กสทช.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต วิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498

กสทช. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (โทรฟรี)

TRA
REGISTERED No: ER79816/20
DEALER No: DA68241/17

ICASA TA-2020/5195 APPROVED

Certified for use in Hong Kong
經驗證可在香港使用
Certificate No. 證書號碼
HK0012002210

通訊事務管理局 COMMUNICATIONS AUTHORITY

S05603-01

Brake fluid DOT 4 / DOT 5.1

Standard/classification

– DOT

Guideline

– Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

– **REACT PERFORMANCE DOT 4**

MOTOREX®

– **Brake Fluid DOT 5.1**

Coolant

Guideline

– Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.

– Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.

– Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	−25 °C (−13 °F)

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier

MOTOREX®

– **COOLANT M3.0**

Engine oil (SAE 10W/50)

Standard/classification

– JASO T903 MA2 (📖 p. 164)

– SAE (📖 p. 164) (SAE 10W/50)

Guideline

– Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Fully synthetic engine oil

Recommended supplier

MOTOREX®

– **Power Synt 4T**

Engine oil (SAE 5W/40)

Standard/classification

– JASO T903 MA2 (📖 p. 164)

– SAE (📖 p. 164) (SAE 5W/40)

Guideline

– Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Fully synthetic engine oil

Recommended supplier

MOTOREX®

– **Power Synt 4T**

Fork oil (SAE 4) (48601166S1)

Standard/classification

– SAE (📖 p. 164) (SAE 4)

Guideline

– Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Shock absorber fluid (SAE 2.5) (50180751S1)

Standard/classification

– SAE (📖 p. 164) (SAE 2.5)

Guideline

– Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

Super unleaded (ROZ 95)

Standard/classification

– DIN EN 228 (ROZ 95)

Guideline

– Only use super unleaded fuel that matches or is equivalent to the specified standard.

– Fuel with an ethanol content of up to 10% (E10 fuel) is safe to use.

Info

Do **not** use fuel containing methanol (e.g., M15, M85, M100) or more than 10% ethanol (e.g., E15, E25, E85, E100).

Chain cleaner

Recommended supplier
MOTOREX®
– **Chain Clean**

Fuel additive

Recommended supplier
MOTOREX®
– **Fuel Stabilizer**

Long-life grease

Recommended supplier
MOTOREX®
– **Bike Grease 2000**

Motorcycle cleaner

Recommended supplier
MOTOREX®
– **Moto Clean**

Preserving materials for paints, metal and rubber

Recommended supplier
MOTOREX®
– **Moto Protect**

Shine spray for paint, plastic and chromium

Recommended supplier
MOTOREX®
– **Moto Shine**

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier
MOTOREX®
– **Quick Cleaner**

Street chain spray

Guideline

Recommended supplier
MOTOREX®
– **Chainlube Road Strong**

Universal oil spray

Recommended supplier
MOTOREX®
– **Joker 440 Synthetic**

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.
Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.
Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.
In most motorcycle engines, the transmission and clutch are lubricated with the same oil.
The **JASO T903 MA2** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

ABS	Anti-lock braking system	Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces
ARA	Anti-relay attack	Safety system that deactivates the wireless response of the RACE ON key after a certain time and thus increases security against theft
ATIR	Automatic Turn Indicator Reset	Software, which automatically switches the indicator off according to a time or travel distance counter
DRL	Daytime Running Light	Light, which enhances the visibility of the vehicle during the day but is not focused, and in contrast to low beam does not illuminate the road surface
ETTC	Engine traction torque control	Auxiliary function of the engine control, which prevents rear wheel locking with excessive engine braking effect, by lightly opening the throttle valve
-	KTM RACE ON	System that releases the ignition, steering lock, and fuel tank filler cap via a transponder key
-	KTMconnect	System for wireless communication with suitable cellphones and communication systems for telephony and audio
-	Launch control	Vehicles electronics functions for achieving the best possible acceleration from a standing position
MTC	Motorcycle Traction Control	Auxiliary function of the motor control that reduces engine torque with spinning rear wheel
OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics
-	QUICKSHIFTER+	Engine tuning function for shifting up and down without clutch actuation

29 LIST OF ABBREVIATIONS

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

30.1 Red symbols

Red symbols indicate an error condition that requires immediate intervention.

	The oil pressure warning lamp lights up red – The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.

30.2 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	The malfunction indicator lamp lights up yellow – The OBD has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop.
	ABS warning lamp lights up yellow – Status or error messages relating to ABS.
	The ABS rear warning lamp lights up yellow – ABS is deactivated on the rear wheel.
	TC indicator lamp lights up/flashes yellow – **MTC** (📖 p. 135) is not enabled or is currently intervening. The TC indicator lamp also lights up if a malfunction is detected. Contact an authorized KTM workshop. The TC indicator lamp flashes if **MTC** makes an active intervention.
	The cruise control system indicator lamp (optional) lights up yellow – The cruise control system function is switched on, but cruise control is not activated.
	The general warning lamp lights up yellow – A note/warning note on operating safety has been detected. This is also shown in the display.

30.3 Green and blue symbols

Green and blue symbols reflect information.

	The turn signal indicator lamp flashes green with a steady rhythmic flash – The turn signal is switched on.
	The idle indicator lamp lights up green – The transmission is in neutral.
	The cruise control system indicator lamp (optional) lights up green – The cruise control system function is switched on and cruise control is activated.
	The high beam indicator lamp lights up blue – The high beam is switched on.

+

+RES/-SET button
operation 19

1

12-V battery
installing 123
removing 122

12-V battery
charging 124

A

ABS 109

ABS fuses
changing 129

ACC1
front 132
rear 132

ACC2
front 132
rear 132

Anti-lock braking system 109
Anti-relay attack 22
Anti-wheelie mode 136
ARA 22
Auxiliary substances 11

B

Brake discs
checking 110

Brake fluid
front brake, adding 111
rear brake, adding 114

Brake fluid level
of front brake, checking 111
of rear brake, checking 113

Brake lining retainers
of front brake, checking 112
of rear brake, checking 115

Brake linings
of front brake, checking 112
of rear brake, checking 115

Brake system 109-115
Brakes 83
Braking 83

Breakdown
towing 86

C

C1 and C2 switch 21

Capacity
Coolant 151
engine oil 139, 151
fuel 87, 152

Chain
checking 105
cleaning 103
dirt, checking for 103

Chain guide
checking 105

Chain tension
adjusting 105
checking 104

Clutch
fluid level, checking/correcting 107

Clutch lever 16
basic position, adjusting 69

Combination instrument 28-67
ABS 46
ABS display 38
activation and test 29
ambient air temperature indicator 37
Anti Relay Attack 62
Anti Wheelie Mode (Optional) 45
Audio 53
Beschleunigung 65
Bike Info 48
Bluetooth 57
Button Illumination 61
Call display 40
Clock Format 63
Coming Home Light 61
connectivity 56
coolant temperature indicator 38
cruise control indicator (optional) 37
Custom Switch 56
Custom Switch display 40
Date Format 63
Daytime Running Light 62
demo mode 28
Demo Mode 67
display 32
Distance 64
engine speed 36
Engine Brake Control (optional) 45
Extra Functions 66
Favoriten 55
favorites 52
Favorites display 39
Favorites-Anzeige 1-4 56
fuel level display 39
Fuel Cons 65

headset pairing 58
Headset Type 59
heated grip (optional) 39
Heated Grip (optional) 48
"Heating" (optional) 66
indicator lamps 30
Language 66
Lap Timer 41
Lap Timer Settings 41
last search 51
Launch Control (optional) 46
Light Diagnostic 61
menu 41
Motorcycle 42
MTC 47
MTC display 38
MTC+MSR (optional) 47
navigation 51
Navigation display (optional) 40
overview 28
pairing a cellphone 57
performance display (optional) 33
Pressure 65
QUICKSHIFTER+ (optional) 48
Ride Mode 42, 135
Ride-Mode display 38
Session 42
Set Reference Lap 41
Set Target Lap Time 42
Settings 55
shift warning light 36
skip Waypoint 51
slip adjustment (optional) 136
Slip Adjuster (optional) 43
speedometer 37
stop Navigation 53
telemetry display (optional) 35
Temperature 64
Throttle Response (optional) 44, 136
time 37
TPMS Settings (optional) 62
track display (optional) 34
Trip 49
Trip 1 50
Trip 2 50
Units 64
volume 52
Warning 49
warnings 30

Combination switch
left side 16
right 19

Coolant level
compensating tank, checking 133
correcting in the compensating tank 134
Cornering MTC 135

Cruise control system
operation 18
Customer service 11

D

Date
setting 62
Daytime running light 122
Declarations of conformity 159-160
country-specific (CCU-2) 160
country-specific (KTM RACE ON) 159-160
Diagnostics connector 132
DRL 122

E

Emergency OFF switch 20

Engine
running in 75
Engine number 14

Engine oil
adding 140
changing 137

Engine oil level
checking 137

Engine sprocket
checking 105
Engine traction torque control 83
Environment 9

F

Figures 11
Foot brake lever 26
setting the step plate 70

Footrest support position
adjusting 71
Fork 90
adjusting the spring preload 91
compression damping, adjusting 90
rebound, adjusting 90

Fork legs
dust boots, cleaning 96
Fork part number 14

Front rider's seat
mounting 98
removing 97

Front wheel
installing 116
removing 116
Fuel tank filler cap
closing 24
opening 23
Fuel, oils, etc. 11
Fuses
in fuse box, changing 128

H

Hand brake lever 16
adjusting the response 69
basic position, adjusting 69
Handlebar position 68
adjusting 68
Hazard warning flasher 20
Hazard warning flasher switch 20
Headlight
daytime running light 122
range, adjusting 131
Headlight setting
checking 130
Horn button 18

I

Immobilizer 22
Implied warranty 11
Indicator lamps 30
Intended use 7

L

Launch control 79
Left fuel tank spoiler
installation 100
removing 98
Light switch 17
Luggage 75

M

Main fuse
changing 127
Main silencer
installing 102
removing 101
Manufacturer warranty 11
Menu buttons 17
Misuse 7
Motorcycle
cleaning 142
lifting with front lifting gear 95
lifting with rear lifting gear 95
removing the rear from the lifting gear 95
taking off front lifting gear 96
Motorcycle traction control (optional) 135
MSR 83

O

Oil filter
changing 137
Oil screens
cleaning 137
Owner's Manual 10

P

Parking 85
Passenger foot pegs 26
Passenger seat
emergency release 25
mounting 97
removing 97
unlocking 25
Passenger seat emergency release 25
Passenger seat unlocking 25
Preparing for use
advice on preparing for first use 74
after storage 145
checks and maintenance measures when preparing for use 77
Protective clothing 9

Q

QUICKSHIFTER+ 80

R

RACE ON key 22
anti-relay attack 22
RACE ON key battery, changing 126
Rear sprocket
checking 105
Rear wheel
installing 118
removing 118
Refueling
fuel 87
Riding 80
starting off 79
starting off with launch control 79

S

Safe operation 8
Seat
emergency release 25
Service 11

Service schedule 88-89
Shift lever 26
basic position, adjusting 70
basic position, checking 70
Shift lever stub
adjusting 71
Shifting 80
Shock absorber 90
adjusting the high-speed compression damping 93
adjusting the low-speed compression damping. 92
compression damping, general 92
rebound damping, adjusting 94
spring preload, adjusting 92
Shock absorber article number 15
Side stand 27
Spare parts 11
Start button 20
Starting 77
Steering damper article number 15
Steering lock 21
Stopping 85
Storage 144
Supporting strap 25
Suspension setting 90-94

T

Technical accessories 11
Technical specifications
capacities 151
chassis 152
chassis tightening torques 155
electrical system 153
engine 148
engine tightening torques 149
fork 153
shock absorber 154
tires 153
Throttle grip 16
Time
setting 62
Tire condition
checking 119
Tire pressure
checking 120
Tire repair spray
using 121
Tool set 25
Towing 86
Transporting 86
Troubleshooting 146-147
Turn signal switch 17
Type label 14

U

Unlock button 21
USB cable
connecting 131
disconnecting 132
Use definition 7

V

Vehicle
loading 75
Vehicle identification number 14
View of vehicle
front left 12
rear right 13

W

Winter operation
checks and maintenance steps 143
Work rules 9

3214944en

08.02.2024



KTM Sportmotorcycle GmbH
5230 Mattighofen/Austria
KTM.COM

Photo: Mitterbauer/KISKA/KTM