Owner's manual 2025

MC 350F
EX 350F
Item no.: 3215222en



Dear GASGAS customer

Congratulations on your decision to purchase a GASGAS motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with proper care, will bring you pleasure for a long time to come.

We wish you good and safe riding at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number (p. 14)	Dealer stamp
Engine number (p. 14)	

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.
All specifications are non-binding. GASGAS GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. GASGAS accepts no liability for delivery options, deviations from figures and descriptions, as well as misprints and other errors. Some of the models shown partly contain special equipment that does not belong to the standard scope of delivery.

© 2025 GASGAS GmbH, Mattighofen Austria
All rights reserved. Figures: Mitterbauer / Visus Studios / KISKA / GASGAS
Written permission from the copyright owner is required before any duplication or reproduction.

ISO 9001

GASGAS applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

12 100 6061

REG.NO. 12 100 6061

Issuing institution:

TÜV SÜD Management Service GmbH

GASGAS GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

MC 350F (F0301Y8)

EX 350F US (F0375Y1)

3215222en

25/02/2025

Table of contents

1 Means of representation 7
1.1 Conventions 7
1.1.1 Icons 7
1.1.2 Formatting 7
1.1.3 Abbreviations 7
2 Safety 8
2.1 Safety instructions 8
2.2 Ban on tampering 8
2.3 Safe use 8
2.4 Protective clothing 9
2.5 Work rules 9
2.6 Environment 10
2.7 Owner's manual 10
2.8 Use definition – intended use 10
2.9 Improper use 10
3 Important notes 11
3.1 Manufacturer's warranty, implied warranty 11
3.2 Auxiliary material, operating material 11
3.3 GASGAS Technical Accessories spare parts 11
3.4 Service 11
3.5 Figures 11
3.6 Customer service 11
4 View of the vehicle 12
4.1 View of vehicle, front left (example) 12
4.2 View of vehicle, rear right (example) 13
5 Serial number 14
5.1 Vehicle identification number 14
5.2 Frame label 14
5.3 Engine number 14
5.4 Fork part number 14
5.5 Shock absorber part number 15
6 Controls 16
6.1 Clutch lever 16
6.2 Handbrake lever 16
6.3 Throttle grip 16
6.4 Kill switch 16
6.5 Electric starter 17
6.6 Overview of indicator lights **(MC)** 17
6.7 Overview of indicator lights **(EX)** 17
6.8 Dashboard 18
6.9 Opening the fuel tank cap 18
6.10 Closing the fuel tank cap 19
6.11 Cold start button 20
6.12 Idle speed adjustment screw 20
6.13 Gear shift lever 21
6.14 Brake pedal 21
6.15 Plug-in stand **(MC)** 22
6.16 Side stand **(EX)** 22
7 Preparing for use 23
7.1 Notes on preparing for first use. 23
7.2 Running in the engine 24
7.3 Starting performance of lithium-ion batteries at low temperatures 24
7.4 Preparing the vehicle for difficult operating conditions 25
7.5 Preparing the vehicle for rides on dry sand 25
7.6 Preparing the vehicle for rides on wet sand 26
7.7 Preparing for rides on wet and muddy surfaces 26
7.8 Preparing vehicle for rides at high temperature or slow speed 27
7.9 Preparing the vehicle for low temperatures or snow 27
8 Riding instructions 28
8.1 Checks and maintenance measures when preparing for use 28
8.2 Starting the vehicle 28
8.3 Starting off 29
8.4 Shifting, riding 30
8.5 Braking 30
8.6 Stop, park 31
8.7 Transportation 31
8.8 Refueling 32
9 Service schedule 34
9.1 Service schedule 34
10 Tuning the chassis 37
10.1 Checking the basic chassis setting with the rider's weight 37
10.2 Air suspension **XACT (MC)** 37
10.3 Compression damping of the shock absorber 38
10.4 Adjusting the low-speed compression damping of the shock absorber 38
10.5 Adjusting the high-speed compression damping of the shock absorber 38
10.6 Adjusting the rebound damping of the shock absorber 39
10.7 Measuring the dimension of the unloaded rear wheel 40
10.8 Checking the static sag of the shock absorber 41
10.9 Checking the rider sag of the shock absorber 41
10.10 Adjusting the preload for the shock absorber 42
10.11 Adjusting the rider sag 43
10.12 Checking the basic setting of the fork 44
10.13 Adjusting the fork air pressure **(MC)** 44

10.14 Adjusting the compression damping of the fork 45
10.15 Adjusting the rebound damping of the fork 46
10.16 Handlebar position 47
10.17 Adjusting the handlebar position 48

11 Service work on the chassis 51

11.1 Raising the motorcycle with a lift stand 51
11.2 Removing the motorcycle from the lift stand 51
11.3 Bleeding the fork legs 52
11.4 Cleaning the dust boots of the fork legs 53
11.5 Removing the fork protector 53
11.6 Installing the fork protector 54
11.7 Removing the frame protector 54
11.8 Installing the frame protector 54
11.9 Removing the fork legs 55
11.10 Installing the fork legs 55
11.11 Removing the lower triple clamp 56
11.12 Installing the lower triple clamp 57
11.13 Checking the steering head bearing play 59
11.14 Adjusting the steering head bearing play 60
11.15 Lubricating the steering head bearing 60
11.16 Removing the number plate 61
11.17 Mounting the number plate 61
11.18 Removing the front top fender 61
11.19 Installing the front top fender 62
11.20 Removing the shock absorber 62
11.21 Installing the shock absorber 63
11.22 Removing the seat 65
11.23 Mounting the seat 66
11.24 Removing the right side panel 66
11.25 Installing the right side panel 67
11.26 Removing air filter box cover 67
11.27 Installing air filter box cover 68
11.28 Preparing the air filter box cover for securing 69
11.29 Removing the air filter 70
11.30 Cleaning the air filter and air filter box 70
11.31 Installing the air filter 71
11.32 Removing the muffler 72
11.33 Installing muffler 72
11.34 Changing the glass fiber filling of the muffler 72
11.35 Removing the fuel tank 73
11.36 Installing the fuel tank 75
11.37 Checking the chain for dirt 77
11.38 Cleaning the chain 77
11.39 Checking the chain tension 78
11.40 Adjusting the chain tension 78
11.41 Checking the chain, rear sprocket, front sprocket, and chain guide 79
11.42 Checking the frame 82
11.43 Checking the swingarm 82
11.44 Checking the throttle cable routing 82
11.45 Checking the rubber grips 83
11.46 Adjusting the basic position of the clutch lever 84
11.47 Checking/correcting the fluid level of hydraulic clutch 84
11.48 Changing the hydraulic clutch fluid 85

12 Brake system 87

12.1 Checking the free travel on the hand brake lever 87
12.2 Adjusting the basic position of the hand brake lever 87
12.3 Checking the brake discs 87
12.4 Checking the brake fluid level for the front brake 88
12.5 Adding brake fluid for the front brake 89
12.6 Checking that the brake pads of the front brake are secured 90
12.7 Changing the brake pads of the front brake 90
12.8 Checking the free travel of the brake pedal 93
12.9 Adjusting the basic position of the brake pedal 93
12.10 Checking the brake fluid level for the rear brake 94
12.11 Adding brake fluid for the rear brake 95
12.12 Checking that the brake pads of the rear brake are secured 96
12.13 Changing the rear brake pads 96

13 Wheels, tires 99

13.1 Removing the front wheel 99
13.2 Installing the front wheel 100
13.3 Removing the rear wheel 100
13.4 Installing the rear wheel 101
13.5 Checking the tire condition 102
13.6 Checking the tire pressure 103
13.7 Checking the spoke tension 104

14 Electrics 105

14.1 Removing the 12 V battery 105
14.2 Installing the 12 V battery 106
14.3 Charging the 12 V battery 107

Table of contents

14.4 Changing the main fuse 108
14.5 Changing the fuse of the fuel pump 109
14.6 Diagnostic connector 110

15 Cooling system 111

15.1 Cooling system 111
15.2 Checking the frost protection and coolant level 111
15.3 Checking the coolant level 112
15.4 Draining the coolant 113
15.5 Refilling the coolant 113
15.6 Changing the coolant 114

16 Tuning the engine 116

16.1 Checking the play in the throttle cable 116
16.2 Adjusting the throttle cable play 116
16.3 Adjusting the characteristic map of the throttle response 117
16.4 Adjusting the idle speed 119
16.5 Programming the throttle valve position 119
16.6 Checking the basic position of the gear shift lever 120
16.7 Adjusting the basic position of the gear shift lever 120

17 Service work on the engine 122

17.1 Changing the fuel screen 122
17.2 Checking the engine oil level 123
17.3 Changing the engine oil and oil filter, cleaning the oil screens 123
17.4 Adding engine oil 126

18 Cleaning, care 127

18.1 Cleaning the motorcycle 127

19 Storage 129

19.1 Storage 129
19.2 Preparing for use after storage 130

20 Troubleshooting 131

20.1 Troubleshooting 131

21 Technical specifications 133

21.1 Engine 133
21.1.1 Technical data - engine 133
21.1.2 Capacities - engine 134
21.2 Chassis 134
21.2.1 Technical data - chassis 134
21.2.2 Technical data - tires 135
21.2.3 Capacities - vehicle 136
21.3 Electrics 136
21.3.1 Battery 136
21.3.2 Fuses 136
21.3.3 Lamps 136
21.4 Fork 137
21.4.1 Technical data - fork **(MC)** 137
21.4.2 Capacities - fork **(MC)** 137
21.4.3 Technical data - fork **(EX)** 137
21.4.4 Capacities - fork **(EX)** 138
21.5 Shock absorber 138
21.5.1 Technical data - shock absorber **(MC)** 138
21.5.2 Capacities - shock absorber 139
21.5.3 Technical data - shock absorber **(EX)** 139
21.5.4 Capacities - shock absorber **(EX)** 140
21.6 Tightening torque 140
21.6.1 engine tightening torques 140
21.6.2 Chassis tightening torques 143

Notes 147

A Technical terms 147

B Fuels 148

C resources 149

D Cleaning agents 152

E Icons 153

E.1 Symbol colors 153
E.1.1 Yellow and orange symbols 153

Index 154

1.1 Conventions

1.1.1 Icons

✓	Indicates a desired result (e.g. of a work step or a function).
✗	Indicates an undesired result (e.g. of a work step or a function).
	All work marked with this symbol requires specialist knowledge and technical understanding. Make sure that this work is carried out or supervised by trained personnel from an authorized GASGAS workshop with any special tools required.
	Indicates a page reference.
	Indicates information with more details.
	Indicates a tip, e.g. to simplify work.
»	Indicates the result from a test step.
◀	Indicates the end of an activity, including any rework.

1.1.2 Formatting

Proprietary name	Indicates a proprietary name.
Name ®	Indicates a protected name.
Brand ™	Indicates a brand available on the open market.
Underlined terms	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

1.1.3 Abbreviations

2-pc.	Two-piece
Part no.	Part number
or	respectively
approx.	circa
etc.	et cetera
poss.	possibly/possible
if necessary	if necessary
cmpl.	complete
min.	at least
no.	number
no fig.	no figure
s.	see
among others	among others/not limited to
and the like	and the like
etc.	et cetera
cf.	compare
e.g.	for example

2.1 Safety instructions

Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



DANGER
Indicates an imminent danger that leads to serious injury or death.



WARNING
Indicates a potentially imminent danger that could lead to serious injury or death.



CAUTION
Indicates a potentially imminent danger that can lead to minor or slight injuries.



NOTE
Indicates a situation that can lead to damage to the product or the product environment.



NOTE
Indicates a situation that can lead to environmental damage.

2.2 Ban on tampering

No changes may be made to the noise control equipment and components.

Tampering that is prohibited

- Removing or disabling any devices or components used for noise control before the new vehicle is sold or delivered to the end customer.
- Removing or disabling any device or component used for noise control for purposes other than service, repair, or replacement during the service life of the vehicle.
- Use of the vehicle after a device or component used for noise control has been removed, disabled, or inadequately maintained.

Examples of prohibited tampering

- Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
- Removing or puncturing parts of the intake system.
- Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

2.3 Safe use



DANGER
Danger of accidents A rider who is not fit to ride poses a danger to themself and to others.
– Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
– Do not operate the vehicle if you are physically or mentally incapable of doing so.

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.

WARNING

Danger of burns Some vehicle components become hot when the vehicle is operated.

– Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
– Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

The vehicle must only be used by trained persons.

Have malfunctions that impair safety promptly rectified by an authorized GASGAS workshop.

Observe the information and warning stickers on the vehicle.

2.4 Protective clothing

WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

– Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
– Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, GASGAS recommends operating the vehicle only with suitable protective clothing.

2.5 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key).

Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C (68.0 °F)
Ambient air pressure	1,013 mbar (14.69 psi)
Relative air humidity	60 ±5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite®**) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread lock.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

2.6 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, be environmentally aware, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized GASGAS dealer will be happy to advise you.

2.7 Owner's manual

Read this owner's manual carefully and completely before making your first trip. The owner's manual contains useful information and many tips on how to operate, handle, and service your vehicle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.



Tip

Store the owner's manual on your terminal device, for example, so that you can read it whenever you need to.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized GASGAS dealer.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized GASGAS dealer and on the GASGAS website. A printed copy can also be ordered from your authorized GASGAS dealer.

International GASGAS website: https://www.gasgas.com/

2.8 Use definition – intended use

(MC)

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Note

Only use this vehicle on designated tracks away from public roads.

(EX)

This vehicle has been designed and built to withstand the typical stresses and strains of racing. This vehicle complies with the currently valid regulations and categories of the top international motorsports organizations.



Note

Only use this vehicle on designated tracks away from public roads.

This vehicle is designed for use in offroad endurance competition, and not primarily for use in motocross.

2.9 Improper use

The vehicle may only be used as intended.

Improper use can result in danger to people, property and the environment.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

3.1 Manufacturer's warranty, implied warranty

The work specified in the service schedule must only be carried out in an authorized GASGAS workshop and confirmed in the electronic proof of service, as otherwise all warranty claims will be void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

3.3 GASGAS Technical Accessories spare parts

For your own safety, only use spare parts and accessory products that are approved and/or recommended by GASGAS and have them installed by an authorized GASGAS workshop. GASGAS accepts no liability for other products and any resulting damage or loss.

The part numbers of some spare parts and accessories are given in brackets in the respective descriptions. Your authorized GASGAS dealer will be happy to advise you.

The current GASGAS Technical Accessories for your vehicle are available from your authorized GASGAS dealer and on the GASGAS website.

International GASGAS website: https://www.gasgas.com/

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under arduous conditions, such as on sand or on wet, dusty and muddy surfaces, can result in significantly increased wear of components, such as the powertrain, brake system, air filter, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

Please adhere to the prescribed run-in times and service intervals at all times. Strictly adhering to this will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.

3.6 Customer service


Your authorized GASGAS dealer will be happy to answer any questions you may have regarding your vehicle and GASGAS.

A list of authorized GASGAS dealers can be found on the GASGAS website.

International GASGAS website: https://www.gasgas.com/


4 View of the vehicle

4.1 View of vehicle, front left (example)

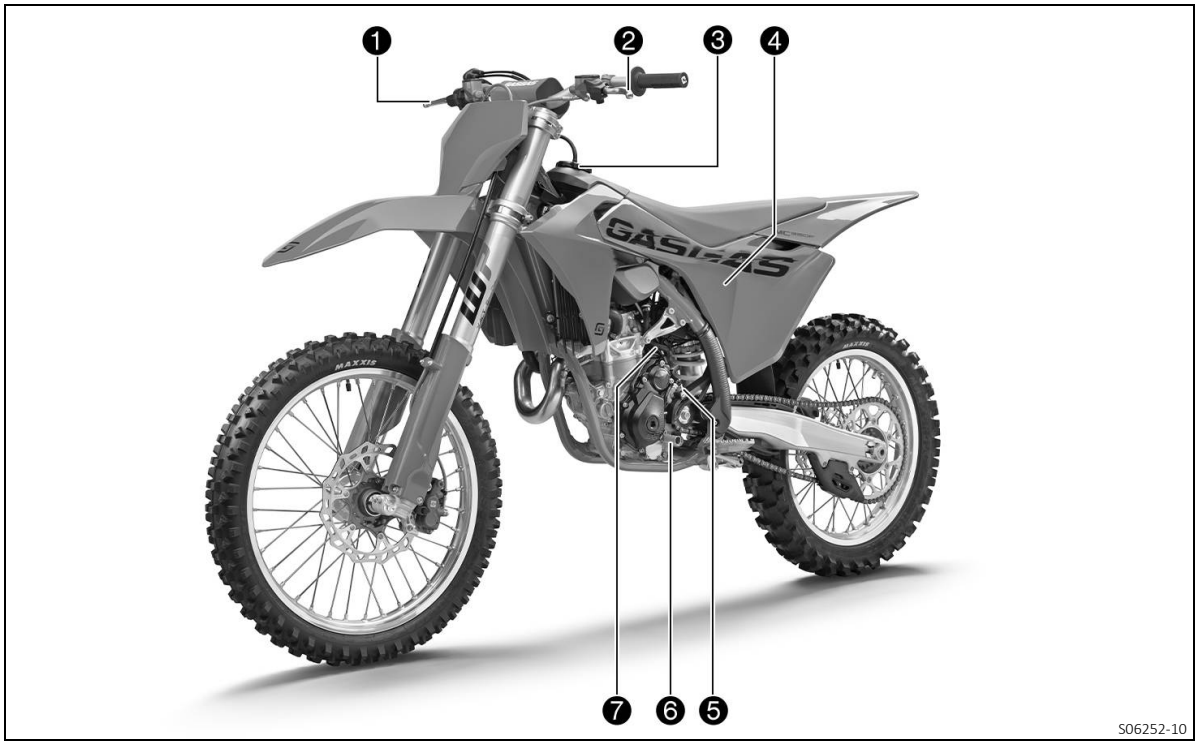

1. Handbrake lever (p. 16)
2. Clutch lever (p. 16)
3. Fuel tank cap
4. Air filter box cover
5. Engine number (p. 14)
6. Gear shift lever (p. 21)
7. Cold start button (p. 20)


4.2 View of vehicle, rear right (example)

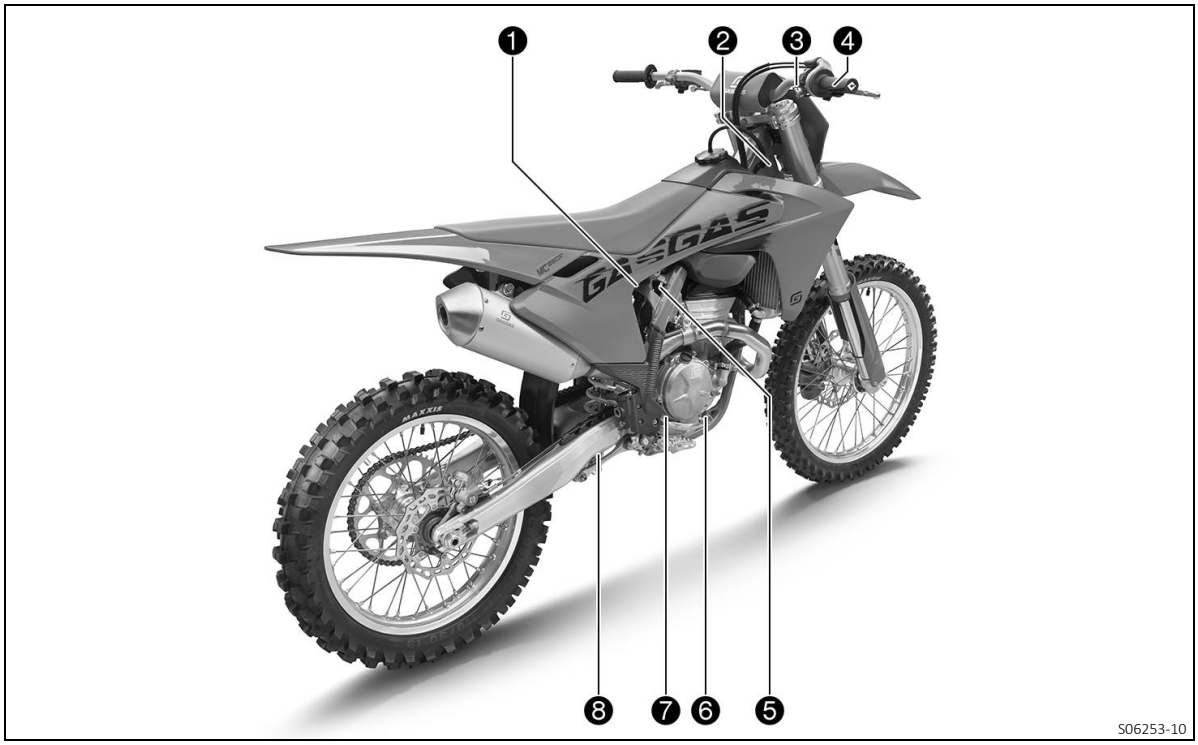

1. Shock absorber compression adjustment
2. Frame label (p. 14)
3. Kill switch (p. 16)
3. Electric starter (p. 17)
4. Throttle grip (p. 16)
5. Idle speed adjustment screw (p. 20)
6. Brake pedal (p. 21)
7. Level viewer, engine oil
8. Shock absorber rebound adjuster


5 Serial number

5.1 Vehicle identification number

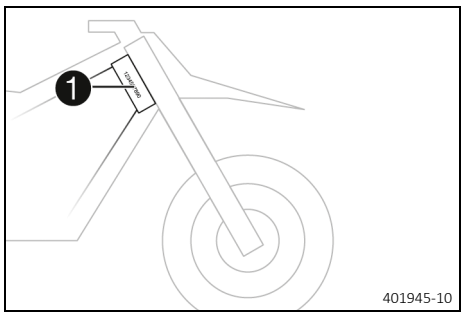


The vehicle identification number ❶ is stamped on the right-hand side of the steering head.

5.2 Frame label

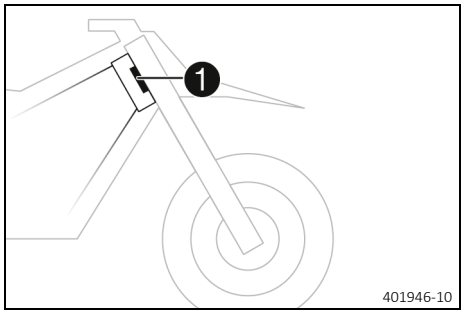


Frame label ❶ is located on the front frame tube.

5.3 Engine number

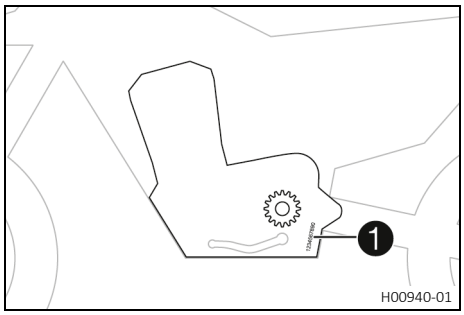


The engine number ❶ is located on the left side of the engine under the engine sprocket.

5.4 Fork part number

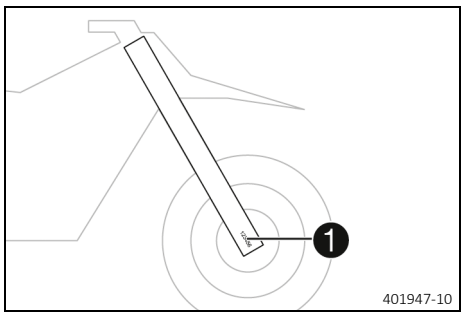


The fork article number ❶ is stamped on the outside of the axle clamp.

5.5 Shock absorber part number

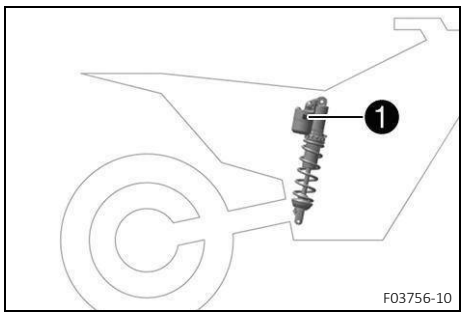


The shock absorber article number ❶ is stamped on the bottom of the shock absorber toward the right-hand side.

6.1 Clutch lever

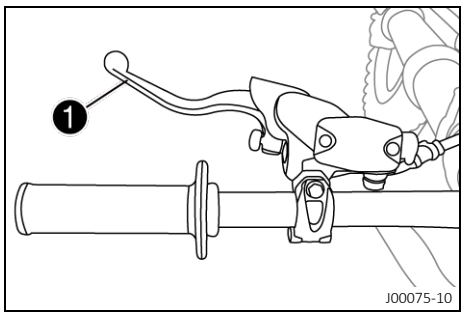


Clutch lever ❶ is fitted on the left side of the handlebar.
The clutch is activated hydraulically and adjusts itself automatically.

6.2 Handbrake lever

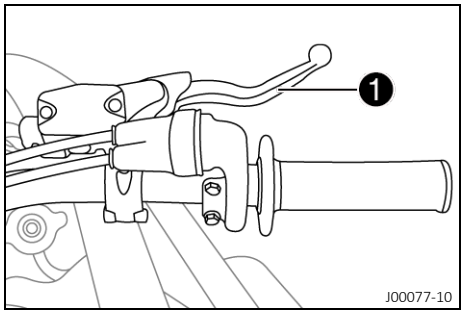


Hand brake lever ❶ is fitted on the right side of the handlebar.
The front brake is engaged using the hand brake lever.

6.3 Throttle grip

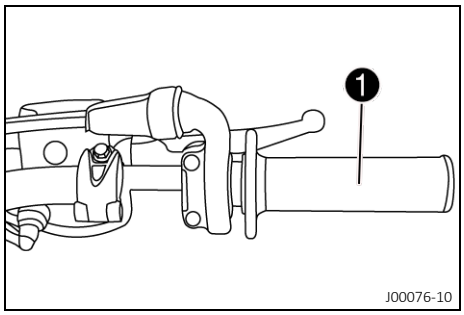


The throttle twist grip ❶ is fitted on the right side of the handlebar.

6.4 Kill switch

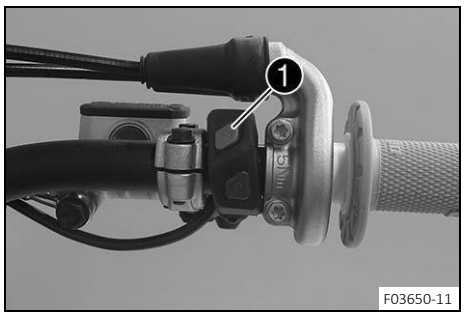

Kill switch ❶ is fitted on the right side of the handlebar.

6.5 Electric starter

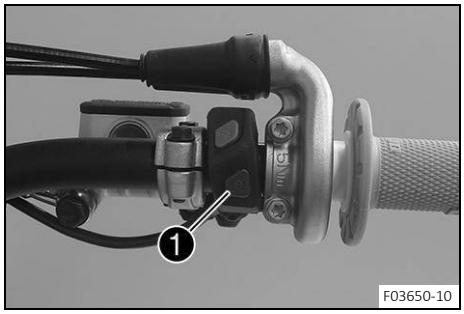

Electric starter ❶ is fitted on the right side of the handlebar.

Condition	Meaning
Electric starter in the basic position	No function.
Electric starter pressed	In this position, the starter motor is actuated.

6.6 Overview of indicator lights (MC)



Condition		Meaning
Fi	Failure indicator lamp lights up or flashes red – The **OBD** has detected a malfunction in the vehicle electronics. The malfunction indicator lamp also lights up if traction control is activated and the speed limiter intervenes.	The **OBD** has detected a malfunction in the vehicle electronics.


6.7 Overview of indicator lights (EX)



Condition		Meaning
Fi	Failure indicator lamp lights up or flashes red – The **OBD** has detected a malfunction in the vehicle electronics. The malfunction indicator lamp also lights up if traction control is activated and the speed limiter intervenes.	The **OBD** has detected a malfunction in the vehicle electronics.

Condition		Meaning
FUEL	**FUEL** is displayed	The fuel level of the fuel tank has reached the reserve mark.

6.8 Dashboard

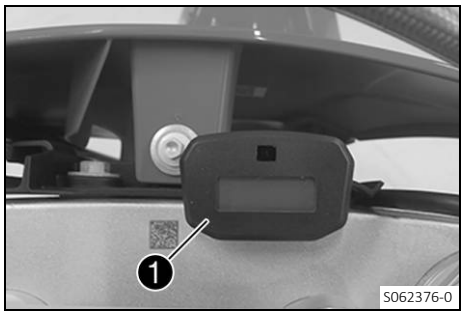

Dashboard ❶ is fitted in the front of the handlebar.
The dashboard shows the total operating hours of the engine.
The operating hours are counted when the engine is started and stopped when the engine is switched off.

Note
Nothing can be cleared or modified on the dashboard.
As soon as the diagnostics tool is connected, the hourmeter starts running.
Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

6.9 Opening the fuel tank cap

DANGER
Fire hazard Fuel is highly flammable.
The fuel in the fuel tank expands when warm and can escape if overfilled.
– Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
– Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
– Switch off the engine for refueling.
– Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
– If any fuel is spilled, wipe it up immediately.
– Do not overfill the fuel tank.

WARNING
Danger of poisoning Fuel is harmful to health.
– Do not allow fuel to come into contact with skin, eyes, or clothing.
– Consult a doctor immediately if fuel has been ingested.
– Do not inhale fuel vapors.
– Rinse the affected area immediately with plenty of water in the event of contact with skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
– If fuel spills on to your clothing, change the clothing.
– Store fuel properly in a suitable container and keep out of the reach of children.


NOTE
Environmental hazard Improper handling of fuel is dangerous to the environment.
– Do not allow fuel to enter the groundwater, the soil, or the sewage system.

(MC)



– Turn fuel tank cap ❶ counterclockwise and lift it off.


(EX)

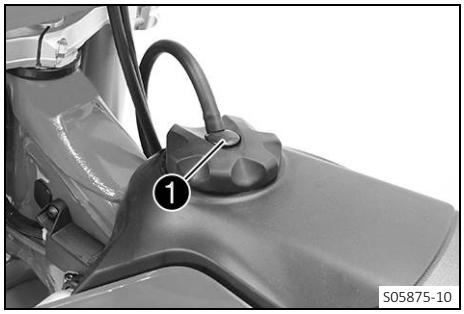

– Press release button ❶, turn the fuel tank cap counterclockwise, and lift it off.

6.10 Closing the fuel tank cap


(MC)

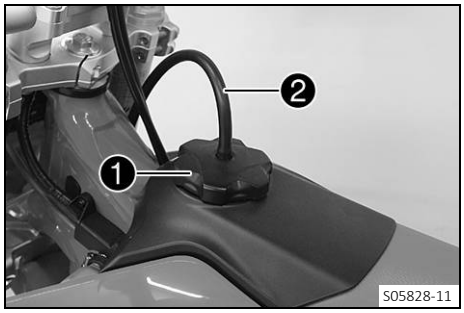

– Mount fuel tank cap ❶ and turn it clockwise until the fuel tank is tightly closed.

Route hose of fuel tank vent ❷ without kinks.


(EX)

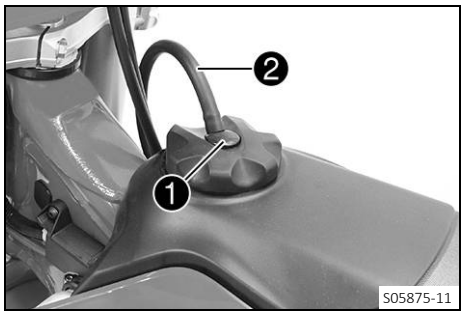

– Mount the fuel tank filler cap and turn it clockwise until release button ❶ engages.

Route hose of fuel tank vent ❷ without kinks.

6.11 Cold start button

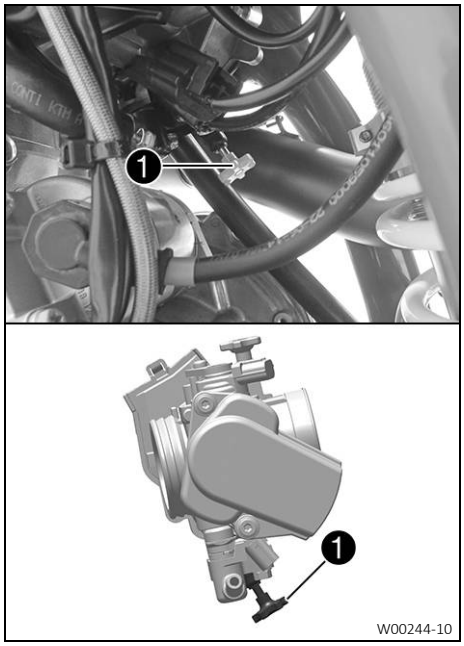

The electronic fuel injection extends the injection time when the engine is cold and the ambient temperature is low. To help the engine burn the increased amount of fuel, it must be supplied with additional oxygen by pushing the cold start button.

After briefly opening up the throttle and then releasing the throttle twist grip again, or turning the throttle twist grip towards the front, the cold start button returns to its original position.


Note

Check whether the cold start button has returned to its basic position.

The cold start button ❶ is fitted to the bottom of the throttle valve body.

Condition	Meaning
Cold start button activated	Cold start button is pressed in as far as it will go
Cold start button deactivated - cold start button is in the basic position	Cold start button is in the basic position

6.12 Idle speed adjustment screw

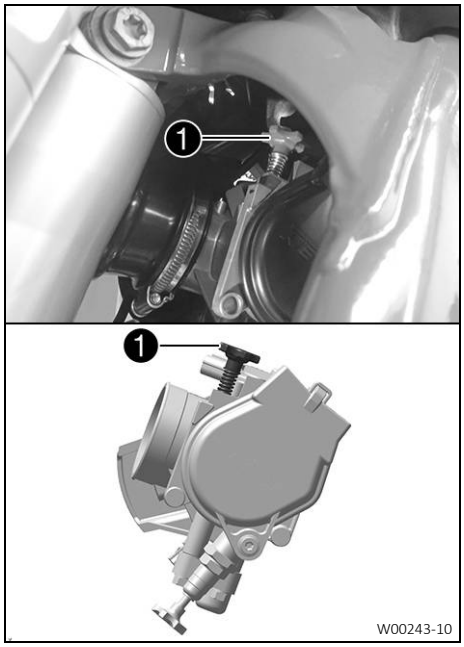

The idle setting of the throttle body substantially influences the vehicle's starting behavior, a stable idle speed, and the vehicle's response when the throttle is opened.


An engine with a correctly set idle speed is easier to start than an engine with the idle speed set incorrectly.

The idle speed is adjusted using idle speed adjusting screw ❶.

Increase the idle speed by turning the idle speed adjustment screw clockwise.


Decrease the idle speed by turning the idle speed adjustment screw counterclockwise.

6.13 Gear shift lever

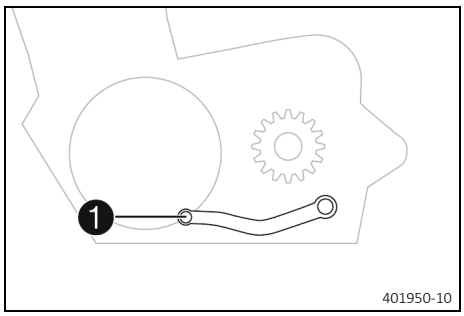


Gear shift lever ❶ is mounted on the left of the engine.

(MC)

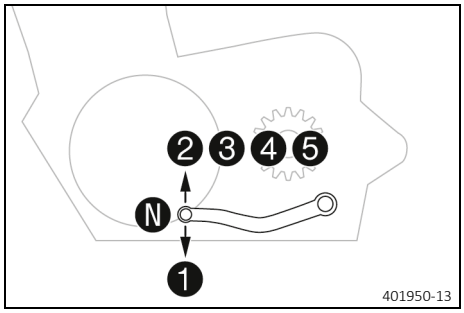


The gear positions can be seen in the figure.
The neutral or idle position is between the first and second gears.

(EX)

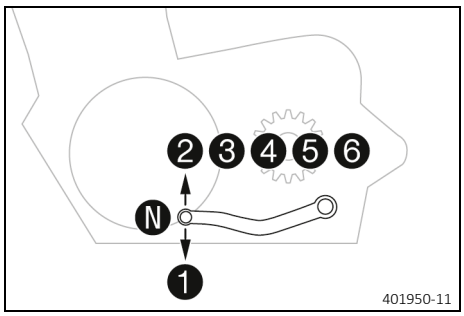


The gear positions can be seen in the figure.
The neutral or idle position is between the first and second gears.

6.14 Brake pedal

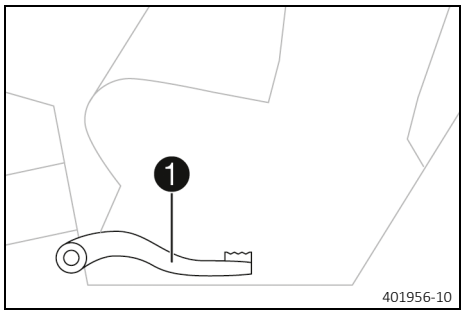

Brake pedal ❶ is located in front of the right footpeg.
The rear brake is operated with the brake pedal.

6.15 Plug-in stand (MC)

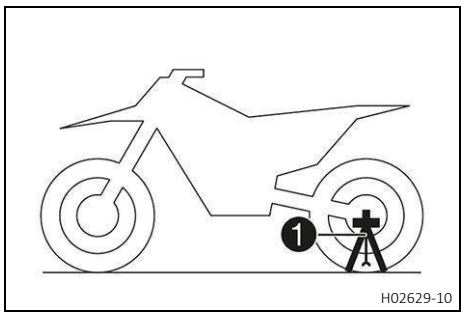


The plug-in stand is used for parking the motorcycle.
The plug-in stand is used as a fork support when transporting the motorcycle.


Note
The plug-in stand must be removed before riding.
The tool can be attached to the plug-in stand.

The support for the plug-in stand ❶ is on the left side of the wheel spindle.

6.16 Side stand (EX)

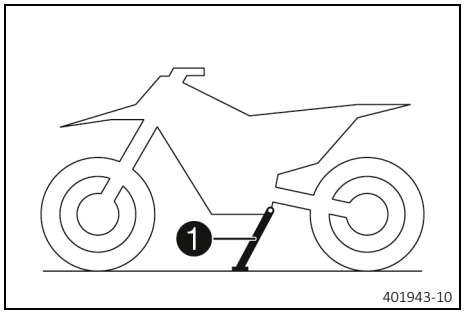

The side stand ❶ is located on the left of the vehicle.

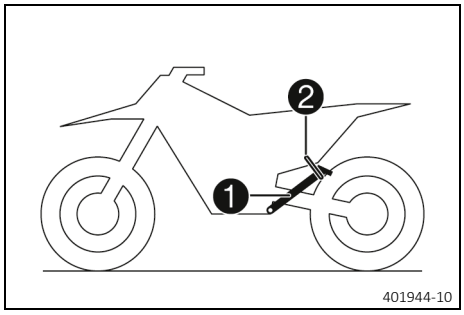

The side stand is used for parking the motorcycle.

Note
When you are riding, side stand ❶ must be folded up and secured with rubber band ❷.

7.1 Notes on preparing for first use.

DANGER
Danger of accidents A rider who is not fit to ride poses a danger to themself and to others.
– Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
– Do not operate the vehicle if you are physically or mentally incapable of doing so.

WARNING
Risk of injury Missing or inadequate protective clothing increases the risk of injury.
– Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
– Always wear protective clothing that is in good condition and meets the legal regulations.

WARNING
Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.
– Make sure that only tires of the same tread type are mounted to the front and rear wheel.

WARNING
Danger of accidents Not adapting the riding style constitutes a major risk.
– Adapt the vehicle speed to the road conditions and your riding ability.

WARNING
Danger of accidents The vehicle is not designed to carry passengers.
– Do not ride with a passenger.

WARNING
Danger of accidents The brake system fails in the event of overheating.
If the brake pedal is not released, the brake pads grind continuously.
– Take your foot off the brake pedal when you are not braking.

WARNING
Danger of accidents Total weight and axle loads influence the handling characteristic.
– Do not exceed the maximum permissible total weight or the axle loads.

WARNING
Risk of injury People who act without authorization endanger themselves and others.
– Never leave the vehicle unattended while the engine is running.
– Secure the vehicle against unauthorized access.

Note
When using the motorcycle, remember that others may be disturbed by excessive noise.

– Ensure that the pre-delivery inspection has been carried out by an authorized GASGAS workshop.
  ✓ You will receive the delivery certificate at vehicle handover.
– Read the entire Owner's Manual before riding for the first time.
– Get to know the controls.
– Adjust the basic position of the clutch lever. (p. 84)
– Adjust the basic position of the hand brake lever. (p. 87)
– Adjust the basic position of the brake pedal. (p. 93)
– Adjust the basic position of the gear shift lever. (p. 120)
– Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride.

Note

This vehicle is not approved for use on public roads.

When off-road, it is recommended that you be accompanied by another person with another vehicle so that you can help each other.

– Also, ride as slowly as possible and in a standing position to get a better feel for the motorcycle.
– Do not undertake any off-road trips that exceed your ability and experience.
– Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.

(MC)

– Do not take any luggage.

(EX)

– If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.

Note

Motorcycles react sensitively to any changes of weight distribution.

– The maximum permissible total weight and the maximum permissible axle loads must not be exceeded.

Maximum permissible total weight	335 kg (738.5 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)

– Run in the engine. (p. 24)

7.2 Running in the engine


– Do not exceed the specified engine speed and load during the running-in time.

Maximum engine speed	
During the first operating hour	7,000 rpm (116.67 Hz)

Maximum engine power	
during the first 3 operating hours	≤ 75 %

– Avoid fully opening the throttle.

7.3 Starting performance of lithium-ion batteries at low temperatures

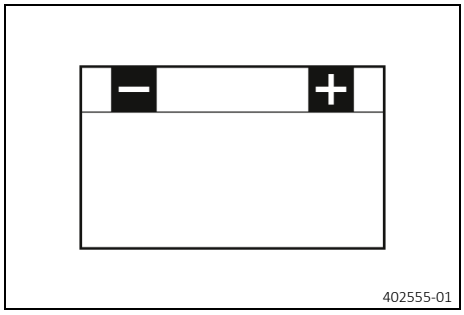

Lithium-ion batteries are far lighter than lead batteries, have a low self-discharge rate, and have more starting power at temperatures over 6 °C (43 °F).

Several attempts to start may be required. Press the start button for 5 seconds, and wait 15 seconds between attempts. At low temperatures, wait for 30 seconds. The pauses are necessary so that the heat created can be distributed through the lithium-ion battery without damaging the lithium-ion battery.

The starting power increases as the battery warms up.

Always make sure the lithium-ion battery is charged to that there is enough power to spare for starting at low temperatures.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

7.4 Preparing the vehicle for difficult operating conditions

Note
Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.

– Clean the air filter and air filter box. (p. 70)

Note
Check the air filter approx. every 30 minutes.

– Check the electrical socket connector for humidity and corrosion and to ensure it is firmly seated.
  » If moisture, corrosion, or damage is found:
    – Clean and dry the socket connector, or change it if necessary.
– Riding on dry sand. (p. 25)
– Riding on wet sand. (p. 26)
– Rides on wet and muddy surfaces. (p. 26)
– Riding at high temperatures or slow speed. (p. 27)
– Riding at low temperatures and in snow. (p. 27)


7.5 Preparing the vehicle for rides on dry sand



– Mount the air filter dust protection.

Air filter dust protection cover (A46006920000)

Note
Observe the enclosed instructions for GASGAS Technical Accessories.

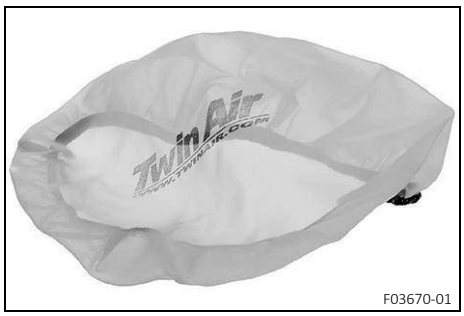

– Mount the air filter sand protection.

Air filter sand protection (A46006922000)

Note
Observe the enclosed instructions for GASGAS Technical Accessories.



– Clean the chain.

Chain cleaner (p. 152)

– Mount the steel sprocket.
– Grease the chain.

Universal oil spray (p. 149)

– Clean the radiator fins.
– Straighten the bent radiator fins carefully.

7.6 Preparing the vehicle for rides on wet sand



– Mount the air filter water protection.

Air filter water protection (A46006921000)

Note
Observe the enclosed instructions for GASGAS Technical Accessories.



– Clean the chain.

Chain cleaner (p. 152)

– Mount the steel sprocket.
– Grease the chain.

Universal oil spray (p. 149)

– Clean the radiator fins.
– Straighten the bent radiator fins carefully.

7.7 Preparing for rides on wet and muddy surfaces



– Mount the air filter water protection.

Air filter water protection (A46006921000)

Note
Observe the enclosed instructions for GASGAS Technical Accessories.


600868-01

– Mount the steel sprocket.
– Clean the motorcycle. (p. 127)
– Straighten the bent radiator fins carefully.

7.8 Preparing vehicle for rides at high temperature or slow speed


600868-01

– Adjust the secondary transmission to the road conditions.

Note
The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary ratio.

– Clean the chain.

Chain cleaner (p. 152)

– Clean the radiator fins.
– Straighten the bent radiator fins carefully.
– Check the coolant level. (p. 112)

7.9 Preparing the vehicle for low temperatures or snow



F03668-01


– Mount the air filter water protection.

Air filter water protection (A46006921000)

Note
Observe the enclosed instructions for GASGAS Technical Accessories.

8.1 Checks and maintenance measures when preparing for use

Note
Before every trip, check the condition of the vehicle and ensure that it is safe to operate.
The vehicle must be in perfect technical condition when it is being operated.

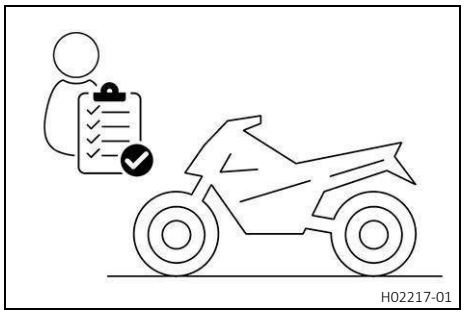
H02217-01

- Check that the electrical equipment is functioning properly.
- Check the engine oil level. (p. 123)
- Check the brake fluid level for the front brake. (p. 88)
- Check the brake fluid level for the rear brake. (p. 94)
- Check that the brake pads of the front brake are secured. (p. 90)
- Check that the brake pads of the rear brake are secured. (p. 96)
- Check the function, condition, and free travel of the brake system.
- Check the coolant level. (p. 112)
- Check the chain for dirt. (p. 77)
- Check the chain, rear sprocket, engine sprocket, and chain guide. (p. 79)
- Check the chain tension. (p. 78)
- Check the tire condition. (p. 102)
- Check the tire pressure. (p. 103)
- Check the spoke tension. (p. 104)


  The spoke tension must be checked regularly as incorrect spoke tension will severely impair riding safety.
- Clean the dust boots of the fork legs. (p. 53)
- Bleed the fork legs. (p. 52)
- Check the air filter and clean if necessary.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel level.

8.2 Starting the vehicle

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.


NOTE
Engine failure Running a cold engine at high engine speeds negatively impacts the service life of the engine.
- Always warm up the engine at low engine speeds.

(MC)

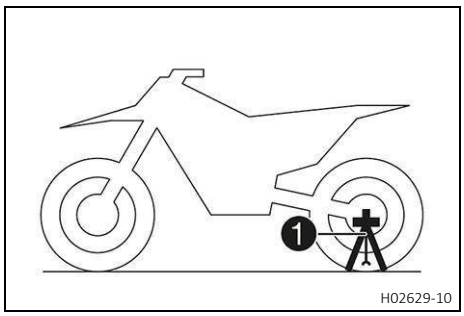


– Remove plug-in stand ❶.

(EX)

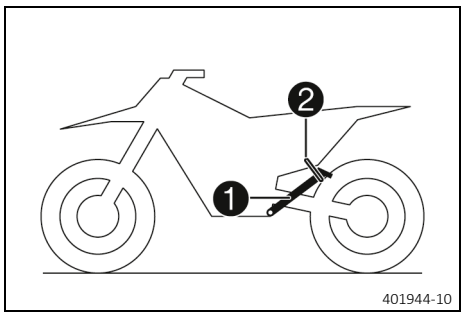

– Take the motorcycle off side stand ❶ and secure the side stand with rubber band ❷.
– Shift the transmission into the neutral position.

Condition: Ambient temperature: < 20 °C (< 68.0 °F)

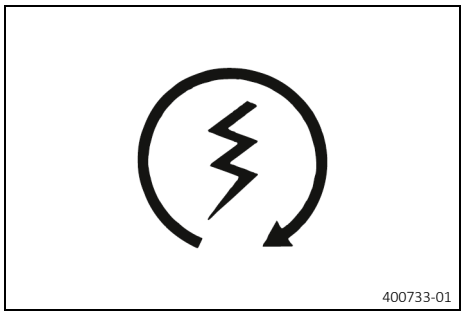

– Push cold start button all the way to the stop.
– Press electric starter (ϟ).

Note

Press the electric starter for a maximum of 5 seconds. Wait for 15 seconds before making another attempt at starting.

At low temperatures, wait for 30 seconds.

At temperatures below 6 °C (43 °F), several attempts at starting may be necessary to warm-up the lithium-ion battery and thereby increase the starting power.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.

The malfunction indicator light lights up during the starting process.

8.3 Starting off

– Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.

8.4 Shifting, riding

WARNING
Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.
– Do not downshift to a lower gear at high engine speeds.

Note
If you hear unusual noises while riding, stop immediately, switch off the engine, and contact an authorized GASGAS workshop.
First gear is used for starting off or for steep inclines.

– Shift into a higher gear when conditions allow (incline, riding situation, etc.). To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever and open the throttle.
– If you pushed the cold start button while starting, open the throttle briefly and release the throttle twist grip or turn the throttle twist grip forward.
  ✓ The cold start button goes to the basic position.
– After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is ¾ open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
– Only open the throttle as much as the engine can handle. Abruptly opening the throttle increases fuel consumption.
– To shift down, brake and close the throttle at the same time.
– Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and either open the throttle or shift again.
– Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

≥ 1 min

– Avoid riding the clutch frequently or for too long. This causes the engine oil, engine and cooling system to heat up.
– Ride at a low engine speed instead of at a high engine speed when riding the clutch.

8.5 Braking

WARNING
Danger of accidents Braking with excessive force locks the wheels.
– Adapt your braking to the riding situation and the road conditions.

WARNING
Danger of accidents A spongy pressure point on the front or rear brake reduces the brake action.
– Do not drive the vehicle if the brake system has a spongy pressure point.

WARNING
Danger of accidents Moisture and dirt impair the brake system.
– Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

– On sandy, wet, or slippery surfaces, use mostly the rear brake.
– Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
– Use the brake action of the engine on long downhill stretches. Shift down one or two gears, but do not overrev the engine when doing so. This means that significantly less braking is required and means the brake system does not overheat.

8.6 Stop, park

WARNING
Risk of injury People who act without authorization endanger themselves and others.
– Never leave the vehicle unattended while the engine is running.
– Secure the vehicle against unauthorized access.

NOTE
Material damage The vehicle may be damaged if parked incorrectly.
Damage can occur if the vehicle rolls away or falls over.
The components for parking the vehicle are designed only for the weight of the vehicle.
– Park the vehicle on a firm and level surface.
– Make sure that nobody sits on the vehicle when it is parked on a stand.

NOTE
Fire hazard Hot vehicle components pose a fire hazard and explosion risk.
– Do not park the vehicle near materials which are highly flammable or explosive.
– Allow the vehicle to cool down before covering it.

WARNING
Danger of burns Some vehicle components become hot when the vehicle is operated.
– Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
– Allow the vehicle parts to cool down before performing any work on the vehicle.


– Brake the motorcycle.
– Shift the transmission into neutral
– Press and hold the stop button while the engine is idling until the engine stops.
– Park the motorcycle on firm ground.

8.7 Transportation

NOTE
Material damage The vehicle may be damaged if parked incorrectly.
Damage can occur if the vehicle rolls away or falls over.
The components for parking the vehicle are designed only for the weight of the vehicle.
– Park the vehicle on a firm and level surface.
– Make sure that nobody sits on the vehicle when it is parked on a stand.

NOTE
Fire hazard Hot vehicle components pose a fire hazard and explosion risk.
– Do not park the vehicle near materials which are highly flammable or explosive.
– Allow the vehicle to cool down before covering it.


(MC)

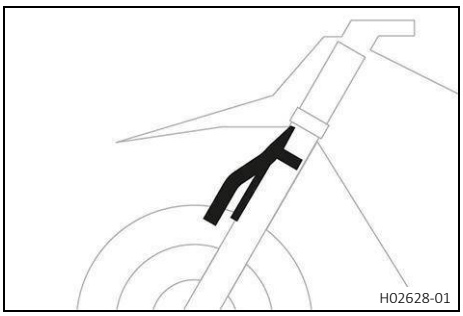

– Switch off the engine.
– Mount the plug-in stand on the fork legs.

Plug-in stand (A46029094000)


Note
The plug-in stand is included in the scope of supply.
Make sure the brake line runs in front of the plug-in stand and does not become wedged.

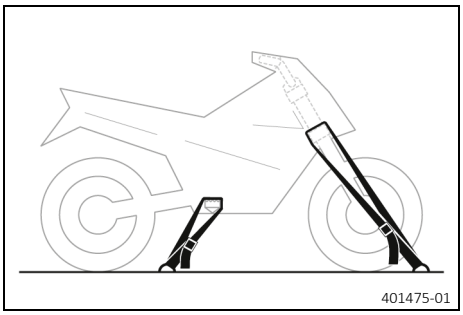

– Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

Note
Only tighten the tension belts to the point that the plug-in stand is firmly in contact with the fender and the tires.
Make sure that the plug-in stand is aligned with the underside of the fender.

(EX)

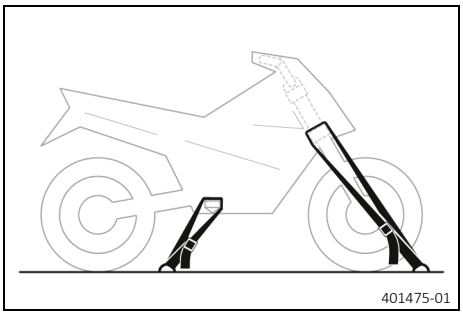

– Switch off the engine.
– Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

8.8 Refueling

DANGER
Fire hazard Fuel is highly flammable.
The fuel in the fuel tank expands when warm and can escape if overfilled.
– Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
– Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
– Switch off the engine for refueling.
– Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
– If any fuel is spilled, wipe it up immediately.
– Do not overfill the fuel tank.

WARNING
Danger of poisoning Fuel is harmful to health.
– Do not allow fuel to come into contact with skin, eyes, or clothing.
– Consult a doctor immediately if fuel has been ingested.
– Do not inhale fuel vapors.
– Rinse the affected area immediately with plenty of water in the event of contact with skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
– If fuel spills on to your clothing, change the clothing.
– Store fuel properly in a suitable container and keep out of the reach of children.

NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

– Do not allow fuel to enter the groundwater, the soil, or the sewage system.


NOTE

Material damage Inadequate fuel quality can lead to losses in performance and consequential damage.

– Refuel only with clean fuel that meets the specified standards.

– Switch off the engine.

– Open the fuel tank cap. (p. 18)

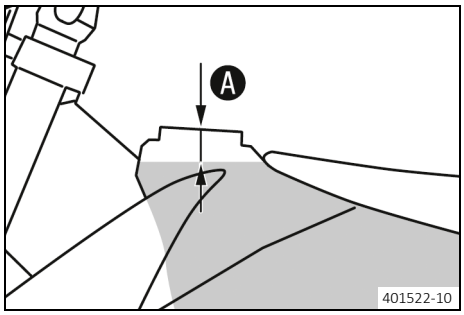

– Fill the fuel tank with fuel no higher than A.

Level A	35 mm (1.38 in)

Total fuel tank capacity, approx.	
Super unleaded (ROZ 95) (p. 148)	**(MC)** 7.9 l (2.09 liq. gal_{US})
	(EX) 9.0 l (2.38 liq. gal_{US})

– Close the fuel tank cap. (p. 19)

9.1 Service schedule

Any further work that results from the service work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

If the vehicle is used in particularly harsh conditions such as heavy rain, mud, sand, snow, extreme temperatures, frequent full load etc., shorter service intervals than those in the table may be necessary.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized GASGAS dealers for the electronic proof of service. Your authorized GASGAS dealer will be happy to advise you.

	After one operating hour	Every 15 operating hours	Every 45 operating hours	Every 90 operating hours	Every 24 months
Read out the fault memory using the diagnostics tool.	○	●	●	●	●
Program the gear position sensor.		●	●	●	
Check that the electrical equipment is functioning properly.	○	●	●	●	
Check and charge the 12 V battery.	○	●	●	●	●
Check that the brake pads of the front brake are secured. (p. 90)	○	●	●	●	●
Check that the brake pads of the rear brake are secured. (p. 96)	○	●	●	●	●
Check the brake discs. (p. 87)	○	●	●	●	●
Check the brake lines for damage and tightness.	○	●	●	●	●
Check the brake fluid level for the front brake. (p. 88)	○	●	●		
Change the brake fluid for the front brake.				●	●
Check the brake fluid level for the rear brake. (p. 94)	○	●	●		
Change the brake fluid for the rear brake.				●	●
Check/correct the fluid level of the hydraulic clutch. (p. 84)			●		
Change the hydraulic clutch fluid. (p. 85)				●	●
Check the free travel on the hand brake lever. (p. 87)	○	●	●	●	●
Check the free travel of the brake pedal. (p. 93)	○	●	●	●	●
Check the idle speed.	○	●	●	●	●
Change the engine oil and the oil filter, clean the oil screens. (p. 123)	○	●	●	●	●
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing.	○	●	●	●	●
Check the cables for damage and that there are no kinks in the routing.		●	●	●	●
Check that the clutch cables are undamaged, routed without kinks, and set correctly.		●	●	●	●
Check the frame. (p. 82)		●	●	●	
Check the swingarm. (p. 82)		●	●	●	
Check the swingarm bearing for play.			●	●	
Check the heim joint on the shock absorber for play.			●	●	
Check the shock absorber linkage.		●	●	●	
Check the tire condition. (p. 102)		●	●	●	●

	After one operating hour	Every 15 operating hours	Every 45 operating hours	Every 90 operating hours	Every 24 months
Check the tire pressure. (p. 103)		●	●	●	●
Check the wheel bearing for play.		●	●	●	
Check the hubs.		●	●	●	
Check the rim run-out.	○	●	●	●	
Check the spoke tension. (p. 104)	○	●	●	●	
Check the chain, rear sprocket, engine sprocket, and chain guide. (p. 79)	○	●	●	●	
Check the chain tension. (p. 78)	○	●	●	●	●
Grease all moving parts (e.g., hand lever, chain, etc.) and check for smooth operation.	○	●	●	●	●
Change the spark plug and spark plug connector.			●	●	
Check the valve clearance.	○		●	●	
Change the fuel filter.				●	●
Check the clutch.		●	●	●	
Clean the air filter and air filter box. (p. 70)		●	●	●	●
Change the glass fiber filling of the muffler. (p. 72)			●	●	
Carry out fork service. (**MC**)			●	●	
Carry out fork service. (**EX**)			●	●	
Service the shock absorber. (**MC 350F, EX 350F US**)			●	●	
Check all screws, nuts, and hose clamps for a tight fit.	○	●	●	●	●
Change the fuel screen. (p. 122)	○	●	●	●	●
Check the fuel pressure.	○		●	●	●
Check the frost protection and coolant level. (p. 111)			●	●	
Check the coolant level. (p. 112)	○	●			
Change the coolant. (p. 114)					●
Check the steering head bearing play. (p. 59)	○	●			
Lubricate the steering head bearing. (p. 60)			●	●	●
Perform minor engine service including removing and installing the engine. (Change the piston, check/measure the cylinder. Check the cylinder head. Check the camshaft and valve train components. Check the timing assembly. Change the radial shaft seals and water pump gasket. Change the intake flange. Change inlet sleeve.)			●	●	
Perform major engine service, engine is removed. (Change valves, valve springs, valve spring seats, and valve spring retainer. Change the connecting rod, conrod bearing and crank pin. Check the transmission and shift mechanism. Check the oil pressure control valve. Change the suction pump. Check the force pump and lubrication system. Change the timing chain. Change all engine bearings and all gaskets. Change the freewheel.)				●	
Final check: check vehicle for operating safety.	○	●	●	●	●
Take a test ride.	○	●	●	●	●
Read out the fault memory after the test ride using the diagnostics tool.	○	●	●	●	●

9 Service schedule


	After one operating hour	Every 15 operating hours	Every 45 operating hours	Every 90 operating hours	Every 24 months
Enter electronic proof of service.	○	●	●	●	●

○ One-time interval

● Periodic interval

10.1 Checking the basic chassis setting with the rider's weight

Note
When adjusting the basic chassis setting, first adjust the shock absorber and then the fork.

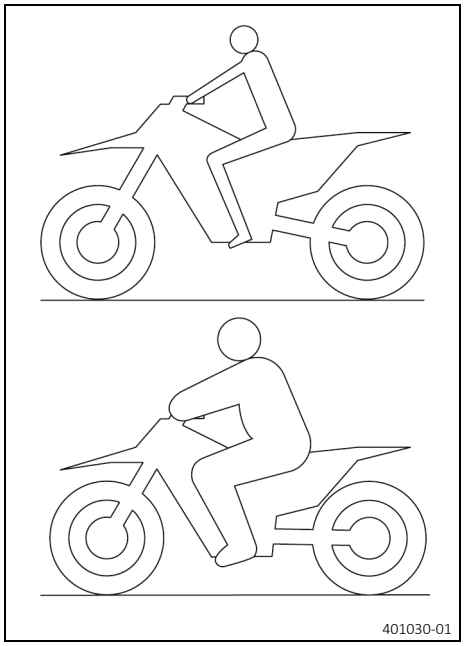


- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm, and frame, the basic settings of the suspension components must match the rider's weight.
- As delivered, GASGAS offroad motorcycles are adjusted for an average rider's weight (with full protective clothing).

Standard rider weight	75 kg ... 85 kg (165.3 lb ... 187.4 lb)

- If the rider's weight is above or below this range, the basic setting of the suspension components must be adjusted accordingly.
- Small weight differences can be compensated by adjusting the spring pretension of the shock absorber, but in the case of large weight differences, the springs must be replaced.

10.2 Air suspension XACT (MC)

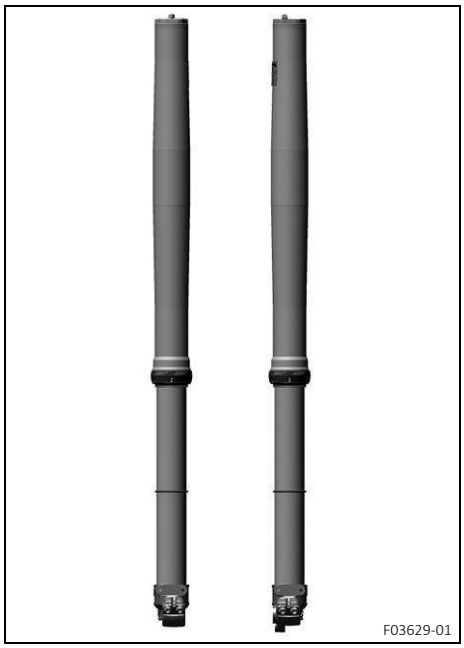

Air suspension **WP XACT** is used in the fork.

In this system, the suspension is located in the left fork leg and damping in the right fork leg.

As fork springs are no longer required, a significant weight advantage is achieved when compared to conventional forks. The response on slightly uneven surfaces is significantly improved.

In normal driving mode, suspension is provided exclusively by an air cushion. A steel spring is located in the left fork leg as an end stop.

Note
If the fork frequently bottoms out, then the fork air pressure must be increased to avoid damage to the fork and frame.

The air pressure in the fork can be quickly adjusted to the rider's weight, surface conditions, and the rider's preference using a fork air pump. The fork does not have to be dismantled. The time-consuming mounting of harder or softer fork springs is not required.

If the air chamber loses air due to a damaged seal, the fork will still not sag. In this case the air is retained in the fork. The suspension travel is maintained as far as possible. The damping becomes harder, and the riding comfort is reduced.

As with a conventional fork, the damping can be adjusted in rebound and compression stages.

The rebound adjustment is located at the lower end of the right fork leg.

The compression adjustment is located at the upper end of the right fork leg.

10.3 Compression damping of the shock absorber

The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed.

High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed.

The high-speed compression has an effect, for example, when landing after a jump: the rear wheel suspension compresses quickly.

The low-speed compression has an effect, for example, when riding over long bumps: the rear wheel suspension compresses slowly.

These two ranges can be adjusted separately, although the transition between high-speed and low-speed is floating. As a result, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.4 Adjusting the low-speed compression damping of the shock absorber

CAUTION


Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

– Please follow the description provided.

Note

The effect of the low-speed compression adjustment can be seen in slow to normal compression of the shock absorber.

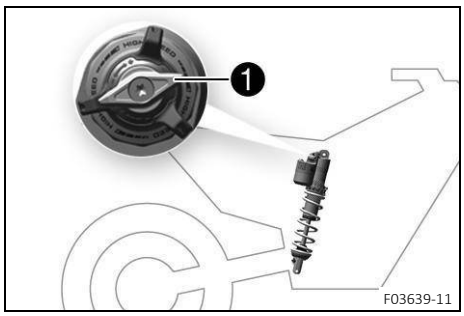

– Turn adjusters ❶ clockwise up to the last perceptible click.
– Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Low-speed compression damping **(MC)**	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Low-speed compression damping **(EX)**	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Note

Turning clockwise increases damping; turning anticlockwise reduces damping.

10.5 Adjusting the high-speed compression damping of the shock absorber


CAUTION

Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

– Please follow the description provided.

Note
The effect of the high-speed compression adjustment can be seen in the fast compression of the shock absorber.

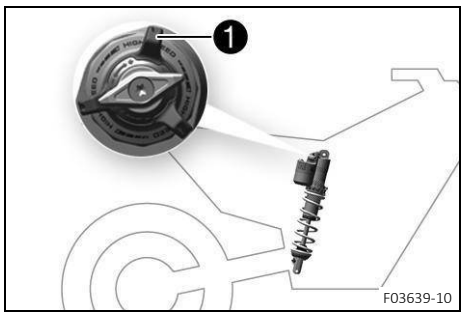

– Turn adjusters ❶ clockwise all the way to the stop.
– Turn counterclockwise by the number of turns corresponding to the shock absorber type.


High-speed compression damping **(MC)**	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)

High-speed compression damping **(EX)**	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)

Note
Turning clockwise increases damping; turning anticlockwise reduces damping.

10.6 Adjusting the rebound damping of the shock absorber

CAUTION
Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly.
The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided.

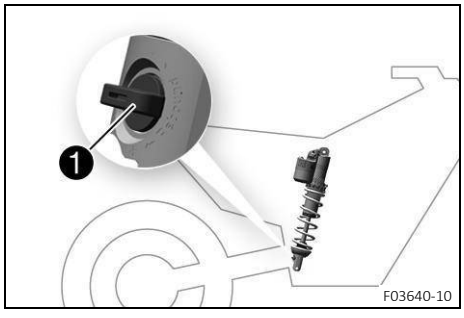

– Turn adjusters ❶ clockwise up to the last perceptible click.
– Turn counterclockwise by the number of clicks corresponding to the shock absorber type.

Rebound damping **(MC)**	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Rebound damping **(EX)**	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks

Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.

10.7 Measuring the dimension of the unloaded rear wheel

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)

Control process

– Position the sag scale in the rear axle and measure the distance to marking **SAG** on the rear fender.

Sag scale (00029090200)


– Note the value as dimension Ⓐ.

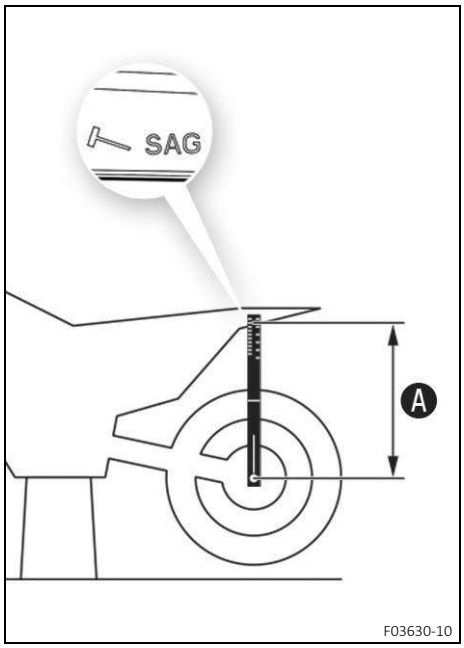

Reworking

– Remove the motorcycle from the lift stand. (p. 51)

10.8 Checking the static sag of the shock absorber

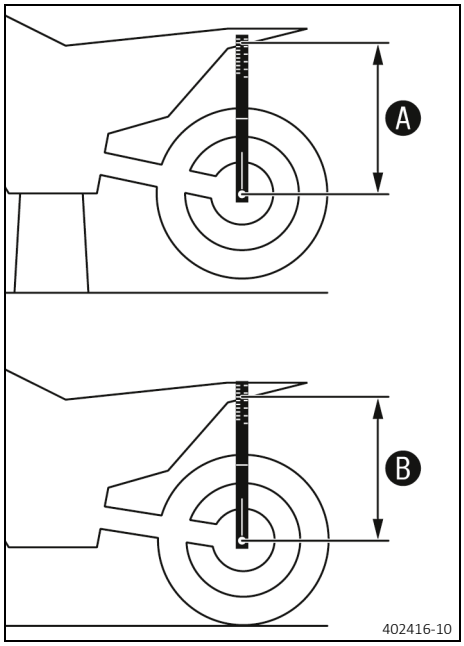

– Measure the dimension of the unloaded rear wheel. (p. 40)
– Hold the motorcycle upright with aid of an assistant.
– Measure the distance again between the rear axle and marking **SAG** on the rear fender using the sag gage.
– Note the value as dimension **B**.

Note


The static sag is the difference between measurements **A** and **B**.

– Check the static sag.

Static sag **(MC)**	35 mm (1.38 in)
Static sag **(EX)**	35 mm (1.38 in)

» If the static sag is more or less than the specified value:
– Adjust the preload for the shock absorber. (p. 42)

10.9 Checking the rider sag of the shock absorber

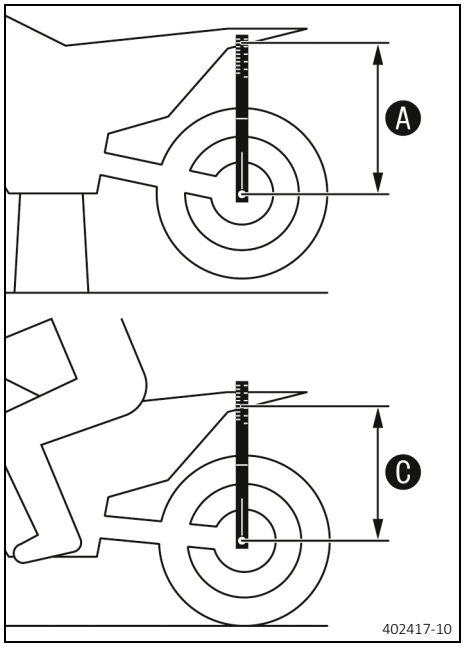

– Measure the dimension of the unloaded rear wheel. (p. 40)
– With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal seating position (feet on footpegs) and bounces up and down a few times.
✓ The rear wheel suspension levels out.
– Another person again measures the distance between the rear axle and marking **SAG** on the rear fender using the sag gage.
– Note the value as dimension **C**.

Note

The rider sag is the difference between measurements **A** and **C**.

– Check the rider sag.

Rider sag **(MC)**	105 mm (4.13 in)
Rider sag **(EX)**	105 mm (4.13 in)


» If the rider sag differs from the specified measurement:
– Adjust the rider sag. (p. 43)

10.10 Adjusting the preload for the shock absorber

CAUTION
Risk of injury Parts of the shock absorber will move erratically if the shock absorber is detached incorrectly. The shock absorber is filled with highly compressed nitrogen.
– Please follow the description provided.

Note
Note the current adjustment before changing the spring preload - e.g. measure the spring length.

Preparatory work
– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)
– Remove the muffler. (p. 72)
– Raise the motorcycle with a lift stand. (p. 51)
– Remove the shock absorber. (p. 62)
– After removing the shock absorber, clean it thoroughly.

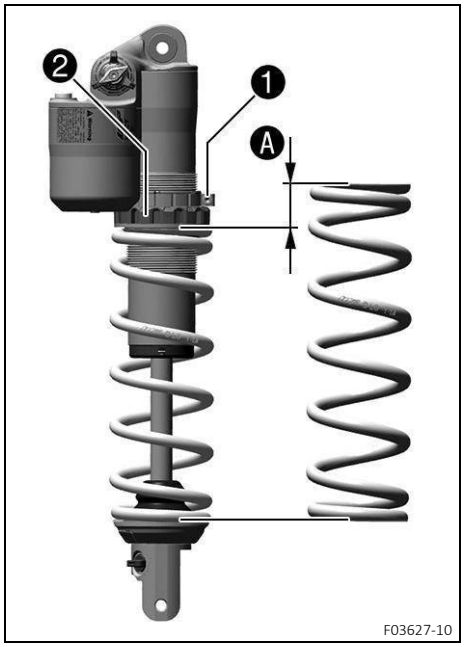

Adjustment procedure
– Loosen screw 1.
– Turn adjusting ring 2 until the spring is no longer under tension.

Hook wrench (90129051000)

Note
If the spring cannot be fully released, the spring must be removed to accurately measure the spring length.

– Measure the total spring length while the spring is not under tension.
– Tension the spring by turning adjusting ring 2 to the specified degree A.

Preload **(MC)**	8 mm (0.31 in)
Preload **(EX)**	8 mm (0.31 in)

Note
Depending on the static sag and/or the rider sag, it may be necessary to increase or decrease the spring preload.

– Tighten screw 1.

Screw, shock absorber adjusting ring	
M5	5 Nm (3.7 ft·lb$_f$)


Reworking

- Install the shock absorber. (p. 63)
- Install the muffler. (p. 72)
- Install the right side panel. (p. 67)
- Install the frame protector. (p. 54)
- Check the free travel of the brake pedal. (p. 93)
- Remove the motorcycle from the lift stand. (p. 51)

10.11 Adjusting the rider sag

Preparatory work

- Remove the frame protector. (p. 54)
- Remove the right side panel. (p. 66)
- Remove the muffler. (p. 72)
- Raise the motorcycle with a lift stand. (p. 51)
- Remove the shock absorber. (p. 62)
- After removing the shock absorber, clean it thoroughly.

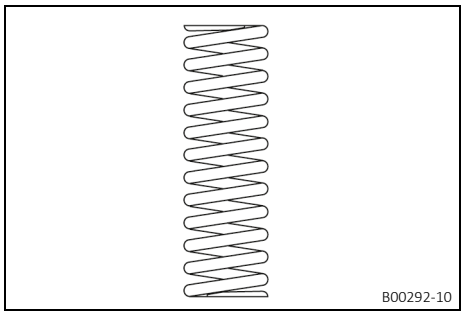

Adjustment procedure

- Select and mount a suitable spring.

Spring rate **(MC)**	
Weight of rider: 65 kg … 75 kg (143.3 lb … 165.3 lb)	42 N/mm (239.8 lb_f/in)
Weight of rider: 75 kg … 85 kg (165.3 lb … 187.4 lb)	45 N/mm (257.0 lb_f/in)
Weight of rider: 85 kg … 95 kg (187.4 lb … 209.4 lb)	48 N/mm (274.1 lb_f/in)

Spring rate **(EX)**	
Weight of rider: 65 kg … 75 kg (143.3 lb … 165.3 lb)	42 N/mm (239.8 lb_f/in)
Weight of rider: 75 kg … 85 kg (165.3 lb … 187.4 lb)	45 N/mm (257.0 lb_f/in)
Weight of rider: 85 kg … 95 kg (187.4 lb … 209.4 lb)	48 N/mm (274.1 lb_f/in)

Note
The spring rate is shown on the outside of the spring.


Reworking

- Install the shock absorber. (p. 63)
- Install the muffler. (p. 72)
- Install the right side panel. (p. 67)
- Install the frame protector. (p. 54)
- Check the free travel of the brake pedal. (p. 93)
- Remove the motorcycle from the lift stand. (p. 51)
- Check the static sag of the shock absorber. (p. 41)
- Check the rider sag of the shock absorber. (p. 41)

– Adjust the rebound damping of the shock absorber. (p. 39)
– Remove the motorcycle from the lift stand. (p. 51)

10.12 Checking the basic setting of the fork

Note
For various reasons, no exact rider sag can be determined for the fork.

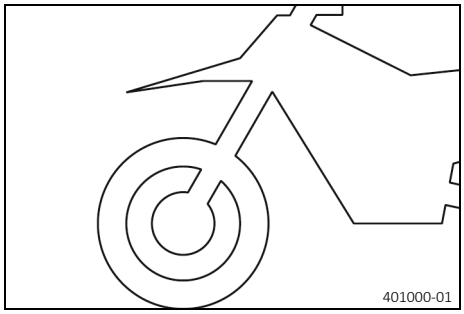


– Smaller differences in the rider's weight can be compensated for by the fork air pressure.
– However, if the fork frequently bottoms out (hard end stop on compression), the fork air pressure must be increased, within the specified values, to avoid damage to the fork and frame.
– If the fork feels unusually hard after extended periods of operation, the fork legs need to be bled.

10.13 Adjusting the fork air pressure (MC)

WARNING
Danger of accidents Modifications to the suspension settings that are not properly coordinated can impair the handling and overload components.
– Only make adjustments within the recommended range.
– Ride slowly to start with after making adjustments to get the feel of the new handling characteristics.

Note
Check or adjust the air pressure under the same conditions at the earliest 5 minutes after switching off the engine. The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

Preparatory work
– Raise the motorcycle with a lift stand. (p. 51)

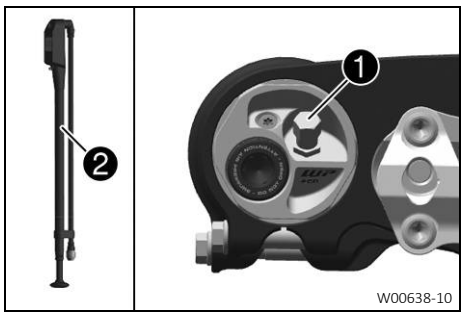

Filling procedure
– Remove protection cap ❶.
– Fully put fork air pump ❷ together.

Fork air pump (79412966100)

Note
The fork air pump is included as part of the motorcycle's accessory pack.

– Connect the fork air pump to the left fork leg.
✓ The fork air pump indicator switches on automatically.
✓ A little air escapes from the fork leg when connecting.

Note
This is due to the volume of the hose and is not due to a defect in the fork air pump or the fork.
Observe the enclosed instructions for GASGAS Technical Accessories.

– Adjust the air pressure as specified.

Air pressure	10.4 bar (150.8 psi)
Gradual change of the air pressure in steps by	0.2 bar (2.9 psi)
Minimum air pressure	7 bar (102 psi)
Maximum air pressure	12 bar (174 psi)

Note
Never adjust the air pressure to a value outside the stated range.

– Disconnect the fork air pump from the left fork leg.
  ✓ When disconnecting, excess pressure will escape from the hose – the fork leg itself does not lose any air.
  ✓ The fork air pump display switches off automatically after 80 seconds.
– Mount the protection cap.

Note
Only mount the protection cap by hand.


Reworking

– Remove the motorcycle from the lift stand. (p. 51)

10.14 Adjusting the compression damping of the fork

Note
The hydraulic compression damping determines the fork suspension behavior.

(MC)

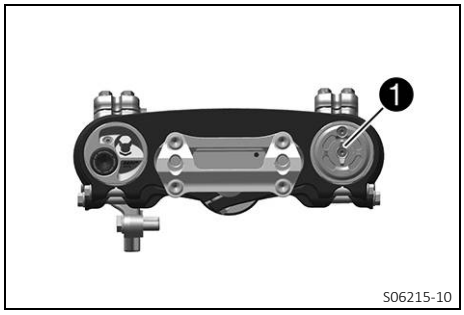

– Turn adjusters ❶ clockwise all the way to the stop.


Note
Adjusters ❶ are located at the top end of the fork legs.

– Turn clockwise by the number of clicks corresponding to the fork type.

Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

Note
Turning clockwise increases damping; turning counter-clockwise reduces damping during compression.

(EX)

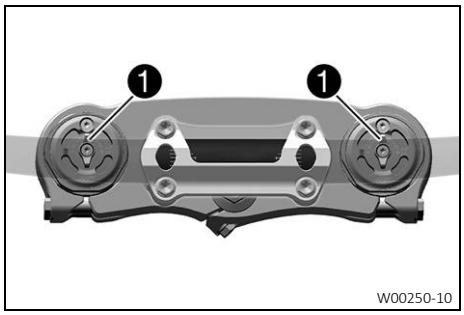

– Turn adjusters 1 clockwise all the way to the stop.

Note
Adjusters 1 are located at the top end of the fork legs.

Note
Make the same adjustment on both fork legs.

– Turn clockwise by the number of clicks corresponding to the fork type.


Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

Note
Turning clockwise increases damping; turning counter-clockwise reduces damping during compression.

10.15 Adjusting the rebound damping of the fork

Note
The hydraulic rebound damping determines the fork suspension behavior.

(MC)

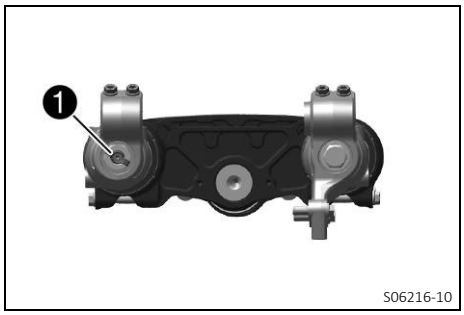

– Turn adjusters 1 clockwise all the way to the stop.


Note
Adjuster 1 is located at the lower end of the right fork leg.

– Turn clockwise by the number of clicks corresponding to the fork type.

Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks

Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.

(EX)

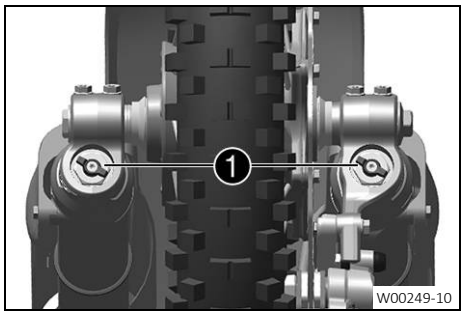

– Turn adjusters ❶ clockwise all the way to the stop.


Note
Adjusters ❶ are located at the bottom end of the fork legs.

– Turn clockwise by the number of clicks corresponding to the fork type.

Rebound damping	
Comfort	23 clicks
Standard	18 clicks
Sport	13 clicks

Note
Turning clockwise increases damping; turning anticlockwise reduces damping on rebound.

10.16 Handlebar position

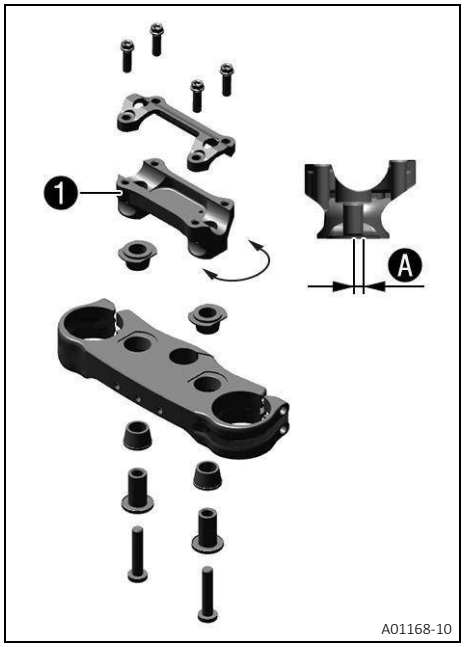

The holes on handlebar mount ❶ are placed at a distance of Ⓐ from the center.

Hole distance A	3.5 mm (0.138 in)

The handlebar can be mounted in 2 different positions. This allows the handlebar to be mounted in the most comfortable position for the rider.

Note
In addition, the handlebar can be mounted rigidly or on a rubber support.


10.17 Adjusting the handlebar position

WARNING
Danger of accidents A repaired handlebar poses a safety risk.
If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.
– Change the handlebar if the handlebar is damaged or bent.

Note
The handlebar can be mounted rigidly or on a rubber bearing.

Preparatory work
– Remove the handlebar pad.

Adjustment procedure

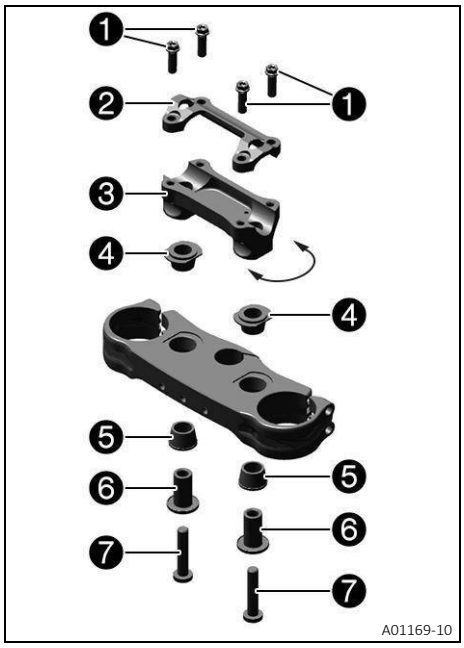

– Remove ❶ screws. Remove handlebar clamp ❷. Remove the handlebar and lay it to one side.

Note
Protect the components against damage by covering them. Do not kink the cables or lines.

– Remove screws ❼ and bushings ❻. Remove handlebar mount ❸.

Adjusting the handlebar position with handlebar clamp with rubber bushings
– Position the rubber bushings ❹ and ❺.
– Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

– Mount screws ❼ and bushings ❻ and tighten.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb$_f$) **Loctite® 243**


– Position the handlebar.

Note
Make sure the cables and wiring are positioned correctly.

– Position handlebar clamp ❷.
– Mount screws ❶, but do not tighten yet.
– First fasten the handlebar clamp with screws ❶ onto the longer, higher side of the handlebar mounts.
– Tighten screws ❶ evenly.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb$_f$)

Adjusting the handlebar position with the rigid handlebar clamp

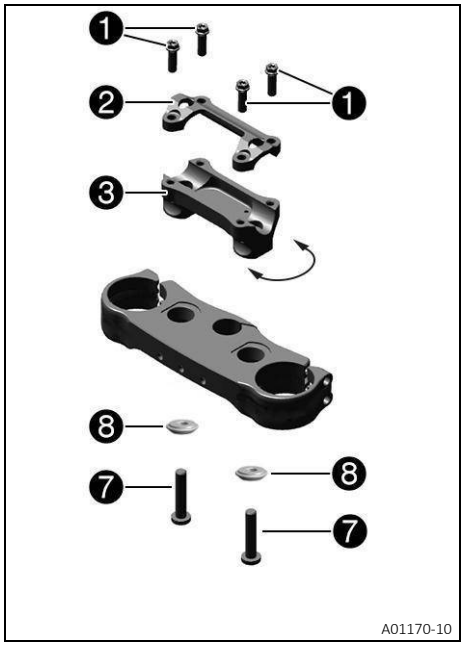

– Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

– Mount screws ❼ and bushings ❽ and tighten.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb$_f$) **Loctite® 243**

Rigid handlebar clamp bushing (A46001038010)

✓ The conical side of the bushing faces downward.
– Position the handlebar.

Note
Make sure the cables and wiring are positioned correctly.

– Position handlebar clamp ❷.
– Mount screws ❶, but do not tighten yet.
– First fasten the handlebar clamp with screws ❶ onto the longer, higher side of the handlebar mounts.
– Tighten screws ❶ evenly.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb$_f$)

Adjusting the handlebar position with handlebar clamp with rubber bushings

– Position the rubber bushings ❹ and ❺.
– Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

– Mount and tighten the screws ❼ with bushing ❻.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb$_f$) **Loctite® 243**


– Position the handlebar.

Note
Make sure the cables and wiring are positioned correctly.

– Position handlebar clamp ❷.
– Mount screws ❶, but do not tighten yet.
– First fasten the handlebar clamp with screws ❶ onto the longer, higher side of the handlebar mounts.
– Tighten screws ❶ evenly.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb$_f$)

Adjusting the handlebar position with the rigid handlebar clamp

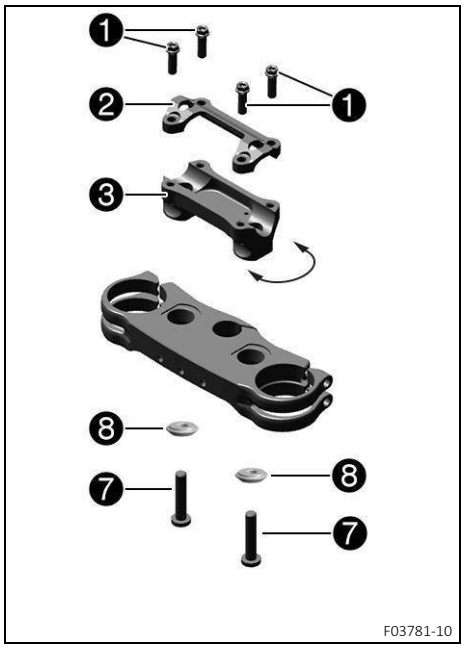

F03781-10

– Place the handlebar mount in the required position.

Note
The handlebar mount is longer and higher on one side.

– Mount screws ❼ and bushings ❽ and tighten.

Screw, handlebar mount	
M10	40 Nm (29.5 ft·lb$_f$) **Loctite® 243**

Rigid handlebar clamp bushing (A46001038010)

✓ The conical side of the bushing faces downward.

– Position the handlebar.

Note
Make sure the cables and wiring are positioned correctly.

– Position handlebar clamp ❷.
– Mount screws ❶, but do not tighten yet.
– First fasten the handlebar clamp with screws ❶ onto the longer, higher side of the handlebar mounts.
– Tighten screws ❶ evenly.

Handlebar clamp screw	
M8	20 Nm (14.8 ft·lb$_f$)

Reworking

– Mount the handlebar pad.

11.1 Raising the motorcycle with a lift stand

NOTE


Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

– Park the vehicle on a firm and level surface.
– Make sure that nobody sits on the vehicle when it is parked on a stand.

(MC)

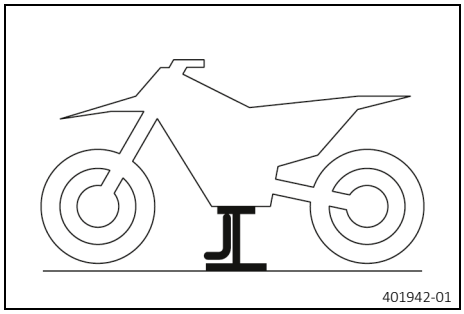


– Remove the plug-in stand and lift up the motorcycle by the frame underneath the engine.

Lift stand (81329955100)

✓ Neither wheel is in contact with the ground.

(EX)

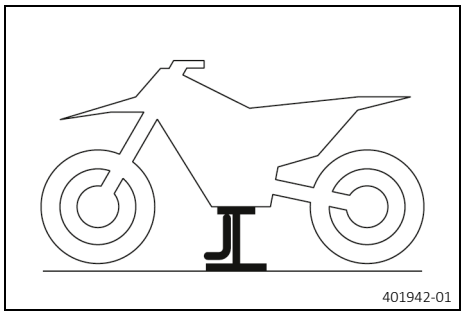

– Fold in the side stand and raise the motorcycle at the frame underneath the engine.

Lift stand (81329955100)

✓ Neither wheel is in contact with the ground.
– Secure the motorcycle against falling over.

11.2 Removing the motorcycle from the lift stand

NOTE


Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

– Park the vehicle on a firm and level surface.
– Make sure that nobody sits on the vehicle when it is parked on a stand.

(MC)

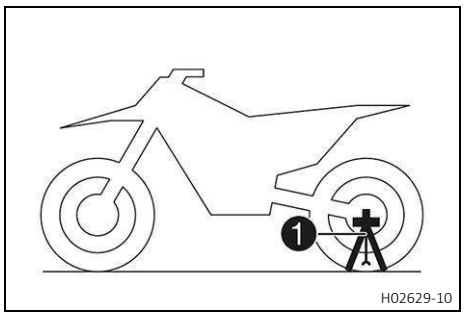


– Remove the motorcycle from the lift stand.
– Remove the lift stand.
– To park the motorcycle, insert plug-in stand ❶ into the left side of the wheel spindle.

Plug-in stand (A46029094000)

Note
The plug-in stand is included in the scope of supply.
The plug-in stand must be removed before riding.

(EX)

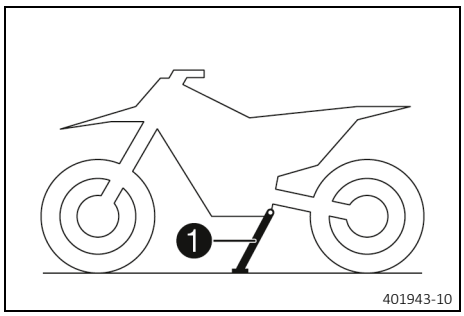

– Remove the motorcycle from the lift stand.
– Remove the lift stand.
– To park the motorcycle, press side stand ❶ to the ground with your foot and lean the motorcycle on it.


Note
When you are riding, the side stand must be folded up and secured with the rubber band.

11.3 Bleeding the fork legs

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)

Operating procedure
(MC)

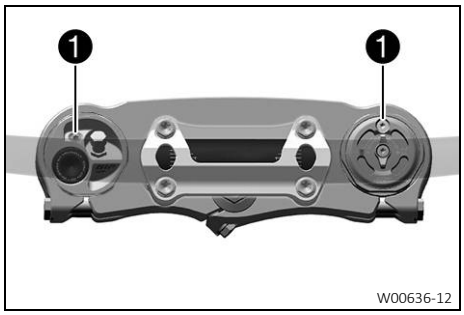

– Loosen bleeder screw ❶.
  ✓ Any excess pressure escapes from the inner fork.
– Tighten the bleeder screw.

(EX)

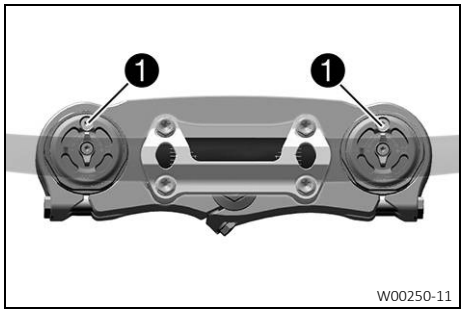

– Loosen bleeder screw ❶.
  ✓ Any excess pressure escapes from the inner fork.
– Tighten the bleeder screw.

Reworking


– Remove the motorcycle from the lift stand. (p. 51)

11.4 Cleaning the dust boots of the fork legs

Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)
– Remove the fork protector. (p. 53)

Cleaning process

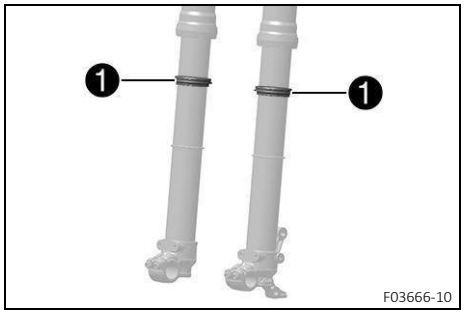

– Push dust boot 1 downward on both fork legs.

Note
The dust boots should remove dust and coarse dirt particles from the inner fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.

WARNING
Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.
– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

– Clean and oil the dust boots and the inner fork tube of both fork legs.


Universal oil spray (p. 149)

– Press the dust boots back into their installation position.
– Remove excess oil.

Reworking


– Install the fork protector. (p. 54)
– Remove the motorcycle from the lift stand. (p. 51)

11.5 Removing the fork protector

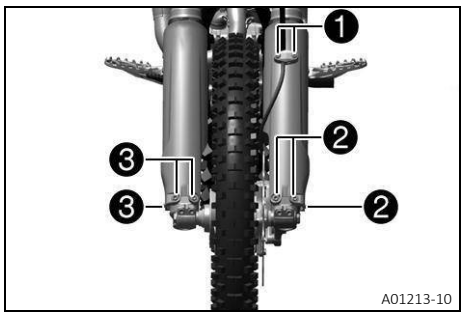

– Remove screw 1 and take off the clamp.
– Remove screws 2 and take off the left fork protector.
– Remove screws 3 and take off the right fork protector.

11.6 Installing the fork protector

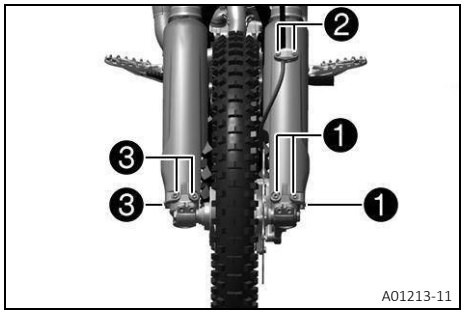


– Position the fork protector on the left fork leg. Mount and tighten screws ❶.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

– Position the brake line and the clamp. Mount and tighten screws ❷.
– Position the fork protector on the right fork leg. Mount and tighten screws ❸.


Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

11.7 Removing the frame protector

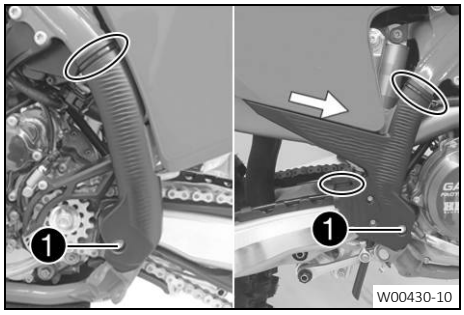

– Remove the cable ties.
– Remove screws ❶ and bushings.
– Take off the left frame protector.
– Push the right frame protector to the front and take off at the bottom.

11.8 Installing the frame protector

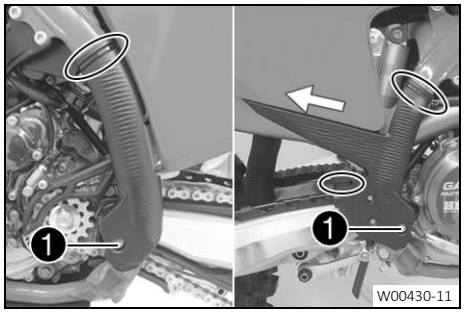

– Position the left frame protector.
– Insert the right frame protector from below and push it to the rear.
– Mount screw ❶ and bushing and tighten.

Screw, frame protector	
M5	3 Nm (2.2 ft·lb$_f$)

– Secure the frame protector with cable ties.


Turn the head of the cable tie so far back that it does not touch any other components.

11.9 Removing the fork legs

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)
– Remove the front wheel. (p. 99)

Removal process

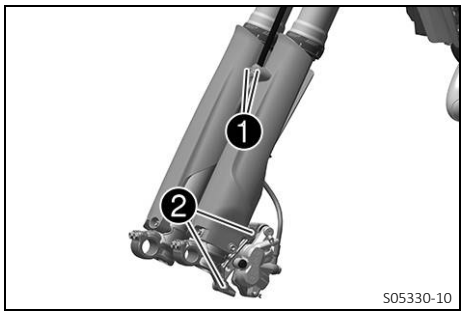

– Remove screw 1 and take off the clamp.
– Remove screws 2 and take off the brake caliper.
– Allow the brake caliper and the brake line to hang loosely to the side.


> Do not actuate the hand brake lever when the front wheel is removed.

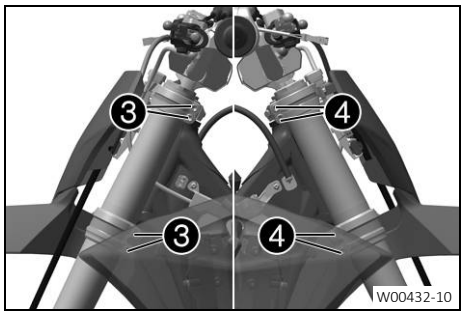

– Loosen screws 3. Remove the left fork leg.
– Loosen screws 4. Remove the right fork leg.

11.10 Installing the fork legs


Installation procedure
(MC)

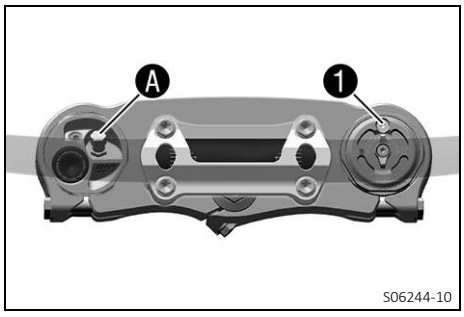

– Position the fork legs.
  ✓ Bleed screw 1 of the right fork leg is positioned to the front.
  ✓ Valve A of the left fork leg faces the front.

> **Note**
> Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.
> The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

(EX)

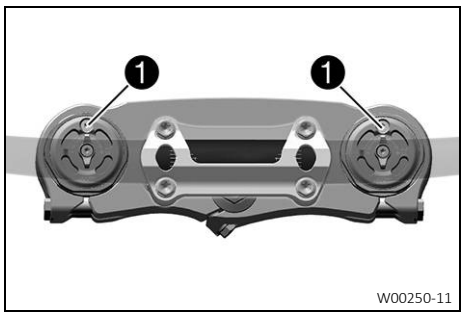


– Position the fork legs.

✓ Bleeder screws ❶ of both fork legs are positioned toward the front.


Note

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the upper edge of the upper triple clamp.

The air suspension is located in the left fork leg. The pressure and rebound damping is located in the right fork leg.

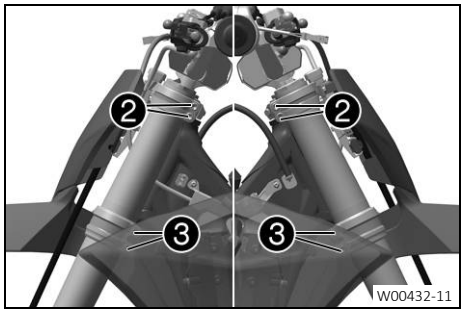

– Tighten screws ❷.
– Tighten screws ❸.

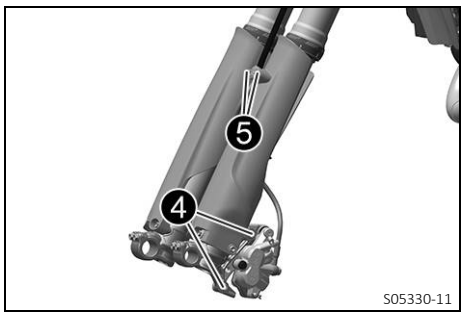

– Position the brake caliper. Mount and tighten screws ❹.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb$_f$) **Loctite® 243**

– Position the brake line and the clamp. Mount and tighten screws ❺.


Reworking

– Install the front wheel. (p. 100)

11.11 Removing the lower triple clamp

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)
– Remove the front wheel. (p. 99)
– Remove the fork legs. (p. 55)
– Remove the number plate. (p. 61)
– Remove the front top fender. (p. 61)
– Remove the handlebar pad.

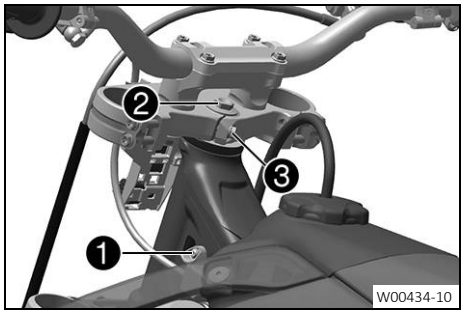

Removal process


– Remove screw ❶. Detach the wiring harness.
– Remove screw ❷.
– Remove screw ❸.
– Take off the upper triple clamp with the handlebar and place to one side.

Protect the components against damage by covering them.
Do not kink the cables or lines.

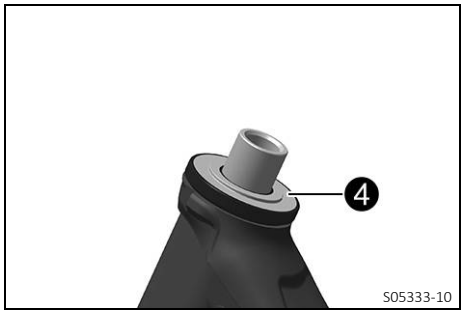

– Remove steering head seal ❹.
– Remove the steering stem from the lower triple clamp.
– Remove the upper steering head bearing.

11.12 Installing the lower triple clamp

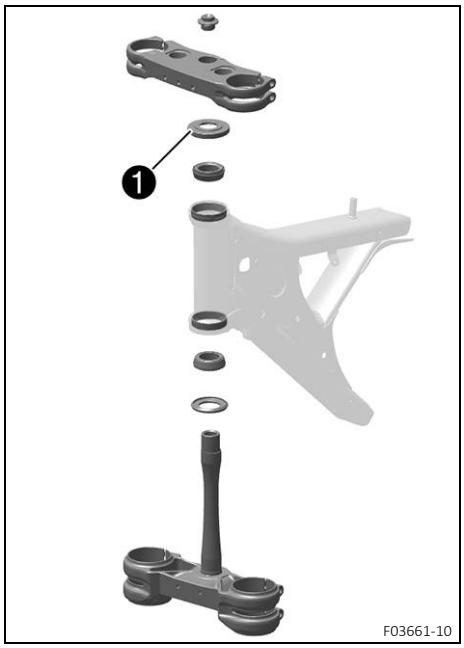


Installation procedure

– Clean the bearing and sealing elements, check for damage, and grease.


High viscosity grease (p. 150)

– Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
– Push on steering head seal ❶.

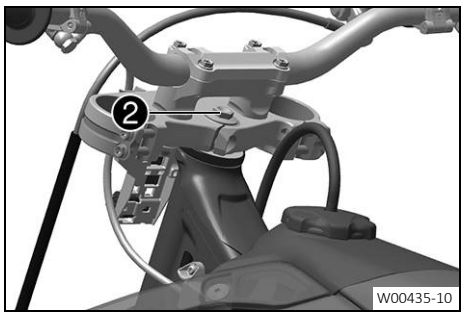


– Position the upper triple clamp and handlebar.
– Mount screw ❷, but do not tighten yet.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb$_f$)

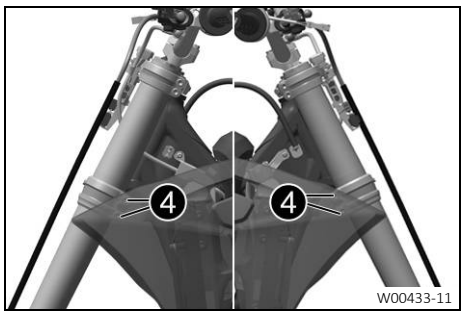


– Tighten screws ❹.

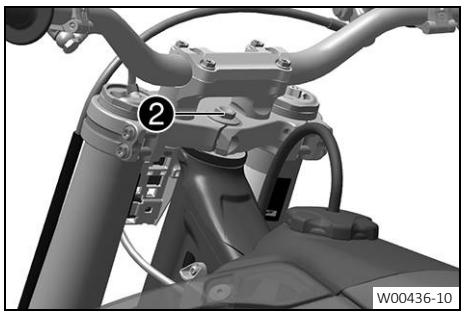


– Tighten screw ❷.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb$_f$)

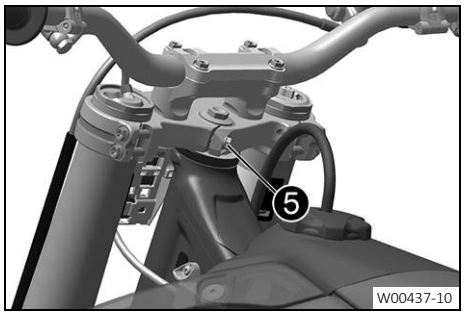


– Mount and tighten screw ❺.

Screw, upper steering stem	
M8	20 Nm (14.8 ft·lb$_f$) **Loctite® 243**

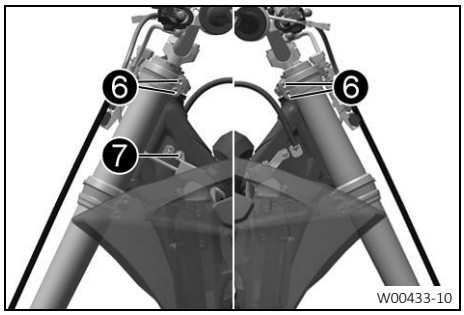

– Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
– Tighten screws ❻.
– Secure the wiring harness with the left cable bracket. Mount and tighten screw ❼.

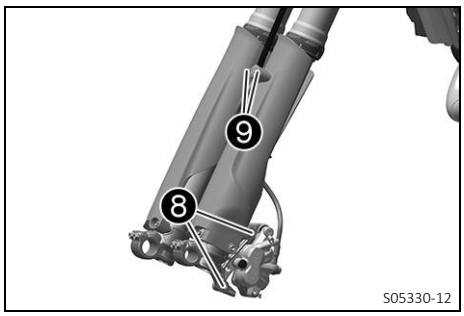

– Position the brake caliper. Mount and tighten screws ❽.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb$_f$) **Loctite® 243**

– Position the brake line and the clamp. Mount and tighten screws ❾.

Reworking

– Install the front top fender. (p. 62)
– Mount the handlebar pad.
– Mount the number plate. (p. 61)
– Install the front wheel. (p. 100)
– Check the wiring harness, cables, and brake and clutch lines for freedom of movement and correct routing.
– Check the steering head bearing play. (p. 59)
– Remove the motorcycle from the lift stand. (p. 51)


11.13 Checking the steering head bearing play

WARNING
Danger of accidents Incorrect steering head bearing play can impair the handling characteristic and damage components.
– Correct incorrect steering head bearing play immediately.

Note
If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged.

Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)

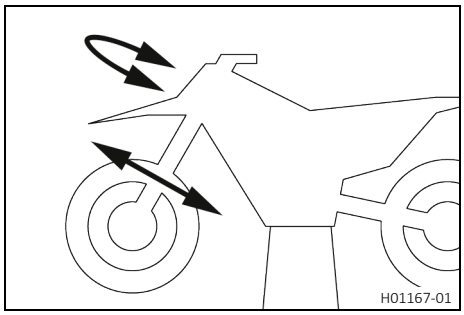

Control process

– Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

» If there is detectable play:
– Adjust the steering head bearing play. (p. 60)

– Move the handlebar back and forth over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

» If detent positions are detected:
– Adjust the steering head bearing play. (p. 60)
– Check the steering head bearing and adjust if necessary.


Reworking

– Remove the motorcycle from the lift stand. (p. 51)

11.14 Adjusting the steering head bearing play

Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)
– Remove the handlebar pad.

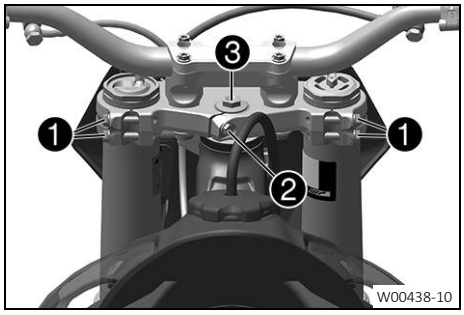

Adjustment procedure

– Loosen screws 1.
– Remove screw 2.
– Loosen and retighten screw 3.

Screw, top steering head	
M20×1.5	12 Nm (8.9 ft·lb$_f$)

– Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
– Mount and tighten screw 2.

Screw, upper steering stem	
M8	20 Nm (14.8 ft·lb$_f$) **Loctite® 243**


– Tighten screws 1.

Forged upper triple clamp screw	
M8	20 Nm (14.8 ft·lb$_f$)

Reworking

– Check the steering head bearing play. (p. 59)
– Mount the handlebar pad.
– Remove the motorcycle from the lift stand. (p. 51)

11.15 Lubricating the steering head bearing

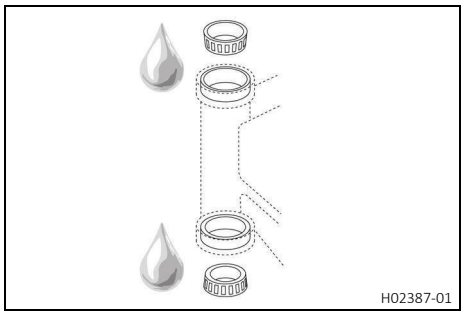

– Remove the lower triple clamp. (p. 56)
– Install the lower triple clamp. (p. 57)


Note
The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.

11.16 Removing the number plate



– Remove screw 1.
– Unhook the number plate from the brake line and remove it.

11.17 Mounting the number plate

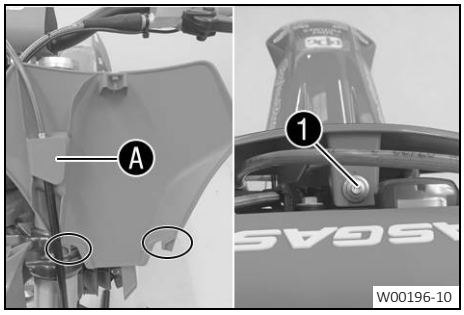


– Position the brake line in holders A on the number plate.
– Position the number plate. Mount and tighten screw 1.
  ✓ The holding lugs engage in the fender.

11.18 Removing the front top fender

Preparatory work


– Remove the number plate. (p. 61)

Removal process

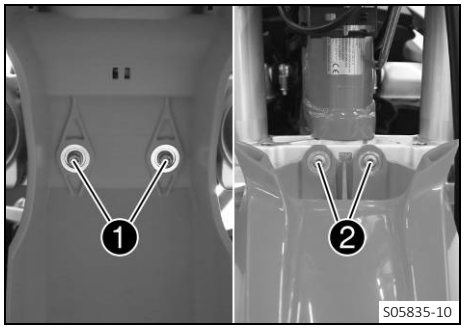

– Remove screws 1 and 2. Remove the front fender.

11.19 Installing the front top fender

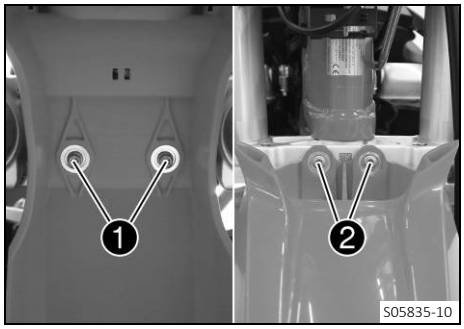

Installation procedure

– Position the front fender. Mount and tighten screws ❶ and ❷.

Fender screw	
M6	12 Nm (8.9 ft·lb$_f$)

Reworking


– Mount the number plate. (p. 61)

11.20 Removing the shock absorber

Preparatory work


– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)
– Remove the muffler. (p. 72)
– Raise the motorcycle with a lift stand. (p. 51)

Removal process

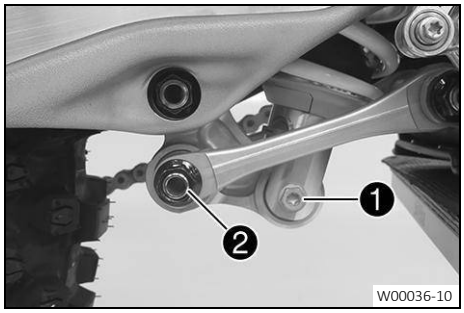


– Remove screw ❶.
– Remove screw connection ❷.

Raise the swingarm slightly to be able to remove the screws more easily.

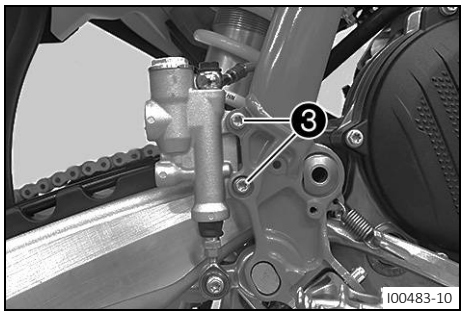


– Remove ❸ screws.
– Pull rear brake cylinder off of the push rod.

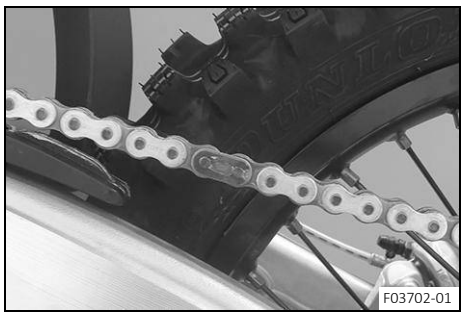


– Remove the connecting link on the chain.
– Take off the chain.

Protect the components against damage by covering them.

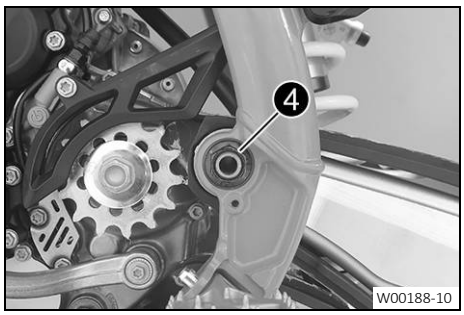


– Remove nut ❹ and the swingarm pivot.
– Push the swingarm back and secure it against falling over.

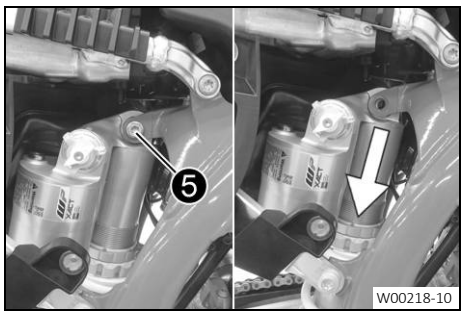

– Hold the shock absorber and remove screw ❺.
– Remove the shock absorber carefully at the bottom.


11.21 Installing the shock absorber

Installation procedure

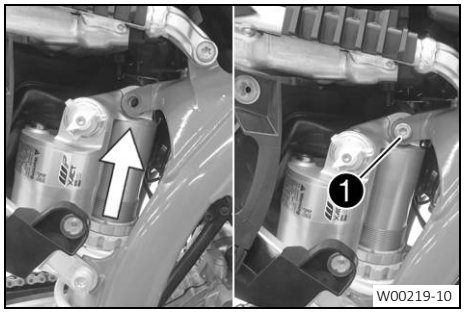

– Carefully position the shock absorber into the vehicle from the bottom.
– Mount and tighten screw ❶.

Top shock absorber screw	
M10	60 Nm (44.3 ft·lb$_f$) **Loctite® 2701**

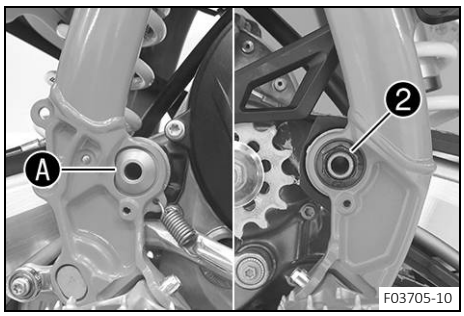


– Position the swingarm and fit the swingarm pivot.

Pay attention to flat area Ⓐ.


– Mount and tighten nut ❷.

Nut, swingarm pivot	
M16×1.5	100 Nm (73.8 ft·lb$_f$)

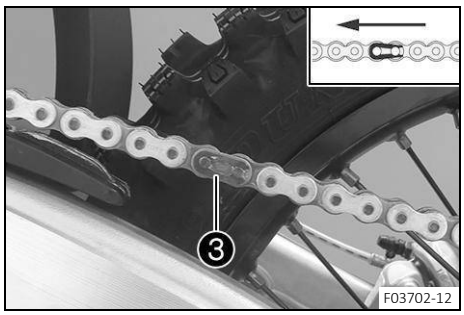

– Mount the chain.
– Connect the chain with connecting link ❸.

The closed side of the master link clip must face in the direction of travel.

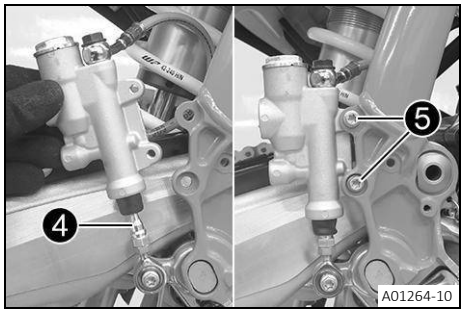


– Position the rear brake cylinder.

Ensure that the dust boot is properly seated.

✓ Push rod ❹ engages in the rear brake cylinder.

– Mount and tighten screws ❺.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

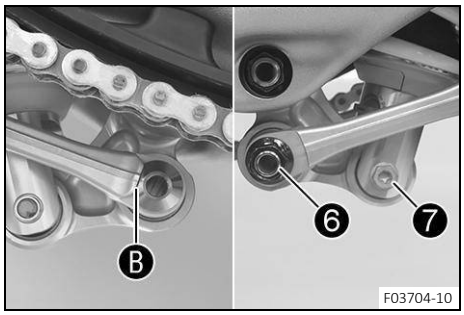

– Position the power valve control lever and linkage lever.
– Mount and tighten screw connection ❻.

Nut, linkage lever on angle lever	
M14×1.5	60 Nm (44.3 ft·lb$_f$)

Pay attention to flat area Ⓑ.

– Mount and tighten screw ❼.

Bottom shock absorber screw	
M10	60 Nm (44.3 ft·lb$_f$) **Loctite® 2701**

Tip
Raise the swingarm slightly to be able to mount the screw more easily.

Reworking

– Install the muffler. (p. 72)
– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)
– Check the free travel of the brake pedal. (p. 93)
– Remove the motorcycle from the lift stand. (p. 51)

11.22 Removing the seat

CAUTION


Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

– Allow the regulator rectifier to cool down before performing any work.


Preparatory work

– Remove air filter box cover. (p. 67)

Removal process

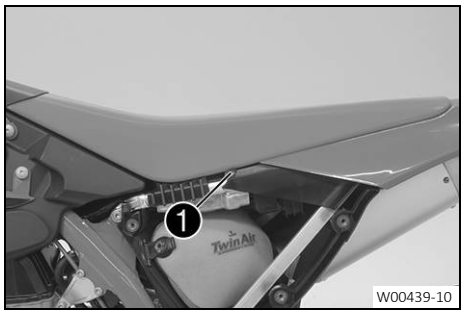


– Remove screw 1.

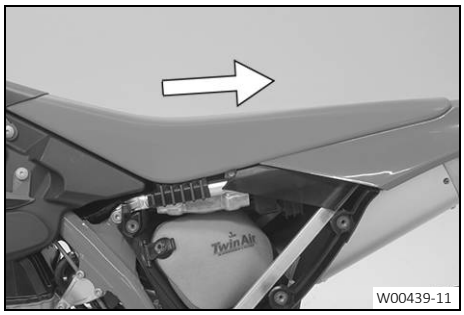


– Raise seat, pull it toward the fuel tank and take it off.

11.23 Mounting the seat

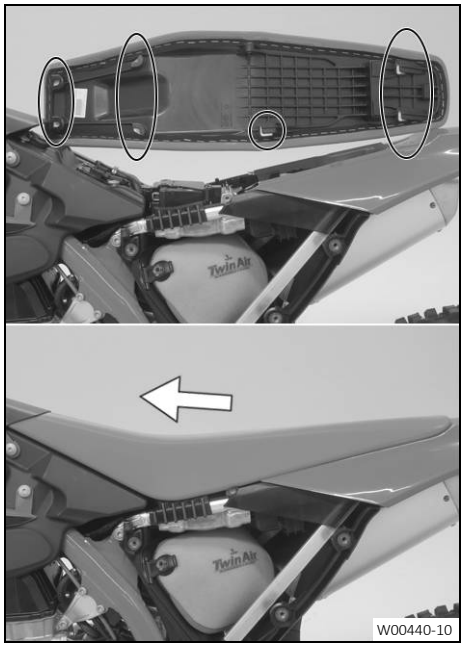

Installation procedure

– Attach the seat to the collar bushings at the front and simultaneously push it back.
  ✓ The holding lugs engage in the recesses at the back.
– Make sure the seat is latched in place correctly.

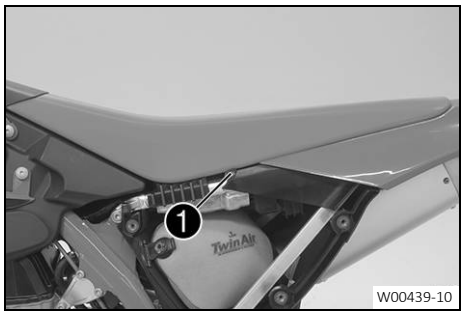

– Mount and tighten screw 1.

Screw, seat installation	
M6	8 Nm (5.9 ft·lb$_f$)


Reworking

– Install the air filter box cover. (p. 68)

11.24 Removing the right side panel

Preparatory work


– Remove the frame protector. (p. 54)

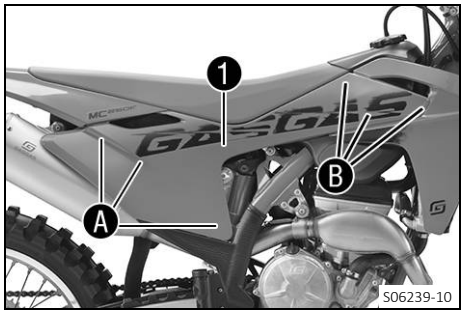

Removal process

– Detach right side panel ❶ in area Ⓐ and slide to the rear in area Ⓑ.
– Take the right side panel off.

11.25 Installing the right side panel

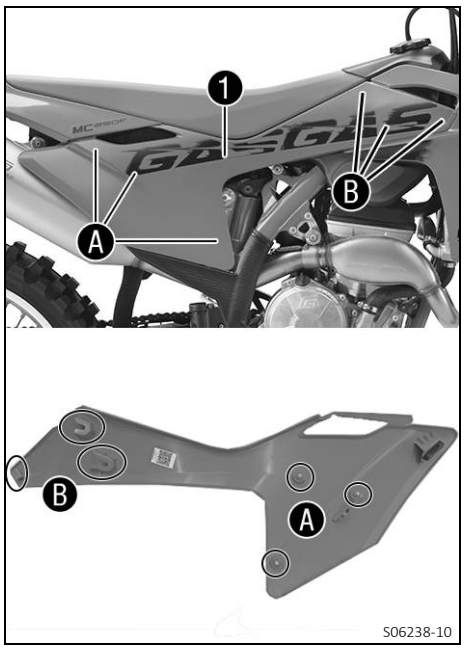

Installation procedure

– Position right side panel ❶.
– Position side panel in area Ⓑ and slide it forward.
– Press the side panel in area Ⓐ into the rubber bushing.

> Ensure that the side panel is correctly hooked in to areas Ⓐ and Ⓑ.

Reworking


– Install the frame protector. (p. 54)

11.26 Removing air filter box cover

Condition: Air filter box cover secured




– Remove screw ❶.

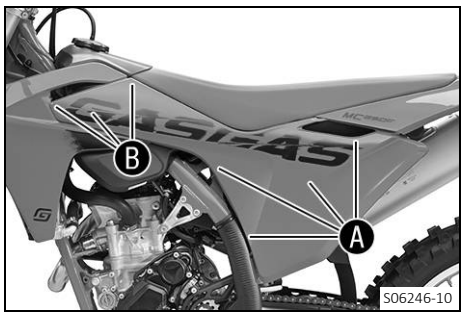

– Detach the air filter box cover in area A and slide it in area B to the rear.
– Take off the air filter box cover.


Condition: Air filter box cover not secured

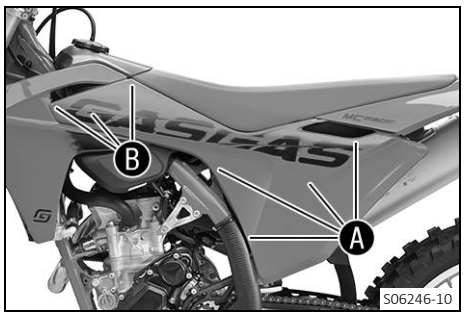

– Detach the air filter box cover in area A and slide it in area B to the rear.
– Take off the air filter box cover.

11.27 Installing air filter box cover

Condition: Air filter box cover secured

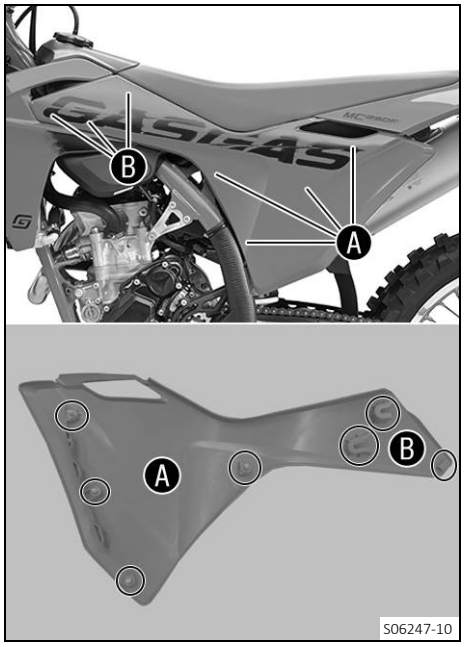


– Position the air filter box cover in area B and slide it forward.
– Press the air filter box cover in area A into the rubber bushings.



– Mount and tighten screw 1.

Screw, air filter box cover	
EJOT PT® – K60×20 – Z	5 Nm (3.7 ft·lb$_f$)

Condition: Air filter box cover not secured

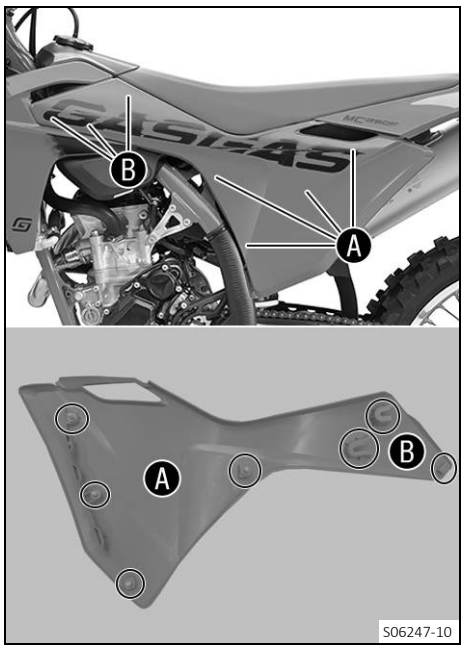


– Position the air filter box cover in area B and slide it forward.
– Press the air filter box cover in area A into the rubber bushings.

11.28 Preparing the air filter box cover for securing

Preparatory work

– Remove air filter box cover. (p. 67)

Installation procedure

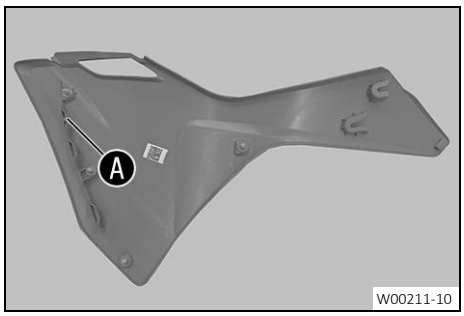

– Drill a hole at marking A.

Diameter	6 mm (0.24 in)

Reworking

– Install the air filter box cover. (p. 68)

11.29 Removing the air filter

NOTE

Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

NOTE

Engine failure Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.

– Only operate the vehicle if an air filter is correctly fitted.

Preparatory work

– Remove air filter box cover. (p. 67)

Removal process



– Detach tab 1.
– Remove air filter with air filter support.
– Remove the air filter with the air filter support.

11.30 Cleaning the air filter and air filter box

NOTE


Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Preparatory work

– Remove air filter box cover. (p. 67)
– Remove the air filter. (p. 70)

Cleaning process

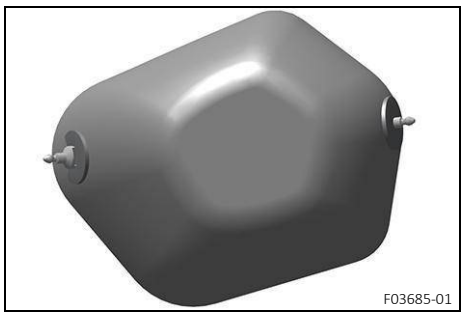

– Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Do not clean the air filter with fuel or petroleum as these substances will damage the foam rubber.
Only press the air filter to dry it, do not wring it out.

Air filter cleaning agent (p. 152)

– Oil the dry air filter with a high-grade air filter oil.


Oil for foam air filter (p. 150)

– Clean the air filter box.
– Clean the intake flange and check it for damage and that it is firmly seated.

Reworking

– Install the air filter. (p. 71)
– Install the air filter box cover. (p. 68)

11.31 Installing the air filter

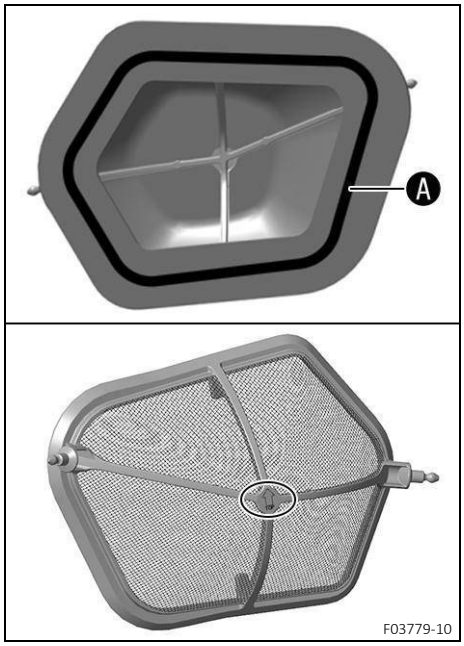


Installation procedure

– Mount the clean air filter on the air filter support.

The marking on the air filter support must face upwards.

– Grease the air filter in area A.

Long-life grease (p. 149)

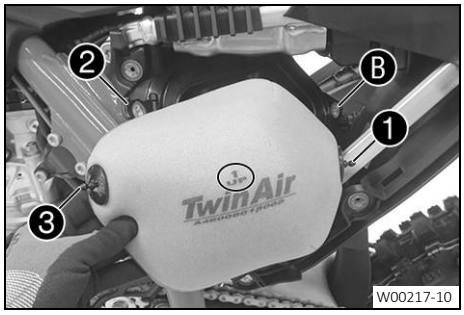

– Insert air filter and position retaining pin 1 in bushing B.

The marking on the air filter must face upwards.

✓ The air filter is correctly positioned.
– Attach tab 2.
✓ Retaining pin 3 is secured by tab 2.

Note
If the air filter is not mounted correctly, dust and dirt may enter the engine and result in damage.


Reworking

– Install the air filter box cover. (p. 68)

11.32 Removing the muffler

WARNING
Danger of burns The exhaust system gets hot when the vehicle is driven.
– Allow the exhaust system to cool down before performing any work on the vehicle.

Preparatory work
– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)

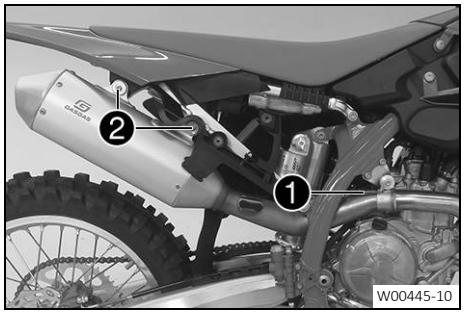


Removal process
– Detach spring ❶.

Spring hook (50305017000C1)

– Remove screws ❷ with the washers and take off the main silencer.

11.33 Installing muffler

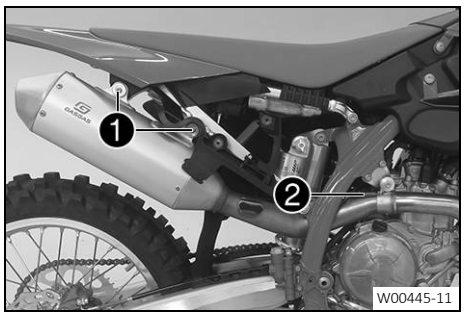

Installation procedure
– Position the main silencer.
– Mount screws ❶ with washers, but do not tighten yet.
– Attach spring ❷.

Spring hook (50305017000C1)

– Tighten screws ❶.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

Reworking
– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)


11.34 Changing the glass fiber filling of the muffler

WARNING
Danger of burns The exhaust system gets hot when the vehicle is driven.
– Allow the exhaust system to cool down before performing any work on the vehicle.

Note
Over time, the fibers of the glass fiber yarn filling escape and the damper "burns" out.
Not only does this make the noise level higher, but the performance characteristics also change.

Preparatory work

- Remove the frame protector. (p. 54)
- Remove the right side panel. (p. 66)
- Remove the muffler. (p. 72)

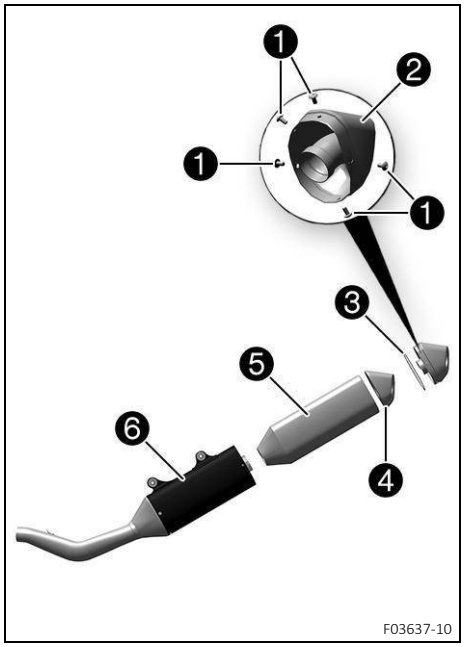

Replacement process

- Remove the screws ❶ on the main silencer.
- Take off silencer cap ❷ and O-ring ❸.
- Pull glass fiber filling ❹ out of the silencer cap.
- Pull glass fiber filling ❺ out of the inner tube.
- Clean the parts that need to be reinstalled and check for damage.
- Pull glass fiber filling ❺ out of the inner tube.
- Position new glass fiber filling ❹ in the silencer cap.
- Insert O-ring and silencer cap into outer tube ❻.
- Mount and tighten screws ❶.

Screws on muffler	
M5	7 Nm (5.2 ft·lb$_f$)

Reworking

- Install the muffler. (p. 72)
- Install the right side panel. (p. 67)
- Install the frame protector. (p. 54)

11.35 Removing the fuel tank

DANGER
Fire hazard Fuel is highly flammable.
The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.

WARNING


Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Preparatory work

- Remove air filter box cover. (p. 67)
- Remove the seat. (p. 65)
- Remove the frame protector. (p. 54)
- Remove the right side panel. (p. 66)


Removal process

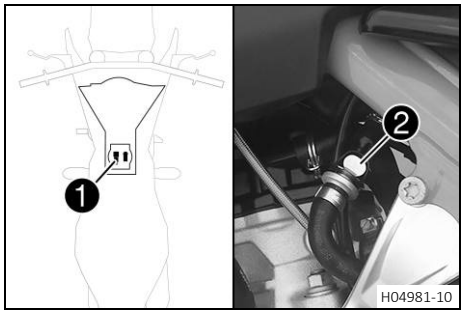

- Unplug socket connector ❶ of the fuel pump.
- Clean quick-lock coupling ❷ thoroughly with compressed air.

Under no circumstances should dirt enter into the fuel line.

Note
Dirt in the fuel line clogs the injector!

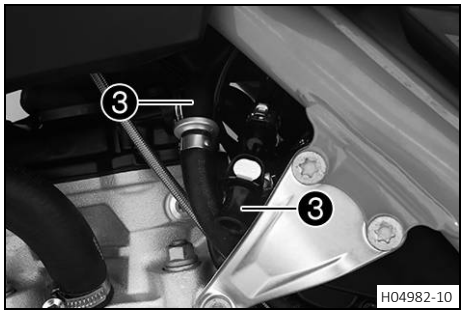


- Disconnect the quick-lock coupling.

Note
Remaining fuel may flow out of the fuel hose.


- Mount wash cap set ❸.

Wash cap set (81212016100)


- Pull the fuel tank vent hose off the fuel tank cap.

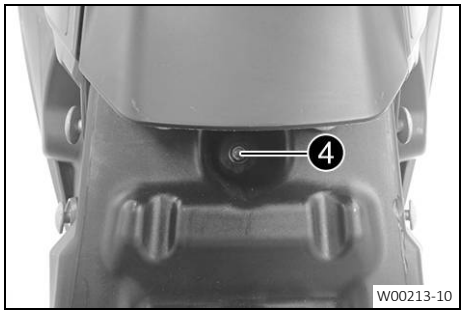

- Remove screw ❹ with the rubber bushing.

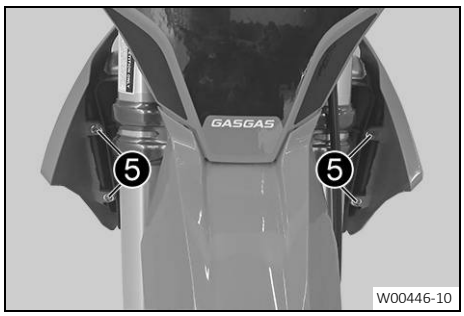

– Remove screws ❺ with collar bushings.

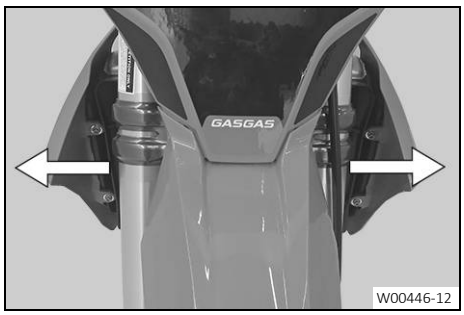

– Pull both spoilers laterally off the radiator and lift off the fuel tank.


11.36 Installing the fuel tank

DANGER
Fire hazard Fuel is highly flammable.
The fuel in the fuel tank expands when warm and can escape if overfilled.
– Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
– Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
– Switch off the engine for refueling.
– Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
– If any fuel is spilled, wipe it up immediately.
– Do not overfill the fuel tank.

WARNING
Danger of poisoning Fuel is harmful to health.
– Do not allow fuel to come into contact with skin, eyes, or clothing.
– Consult a doctor immediately if fuel has been ingested.
– Do not inhale fuel vapors.
– Rinse the affected area immediately with plenty of water in the event of contact with skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
– If fuel spills on to your clothing, change the clothing.
– Store fuel properly in a suitable container and keep out of the reach of children.


Installation procedure

– Check the throttle cable routing. (p. 82)

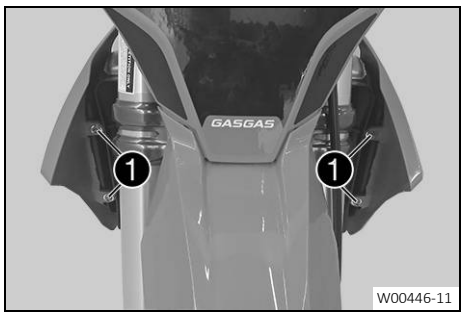


– Position the fuel tank and fit both spoilers to the side of the radiator.
– Make sure that no wires or cables are trapped or damaged.
– Attach the fuel tank vent hose to the fuel tank cap.
– Mount and tighten screws ❶ with the collar bushings.

Screw, fuel tank spoiler on radiator	
M6	6 Nm (4.4 ft·lb$_f$)

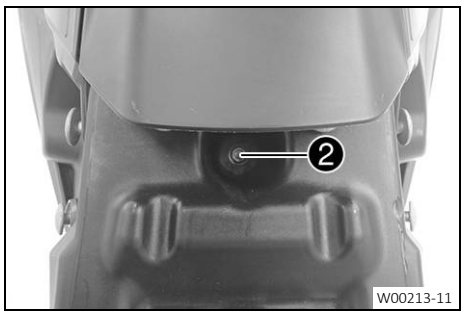

– Mount and tighten screw ❷ with the rubber bushing.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

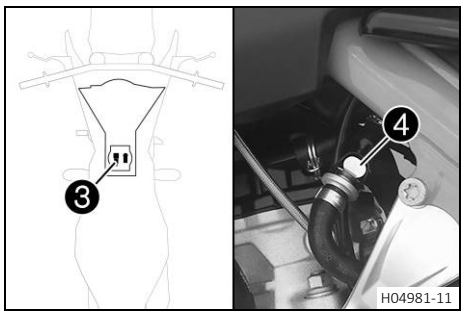

– Plug in fuel pump socket connector ❸.
– Remove the wash cap set and thoroughly clean the quick-lock coupling using compressed air.

Under no circumstances should dirt enter into the fuel line.

Note
Dirt in the fuel line clogs the injector!

– Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

Silicone spray (p. 150)


– Join quick-lock coupling ❹ of the fuel line.

Route the wire and fuel line at a safe distance from the exhaust system.

Reworking

– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)
– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

11.37 Checking the chain for dirt

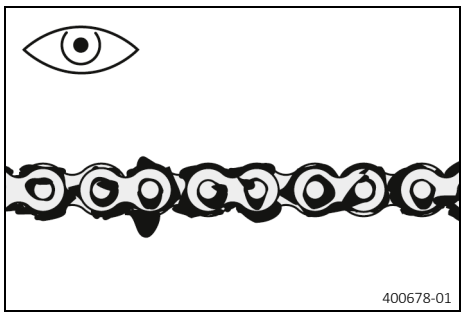

– Check the chain for coarse dirt accumulation.
  » If the chain is very dirty:
    – Clean the chain. (p. 77)

11.38 Cleaning the chain

WARNING
Danger of accidents Lubricants on the tires reduces the road grip.
– Remove lubricants from the tires using a suitable cleaning agent.

WARNING
Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.
– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

NOTE
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note
The service life of the chain depends largely on its maintenance.


Preparatory work
– Raise the motorcycle with a lift stand. (p. 51)

Cleaning process
– Rinse off the loose dirt with a gentle jet of water.
– Remove old grease residues with a chain cleaner.

Chain cleaner (p. 152)

– After drying, apply chain spray.

Off-road chain spray (p. 149)

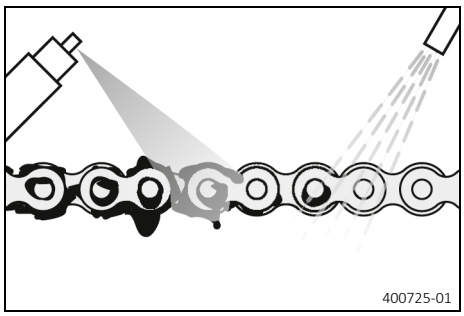

Reworking
– Remove the motorcycle from the lift stand. (p. 51)

11.39 Checking the chain tension

WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain is tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.


If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

– Check the chain tension regularly.
– Set the chain tension in accordance with the specification.

Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)

Control process

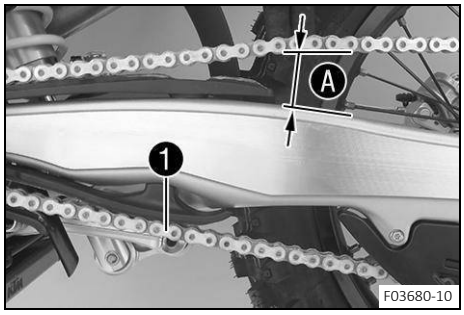

– Pull the chain at the end of the chain slider upward to measure chain tension A.

Chain tension	58 mm … 61 mm (2.28 in … 2.40 in)
Lower chain section 1 must be taut.	
Repeat this measurement at different chain positions.	

Note

Chains do not always wear evenly.

» If the chain tension does not meet the specification:
– Adjust the chain tension. (p. 78)

Reworking

– Remove the motorcycle from the lift stand. (p. 51)

11.40 Adjusting the chain tension

WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.


If the chain is tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

– Check the chain tension regularly.
– Set the chain tension in accordance with the specification.

Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)
– Check the chain tension. (p. 78)

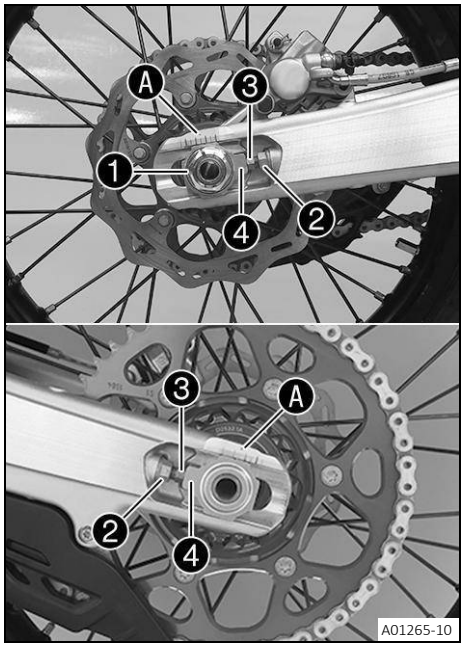

Adjustment procedure

– Loosen nut ❶.
– Loosen nuts ❷.
– Adjust the chain tension by turning adjusting screws ❸ on the left and right.

Chain tension	58 mm … 61 mm (2.28 in … 2.40 in)
Turn adjusting screws ❸ on the left and right so that the markings on the left and right chain tension adjusters are in the same position relative to reference marks Ⓐ. The rear wheel is then correctly aligned.	

– Tighten nuts ❷.
– Make sure that chain tension adjusters ❹ are fitted correctly on adjusting screws ❸.
– Tighten nut ❶.

Nut, wheel spindle, rear	
M22×1.5	80 Nm (59.0 ft·lb$_f$)

Note

The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.

Chain tension adjusters ❹ can be turned by 180°.


Reworking

– Remove the motorcycle from the lift stand. (p. 51)

11.41 Checking the chain, rear sprocket, front sprocket, and chain guide

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)

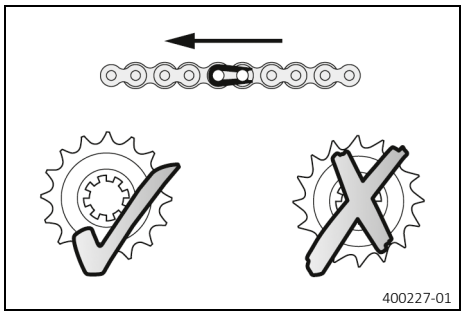

Control process

– Shift the transmission into the neutral position.
– Check the chain, rear sprocket, and front sprocket for wear.
  » If the chain, rear sprocket, or front sprocket is worn:
    – Change the drivetrain kit.

The front sprocket, rear sprocket, and chain should always be replaced together.

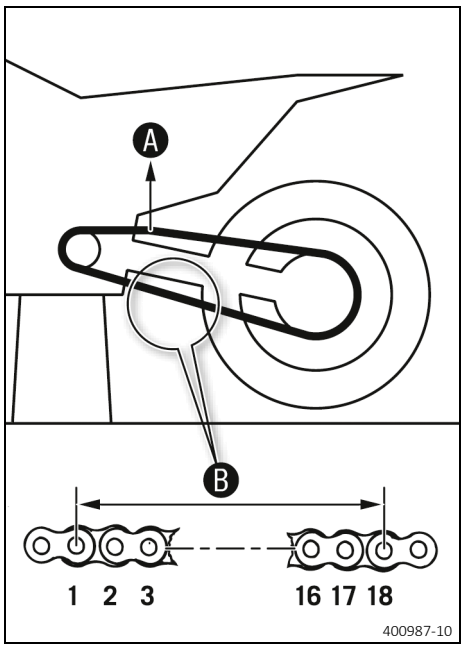

– Pull on the top section of the chain with the specified weight Ⓐ.

Weight, chain wear measurement	10 kg … 15 kg (22.0 lb … 33.1 lb)

– Measure distance Ⓑ of chain rollers in the lower chain section.


Maximum distance Ⓑ of chain rollers at the longest chain section	272 mm (10.71 in)
Repeat this measurement at different chain positions.	

Note
Chains do not always wear evenly.

» If distance Ⓑ is greater than the specified measurement:
– Change the drivetrain kit.


When you replace the chain, you should also replace the rear sprocket and front sprocket.

Note
New chains wear out faster on old, worn front or rear sprockets.

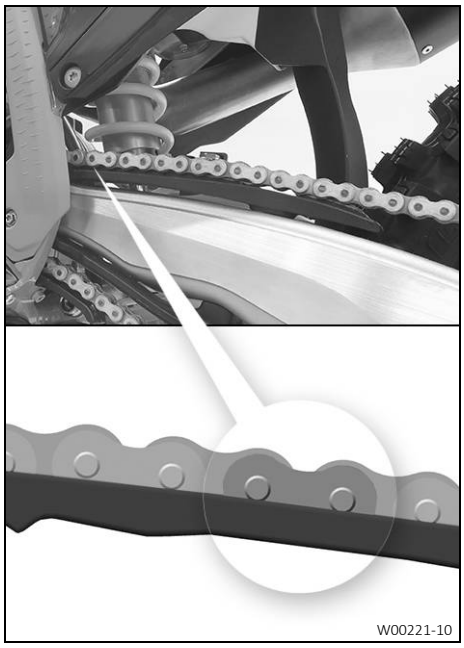


– Check the chain slider at the top for wear.
» If the lower edge of the chain pins is in line with, or below, the chain slider:
– Change the chain slider.
– Check that the chain slider is firmly seated.
» If the chain slider is loose:
– Tighten the screws of the chain slider.

Screw, chain sliding guard on link fork	
M6	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**

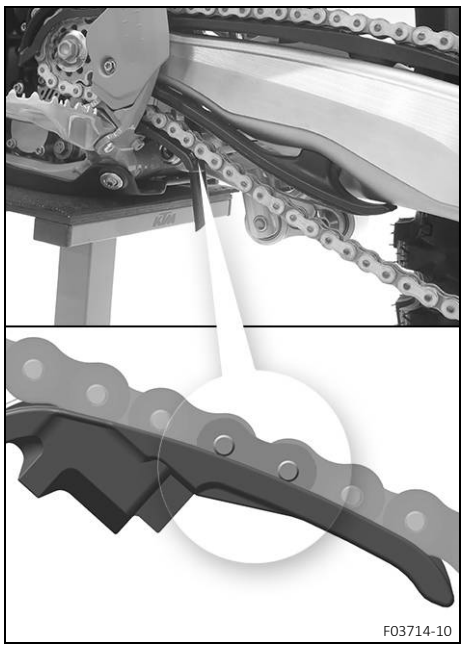

– Check the chain slider for wear.
  » If the lower edge of the chain pins is in line with or below the chain slider:
    – Change the chain slider.
– Check that the chain slider is firmly seated.
  » If the chain slider is loose:
    – Tighten the screws of the chain slider.

Screw, chain slider	
M8	15 Nm (11.1 ft·lb$_f$)

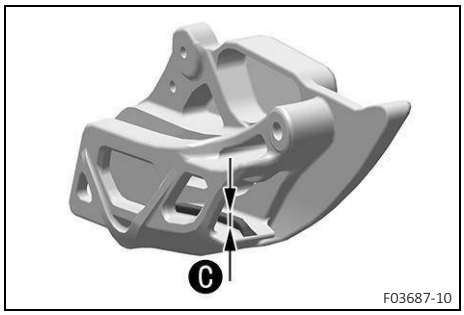

– Check the chain guide with a slide gage for dimension C.

Minimum thickness C of the chain guide	6 mm (0.24 in)

  » If the specifications have not been met:
    – Change the chain guide.




– Check that the chain guide is firmly seated.
  » If the chain guide is loose:
    – Tighten the screws on the chain guide.

Screw, chain guide on swingarm, front	
M6×45	10 Nm (7.4 ft·lb$_f$)
Screw, chain guide on swingarm, rear	
M6×16	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**

Reworking

– Remove the motorcycle from the lift stand. (p. 51)

11.42 Checking the frame

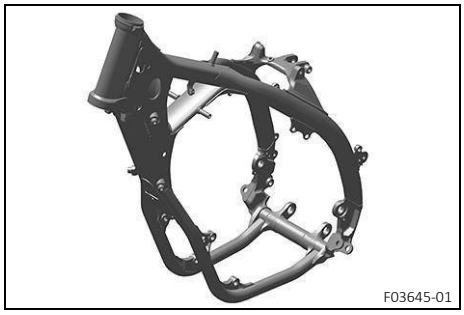
F03645-01

– Check the frame for damage, cracks, and deformation.
  » If the frame shows signs of damage, cracks, or deformation:
    – Change the frame.

Repairs on the frame are not permitted.

11.43 Checking the swingarm


F03646-01

– Check the swingarm for damage, cracks, and deformation.
  » If the swingarm shows signs of damage, cracks, or deformation:
    – Change the swingarm.

Repairs on the swingarm are not permitted.

11.44 Checking the throttle cable routing

WARNING
Danger of accidents The throttle cable can become kinked, jammed, or blocked if it has been routed incorrectly. If the throttle cable is kinked, jammed or blocked, the speed can no longer be controlled.
– Make sure that the throttle cable routing and the play in the throttle cable complies with the specification.

Preparatory work
– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)
– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)
– Remove the fuel tank. (p. 73)



Control process

– Check the throttle cable routing.


Both throttle cables must be routed to the throttle valve body side by side on the back of the handlebars and above the fuel tank roller. Both throttle cables must be secured behind the rubber strap of the fuel tank support.

» If the throttle cable routing is not as specified:
  – Correct the throttle cable routing.

Reworking

– Install the fuel tank. (p. 75)
– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)
– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

11.45 Checking the rubber grips

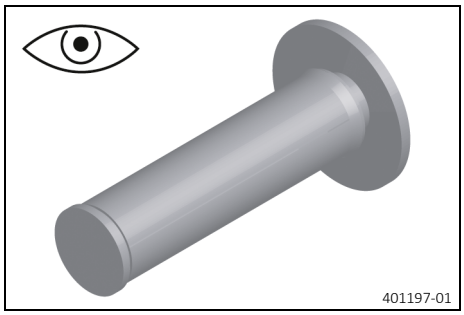


– Check the hand grips on the handlebar for damage, wear, and that they are firmly seated.

Note

The hand grips are vulcanized onto a sleeve on the left and onto the grip tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar.

The hand grip can only be replaced with the sleeve or the gas pipe.

» If a hand grip is damaged or worn:
  – Replace the hand grip.

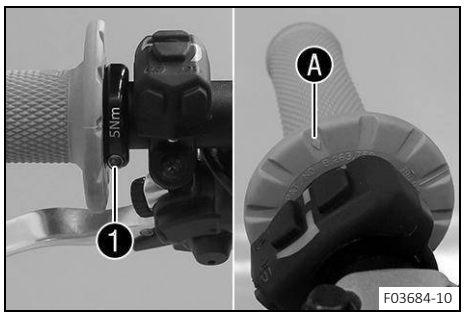


– Check that screw 1 is firmly seated.

Screw, fixed grip	
M4	5 Nm (3.7 ft·lb$_f$) **Loctite® 243**

Diamond A must be positioned visibly as shown in the figure.

11.46 Adjusting the basic position of the clutch lever

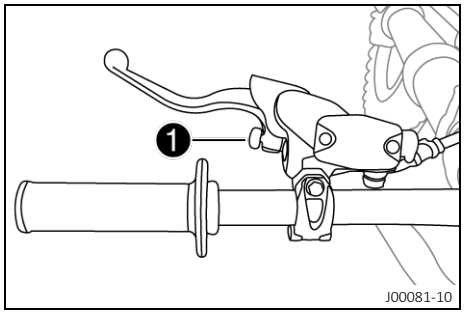

– Adjust the basic position of the clutch lever to your hand size by turning adjusting screw 1.

Only turn the adjusting screw by hand, and do not use force.

Do not make any adjustments while riding.

Note

When the adjusting screw is turned counterclockwise, the clutch lever moves closer to the handlebar.

When the adjusting screw is turned clockwise, the clutch lever moves away from the handlebar.

The range of adjustment is limited.

11.47 Checking/correcting the fluid level of hydraulic clutch

WARNING


Health hazard Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.

Note

The fluid level rises with increasing wear of the friction plates.

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

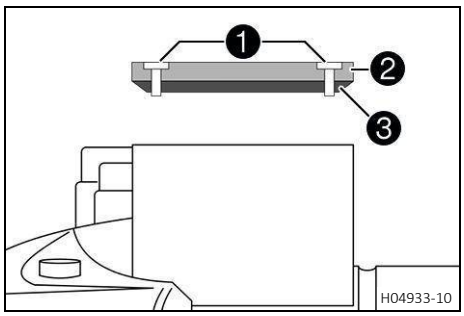

– Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
– Remove ❶ screws.
– Take off cover ❷ with diaphragm ❸.
– Check the fluid level.

Fluid level below reservoir rim	4 mm (0.16 in)

» If the fluid level does not meet the specifications:
– Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (p. 150)

– Position the cover with diaphragm. Mount and tighten the screws.


Immediately clean up any brake fluid that has overflowed or spilled with water.

11.48 Changing the hydraulic clutch fluid


WARNING
Health hazard Brake fluid is a harmful substance.
– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
– Consult a doctor immediately if brake fluid has been ingested.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

NOTE
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note
The fluid level rises with increasing wear of the friction plates.
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

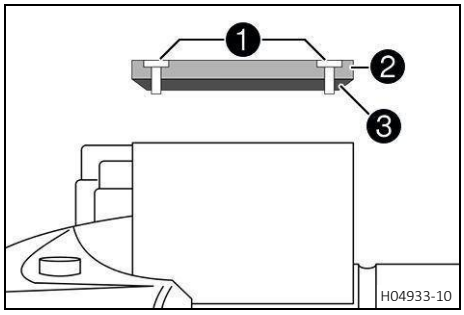

– Move the hydraulic clutch fluid reservoir mounted on the handlebar into a horizontal position.
– Remove ❶ screws.
– Take off cover ❷ with diaphragm ❸.

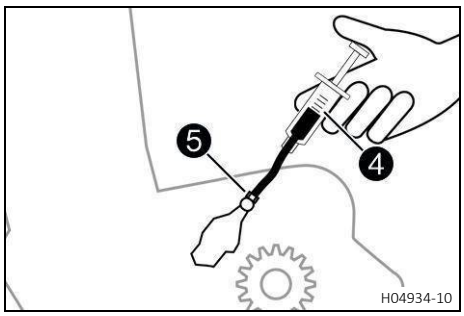


– Fill bleeding syringe ❹.

Syringe (50329050000)
Brake fluid DOT 4 / DOT 5.1 (p. 150)

– On the clutch slave cylinder, remove the protection cap and mount bleeding syringe ❹ with an appropriate hose piece on bleed screw ❺.
– Only loosen bleed screw ❺ on the clutch slave cylinder until filling is possible.

Note
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.
Only use clean brake fluid from a sealed container.

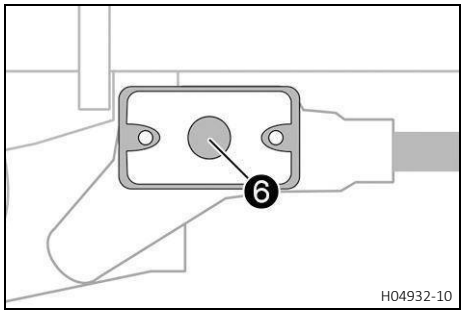

– Inject the liquid into the system until it escapes from bore ❻ of the master cylinder without bubbles.
– Occasionally extract the fluid from the master cylinder reservoir to prevent overflowing.
– Tighten the bleed screw and remove the bleeding syringe with the hose. Mount the protection cap.
– Correct the fluid level of the hydraulic clutch.


Fluid level below reservoir rim	4 mm (0.16 in)

– Position the cover with diaphragm. Mount and tighten the screws.
– Mount screws and screw in hand-tight.

Immediately clean up any brake fluid that has overflowed or spilled using water.

12.1 Checking the free travel on the hand brake lever

WARNING
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.
– Set the free travel on the brake lever as specified.

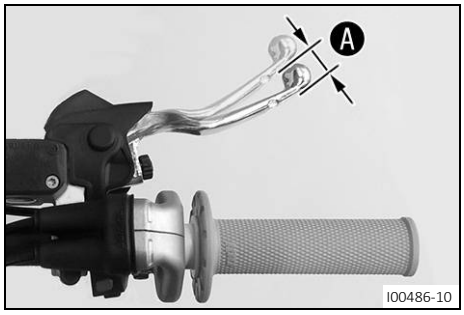


– Push the hand brake lever forward and check free travel Ⓐ.

Free travel of hand brake lever	≥ 3 mm (≥ 0.12 in)

» If the free travel does not meet the specifications:
– Adjust the basic position of the hand brake lever.
(p. 87)

12.2 Adjusting the basic position of the hand brake lever

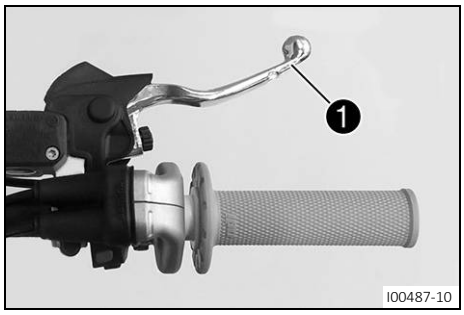


– Adjust the basic position of the hand brake lever to your hand size by turning adjusting screw ❶.

Note
Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.
Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.
The range of adjustment is limited.
Only turn the adjusting screw by hand, and do not use force.
Do not make any adjustments while riding.

12.3 Checking the brake discs

WARNING
Danger of accidents Worn-out brake discs reduce the braking action.
– Make sure that worn-out brake discs are replaced immediately.

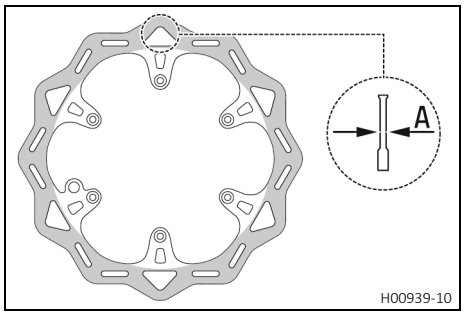

– Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement Ⓐ.

Brake disc wear limit	
front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)

Note
Wear reduces the thickness of the brake discs at the contact surface of the brake pads.

» If the brake disc thickness is less than the specification:
– Change the brake discs of the front brake.
– Change the brake discs on the rear brake.


– Check the front and rear brake discs for damage, cracks, and deformation.
» If the brake disc shows signs of damage, cracks, or deformation:
– Change the brake discs of the front brake.
– Change the brake discs on the rear brake.

12.4 Checking the brake fluid level for the front brake

WARNING
Danger of accidents An insufficient brake fluid level will cause the brake system to fail.
If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.
– Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

WARNING
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.
– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.

Preparatory work
– Check that the brake pads of the front brake are secured.
(p. 90)

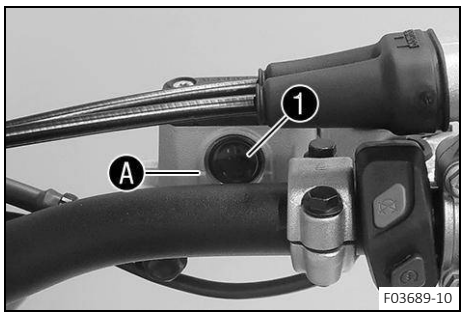Control process


– Move the brake reservoir mounted on the handlebar to a horizontal position.
– Check the brake fluid level in sight glass 1.
» If the brake fluid level has fallen below marking A:
– Add brake fluid for the front brake. (p. 89)

12.5 Adding brake fluid for the front brake

WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

– Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

WARNING

Health hazard Brake fluid is a harmful substance.

– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
– Consult a doctor immediately if brake fluid has been ingested.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.

NOTE

Environmental hazard Hazardous substances cause environmental damage.


– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

– Check that the brake pads of the front brake are secured.
(p. 90)

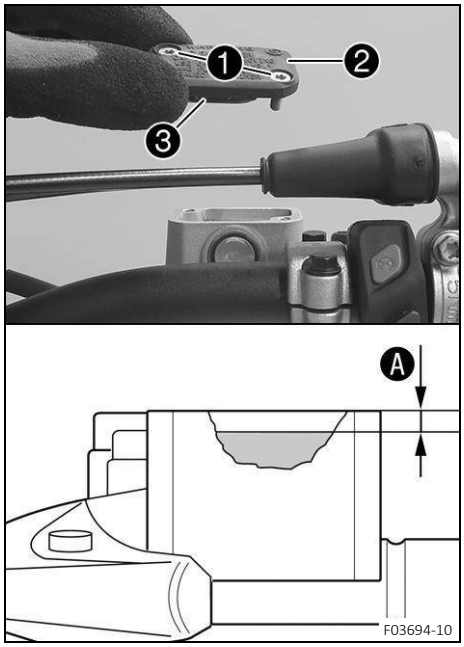

Filling procedure

– Move the brake reservoir mounted on the handlebar to a horizontal position.
– Remove ❶ screws.
– Take off cover ❷ with diaphragm ❸.
– Add brake fluid up to level Ⓐ.

Level Ⓐ (brake fluid level below reservoir rim)	5 mm (0.20 in)


Brake fluid DOT 4 / DOT 5.1 (p. 150)

– Position cover ❷ with diaphragm ❸. Mount and tighten screws ❶.

Note
Immediately clean up any brake fluid that has overflowed or spilled with water.

12.6 Checking that the brake pads of the front brake are secured

WARNING
Danger of accidents Worn brake pads reduce the brake action.
– Make sure that worn brake pads are replaced immediately.

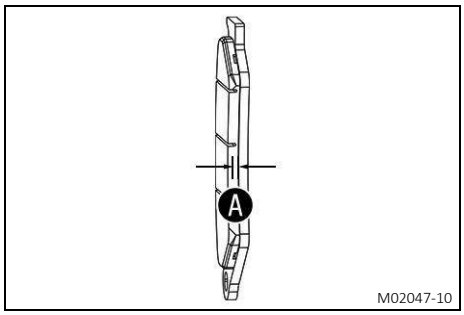

– Check all brake pads on both brake calipers for their lining thickness Ⓐ.

Minimum pad thickness Ⓐ	≥ 1 mm (≥ 0.04 in)

» If it is less than the minimum thickness:
– Change the front brake pads. (p. 90)
– Check the brake pads for damage and cracking.
» If there is damage or cracking:
– Change the front brake pads. (p. 90)
– Check that the brake pads are secured.
» If the brake pads are not secured correctly:
– Secure brake pads, replace with new parts if necessary.

12.7 Changing the brake pads of the front brake

WARNING
Danger of accidents Brake pads which have not been approved alter the braking action.
– Only use brake pads approved and recommended by the vehicle manufacturer.

WARNING
Danger of accidents Incorrect servicing will cause the brake system to fail.
– Ensure that service work and repairs are performed professionally.


WARNING
Health hazard Brake fluid is a harmful substance.
– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
– Consult a doctor immediately if brake fluid has been ingested.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

WARNING
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.
– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.


WARNING
Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.
– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

NOTE
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

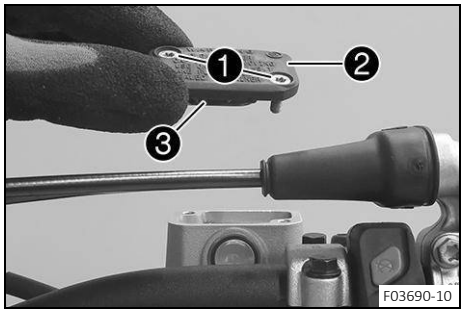


– Move the brake reservoir mounted on the handlebar to a horizontal position.
– Remove ❶ screws.
– Take off cover ❷ with diaphragm ❸.

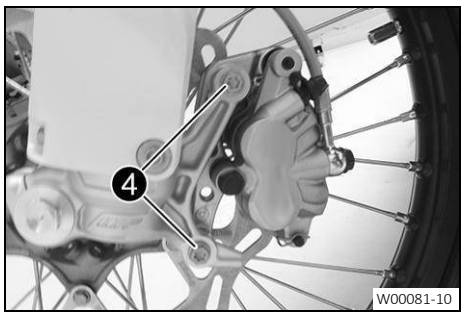


– Remove ❹ screws.
– Press the brake pads back by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper up and off the brake disc.
– Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake reservoir, extract some brake fluid if necessary.


Do not operate the hand brake lever if the brake caliper has been removed.

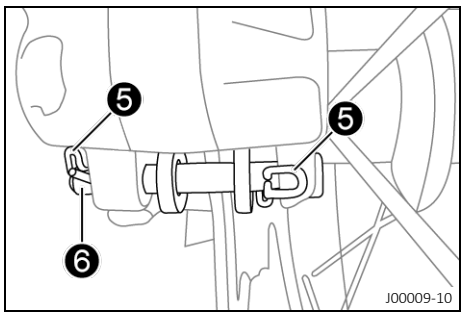

– Remove cotter pin ❺, pull out stud ❻, and remove the brake pads.
– Clean brake caliper and brake caliper support.

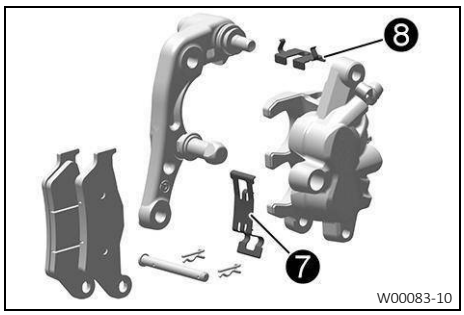

– Check that spring steel clip ❼ in the brake caliper and brake pad guide plate ❽ in the brake caliper support are properly seated.

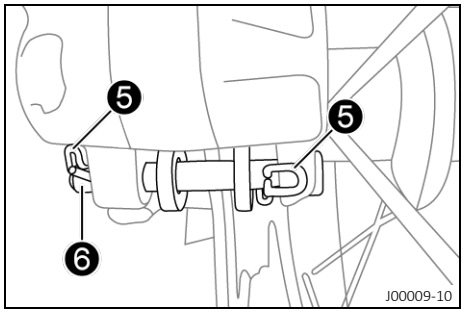

– Insert the new brake pads, mount stud ❻ and cotter pins ❺.


Mount the outer cotter pins from the front to the rear.
Mount the inner cotter pins from the rear to the front.

Note

Always replace brake pads in sets.

To make it easier to mount the stud, push the brake pads upward against the retaining spring.


Make sure the brake pads and retaining spring are properly seated.

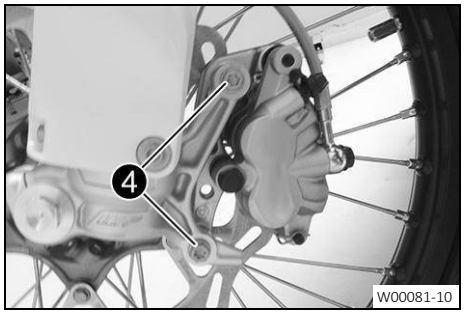

– Position the brake caliper.
– Mount and tighten screws ❹.

Screw, front brake caliper	
M8	25 Nm (18.4 ft·lb$_f$) **Loctite® 243**

– Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is reached.

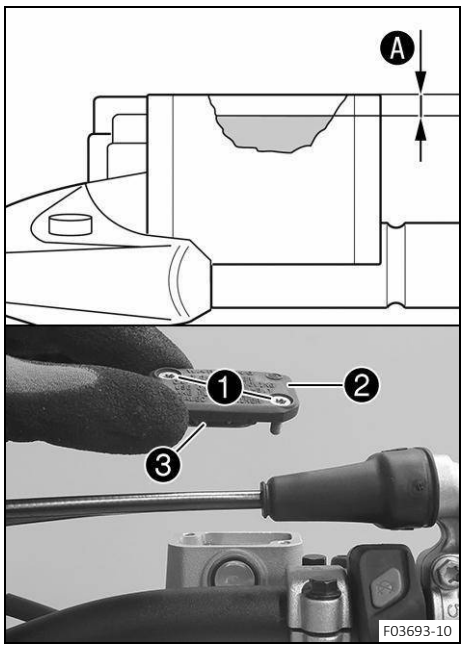

– Add brake fluid to level A.

Level A (brake fluid level below reservoir rim)	5 mm (0.20 in)


Brake fluid DOT 4 / DOT 5.1 (p. 150)

– Position cover 2 with diaphragm 3.
– Mount and tighten screws 1.

Immediately clean up any brake fluid that has overflowed or spilled with water.

12.8 Checking the free travel of the brake pedal

WARNING
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.
– Set the free travel on the brake lever as specified.

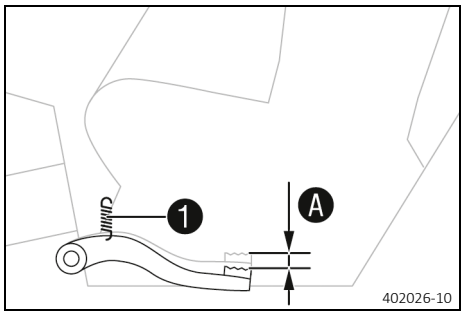

– Detach spring 1.
– Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston actuation and check free travel A.


Free travel of brake pedal	3 mm … 5 mm (0.12 in … 0.20 in)

» If the free travel does not meet the specifications:
– Adjust the basic position of the brake pedal. (p. 93)

– Attach spring 1.

12.9 Adjusting the basic position of the brake pedal

WARNING
Danger of accidents The brake system fails in the event of overheating.
If there is no free travel on the brake lever, pressure builds up in the brake system.
– Set the free travel on the brake lever as specified.

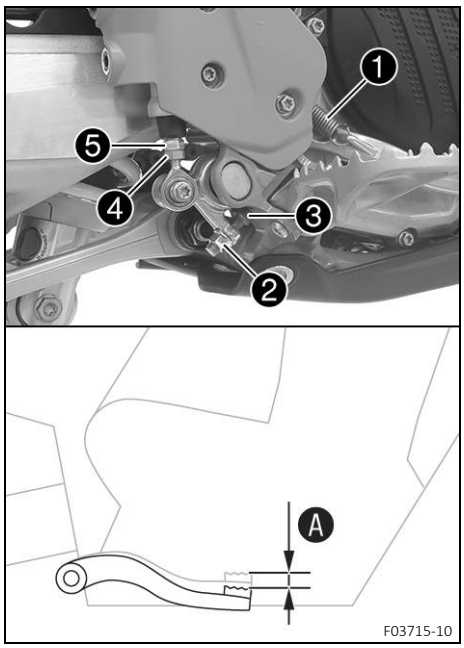

– Detach spring ❶.
– Loosen nut ❹ and unscrew it with push rod ❺ until you have maximum free travel.
– To adjust the basic position of the brake pedal to individual requirements, loosen nut ❷ and turn screw ❸ accordingly.

Note
The range of adjustment is limited.

– Turn push rod ❺ accordingly until you have free travel Ⓐ. If necessary, adjust the basic position of the brake pedal.

Free travel of brake pedal	3 mm … 5 mm (0.12 in … 0.20 in)

– Hold push rod ❺ and tighten nut ❹.

Remaining nuts on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

– Hold screw ❸ and tighten nut ❷.

Nut, brake pedal stop	
M8	20 Nm (14.8 ft·lb$_f$)


– Attach spring ❶.

12.10 Checking the brake fluid level for the rear brake

WARNING
Danger of accidents An insufficient brake fluid level will cause the brake system to fail.
If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.
– Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

WARNING
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.
– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.

Preparatory work
– Check that the brake pads of the rear brake are secured. (p. 96)

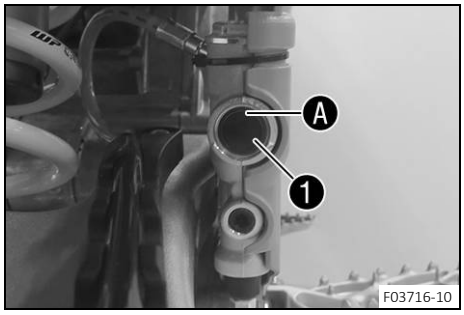

Control process

– Stand the vehicle upright.
– Check the brake fluid level in sight glass 1.
  » If the brake fluid level has fallen below marking A:
    – Add brake fluid for the rear brake. (p. 95)

12.11 Adding brake fluid for the rear brake

WARNING
Danger of accidents An insufficient brake fluid level will cause the brake system to fail.
If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.
– Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.

WARNING
Health hazard Brake fluid is a harmful substance.
– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
– Consult a doctor immediately if brake fluid has been ingested.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.


WARNING
Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.
– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.

NOTE
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note
Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

Preparatory work

– Check that the brake pads of the rear brake are secured. (p. 96)
– Remove the frame protector. (p. 54)

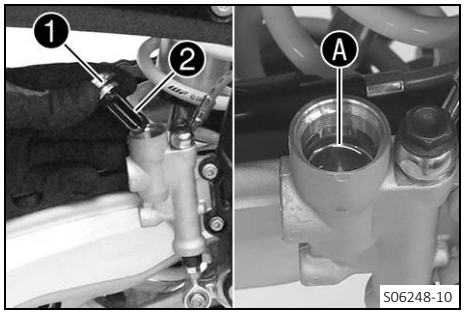

Filling procedure

– Stand the vehicle upright.
– Remove screw cap 1 with diaphragm 2 and the O-ring.
– Add brake fluid to mark A.

Brake fluid DOT 4 / DOT 5.1 (p. 150)

– Mount and tighten the screw cap with the membrane and O-ring.


Immediately clean up any brake fluid that has overflowed or spilled using water.

Reworking

– Install the frame protector. (p. 54)

12.12 Checking that the brake pads of the rear brake are secured

WARNING
Danger of accidents Worn brake pads reduce the brake action.
– Make sure that worn brake pads are replaced immediately.

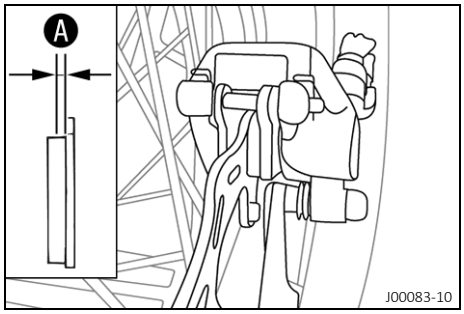

– Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A	≥ 1 mm (≥ 0.04 in)

» If it is less than the minimum thickness:
– Change the rear brake pads. (p. 96)
– Check the brake pads for damage and cracking.
» If there is damage or cracking:
– Change the rear brake pads. (p. 96)
– Check that the brake pads are secured.
» If the brake pads are not secured correctly:
– Secure brake pads, replace with new parts if necessary.

12.13 Changing the rear brake pads

WARNING
Danger of accidents Incorrect servicing will cause the brake system to fail.
– Ensure that service work and repairs are performed professionally.

WARNING
Health hazard Brake fluid is a harmful substance.
– Keep brake fluid out of the reach of children.
– Wear suitable protective clothing and safety glasses.
– Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
– Consult a doctor immediately if brake fluid has been ingested.
– Rinse the affected area with plenty of water in the event of contact with the skin.
– Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
– If brake fluid spills on to your clothing, change the clothing.

WARNING

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

– Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
– Make sure that only clean, approved brake fluid from a tightly sealed container is used.

WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

NOTE

Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note


Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.


Preparatory work

– Remove the frame protector. (p. 54)

Replacement process

– Stand the vehicle upright.
– Remove screw cap ❶ with diaphragm ❷ and the O-ring.

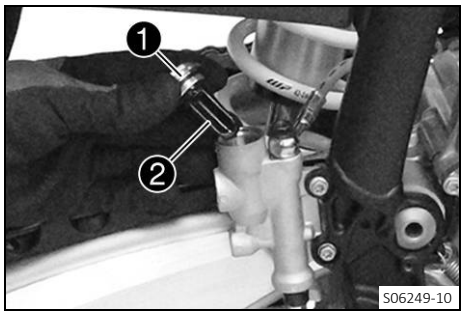

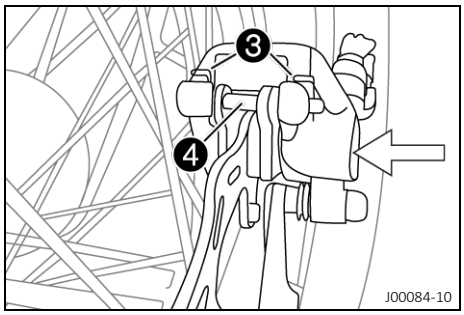


– Manually press the brake caliper toward the brake disc to push back the brake piston. Ensure that brake fluid does not flow out of the brake reservoir, and siphon off excess if required.

Note

Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.


– Remove cotter pin ❸, pull out stud ❹, and remove the brake pads.
– Clean brake caliper and brake caliper support.

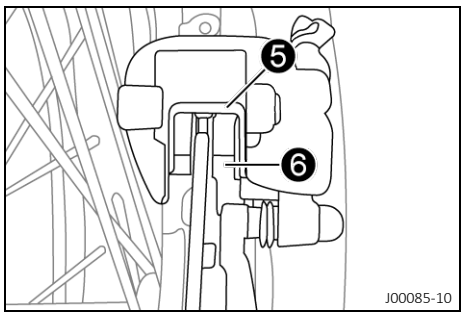

– Check that spring steel clip ❺ in the brake caliper and brake pad guide plate ❻ in the brake caliper support are properly seated.

Note


The arrow on the spring steel clip points in the rotation direction of the brake disc.

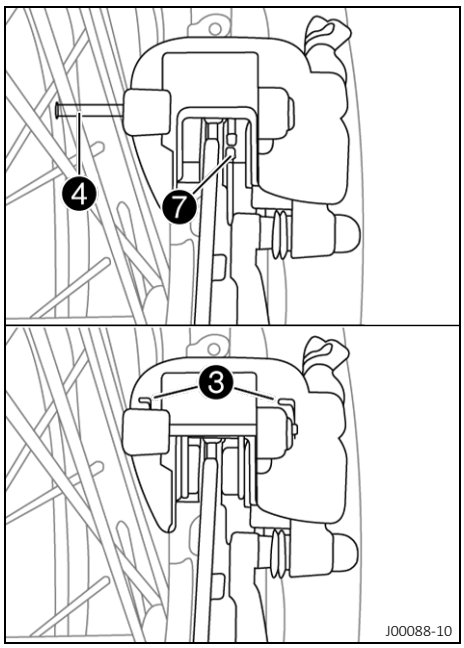

– Insert the new brake pads, mount stud ❹ and cotter pins ❸.

Always replace brake pads in sets.
Make sure that decoupling plate ❼ is mounted on the piston side of the brake pad.

– Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

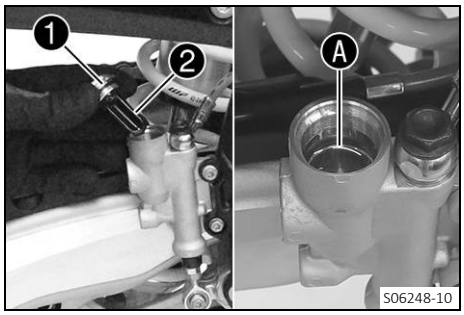

– Correct the brake fluid level to mark Ⓐ.

Brake fluid DOT 4 / DOT 5.1 (p. 150)

– Mount and tighten screw cap ❶ with diaphragm ❷ and the O-ring.

Immediately clean up any brake fluid that has overflowed or spilled using water.

Reworking


– Install the frame protector. (p. 54)

13.1 Removing the front wheel

Preparatory work


– Raise the motorcycle with a lift stand. (p. 51)

Removal process

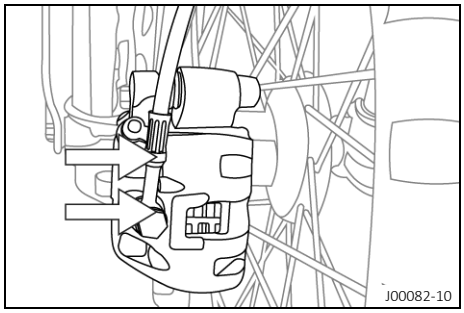


– Manually press the brake caliper toward the brake disc to push back the brake pistons.

Note
Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.

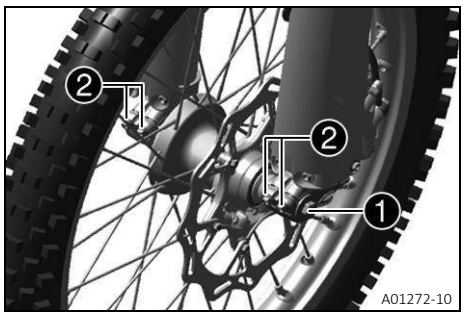


– Loosen screw 1 by four turns.
– Loosen screws 2.
– Press on screw 1 to push the wheel spindle out of the fork shoe.
– Remove screw 1.

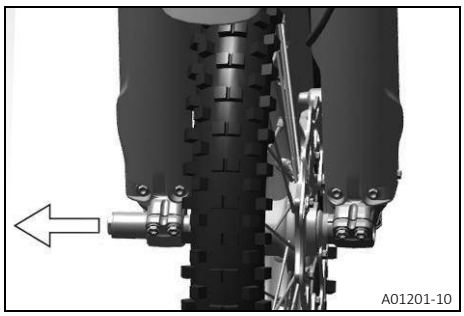

WARNING
Danger of accidents Damaged brake discs reduce the braking action.
– Always lay the wheel down in such a way that the brake disc is not damaged.

– Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.


Do not actuate the hand brake lever when the front wheel is removed.

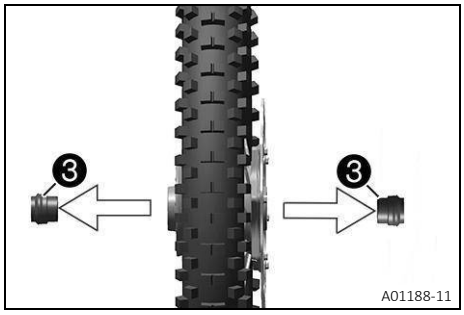

– Remove spacers 3.

13.2 Installing the front wheel

WARNING
Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.
– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

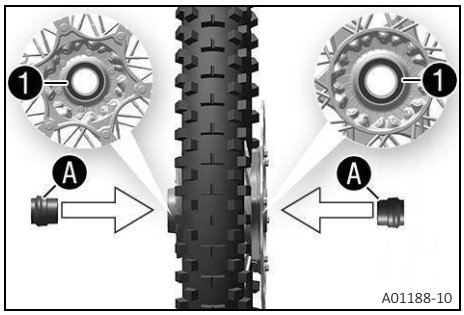


– Check the wheel bearing for damage and wear.
  » If the wheel bearing is damaged or worn:
    – Change the front wheel bearing.
– Clean and grease radial shaft seal ❶ and contact surfaces Ⓐ on the spacers.

Long-life grease (p. 149)

– Insert spacers.
– Clean and lightly grease the wheel spindle.

Long-life grease (p. 149)

– Position the front wheel and insert the wheel spindle.
  ✓ The brake pads are positioned correctly.

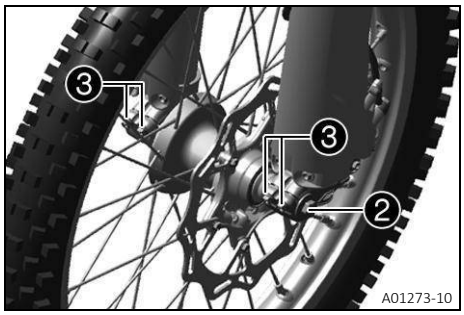

– Mount and tighten screw ❷.


Screw, wheel spindle, front	
M20×1.5	35 Nm (25.8 ft·lb$_f$)

– Operate the hand brake lever several times until the brake pads are in contact with the brake disc.
– Remove the motorcycle from the lift stand. (p. 51)
– Operate the front brake and compress the fork a few times firmly.
  ✓ The fork legs straighten.
– Tighten screws ❸.

Screw, fork shoe	
M8	15 Nm (11.1 ft·lb$_f$)

13.3 Removing the rear wheel

Preparatory work
– Raise the motorcycle with a lift stand. (p. 51)

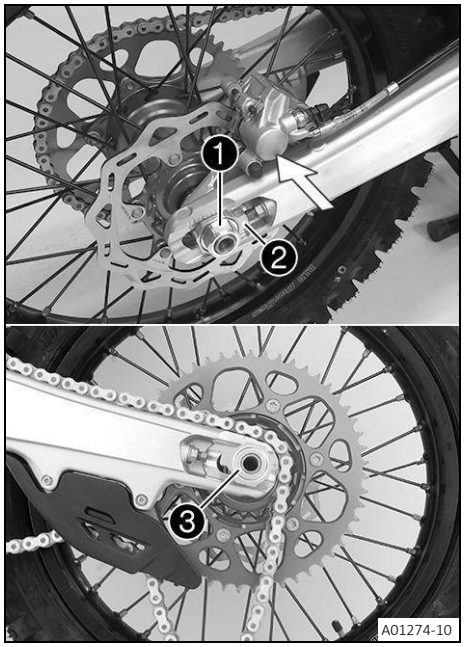

Removal process

– Manually press the brake caliper toward the brake disc to push back the brake pistons.

Note
Make sure that you do not press the brake caliper against the spokes when pushing back the brake pistons.


– Remove nut ❶.
– Remove chain tension adjuster ❷. Pull out wheel spindle ❸ far enough to allow the rear wheel to be pushed forward.
– Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.

Protect the components against damage by covering them.

WARNING
Danger of accidents Damaged brake discs reduce the braking action.
– Always lay the wheel down in such a way that the brake disc is not damaged.

– Hold the rear wheel and remove wheel spindle. Take the rear wheel out of the swingarm.


Do not actuate the brake pedal when the rear wheel is removed.

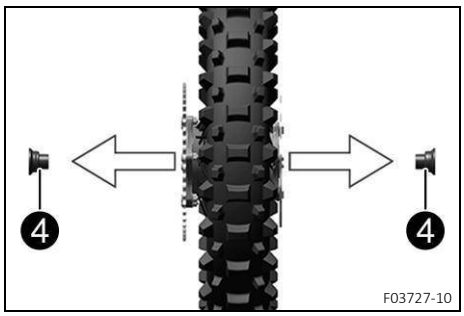

– Remove spacers ❹.

13.4 Installing the rear wheel

WARNING
Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.
– Always keep the brake discs free of oil, fat and wax.
– Clean the brake discs with brake cleaner when necessary.

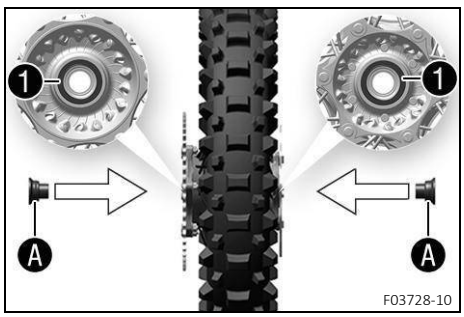


Installation procedure

– Check the wheel bearing for damage and wear.
  » If the wheel bearing is damaged or worn:
    – Change the rear wheel bearing.
– Clean and grease radial shaft seal ❶ and contact surfaces Ⓐ on the spacers.

Long-life grease (p. 149)


– Insert spacers.

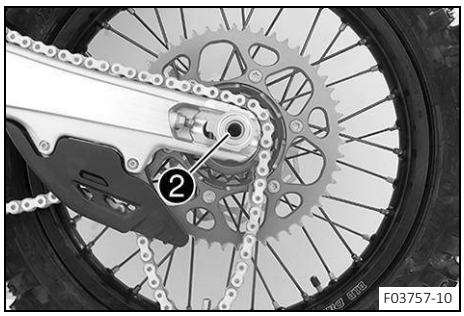

– Clean and lightly grease the wheel spindle.

Long-life grease (p. 149)

– Position the rear wheel and insert wheel spindle ❷.
✓ The brake pads are positioned correctly.
– Attach the chain.

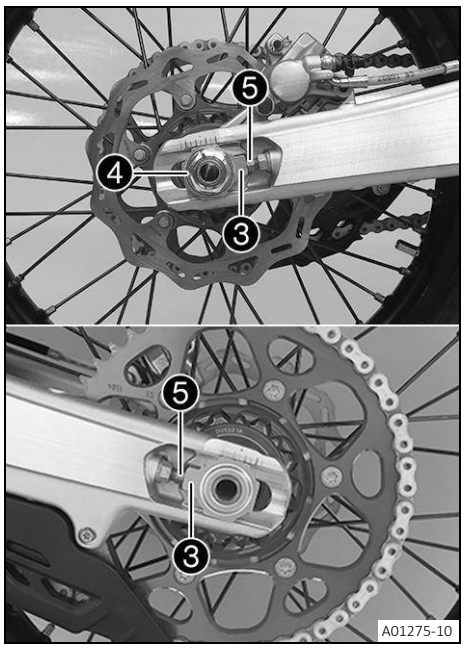

– Position chain tension adjuster ❸. Mount nut ❹ but do not tighten yet.
– Make sure that chain tension adjusters ❸ are fitted correctly on adjusting screws ❺.
– Check the chain tension. (p. 78)
– Tighten nut ❹.

Nut, wheel spindle, rear	
M22×1.5	80 Nm (59.0 ft·lb$_f$)

Note
The wide adjustment range of the chain adjusters enables different secondary ratios with the same chain length.
Chain tension adjusters ❸ can be turned by 180°.

– Actuate the brake disc repeatedly until the brake pads are in contact with the brake disc and a pressure point is achieved.

Reworking


– Remove the motorcycle from the lift stand. (p. 51)

13.5 Checking the tire condition

Note
Only fit tires approved and/or recommended by GASGAS.
Other tires could have a negative effect on handling characteristics.
The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle.
The tires mounted on the front and rear wheels must have a similar profile.
Worn tires have a negative effect on handling characteristics, especially on wet surfaces.


Preparatory work

– Raise the motorcycle with a lift stand. (p. 51)

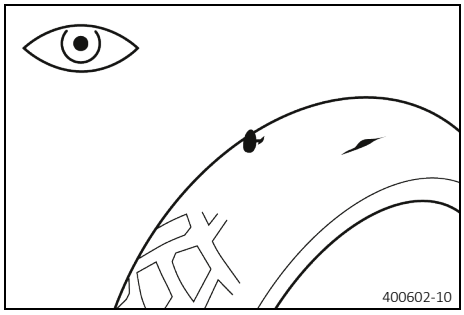

Control process

– Check the front and rear tires for cuts, embedded objects, and other damage.
  » If the tires have cuts, run-in objects, or other damage:
    – Change the tires.

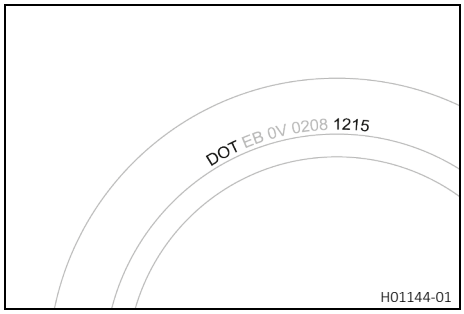

– Check the tire age.

Note
The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.
GASGAS recommends that the tires be changed after five years at the latest, regardless of the actual wear.


  » If the tires are older than five years:
    – Change the tires.

Reworking

– Remove the motorcycle from the lift stand. (p. 51)

13.6 Checking the tire pressure

Note
Low tire pressure leads to abnormal wear and the tire overheating.
Correct tire pressure ensures optimal riding comfort and maximum tire service life.

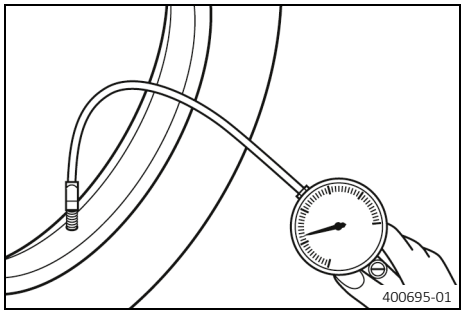

– Remove the protection cap.
– Check the tire pressure when the tires are cold.

Off-road tire pressure	
front	1.0 bar (14.5 psi)
rear	1.0 bar (14.5 psi)

  » If the tire pressure does not meet specifications:
    – Correct tire pressure.
– Mount the protection cap.

13.7 Checking the spoke tension


WARNING

Danger of accidents Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.

Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

– Check the spoke tension regularly, especially on a new vehicle.

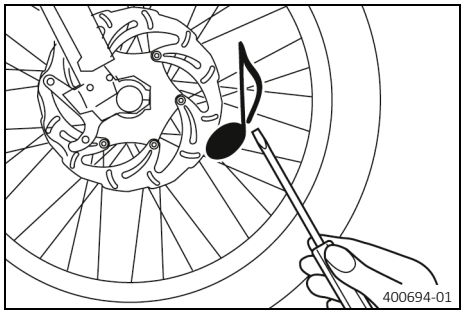

– Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.

Note

The frequency of the sound depends on the spoke length and spoke diameter.

If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

» If the spoke tension differs:

– Correct the spoke tension.

– Check the spoke torque.

Spoke nipple, front wheel	
M4,5	6 Nm (4.4 ft·lb$_f$)
Spoke nipple, rear wheel	
M4,5	6 Nm (4.4 ft·lb$_f$)

Torque wrench kit (58429094000)

14.1 Removing the 12 V battery

NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.

– Do not dispose of 12-V batteries as household waste.
– Dispose of 12-V batteries at a collection point for used batteries.

CAUTION


Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

– Allow the regulator rectifier to cool down before performing any work.


Preparatory work

– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)


Removal process

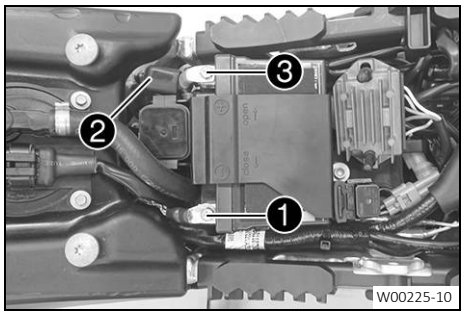

– Disconnect negative cable ❶ from the 12 V battery.
– Pull back positive terminal cover ❷ and disconnect positive cable ❸ from the 12-V battery.

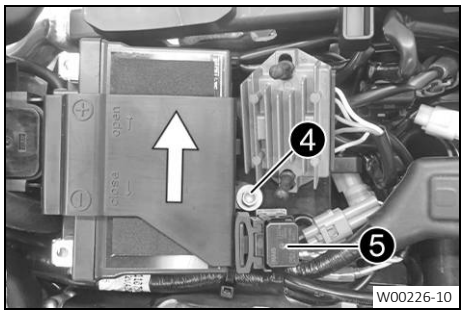


– Remove screw ❹.
– Remove relay ❺ from the holder and hang it to the side.
– Slide the battery holding bracket to the side out of the attachment.

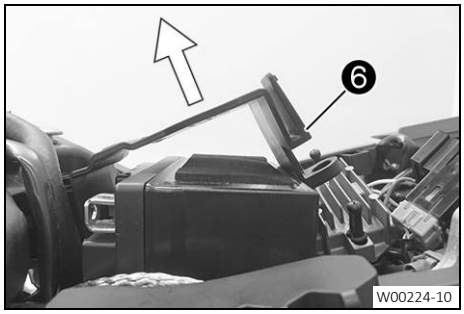



– Pull up battery holding bracket ❻ and remove the 12-V battery to the rear.

Pay attention to the wiring harness.

14.2 Installing the 12 V battery

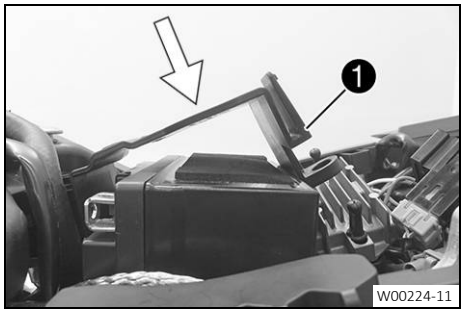

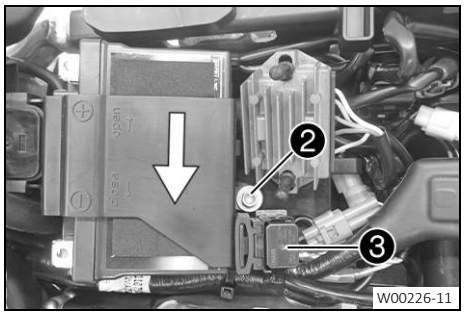

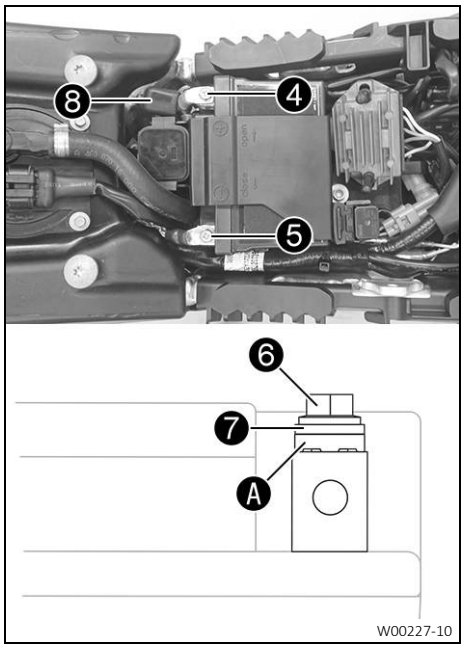

Installation procedure

– Pull up battery holding bracket ❶, insert the 12 V battery into the battery compartment with the terminals facing upwards and secure with battery holding bracket ❶.

12-V battery (HJTZ5S-FP-C)

Note
Ensure that the cable is routed correctly.

– Slide the battery holding bracket into the bracket.
– Mount and tighten screw ❷.

Remaining screws on chassis	
M6	10 Nm (7.4 ft·lb$_f$)

– Attach relay ❸ in the holder.
– Connect positive cable ❹ to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb$_f$)

– Connect negative cable ❺ to the 12 V battery.

Screw, battery terminal	
M5	2.5 Nm (1.84 ft·lb$_f$)

Contact disks Ⓐ must be mounted under screws ❻ and cable lug ❼ with the claws toward the battery terminal.

– Slide positive terminal cover ❽ over the positive terminal.

Reworking

– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

14.3 Charging the 12 V battery

WARNING

Risk of injury 12-V batteries contain harmful substances.

– Keep 12-V batteries out of the reach of children.
– Keep the battery away from sparks or open flames.
– Only charge batteries in well-ventilated rooms.
– Maintain a minimum distance from flammable materials when charging 12-V batteries.

Minimum distance	1 m (3 ft – 3 in)

– Do not charge deeply discharged 12- V batteries if the charge is already below the minimum voltage.

Minimum voltage before starting charging	9 V

– Dispose of 12 V batteries correctly if they have less than the minimum voltage.

NOTE

Environmental hazard 12-V batteries contain environmentally-hazardous materials.


– Do not dispose of 12-V batteries as household waste.
– Dispose of 12-V batteries at a collection point for used batteries.

Note

Even when there is no load on the 12 V battery, it discharges steadily each day.
The state of charge and the method of charging are very important for the service life of the 12 V battery.
Rapid recharging with a high charging current shortens the service life of the battery.
If the charging current, charging voltage, or charging time is exceeded, the 12 V battery will be destroyed.
If the 12 V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.
If the 12 V battery is left in a discharged state for an extended period, it will become deeply discharged and suffer a loss of capacity, destroying the battery.
The 12 V battery is maintenance-free.

Preparatory work

– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)
– Remove the 12 V battery. (p. 105)

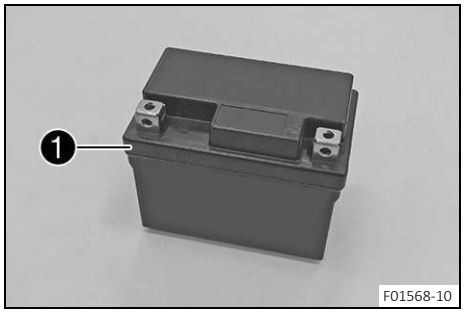

Filling procedure

– Check the battery voltage.
  » Battery voltage:
    • < 9 V
    – Do not charge the 12 V battery.
    – Replace the 12 V battery and dispose of the old 12 V battery properly.
  » If the specifications have been met:
    Battery voltage:
    • ≥ 9 V
    – Connect a charger to the 12 V battery. Switch the charger on.

The charging current, charging voltage, and charging time must not be exceeded.	
Maximum charging voltage	14.4 V
Minimum charging voltage	3.0 A

Maximum charging time	24 h
Recharge the 12 V battery regularly when the motorcycle is not being used.	6 months
Do not remove cover ❶.	

Work material (Alternative 1 / 2)
(EU) battery charger (26529974000)
Work material (Alternative 2 / 2)
(US) battery charger (26529974500)

Note

This charger tests whether the 12 V battery retains its voltage. It is also impossible to overcharge the 12 V battery with this charger. The charging time may be longer at low temperatures.

These chargers are only suitable for lithium iron phosphate batteries. Observe the enclosed instructions for GASGAS Technical Accessories.

– Switch off the charger after charging and disconnect from the 12 V battery.

Reworking

– Install the 12 V battery. (p. 106)
– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

14.4 Changing the main fuse

WARNING

Fire hazard Incorrect fuses overload the electrical system.

– Use only fuses with the prescribed amperage.
– Do not bypass or repair fuses.

CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

– Allow the regulator rectifier to cool down before performing any work.


Note

The main fuse protects all electrical power loads of the vehicle. The main fuse is located in the starter relay housing under the seat.


Preparatory work

– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)
– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)
– Remove the fuel tank. (p. 73)

Replacement process

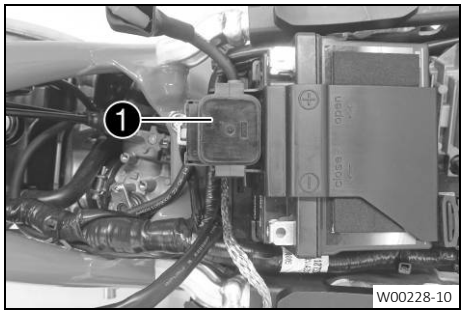

– Pull starter relay ❶ off of the bracket.

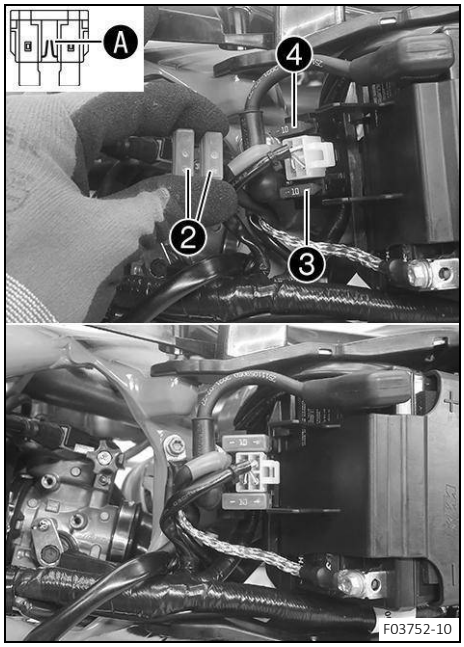

– Remove protection caps ❷.
– Remove faulty main fuse ❸.

Note
A faulty fuse has a burned-out fuse wire Ⓐ.
A spare fuse ❹ is located in the starter relay.

– Insert the main fuse.

Fuse (58011109110)

– Check that the electrical equipment is functioning properly.

Tip
Insert a new spare fuse so that it is available if needed.

– Mount the protection caps.
– Mount the starter relay onto the holder and route the cable.

Reworking

– Install the fuel tank. (p. 75)
– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)
– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

14.5 Changing the fuse of the fuel pump

WARNING
Fire hazard Incorrect fuses overload the electrical system.
– Use only fuses with the prescribed amperage.
– Do not bypass or repair fuses.

CAUTION

Danger of burns The regulator rectifier gets very hot when the vehicle is operated.

– Allow the regulator rectifier to cool down before performing any work.


Note

The fuel pump is protected by the fuel pump fuse. This is located under the seat.

Preparatory work

– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)

Replacement process

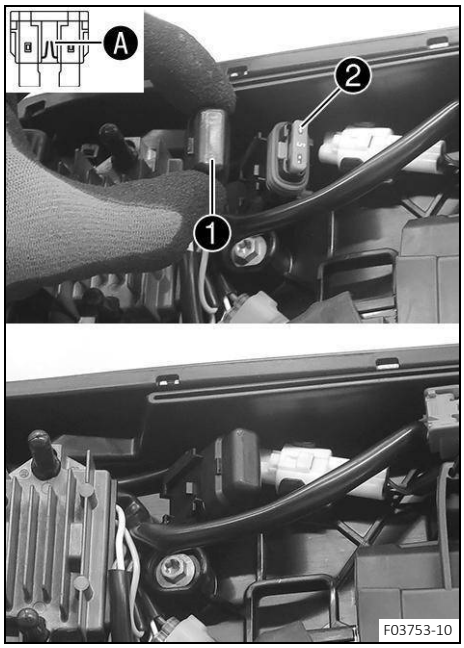

– Remove protection cap ❶.
– Remove faulty main fuse ❷.

Note

A faulty fuse has a burned-out fuse wire Ⓐ.

– Put in the new fuse for the fuel pump.


Fuse (58011109105)

– Check that the electrical equipment is functioning properly.
– Attach the protection cap.

Reworking

– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

14.6 Diagnostic connector

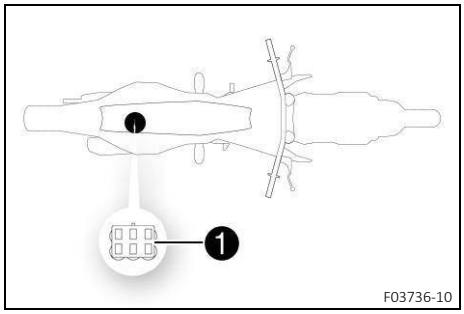


Diagnostics connector ❶ is located under the seat.

Note

As soon as the diagnostics tool is connected, the hourmeter starts running.

Before longer diagnostic sessions, unplug the hourmeter behind the number plate.

15.1 Cooling system

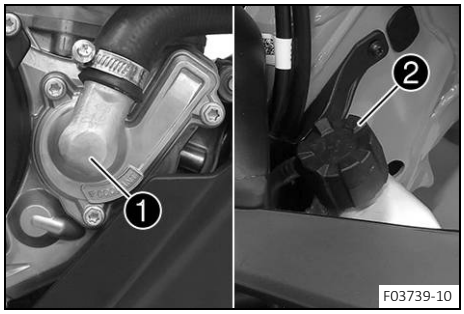

Water pump ❶ in the engine circulates the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ❷. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248.0 °F)

The coolant is cooled by the air stream.

The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.

15.2 Checking the frost protection and coolant level

WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.


- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

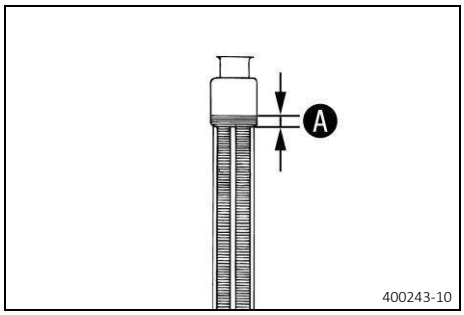

- Stand the motorcycle upright on a level surface.
- Take off the radiator cap.
- Check the frost protection in the coolant.

−45 °C ... −25 °C (−49.0 °F ... −13.0 °F)

  » If the frost protection in the coolant does not match the specified value:
    - Correct the frost protection in the coolant.
- Check the coolant level in the radiator.

Coolant level Ⓐ above the radiator fins	10 mm (0.39 in)

  » If the coolant level does not meet the specifications:
    - Correct the coolant level.

coolant	
Coolant (p. 151) Antifreeze protection to at least: −25 °C (−13.0 °F)	0.95 l (0.251 liq. gal_{US})


– Mount the radiator cap.

15.3 Checking the coolant level

WARNING
Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.
– Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
– Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
– In the event of scalding, rinse the area affected immediately with lukewarm water.

WARNING
Health hazard Coolant is harmful to health.
– Keep coolant out of the reach of children.
– Do not allow coolant to come into contact with skin, eyes, or clothing.
– Consult a doctor immediately if coolant has been ingested.
– Rinse the affected area immediately with plenty of water in the event of contact with skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
– If coolant spills on to your clothing, change the clothing.
– Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

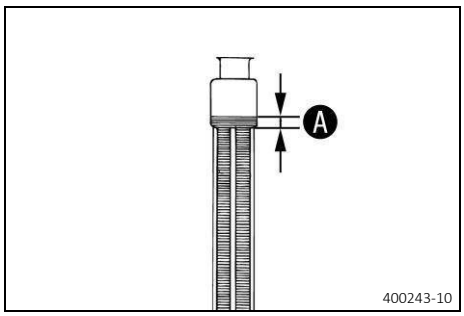

– Stand the motorcycle upright on a level surface.
– Take off the radiator cap.
– Check the coolant level in the radiator.

Coolant level A above the radiator fins	10 mm (0.39 in)

» If the coolant level does not meet the specifications:
– Correct the coolant level.

coolant	
Coolant (p. 151) Antifreeze protection to at least: −25 °C (−13.0 °F)	0.95 l (0.251 liq. gal_{US})


– Mount the radiator cap.

15.4 Draining the coolant

WARNING
Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.
- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.

WARNING
Health hazard Coolant is harmful to health.
- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

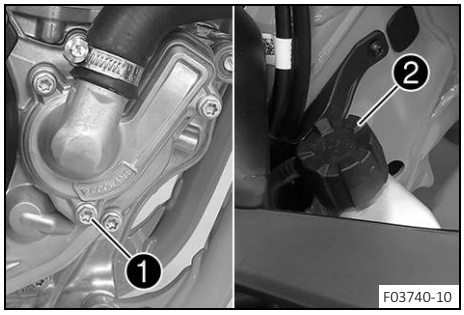


Emptying process
- Stand the motorcycle upright.
- Place an appropriate container under the water pump cover.
- Remove screw ❶. Take off radiator cap ❷.
- Completely drain the coolant.
- Mount screw ❶ with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb$_f$)

15.5 Refilling the coolant

WARNING
Health hazard Coolant is harmful to health.
- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

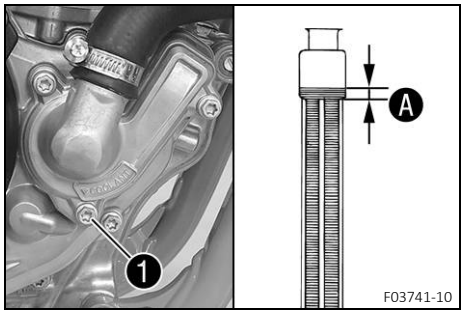

Filling procedure

– Make sure that screw ❶ is tightened.
– Stand the motorcycle upright.
– Pour coolant in up to level Ⓐ above the radiator fins.

Distance Ⓐ above the radiator fins	10 mm (0.39 in)

coolant	
Coolant (p. 151) Antifreeze protection to at least: −25 °C (−13.0 °F)	0.95 l (0.251 liq. gal_{US})


– Mount the radiator cap.
– Go for a short test ride.
– Check the coolant level. (p. 112)

15.6 Changing the coolant

WARNING
Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.
– Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
– Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
– In the event of scalding, rinse the area affected immediately with lukewarm water.


WARNING
Health hazard Coolant is harmful to health.
– Keep coolant out of the reach of children.
– Do not allow coolant to come into contact with skin, eyes, or clothing.
– Consult a doctor immediately if coolant has been ingested.
– Rinse the affected area immediately with plenty of water in the event of contact with skin.
– Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
– If coolant spills on to your clothing, change the clothing.
– Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

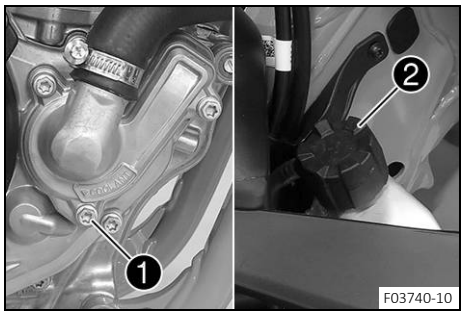

Replacement process

– Stand the motorcycle upright.
– Place an appropriate container under the water pump cover.
– Remove screw ❶. Take off radiator cap ❷.
– Completely drain the coolant.

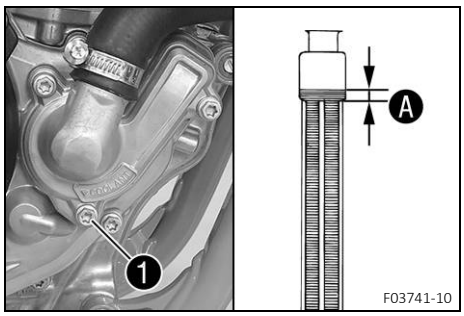

– Mount screw 1 with the new sealing ring and tighten.

Screw, water pump cover	
M6	10 Nm (7.4 ft·lb$_f$)


– Pour coolant in up to level A above the radiator fins.

Distance A above the radiator fins	10 mm (0.39 in)

coolant	
Coolant (p. 151) Antifreeze protection to at least: −25 °C (−13.0 °F)	0.95 l (0.251 liq. gal$_{US}$)

– Mount the radiator cap.
– Go for a short test ride.
– Check the coolant level. (p. 112)

16.1 Checking the play in the throttle cable

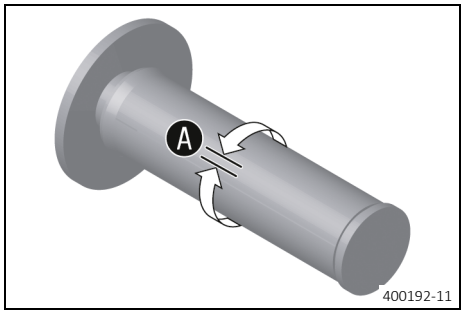

– Check the throttle grip for smooth operation.
– Move the handlebar to the straight-ahead position. Turn the throttle twist grip back and forth slightly and determine the play in throttle cable Ⓐ.

Throttle cable play	3 mm … 5 mm (0.12 in … 0.20 in)

» If the throttle cable play does not meet the specified value:
– Adjust the throttle cable play. (p. 116)

– Push cold start button all the way to the stop.

When the throttle twist grip is turned forward, the cold start button jumps back to the start position.

» If the cold start button does not return to its original position:
– Adjust the throttle cable play. (p. 116)

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.

– Start the engine and let it run at idle speed. Move the handlebar back and forth over the entire steering range.


The idle speed must not change.

» If the idle speed changes:
– Adjust the throttle cable play. (p. 116)

16.2 Adjusting the throttle cable play

Note
If the correct routing of the throttle cables has already been secured, the fuel tank does not need to be removed.

Preparatory work
– Remove air filter box cover. (p. 67)
– Remove the seat. (p. 65)
– Remove the frame protector. (p. 54)
– Remove the right side panel. (p. 66)
– Remove the fuel tank. (p. 73)
– Check the throttle cable routing. (p. 82)

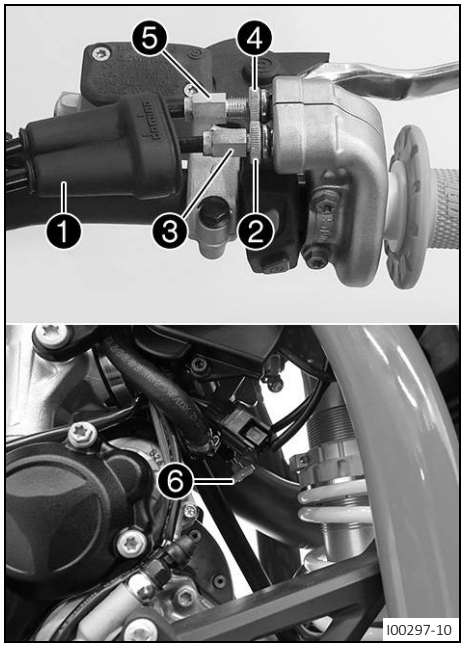

Adjustment procedure

– Move the handlebar to the straight-ahead position.
– Push back boot ❶.
– Loosen nut ❷.
– Screw adjusting screw ❸ in as far as possible.
– Loosen nut ❹.
– Press cold start button ❻ all the way to the stop.
– Turn adjusting screw ❺ so that the cold start button moves to the basic position when the throttle twist grip is turned forward.
– Tighten nut ❹.
– Turn adjusting screw ❸ so that there is play in the throttle cable at the throttle twist grip.

Throttle cable play	3 mm … 5 mm (0.12 in … 0.20 in)

– Tighten nut ❷.
– Slide on boot ❶.
– Check the throttle grip for smooth operation.


Reworking

– Check the play in the throttle cable. (p. 116)
– Install the fuel tank. (p. 75)
– Install the right side panel. (p. 67)
– Install the frame protector. (p. 54)
– Mount the seat. (p. 66)
– Install the air filter box cover. (p. 68)

16.3 Adjusting the characteristic map of the throttle response


Note

On the throttle grip, the characteristic map of the throttle response is changed by changing the guide plate.
A guide plate with a different characteristic map is supplied.

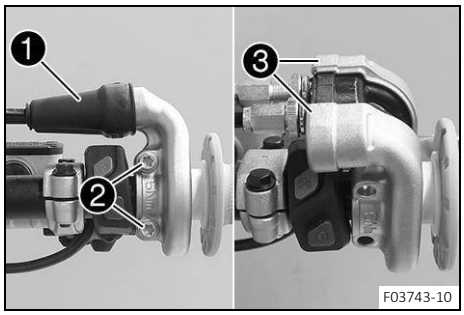

Adjustment procedure

– Push back boot ❶.
– Remove screws ❷ and half-shells ❸.
– Detach the throttle cables and take off the grip tube.

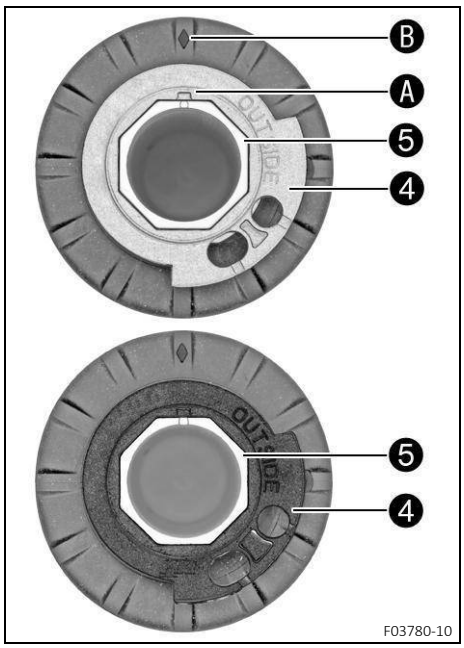


– Remove guide plate ❹ from handle tube ❺.
– Position the required guide plate on the grip tube.

The **OUTSIDE** label must be visible. Marking Ⓐ must be positioned at marking Ⓑ.

Gray guide plate (A48002014000)
Work material (Alternative 1 / 1)
Black guide plate (A46002014000)

Note
The gray guide plate opens the throttle valve more slowly.
The black guide plate opens the throttle valve more quickly.
The gray guide plate is mounted upon delivery.

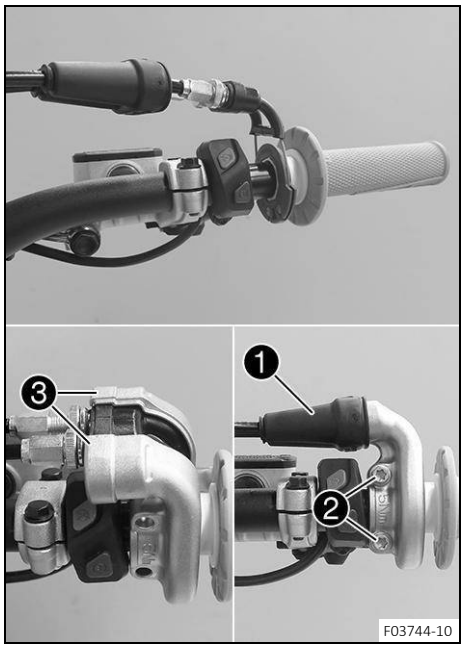

– Clean the outside of the handlebar and the inside of the grip tube. Mount the grip tube on the handlebar.
– Attach the throttle cables to the guide plate and route correctly.
– Position half-shells ❸, mount and tighten screws ❷.

Screw, throttle twist grip	
M6	5 Nm (3.7 ft·lb$_f$)


– Slide on sleeve ❶ and check the throttle grip for ease of movement.

Reworking

– Check the play in the throttle cable. (p. 116)

16.4 Adjusting the idle speed

WARNING
Danger of accidents The engine may suddenly come to a halt if the idle speed is set too low.
– Set the idle speed to the specified value.

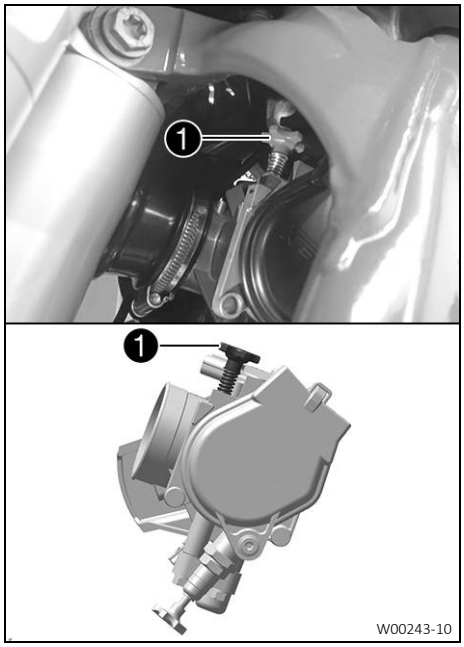

– Run the engine until warm.
  ✓ Cold start button deactivated - cold start button is in the basic position

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.


– Adjust the idle speed by turning idle speed adjustment screw ❶ using a suitable rpm gage.

Idle speed	2,250 rpm … 2,350 rpm (37.50 Hz … 39.17 Hz)

Note
Turning counterclockwise lowers the idle speed.
Turning clockwise increases the idle speed.

16.5 Programming the throttle valve position

Note
If the control unit detects that the throttle valve position at idle speed needs to be reprogrammed, then the malfunction indicator lamp flashes 2x per second.

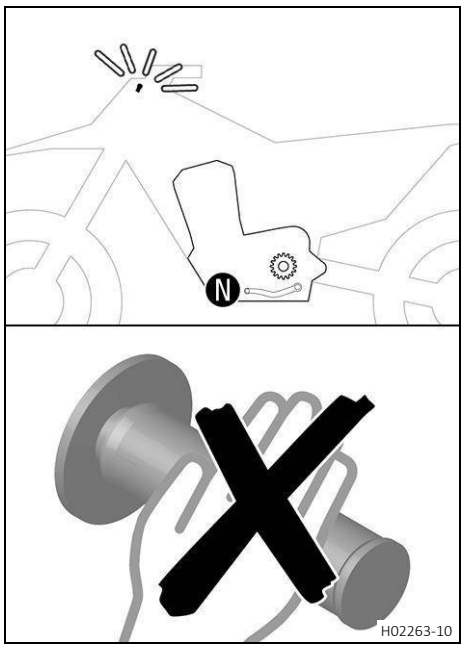

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.

– Allow the vehicle to run at idle speed.
✓ The malfunction indicator lamp stops flashing once programming is completed.

Note

If the engine becomes too warm, perform a cool-down ride at medium speed.


After this, do not switch off the engine, but leave it running at idle speed until the programming is finished.

16.6 Checking the basic position of the gear shift lever

Note

When driving, the gear shift lever must not touch the rider's boot when in the basic position.

If the gear shift lever is permanently touching the boot, the transmission will be subject to excessive load; this can cause malfunctions of the Quickshifter.

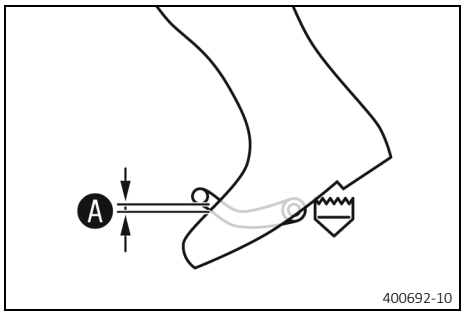


– Sit on the vehicle in the riding position and measure the distance A between the upper edge of your boot and the shift lever.


Distance between the gear shift lever and upper edge of boot	10 mm … 20 mm (0.39 in … 0.79 in)

» If the distance does not meet the specifications:
– Adjust the basic position of the gear shift lever. (p. 120)

16.7 Adjusting the basic position of the gear shift lever

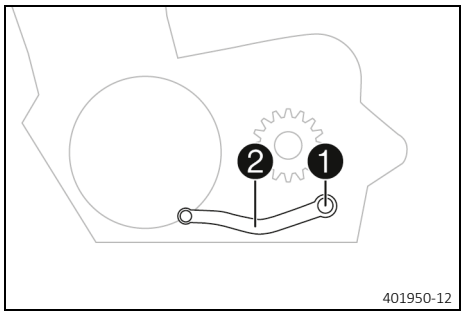

– Remove screws 1 with the washers and remove gear shift lever 2.

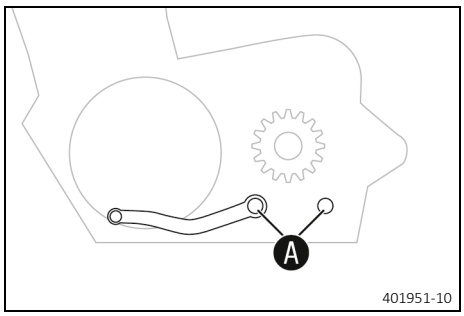

– Clean toothing Ⓐ of the gear shift lever and shift shaft.
– Mount the gear shift lever on the shift shaft in the desired position and engage the toothing.

The gear shift lever must not come into contact with any other vehicle components during the shift procedure.

Note
The range of adjustment is limited.

– Mount and tighten screw ❶ with the washers.

Screw, shift lever	
M6	14 Nm (10.3 ft·lb$_f$) **Loctite® 243**

17.1 Changing the fuel screen

DANGER

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.

WARNING


Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

NOTE

Environmental hazard Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

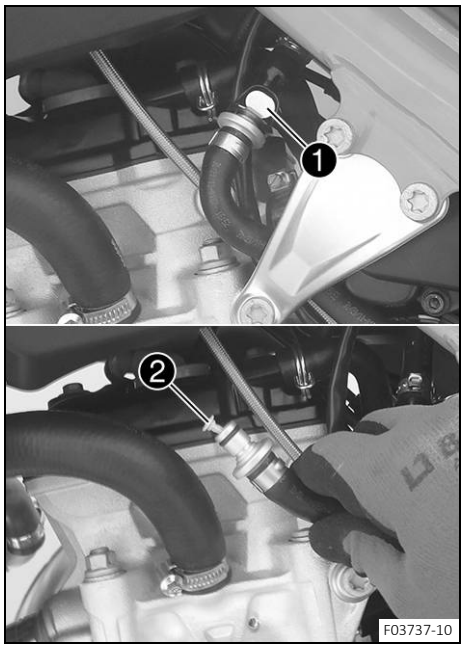

- Clean quick-lock coupling 1 thoroughly with compressed air.

  Dirt must not enter into the fuel line. Dirt in the fuel line clogs the injector!

- Disconnect the quick-lock coupling.

Note

Remaining fuel may flow out of the fuel hose.

- Pull fuel screen 2 out of the connecting piece.
- Slide the new fuel screen all the way into the connecting piece.
- Spray silicone spray onto a lint-free cleaning cloth and lightly lubricate the O-ring of the quick-lock coupling.

  Silicone spray (p. 150)

- Join quick release coupling 1.

DANGER

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.


- Start the engine and check the response.

17.2 Checking the engine oil level

Note
The engine oil level can be checked when the engine is cold or warm.

Preparatory work
– Stand the motorcycle upright on a level surface.

Control process
Condition: The engine is cold

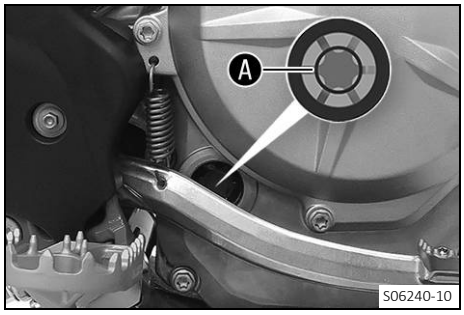


– Check the engine oil level.

The engine oil reaches the middle of level viewer A.

» If the engine oil does not reach the middle of the level viewer:
– Add engine oil. (p. 126)

Condition: The engine is at operating temperature

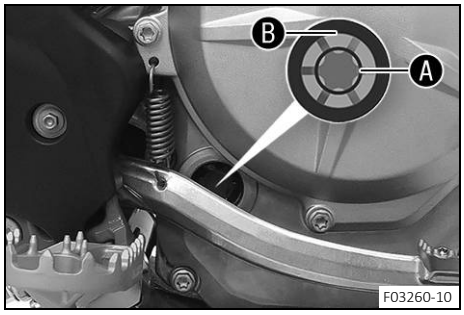

– Check the engine oil level.

The engine oil level is between the middle of the level viewer A and the upper edge of the level viewer B.
After switching off the engine, wait one minute before checking the level.

» If the engine oil does not reach the middle of level viewer A:
– Add engine oil. (p. 126)

17.3 Changing the engine oil and oil filter, cleaning the oil screens


WARNING
Danger of scalding Engine and gear oil heat up when the motorcycle is operated.
– Wear suitable protective clothing and safety gloves.
– In the event of scalding, rinse the area affected immediately with lukewarm water.

NOTE
Environmental hazard Hazardous substances cause environmental damage.
– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.


Note
Drain the engine oil while the engine is at operating temperature.

Preparatory work
– Park the motorcycle on a level surface.

Replacement process

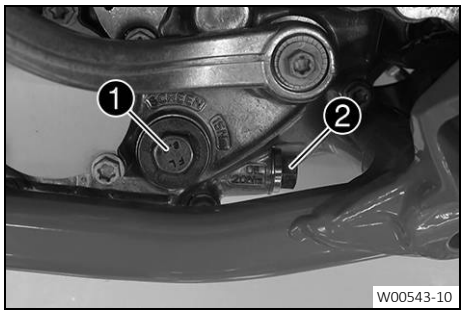

- Position an appropriate container under the engine.
- Remove screw plug ❶ with oil screen and the O-rings.
- Remove oil drain plug ❷ with the magnet and seal ring.

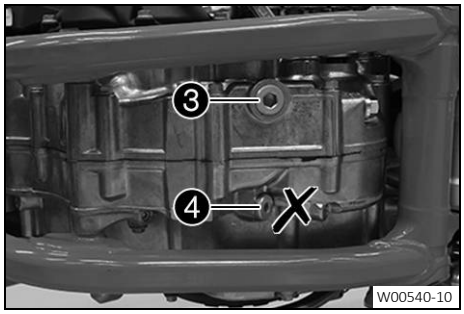


- Remove screw plug ❸ with O-ring.


Do not remove screw ❹.

- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surfaces.
- Mount and tighten screw plug ❸ with new O-ring.

Oil drain plug	
M14×1.5	15 Nm (11.1 ft·lb$_f$)

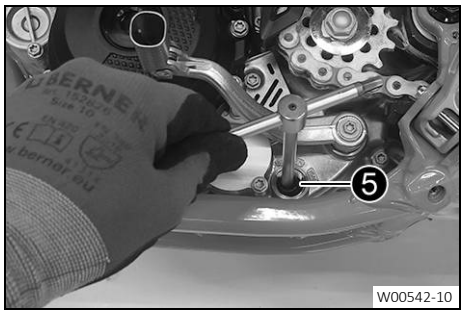

- Position oil screen ❺ with the O-rings on a pin wrench.
- Position the pin wrench through the drill hole of the screw plug in the opposite section of the engine case.
- Push the oil screen all the way into the engine case.

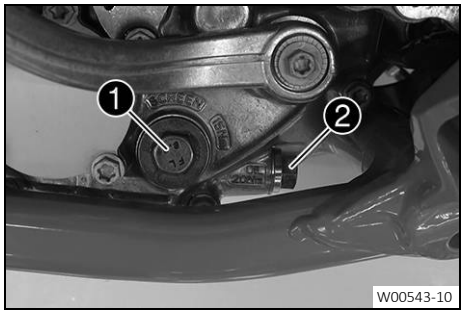


- Mount and tighten screw plug ❶ with O-ring.


Plug, oil screen	
M20×1.5	15 Nm (11.1 ft·lb$_f$)

- Mount and tighten oil drain plug ❷ with the magnet and a new seal ring.

Oil drain plug with magnet	
M12×1.5	20 Nm (14.8 ft·lb$_f$)

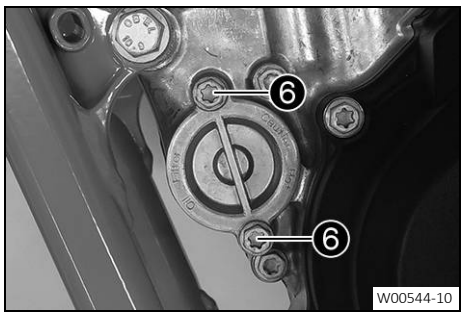


- Remove ❻ screws. Take off the oil filter cover with the O-ring.

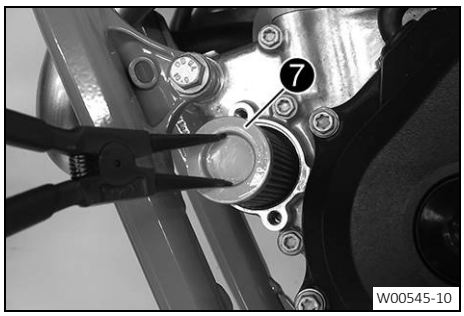

– Pull oil filter ❼ out of the oil filter housing.

Lock ring plier (51012011000)


– Allow the engine oil to drain completely.
– Thoroughly clean the parts and the sealing surfaces.

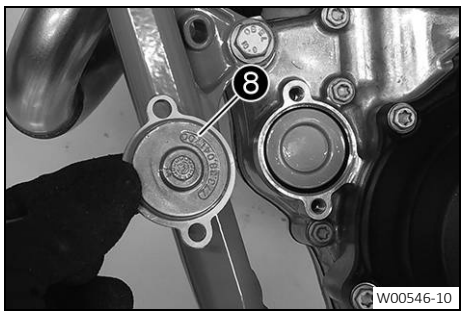

– Lay the motorcycle on its side and fill the oil filter housing to about ⅓ full with engine oil.
– Fill the oil filter with engine oil and position the oil filter in the housing.
– Oil the O-ring of the oil filter cover and mount it together with oil filter cover ❽.
– Mount and tighten the screws.

Screw, oil filter cover	
M6	10 Nm (7.4 ft·lb$_f$)

– Stand the motorcycle upright.

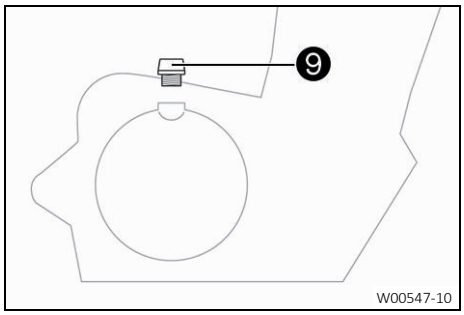

– Remove filler plug ❾ with the O-ring, and fill up with engine oil.

engine oil	
Engine oil (10W/50) (p. 149) fully synthetic	1.0 l (0.26 liq. gal$_{US}$)

Note
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

– Mount and tighten the oil plug together with the O-ring.

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.


– Start the engine and check it for leaks.

Reworking

– Check the engine oil level. (p. 123)

17.4 Adding engine oil

Note
Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

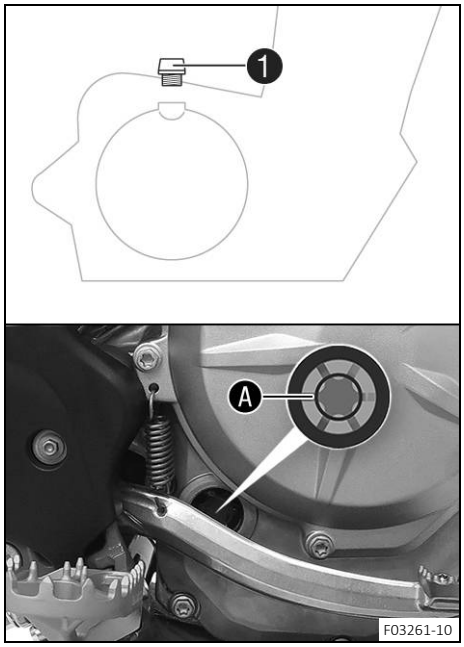

Filling procedure

– Remove oil plug 1 with O-ring.
– Fill engine oil to the middle A of the level viewer.
– Add the same engine oil used when the last oil change was carried out.

engine oil	
Engine oil (10W/50) (p. 149) fully synthetic	1.0 l (0.26 liq. gal_{US})

Note
For optimal performance of the engine oil, do not mix different types of engine oil.
GASGAS recommends changing the engine oil, if necessary.

– Mount and tighten the filler plug together with the O-ring.

DANGER
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.
– Always ensure that there is sufficient ventilation when running the engine.
– Use suitable exhaust extraction when starting or running the engine in an enclosed space.

– Start the engine and check it for leaks.

Reworking

– Check the engine oil level. (p. 123)

18.1 Cleaning the motorcycle

NOTE

Material damage Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc.

Too high a pressure can cause malfunctions and destroy components.

– Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
– Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm (23.6 in)

NOTE


Environmental hazard Hazardous substances cause environmental damage.

– Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Note

To maintain the value and appearance of the motorcycle over a long period, clean it regularly.

Avoid direct sunshine when cleaning the motorcycle.

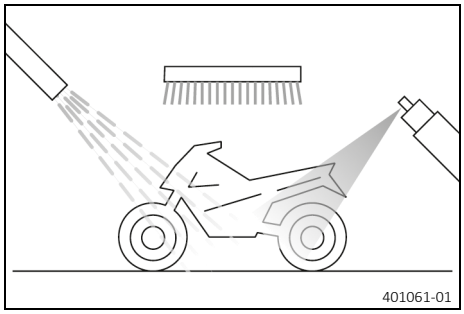

– Seal the exhaust system to prevent water from entering into it.
– Remove loose dirt first with a soft jet of water.
– Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.

Environmentally neutral universal cleaning agent (p. 152)

Note

Use warm water containing standard motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first.

– After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
– Remove the cover from the exhaust system.

WARNING

Danger of accidents Moisture and dirt impair the brake system.

– Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.

– After cleaning, ride the vehicle a short distance until the engine warms up.

Note

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

– Push back the protection caps of the handlebar controls to allow any water that has penetrated to evaporate.
– After the motorcycle has cooled off, lubricate all moving parts and pivot points.
– Clean the chain. (p. 77)

– Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials (p. 152)

– Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors (p. 152)

19.1 Storage

WARNING


Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.

Note

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (workshops less busy). In this way, you can avoid long workshop waiting times at the start of the new season.

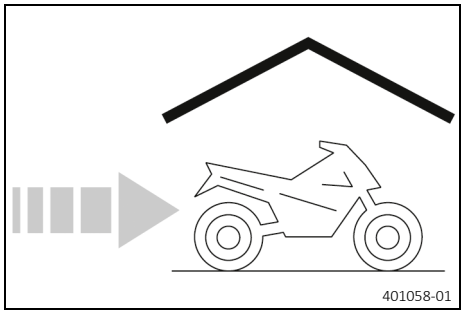

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (p. 148)

- Refuel. (p. 32)

Tip

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle. (p. 127)
- Change the engine oil and the oil filter, clean the oil screens. (p. 123)
- Check the frost protection and coolant level. (p. 111)
- Check the tire pressure. (p. 103)
- Remove the 12 V battery. (p. 105)
- Charge the 12 V battery. (p. 107)

Ideal charging and storage temperature of the lithium-ion battery	10 °C … 20 °C (50.0 °F … 68.0 °F)

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

Note

GASGAS recommends putting the motorcycle on a stand or lift.

- Raise the motorcycle with a lift stand. (p. 51)


– Cover the vehicle with a tarpaulin or similar cover that is permeable to air.

Note

Do not use non-porous materials since they prevent humidity from escaping, and, as a result, contribute to corrosion.

Avoid running the engine of a motorcycle in storage for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

19.2 Preparing for use after storage

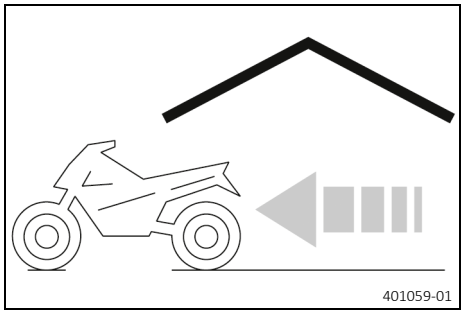

– Install the 12 V battery. (p. 106)
– Remove the motorcycle from the lift stand. (p. 51)
– Perform checks and maintenance measures when preparing for use. (p. 28)
– Take a test ride.

20.1 Troubleshooting

Cause	Finding	Remedy
The engine does not turn over when the start button is actuated	Operating error 12 V battery discharged Plug-in connector of the start button disconnected or oxidized Cable connection on starter motor disconnected, loose or oxidized Main fuse blown Starter relay defective Starter motor defective	– Carry out the starting procedure. (p. 28) – Charge the 12 V battery. (p. 107) – Check the charging voltage. – Check the open-circuit current. – Check the stator winding of the alternator. – Check the plug-in connector of the start button. – Check the cable connection on the starter motor. – Change the main fuse. (p. 108) – Check the starter relay. – Check the starter motor.
The engine turns but does not start	Quick-lock coupling not joined Lack of fuel Fuel screen in the quick-lock coupling is clogged Idle speed is not set correctly Spark plug sooty or wet Crankshaft speed sensor disconnected Ground connection of the ignition coil loose or oxidized Plug gap of spark plug too wide Short-circuit cable in wiring harness frayed, kill switch faulty Malfunction in the electronic fuel injection	– Join quick-lock couplings. – Refuel. (p. 32) – Change the fuel screen. (p. 122) – Adjust the idle speed. (p. 119) – Clean and dry the spark plug and spark plug connector, or change if necessary. – Check plug-in connector of the crankshaft speed sensor. – Check the ground connection of the ignition coil. – Adjust plug gap. Plug gap of spark plug: 1.0 mm (0.039 in) – Check the wiring harness. (Visual check). – Check the electrical system. – Read out the fault memory using the diagnostics tool.
Engine does not speed up	Malfunction in the electronic fuel injection	– Read out the fault memory using the diagnostics tool.
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Malfunction in the electronic fuel injection Exhaust system leaks, deformed or too little glass fiber filling in the silencer Valve clearance too little	– Clean the air filter and air filter box. (p. 70) – Change the fuel filter. – Read out the fault memory using the diagnostics tool. – Check exhaust system for damage. – Change the glass fiber filling of the muffler. (p. 72) – Adjust the valve clearance.
The engine dies during the trip	Lack of fuel Faulty contacts in ignition coil or stator	– Refuel. (p. 32) – Check ignition coil and stator cables.

Cause	Finding	Remedy
Engine overheats	Too little coolant in cooling system Too little air stream Radiator fins very dirty Foam formation in the cooling system Bent radiator hose	– Check the transmission and cooling system for leaks. – Check the coolant level. (p. 112) – Switch off the engine when standing. – Clean the radiator fins. – Drain the coolant. (p. 113) – Refill the coolant. (p. 113) – Change the radiator hose.
Malfunction indicator lamp lights up or flashes	Malfunction in the electronic fuel injection	– Check the wiring for damage and the electrical plug-in connections for corrosion and damage. – Read out the fault memory using the diagnostics tool.
High oil consumption	Engine vent hose bent The engine oil level is too high The engine oil is too thin (low viscosity) Piston or cylinder worn Engine case is leaking	– Route the vent hose without bends or change it if necessary. – Check the engine oil level. (p. 123) – Change the engine oil and the oil filter, clean the oil screens. (p. 123) – Measure the piston/cylinder mounting clearance. – Check the engine case for loss of oil.
12 V battery discharged	12 V battery is not charging unwanted electrical load	– Check the charging voltage. – Check the stator winding of the alternator. – Check the open-circuit current.

21.1 Engine

21.1.1 Technical data - engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	349.7 cm³ (21.340 in³)
Stroke	57.5 mm (2.264 in)
Bore	88 mm (3.46 in)
Compression ratio	14.6:1
Control	DOHC, four valves controlled via cam lever, drive via timing chain
Valve diameter, intake	36.3 mm (1.429 in)
Valve diameter, exhaust	29.1 mm (1.146 in)
Valve clearance	
Intake at: 20 °C (68.0 °F)	0.08 mm … 0.15 mm (0.0031 in … 0.0059 in)
Exhaust at: 20 °C (68.0 °F)	0.12 mm … 0.19 mm (0.0047 in … 0.0075 in)
Crankshaft bearing	2-cylinder roller bearing
Big (bottom) end bearing	Plain bearing
Wrist pin bearing	Bearing bush
Piston	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with 2 trochoidal pumps
Primary transmission	24:72
Clutch	Multidisc clutch in oil bath/hydraulically activated/damped
Transmission	
(MC)	5 speed transmission, claw shifted
(EX)	6 speed transmission, claw shift
Gear ratios **(MC)**	
1st gear	2:28 PM
2nd Gear	16:26
3rd Gear	18:24
4th Gear	21:24
5th Gear	22:21
Gear ratios **(EX)**	
1st gear	13:33
2nd Gear	16:30
3rd Gear	18:26
4th Gear	22:26
5th Gear	23:23

6th Gear	26:22
Alternator	• 14 V • 70 W (0.094 hp)
Ignition system	Contactless controlled fully electronic ignition with digital ignition adjustment
Spark plug	NGK LMAR9AI-10
Plug gap of spark plug	1.0 mm (0.039 in)
Cooling	Liquid cooling, permanent circulation of coolant by water pump
Starting aid	Starter motor
Idle speed	2,250 rpm … 2,350 rpm (37.50 Hz … 39.17 Hz)

21.1.2 Capacities - engine

engine oil	
Engine oil (10W/50) (p. 149) fully synthetic	1.0 l (0.26 liq. gal_{US})
coolant	
Coolant (p. 151) Antifreeze protection to at least: −25 °C (−13.0 °F)	0.95 l (0.251 liq. gal_{US})

21.2 Chassis

21.2.1 Technical data - chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Suspension travel: **(MC)**	
front	310 mm (12.20 in)
rear	300 mm (11.81 in)
Suspension travel: **(EX)**	
front	300 mm (11.81 in)
rear	300 mm (11.81 in)
Triple clamp offset	22 mm (0.87 in)
Brake system	Disc brakes, floating brake calipers
Brake discs - diameter	
front	260 mm (10.24 in)
rear	220 mm (8.66 in)
Brake disc wear limit	

front	2.5 mm (0.098 in)
rear	3.5 mm (0.138 in)
Final drive	
(MC)	14:52
(EX)	14:50
Chain	5/8 x 1/4"
Rear sprockets available	• 47 teeth • 48 teeth • 49 teeth • 50 teeth • 51 teeth • 52 teeth
Steering head angle	63.9° (1.115 rad)
Wheelbase	
(MC)	1,493 ±10 mm (58.78 ±0.39 in)
(EX)	1,489 ±10 mm (58.62 ±0.39 in)
Ground clearance unloaded	
(MC)	343 mm (13.50 in)
(EX)	343 mm (13.50 in)
Seat Height unloaded	
(MC)	956 mm (37.64 in)
(EX)	956 mm (37.64 in)
Weight without fuel approx.	
(MC)	102.6 kg (226.19 lb)
(EX)	105.1 kg (231.71 lb)
Maximum permissible front axle load	145 kg (319.7 lb)
Maximum permissible rear axle load	190 kg (418.9 lb)
Maximum permissible total weight	335 kg (738.5 lb)

21.2.2 Technical data - tires

Off-road tire pressure	
front	1.0 bar (14.5 psi)

rear	1.0 bar (14.5 psi)

Validity	Tire front	Rear tire
(MC)	**80/100 - 21 51M TT** MAXXIS MAXXCROSS MX-ST	**110/90 - 19 62M TT** MAXXIS MAXXCROSS MX-ST
(EX)	**80/100 - 21 51M TT** Dunlop GEOMAX MX33F	**110/100 - 18 64M TT** Dunlop GEOMAX AT81
The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.		

21.2.3 Capacities - vehicle

Total fuel tank capacity, approx.	
Super unleaded (ROZ 95) (p. 148)	**(MC)** 7.9 l (2.09 liq. gal_{US})
	(EX) 9.0 l (2.38 liq. gal_{US})
Fuel tank reserve approx.	
Super unleaded (ROZ 95) (p. 148)	**(EX)** 1.5 l (0.40 liq. gal_{US})

21.3 Electrics

21.3.1 Battery

12-V battery	HJTZ5S-FP-C	Lithium-ion battery Battery voltage: 12 V Nominal capacity: 2.0 Ah Maintenance-free

21.3.2 Fuses

Fuse	58011109110	10 A
Fuse	58011109105	5 A

21.3.3 Lamps

Dashboard illumination and indicator lights	LED

21.4 Fork

21.4.1 Technical data - fork (MC)

Fork part number	A460C107Y406000

Fork	**WP XACT AER**
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Air pressure	10.4 bar (150.8 psi)
Fork length	950 mm (37.40 in)

21.4.2 Capacities - fork (MC)

Oil capacity, right outer assembly	
Fork oil (48601166S1) (SAE 4) (p. 149)	240^{+10}_{-50} ml ($8.12^{+0.34}_{-1.69}$ fl. oz_{US})
Oil capacity, left outer assembly	
Fork oil (48601166S1) (SAE 4) (p. 149)	240^{+10}_{-50} ml ($8.12^{+0.34}_{-1.69}$ fl. oz_{US})
Oil capacity, right cartridge	
Fork oil (48601166S1) (SAE 4) (p. 149)	380 ml (12.85 fl. oz_{US})
Grease capacity, left cartridge	
Special grease (00062010053) (p. 150)	5 g (0.18 oz)

21.4.3 Technical data - fork (EX)

Fork part number	A590C179Y402000

Fork	**WP XACT**
Compression damping	
Comfort	17 clicks
Standard	12 clicks
Sport	7 clicks
Rebound damping	
Comfort	23 clicks
Standard	18 clicks
Sport	13 clicks

Spring length with preload spacer(s)	478 mm (18.82 in)
Spring rate	
Rider's weight: 65 kg … 75 kg (143.3 lb … 165.3 lb)	46 N/mm (262.7 lb_f/in)
Rider's weight: 75 kg … 85 kg (165.3 lb … 187.4 lb)	48 N/mm (274.1 lb_f/in)
Rider's weight: 85 kg … 95 kg (187.4 lb … 209.4 lb)	50 N/mm (285.5 lb_f/in)
Fork length	940 mm (37.01 in)

21.4.4 Capacities - fork (EX)

Oil capacity, outer assembly	
Fork oil (48601166S1) (SAE 4) (p. 149)	390 ml (13.19 fl. oz_{US})
Oil capacity, cartridge	
Fork oil (48601166S1) (SAE 4) (p. 149)	175 ml (5.92 fl. oz_{US})

21.5 Shock absorber

21.5.1 Technical data - shock absorber (MC)

Shock absorber part number	A460C407Y408000

Shock absorber	**WP XACT LDS**
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
High-speed compression damping	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Preload	8 mm (0.31 in)
Spring rate	
Weight of rider: 65 kg … 75 kg (143.3 lb … 165.3 lb)	42 N/mm (239.8 lb_f/in)

Weight of rider: 75 kg … 85 kg (165.3 lb … 187.4 lb)	45 N/mm (257.0 lb_f/in)
Weight of rider: 85 kg … 95 kg (187.4 lb … 209.4 lb)	48 N/mm (274.1 lb_f/in)
Spring length	240 mm (9.45 in)
Gas assisted	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Rider sag	105 mm (4.13 in)
Installation position	456.3 mm (17.965 in)

21.5.2 Capacities - shock absorber

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5) (p. 150)	Fill to the maximum mark

21.5.3 Technical data - shock absorber (EX)

Shock absorber part number	A460C479Y408000

Shock absorber	**WP XACT LDS**
Low-speed compression damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
High-speed compression damping	
Comfort	2 turns (720°)
Standard	1.5 turns (540°)
Sport	1 turn (360°)
Rebound damping	
Comfort	17 clicks
Standard	15 clicks
Sport	13 clicks
Preload	8 mm (0.31 in)
Spring rate	
Weight of rider: 65 kg … 75 kg (143.3 lb … 165.3 lb)	42 N/mm (239.8 lb_f/in)
Weight of rider: 75 kg … 85 kg (165.3 lb … 187.4 lb)	45 N/mm (257.0 lb_f/in)
Weight of rider: 85 kg … 95 kg (187.4 lb … 209.4 lb)	48 N/mm (274.1 lb_f/in)

Spring length	240 mm (9.45 in)
Gas assisted	10 bar (145 psi)
Static sag	35 mm (1.38 in)
Rider sag	105 mm (4.13 in)
Installation position	456.3 mm (17.965 in)

21.5.4 Capacities - shock absorber (EX)

Oil capacity, shock absorber	
Shock absorber oil (50180751S1) (SAE 2.5) (p. 150)	Fill to the maximum mark

21.6 Tightening torque

21.6.1 engine tightening torques

Oil nozzle for main bearing lubrication	M4	2 Nm (1.5 ft·lb$_f$) **Loctite® 243**
Oil nozzle for clutch lubrication	M4	2 Nm (1.5 ft·lb$_f$) **Loctite® 243**
Screw, oil nozzle bent for piston cooling	M4	2.5 Nm (1.84 ft·lb$_f$) **Loctite® 243**
Jet, crank chamber ventilation	M4	2 Nm (1.5 ft·lb$_f$) **Loctite® 243**
Hose clip, intake flange	M4	3 Nm (2.2 ft·lb$_f$)
Detent arm screw	M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Screw, gear position sensor	M5	5 Nm (3.7 ft·lb$_f$) **Loctite® 243**
Screw, clutch spring	M5	6 Nm (4.4 ft·lb$_f$)
Suction/pressure pump oil pump cover screw	M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Oil pump idler gear fuse screw	M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**

Oil nozzle for piston cooling M5	2 Nm (1.5 ft·lb$_f$) **Loctite® 243**
Screw, bearing retainer M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Stator screw M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 2701**
Alternator cover grub screw M5	2 Nm (1.5 ft·lb$_f$) **Loctite® 243**
Shift star screw M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Exhaust flange screw M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, guide rail M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, timing chain failure protection M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, starter motor M6	10 Nm (7.4 ft·lb$_f$)
Screw, outer clutch cover M6	10 Nm (7.4 ft·lb$_f$)
Screw, inner clutch cover M6	10 Nm (7.4 ft·lb$_f$)
Screw, clutch slave cylinder M6	10 Nm (7.4 ft·lb$_f$)
Screw, engine case M6	10 Nm (7.4 ft·lb$_f$)
Screw, oil filter cover M6	10 Nm (7.4 ft·lb$_f$)
Screw, shift lever M6	14 Nm (10.3 ft·lb$_f$) **Loctite® 243**
Screw, starter motor - intermediate gear M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, valve cover M6	8 Nm (5.9 ft·lb$_f$)
Stud, cylinder head M6	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Nut, cylinder head M6	10 Nm (7.4 ft·lb$_f$)

Screw, water pump cover M6		10 Nm (7.4 ft·lb$_f$)
Nut, water pump impeller M6		6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Screw, ignition cover M6		10 Nm (7.4 ft·lb$_f$)
Screw, auto decompression M7×1		15 Nm (11.1 ft·lb$_f$) **Loctite® 243**
Screw, camshaft bearing bridge M7×1 Engine oil	1.	5 Nm (3.7 ft·lb$_f$)
	2.	14 Nm (10.3 ft·lb$_f$)
Slide rail screw M8		15 Nm (11.1 ft·lb$_f$) **Loctite® 243**
Crankshaft clamp screw plug M8		10 Nm (7.4 ft·lb$_f$)
Crankshaft fixing screw M8		8 Nm (5.9 ft·lb$_f$)
Screw plug, cam lever shaft M10×1		10 Nm (7.4 ft·lb$_f$)
Front sprocket screw M10		60 Nm (44.3 ft·lb$_f$) **Loctite® 243**
Chain tension adjuster finger follower shaft plug M10×1		8 Nm (5.9 ft·lb$_f$)
Screw, rotor M10×1		70 Nm (51.6 ft·lb$_f$) Engine oil
Coolant temperature sensor M10×1.25		12 Nm (8.9 ft·lb$_f$)
Oil channel screw plug M10×1		15 Nm (11.1 ft·lb$_f$) **Loctite® 243**
Stud, cylinder head M10×1.25		20 Nm (14.8 ft·lb$_f$) **Loctite® 243**
Nut, cylinder head M10×1.25 Engine oil	1.	10 Nm (7.4 ft·lb$_f$)
	2.	30 Nm (22.1 ft·lb$_f$)
	3.	180° (3.14 rad)
Spark plug M10×1		12 Nm (8.9 ft·lb$_f$)
Oil drain plug with magnet M12×1.5		20 Nm (14.8 ft·lb$_f$)

Pressure control valve plug M12×1.5	20 Nm (14.8 ft·lb$_f$)
Oil drain plug M14×1.5	15 Nm (11.1 ft·lb$_f$)
Nut, inner clutch hub M18×1.5	100 Nm (73.8 ft·lb$_f$)
Nut, primary gear wheel M18LH×1.5	120 Nm (88.5 ft·lb$_f$) **Loctite® 243**
Plug, oil screen M20×1.5	15 Nm (11.1 ft·lb$_f$)
Screw plug, timing chain tensioner M24×1.5	40 Nm (29.5 ft·lb$_f$)
Oil plug M24×3	hand-tight
Screw plug, alternator cover M24×1.5	18 Nm (13.3 ft·lb$_f$) **Loctite® 243**

21.6.2 Chassis tightening torques

Screw, hose clamp M4	2.4 Nm (1.77 ft·lb$_f$)
Screw, fixed grip M4	5 Nm (3.7 ft·lb$_f$) **Loctite® 243**
Screw, hose clamp, throttle body M4	2.8 Nm (2.07 ft·lb$_f$)
Screw, throttle body cover M5	2.6 Nm (1.92 ft·lb$_f$)
Remaining nuts on chassis M5	5 Nm (3.7 ft·lb$_f$)
Remaining screws on chassis M5	5 Nm (3.7 ft·lb$_f$)
Screw, shock absorber adjusting ring M5	5 Nm (3.7 ft·lb$_f$)
Screw, battery terminal M5	2.5 Nm (1.84 ft·lb$_f$)
Screw, frame protector M5	3 Nm (2.2 ft·lb$_f$)
Screws on muffler M5	7 Nm (5.2 ft·lb$_f$)
Screw, brake pedal stub M5	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Nut, throttle cable on throttle body M6	3 Nm (2.2 ft·lb$_f$)
Fender screw M6	12 Nm (8.9 ft·lb$_f$)

Screw, fuel tank spoiler on radiator M6	6 Nm (4.4 ft·lb$_f$)
Screw, battery holding bracket M6	6 Nm (4.4 ft·lb$_f$)
Screw, starter cable to starter relay M6	6 Nm (4.4 ft·lb$_f$)
Screw, chain guide on swingarm, rear M6×16	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, hand lever M6	5 Nm (3.7 ft·lb$_f$)
Nut, starter cable on starter motor M6	4 Nm (3.0 ft·lb$_f$)
Remaining nuts on chassis M6	10 Nm (7.4 ft·lb$_f$)
Remaining screws on chassis M6	10 Nm (7.4 ft·lb$_f$)
Screw, rear brake disc M6	14 Nm (10.3 ft·lb$_f$) **Loctite® 243**
Screw, front brake disc M6	14 Nm (10.3 ft·lb$_f$) **Loctite® 243**
Screw, push rod ball joint on the rear brake cylinder M6	10 Nm (7.4 ft·lb$_f$) **Loctite® 243**
Screw, throttle twist grip M6	5 Nm (3.7 ft·lb$_f$)
Screw, chain sliding guard on link fork M6	6 Nm (4.4 ft·lb$_f$) **Loctite® 243**
Screw, chain guide on swingarm, front M6×45	10 Nm (7.4 ft·lb$_f$)
Screw, ground wire on frame M6	10 Nm (7.4 ft·lb$_f$)
Screw, seat installation M6	8 Nm (5.9 ft·lb$_f$)
Brake line guide screw on swingarm M6	4.5 Nm (3.32 ft·lb$_f$)
Screw, connector support incl. dashboard M6	5 Nm (3.7 ft·lb$_f$)
Screw, front sprocket cover M8	15 Nm (11.1 ft·lb$_f$)
Nut, brake pedal stop M8	20 Nm (14.8 ft·lb$_f$)
Nut, rear sprocket screw M8	35 Nm (25.8 ft·lb$_f$) **Loctite® 2701**

Nut, rim lock M8	12 Nm (8.9 ft·lb$_f$)
Remaining nuts on chassis M8	25 Nm (18.4 ft·lb$_f$)
Remaining screws on chassis M8	25 Nm (18.4 ft·lb$_f$)
Screw, front brake caliper M8	25 Nm (18.4 ft·lb$_f$) **Loctite® 243**
Screw, fork shoe M8	15 Nm (11.1 ft·lb$_f$)
Screw, upper steering stem M8	20 Nm (14.8 ft·lb$_f$) **Loctite® 243**
Handlebar clamp screw M8	20 Nm (14.8 ft·lb$_f$)
Subframe screw M8	35 Nm (25.8 ft·lb$_f$) **Loctite® 2701**
Screw, chain slider M8	15 Nm (11.1 ft·lb$_f$)
(EX) Screw, side stand bracket M8	33 Nm (24.3 ft·lb$_f$) **Loctite® 2701**
Screw, manifold on engine brace M8	15 Nm (11.1 ft·lb$_f$)
Screw, subframe, bottom M8	30 Nm (22.1 ft·lb$_f$) **Loctite® 2701**
Bushing, foot brake lever M10	45 Nm (33.2 ft·lb$_f$)
Engine bracket screw M10	60 Nm (44.3 ft·lb$_f$)
Remaining nuts on chassis M10	45 Nm (33.2 ft·lb$_f$)
Remaining screws on chassis M10	45 Nm (33.2 ft·lb$_f$)
Top shock absorber screw M10	60 Nm (44.3 ft·lb$_f$) **Loctite® 2701**
Bottom shock absorber screw M10	60 Nm (44.3 ft·lb$_f$) **Loctite® 2701**
Screw, handlebar mount M10	40 Nm (29.5 ft·lb$_f$) **Loctite® 243**
Nut, frame on linkage lever M14×1.5	60 Nm (44.3 ft·lb$_f$)

Nut, linkage lever on angle lever M14×1.5	60 Nm (44.3 ft·lb$_f$)
Nut, angle lever to link fork M14×1.5	60 Nm (44.3 ft·lb$_f$)
Nut, swingarm pivot M16×1.5	100 Nm (73.8 ft·lb$_f$)
Screw, wheel spindle, front M20×1.5	35 Nm (25.8 ft·lb$_f$)
Screw, top steering head M20×1.5	12 Nm (8.9 ft·lb$_f$)
Nut, wheel spindle, rear M22×1.5	80 Nm (59.0 ft·lb$_f$)
Screw-in nozzle, cooling system M24×1.5	7.5 Nm (5.53 ft·lb$_f$)
Spoke nipple, rear wheel M4,5	6 Nm (4.4 ft·lb$_f$)
Spoke nipple, front wheel M4,5	6 Nm (4.4 ft·lb$_f$)
Combination switch screw **EJOT PT®** – K50×18	2 Nm (1.5 ft·lb$_f$)
Screw, intake air temperature sensor **EJOT PT®** – K50×18	0.7 Nm (0.52 ft·lb$_f$)
Screw, start button/kill switch **EJOT PT®** – K50×18	2 Nm (1.5 ft·lb$_f$)
Screw, air filter box cover **EJOT PT®** – K60×20 – Z	5 Nm (3.7 ft·lb$_f$)
Screw, seat installation **EJOT EJOFORM®** – K60×23/18	2.5 Nm (1.84 ft·lb$_f$)
Screw, fuel pump on fuel tank **EJOT PT®** – K60×30 – Z	2.5 Nm (1.84 ft·lb$_f$)
Screw, air filter box, on subframe **EJOT PT®** – K60×20 – AL	5 Nm (3.7 ft·lb$_f$)

A Technical terms

OBD	On-board diagnosis	Vehicle system, which monitors the specified parameters of the vehicle electronics

B Fuels

Super unleaded

Standards

• ROZ 95	→ DIN EN 228

Fuel additive

Recommended supplier

MOTOREX®

- **FUEL STABILIZER**

C resources

Off-road chain spray

Recommended supplier

MOTOREX®

- **CHAINLUBE OFF ROAD**

Fork oil

Order details

- 48601166S1

Standards

- SAE 4 → SAE

Universal oil spray

Recommended supplier

MOTOREX®

- **JOKER 440 SYNTHETIC**

Long-life grease

Recommended supplier

MOTOREX®

- **Bike Grease 2000**

Engine oil

Recommended supplier

MOTOREX®

- **CROSS POWER 4T**

Standards

→ JASO T903 MA2

- 10W/50 → SAE

Properties

- fully synthetic

Engine oil

Recommended supplier

MOTOREX®

- **TOP SPEED 4T**

Standards

→ JASO T903 MA2

- 15W/50 → SAE

Properties

- Partially synthetic

High viscosity grease

Recommended supplier

SKF®

- **LGHB 2**

Silicone spray

Recommended supplier

MOTOREX®

- **SILICONE SPRAY**

Special grease

Order details

- 00062010053

Recommended supplier

Klüber Lubrication®

- **Klüberfood NH1 34-401**

Shock absorber oil

Order details

- 50180751S1

Standards

- SAE 2.5 → SAE

Oil for foam air filter

Recommended supplier

MOTOREX®

- **RACING BIO AIR FILTER OIL**

Brake fluid DOT 4 / DOT 5.1

Recommended supplier

Castrol

- **REACT PERFORMANCE DOT 4**

MOTOREX®

- **BRAKE FLUID DOT 5.1**

Standards
→ DOT

Coolant

Recommended supplier	
MOTOREX®	
• **COOLANT M3.0**	
Properties	
• Antifreeze protection to at least	−25 °C (−13.0 °F)

D Cleaning agents

Chain cleaner

Recommended supplier

MOTOREX®

- **CHAIN CLEAN**

Preserving materials

Recommended supplier

MOTOREX®

- **MOTO PROTECT**

Air filter cleaning agent

Recommended supplier

MOTOREX®

- **RACING BIO AIR FILTER CLEANER**

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors

Recommended supplier

MOTOREX®

- **QUICK CLEANER**

Environmentally neutral universal cleaning agent

Recommended supplier

MOTOREX®

- **MOTO CLEAN UNIVERSAL**

E Icons

E.1 Symbol colors

E.1.1 Yellow and orange symbols

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Failure indicator lamp lights up or flashes red – The **OBD** has detected a malfunction in the vehicle electronics. The malfunction indicator lamp also lights up if traction control is activated and the speed limiter intervenes.

1

12 V battery
- charging . . . 107
- installation . . . 106
- removing . . . 105

A

Air filter
- cleaning . . . 70
- installing . . . 71
- removing . . . 70

Air filter box
- cleaning . . . 70

Air filter box cover
- installing . . . 68
- preparing for securing . . . 69
- removing . . . 67

Auxiliary substances . . . 11

B

Brake discs
- checking . . . 87

Brake fluid
- adding front brake . . . 89
- adding to rear brake . . . 95

Brake fluid level
- checking on front brake . . . 88
- checking on rear brake . . . 94

Brake lining retainers
- checking on front brake . . . 90
- checking on rear brake . . . 96

Brake pad
- checking on front brake . . . 90

Brake pads
- changing on the rear brake . . . 96
- checking on rear brake . . . 96
- of the front brake, changing . . . 90

Brake pedal
- adjusting the basic position . . . 93
- checking the free travel . . . 93

C

Capacities
- vehicle . . . 136

Chain
- checking . . . 79
- cleaning . . . 77

Chain guide
- checking . . . 79

Chain tension
- adjusting . . . 78
- checking . . . 78

Characteristic map of the throttle response
- adjusting . . . 117

Checking basic chassis setting with
- rider's weight . . . 37

Clutch
- changing fluid . . . 85
- checking/correcting fluid level . . . 84

Clutch lever
- adjusting the basic position . . . 84

Compression damping
- adjusting the fork . . . 45

Coolant
- antifreeze and coolant level, checking . . . 111
- draining . . . 113
- level, checking . . . 112
- refilling . . . 113

Customer service . . . 11

D

Defined use . . . 10

Difficult operating conditions . . . 25
- dry sand . . . 25
- high temperatures . . . 27
- low temperature . . . 27
- muddy surfaces . . . 26
- slow speed . . . 27
- snow . . . 27
- wet sand . . . 26
- wet surfaces . . . 26

E

Engine
- running in . . . 24

Engine number . . . 14

engine oil
- adding . . . 126
- changing . . . 123

Engine oil level
- checking . . . 123

Environment . . . 10

F

Figures . . . 11

Fork legs
- adjusting the air pressure . . . 44
- adjusting the rebound damping . . . 46
- bleeding . . . 52
- checking basic setting . . . 44
- cleaning the dust boots . . . 53
- compression damping, adjusting . . . 45
- installing . . . 55
- removing . . . 55

Fork protector
- installation . . . 54

removing 53
Frame
checking 82
Frame label 14
Frame protector
installation 54
removing 54
Front fender
installation 62
removing 61
Front sprocket
checking 79
Front wheel
installing 100
removing 99
Frost protection
checking 111
Fuel screen
changing 122
Fuel tank
installation 75
removing 73
Fuel tank cap
closing 19
opening 18
Fuse
changing the main fuse 108
of the fuel pump, changing 109

G

GASGAS Technical Accessories 11
Gear shift lever
adjusting the basic position 120
checking the basic position 120

H

Handbrake lever
adjusting the basic position 87
checking the free travel 87
Handlebar position
adjusting 48
High-speed compression damping
adjusting the shock absorber 38

I

Idle speed
adjusting 119
Implied warranty 11
Improper use 10
Intended use 10

L

Lower triple clamp
installation 57
removing 56
Low-speed compression damping
adjusting the shock absorber 38

M

Main fuse
changing 108
Manufacturer's warranty 11
Motorcycle
cleaning 127
raising with lift stand 51
removing from lift stand 51
Muffler
changing the glass fiber filling 72
installation 72
removing 72

N

Number plate
installation 61
removing 61

O

Oil filter
changing 123
Oil screens
cleaning 123
Owner's manual 10

P

Preparing for use
after storage 130
checks and maintenance measures when preparing for use 28
notes on preparing for first use 23
Protective clothing 9

R

Rear sprocket
checking 79
Rear wheel
installation 101
removing 100
Rebound damping
adjusting the fork 46
adjusting the shock absorber 39
Refueling
fuel 32
Resources 11

Rider sag
adjusting 43
Rubber grips
checking 83

S

Safe use 8
Seat
mounting 66
removing 65
Service 11
Shock absorber
adjusting the high-speed compression damping 38
adjusting the low-speed compression damping 38
adjusting the rebound damping 39
adjusting the spring preload 42
checking static sag 41
checking the rider sag 41
installation 63
removing 62
Side panel right
installation 67
removing 66
Spare parts 11
Spoke tension
checking 104
Starting 28
Steering head bearing
lubricating 60
Steering head bearing play
adjusting 60
checking 59
Storage 129
Swingarm
checking 82

T

Tampering 8
Throttle cable play
adjusting 116
checking 116
Throttle cable routing
checking 82
Throttle valve position
programming 119
Tire condition
checking 102
Tire pressure
checking 103
Transportation 31

V

Vehicle identification number 14
VIN 14

W

Work rules 9

3215222en

25/02/2025



GASGAS

Stallhofnerstraße 3 / 5230 Mattighofen / Austria / https://www.gasgas.com/