OWNER'S MANUAL 2025





DEAR HUSQVARNA MOTORCYCLES CUSTOMER

Congratulations on your decision to purchase a Husqvarna motorcycle. You are now the owner of a state-ofthe-art sports vehicle that will continue to give you and your child pleasure for a long time if you maintain it properly.

We hope your child has many safe and enjoyable rides!

Enter the serial numbers of your vehicle below.

Vehicle identification number (p. 13)	Dealer's stamp
Motor number (🕮 p. 13)	

CAUTION - Read through this owner's manual carefully, always exercise caution when using the vehicle, and contact an authorized Husqvarna Motorcycles workshop if you have any questions.

This Owner's Manual serves as a technical instruction manual, explains important safety matters, and provides an overview of the main functions. This Owner's Manual is only intended for personal use. This Owner's Manual is not intended for commercial use.

The Owner's Manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from figures and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2024 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV SÜD Management Service GmbH

Husqvarna Motorcycles GmbH Stallhofnerstraße 3 5230 Mattighofen, Austria

This document is valid for the following models:

EE 2 (F3001Y8, F3075Y8)



TABLE OF CONTENTS

1	MEAN	IS OF REPRESENTATION	4		7.2	Riding mode indicator	
	1.1	Symbols used	4		7.3	Charging level indicator	17
	1.2	Formats used		8	PREP/	ARING FOR USE	18
2	SAFE	TY ADVICE	5		8.1	Advice on preparing for first use	18
	2.1	Use definition – intended use	5	9	RIDIN	G INSTRUCTIONS	20
	2.2	Misuse	5		9.1	Checks and maintenance measures	
	2.3	Notes/warnings			• • • • • • • • • • • • • • • • • • • •	when preparing for use	20
	2.4	Grades of risks	5		9.2	Starting the vehicle	20
	2.5	Tampering warning	6		9.3	Changing the riding mode	21
	2.6	Safe operation			9.4	Starting off	21
	2.7	Fall or accident	7		9.5	Braking	21
	2.8	Protective clothing	7		9.6	Stop, park	22
	2.9	Work on vehicle, engine, and rechargeable lithium-ion battery	7		9.7	Transporting	
	2.10	Environment		10	SERVI	CE SCHEDULE	24
	2.11	Owner's Manual			10.1	Additional information	24
	2.12	Fire hazard			10.1 10.2	Service schedule	
_							
3	IMPO	RTANT NOTES		11	SUSPI	ENSION SETTING	25
	3.1	Labels	9		11.1	Checking the basic chassis setting	
	3.2	Manufacturer warranty, implied	_			with the rider's weight	25
	0.0	warranty			11.2	Adjusting the spring preload of the	
	3.3	Fuel, auxiliary substances				shock absorber	
	3.4	Spare parts, accessories			11.3	Adjusting the handlebar position 4	26
	3.5 3.6	Service Figures		12	SEAT	HEIGHT	27
	3.7	Customer service			12.1	Seat height adjustment options	27
	3.8	Power supply			12.2	Adjusting the seat height on the	21
	3.9	Operation at low temperatures			12.2	shock absorber	27
4		OF VEHICLE			12.3	Adjusting the seat height on the fork	
					12.4	Adjusting the footrest bracket on	20
	4.1	View of vehicle, front right	44		12.4	the frame	29
	4.2	(example)	11				
	4.2	View of vehicle, rear right (example)	12	13	SERVI	CE WORK ON THE CHASSIS	30
5	SERIA	AL NUMBERS			13.1	Raising the motorcycle with a lift stand	30
	5.1	Vehicle identification number	10		13.2	Removing the motorcycle from the	00
	5.1	Frame label				lift stand	30
	5.2 5.3	Motor number			13.3	Removing the fork legs 4	30
	5.5	Wotor Humber	13		13.4	Installing the fork legs 4	31
6	CONT	ROLS	14		13.5	Removing the lower triple clamp 4	32
	6.1	Front brake lever	14		13.6	Installing the lower triple clamp 4	33
	6.2	Throttle grip			13.7	Checking the steering head bearing	
	6.3	Rear brake lever				play	34
	6.4	On/Off button			13.8	Adjusting the steering head bearing	
	6.5	Magnetic switch on handlebar				play 4	35
	6.6	Plug-in stand			13.9	Lubricating the steering head	20
7		IFUNCTIONAL ELEMENT			13.10	bearing Removing the fender with the start	
	7.1	Multifunctional element	16			number plate	36
	1.1	muninunununai elenient	10				

TABLE OF CONTENTS

	13.11	Installing the fender with the start number plate
	13.12	Removing the left side cover
	13.13	Installing the left side cover
	13.14	Removing the right side cover 38
	13.15	Installing the right side cover
	13.16	Removing the shock absorber 4 39
	13.17	Installing the shock absorber ⁴ 40
	13.18	Checking the rubber buffer and
		pivot points of the shock absorber 41
	13.19	Removing the seat 41
	13.20	Mounting the seat 41
	13.21	Checking the frame 4 42
	13.22	Checking the link fork 4 42
	13.23	Checking the rubber grip 42
14	BRAKE	SYSTEM 43
	14.1	Checking the play of the front brake
		lever
	14.2	Adjusting the basic position of the
		hand brake lever43
	14.3	Checking the brake discs 43
	14.4	Checking the front brake fluid level 44
	14.5	Adding front brake fluid 4 45
	14.6	Checking that the brake linings of
		the front brake are secured 46
	14.7	Changing the front brake linings 4 47
	14.8	Checking the play of the rear brake lever
	14.9	Adjusting the basic position of the
		rear brake lever 4 50
	14.10	Checking the rear brake fluid level 50
	14.11	Adding rear brake fluid 4 51
	14.12	Checking the brake linings and the
		brake lining retainers of the rear
	4440	brake
	14.13	Changing the rear brake linings ⁴ 53
15	WHEE	LS, TIRES 56
	15.1	Removing the front wheel 4 56
	15.2	Installing the front wheel 4 56
	15.3	Removing the rear wheel 4 57
	15.4	Installing the rear wheel 4 58
	15.5	Checking the tire condition 60
	15.6	Checking tire pressure 61
16		ACTION BATTERY, BATTERY GER
	16.1	Positioning the battery charger 62
	16.2	Removing the LV traction battery 63
	16.3	Installing the LV traction battery 64
	16.4	Charging the LV traction battery 64

17	CLEANING, CARE		
	17.1	Cleaning the motorcycle	66
18	STORA	GE	67
	18.1 18.2 18.3	Storing the vehicle Storing the LV traction battery Preparing for use after storage	67
19	BLINK	CODE	69
	19.1	Blink code	69
20	TECHN	IICAL SPECIFICATIONS	70
	20.1 20.2 20.3 20.4 20.5 20.6 20.7	Engine	70 71 71 71 71
21	SUBST	ANCES	74
22	AUXILIARY SUBSTANCES 75		
23	LIST OF ABBREVIATIONS 76		
IND	ΞX		79

1 MEANS OF REPRESENTATION

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g., of a work step or a function).



Indicates an unexpected reaction (e.g., of a work step or a function).



Indicates work that requires expert knowledge and technical understanding. In the interest of the safety of your child, have these jobs performed in an authorized Husqvarna Motorcycles workshop. Your motorcycle will be cared for there to the highest degree by specially trained experts using the special tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates the end of an activity, including potential reworking.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name Indicates a proprietary name.

Name® Indicates a protected name.

Brand™ Indicates a brand available on the open market.

Underlined terms Refer to technical details of the vehicle or indicate technical terms, which

are explained in the glossary.

2.1 Use definition – intended use

This vehicle is designed and constructed to withstand the stresses and strains of recreational use if the maximum rider weight is not exceeded.

This vehicle is designed to introduce the younger generation to offroad sport.



Info

Only operate this vehicle in closed-off areas remote from public road traffic.

Only use the lithium-ion battery while it is inside the vehicle.

CAUTION

 To make the first experience with offroad sport as safe and fun as possible, we recommend taking a riding techniques course.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Notes/warnings

Pay close attention to the notes/warnings.



Info

Various information and warning labels are affixed to the vehicle. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Grades of risks



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Identifies a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Tampering warning

No mechanical, electrical or electronic modifications may be made to the vehicle, since safe operation cannot be guaranteed otherwise.

Examples of inadmissible manipulation and modifications:

- 1 Opening the rechargeable lithium-ion battery (LV traction battery) or the engine.
- 2 Using the vehicle or the rechargeable lithium-ion battery when proper maintenance has not been performed.
- 3 Using the vehicle or the rechargeable lithium-ion battery outside of its defined use.
- 4 Using a damaged lithium-ion battery.

2.6 Safe operation



Warning

Danger of accidents A lack of physical and mental readiness on the part of the child poses a major risk.

Children often underestimate or fail to recognize dangerous situations.

- Your child must already be able to ride a bicycle.
- Your child must be able to put the vehicle upright independently after a fall.
- Your child must understand that rules and instructions given by you or another guardian must be followed.
- Make it clear to your child that they should not, under any circumstances, operate the vehicle without the supervision of an adult.
- Make sure that the riding mode is appropriate for your child's riding ability and for the riding conditions.
- Do not ask too much of your child.
 - Observe their stamina, their riding technique and how motivated they are. Have your child complete a training course.
- Only allow your child to drive the vehicle if your child is both physically and mentally ready and can reach all controls safely.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the engine, lithium-ion battery, damper, or brake system before these vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

This vehicle is a low-voltage electric motorcycle. For this reason, follow the safety and care instructions that apply when using an electric motor.

When the throttle grip is closed, the vehicle continues rolling without significant deceleration. The vehicle speed decreases on account of rolling resistance and air resistance.

Because this vehicle does not have a manual transmission, there is no clutch.

As with a conventional drive with a combustion engine, the operating temperature rises according to use and depending on the ambient temperature and the cleanliness of the cooling surfaces. If the temperature of the motor, the lithium-ion battery, or the electronics rises above the permissible operating temperature, the power of the vehicle will be reduced considerably. This protects the system against damage from overheating. When all components have returned to their normal operating temperature, full system power is restored after restarting.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Note and explain the information and warning labels affixed to the vehicle (see description in the next section).

2.7 Fall or accident

If the vehicle is lying on its side, it switches from ready mode to standby mode. To return the vehicle to ready mode, place the vehicle in the upright position and close the throttle grip beyond the basic position.

After a fall or accident, check the vehicle as usual when preparing for use.

2.8 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Ensure your child wears appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Alway use protective clothing for your child that is in good condition and meets the legal requirements.
- When you ride a motorcycle, set an example for your child and wear suitable protective clothing.

2.9 Work on vehicle, engine, and rechargeable lithium-ion battery



Warning

Risk of injury There is a risk of electric shock when working on live components.

Work on live components requires special training, qualifications, and tools.

- Have all work that is not described and explained performed by trained Husqvarna Motorcycles mechanics only.
- Do not open the electric engine or the lithium-ion battery (LV traction battery).



Warning

Risk of injury The vehicle runs quietly, even when it is ready to operate.

The vehicle starts moving in an uncontrolled manner if the throttle grip is accidentally touched while work is being performed on the vehicle.

- Ensure that the vehicle is switched off with the On/Off button and remains switched off before starting any work on the vehicle.
- Remove the LV traction battery from the vehicle and the magnetic switch from the holder before starting any work on the vehicle.
- Secure the vehicle against access by unauthorized persons while you are performing work on the vehicle.

2.10 Environment

When you respect the rights of others and use your motorcycle legally, you will help protect the future of motorcycle sport and avoid most conflicts and problems.

When disposing of operating and auxiliary fluids or used components, comply with the applicable laws and regulations in your country.

When disposing of the lithium-ion battery (LV traction battery), observe the relevant laws and guidelines of your country.

Your authorized Husqvarna Motorcycles dealer can dispose of the LV traction battery free of charge and in an environmentally compatible manner.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

Electrical devices like the battery charger may not be disposed of with household waste. Electrical devices must be disposed of through the appropriate recycling centers. Contact your municipality or your authorized Husqvarna Motorcycles dealer.

2.11 Owner's Manual

CAUTION

- It is important that you read this Owner's Manual carefully and completely before your child makes thier
 first trip. The Owner's Manual contains useful information and many tips for you and your child on how to
 operate, handle, and service your motorcycle. This is the only way for you to find out how to ideally tune the
 vehicle and how to protect your child from injury.
- Store the Owner's Manual on your terminal device, for example, so that you can read it whenever you need to.
- If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized Husqvarna Motorcycles dealer.
- The Owner's Manual is an important component of the vehicle. If the vehicle is sold, the Owner's Manual must be downloaded again by the new owner.
- The Owner's Manual can be downloaded several times using the QR code or the link on the delivery certificate
- The Owner's Manual is also available for download from your authorized Husqvarna Motorcycles dealer and on the Husqvarna Motorcycles website **husqvarna-motorcycles.com**. A printed copy can also be ordered from your authorized Husqvarna Motorcycles dealer.

2.12 Fire hazard



Warning

Fire hazard Damaged rechargeable lithium-ion batteries present a fire hazard.


Massive mechanical damage may cause an internal cell short circuit and then cause the battery to self-ignite.

 Contact Husqvarna Motorcycles customer service immediately if major damage to the rechargeable lithium-ion battery has occurred.

There is no particular fire hazard for this vehicle when the rechargeable lithium-ion battery (LV traction battery) is intact.

However, should the vehicle catch fire, inform the fire department responsible that an electric vehicle with a rechargeable lithium-ion battery is on fire.

3.1 Labels

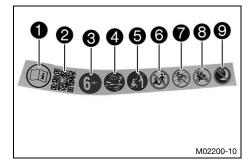



Info

The label described is located on the link fork and must not be removed.

If the sticker is damaged or no longer in this place, contact an authorized Husqvarna Motorcycles workshop. Notes which apply to your child must be explained before riding the motorcycle.

- 1 Read and observe the Owner's Manual
- QR code for the instructions download portal
- Minimum age: 6 years
- Wear protective clothing
- 6 Supervise children
- 6 Do not let children ride unsupervised
- Do not ride on roads
- 8 Do not take passengers
- Do not ride in darkness or twilight

3.2 Manufacturer warranty, implied warranty

The work prescribed in the service schedule must be carried out in an authorized Husqvarna Motorcycles workshop only and confirmed in the electronic proof of service, as otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer warranty.

3.3 Fuel, auxiliary substances

Use the operating and auxiliary substances (such as oils and lubricants) specified in the Owner's Manual.

3.4 Spare parts, accessories

For the safety of your child, only use spare parts and accessory products that are approved and/or recommended by Husqvarna Motorcycles and have them installed by an authorized Husqvarna Motorcycles workshop. Husqvarna Motorcycles accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized Husqvarna Motorcycles dealer will be glad to advise you.

The current **Husqvarna Motorcycles** accessories for your vehicle can be found on the Husqvarna Motorcycles website.

International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.5 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can result in significantly increased wear of components, such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

3.6 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.7 Customer service

Your authorized Husqvarna Motorcycles dealer will be happy to answer any questions you may have regarding your vehicle and Husqvarna Motorcycles.

A list of authorized Husqvarna Motorcycles dealers can be found on the Husqvarna Motorcycles website. International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.8 Power supply

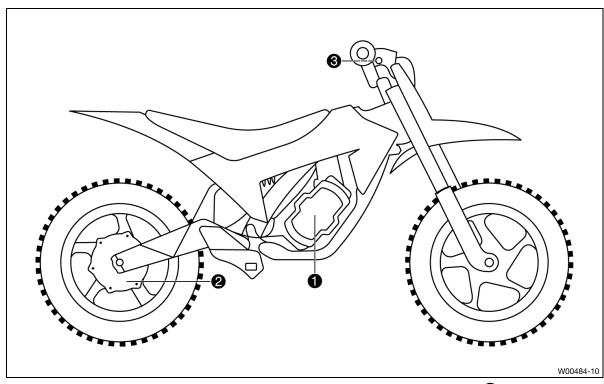

A battery compartment is installed on the vehicle for the rechargeable lithium-ion battery (LV traction battery).

The LV traction battery supplies the electric motor **2** and multifunctional element **3** with voltage. The LV traction battery must be removed from the bracket for charging.

3.9 Operation at low temperatures

In order to protect the LV traction battery, the motor control reduces the power at low component temperatures

The vehicle can continue to be operated. The LV traction battery is not damaged by the reduction in power. The LV traction battery warms up during vehicle operation. If the temperature of the LV traction battery exceeds a threshold value, full vehicle power is restored after the vehicle is restarted.

4.1 View of vehicle, front right (example)




- 1 Front brake lever (p. 14)
- 2 Magnetic switch on handlebar (p. 15)
- Rear brake lever (p. 14)

4.2 View of vehicle, rear right (example)




- Multifunctional element (p. 16)
- 2 Throttle grip (p. 14)
- Wehicle identification number (p. 13)
- 4 Battery compartment

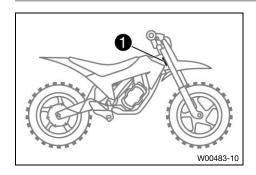


The vehicle identification number **1** is stamped on the right side of the steering head.

5.2 Frame label

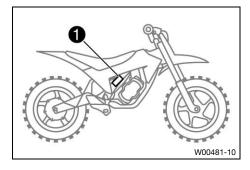


Frame label 1 is attached to the right side of the frame tube in the center.

5.3 Motor number

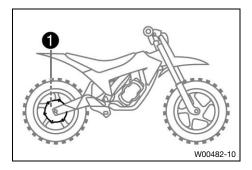


Motor number 1 is located on the left side of the motor.

6.1 Front brake lever

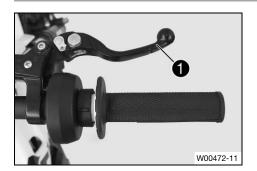

Front brake lever **1** is fitted on the right side of the handlebar. The front brake is engaged using the front brake lever.

6.2 Throttle grip

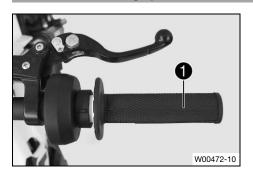


The throttle grip **1** is fitted on the right side of the handlebar. After activation, the vehicle initially does not react to the throttle grip to prevent accidental acceleration.

The throttle grip must be closed beyond the basic position to activate the throttle response.


Only then does the vehicle switch to ready mode.

6.3 Rear brake lever

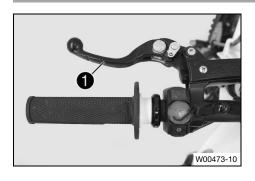

The rear brake lever **1** is fitted on the left side of the handlebar. The rear brake is engaged with the rear brake lever.

6.4 On/Off button

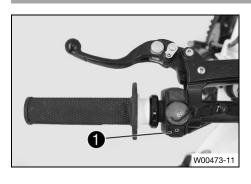

On/Off button 1 is fitted on the left side of the handlebar.




Info

The On/Off button can also be used to change the $\underline{\text{riding mode}}$ (\mathbb{Q} p. 16).

Possible states

- Vehicle switched off In this operating state, the vehicle is deactivated.
- Vehicle in standby mode In this operating state, the vehicle is activated.

6.5 Magnetic switch on handlebar

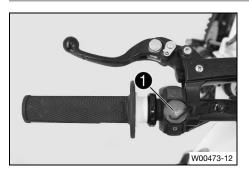

The holder for the red magnetic switch
is located on the left side of the handlebar.

Possible states

- Magnetic switch

 mounted on handlebar When the magnetic switch is mounted on the handlebar, the vehicle can be activated and ridden.
- Magnetic switch

 removed from handlebar When the
 magnetic switch is removed from the handlebar, the vehicle cannot be activated or ridden.




Warning

Risk of injury If the magnetic switch remains in the holder during a fall, the vehicle is not immediately deactivated.

 Make sure that the loop of the magnetic switch is securely attached to the user's protective clothing or wrist so that the magnetic switch is disconnected from the holder in the event of a fall.

If the red magnetic switch on the handlebar is disconnected from the holder, e.g., in the event of a fall, the vehicle is deactivated. By removing the red magnetic switch from the handlebar, the vehicle can be quickly deactivated in any operating state.

6.6 Plug-in stand

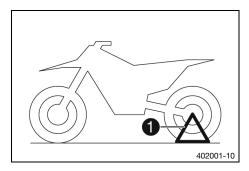

The mounting stand for plug-in stand **1** is located on the link fork on the left side of the vehicle.


The plug-in stand is used to park the motorcycle.



Info

Remove the plug-in stand before riding.

7.1 Multifunctional element

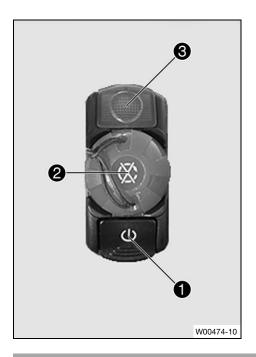


The multifunctional element is fitted on the left side of the handlebar

Overview of multifunctional element

- 1 On/Off button (p. 14)
- 2 Magnetic switch on handlebar (p. 15)
- Riding mode indicator (p. 16)
- Charging level indicator (p. 17)

7.2 Riding mode indicator

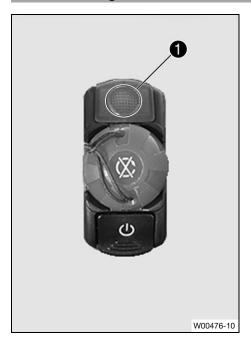

Riding mode indicator **1** is fitted on the left side of the handle-bar


The LED indicates the different riding modes.

Riding mode indicator

White	Riding mode 1
Blue	Riding mode 2
Green	Riding mode 3
Red (flashing)	Charging level low
Red/blue (flashing)	Vehicle is lying on its side

Theoretical maximum speed (unloaded)		
Riding mode 1 7 km/h (4.3 mph)		
Riding mode 2	20 km/h (12.4 mph)	
Riding mode 3	33 km/h (20.5 mph)	

7.3 **Charging level indicator**

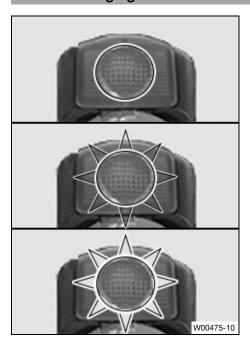

The color of the LED corresponds to the riding mode.

When charging level is minimal, the LED also flashes red alternately.

LED lights up: charging level 100%–50%.

LED flashes slowly: charging level 50%-15%.

LED flashes quickly: charging level 15%-0%.

8.1 Advice on preparing for first use



Warning

Danger of accidents A lack of physical and mental readiness on the part of the child poses a major risk.

Children often underestimate or fail to recognize dangerous situations.

- Your child must already be able to ride a bicycle.
- Your child must be able to put the vehicle upright independently after a fall.
- Your child must understand that rules and instructions given by you or another guardian must be followed.
- Make it clear to your child that they should not, under any circumstances, operate the vehicle without the supervision of an adult.
- Make sure that the riding mode is appropriate for your child's riding ability and for the riding conditions.
- Do not ask too much of your child.
 - Observe their stamina, their riding technique and how motivated they are. Have your child complete a training course.
- Only allow your child to drive the vehicle if your child is both physically and mentally ready and can reach all controls safely.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Ensure your child wears appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Alway use protective clothing for your child that is in good condition and meets the legal requirements
- When you ride a motorcycle, set an example for your child and wear suitable protective clothing.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents The vehicle is not designed to carry passengers.

- Make it clear to your child that he or she must not carry a passenger.



Warning

Danger of accidents The brake system fails in the event of overheating.

If the hand brake lever is not released, the brake linings grind continuously.

Make sure your child only has their hands on the hand brake levers when they want to brake.



Warning

Danger of accidents The suspension components will become damaged or destroyed if overloaded.

- Do not exceed the maximum permissible weight of the rider.



Warning

Risk of injury The vehicle runs quietly, even when it is ready to operate.

The vehicle starts moving in an uncontrolled manner if the throttle grip is accidentally touched while work is being performed on the vehicle.

- Ensure that the vehicle is switched off with the On/Off button and remains switched off before starting any work on the vehicle.
- Remove the LV traction battery from the vehicle and the magnetic switch from the holder before starting any work on the vehicle.
- Secure the vehicle against access by unauthorized persons while you are performing work on the vehicle.
- Ensure that the pre-sale inspection work has been carried out by an authorized Husqvarna Motorcycles workshop.
 - ✓ The delivery certificate is transferred upon vehicle handover.
- To prevent your child getting injured, it is extremely important that they complete a training course before using the vehicle.
- Read through the entire Owner's Manual together with your child before riding for the first time.



Info

Pay special attention to the safety instructions and to the risk of injury.

Explain to your child the techniques of riding and falling, e.g., how shifting weight can influence handling characteristics.

- Always pull the magnet off the handlebar to prevent unauthorized use of the vehicle.
- Familiarize your child with the controls.
- Adjust the basic position of the front brake lever. (p. 43)
- Before using the vehicle for the first time, ensure that the basic settings of the chassis are suitable for the weight of your child.
- Allow your child to become accustomed to the handling of the motorcycle on suitable terrain, preferably on a large, open field.



Info

To give your child a feeling for the brake system, start by pushing your child. Do not start the motor until your child is able to apply the necessary front brake pressure.

Your child should begin by riding to another person, who can help your child stop and turn.

- Erect obstacles for your child to navigate around so that your child becomes accustomed to handling the vehicle.
- Your child should also try to ride as slowly as possible and in a standing position to get a better feeling for the motorcycle.
- Do not let your child ride on terrain that exceeds your child's capabilities and experience.
- Your child should hold the handlebar firmly with both hands and keep their feet on the footrests when riding.
- Make sure the maximum permissible weight of the rider is not exceeded.

Guideline

Maximum rider weight	35 kg (77 lb.)
Maximum rider size	130 cm (51.2 in)

4

9.1 Checks and maintenance measures when preparing for use


i

Info

Before every trip, check the condition of the vehicle and ensure that it is safe to operate.


The vehicle must be in perfect technical condition when it is being operated.

If the vehicle was lying on its side, check both hand brake levers move easily and have firm pressure points.

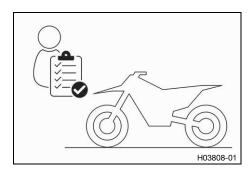

- Check the throttle grip, magnetic switch, LV traction battery, multifunctional element, and electric motor for external damage.
- Install the LV traction battery. (p. 64)
- Check the front brake fluid level. (p. 44)
- Check the rear brake fluid level. (p. 50)
- Check that the brake linings of the front brake are secured.
 (I) p. 46)
- Check that the brake linings of the rear brake are secured.
 p. 52)
- Check that the brake system is functioning properly.
- Check the tire condition. (
 p. 60)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check the tightness of the safety-relevant screws and nuts which are easily accessible.
- Check the charging level of the LV traction battery.


9.2 Starting the vehicle

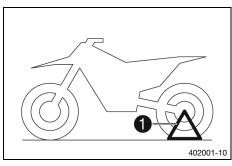

- Remove plug-in stand 1.
- Mount the magnetic switch

 on the holder on the handlebar.
 Guideline

To prevent unwanted activation, only mount the magnetic switch immediately before going on a ride.

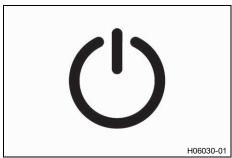

- Press and hold the On/Off button until the multifunctional element lights up.
 - The vehicle is in standby mode.
- Close the throttle grip beyond the basic position.
 - ✓ The vehicle vibrates.
 - The vehicle is ready to operate and responds to the throttle grip.


_

9.3 Changing the riding mode



Info

The riding mode should only be gradually changed when the child is familiar with all the controls.

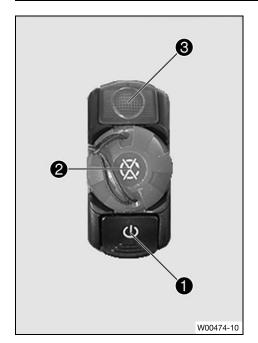

- Switch the vehicle on using On/Off button 1 (p. 14).
- Remove magnetic switch **2** ⋈ (🕮 p. 15) from the handlebar.
- Close the throttle grip beyond the basic position and hold there.
- Wait until the light flashes (3 seconds) and continue to hold the throttle grip.
- Press and hold On/Off button (p. 14) for 3 seconds to change the riding mode (p. 16).

Guideline

Riding mode indicator

White	Riding mode 1
Blue	Riding mode 2
Green	Riding mode 3
Red (flashing)	Charging level low
Red/blue (flashing)	Vehicle is lying on its side

- Release the throttle grip.
 - ✓ The vehicle can be started.

9.4 Starting off



Info

The plug-in stand must be removed before riding.

- Open the throttle carefully.

4

9.5 Braking



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

Explain to your child that he or she must adapt the braking to the traffic situation and the road conditions.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

Check the brake system and do not allow your child to continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Explain to your child that he or she must brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.
- On sandy, wet, or slippery surfaces, use mostly the rear brake if possible.
- Try to complete the braking procedure before riding into a curve.

9.6 Stop, park



Warning

Risk of misappropriation People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended.
- Protect the vehicle against access by unauthorized persons.



Warning

Danger of burns Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the engine, lithium-ion battery, damper, or brake system before these vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.
- Apply the brakes on the motorcycle.
- Press and hold the On/Off button until the multifunctional element goes out.
- Remove the magnetic switch ⋈ from the holder on the handlebar.
- Park the motorcycle on firm ground.

9.7 Transporting

Note

Danger of damage The parked vehicle can roll away or fall over.


Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

_

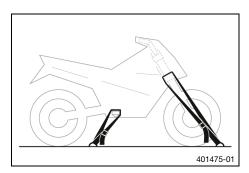

- Press and hold the On/Off button until the multifunctional element goes out.
- Remove the magnetic switch \boxtimes from the holder on the handlebar.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.

10.1 Additional information


Any further work that results from the service work must be ordered separately and invoiced separately. Different service intervals may apply in your country, depending on the local operating conditions. Individual service intervals and scopes may change in the course of technical developments. The most upto-date service schedule is available for authorized Husqvarna Motorcycles dealers for the electronic proof of service. Your authorized Husqvarna Motorcycles dealer will be glad to advise you. Always bring the battery charger and LV traction battery for servicing.

10.2 Service schedule

every	/ 12	mon	ths
Every 20 operating	g ho	urs	
After 10 operating ho	urs		
Inspect the battery charger for damage and dirt. ◂	0	•	
Check that the electrical system is functioning properly. ◂	0	•	•
Check and charge the LV traction battery. ◀	0	•	•
Check that the brake linings of the front brake are secured. (p. 46)	0	•	•
Check that the brake linings of the rear brake are secured. (p. 52)	0	•	•
Check the brake discs. (p. 43)	0	•	•
Check the brake lines for damage and tightness.	0	•	•
Check the front brake fluid level. (p. 44)	0	•	
Change the front brake fluid.			•
Check the rear brake fluid level. (p. 50)	0	•	
Change the rear brake fluid. ⁴			•
Check the play of the front brake lever. (p. 43)	0	•	•
Check the play of the rear brake lever. (IP p. 49)	0	•	•
Check cables and wires for damage and ensure they are routed without kinks. ◀	0	•	•
Check the frame. ◀ (의 p. 42)		•	
Check the link fork. ◄ (I p. 42)		•	
Check the fork bearing for play.		•	
Check the tire condition. (p. 60)	0	•	•
Check the tire pressure. (p. 61)	0	•	•
Check the wheel bearing for play. ◀		•	
Check the wheel hubs. ◀		•	
Grease all moving parts (e.g., hand lever, etc.) and make sure they can move easily.	0	•	•
Check the rubber buffer and pivot points of the shock absorber. (p. 41)		•	
Check the tightness of the safety-relevant screws and nuts which are easily accessible. ◂	0	•	•
Check the steering head bearing play. (p. 34)	0	•	
Lubricate the steering head bearing. ◄ (□ p. 36)			•
Final check: check vehicle for operating safety.	0	•	•
Enter electronic proof of service.	0	•	•

- One-time interval
- Periodic interval

11.1 Checking the basic chassis setting with the rider's weight

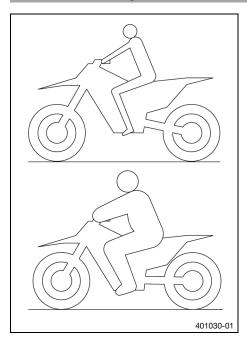

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, link fork and frame, the basic settings of the suspension components must match the rider's weight.
- This vehicle is delivered pre-set for the minimum rider's weight (with full protective clothing).

Guideline

Maximum rider weight	35 kg (77 lb.
i waxiiiidii nder weldii	- 1 55 KG (7 / 10.

4

11.2 Adjusting the spring preload of the shock absorber 4



Caution

Risk of injury Parts of the shock absorber will move around if the shock absorber is detached incorrectly.

The shock absorber is filled with highly compressed nitrogen.

 Please follow the description provided. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

Preparatory work

- Remove the seat. (p. 41)


Main work

Set the spring preload by turning adjusting ring using a suitable tool.



Info

Turning left increases the preload. Turning right reduces the preload.

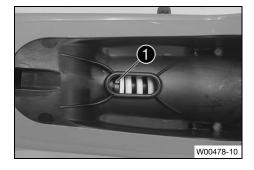

Finishing work

Mount the seat. (
 p. 41)

4

11.3 Adjusting the handlebar position 4




Warning

Danger of accidents A repaired handlebar poses a safety risk.

If the handlebar is bent or straightened, the material becomes fatigued. The handlebar may break as a result.

- Change the handlebar if the handlebar is damaged or bent.

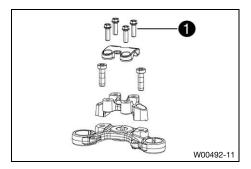

 Remove screws

 Take off the handlebar clamp. Take off the handlebar and lay it to one side.



Info

Cover the components to protect them against damage.

Do not kink the cables or lines.

Position the handlebar centrally.

Guideline

Note the guide line on the handlebar.



Info

Make sure the cables and wiring are positioned correctly.

Position the handlebar clamp. Mount screws and tighten evenly.

Guideline

Handlebar clamp	M8	15 Nm (11.1 lbf ft)
screw		




Info

Make sure the installed gap widths are even.

•

12.1 Seat height adjustment options

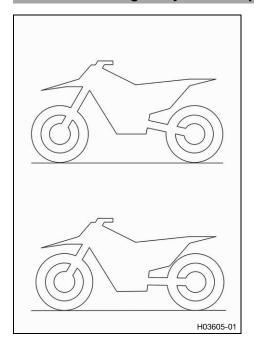

The seat height can be changed by the mounting position of the fork and shock absorber.

We recommend only adjusting the vehicle to the higher seat position once the child's legs are as long as the minimum inside leg measurement stipulated.

Inside leg mea- surement for higher	≥ 50 cm (≥ 19.7 in)
position	



Info

When adjusting the seat height on the fork and shock absorber, make sure that the vehicle is as straight as possible after completing the work.

If the seat height on the shock absorber is set low, the fork should be pushed through further and vice versa.

12.2 Adjusting the seat height on the shock absorber 4



Warning

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic.

 Make sure your child rides slowly to start with after making adjustments in order that he or she can assess the new handling characteristic.



Info

If the seat height is adjusted on the shock absorber, the seat height should also be adjusted on the fork.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)
- Remove the seat. (p. 41)
- Remove the left side cover. (p. 37)
- Remove the right side cover. (p. 38)

Main work

- Hold the rear wheel with the link fork and remove screw 1.
- Position the shock absorber according to the required seat height.


Guideline

Low seat position	A
High seat position	ß

Mount and tighten screw 1

Guideline

Top shock absorber	M8x65	20 Nm (14.8 lbf ft)
screw		

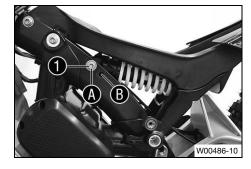

Finishing work

- Install the right side cover. (p. 38)
- Install the left side cover. (p. 38)
- Mount the seat. (p. 41)
- Remove the motorcycle from the lift stand. (p. 30)

12.3 Adjusting the seat height on the fork 4



Warning

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic.

 Make sure your child rides slowly to start with after making adjustments in order that he or she can assess the new handling characteristic.



Info

The seat height can be infinitely adjusted by pushing the fork legs through.

If the seat height is adjusted on the fork, the seat height should also be adjusted on the shock absorber.

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)
- Remove the front wheel. ◀ (IP p. 56)

Main work

- Loosen screw 1.
- Loosen screw 2.
- Position the fork leg according to the required seat height.
 Guideline

Condition

Seat position as low as possible, fork fully inserted

Chamfer on fork **(A)** closes flush with upper edge of triple clamp.

Condition

Seat position as high as possible, fork pulled out completely

Bottom edge of screw cap **B** closes flush with the upper edge of the triple clamp



W00487-10

Info

Only position the fork leg within the described area, otherwise damage could occur.

- Tighten screw 2.

Guideline

Bottom triple clamp	M8	20 Nm (14.8 lbf ft)
screw		

Tighten screw 1.

Guideline

Screw, top triple	M8	20 Nm (14.8 lbf ft)
clamp		

28




Position both fork legs equally.

Finishing work

- Install the front wheel. ◀ (♠ p. 56)
- Remove the motorcycle from the lift stand. (p. 30)

12.4 Adjusting the footrest bracket on the frame 4

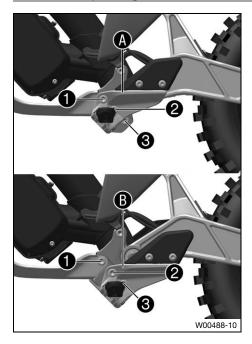

- Loosen screw 1.
- Loosen screw 2.
- Loosen screw 3.
- Position the footrest bracket according to the required seat height.

Guideline

Upper position of the footrest bracket	A
Lower position of the footrest bracket	3

- Tighten screw 1.

Guideline

Underride guard	M8x25	20 Nm (14.8 lbf ft)
screw		

- Tighten screw 2.

Guideline

Footrest	M8x30	25 Nm (18.4 lbf ft)
bracket screw		Loctite [®] 243™

- Tighten screw 3.

Guideline

Footrest	M8x30	25 Nm (18.4 lbf ft)	ĺ
bracket screw		Loctite [®] 243™	Ì


•

13.1 Raising the motorcycle with a lift stand

Note

Danger of damage The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

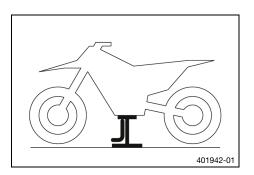


- Raise the motorcycle with a suitable lift stand on the underride guard.
 - Neither wheel is in contact with the ground.
- Secure the motorcycle against falling over.

13.2 Removing the motorcycle from the lift stand

Note

Danger of damage The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

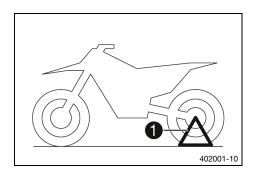

- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, insert plug-in stand 1 into the plugin stand bracket on the left side of the link fork.



Info

Remove the plug-in stand before riding.

13.3 Removing the fork legs 4

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)
- Remove the front wheel. 4 (p. 56)




- Remove screw 1 and take off the clamp.
- Remove screws 2 and take off the brake caliper.
- Allow the brake caliper and the brake line to hang loosely to the side.



Info


Do not kink the brake line.



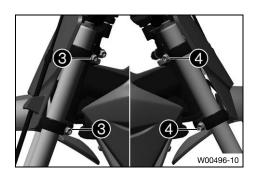

- Note the installation position of the fork legs.
- Loosen screws 3. Remove the left fork leg.
- Loosen screws 4. Remove the right fork leg.

13.4 Installing the fork legs 4

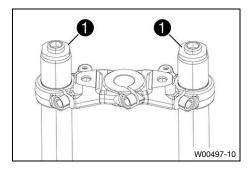


Main work

Position fork legs 1.

Guideline

Align the fork legs so that they are parallel and in the direction of travel using the covers.

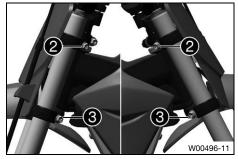

Tighten screws 2.

Guideline

Screw, top triple	M8	20 Nm (14.8 lbf ft)
clamp		

Tighten screws 3.

Guideline

Bottom triple clamp	M8	20 Nm (14.8 lbf ft)
screw		

- Position the brake caliper, fit screw 4 and screw 5, but do not tighten yet.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc, there is a pressure point and the brake caliper is in position.
- Hold the hand brake lever in place.
- Tighten screw 4.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

Tighten screw 6.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

- Release the hand brake lever.
- Position the brake line and the clamp. Mount and tighten screw 6.



Guideline

Brake line holder on	M5	2 Nm (1.5 lbf ft)
fork screw		

Finishing work

Remove the motorcycle from the lift stand. (♠ p. 30)

13.5 Removing the lower triple clamp 4

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)
- Remove the front wheel. ♣ (♣ p. 56)
- Remove the fork legs. ♣ (♣ p. 30)

Main work

- Remove handlebar cushion 1.
- Remove handlebar clamp with screws 2.
- Take off handlebar 3 and lay it to one side.




W00534-10

Info


Cover the components to protect them against damage.

Do not kink the cables or lines.






 Release screw 6, take off the upper triple clamp and set aside.

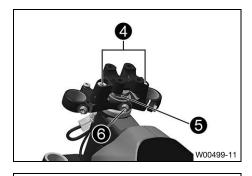

- Remove protective ring 7.
- Remove the lower triple clamp with steering stem.
- Remove the upper steering head bearing.

•

13.6 Installing the lower triple clamp 4

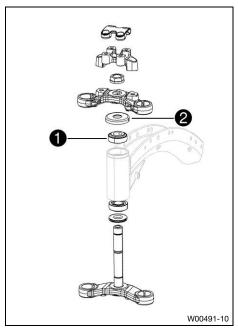


Main work

 Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease (p. 75)

- Insert the lower triple clamp with the steering stem. Mount upper steering head bearing ①.
- Push on protective ring 2.

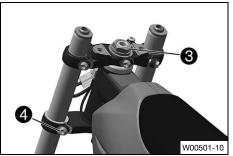

- Position the upper triple clamp.
- Mount nut 3, but do not tighten yet.
- Position the fork legs.

Guideline

Align the fork legs so that they are parallel and in the direction of travel using the covers.

- Tighten screws 4 on both sides.

Guideline

Bottom triple clamp	M8	20 Nm (14.8 lbf ft)
screw		

- Tighten nut 3.

Guideline

Nut, steering head	M20x1.5	10 Nm (7.4 lbf ft)
--------------------	---------	--------------------

Tighten screw 6.


Guideline

Screw, steering stem M8 20 Nm (14.8 lbf ft)


- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screws **6**.


Guideline


Screw, top triple	M8	20 Nm (14.8 lbf ft)
clamp		

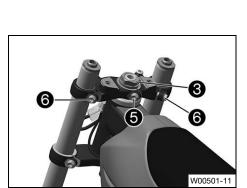

SERVICE WORK ON THE CHASSIS

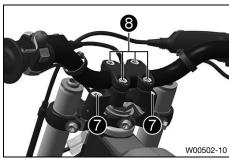

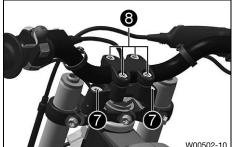



- Position the handlebar with handlebar clamp.
- Mount and tighten screws 8.

Guideline

Handlebar clamp	M8	15 Nm (11.1 lbf ft)
screw		

- Mount the handlebar cushion.
- Install the front wheel. 4 (p. 56)
- Position the brake caliper, fit screw **9** and screw **10**, but do not tighten yet.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc, there is a pressure point and the brake caliper is in position.
- Hold the hand brake lever in place.
- Tighten screw 9.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

Tighten screw 10.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

- Release the hand brake lever.
- Position the brake line and the clamp. Mount and tighten screw 1.

Guideline

Brake line holder on	M5	2 Nm (1.5 lbf ft)
fork screw		

Finishing work

- Install the fender with the start number plate. (p. 37)
- Check that the cable and brake line are routed correctly.
- Check the steering head bearing play. (p. 34)
- Remove the motorcycle from the lift stand. (p. 30)

13.7 Checking the steering head bearing play



Warning

Danger of accidents
Incorrect steering head bearing play impairs the handling characteristic and damages components.


Correct incorrect steering head bearing play immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

34



Info

If the vehicle is operated for a lengthy period with play in the steering head bearing, the bearings and the bearing seats in the frame can become damaged over time.

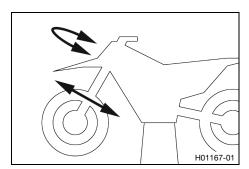

Preparatory work

Raise the motorcycle with a lift stand. (p. 30)

Main work

Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

Play should not be detectable on the steering head bearing.

- If there is detectable play:
 - Adjust the steering head bearing play. ◄ (□ p. 35)
- Move the handlebar to and fro over the entire steering range.

It must be possible to move the handlebar easily over the entire steering range. There should be no detectable detent positions.

- If detent positions are detected:
 - Adjust the steering head bearing play. (p. 35)
 - Check the steering head bearing and replace if required.

Finishing work

Remove the motorcycle from the lift stand. (p. 30)

13.8 Adjusting the steering head bearing play &

W00503-10

Preparatory work

Raise the motorcycle with a lift stand. (p. 30)



- Loosen screws 1.
- Loosen screw 2.
- Loosen and retighten nut 3.

Guideline

Nut, steering head M20x1.5 10 Nm (7.4 lbf ft)

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid stresses.
- Tighten screw 2.

Guideline

Screw, steering stem M8 20 Nm (14.8 lbf ft)

Tighten screws 1


Guideline

Screw, top triple	M8	20 Nm (14.8 lbf ft)
clamp		

Finishing work

- Check the steering head bearing play. (p. 34)
- Remove the motorcycle from the lift stand. (p. 30)

13.9 Lubricating the steering head bearing 4

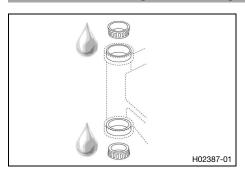

- Remove the lower triple clamp. ◀ (🕮 p. 32)
- Install the lower triple clamp. ◄ (p. 33)



Info

The steering head bearing is cleaned and lubricated in the course of removal and installation of the lower triple clamp.

13.10 Removing the fender with the start number plate



- Remove screws 1.



- Remove screws 2.
- Unhook the start number plate from the brake line and remove it.




 Remove screws 3 and separate start number plate from fender.

13.11 Installing the fender with the start number plate



- Join the fender and start number plate together.
- Mount and tighten screws 1. Guideline

Fender on start num-	EJOT PT®	2 Nm (1.5 lbf ft)
ber plate screw	K60x20AL	

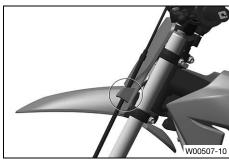

Connect the brake line at the start number plate.



Mount and tighten screws 2. Guideline

Start number plate	M5x12	6 Nm (4.4 lbf ft)
screw		




Mount and tighten screws 3. Guideline

Fender screw	M6	10 Nm (7.4 lbf ft)

13.12 Removing the left side cover

Preparatory work


- Remove the seat. (p. 41)

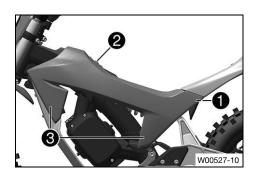

Main work

- Remove screw 1.
- Remove screw 2.
- Carefully pull side cover off from quick releases 3.

13.13 Installing the left side cover

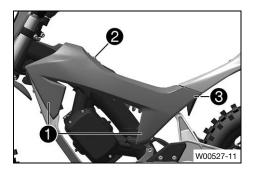

Main work

- Position the side cover and engage in area 1.
- Mount and tighten screw 2.
 Guideline

Seat fixing screw	M6	6 Nm (4.4 lbf ft)
-------------------	----	-------------------

Mount and tighten screw 3.
 Guideline

Finishing work

- Mount the seat. (p. 41)


13.14 Removing the right side cover

Preparatory work


- Remove the seat. (p. 41)
- Remove the left side cover. (p. 37)

Main work

- Remove screw 1.
- Carefully pull side cover off from quick releases 2.

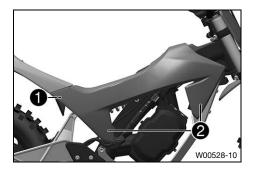

13.15 Installing the right side cover

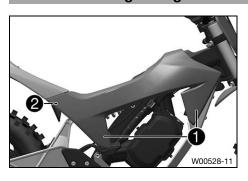

Main work

- Position the side cover and engage in area 1.
- Mount and tighten screw 2.
 Guideline

Side cover screw M5 2 Nm (1.5 lbf ft)

Finishing work

- Install the left side cover. (p. 38)
- Mount the seat. (p. 41)

13.16 Removing the shock absorber 4

Preparatory work


- Raise the motorcycle with a lift stand. (p. 30)
- Remove the seat. (
 p. 41)
- Remove the left side cover. (p. 37)
- Remove the right side cover. (
 p. 38)

Main work

- Note the installation position of the shock absorber.
- Remove screws 1 and take off the splash protector.



Remove protection cap 2.

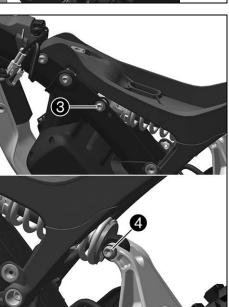

- Hold rear wheel, remove screw 3 with washer and carefully lower the link fork.
- Remove screws 4 and remove shock absorber to the rear.



Tip

If necessary, lower the link fork a little further until the shock absorber can be removed to the rear.


13.17 Installing the shock absorber 4



Warning

Danger of accidents Modifications to the suspension setting may seriously alter the handling characteristic

 Make sure your child rides slowly to start with after making adjustments in order that he or she can assess the new handling characteristic.

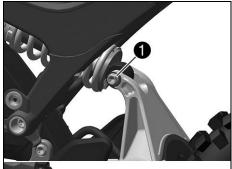





 Position the shock absorber on the vehicle from the rear, mount and tighten screws

 .

Guideline


Insert the shock absorber so that the screw on the upper part of the shock absorber is positioned upward.

Bottom shock	M8x45	25 Nm (18.4 lbf ft)
absorber screw		Loctite [®] 243™


Lift the link fork, mount screw 2 with washer and tighten.
 Guideline

If necessary, observe the installation position noted during removal.

Top shock absorber	M8x65	20 Nm (14.8 lbf ft)
screw		

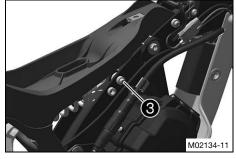

Mount protection cap 3.

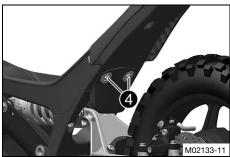

Position the splash protector, mount and tighten screws 4.

Guideline

Screw, splash pro-	M6	7 Nm (5.2 lbf ft)
tector		

Finishing work

- Install the left side cover. (p. 38)
- Mount the seat. (p. 41)


- Remove the motorcycle from the lift stand. (p. 30)

13.18 Checking the rubber buffer and pivot points of the shock absorber


Condition

The shock absorber is removed.

- Check rubber buffer and pivot points of the shock absorber for damage and wear.
 - » If there is damage or wear:
 - Change shock absorber.

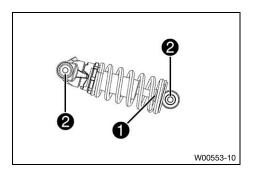


13.19 Removing the seat

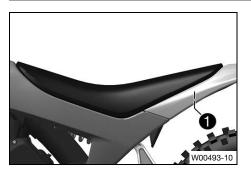


- Remove screw 1 and raise the rear of the seat.
- Pull back the seat and remove it.

13.20 Mounting the seat

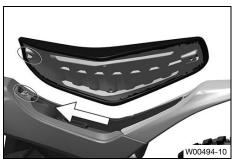

 Hook the seat onto holding lug, lower the seat at the rear, and push it forward.

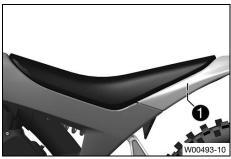

Mount and tighten screw **1**. Guideline

Seat fixing screw	M6	6 Nm (4.4 lbf ft)
-------------------	----	-------------------


13.21 Checking the frame 4



- Check the frame for damage, cracks, and deformation.
 - » If the frame shows signs of damage, cracks, or deformation:
 - Change the frame.
 Guideline

Repairs on the frame are not permitted.


13.22 Checking the link fork 4

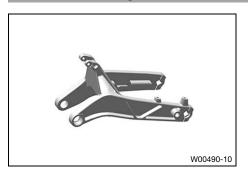

- Check the link fork for damage, cracks, and deformation.
 - » If the link fork shows signs of damage, cracks, or deformation:
 - Change the link fork.
 Guideline

Repairs on the link fork are not permitted.

13.23 Checking the rubber grip

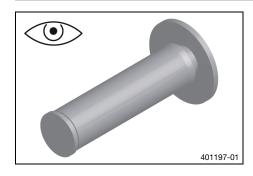

 Check the rubber grips on the handlebar for damage, wear, and looseness.



Info


The rubber grips are vulcanized onto a sleeve on the left and onto the handle tube of the throttle grip on the right. The left sleeve is clamped onto the handlebar. The rubber grip can only be replaced with the sleeve or the throttle tube.

- » If a rubber grip is damaged or worn:
 - Change the rubber grip.
- Check that screw 1 is firmly seated.

Guideline

Screw, fixed grip	M4	5 Nm (3.7 lbf ft) Loctite®243™
36		Loctite 240

Diamond A must be located at the top.

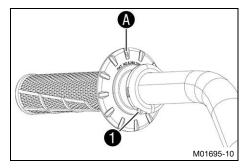

14.1 Checking the play of the front brake lever




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the front brake lever, pressure builds up in the brake system on the front brake.

Set the free travel on the front brake lever in accordance with the specification.

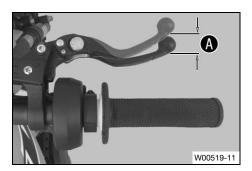

Push the front brake lever forward and check play A.




Play of the front brake lever 12 ... 25 mm (0.47 ... 0.98 in)

- » If the play does not meet specifications:
 - Inspect the brake system for damage and dirt.

4

14.2 Adjusting the basic position of the hand brake lever

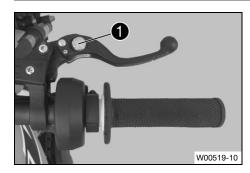

- Adjust the basic position of the front brake lever with adjusting screw 1 to the rider's hand size.
- Push the hand brake lever forward to change the basic position.

Guideline

Adjust the lever so that the lever can be reached comfortably, but cannot be pulled all the way to the handle.



Into

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.

Turn the adjusting screw counterclockwise to decrease the distance between the front brake lever and the handlebar.

The range of adjustment is limited.


14.3 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

Make sure that worn-out brake discs are replaced immediately. (Your authorized Husqvarna Motor-cycles workshop will be glad to help.)

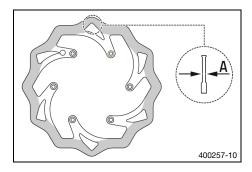

- Check the front and rear brake disc thickness at multiple points for the dimension **A**.

i

Info

Wear reduces the thickness of the brake disc around the contact surface of the brake linings.

Brake discs - wear limits	
Front	2 mm (0.08 in)
rear	2 mm (0.08 in)

- If the brake disc thickness is less than the specified value:
 - Change the front brake disc.
 - Change the rear brake disc.
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc.
 - Change the rear brake disc. 🐴

14.4 Checking the front brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note


Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

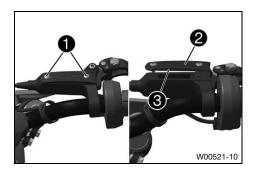

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Check the brake fluid level at the marking inside the compensating tank.
 - » If the brake fluid level is below the marking:
 - Add front brake fluid. 4 (Pp. 45)
- Position the cover with the membrane. Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

4

14.5 Adding front brake fluid 4



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note


Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

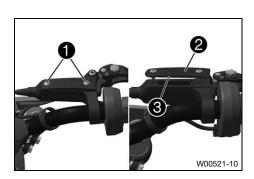

Preparatory work

Check that the brake linings of the front brake are secured.
 p. 46)

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Correct the brake fluid level.

Guideline

Add brake fluid to the marking on the inside of the compensating tank.

Brake fluid DOT 4 / DOT 5.1 (p. 74)

 Position the cover with the membrane. Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

4


14.6 Checking that the brake linings of the front brake are secured



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

 Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

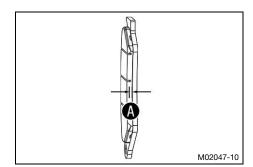

- Check the brake linings for lining thickness (A).

Minimum thickness A

≥ 1 mm (≥ 0.04 in)

- » If it is less than the minimum thickness:
 - Change the brake linings of the front brake. ⁴
 (□ p. 47)
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the brake linings of the front brake. ◀
 (I) p. 47)
- Check that the brake linings are secured.
 - » If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.

14.7 Changing the front brake linings 4



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

 Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

- Only use brake linings approved and recommended by Husqvarna motorcycles.



Note


Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

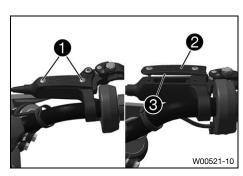

Preparatory work


- Raise the motorcycle with a lift stand. (p. 30)

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover **2** with membrane **3**.



- Remove screw 4 and 5.
- Press back the brake linings by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper backward from the brake disc.
- Press the brake piston back into the basic position and ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.

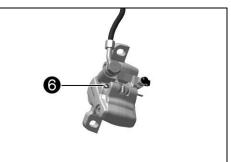

- Remove pin **6**.
- Remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.
- Position the new brake linings and retainer spring.



Info

Always change the brake linings in pairs. Ensure that the brake linings are correctly positioned in the holding spring.

- Fit and lock pin **6**.




Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



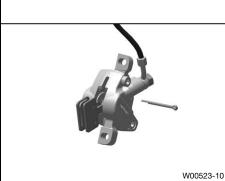



- Position the brake caliper, fit screw 4 and screw 5, but do not tighten yet.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc, there is a pressure point and the brake caliper is in position.
- Hold the hand brake lever in place.
- Tighten screw 4.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

- Tighten screw 6.

Guideline

Front brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

- Release the hand brake lever.
- Check the brake fluid level and correct if necessary.

Guideline

Add brake fluid to the marking on the inside of the compensating tank.

Brake fluid DOT 4 / DOT 5.1 (p. 74)

- Position cover **2** with membrane **3**.
- Mount and tighten screws 1.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

Finishing work

- Remove the motorcycle from the lift stand. (p. 30)

14.8 Checking the play of the rear brake lever

W00521-10




Warning


Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the rear brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the rear brake lever in accordance with the specification.

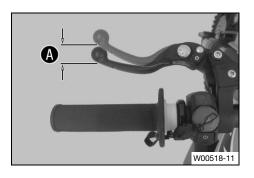

Push the rear brake lever forward and check play A.



- » If the play does not meet specifications:
 - Inspect the brake system for damage and dirt.

14.9 Adjusting the basic position of the rear brake lever 4




Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the rear brake lever, pressure builds up in the brake system on the rear brake.

Set the free travel on the rear brake lever in accordance with the specification.

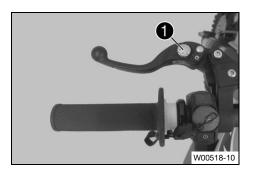

- Adjust the basic position of the rear brake lever with adjusting screw 1 to the rider's hand size.
- Push the foot brake lever forward to change the basic position.

Guideline

Adjust the lever so that the lever can be reached comfortably, but cannot be pulled all the way to the handle.



Info

Turn the adjusting screw clockwise to increase the distance between the rear brake lever and the handle-bar.

Turn the adjusting screw counterclockwise to decrease the distance between the rear brake lever and the handlebar.

The range of adjustment is limited.

4

14.10 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.


Check the brake system and ensure that nobody drives the vehicle before the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

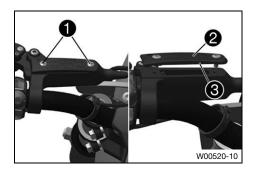

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws 1.
- Take off cover 2 with membrane 3.
- Check the brake fluid level at the marking inside the compensating tank.
 - » If the brake fluid level is below the marking:
 - Add rear brake fluid. 🔌 🕮 p. 51)
- Position the cover with the membrane. Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

14.11 Adding rear brake fluid 🔦



Warning

Danger of accidents
An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system is leaking or the brake linings are worn down.

Check the brake system and ensure that nobody drives the vehicle before the problem is eliminated. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Note


Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

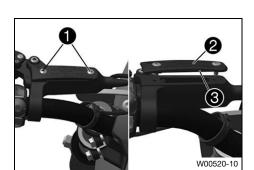

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)
- Check that the brake linings of the rear brake are secured. (🕮 p. 52)

Main work

- Remove screws 1.
- Take off cover **2** with membrane **3**.
- Correct the brake fluid level.

Guideline

Add brake fluid to the marking on the inside of the compensating tank.

Brake fluid DOT 4 / DOT 5.1 (p. 74)

- Position the cover with the membrane.
- Mount and tighten the screws.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

Finishing work

Remove the motorcycle from the lift stand. (p. 30)


14.12 Checking the brake linings and the brake lining retainers of the rear brake



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

Ensure that worn-out brake linings are replaced immediately. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

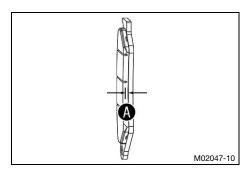

Check the brake linings for lining thickness A.



Minimum thickness (A)

≥ 1 mm (≥ 0.04 in)

- If the minimum thickness is less than specified:
 - Change the rear brake linings. 4 (p. 53)
- Check the brake linings for damage and cracking.
 - If damage or wear is encountered:
 - Change the rear brake linings. 4 (p. 53)
- Check that the brake linings are secured.
 - If the brake linings are not secured correctly:
 - Secure brake linings, replace with new parts if necessary.

14.13 Changing the rear brake linings 4



Warning

Danger of accidents Incorrect servicing will cause the brake system to fail.

 Ensure that service work and repairs are performed professionally. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Skin irritation Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)
- Make sure that only clean, approved brake fluid from a tightly sealed container is used. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents Brake linings which have not been approved alter the braking efficiency.

Not all brake linings are tested and approved for Husqvarna motorcycles. The structure and friction coefficient of the brake linings, and thus their brake power, may vary greatly from that of original brake linings.

If brake linings are used that differ from the original equipment, compliance with the original homologation is not guaranteed. In this case, the vehicle no longer corresponds to its condition at delivery and the manufacturer warranty shall be void.

Only use brake linings approved and recommended by Husqvarna motorcycles.



Note

Environmental hazard Hazardous substances cause environmental damage.

Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.




Info

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.


Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)

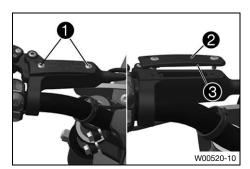


Main work

- Remove screws 1.
- Take off cover 2 with membrane 3.

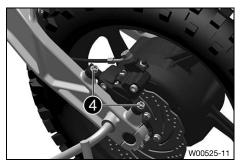

- Remove screws 4.
- Press back the brake linings by slightly tilting the brake caliper laterally on the brake disc. Carefully pull the brake caliper backward from the brake disc.
- Press the brake piston back into the basic position and ensure that brake fluid does not flow out of the brake fluid reservoir; extract some if necessary.

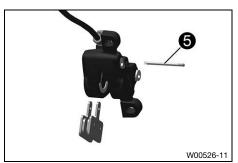

- Remove pin **5**.
- Remove the brake linings.
- Clean the brake caliper and the brake caliper bracket.
- Position the new brake linings and retainer spring.



Info

Always change the brake linings in pairs. Ensure that the brake linings are correctly positioned in the holding spring.


- Fit and lock pin **6**.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.





- Position brake caliper, fit screw 4, but do not tighten yet.
- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc, there is a pressure point and the brake caliper is in position.
- Hold the foot brake lever in place.
- Tighten screws 4.

Guideline

Daar brake	MCvOO	10 Nine (7 4 linf ff)
Rear brake	M6x20	10 Nm (7.4 lbf ft)
caliper screw		Loctite [®] 243™

- Release the rear brake lever.

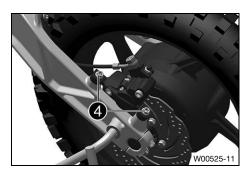

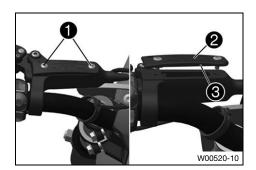

Check the brake fluid level and correct if necessary.

Add brake fluid to the marking on the inside of the compensating tank.

Brake fluid DOT 4 / DOT 5.1 (p. 74)

- Position cover 2 with membrane 3.
- Mount and tighten screws 1.



Info

Use water to immediately clean up any brake fluid that has overflowed or spilled.

Finishing work

- Remove the motorcycle from the lift stand. (p. 30)

15.1 Removing the front wheel 4


W00508-10

Preparatory work - Raise the moto

- Raise the motorcycle with a lift stand. (p. 30)

Main work

Remove nut 1.

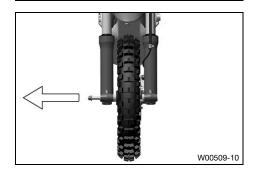



Warning


Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.




Info

Do not actuate the hand brake lever when the front wheel is removed.

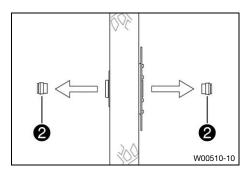

- Remove spacers 2.








Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

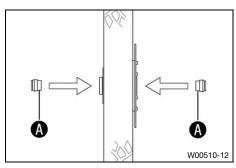

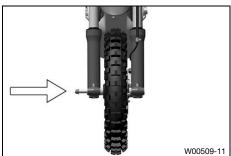

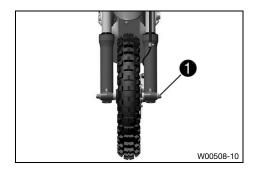

Main work

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change front wheel bearing.
- Clean and grease the contact surfaces (A) of the spacers.

Long-life grease (p. 75)

- Insert the spacers.
- Clean and lightly grease the wheel spindle.

Long-life grease (p. 75)

- Position the front wheel.
 - ✓ The brake linings are correctly positioned.
- Insert the wheel spindle.
- Mount and tighten nut 1. Guideline

Front wheel spindle	M10	40 Nm (29.5 lbf ft)
nut		

- Operate the hand brake lever several times until the brake linings are seated correctly against the brake disc.
- Remove the motorcycle from the lift stand. (p. 30)
- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.

Finishing work

Remove the motorcycle from the lift stand. (p. 30)


15.3 Removing the rear wheel 4

Preparatory work

- Raise the motorcycle with a lift stand. (p. 30)

Main work

- Disconnect connector 1.
- Loosen screws 2 and remove them together with the cable guide.

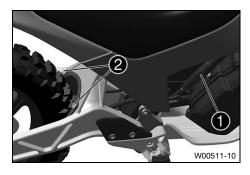

- Hold the rear wheel.
 - Remove screws 3.
- Take off clamps 4.





Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Take off the rear wheel to the rear.
- Carefully slip the cable out of the frame and the link fork.



Info

Do not operate the rear brake lever when the rear wheel is removed.

•

15.4 Installing the rear wheel 4



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.


- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Main worl

- Position the rear wheel on the link fork.
- Carefully route cable forward past the link fork and frame.
 Guideline

Make sure that the cable outlet on the motor shaft is correctly positioned.

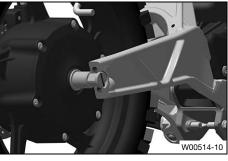

Position the motor shaft on the link fork.

Align the marking on the motor shaft parallel to the edge of the link fork.



- Mount the clamp with screws **1**, but do not tighten them yet.
- Mount the clamp with screws 2, but do not tighten them yet.
- Tighten screws 1.

Guideline

Motor shaft	M8x30	25 Nm (18.4 lbf ft)
clamp screw		Loctite [®] 243™



Info

Make sure the installed gap widths are even.

Tighten screws 2.

Guideline

Motor shaft	M8x30	25 Nm (18.4 lbf ft)
clamp screw		Loctite [®] 243™



Info

Make sure the installed gap widths are even.

- Operate the rear brake lever several times until the brake linings are in contact with the brake disc and there is a pressure point.
- Position the cable guide.



Info

Check for correct positioning and freedom of movement on the brake lines and cables.

Mount and tighten screws 3.


Guideline

Cable guide on link	M5	4 Nm (3 lbf ft)
fork screw		

Mount connector 4.

Finishing work

- Remove the motorcycle from the lift stand. (p. 30)

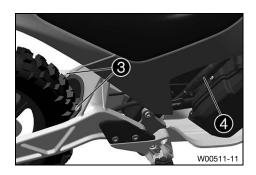

15.5 Checking the tire condition



Info

The tyres are the only contact between the vehicle and the road. In every riding situation, safety depends on a relatively small contact surface on the road. It is therefore vital that the tires are in good condition at all times and the correct spare parts are used when tires are changed.

Only fit tires approved and/or recommended by Husqvarna Motorcycles and only allow technical personnel with the required equipment and experience to fit the tires.

Other tires could have a negative effect on handling characteristics.

Used tires should not be fitted if their origin is unknown.


The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle. The tires mounted on the front and rear wheels must have a similar profile. Tires and rims must not deviate from their original size and type designations.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.


The remaining tire tread pattern must be checked regularly. The more worn the tire tread pattern, the more reduced the grip.

In the event of a flat tire, stop as soon as possible to have the tire removed and inspected. If repairs are possible and permissible, they must be performed by technical personnel.

Deformed or damaged rims must be replaced.

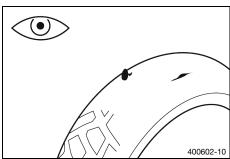

- Check the front and rear tires for cuts, embedded objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires.

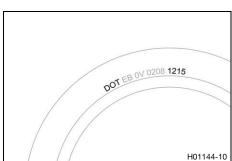

Check the tire age.



Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

Husqvarna Motorcycles recommends that the tires be changed after 5 years at the latest, regardless of the actual wear.

Tires age, even if they are barely or never used. Cracks in the tire tread pattern and side rubber, sometimes associated with distortions in the carcass is a sign of aging.

Old and used tires must be checked by specialist tire technicians to ascertain their suitability for further use.

- » If the tires are older than five years:
 - Change the tires.

•


15.6 Checking tire pressure



Info

Low tire pressure leads to abnormal wear and overheating of the tire.

The correct tire pressure is vital for safety and ensures optimal riding comfort as well maximum service life for the tires.

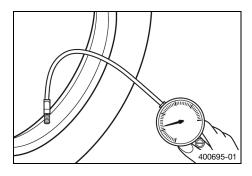

- Remove the protection cap.
- Check tire pressure when the tires are cold.

Offroad tire pressure	
front	1.0 bar (15 psi)
rear	1.0 bar (15 psi)

- » If the tire pressure does not meet specifications:
 - Correct tire pressure.
- Mount the protection cap.

16.1 Positioning the battery charger



Warning

Risk of injury There is a risk of electric shock in a moist environment.

The battery charger is not waterproof.

- Only use the battery charger in dry conditions.
- Ensure that no fluids flow or drip onto the battery charger.



Warning

Risk of injury There is a risk of electric shock if the battery charger or the cables have been manipulated or damaged.

The battery charger does not contain any parts which require maintenance.

- Do not modify the battery charger or the cables.
- Only use original cables.
- Never open the battery charger housing.
- Do not insert any objects into the battery charger housing from the outside.
- Do not use the battery charger if cables, plugs, or parts of the battery charger have been damaged or are soiled.



Warning

Risk of injury If the battery charger is used incorrectly, its intrinsic safety cannot be guaranteed.

The battery charger is only suitable for use with a traction battery.

- Only use the battery charger with a traction battery.
- Only operate the battery charger using household sockets.
- Do not use any additional adapters or extensions.
- Follow the applicable safety instructions of the power connection.



Info

The battery charger contains sensitive electronics and must be handled with appropriate care.

The battery charger may be damaged or destroyed if it is dropped, knocked or otherwise subject to mechanical overload.

When transporting the battery charger, ensure appropriate means of securing the cargo.

Damage caused due to improper handling or improper transport is excluded from the manufacturer warranty.



Info

Further information can be found in the manuals for the LV traction battery and the battery charger.



- Place the battery charger on a firm, level, and horizontal surface
- Check the battery charger and mains cable for external damage.
- Ensure the battery charger is adequately ventilated.
- Use the battery charger in the temperature range permitted.

Guideline

Ambient temperature	5 40 °C (41 104 °F)
Temperature range of the LV traction battery	−10 40 °C (14 104 °F)

Do not operate the battery charger directly in a warm environment if it has previously been stored in a cold environment.



Info

The change in temperature can cause moisture to condense on the battery charger.

 Ensure that the power plug for the battery charger always remains easily accessible.


16.2 Removing the LV traction battery




Note

Environmental hazard A lithium-ion battery (traction battery) contains components and elements that are harmful to the environment.

- Never throw a traction battery into the household trash.
- Dispose of the traction battery properly and in compliance with the applicable regulations. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)

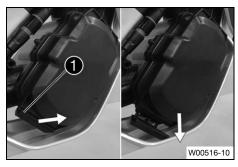


- Pull quick release
 on the battery compartment to the front
- Push the quick release down.

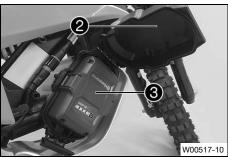


- Open cover **2** of the battery compartment.
- Press both release buttons on LV traction battery 3 and the LV traction battery out of the battery compartment.
- Close cover 2 of the battery compartment.
- Lock quick release 1.

_

16.3 Installing the LV traction battery

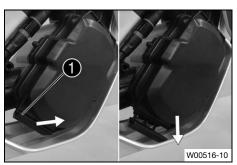

- Pull quick release 1 on the battery compartment to the front
- Push the quick release down.

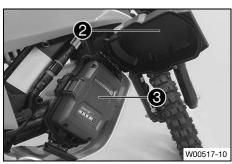

- Open cover **2** of the battery compartment.
- Press LV traction battery 3 into the battery compartment until the release buttons engage.

Guideline

Make sure the LV traction battery terminals are clean and correctly positioned.

- Close cover 2 of the battery compartment.
- Lock quick release 1.

16.4 Charging the LV traction battery



Warning

Risk of injury Using an incorrect battery charger can cause the lithium-ion battery (traction battery) to overheat, explode or catch fire.

Only use the LV traction battery and battery charger combination specified by the manufacturer.



Note

Environmental hazard A lithium-ion battery (LV traction battery) contains components and elements that are harmful to the environment.

- Never throw a LV traction battery into the household trash.
- Dispose of the LV traction battery properly and in compliance with the applicable regulations. (Your authorized Husqvarna Motorcycles workshop will be glad to help.)



Info

Further information can be found in the manuals for the LV traction battery and the battery charger.

Preparatory work

- Position the battery charger. (
 p. 62)
- Remove the LV traction battery. (p. 63)



Main work

Push LV traction battery 1 into battery charger 2.

EU battery charger for LV traction battery (A901460000)

Alternative 1

US/CA battery charger for LV traction battery (A90146100000)

- Charging starts automatically.
- ✓ The battery charger indicates the charging level.
- When charging is complete, disconnect the power plug and remove the LV traction battery from the battery charger.

Finishing work

Install the LV traction battery. (p. 64)

17.1 Cleaning the motorcycle



Note


Environmental hazard Hazardous substances cause environmental damage.

 Dispose of oils, grease, cleaning agents, brake fluid etc. properly and in compliance with the applicable regulations.



Info

Clean the motorcycle regularly to maintain its value and appearance over a long period. Avoid direct sunshine when cleaning the motorcycle.

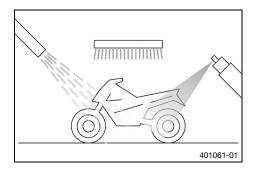

- Remove the coarse dirt particles with a gentle water jet.
- Spray the heavily soiled parts with a normal commercial motorcycle cleaner and clean using a brush.

Motorcycle cleaner (p. 75)



Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to the dry motorcycle. Always rinse the motorcycle with water before use.

 Clean the motorcycle thoroughly with a soft water jet, then allow to dry.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Explain to your child that he or she must brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.
- After cleaning, your child should ride a short distance until the brake system has dried through careful braking.



Info

The heat causes the water to evaporate even in inaccessible parts of the vehicle.

- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Treat bare metal with a corrosion inhibitor.

Guideline

Corrosion inhibitor must not come into contact with the brake discs.

Preserving materials for paints, metal and rubber (p. 75)

 Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (p. 75)


18.1 Storing the vehicle



Info

If the motorcycle is not being used for an extended length of time, additional measures are recommended.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). This allows you to avoid long waiting periods when the next season starts.

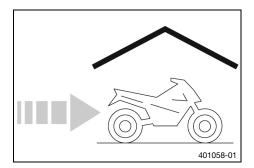

- Clean the motorcycle. (
 p. 66)
- Check the tire pressure. (p. 61)
- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

Guideline

Ideal storage temperature 5 ... 25 °C (41 ... 77 °F)



Info

Husqvarna Motorcycles recommends jacking up the motorcycle.

- Raise the motorcycle with a lift stand. (
 p. 30)
- Cover the motorcycle with a tarp or cover that is permeable to air

Guideline

Do not use any non-porous materials, as moisture cannot escape and corrosion can occur.

Store the LV traction battery. (
 p. 67)


4

18.2 Storing the LV traction battery



Info

If the vehicle is not operated for a month or longer, removing the LV traction battery and storing it separately is recommended.

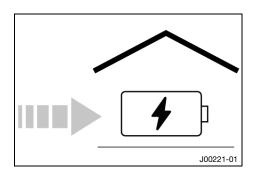

- If the charging level of the LV traction battery is above 50%, discharge the LV traction battery to a charging level between 30% and 50%.
- Remove the LV traction battery. (p. 63)
- Charge the LV traction battery to a charging level between 30% and 50%.
- Store the LV traction battery in a dry location that is not subject to large fluctuations in temperature.

Guideline

Ideal storage temperature 5 ... 25 °C (41 ... 77 °F)

Info

The LV traction battery ages faster if the charging level is either very high or very low. The LV traction battery charging level slowly reduces during storage due to self-discharge. Aging decreases the capacity of the LV traction battery. Proper and correct storage maximizes its service life.


Check the charging level every month.

Guideline

If the charging level has fallen below 30%, charge the LV traction battery to a charging level between 30% and 50%.

4

18.3 Preparing for use after storage

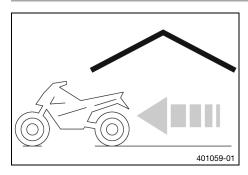

- Remove the motorcycle from the lift stand. (p. 30)
- Charge the LV traction battery. (p. 64)
- Take a test ride.

19.1 Blink code



Info

Have faults rectified immediately at an authorized Husqvarna Motorcycles workshop.

Blink code riding mode indicator	01 Riding mode indicator flashes red/green
Error level condition	Battery compartment
Blink code riding mode indicator	02 Riding mode indicator flashes red/white
Error level condition	No response from control unit
Blink code riding mode indicator	03 Riding mode indicator flashes red/blue
Error level condition	Vehicle is lying on its side
Blink code riding mode indicator	04 Riding mode indicator flashes red
Error level condition	Control unit does not recognize position of throttle grip
Blink code riding mode indicator	05 Riding mode indicator flashes red
Error level condition	Engine control unit error
Blink code riding mode indicator	06 Riding mode indicator flashes red/violet
Error level condition	Switch-on button pressed too long
Blink code riding mode indicator	07 Riding mode indicator flashes red/yellow
Error level condition	Engine too hot

20.1 Engine

Design	Brushless DC motor
Nominal power	0.75 kW (1.01 hp)
Maximum electric power	1.8 kW (2.4 hp)
Maximum torque depending on ride mode approx.	
Riding mode 1	35 %
Riding mode 2	60 %
Riding mode 3	100 %
Theoretical maximum speed (unloaded)	
Riding mode 1	7 km/h (4.3 mph)
Riding mode 2	20 km/h (12.4 mph)
Riding mode 3	33 km/h (20.5 mph)
Maximum motor speed	3,000 rpm

20.2 Chassis

Frame	Central tube frame made of aluminum, KTL coated
Fork	WP RSD
Shock absorber	WP Monoshock
Maximum rider weight	35 kg (77 lb.)
Maximum rider size	130 cm (51.2 in)
Maximum permissible overall weight	64 kg (141 lb.)
Ready-to-ride weight approx.	29 kg (64 lb.)
Fork offset	20 mm (0.79 in)
Steering head angle	63°
Suspension travel	
Front	90 mm (3.54 in)
Rear	70 mm (2.76 in)
Brake system	
front	Disc brake with 2-piston brake caliper
rear	Disc brake with 2-piston brake caliper
Brake disc diameters	
Front	140 mm (5.51 in)
Rear	140 mm (5.51 in)
Brake discs - wear limits	
Front	2 mm (0.08 in)
rear	2 mm (0.08 in)
Offroad tire pressure	
front	1.0 bar (15 psi)
rear	1.0 bar (15 psi)
Wheelbase	
Low	860 mm (33.86 in)
High	870 mm (34.25 in)
Seat height unloaded	
Low	470 mm (18.5 in)

High 500 mm (19.69 in)	
Ground clearance unloaded	
Low	146 mm (5.75 in)
High	152 mm (5.98 in)

20.3 Electrical system

EU lithium-ion battery (LV traction battery)	A90146000000	Voltage (nominal): 36 V Capacity: 9.4 Ah Power: 337 Wh
US/CA lithium-ion battery (LV traction battery)	A90146100000	Voltage (nominal): 36 V Capacity: 9.4 Ah Power: 337 Wh
EU battery charger for LV traction battery	A90145075000	Nominal voltage: 220 240 V Grid frequency: 50 60 Hz Power: 500 W
US/CA battery charger for LV traction battery	A90145175000	Nominal voltage: 100 240 V Grid frequency: 50 60 Hz Power: 500 W

Protection class	IP65
------------------	------

20.4 Tires

Front tire	Rear tire
2.50 - 10 38M TT	2.50 - 10 38M TT
Kenda K-760 Trakmaster	Kenda K-760 Trakmaster

The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed. Additional information is available in the Service section under:

www.husqvarna-motorcycles.com

20.5 Fork

Fork article number	A90101000044
Fork	WP RSD
Fork length	469.9 mm (18.5 in)

20.6 Shock absorber

Shock absorber article number	A90104010044
Shock absorber	WP Monoshock
Fitted length	171.6 ± 2 mm (6.756 ± 0.08 in)

20.7 Chassis tightening torques

Battery compartment screws	EJOT DELTA PT® K40x12	0.5 Nm (0.37 lbf ft)	
Fender on start number plate	EJOT PT® K60x20AL	2 Nm (1.5 lbf ft)	
screw			
Lower subframe screw	EJOT PT® K70x25	6 Nm (4.4 lbf ft)	
Remaining screws on chassis	EJOT PT® K50x16	2 Nm (1.5 lbf ft)	
Screw, magnetic switch on han- dlebar	M3	0.8 Nm (0.59 lbf ft)	
Screw, fixed grip	M4	5 Nm (3.7 lbf ft)	Loctite [®] 243™
Screw, throttle grip	M4	3 Nm (2.2 lbf ft)	
Brake assemblies screw	M5	3 Nm (2.2 lbf ft)	
Brake line holder on fork screw	M5	2 Nm (1.5 lbf ft)	
Cable guide on link fork screw	M5	4 Nm (3 lbf ft)	
Controller screw	M5	6 Nm (4.4 lbf ft)	
Heel protector screw	M5	6 Nm (4.4 lbf ft)	
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)	
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)	
Side cover screw	M5	2 Nm (1.5 lbf ft)	
Start number plate screw	M5x12	6 Nm (4.4 lbf ft)	
Fender screw	M6	10 Nm (7.4 lbf ft)	
Front brake caliper screw	M6x20	10 Nm (7.4 lbf ft)	Loctite [®] 243™
Front brake disc screw	M6	14 Nm (10.3 lbf ft)	
Rear brake caliper screw	M6x20	10 Nm (7.4 lbf ft)	
			Loctite [®] 243™
Rear brake disc screw	M6	14 Nm (10.3 lbf ft)	
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)	
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)	
Screw, splash protector, shock absorber	M6	6 Nm (4.4 lbf ft)	
Seat fixing screw	M6	6 Nm (4.4 lbf ft)	
Battery compartment on frame screw	M8	20 Nm (14.8 lbf ft)	
Bottom shock absorber screw	M8x45	25 Nm (18.4 lbf ft)	Loctite [®] 243™
Bottom triple clamp screw	M8	20 Nm (14.8 lbf ft)	
Footrest bracket screw	M8x30	25 Nm (18.4 lbf ft)	Loctite [®] 243™
Handlebar clamp screw	M8	15 Nm (11.1 lbf ft)	2001110 270
Motor shaft clamp screw	M8x30	25 Nm (18.4 lbf ft)	
-	Woxee	,	Loctite [®] 243™
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)	
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)	
Screw, steering stem	M8	20 Nm (14.8 lbf ft)	
Screw, top triple clamp	M8	20 Nm (14.8 lbf ft)	
Subframe screw	M8	20 Nm (14.8 lbf ft)	

Swingarm pivot nut	M8	25 Nm (18.4 lbf ft)
Top shock absorber screw	M8x65	20 Nm (14.8 lbf ft)
Underride guard screw	M8x25	20 Nm (14.8 lbf ft)
Front wheel spindle nut	M10	40 Nm (29.5 lbf ft)
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)
Screw, handlebar support	M10	40 Nm (29.5 lbf ft)
		Loctite [®] 243™
Nut, steering head	M20x1.5	10 Nm (7.4 lbf ft)

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

 Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- REACT PERFORMANCE DOT 4

MOTOREX®

- Brake Fluid DOT 5.1

High viscosity grease

Recommended supplier \mathbf{SKF}^{\otimes}

- LGHB 2

Long-life grease

Recommended supplier MOTOREX®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier MOTOREX®

Moto Clean

Preserving materials for paints, metal and rubber

Recommended supplier MOTOREX®

Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier MOTOREX®

Quick Cleaner

23 LIST OF ABBREVIATIONS

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

PARENTS, YOUNGSTERS & OFF-HIGHWAY MOTORCYCLES





The information contained in this publication is offered for the benefit of those who have an interest in riding off-highway motorcycles. The information has been compiled from publications, interviews and observations of individuals and organizations familiar with the use of off-highway motorcycles. Because there are many differences in product design, riding terrain and riding styles, there may be organizations and individuals who hold differing opinions. Consult your local motorcycle dealers or experienced off-highway motorcycle riders about appropriate riding locations in your area. Although the Motorcycle Safety Foundation will continue to publish responsible viewpoints on this subject, it must disclaim specific or general liability for the views expressed herein.

The Motorcycle Safety Foundation® (MSF) is a national not-for-profit organization promoting the safety of motorcyclists with programs in rider training, operator licensing and public information. The MSF is sponsored by BMW, BRP, Ducati, Harley-Davidson, Honda, Kawasaki, KTM, Piaggio, Polaris Motorcycles, Suzuki, Triumph and Yamaha.

Motorcycle Safety Foundation 2 Jenner, Suite 150 Irvine, CA 92618 949.727.3227 msf-usa.org


Copyright 2015 Printed: March 2015

Parents...Be Cautious

Riding Off-Highway Motorcycles (OHMs) can be an enjoyable form of outdoor recreation when done properly. With preparation, practice, and parental supervision your youngster can safely develop and expand his or her riding skills. Remember, off-highway motorcycles are not toys.

This manual is designed to assist you in the important task of teaching your youngster the safe and responsible use of an off-highway motorcycle. We urge you to read this booklet thoroughly. Also read other information provided with the motorcycle. The owner's manual contains important warnings and features of the motorcycle.

Deciding if your youngster is ready to ride an off-highway motorcycle is an important decision. The MSF strongly urges you to carefully determine your youngster's readiness to ride. There is a Readiness Checklist in Part 4 of this booklet. **Do not permit youngsters to ride an off-highway motorcycle if you doubt that they will operate the motorcycle safely.**

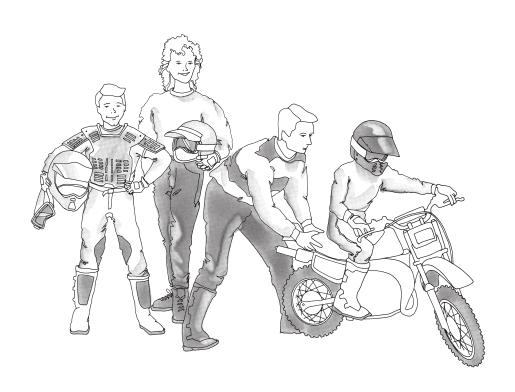

CONTENTS

INTRODUCTIONPurpose of the Booklet	4	PART 3: Operating Procedures and Practice	
 Important Note to Parents Other Sources of Information	4 5	Learning Area/Riding AreaGetting Used to the Vehicle in	20
PART 1: Determining Your Youngster's Readiness to Ride an		Motion • Let's Start Riding	22 25
Off-Highway MotorcycleReadiness GuidelinesSteps for Safe and	6	PART 4: Readiness Checklist • Visual Perception/Motor/	
Responsible OHM Riding	10	Development • Physical Development	29 32
PART 2: Pre-Operating Procedures and Practice		Social/Emotional DevelopmentReasoning and Decision-Making	34
Protective Gear and ClothingMounting/Dismounting	11 12	Ability	36
 Mastering the Controls 	13	FINAL NOTE: To Parents	38
 Learning Activities 	16	GLOSSARY	39
		ANSWERS	41

INTRODUCTION

Purpose of the Booklet

Parents, Youngsters and Off-Highway Motorcycles is designed to assist you in determining if your youngster is ready to ride off-highway motorcycles (OHMs). It also provides you and your youngster with important safety information and tips on learning to ride. This booklet is divided into four parts: Part 1: Determining Your Youngster's Readiness to Ride an Off-highway Motorcycle; Part 2: Pre-operating Procedures; Part 3: Operating Procedures; Part 4: Readiness Checklist. There is information about protective gear, mounting, control operation and starting the engine. Operating procedures include starting, shifting, stopping and turning.

Important Note To Parents


Once your youngster is ready to learn to ride, YOU must be familiar with the motorcycle. You will be serving as teacher, coach, and safety supervisor for your youngster. You must know the controls, handling characteristics, maintenance requirements, and proper riding techniques. Read and understand the owner's manual and the labels provided with the vehicle. Review all instructions, requirements, and warnings with your youngster. Find out about state or local off-highway motorcycle requirements.

INTRODUCTION

Other Sources Of Information

In addition to the information provided in *Parents, Youngsters and Off-Highway Motorcycles*, there are other sources for obtaining safety information. The owner's manual provides specific maintenance and operating procedures for your motorcycle. It also includes warnings and cautions, as well as operating tips. Motorcycle dealers may have other literature and safety information. Another booklet, *Tips and Practice Guide for the Off-Highway Motorcyclist*, gives detailed riding procedures.

The MSF *DirtBike School*SM offers training on how to ride off-highway motorcycles. The course is available to youth as young as six years of age, as well as to adults. Call toll-free 877.288.7093 to enroll or for more information. To find out more on the internet, visit dirtbikeschool.com.

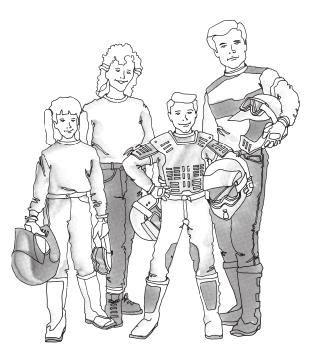

DETERMINING YOUR YOUNGSTER'S READINESS TO RIDE AN OFF-HIGHWAY MOTORCYCLE

The first important decision you will have to make concerning your youngster and off-highway motorcycles (OHMs) is whether your youngster is ready to ride. There are several factors that you must consider carefully.


There is no certain way to predict that your child is able to ride an OHM safely. However, the following information is a guide to help you determine your youngster's readiness to ride. Only parents can decide if their youngster has the qualities necessary to operate an off-highway motorcycle safely.

Readiness Guidelines

PHYSICAL DEVELOPMENT

Physical size and ability are important considerations. For example, a youngster must be big enough to hold the motorcycle up, get on, and comfortably sit on the seat with both feet touching the ground.

Also make sure your youngster can comfortably reach and work all the controls. For example, can they turn the handlebars all the way to the right and left? Can they easily use their feet to work the brake pedal and gearshift lever? Can they operate the throttle and brake levers while they hold onto the handgrips? If not, the youngster is not physically ready to ride this OHM. Refer to the owner's manual to check for possible adjustments in the position of some of the controls.

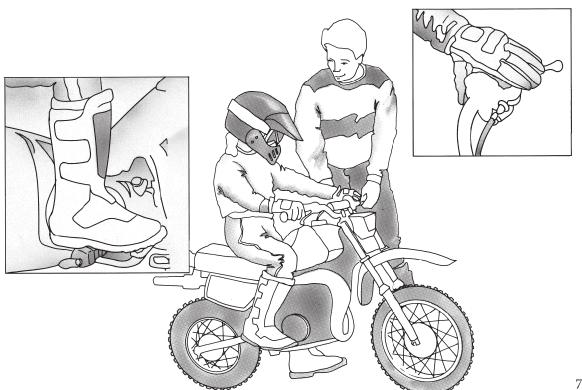

Additional signs of physical readiness can be observed in your youngster's other play activities. In general, a youngster should be well-coordinated, having good balance and agility. This coordination can be demonstrated by the abilities to jump rope, skate, skateboard, ride a bicycle, etc. If a youngster cannot perform well in these types of activities, more physical development is needed.

SOCIAL/EMOTIONAL DEVELOPMENT

How a youngster behaves in a social setting can be a sign of social/emotional development. A youngster needs to know about and understand rules. Certain rules are necessary for the safe operation of any vehicle. Youngsters must be willing to follow rules. A good sign is a youngster who obeys rules set by parents. A youngster who does not follow rules is not ready for an OHM.

One indicator that a youngster is ready to ride an

OHM is when they demonstrate a safety-conscious attitude and are aware of possible injury from reckless OHM operation. If the youngster has a habit of recklessness or is often involved in accidents while using bicycles or skateboards, the youngster is not ready to ride an OHM.

REASONING AND DECISION-MAKING ABILITY

Youngsters should have some knowledge about what may happen if something is done wrong. They must understand that unsafe actions can result in injury. An example of this is knowing the need to look in both directions before crossing a street when walking to school. The ability to make good decisions relates to a youngster's ability to reason. When presented with a problem, the youngster should be able to come up with a sensible answer. Ask your youngster to tell you what causes accidents and injuries. Your youngster needs to be able to tell

what causes accidents and how to avoid them. In general, a youngster should understand that he or she can get hurt as a result of making poor choices.

VISUAL PERCEPTIONS AND MOTOR DEVELOPMENT

This area involves how well a youngster sees and how vision is used with other physical movements. In other words, can a youngster see and react with the proper hand, foot, or body movement?

Several types of visual characteristics are important. The ability to see to the sides while looking straight ahead is called peripheral or side vision. You can determine a youngster's side vision by having him or her look straight ahead while you move objects to the side. The youngster should be able to see objects ninety degrees to the side while looking straight ahead. Rider awareness and safety improves with good side vision.

Being able to judge distance is another visual skill helpful when operating an OHM. Is your youngster able to tell how far one object is from another, or which of two objects is closer? OHM riding requires a person to judge distance and react properly.

Being good at playing video games, hitting a baseball, etc., is a good sign that a youngster's eye and hand movements are fairly well coordinated.

In summary, you must consider many things before you decide to put your youngster on an OHM. There is no exact formula to use in making this decision. The Readiness Checklist, Part 4, can assist you with some points to evaluate. If you are not able to check-off most of the statements, your youngster is probably not ready to ride an OHM.

Steps For Safe And Responsible OHM Riding

Once you determine that OHM use is proper for your youngster, it is time to prepare yourself as a good OHM teacher and supervisor.

STEP ONE: Educate Yourself about OHM Safety and Proper Riding Techniques

You must learn as much as possible about off-highway motorcycles in general, and especially your youngster's motorcycle. You must be qualified to instruct and supervise your youngster. This means that you will need to understand the features of the motorcycle and proper riding techniques. The best source of information is the owner's manual supplied with the motorcycle. Read the owner's manual before you begin to instruct your youngster about OHM safety. Pay particular attention to the warning labels and stickers on the motorcycle.

STEP TWO: Teach Your Youngster Safe and Proper Riding Techniques

Teaching your youngster off-highway motorcycling is a step-by-step process. It begins with safety rules and moves to actual riding techniques. Since youngsters learn at different rates, it will be up to you to set the pace of your youngster's progress. At some point you may decide that he or she is not ready to ride an OHM.


STEP THREE: Avoid Unsafe Situations Through Close Supervision

ALWAYS closely supervise your youngster's riding. This is true even if your youngster has learned and mastered the rules and skills of safe OHM riding. Youngsters can get tired easily and become careless. They do not always see everything that is important around them. Your close supervision and good judgment are important.

Protective Gear And Clothing

The nature of off-highway riding demands that your youngster wear proper protective gear. Motorcycle riders should ALWAYS wear a helmet, eye protection, gloves, long pants, a long-sleeved shirt or jacket, and over-the-ankle boots. Anything less is not adequate protection. NEVER let anyone ride an off-highway motorcycle without a Department of Transportation (DOT) compliant motorcycle helmet. Be sure the fit is correct. It should be snug but not tight. It must be properly fastened.

Protective gear is necessary in any weather, even when the temperature is warm. In cooler weather you should dress your youngster with additional layers of clothing. Some riders choose to wear a kidney belt and chest or back protector for additional protection. On the right is a drawing of well-equipped riders. Show this drawing to your youngster and point out what is important.

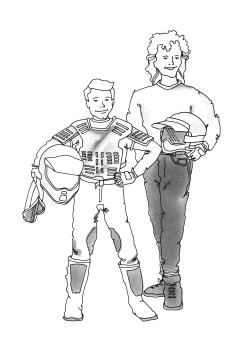

Mounting/Dismounting

Have your youngster wear safety gear whenever getting on a motorcycle. This action will stress the importance of safety gear and help develop safe riding habits.

Mounting is typically from the left side. To mount from the left, point the handlebars straight. While squeezing the front brake lever, swing the right leg over the seat and place the right foot on the ground. Both feet should be in contact with the ground while sitting on the motorcycle. Dismounting reverses the procedure: the kickstand is placed fully down. With the left foot on the ground, the handlebars straight and the front brake lever squeezed, the right leg is swung over the seat and the foot touches the ground.

Correct riding posture helps your youngster operate the controls. Proper straight line riding posture includes:

- Head and eyes up, looking well ahead.
- Shoulders relaxed, back straight.

- Elbows bent, slightly out and away from the body.
- Hands on the handlebars.
- Knees in toward the tank.
- Feet on the footpegs, toes pointing straight ahead.

The hand and foot controls are important to riding safely. While riding, both hands should be kept on the handlebars and both feet on the footpegs of the motorcycle. Removing a hand or foot can reduce the ability to control the motorcycle.

An off-highway motorcycle rider will need to shift body weight in certain situations. This is especially true in maneuvers such as turning, negotiating hills, and riding on bumpy terrain. Your youngster should be able to operate the controls during these maneuvers. Now is a good time to make sure your youngster can reach the controls from different body positions. Have the youngster remount. Turn the handlebars full left

and full right. See that this can be done easily. Next have the youngster slide up and back on the seat. Mention that body movement is important. Body movement and shifting weight help to control the motorcycle.

(Go through these control exercises with the motorcycle's engine OFF.)

Mastering The Controls

Show your youngster how to use each control as you describe its action. Refer to the owner's manual to learn control location and function before instructing your youngster. Test yourself by operating the controls. Have your youngster dress in the proper protective gear and sit on the machine as you point out each control. It is important to have your youngster wear all the protective gear whenever sitting on an off-highway motorcycle.



BRAKES

Most small off-highway motorcycles have a hand lever on the right handlebar which operates the front brake. Most also have a foot pedal on the right side to operate the rear brake. Refer to the owner's manual for correct brake location and operation.

Explain and demonstrate proper braking procedure. Be sure your youngster can apply the brake(s) properly while seated and without looking down. Smooth operation should be encouraged.

THROTTLE CONTROL

Explain to your youngster that twisting the throttle control back will make the motorcycle go faster. Closing the throttle control slows the motorcycle.

Youngsters need practice using the throttle control smoothly. They tend to use it like an on/off switch. With the engine off, have your youngster

move the throttle to various positions. Practice turning the handlebars and using the throttle at the same time.

ENGINE STOP SWITCH

Explain to your youngster how to use the engine stop switch to turn off the engine. With the engine off, show how the stop switch works. Later, your youngster can practice using the stop switch when the engine is actually running.

CLUTCH/SHIFT LEVER

Some small OHMs do not have a clutch lever; some don't have a shift lever either. This section applies only to motorcycles with a shift lever. Those that do have a shift lever may have different shift patterns. Refer to your owner's manual for proper shifting instructions. It is important to learn how the shift lever works.

Explain that it is possible to shift the motorcycle with the shift lever in order to ride at different speeds.

Have your youngster practice shifting with the engine off. The shift lever, clutch lever (if equiped), and throttle control work together to move the motorcycle. When shifting to first gear from neutral the throttle is closed, the clutch lever is squeezed, and the front brake is applied before moving the shift lever into first gear. When starting out, the front brake is released. The throttle is gradually opened while the clutch is slowly released. If the clutch is released too quickly, or too much throttle is applied, the motorcycle may lunge forward causing loss of control. With the engine off, have your youngster practice upshifts, downshifts, and locating neutral.

SPEED LIMITERS

(supervisor control feature)

Some models come equipped with a removable exhaust restrictor, or another feature which reduces maximum speed. Refer to your owner's manual or talk to your dealer about this.

Learning Activities

Here are some activities that your youngster can use to help learn about motorcycle parts and controls

Down

- 6. The place on which you keep your feet when riding.
- 7. Protective gear for the feet and ankles.


CROSSWORD PUZZLE Here is a crossword puzzle for your	1.	6.					•	
youngster to complete.						7.		
Across		4.						
1. What this booklet is all about.								
2. A piece of safety equipment for your head that you must never forget to wear.	t		5.					
3. Protective gear for the hands.4. Where you should always								
ride your motorcycle. (a synonym) 5. Hand lever you use when			All the	words n CH	eeded		ed bel	
shifting gears.			FOOT: GLOV SAFET	ES			HELM OFF-I	IET ROAD

NAME THE MOTORCYCLE PARTS (Typical)

Have your youngster write the number of the motorcycle part or control on the correct line for the diagrams shown. (*Answer Guide on Page 42*)

- 1. Clutch lever
- 2. Hand brake lever
- 3. Foot brake lever or pedal
- 4. Throttle

- 5. Choke or enrichening device
- 6. Engine stop switch
- 7. Gas cap/tank vent
- 3. Starter (kick)
- 9. Electric starter (if equipped)

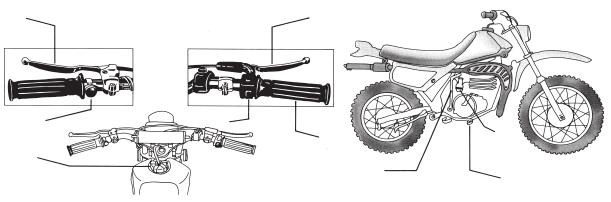

LOCATING THE CONTROLS GAME

Now that you have shown your youngster the controls, it is your youngster's turn to show you. The engine remains OFF for this exercise and your youngster will be on the motorcycle. The youngster should be wearing the proper protective gear to develop this safety habit.

1. Have your youngster show you the location of the following:

Brakes (lever and pedal) Throttle Control Engine Stop Switch Shift Lever (if equipped) Clutch (if equipped)

- 2. Have your youngster show you how the controls work. Be sure he or she understands the proper operation of each control. Skilled use of these controls should develop with practice. Under actual riding conditions the rider will have to watch ahead while operating the controls. Your youngster should be able to find the controls quickly without looking for them.
- 3. With your youngster looking ahead (pick out a point to look at), have him or her operate the controls. Repeat often while changing the order.
- 4. Ask your youngster to operate the controls as if actually riding. Look for smooth and precise operation.

PRE-RIDE CHECK

Before you continue:

- 1. Have you determined your youngster's readiness to ride an OHM? Do not let your youngster ride if you have any doubt. (Refer to the Readiness Checklist, Part 4)
- 2. Have you read the owner's manual and reviewed it with your youngster?
- 3. Does your youngster fit the motorcycle properly?
- 4. Have you inspected the vehicle and maintained it according to the owner's manual?

- 5. Is your youngster wearing the proper protective gear? Is the mounting procedure correct?
- 6. Has your youngster learned to locate the motorcycle controls without looking at them? Does he or she know how to operate them smoothly?
- 7. Does your youngster understand that he or she must always ride off-road?
- 8. Have you stressed to your youngster to keep his or her feet on the footpegs while riding?

If you have completely covered all these areas, you are ready to go on to Part 3.

OPERATING PROCEDURES AND PRACTICE

arefully observe your youngster's first use of the motorcycle. Observe his or her readiness to ride. Only permit your youngster to continue to ride if they have the size, strength, and attitude needed to ride safely.

Show your youngster the engine, exhaust pipe, and muffler. Tell him or her not to touch these parts because they are hot while the engine is running. Explain that they will remain hot after the engine is stopped. Also explain that hands and feet must be kept away from moving parts of the motorcycle.


Your youngster's safety depends in part on the mechanical condition of the motorcycle. Be sure to inspect it thoroughly before each use. Starting and refueling of the vehicle should be done by responsible adults only. Follow a regular maintenance program. See the owner's manual for inspection details.

Even after young riders have learned the basic riding skills, direct supervision by an experienced adult is necessary AT ALL TIMES. Make sure

that all off-highway motorcycle users under your supervision get proper riding instructions. Stress that an OHM is not a toy. Follow safety precautions strictly to provide a "safety first" approach to off-highway motorcycle riding. Teaching your youngster how to ride an OHM safely will increase the enjoyment of off-highway motorcycle riding.

Learning Area/Riding Area

The best place for learning is a level area 100' x 200' that is free from obstacles such as rocks, stumps, or holes. The learning area may have a loose or hard dirt surface. A grassy surface is also acceptable. It should not have two different surfaces. **Under no circumstances should the surface be concrete or asphalt.** Be sure there is room enough to maneuver, and that no other riders are close.

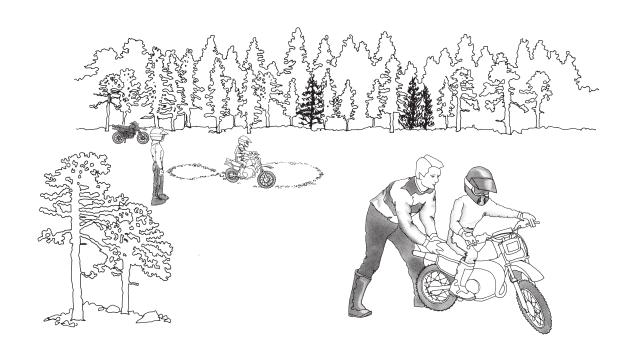

Getting Used To The Vehicle In Motion

GETTING THE FEEL OF THE BRAKES

Be sure your youngster is wearing all of the proper protective gear. With the engine still OFF, have your youngster mount the motorcycle. If you physically can, push the motorcycle slowly. Have your youngster brake to feel how much pressure is needed for a smooth stop. If your youngster's motorcycle has more than one brake, both should be applied with even pressure. Practice this several times until you are sure this skill is developed. Remind your youngster to keep his or her head up and look forward.

GETTING THE FEEL OF THE THROTTLE

With the engine OFF, have your youngster practice smooth throttle control. Your youngster will learn how much throttle it takes to start moving in

a later exercise. Explain that opening the throttle will increase speed and that closing the throttle will decrease speed. Releasing the throttle and applying the brakes will slow the motorcycle. Ask your youngster to tell you how throttle control and braking affect the motorcycles speed.

GETTING THE FEEL OF THE CLUTCH

(if equipped)

With the engine OFF, have your youngster practice smooth clutch control. Have your youngster shift the motorcycle into first gear. While you push the motorcycle have the youngster slowly release the clutch lever. The point which the motorcycle stops moving indicates the clutch engagement point or "friction zone." The "friction zone" is the point at which engine power begins to be transmitted to the rear wheel. Explain that this is the point the motorcycle will start moving when the engine is running. Smooth operation will prevent stalling and

allow smooth shifting. Remind the youngster that the throttle should be closed when shifting gears. Practice this exercise several times until the skill is developed.

GETTING THE FEEL OF TURNING

With the vehicle stopped and the engine OFF, have your youngster practice the proper turning technique:

- 1. For a right turn, look to the right and lean the motorcycle to the right.
- 2. For a left turn, look to the left and lean the motorcycle to the left.

Repeat this exercise with the kickstand up as you push the motorcycle. Make sure he or she can turn the vehicle in both directions using this technique while you maintain balance of the motorcycle.



BEING PREPARED FOR RIDING PRACTICE

Be sure to observe all the safety precautions covered in the Introduction and Parts 1 and 2. Double check that the riding area is free from hazards. Your youngster should wear all the proper protective gear, and the speed limiter (if equipped) should be installed and working correctly.

STARTING THE MOTORCYCLE

Always start the motorcycle for your youngster. To remember the proper starting technique use "FINE-C."

Double check for neutral. Start the engine. Have your youngster carefully mount. Let your youngster operate the engine stop switch and shut off the motor. Re-start the engine and repeat. Allow the engine to warm up until it runs smoothly with the choke off.

F	FUEL VALVE	Put to "on" position.
	IGNITION	Ignition on.
N	NEUTRAL	Motorcycle in neutral (the motorcycle rolls with the clutch lever released).
E	ENGINE	Stop switch in run/on start position.
C	СНОКЕ	On (for cold engine only).



Start the motorcycle for your youngster

Let's Start Riding

Walk next to the motorcycle when your youngster first starts riding. You can also let the beginner ride back and forth between you and another adult. Help your youngster with the turns as he or she practices throttle control and braking.

STARTING OUT AND STOPPING

Before your youngster moves the motorcycle under power, take a few moments to practice smooth clutch control. After shifting to first gear, have your youngster rock the motorcycle a few inches back and forth by moving the clutch in and out of the "friction zone." The clutch is not fully released while doing this. It is important that clutch operation is smooth before riding in the practice area.

The next practice session is straight-line starts and stops. Keep the riding under control.

However, riding too slowly will make balance more difficult. Both brakes should be used together for smooth stops. The left foot should be placed on the ground first, keeping the right foot on the rear brake.

Be sure your youngster develops a good feel for the use of the throttle and controls. After the youngster has mastered starting and stopping at slower speeds, increase speeds by shifting.

TURNING

Remind your youngster of the two steps for turning:


- 1. For a right turn, look to the right and lean the motorcycle to the right.
- 2. For a left turn, look to the left and lean the motorcycle to the left.

Have your youngster practice turning in both directions at slow speeds. Allow enough room to make a wide turn. After your youngster is skilled in making wide turns, try tighter turns.

Keep speed slow.

Your youngster should master these skills at low speeds before going faster. Next, practice some figure eights. This will help your youngster make left and right turns. Make sure your youngster keeps both feet on the footpegs and looks ahead in the turns.

Once these skills are mastered, refer to the <u>Tips</u> & <u>Practice Guide for the Off-Highway Motorcyclist</u>, for additional skills used in off-highway riding.

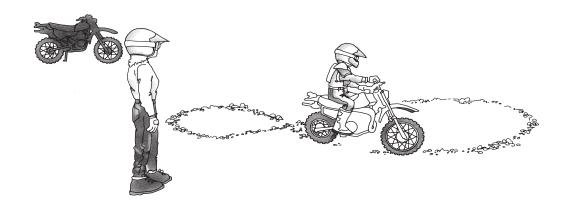

READINESS CHECKLIST

This Readiness Checklist is provided to help you determine your youngster's readiness to learn to safely operate and control an OHM. There is a significant amount of judgment needed in determining a youngster's readiness to ride an OHM. The ultimate decision is the responsibility of the parent, guardian, or supervising adult. It is important that parents make informed decisions about whether or not their youngster becomes involved in off-highway motorcycle activity.

There are four developmental areas considered in the Readiness Checklist. These include: visual perception/motor development, physical development, social/emotional development, and reasoning and decision-making ability. Several questions are listed to help you determine if your youngster possesses the skills and capabilities to safely learn to operate an OHM.

The best way to utilize the Readiness Checklist is to read the particular ability, consider the answers to the questions for that ability, and check those abilities that you determine are present in your youngster. There are no suggestions as to how many abilities or the degree of ability that your youngster should possess. This Readiness Checklist may help you consider the appropriateness of OHM operation for your child. The ultimate decision for your youngster's involvement with off-highway motorcycles belongs to you, the parent.

VISUAL PERCEPTION/MOTOR DEVELOPMENT

Al	<u>oility</u>	1	Points to Evaluate
1.	Youngster can see with sufficient clarity.		Can youngster see letters and numbers at least as well as you?
			Can youngster distinguish colors?
			Has youngster demonstrated adequate vision in other activities (riding bicycles, running, sports, or other recreational activities)?
2.	Youngster possesses ability to perceive depth or distance.		When looking at two objects in the distance, can youngster tell which is farther or closer?
3.	Youngster has adequate side vision/ peripheral vision.		Can youngster see objects 90 degrees to each side while looking straight ahead?
4.	Youngster can judge the speed of objects.		Does the youngster judge the speed of objects (fast, medium, slow) that agree with your judgments? (For example, a car on the highway, a train moving past a crossing, a dog running, people walking.)

Al	<u>oility</u>	✓	Points to Evaluate
5.	Youngster can state the distances of objects in terms of feet, yard, miles.		Can youngster tell how many feet or yards it is from the house to the road?
			Can youngster tell how wide a hallway is, or the width of a room?
6.	Youngster can follow movement of objects.		Can youngster follow the path of such things as: a hit or thrown baseball, a moving car, objects in a video game?
7.	Youngster can visualize distances as displayed by a picture or photograph.		Can youngster estimate distance between objects in a family photograph?
			Can youngster estimate distance between objects when looking at a landscape picture?
8.	Youngster can follow a moving object		Can youngster dribble a basketball without looking at it?
	while accomplishing hand manipulation.		Can youngster manipulate video game controls while following objects on a screen?
9.	Youngster can describe cause-and- effect experiences.		Can youngster describe a minor injury he or she received and correctly describe the causes?
	А		Can youngster describe settings or situations that can produce injury if precautions are not taken?

Ability	1	Points to Evaluate
		Can youngster describe what may cause injury when doing such things as running, swimming, bicycling, riding in a car?
10. Youngster can concentrate on more than one element at a time in solving		Can youngster pick out or describe several items within a picture?
a puzzle or problem.		Can youngster assemble a puzzle without unusual problems or delays?
		Can youngster describe what to do if a house fire should occur?
11. Youngster can maintain relative spans of attention when given a		Can youngster complete school homework assignments without being easily distracted?
variety of stimuli.		Can youngster assemble more difficult puzzles; for example, a nature scene or picture?

PHYSICAL DEVELOPMENT

Ab	<u>vility</u>	✓	Points to Evaluate
1.	Youngster can sit comfortably on the motorcycle and reach the controls easily.		Can youngster place his or her feet firmly on the footpegs? Do the youngster's fingers reach comfortably around the handlebars and control levers? How about with the handlebars turned? How about in different seating positions? Can youngster stand (with knees slightly bent) and have a few inches of space from the seat? Can youngster easily reach the foot controls? Can youngster dress with proper protective gear including putting on helmet and fastening the chin strap?
2.	Youngster has sufficient strength and familiarity to operate the controls with ease.	While	sitting on the vehicle, can youngster: Squeeze the hand controls? Operate the shift lever (if equipped)? Operate the choke and fuel valve with ease? Press the brake lever with sufficient pressure Operate the controls without looking at them?

Ał	<u>pility</u>	1	Points to Evaluate
3.	Youngster is sufficiently coordinated.		Can youngster walk a "balance beam" (2" \times 4" \times 8') flat on floor?
			Can youngster ride a bicycle, rollerskate or skateboard safely?
			Can youngster walk on tiptoes for 10 feet?
			Can youngster jump rope?
			Can youngster catch a ball with hands rather than with arms?
4.	Youngster has sufficient endurance to maintain strength over a period of time.		Can youngster play outdoor games without fatigue? Can youngster participate in indoor games and sports without tiring before other youngsters?

SOCIAL/EMOTIONAL DEVELOPMENT

Ab	ility	✓	Points to Evaluate
1.	Youngster can understand and		Does youngster follow rules established at home?
	follow rules.		Do teachers say that the youngster follows rules?
			Does youngster listen and respond to adult supervision?
			Does youngster comprehend the importance and seriousness of having rules and regulations?
2.	Youngster generally will obey parents and supervisors.		Does youngster avoid challenging authority or rebelling when rules are imposed?
3.	Youngster controls behavior according to expectations?		Does youngster show evidence of self-controldoesn't get easily frustrated or upset?
			Does youngster understand consequences associated with certain actions (like not wearing a safety belt in the car)?
			Does youngster think about results before performing some action (like crossing the street, hitting or throwing a ball)?

<u>Al</u>	<u>oility</u>	✓	Points to Evaluate
4.	youngsters may be permitted to do		Does youngster recognize unsafe actions of other youngsters?
	what he/she may not be allowed to.		Does youngster appreciate being safer than others?
			Does youngster accept rules that are more stringent than what other youngsters have to follow?
5.	Youngster can give reasons and/or		Can youngster explain how land (or grass) gets worn?
	solutions to problems seen in the environment.		Can youngster explain how even small damage to land can take years to recover?
			Can youngster distinguish between untouched land and used land?
6.	Youngster can make decisions based on reality and not fantasy.		Can youngster complete a task in a step-by-step fashion (assemble a toy, clean a room)?
			Does youngster comprehend real injury as opposed to "cartoon" injury?
			Does youngster respond with logical solutions when asked to solve a problem?

REASONING AND DECISION-MAKING ABILITY

<u>Ab</u>	<u>ility</u>	✓	Points to Evaluate
1.	Youngster comprehends that interaction with others and things can		Can youngster describe how and why a person received physical injury or pain?
	result in injury.		Does youngster notice impending accidents or potential injury-producing events, such as in sports activities or bicycle riding?
			Can youngster explain why it takes distance to stop?
			Can youngster explain how moving at even low speed can result in injury if stopped suddenly or by hitting something?
2.	Youngster has a basic understanding		Does youngster know why rules are established?
	of what being careful means.		Does youngster notice or recognize others being careful in action-oriented activities?
			Does youngster notice professional athletes use protective gear as part of their sport?

Ability

Youngster understands that rules are made to reduce injury and provide long-term enjoyment.

 Youngster has basic understanding of the physical limitations of stopping and turning.

✓ Points to Evaluate

- Can youngster explain the reason for rules at home or school?
- Does youngster understand the value of prevention? Of wearing protective gear?
- Can youngster recognize that not following rules can eliminate future fun and enjoyment?
 - Can youngster explain what may happen if moving too fast while going around a curve on a bicycle? On a skateboard? On an off-highway motorcycle?

FINAL NOTE

TO PARENTS

when this booklet has helped you and your youngster take a "safety first" approach to off-highway motorcycle riding. All off-highway motorcycle riders must use good judgment and be responsible. It is up to YOU to set a good example about motorcycle safety. You must help your youngster ride sensibly and safely at all times.

After your youngster has mastered the riding skills in this booklet and has matured to a higher level of skills, he or she may be ready to practice more advanced riding. The Motorcycle Safety Foundation's *Tips & Practice Guide for the Off-Highway Motorcyclist* booklet provides information about riding on hills, riding across slopes, and other more advanced skills. Youngsters should have a good understanding of riding skills before using unfamiliar areas. They

should ride on flat areas, gentle hills, and gradual slopes. Be sure that your youngster rides slowly over unfamiliar terrain to locate and avoid bumps, holes, and other possible hazards. You should check the area first.

The Motorcycle Safety Foundation also recommends a video program, *The MSF DirtBike School: Learn to Ride Safely*. It demonstrates and discusses responsible riding practices.

It is also recommended that you and your youngster read the information in the owner's manual. To find out more about rider education and off-highway motorcycle safety programs offered, or to order the video or publications, contact the Motorcycle Safety Foundation at 2 Jenner, Suite 150, Irvine CA 92618, 949.727.3227 or visit dirtbikeschool.com

OHM TERMS

GLOSSARY

BRAKES - The parts of a motorcycle which allow the operator to slow down or stop the machine.

BRAKE LEVER - The hand brake located on the handlebar.

BRAKE PEDAL - The foot brake which is operated by the right foot.

CABLES - Heavy insulated wires. There are two kinds: mechanical and electrical. Brake cables are mechanical. The headlamp cable is electrical.

CARBURETOR - Device which provides the engine the proper mixture of fuel and air.

CHOKE - A device which enriches the mixture of gasoline and air supplied to the engine for cold engine starting.

CLUTCH LEVER - The hand lever used to disengage the clutch when changing gears.

DRIVE CHAIN - The chain which connects the engine to the rear axle to give a motorcycle motion.

ENGINE STOP SWITCH - Switch used to stop the engine without removing the hands from the handlebars.

EXHAUST - Leftover gases from the combustion process that come out of the tailpipe when the motorcycle engine is running. Exhaust contains deadly carbon monoxide gases.

EYE PROTECTION - Goggles or a shatter resistant shield worn over the eyes while riding to protect against dust, flying insects, or other debris. Such eye protection, when tinted, may be effective against bright sun or snow-glare conditions.

FINE-C - A pre-start routine. A way to remember the pre-start routine:

F - Fuel valve on

I - Ignition on

N - Neutral

E - Engine stop switch in run position

C - Choke

FOOTPEGS - Pivoting pegs on which a motorcycle operator should keep his/her feet while riding.

FUEL VALVE - A valve, usually hand operated, with an on, off and "reserve" position. Controls gasoline flow to the carburetor.

GLOSSARY

HANDLEBAR - The metal bar attached to the front end of the motorcycle that turns the front wheel for steering. Many of the controls for the motorcycle are located on the handlebar.

HELMET - The most important protective clothing to be worn when operating a motorcycle. It covers the head and helps protect against skull fracture or brain injury in an accident.

OFF-HIGHWAY or OFF-ROAD VEHICLE -

Any vehicle, including off-highway motorcycles and ATVs, which is restricted by law from operating on public roads.

OHM - Off-Highway Motorcycle

PSI - Refers to air pressure in the tires and stands for "Pounds per Square Inch."

READING THE TERRAIN - Looking well ahead while riding, anticipating hazards.

SHIFT LEVER - On those motorcycles equipped with a shift lever, it allows the operator to change gears. The shift lever is operated by the left foot.

TAILPIPE - That part of the exhaust system which expels waste gases.


THROTTLE - The control operated by the right hand which controls the engine speed.

TRACTION - Tread friction between the ground and the tires.

TRANSMISSION - Mechanism used to transmit power from the engine to the wheels.

CROSSWORD PUZZLE

ANSWERS

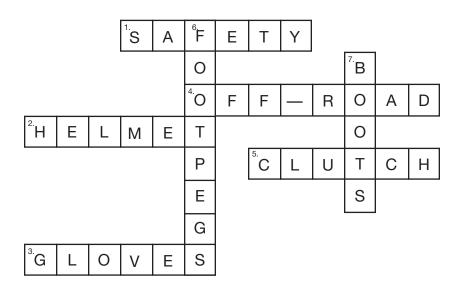


ANSWERS

NAME THE MOTORCYCLE PARTS (Typical)

- 1. Clutch lever
- 2. Hand brake lever
- 3. Foot brake lever or pedal
- 4. Throttle

- 5. Choke or enrichening device
- 6. Engine stop switch
- 7. Gas cap/tank vent
- 8. Starter (kick)
- 9. Electric starter (if equipped)

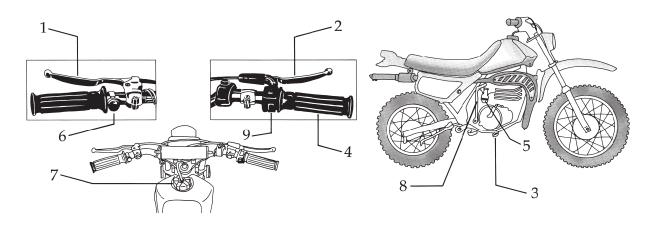

NOTES

NOTES



For the rider training location nearest you, call: (877) 288-7093
dirtbikeschool.com

© 2015 Motorcycle Safety Foundation, Inc. 2 Jenner, Suite 150 • Irvine, CA 92618 (949) 727-3227 • msf-usa.org

PN MSPU3444NC00



EU Declaration of Conformity



Object of the declaration:

SX-E 2, EE 2, MC-E 2 Serial numbers: F3001Y4, F3001Y8, F3001Y3 Product: Electric Mini Motorcycle

Name and address of the manufacturer: KTM AG

Stallhofnerstraße 3 5230 Mattighofen, Austria

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

REGULATION (EU) 2023/1230 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL (EU) 2023/1230

of 14 June 2023 on machinery and repealing Directive 2006/42/EC of the European Parliament

and of the Council and Council Directive 73/361/EEC

DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 2014/30/EU

February 2014 on the harmonisation of the laws of the Member States relating to

electromagnetic compatibility (recast)

2011/65/EU DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8

June 2011 on the restriction of the use of certain hazardous substances in electrical and

electronic equipment (recast)

References to the relevant harmonised standards and other technical specifications:

EN ISO 12100:2010 Safety of machinery - General principles for design - Risk assessment and risk reduction (ISO

12100:2010)

EN 16029:2012 Ride-on, motorized vehicles intended for the transportation of persons and not intended for use

on public roads - Single-track two-wheel motor vehicles - Safety requirements and test

methods

EN 61000-4-2:2009 Electromagnetic compatibility (EMC) - Part 4-2: Testing and measurement techniques -

Electrostatic discharge immunity test

EN IEC 61000-6-3:2021 Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for

equipment in residential environments

Signed for and on behalf of: KTM AG

Mattighofen, 14.05.2024 DocuSigned by:

68A8D1051775415..

Team Leader Homologation



Annex [en | de | fr | es | pt | it | nl | da | sv | fi | el | pl | cs | sk | hu | ro | bg | sl | hr | et | lv | lt]

[en] EU Declaration of Conformity | [de] EU-Konformitätserklärung | [fr] Déclaration UE de conformité | [es] Declaración UE de conformidad | [pt] Declaração UE de conformidade | [tt] Dichiarazione di conformità UE | [n]] EU-conformiteitsverklaring | [da] EU-overensstemmelseserklæring | [sv] EU-försäkran om överensstämmelse | [fi] EU-vaatimustenmukaisuusvakuutus | [el] Δήλωση συμμόρφωσης ΕΕ | [pl] Deklaracija zgodności UE | [cs] EU PROHLÁŠENÍ O SHODĚ | [sk] EÚ vyhlásenie o zhode | [hu] EU-megfelelőségi nyilatkozat | [ro] Declaratja UE de conformitate | [bg] EC декларация за съответствие | [sl] Izjava EU o skladnosti | [hr] EU izjava o sukladnosti | [et] ELi vastavusdeklaratsioon | [v] ES atbilstības deklarācija | [lt] ES attilkties deklarācija

[en] Object of the declaration | [de] Gegenstand der Erklärung | [fr] Objet de la déclaration | [es] Objeto de la declaración | [pt] Objeto da declaração | [it] Oggetto della dichiarazione | [nt] Voorwerp van de verklaring | [da] Erklæringens genstand | [sv] Föremál för försåkran | [fi] Vakuutuksen kohde | [et] Στόχος της δήλωσης | [pt] Przedmiot deklaracji | [cs] Předmět prohlášen | [sk] Predmet vyhlásenia | [hu] A nyilatkozat tárgya | [ro] Obiectul declaraţiei | [bg] Предмет на декларацията | [st] Predmet izjave | [hr] Predmet izjave | [et] Deklarecritav toode | [lv] Deklarācijas priekšmets | [it] Deklaracijos objektas

[en] Name and address of the manufacturer or his authorised representative | [de] Name und Anschrift des Herstellers oder seines Bevollmächtigten | [fr] Nom et adresse du fabricant ou de son mandataire | [es] Nombre y dirección del fabricante o de su representante autorizado | [pt] Nome e endereço do fabricante ou do respetivo mandatairo | [fi] Nome es indirizzo del fabbricante o de ole su representante autorizazato | [nt] Name en adres van de fabrikantor zijn gemachtigde | [da] Navn og adresse på fabrikanten eller dennes bemyndigede repræsentant | [sv] Namn på och adress till tillverkaren eller dennes representant | [fi] Valmistajan tai hänen valtuutetun edustajansa nimi ja osoite| [el] Vovpu και διεύθυνση του κατασκευαστή ή του εξουσιοδοτημένου αντιπροσώπου του | [pi] Nazwa i adres producenta lub jego upoważnionego przedstawiciela | [cs] Jaméno a adresa výrobco nebo jeho zplnomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Hamwenosanie v adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho sphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho zphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho zphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho zphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho zphomocneńeńto zástupce | [sk] Meno a adresa výrobco alebo jeho zphomocneńeńto zastupce | [sk] Meno a adresa výrobco alebo jeh

[en] This declaration of conformity is issued under the sole responsibility of the manufacturer | [de] Die alleinige Verantwortung für die Ausstellung dieser Konformitätesrklärung trägt der Hersteller | [fr] La présente déclaration de conformité est établie sous la seule responsabilité du fabricant | [es] La présente declaración de conformidad se expide bajo la exclusiva responsabilidad el fabricante | [n] D presente declaração de conformidad é emitida sob a exclusiva responsabilidade do fabricante | [n] D presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante | [n] Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant | [da] Denne overensstemmelseserklæring udstedes på fabrikantens ansvar | [sv] Denna försäkran om överensstämmelse utlärdas på tillverkarens eget ansvar | [fi] Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla | [el] H παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή | [pl] Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta | [cs] Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce | [sk] Toto vyhlásenie o zhode sa vydáva na výhradnú zodpovednosť výrobcu | [hu] Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adják ki | [ro] Prezenta declaraţie de conformitate este emisă pe răspunderea exclusivá a producătorului | [bg] Hacтоящата декларация за съответствие е издадена на отговорността на производителя | [sl] Та izjava o skladnosti je izdana na lastno odgovoronost proizvajalca | [hr] Za izdavanje EU izjave o sukladnosti odgovoran je isključivo proizvodač | [ed] Klassolev vastavusdeklaratsioon on välja antud tootja ainuvastutusel | [iv] Šī atbilstības deklaracija ir izdota vienīgi uz ražotāja atbildību | [lī] Šī atbilstības

[en] The object of the declaration described above is in conformity with the relevant Union harmonisation legislation | [de] Der oben beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union: [[fi] L'objet de la declaration decrit diessus est conforme à la legislation de l'Union applicable | [es] El objeto de la declaración descrita anteriormente es conforme con la legislación de armonización pertinente de la Unión | [pt] O objeto da declaração acima descrito está em conformidade com a legislação de harmonização da União aplicável | [ti] L'oggetto della dichiarazione di cui sopra è conforme alla pertinente normativa di armonizzazione dell'Unione | [ni] Het hierboven beschreven voorwerp is in overeenstemming met de desbetreffende harmonisatiewetgeving van de Unie | [da] Genstanden for erklæringen, som beskrevet ovenfor, er i overensstemmelse med den relevante EU-harmoniseringslovgivning | [sv] Főremälet főr főrsákran ovan överensstammer med den relevanta harmoniserade unionslagstiftningen | [fi] Edellá kuvattu vakuutuksen kohde on asiaa koskevan unionin yhdenmukaistamislainsäädädnanön vaatimusten mukainen | [el] O orbýoç της δήγος γτος δήγος

[en] References to the relevant harmonised standards and other technical specifications | [de] Angabe der einschlägigen harmonisierten Normen und anderer technischer Spezifikationen | [fr] Références des normes harmonisées pertinentes appliquées | [es] Referencias a las normas armonizadas pertinentes utilizadas | [pt] Referencias às normas harmonizadas aplicáveis utilizadas | [it] Riferimento alle pertinenti norme armonizzate utilizzate | [nt] Vermelding van de toegepaste relevante geharmoniseerde normen | [da] Referencer til de relevante anvendte harmoniserede standarder | [sv] Hänvisningar till de relevanta harmoniserade standarder | [fi] Viittaus niibin asiaankuuluviin yhdenmukaistettuihin standardeliin | [el] Mvɛiɑ των σχετικών εναρμονισμένων προτύπων που χρησιμοποιήθηκαν | [pt] Odwolania do odnośnych norm zharmonizowanych | [cs] Odkazy na příslušné harmonizované normy | [sk] Odkazy na príslušné použité harmonizované normy | [hu] Az alkalmazott harmonizit szabványokra való hivatkozás vagy azokra az egyéb műszaki leírásokra való hivatkozások | [ro] Trimitier la standardele armonizate relevante folosite | [bg] Ποзоваване на използваните хармонизирани стандарти | [sl] Sklicevanja na uporabljene harmonizirane standard | [hr] Upućívanja na relevantne primijenjene usklađene norme | [et] Viited kasutatud harmoneeritud standardtele | [iv] Atsauces uz attiecīgajiem izmantotajiem standartiem | [it] Susijusių taikytų darniųjų standartų nuorodos arba kitų techniniu specifikaciiu

[en] Signed for and on behalf of | [de] Unterzeichnet für und im Namen von | [fr] Signé par et au nom de | [es] Firmado en nombre de | [pt] Assinado por e em nome de | [it] Firmato a nome e per conto di | [nl] Ondertekend voor en namens | [da] Underskrevet for og på vegne af | [sv] Undertecknat för | [fi] ... puolesta allekirjoittanut | [el] Υπογραφή για λογαριασμό και εξ ονόματος | [pl] Podpisano w imieniu | [cs] Podepsáno za a jménem | [sk] Opis príslušenstva a komponentov vrátane softvéru | [hu] A nyilatkozatot a nevében és megbízásából írták alá | [ro] Semnat pentru şi fin numele | [bg] Подписано за и от името на | [sl] Podpisano za in v imenu | [hr] Potpisano za i u ime | [et] Alla kirjutanud | [v] Parakstīts šādas personas vārdā | [lt] Už ką ir kieno vardu pasirašyta

	Footrest bracket
A	adjusting on the frame
Accessories 9	Fork legs
Accident	installation
В	Frame
Basic chassis setting	checking
rider's weight, checking with	Frame label
Battery charger positioning 62	Front brake lever
Brake discs	Front wheel
checking	installing 56
Brake fluid	removing 56
adding front brake	Fuel, oils, etc.
adding to rear brake 51	н
Brake fluid level	Hand brake lever
checking on rear brake	basic position, adjusting
of the front brake, checking	rear wheel
Brake lever front wheel	Handlebar position
	adjusting
Brake lining retainers of front brake, checking	I
of rear brake, checking	Implied warranty 9
Brake linings	Intended use
of front brake, checking	L
of rear brake, checking 52	Left side cover
of the front brake, changing 47	installing 38
of the rear brake, changing	removing
C	Link fork
Care	checking
Charging	Lower triple clamp
Charging level indicator	installing 33
Cleaning 66 Customer service 10	removing
	LV traction battery
D	charging
Defined use	removing
E	work
Engine	M
work	
Environment	Magnetic switch on handlebar
F	
Fall	Manufacturer warranty
Fender with start number plate	Motor number
installing	Motorcycle
removing	cleaning
Figures 10 Fire hazard 8	raising with lift stand
1 II O II	

INDEX

removing from lift stand	rubber buffer and pivot points, checking 41
Multifunctional element	spring preload, adjusting
overview	Spare parts
0	Starting
On/Off button	Steering head bearing
Operation	lubricating
at low temperatures	Steering head bearing play
Owner's Manual 8	adjusting
P	checking
	Storage
Plug-in stand 15 Power supply 10	Т
• • •	Technical specifications
Preparing for use	chassis
advice on preparing for first use	chassis tightening torques
checks and maintenance measures when	electrical system
preparing for use	engine
Protective clothing	fork
	shock absorber
R	tires 71
Rear brake lever	Throttle grip
basic position, adjusting 50	Tire condition
checking play49	checking 60
Rear wheel	Tire pressure
installing	checking
removing 57	Transportation
Rechargeable lithium-ion battery	Transportation
nechargeable infiliant-ion battery	
charging 64	V
	V Vehicle
charging 64	
charging	Vehicle
charging 64 work 7 Riding mode indicator 16	Vehicle work
charging 64 work 7 Riding mode indicator 16 Right side cover	Vehicle work 7 Vehicle identification number
charging 64 work 7 Riding mode indicator 16 Right side cover 38	Vehicle work
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S 5 Safe operation 6	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat 6	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat mounting 41	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat mounting 41 removing 41 removing 41	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat 41 removing 41 Seat height 41	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat mounting 41 removing 41 Seat height 30 adjusting on the fork 28	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 checking 42 S Safe operation 6 Seat mounting 41 removing 41 Seat height 28 adjusting on the fork 28 adjusting on the shock absorber 27	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27 Service 9	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 checking 42 S Safe operation 6 Seat mounting 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27 Service 9 Service schedule 24	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat mounting 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27 Service 9 Service schedule 24 Shock absorber	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 checking 42 S Safe operation 6 Seat 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27 Service 9 Service schedule 24 Shock absorber installing 40	Vehicle work Vehicle identification number View of vehicle front right
charging 64 work 7 Riding mode indicator 16 Right side cover 38 installing 38 removing 38 Rubber grip 42 S Safe operation 6 Seat mounting 41 removing 41 Seat height 41 adjusting on the fork 28 adjusting on the shock absorber 27 adjustment options 27 Service 9 Service schedule 24 Shock absorber	Vehicle work Vehicle identification number View of vehicle front right



3402799en

15.05.2024





